



Volvo S40
(2012-2013)



Wiring Diagrams and Electric Model year 2013

Reparaturarbeiten sollten nur von geschultem Fachpersonal durchgeführt werden.

Bitte nutzen Sie bei allen Reparaturen die aufgeführten Spezialwerkzeuge.

Dieses Dokument ist urheberrechtlich geschützt. Jede über die oben beschriebene Speicherung für eigene Zwecke hinausgehende Vervielfältigung, jegliche Verbreitung und/oder öffentliche Zugänglichmachung – auch auszugsweise – stellt eine Urheberrechtsverletzung dar und wird vom Inhaber der ausschließlichen Nutzungsrechte sowohl zivil- als ggf. auch strafrechtlich verfolgt.

Weder Volvo noch die TEC-VERLAG GmbH geben eine Gewährleistung oder Garantie hinsichtlich der Richtigkeit der Angaben in diesem Dokument und haften für Schäden.

© Copyright by Volvo. Urheberrechtlich geschützt

Lizenziert durch:



TEC-VERLAG
TECHNISCHE SERVICELITERATUR



VOLVO S40 (04-), V50 2012 & C30, C70 (06-) 2013

WIRING DIAGRAM 2012/2013



TP 39250202

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box.

Changes introduced up to and including structure week 12w20

Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:

Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS) at www.volvolcarstechnicalinfo.ford.com

We retain the right to make modifications

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)	2
Electrical distribution 1:2.....	9
Fuses	
Distribution box in engine compartment F1-F10.....	11
Distribution box in engine compartment F11-F20.....	12
Distribution box in engine compartment F21-F31.....	13
Distribution box in engine compartment F32-F34.....	14
Distribution box in engine compartment F35-FH1	15
Main fuse box battery	16
Fuse holder midi	17
Central Electronic Module (CEM) F43-F48.....	18
Central Electronic Module (CEM) F49-F61.....	19
Central Electronic Module (CEM) F62-F69.....	20
Central Electronic Module (CEM) F73-F85.....	21
Central Electronic Module (CEM) F86.....	22
Battery PF1-PF2.....	23
Relays	
Ignition switch and relays.....	24
Distribution box in engine compartment R1-R14	25
Engine compartment.....	26
Central electronic module (CEM) R15-R18	27
Central electronic module (CEM) R1-R11B.....	28
Other relays	29
Ground connections	
Overview.....	30
31/3 - 31/10 cont.....	31
31/10 - 31/12	32
31/66 - 31/67	33
31/80 - 31/107	34
31/110 - 31/115	35
31/116 - 31/132	36
Grounded to chassis.....	37
Control modules	
Overview locations.....	38
Overview designations.....	39
Central electronic module (CEM) 1:2.....	40
Data communication, Low speed CAN 1:2	42
Data communication high speed CAN.....	44
Data communication MOST.....	45
Data communication, LIN 1:2	46
Ignition switch (SCU)	48
Accessory electronic module (AEM).....	49
Group 26 Cooling system	
Cooling fan.....	50
Group 27 Engine controls	
Cruise control 4-Cyl.	51
Cruise control 5-Cyl.	52
Start/stop function	53
Group 28 Ignition system/control system	
Engine management system, 4-Cyl. 1.6l 1:2	54
Engine management system, 4-Cyl. 2.0l 1:2	56
Engine management system, 5-Cyl. Turbo 1:2.....	58
Engine management system Diesel, 4-Cyl. 1.6l D4162T 1:2	60
Engine management system Diesel, 5-Cyl. 2.0l 1:3	62
Emission control 4-Cyl. 1.6l	65
Emission control 4-Cyl. 2.0l	66
Emission control 5-Cyl.	67
Group 32 Alternator and voltage regulator	
Power supply 4-Cyl.....	68
Power supply 5-Cyl.....	69
Group 33 Starting system	
Starting system 4-Cyl.....	70
Starting system 5-Cyl.....	71
Group 35 Lighting	
High and low beam	72
Active headlight, (Dual Xenon)	73
Running/Parking light, Tail lights S40/V50.....	74
Running/Parking light, Tail lights (Dual Xenon) S40/V50	75
Running/Parking lights, Tail lights C30/C70.....	76
Running/Parking lights, Tail lights (Dual Xenon) C30/C70.....	77
Brake lights S40/V50	78
Brake lights C30/C70	79
Reversing lights S40/V50.....	80
Reversing lights C30/C70	81
Fog lights S40/V50	82
Fog lights C30/C70	83
Fog lights RHD Japan S40/V50	84
Fog lights RHD Japan C30/C70.....	85
Interior lighting C30/S40/V50 1:2	86
Interior lighting C70 1:2.....	88
Follow-me-home lighting.....	90
Instrument and control illumination	91
Auxiliary lights.....	92

Table of Contents 2:3

Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers S40/V50	93
Direction indicator and Hazard warning flashers (Dual Xenon) S40/V50	94
Direction indicator and Hazard warning flashers C30/C70	95
Direction indicator and Hazard warning flashers (Dual Xenon) C30/C70	96
Wiper/washer windshield	97
Washer headlights	98
Wiper/washer rear window C30/V50	99
Rain sensor	100
Parking assistance	101
Keyless vehicle C30/S40/V50 1:2	102
Keyless vehicle C70 1:2	104
Immobilizer/Steering column lock (SCL)	106
Horn	107
Anti-theft alarm C30	108
Anti-theft alarm S40/V50	109
Anti-theft alarm C70	110
Alcohol lock	111
Accessory Electronic Module (AEM) C30	112
Accessory Electronic Module (AEM), S40/V50/C70	113

Group 37 Wiring and fuses

12V outlet C30/S40/V50	114
12V outlet, C70	115
Diagnostics system	116
Cable harness towbar/tow hitch 4-pin S40/V50	117
Cable harness towbar/tow hitch 4-pin C30	118
Cable harness towbar/tow hitch 7-pin S40/V50	119
Cable harness towbar/tow hitch 7-pin C30/C70	120
Cable harness towbar/tow hitch 13-pin S40/V50/C70	121
Cable harness towbar/tow hitch 13-pin C30	122
Accessory USB unit (AUU)	123

Group 38 Instruments

Driver information module	124
Seat belt reminder C30/S40/V50	125
Seat belt reminder C70	126

Group 39 Other

Audio C30/S40/V50	127
Alternative connection audio S40/V50	128
Audio C70	129
Audio High Performance/Premium Sound C30/S40/V50 1:2	130

Audio High Performance/Premium Sound C70 1:2	132
Cellular phone 1:2	134
Multimedia & Traffic information	136
Satellite radio	137
Subwoofer C70	138
Navigation system, portable	139
Bluetooth	140
Bluetooth Handsfree, internal amplifier	141
Bluetooth Handsfree, external amplifier	142
Bluetooth Handsfree & AUU, internal amplifier	143
Bluetooth Handsfree & AUU, external amplifier	144
Bluetooth Handsfree with AEM, internal amplifier, LHD	145
Bluetooth Handsfree with AEM, internal amplifier, RHD	146
Bluetooth Handsfree with AEM, external amplifier, LHD	147
Bluetooth Handsfree with AEM, external amplifier, RHD	148

Group 43 Transmission

Automatic transmission AW55-51	149
Automatic transmission AWF21	150
Transmission M66	151
Automatic transmission MPS6	152

Group 59 Brake system

Brake control system & STC	153
Brake control system & DSTC	154

Group 64 Steering

Speed dependent power steering	155
--------------------------------------	-----

Group 83 Doors and openings

Central locking front doors C30/S40/V50	156
Central locking rear doors S40/V50	157
Central locking C70	158
Central locking trunk lid/tailgate C30	159
Central locking trunk lid/tailgate S40/V50	160
Central locking trunk lid/tailgate C70	161
Central locking storage compartment C70	162
Child safety lock S40/V50	163
Central locking fuel filler flap	164
Signal receiver central locking C30/S40/V50	165
Signal receiver central locking C70	166
Power windows front doors C30/S40/V50	167
Power windows C70	168
Power windows rear doors S40/V50	169
Power sunroof C30/S40/V50	170
Power roof C70	171

Table of Contents 3:3

Group 84 Exterior decorative elements, etc.	
Power door mirrors C30/S40/V50.....	172
Power door mirrors C70.....	173
Heated door mirrors.....	174
Heated rear window.....	175
Blind spot information system.....	176
Group 85 Interior equipment	
Power driver's seat with memory function LHD S40/V50.....	177
Power driver's seat with memory function RHD S40/V50	178
Power driver's seat with memory function LHD C30/C70	179
Power driver's seat with memory function, RHD C30/C70.....	180
Power driver's seat LHD	181
Power driver's seat RHD	182
Power passenger seat LHD S40/V50.....	183
Power passenger seat RHD S40/V50	184
Heated seats.....	185
Group 87 Climate control system	
Climate control system, 4-Cyl. Gasoline 1:2.....	186
Climate control system, Diesel 1.6l 1:2.....	188
Climate control system, 5-Cyl. 1:2.....	190
Climate control system PTC-elements	192
Parking heater, auxiliary heater.....	193
Relay, electric engine heater	194
Electric engine heater Flexifuel.....	195
Group 88 Internal equipment	
Supplemental restraint system C30/S40/V50 1:2.....	196
Supplemental restraint system C70 1:2.....	198
Rear-view mirror with automatic dimming.....	200
Remote control garage opening	201
Connectors	202
Branching points	240
Cable harness routing in vehicle	
Engine harness, gasoline 4-Cyl.1.6l	252
Engine harness, gasoline 4-Cyl.2.0l	252
Engine harness, gasoline 5-Cyl. Turbo.....	253
Engine harness, Diesel 1.6l	253
Harness engine, Diesel 2.0l	254
Engine compartment harness, 4-Cyl.....	255
Engine compartment harness, 5-Cyl.....	255
Harness dashboard, LHD	256
Harness Dashboard, RHD	256
Floor harness, C30 LHD	257
Floor harness, C30 RHD.....	258
Floor harness, S40 LHD	259
Floor harness, S40 RHD.....	260
Floor harness, V50 LHD	261
Floor harness, V50 RHD.....	262
Floor harness, C70 LHD	263
Floor harness, C70 RHD.....	264
Roof harness, C30	265
Roof harness, S40	265
Roof harness, V50	266
Roof harness, C70	266
Tunnel harness, C30/S40/V50.....	267
Tunnel harness, C70	267
Driver's door harness, C30	268
Passenger door harness, C30	268
Driver's door harness, S40/V50	269
Passenger door harness, S40/V50	269
Driver's door harness, C70	270
Driver's door harness supplement, C70.....	270
Passenger door harness, C70	271
Passenger door harness supplement, C70.....	271
Harness rear door, right S40/V50	272
Harness rear door, left S40/V50	272
Rear side panel harness, left C70.....	273
Rear side panel harness, right C70	273
Trunk lid/tailgate harness, C30	274
Trunk lid/tailgate harness, S40	274
Trunk lid/tailgate harness, V50	275
Trunk lid/tailgate harness, C70	275
Component illustrations	276
Index 1:2	331
List of components 1:7	333

Explanations

Abbreviations

Groups

Group 26	= Cooling system
Group 27	= Engine controls
Group 28	= Ignition system/control system
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 59	= Brake system
Group 64	= Steering
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment

Other

ACC	= Accessories
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
AWD	= All wheel drive
CAN	= CAN communication
D	= Diesel
DPY	= Display
ECC	= Electronic climate control system
ETA	= Throttle unit
EXT. X	= Extended X-feed
HISPEED	= High speed data bus
IR	= Infrared sensor
LIN	= LIN communication
LHD	= Left-hand drive
LOSPEED	= Low speed data bus
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MMS	= Mass Movement Sensor
PETROL	= Gasoline
RHD	= Right-hand drive
SCR	= Screened
SRS	= Airbag
T	= Turbocharged engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine

Designations ignition switch

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15I	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

The systems are shown in non-active status.i.e. with "key removed" and when the doors, hatches and hood are closed.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

- 1 Battery
- 2 Relay
- 3 Switch
- 4 Control module
- 5 Driver information module
- 6 Electric motor
- 7 Sensor
- 8 Actuator
- 9 Heating element
- 10 Light
- 11 Fuse
- 15 Electrical distribution rail/box
- 16 Audio
- 17 Service/diagnostics
- 18 Contact reel
- 19 Meter
- 20 Ignition component/shunt
- 27 Optics
- 31 Ground connection
- 63 Branching point
- 64 Connector

B. Branching points

The wiring diagrams contain numbered junction points, e.g. 63/352.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN and MOST communication is found in the section "Control modules".



F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

There is a section at the end of the manual in which the appearance and location of components is described in numerical order.

How to use the wiring diagrams 2:2

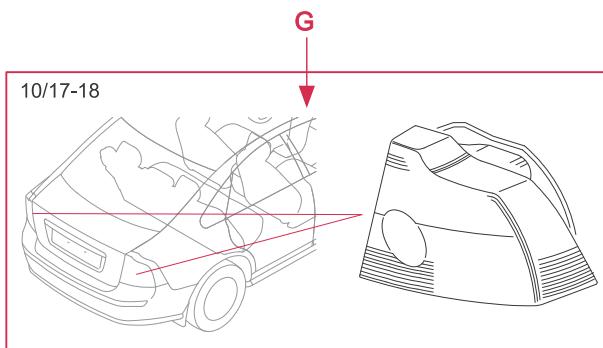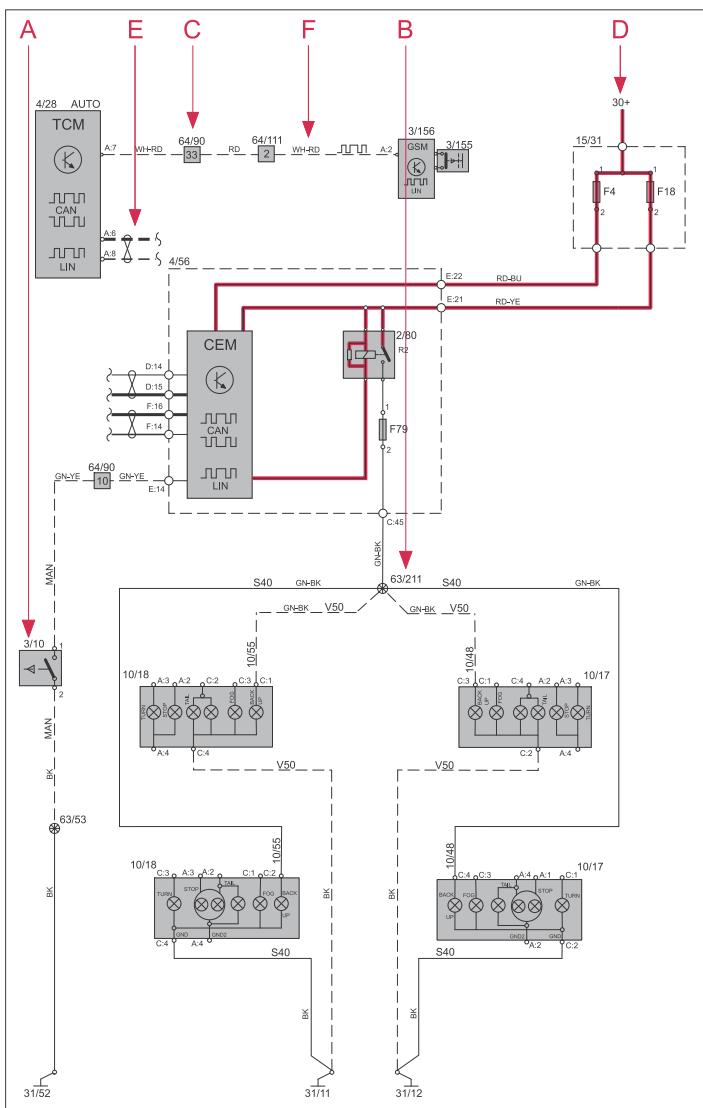


List of symbols

- = System voltage
- = Ground connection via wiring
- = Ground connection in component/chassis
- = Screened wire
- = Junction point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component

G030169


Electrical distribution 1:2

Overview

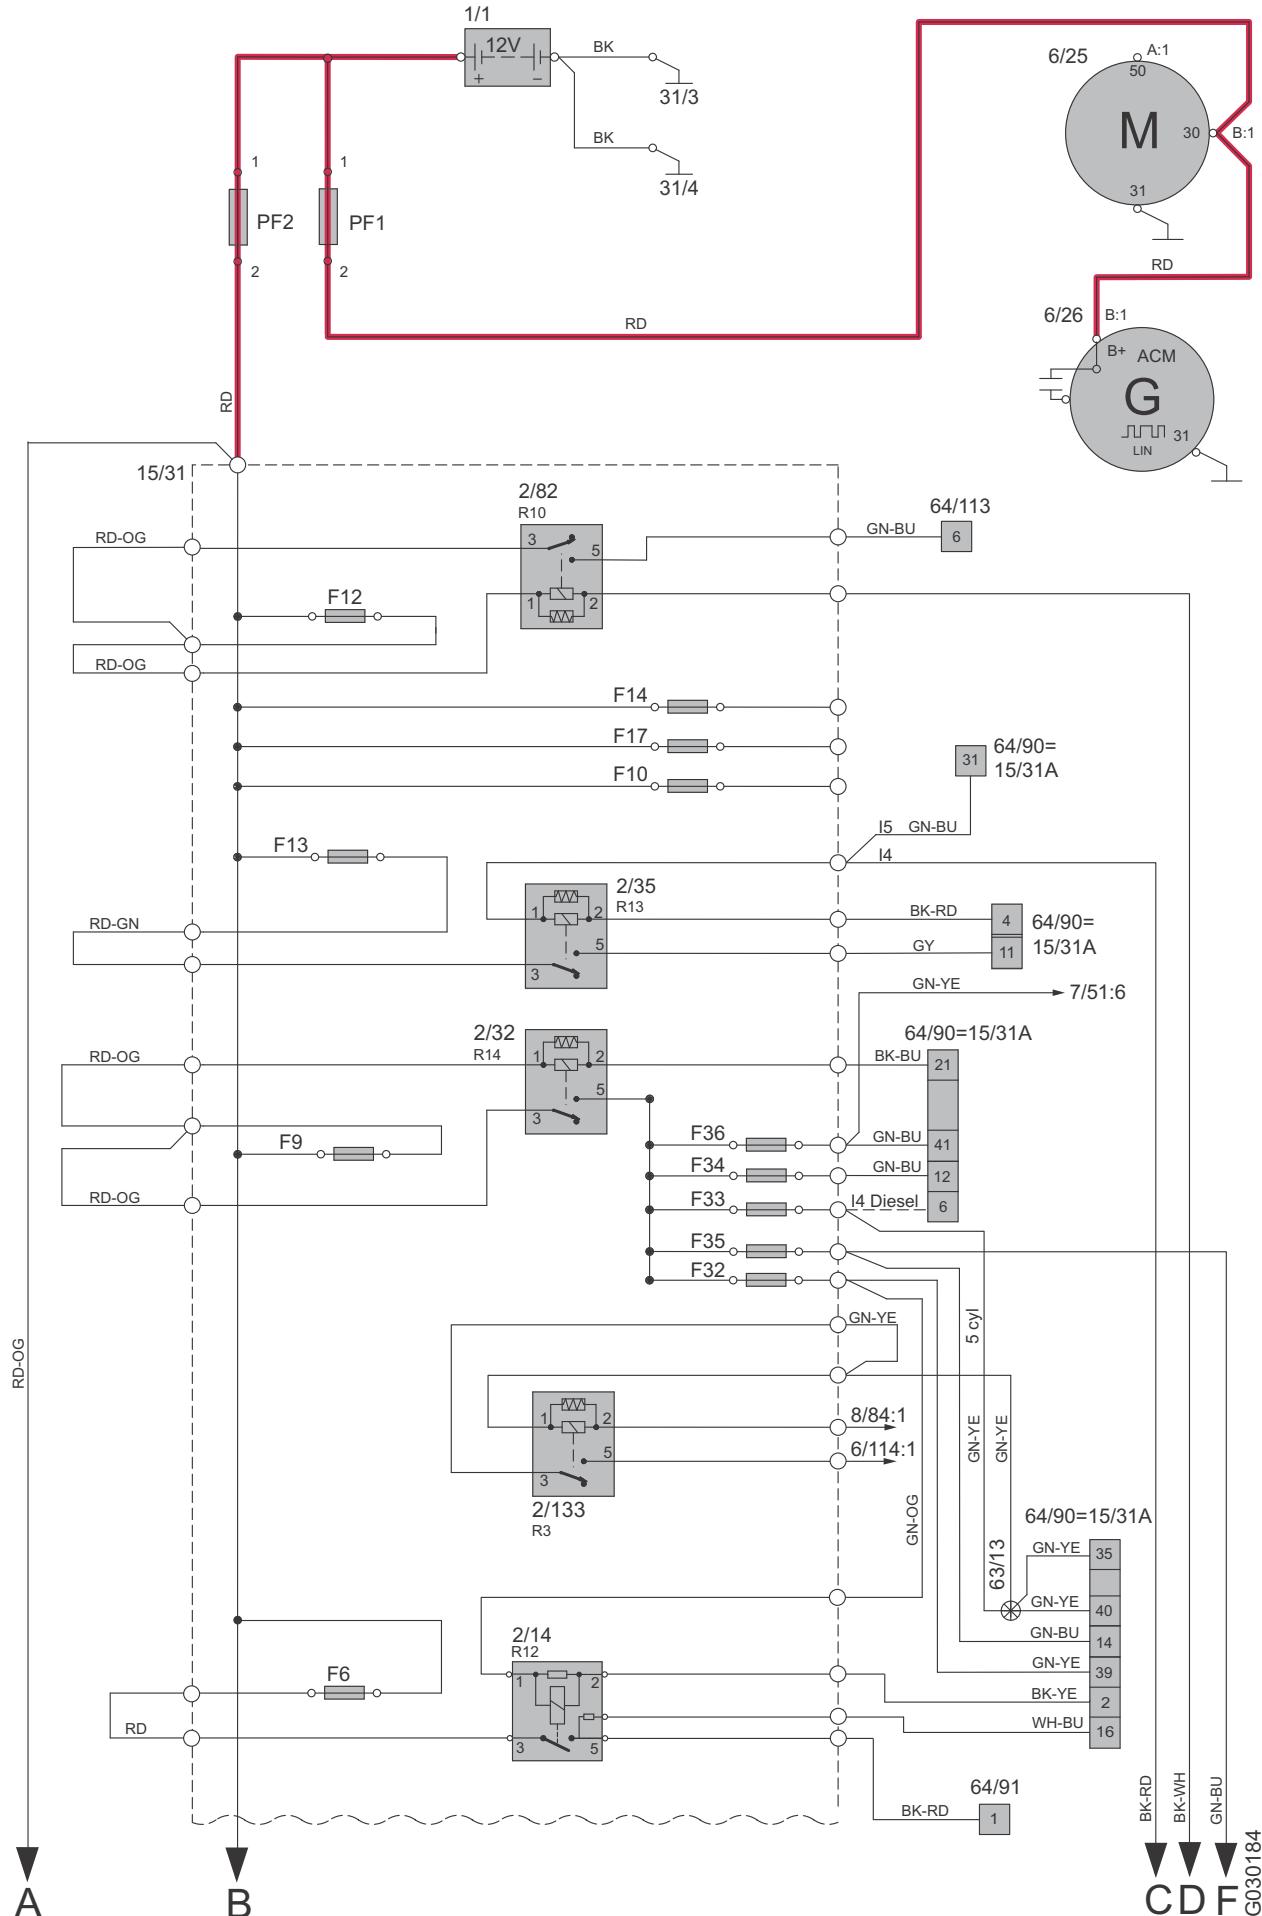

Electrical distribution 2:2


Overview

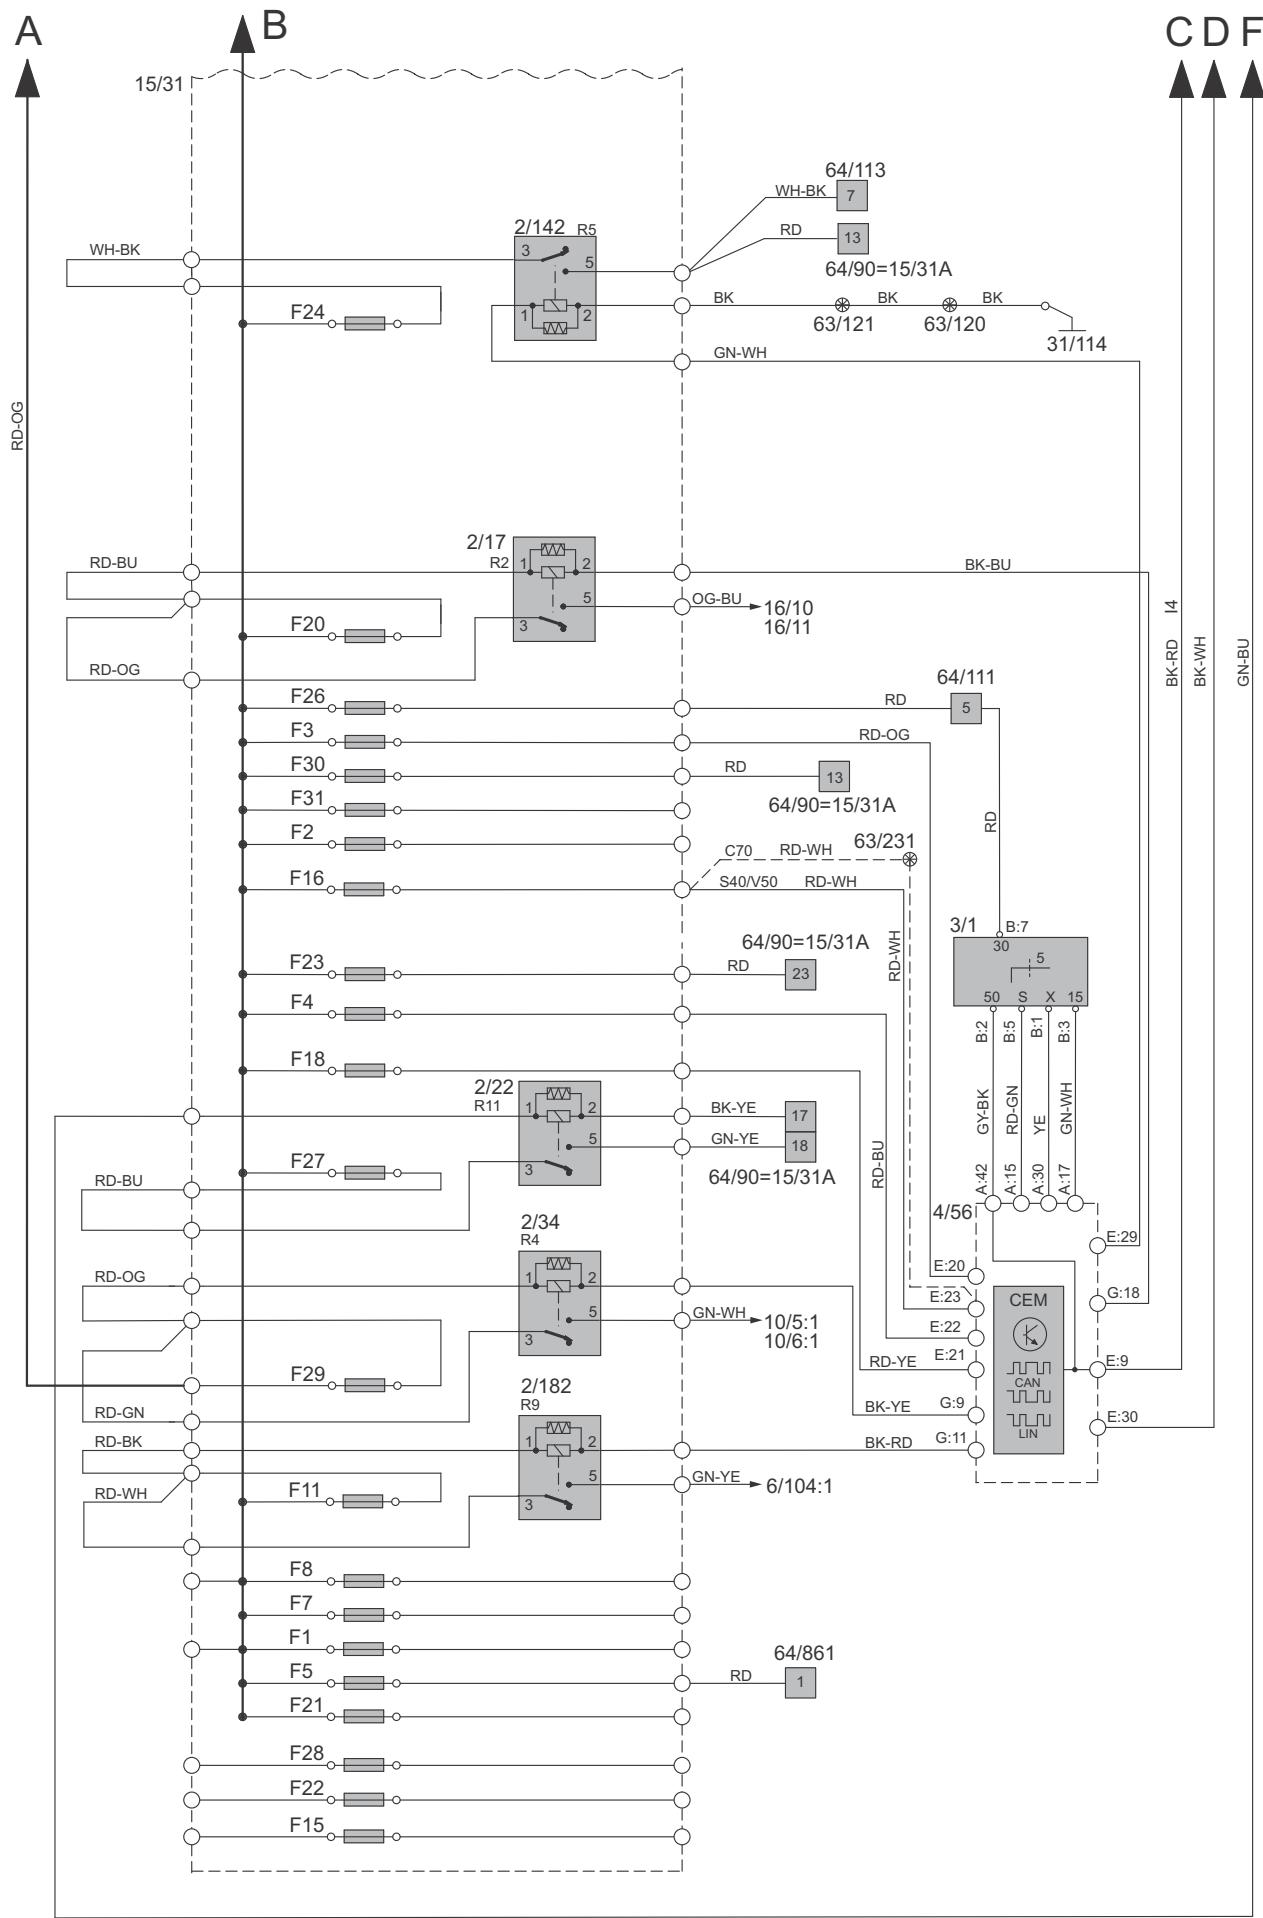

G030186

Fuses

Distribution box in engine compartment F1-F10

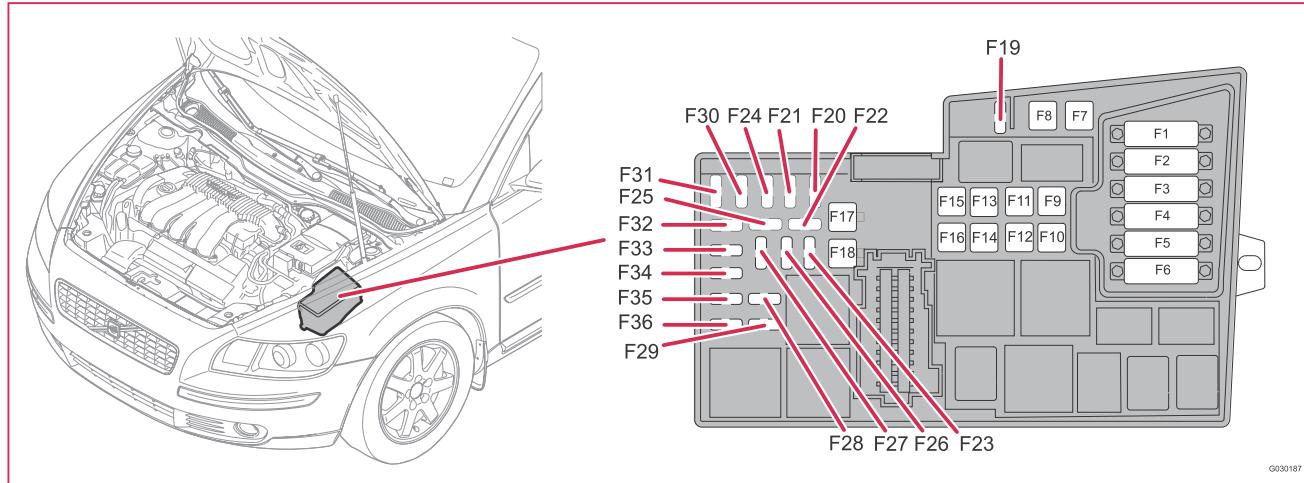

G030187


15/31 Distribution box in engine compartment

No.	Fuse function	via	A
F1	4/71 Cooling fan control module	-	50
F2	6/71 Electrical power steering module (EPS)	-	80
F3	2/193 Relay, comfort functions 4/56 Central Electronic Module (CEM) F45 Fuse in the Central Electronic Module (CEM) F48-F49 Fuses in the Central Electronic Module (CEM) F60-F61 Fuses in the Central Electronic Module (CEM) F62-F63 Fuses in the Central Electronic Module (CEM) F68-F69 Fuses in the Central Electronic Module (CEM) F80 Fuse in the Central Electronic Module (CEM) F84-F85 Fuses in the Central Electronic Module (CEM)	2/193 2/193 2/193 2/193 2/193 2/193 2/193 2/193 -	60
F4	2/63 Relay, high beam 4/56 Central Electronic Module (CEM) F55 Fuses in the Central Electronic Module (CEM) F58-F59 Fuses in the Central Electronic Module (CEM) F74 Fuses in the Central Electronic Module (CEM) F77 Fuses in the Central Electronic Module (CEM)	2/63 -	60
F5	9/41 PTC-element	-	80
F6	4/109 Glow plug control module (GCU), 5-Cyl. 20/23-26 Glow plug, 4-Cyl.	2/14	70 60
F7	4/16 Brake Control Module (BCM), pump	-	40
F8	4/16 Brake Control Module (BCM), valves	-	20
F9	2/32 Main relay, engine management system F32-F36 Fuses in the engine compartment distribution box	2/32	30
F10	4/31 Passenger compartment fan control module	-	40

continues

Fuses

Distribution box in engine compartment F11-F20

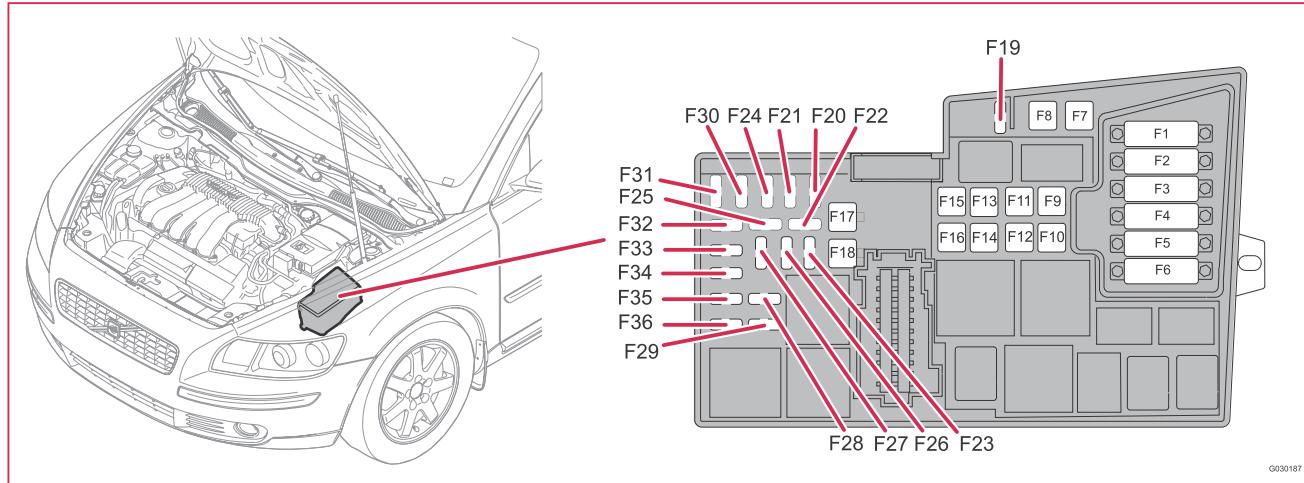

G030187


15/31 Distribution box in engine compartment

No.	Fuse function	via	A
F11	2/182 Relay, headlight washer motor 4/59 Convertible Roof Module (CRM), C70 6/104 Pump, high pressure headlight washer	- - 2/182	20
F12	2/82 Relay, heated rear window 9/2 Heated rear window	- 2/82, 16/141	30
F13	6/25 Starter motor	2/35	30
F14	4/110 Trailer Module (TRM)	-	40
F15	4/59 Convertible Roof Module (CRM), C70		30
F16	2/159 Infotainment relay, S40/V50/C30 16/105 Audio module (AUD), S40/V50/C30 F22 Fuse, Distribution box in engine compartment F43 Fuse in the Central Electronic Module (CEM), S40/V50/C30 F64 Fuse in the Central Electronic Module (CEM), S40/V50/C30 F65-F67 Fuses in the Central Electronic Module (CEM), S40/V50/C30	- - - - - 2/159	30
F17	6/1 Wiper Motor Module (WMM)	-	30
F18	2/80 Relay, reversing lights 2/89 Relay, interior lighting 4/56 Central Electronic Module (CEM) F46-F47 Fuses in the Central Electronic Module (CEM) F56-F57 Fuses in the Central Electronic Module (CEM) F79 Fuse in the Central Electronic Module (CEM) F81-F83 Fuses in the Central Electronic Module (CEM) F86 Fuse in the Central Electronic Module (CEM)	- - - 2/89 - 2/80 - 2/89	40
F20	2/17 Relay, horn 16/10 Horn 1 16/11 Horn 2	- 2/17 2/17	15

continues

Fuses

Distribution box in engine compartment F21-F31

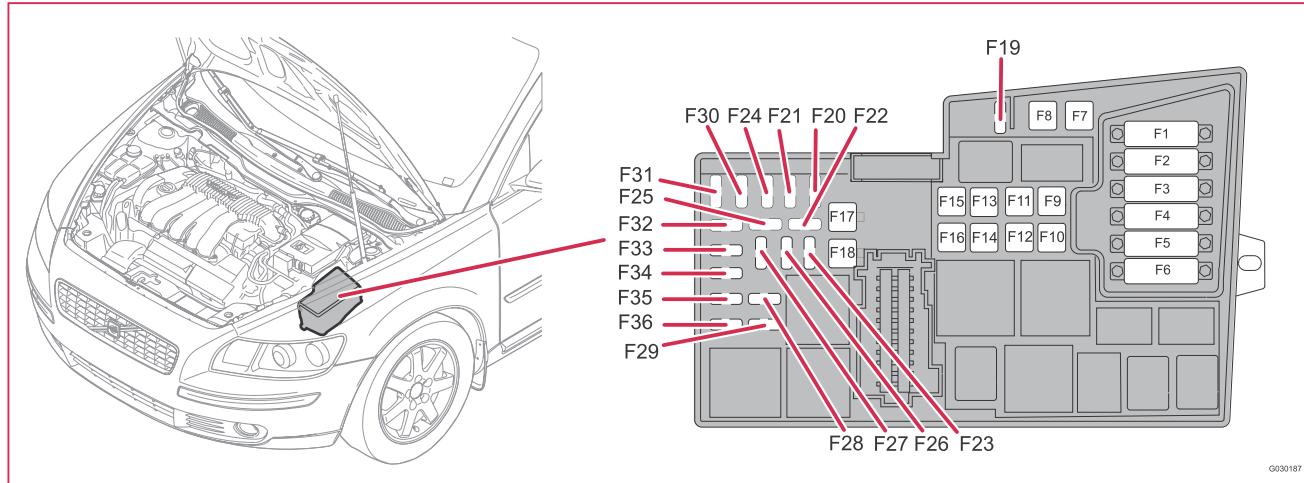


15/31 Distribution box in engine compartment

No.	Fuse function	via	A
F21	4/7 Combustion Preheater Module (CPM)	-	20
F22	16/79 Subwoofer Module (SUB), C70	-	25
F23	4/28 Transmission Control Module (TCM), MPS6	-	15
	4/28 Transmission Control Module (TCM), 5-Cyl.	-	10
	4/28 Transmission Control Module (TCM), AWF21	-	
F24	9/32 PTC resistor, crankcase ventilation, 5-Cyl. Diesel 9/38 Heated fuel filter, 5-Cyl. Diesel	2/142 2/142	20
F25	1/3 Secondary battery, 1.6l Diesel 4/56 Central Electronic Module (CEM), 1.6l Diesel	-	10
F26	2/35 Relay, starter motor	3/1	15
	3/1 Start Control Module (SCU)	-	
	4/56 Central Electronic Module (CEM)	3/1	
	F44 Fuse in the Central Electronic Module (CEM)	3/1	
	F51-F54 Fuses in the Central Electronic Module (CEM)	3/1	
	F73 Fuse in the Central Electronic Module (CEM)	3/1	
F27	8/3 Electromagnetic clutch, climate control system	2/22	10
F29	2/34 Relay, front fog lights	-	15
	10/5 Fog light, front left	2/34	
	10/6 Fog light, front right	2/34	
F30	4/46 Engine control module (ECM), 1.6l Gasoline	-	3
	6/73 Coolant pump, 1.6l Diesel	2/239	10
F31	6/26 Alternator, 4-Cyl.	-	10

continues

Fuses

Distribution box in engine compartment F32-F34

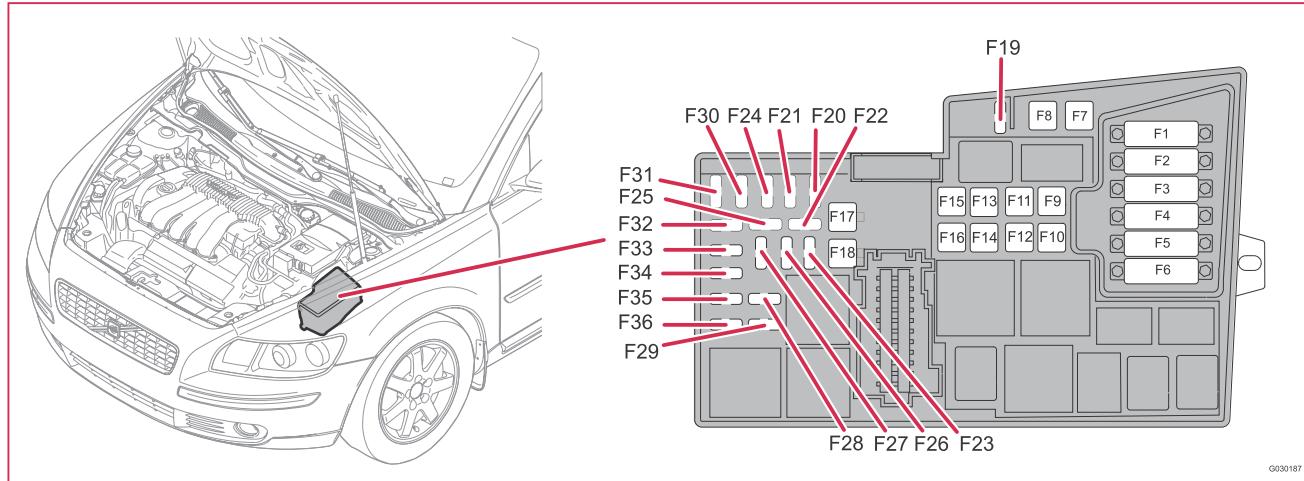


15/31 Distribution box in engine compartment

No.	Fuse function	via	A
F32	2/14 Relay, glow plug system 6/143 Regulator motor, Turbo 7/15 Front heated oxygen sensor, 4-Cyl. 7/17 Mass air flow sensor (MAF), 5-Cyl. Diesel 7/82 Rear heated oxygen sensor, 4-Cyl. 8/6-8/10 Injection valves, 5-Cyl. 8/11 Control valve fuel flow	- - - - - - -	10
F33	2/133 Relay vacuum pump 4/46 Engine Control Module (ECM), 5-Cyl. Diesel 6/114 Vacuum pump, 5-Cyl. 7/15 Front heated oxygen sensor, 5-Cyl. 7/82 Rear heated oxygen sensor, 5-Cyl. Turbo 8/84 Switch, vacuum pump 9/38 Heated fuel filter, 4-Cyl. Diesel	- - 2/133 - - - -	20
F34	2/35 Relay starter motor, 1.6l Diesel 2/242 Battery relay, 1.6l Diesel 2/243 Secondary battery relay, 1.6l Diesel 2/239 Relay coolant pump, 1.6l Diesel 4/46 Engine control module (ECM), 1.6l Diesel 4/109 Glow plug control module (GCU), 5-Cyl. 7/15 Front heated oxygen sensor 4-Cyl. 8/6-8/9 Injection valves, 1.6l. 8/111 Fuel flow control valve, 1.6l Diesel 8/119 Pressure monitor, climate control system, 5-Cyl. 8/120 EGR valve, 5-Cyl. Diesel 8/133 Control valve fuel pressure 20/3 -20/7 Spark plug and ignition coil 20/17 Transformer, ignition coils, 1.6l.	2/247 - - - 2/247 - - - - - - - - -	10

continues

Fuses

Distribution box in engine compartment F35-FH1

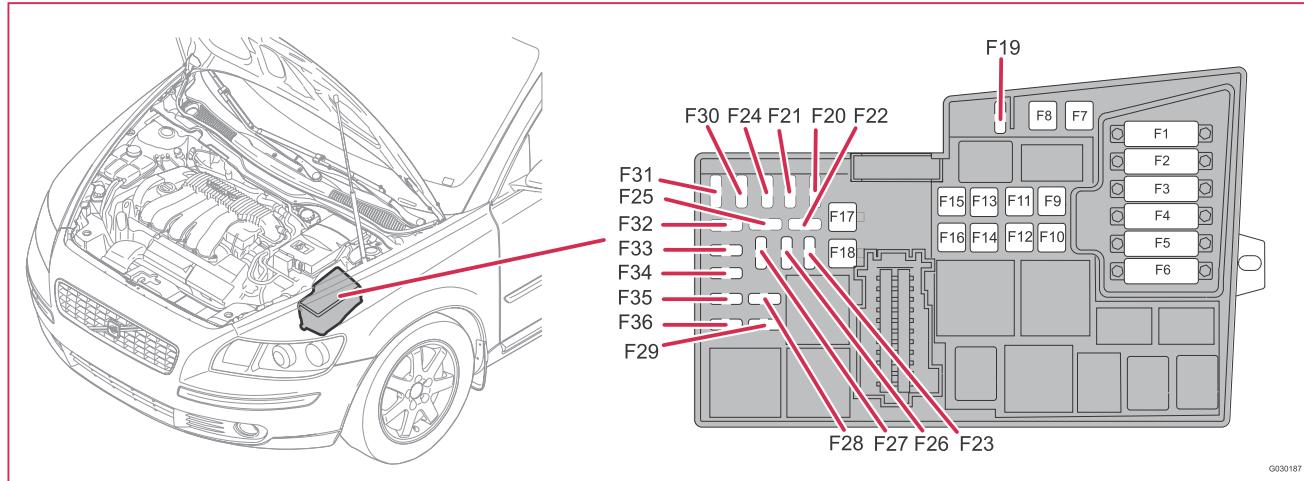


G030187

15/31 Distribution box in engine compartment

No.	Fuse function	via	A
F35	2/22 Relay, climate control system 4/46 Engine Control Module (ECM), 5-Cyl. Diesel 6/67 Fuel leakage control pump, 5-Cyl. 7/17 Mass air flow sensor (MAF), 5-Cyl. Gasoline, 4-Cyl. Diesel 8/18 EVAP valve, Gasoline 8/19 Solenoid, variable valve timing, intake, 5-Cyl. Gasoline 8/28 Turbocharger control valve, 2.5l Turbo 8/65 Pressure switch, power steering, 1.6l 8/81 Solenoid, variable valve timing, exhaust, 2.5l Turbo 8/113 Bypass valve, EGR cooling 9/32 PTC resistor, crankcase ventilation 5-Cyl. Gasoline	- 2/22 -	15
F36	4/46 Engine Control Module (ECM) 7/15 Front heated oxygen sensor, 5-Cyl. Diesel 7/51 Accelerator pedal sensor	- -	10
FH1	10/65 Auxiliary light, front right 10/69 Auxiliary light, front left	2/64 2/64	20

Fuses

Main fuse box battery

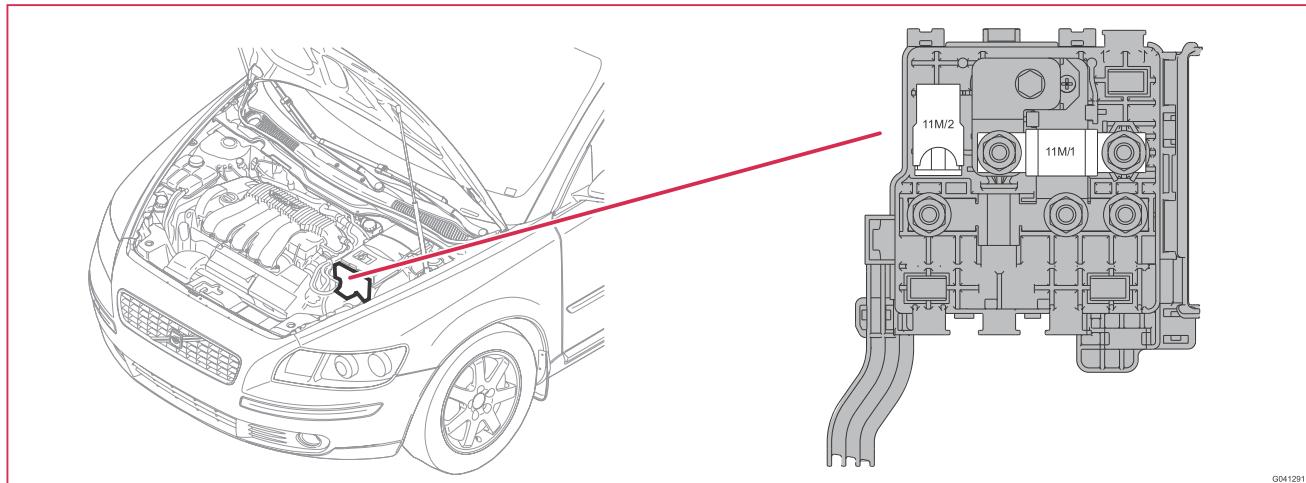


15/34 Main fuse box battery

No.	Fuse function	via	A
11M/1	6/26 Alternator 15/31 Distribution box in engine compartment	2/242 -	125
11M/2	7/240 Battery monitoring sensor (BMS)	-	15

Fuses

Fuse holder midi

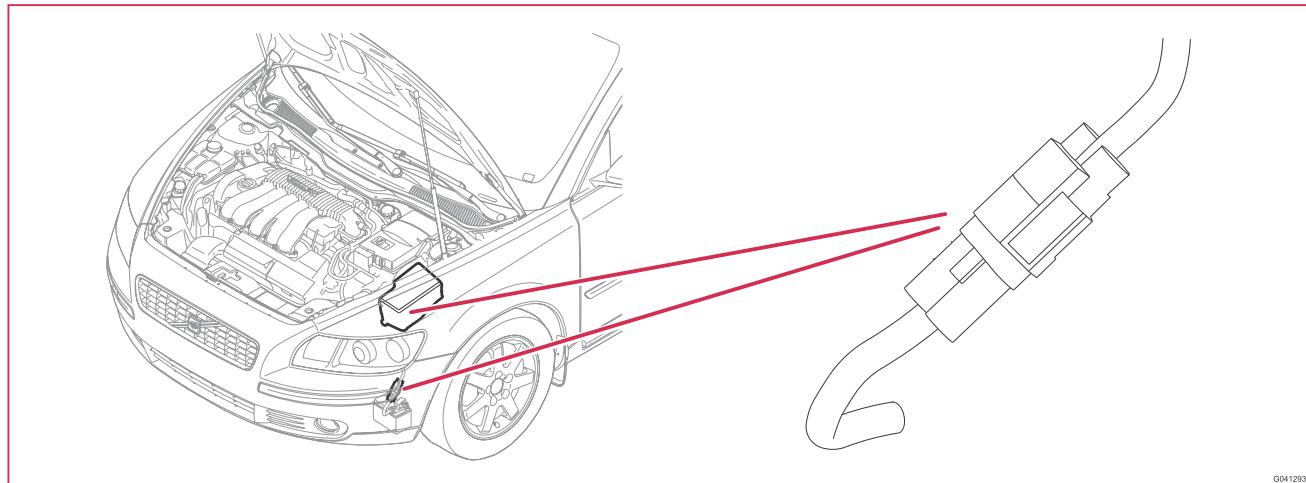


15/37 Fuse holder midi

No.	Fuse function	via	A
	Cable fuse by secondary battery	-	70
	Cable fuse in distribution box in engine compartment	-	70

Fuses

Central Electronic Module (CEM) F43-F48

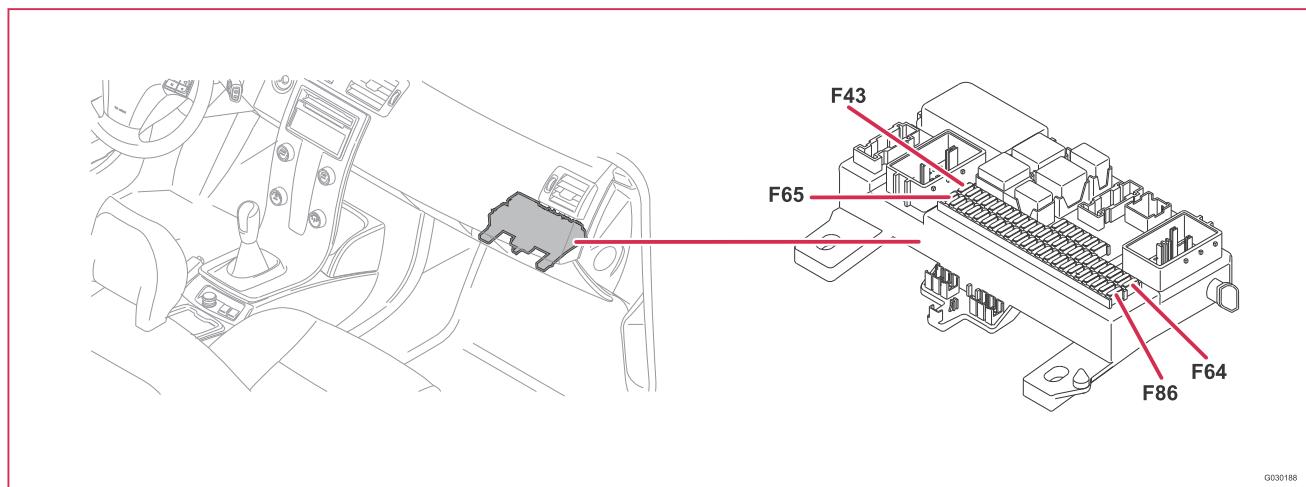

G030188


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F43	4/124 Accessory USB unit (AUU) 16/1 Integrated Audio Module (IAM) 16/46 RTI Display 16/60 Phone Module (PHM) 16/108 Multimedia Module (MMM) 16/147 Bluetooth Phone Module (BPM) 17/42 USB-port	- - - - - - 4/124	15
F44	4/46 Engine Control Module (ECM), 5-Cyl. 4/9 Supplemental Restraint System Module (SRS)	- -	10
F45	9/1 Front 12V outlet 9/25 Rear 12V outlet	- -	15
F46	3/111 Switch unit, lights 5/1 Driver Information Module (DIM) 10/1 Lamp housing, front left 10/2 Lamp housing, front right 10/29 Glove compartment lighting 10/97 Courtesy lighting, left 10/102 Courtesy lighting, right 26/8 Alcohol lock	- - - - - - - -	5
F47	4/76 Remote control unit for garage door opener 10/22 Ceiling light 10/150 Rear reading light 10/114 Vanity mirror lighting, left, not C70 10/115 Right-hand vanity mirror lighting	- - - - -	5
F48	2/16 Relay, rear window wiper 2/92 Relay, windshield washer motor 2/93 Relay, rear window washer motor 6/2 Washer pump 6/32 Rear window wiper motor	- - - 2/92 2/16	15

continues

Fuses

Central Electronic Module (CEM) F49-F61

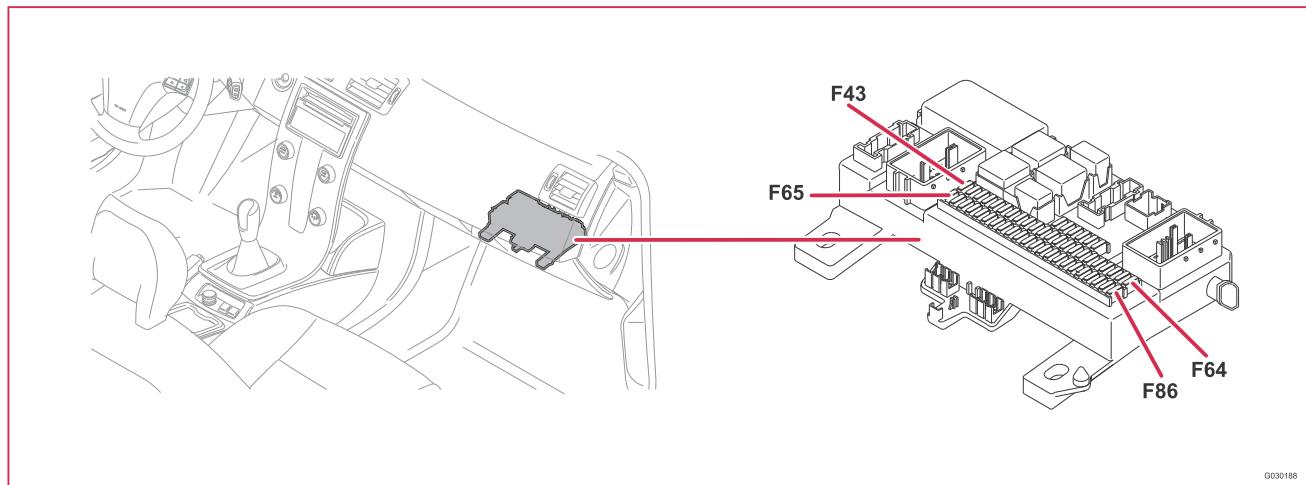


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F49	4/9 Supplemental Restraint System Module (SRS) 7/93 Occupant Weight Sensor (OWS), USA/CDN	-	10
F51	2/142 Relay pre-heater fuel filter, 5-Cyl. Diesel 9/41 PTC-element	-	10
F52	4/16 Brake Control Module (BCM) 4/28 Transmission Control Module (TCM)	-	5
F53	6/71 Electrical power steering module (EPS)	-	10
F54	4/46 Engine Control Module (ECM), 5-Cyl. 4/86 Parking Assistance Module (PAM) 4/114 Headlamp Control Module (HCM) 10/1 Lamp housing, front left 10/2 Lamp housing, front right	-	10
F55	4/93 Keyless Vehicle Module (KVM)	-	20
F56	4/119 Remote Keyless Entry (RKE)/Remote Receiver Module (RRX) 16/35 Siren Control Module (SCM)	-	10
F57	3/9 Contact brake light 17/13 Data link connector	-	15
F58	2/64 Relay, auxiliary lights 10/2 Lamp housing, front right	3/60 -	7.5
F59	10/1 Lamp housing, front left	-	7.5
F60	9/12 Seat Heating Module (SHM), driver's side	-	15
F61	9/13 Seat Heating Module (SHM), passenger side	-	15

continues

Fuses

Central Electronic Module (CEM) F62-F69

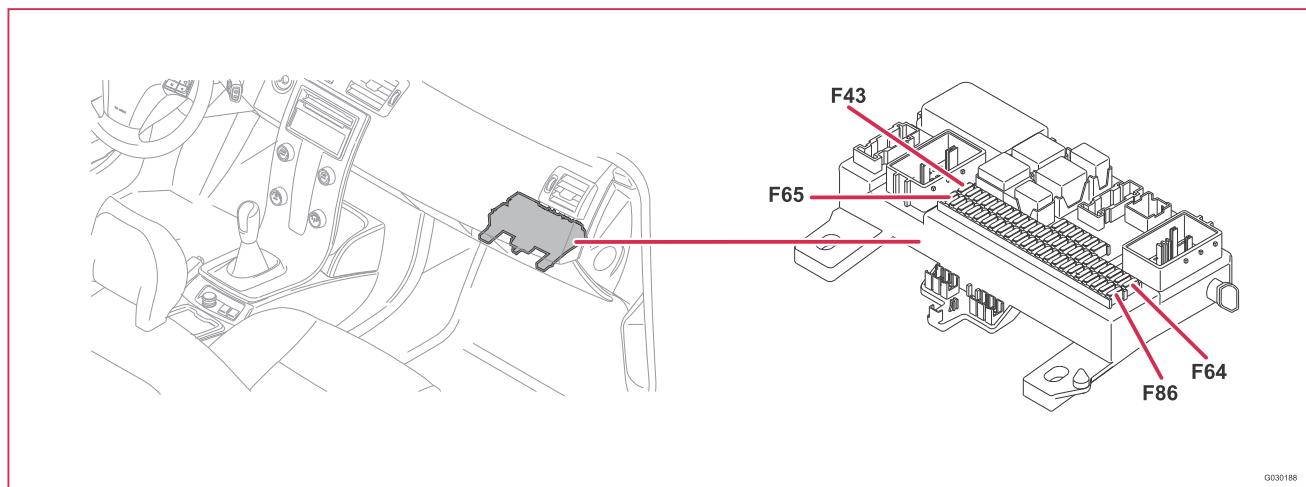

G030188


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F62	4/33 Sunroof control module	-	20
F63	3/129 Right rear door module (RDM)	-	20
F64	10/245 Lock indicator, left door, C70 10/246 Lock indicator, right door, C70 16/145 Remote Digital Audio Receiver (RDAR)	- - -	5
F65	7/182 Remote control IR sensor, RTI 16/46 RTI Display 16/105 Audio module (AUD) 16/150 AM/FM antenna and amplifier, right rear fender, C70 16/150 Window antenna amplifier, left, C30	- - - - -	5
F66	3/112 Climate Control Module (CCM) 3/281 Infotainment Control Module (ICM) 16/1 Integrated Audio Module (IAM)	- - -	10
F68	3/254 Steering Wheel Module (SWM)	-	5
F69	3/112 Climate Control Module (CCM) 3/286 Switch BLIS/PAS/DRIVE 6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), temperature, left side 6/96 Damper Motor Module (DMM), temperature, right side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/149 Rain Sensor Module (RSM) 7/159 Air Quality Sensor (AQS)	- - - - - - - - -	5

continues

Fuses

Central Electronic Module (CEM) F73-F85

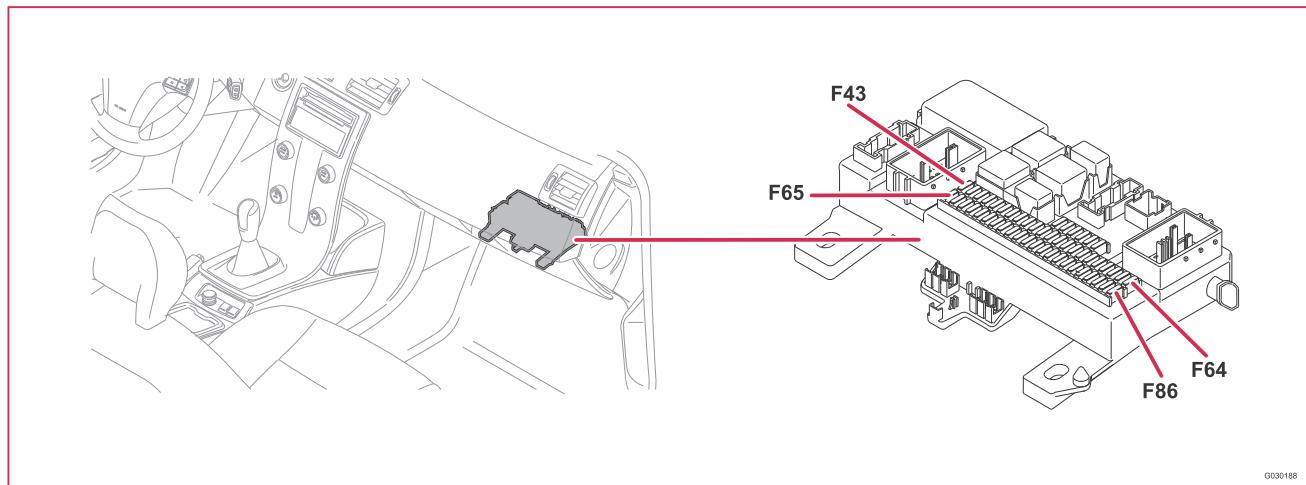


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F73	3/117 Switch unit, ceiling light 3/217 Contact, LH rear belt buckle 3/218 Contact, center rear belt buckle 3/219 Contact, RH rear belt buckle 4/33 Sunroof control module 8/48 Auto-dimming rearview mirror 10/22 Ceiling light	- - - - - - -	5
F74	4/83 Fuel pump control module, Gasoline 6/33 Fuel pump	2/23 2/23, 26/5	15
F77	4/78 Accessory electronic module (AEM) 17/19 12V outlet, cargo compartment 17/39 13-pin outlet, tow hitch cable harness	- - -	15
F79	8/48 Auto-dimming rearview mirror 10/48 Right-hand reversing light 10/55 Left-hand reversing light	2/80 - -	5
F81	3/128 Left rear door module (LDM)	-	20
F82	3/127 Passenger Door Module (PDM)	-	25
F83	3/126 Driver Door Module (DDM)	-	25
F84	3/27 Switch unit, power passenger seat 4/54 Power Seat Module (PSM)	- -	25
F85	3/26 Switch unit, power driver's seat 4/52 Power Seat Module (PSM)	-	25

continues

Fuses


Central Electronic Module (CEM) F86

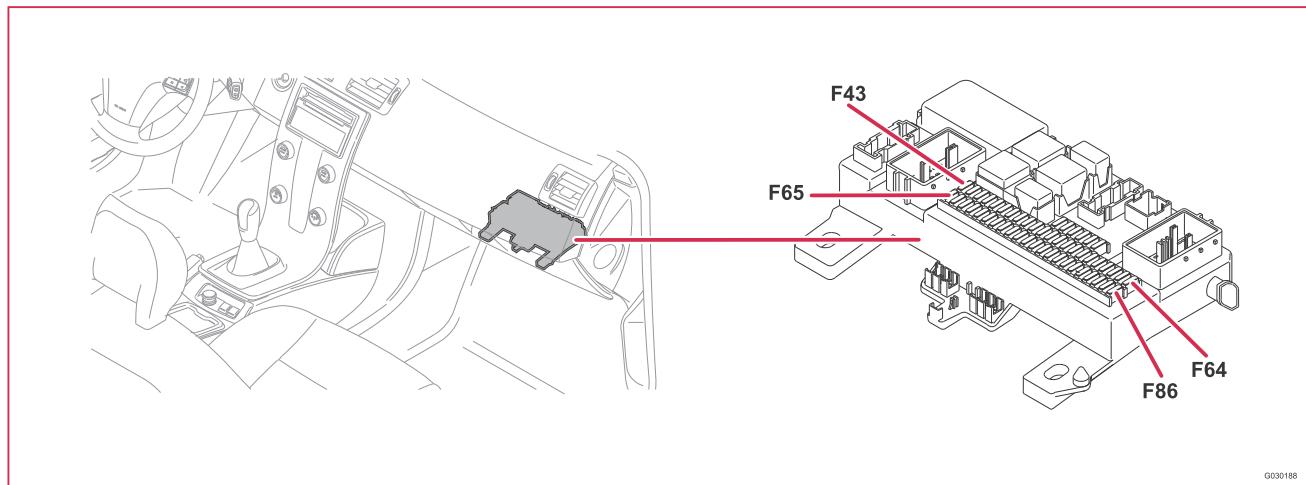

4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F86	3/26 Switch unit, power driver's seat 3/27 Switch unit, power passenger seat 3/268 Load assistance switch 4/52 Power Seat Module (PSM) 4/54 Power Seat Module (PSM) 10/24 Cargo compartment lighting 10/25 Ceiling light, cargo compartment 10/26 Reading light, rear left 10/27 Reading light, rear right 10/114 Vanity mirror lighting, left, C70	- - - - - - - - - -	5

Fuses Battery PF1-PF2

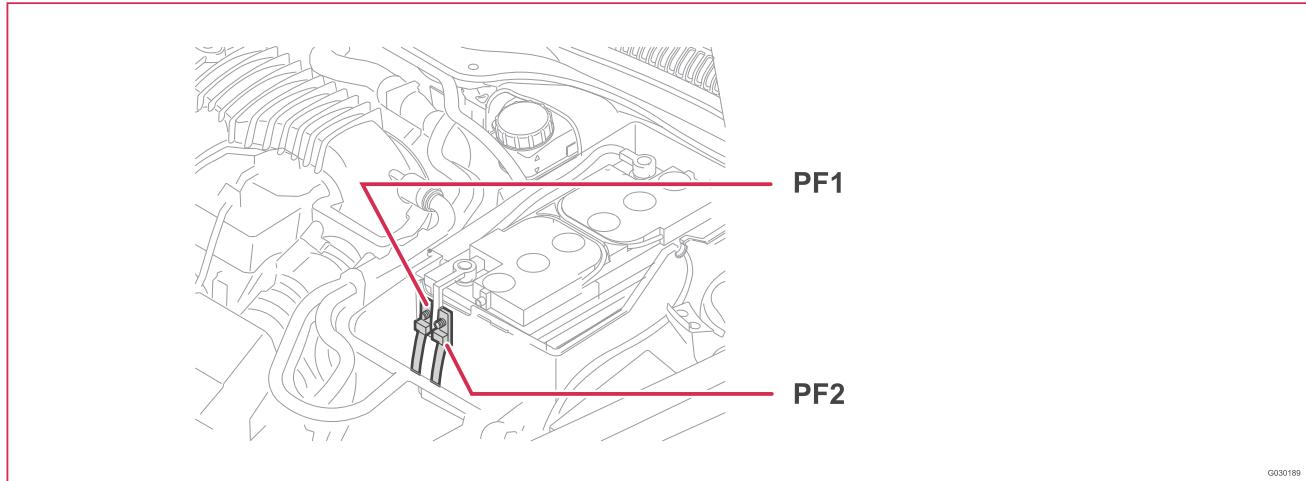


G030189

1/1 Battery

No.	Fuse function	via	A
PF1	6/25 Starter motor 6/26 Alternator	- -	150
PF2	F1-F14 Fuses in the engine compartment distribution box F16-F18 Fuses in the engine compartment distribution box F20-F21 Fuses in the engine compartment distribution box F23-F24 Fuses in the engine compartment distribution box F26-F27 Fuses in the engine compartment distribution box F29-F31 Fuses in the engine compartment distribution box	- - - - - -	150


Relays

Ignition switch and relays

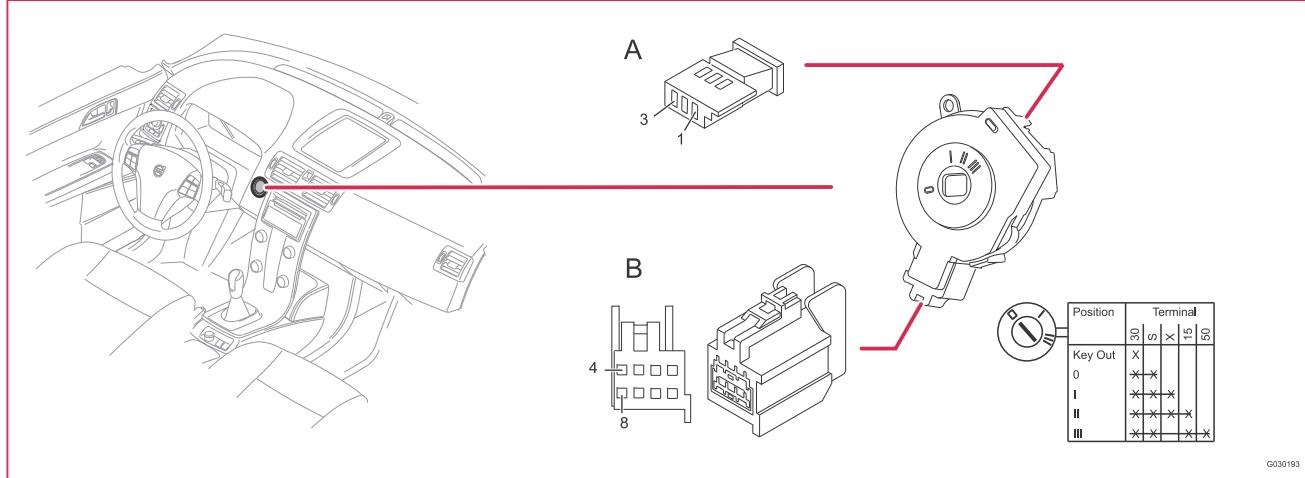

Relays, general



The diagram indicates two or three different designations for the relay's position. This is described below.

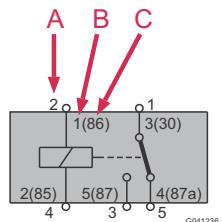

- A = Corresponds to the position on the back of the relay box (wiring side)
- B = Corresponds to the position on the relay
- C = An old designation that may be found on the relay

Relays

Distribution box in engine compartment R1-R14

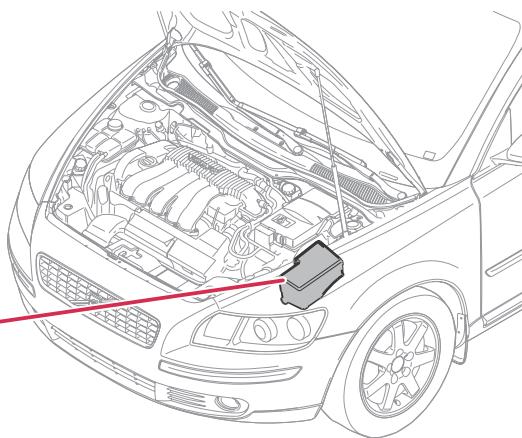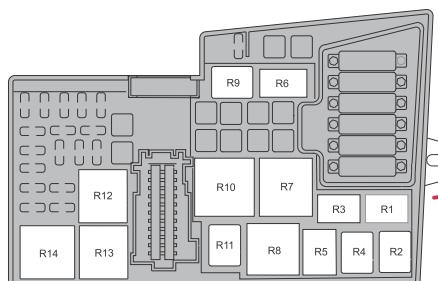


G030194

15/31 Distribution box engine compartment

Pos	Relay function
R1	2/239 Relay coolant pump
R2	2/17 Relay, horn
R3	2/133 Relay vacuum pump
R4	2/34 Relay, front fog lights
R5	2/142 Relay pre-heater fuel filter
R6	2/247 Relay autostart
R7	2/243 Secondary battery relay
R9	2/182 Relay, headlight washer motor
R10	2/82 Relay, heated rear window
R11	2/22 Relay, climate control system
R12	2/14 Relay, glow plug system
R13	2/35 Relay, starter motor
R14	2/32 Main relay, engine management system

Relays

Engine compartment

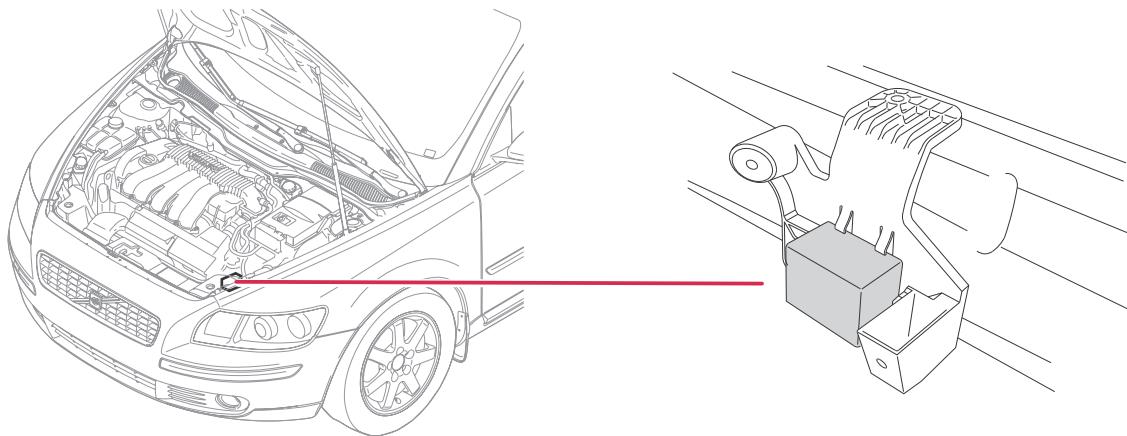

G041292


Relay in extra holder engine compartment

Relay function

2/242	Battery relay
-------	---------------

Relays

Central electronic module (CEM) R15-R18

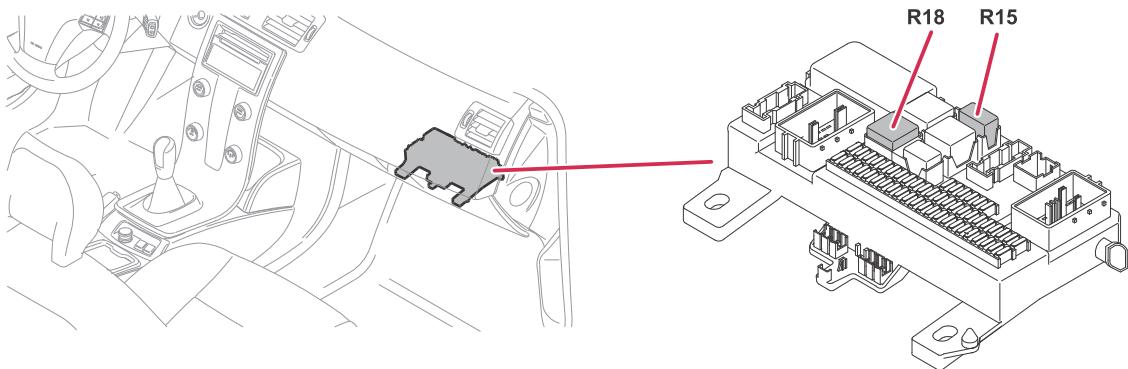


G030195

4/56 Central Electronic Module (CEM)

Pos	Relay function	
R15	2/23	Fuel pump relay, Gasoline
R18	2/193	Relay, comfort functions

Relays - soldered Central electronic module (CEM) R1-R11B

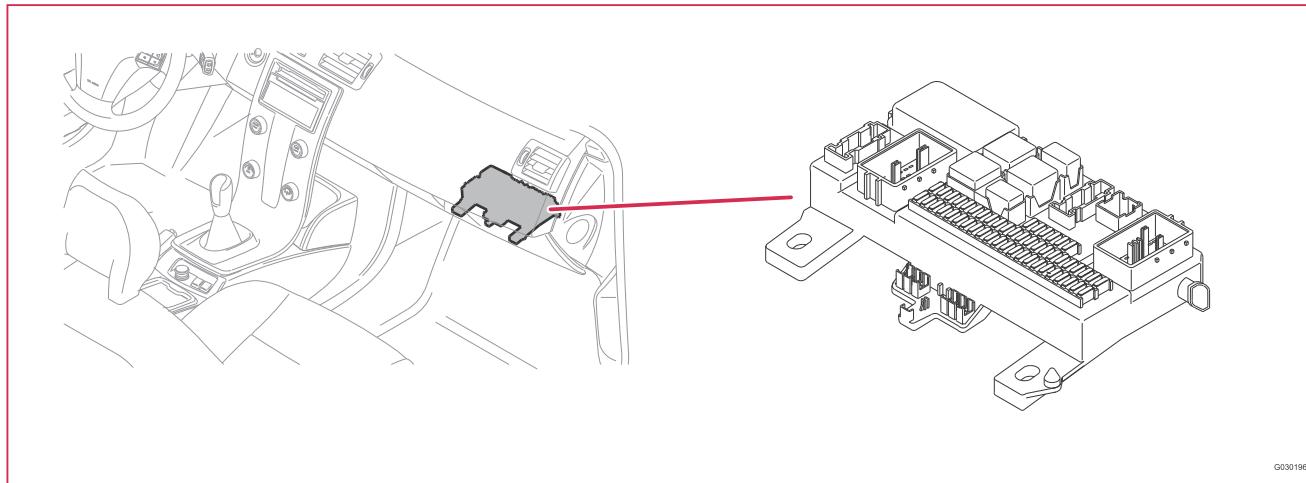

4/56 Central Electronic Module (CEM)

Pos	Relay function
R1	2/89 Relay, interior lighting
R2	2/80 Relay, reversing lights
R7A	2/92 Relay, windshield washer motor
R7B	2/93 Relay, rear window washer motor
R8	2/63 Relay, high beam
R11A	2/16 Relay, rear window wiper
R11B	2/159 Relay, infotainment

Relays


Other relays

Relays accessories

Pos	Relay function
Dashboard	2/64 Relay, auxiliary lights
By climate control system	2/71 Relay cellular phone handsfree, internal amplifier
Cargo compartment	2/71 Relay cellular phone handsfree, external amplifier
Front member	2/192 Relay, electric engine heater

Ground connections

Overview

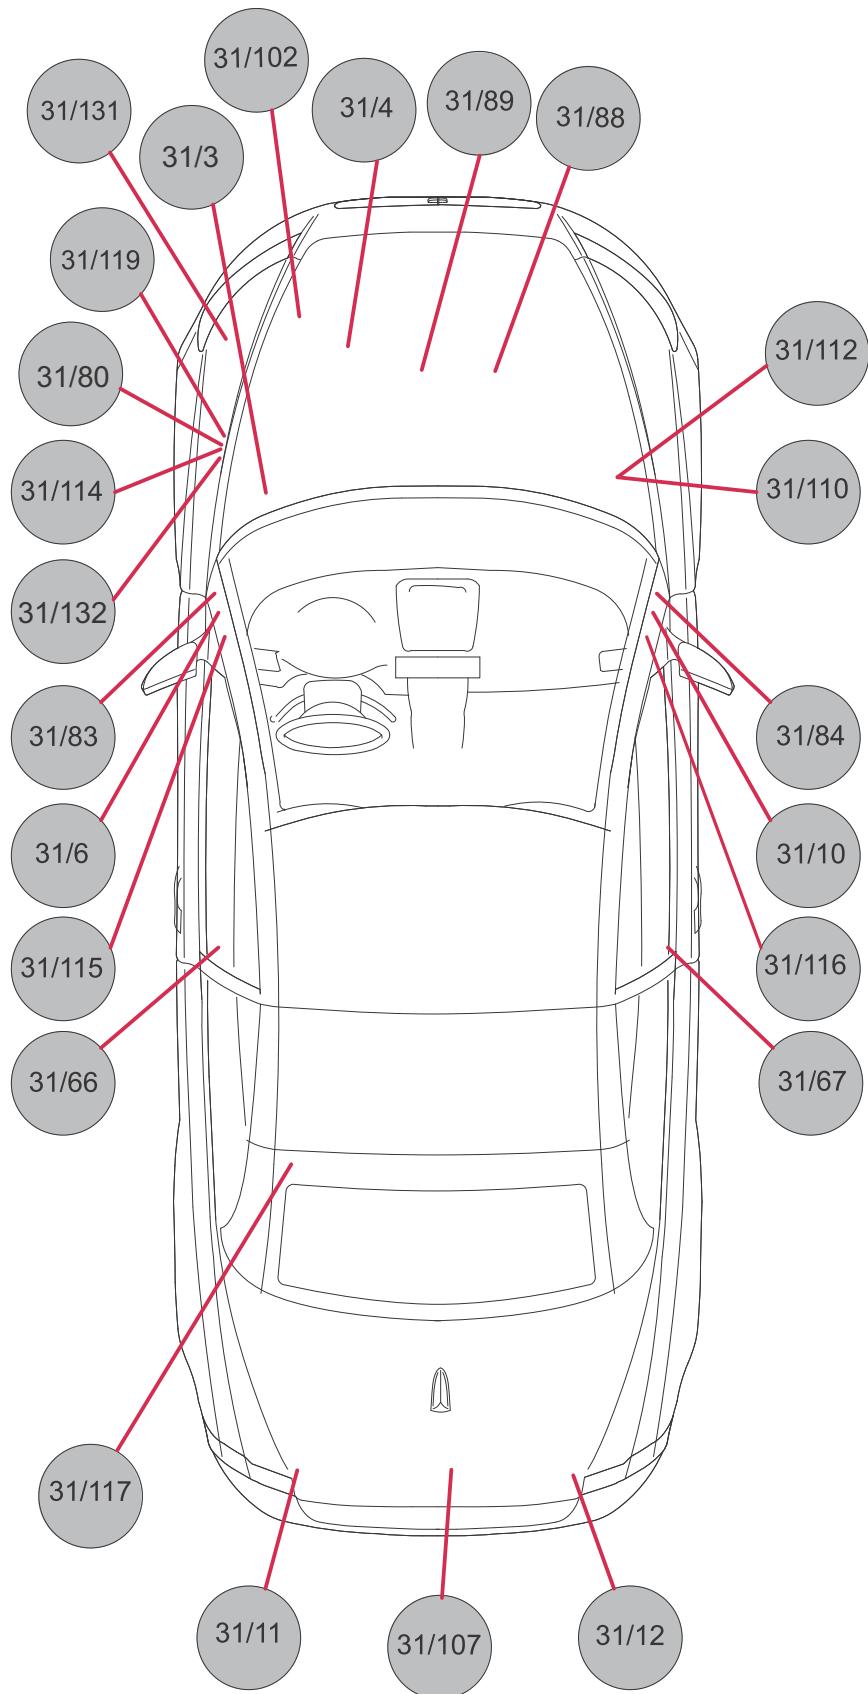

G029711

Ground connections

31/3 - 31/10 cont

31/3 Left MacPherson strut tower	
1/1	Battery
7/240	Battery monitoring sensor (BMS)

31/4 Engine	
1/1	Battery
7/240	Battery monitoring sensor (BMS)

31/6 A-post, driver's side	
3/111	Switch unit, lights
4/93	Keyless Vehicle Module (KVM), RHD
4/102	Steering Column Lock Module (SCL)
10/1	Lamp housing, front left
10/2	Lamp housing, front right
17/13	Data link connector
7/238	Alcohol lock

31/10 A-post, passenger side	
2/16	Relay, rear window wiper
2/23	Relay, fuel pump
2/63	Relay, high beam
2/64	Relay, auxiliary lights
2/89	Relay, interior lighting
2/92	Relay, windshield washer motor
2/93	Relay, rear window washer motor
2/159	Relay, infotainment
2/193	Relay, comfort functions
3/25	Switch, power roof/sunroof
3/112	Climate Control Module (CCM)
3/117	Switch unit, ceiling light
3/156	Gear Selector Module (GSM)
3/173	Switch, trunk lid/tailgate private lock
3/286	Switch BLIS/PAS/DRIVE
4/33	Sunroof control module
4/56	Central Electronic Module (CEM)
6/2	Washer pump
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
6/117	Interior temperature sensor
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
8/48	Auto-dimming rearview mirror
8/134	Solenoid, reverse interlock, manual
9/1	Front 12V outlet
9/25	Rear 12V outlet

Continues

Ground connections

31/10 - 31/12

31/10 A-post, passenger side	
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Vanity mirror lighting, left, S40/V50/C30
10/115	Right-hand vanity mirror lighting
10/150	Rear reading light
16/1	Integrated Audio Module (IAM)
16/45	Portable navigation system

31/11 Rear left side	
3/35	Switch, handle, trunk lid, C30
3/78	Lock unit, trunk lid/tailgate
4/78	Accessory Electronic Module (AEM), C70
4/86	Parking Assistance Module (PAM)
4/110	Trailer Module (TRM), C30
6/32	Rear window wiper motor, C30
7/101	Glass breakage sensor, C30
9/2	Heated rear window, C30
10/3	License plate lighting, C30
10/18	Lamp housing, rear left
16/79	Subwoofer Module (SUB), C70
16/105	Audio module (AUD)
16/145	Remote Digital Audio Receiver (RDAR), S40/V50
17/19	12V outlet, cargo compartment, C70

31/12 Rear right side	
4/59	Convertible Roof Module (CRM)
4/78	Accessory Electronic Module (AEM), S40/V50
4/86	Parking Assistance Module (PAM)
4/110	Trailer Module (TRM)
6/37	Lock motor, fuel filler cover
10/17	Lamp housing, rear right
10/19	Auxiliary brake lights, C30
16/145	Remote Digital Audio Receiver (RDAR), C30/C70
17/19	12V outlet, cargo compartment, S40/V50
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness

Ground connections

31/66 - 31/67

31/66 Left B-post	
3/26	Switch unit, power driver's seat, LHD
3/27	Switch unit, power passenger seat, RHD
3/35	Switch, handle, trunk lid/tailgate
3/76	Lock unit, rear left door
3/78	Lock unit, trunk lid/tailgate
3/85	Power window switch, rear left door
3/128	Left rear door module (LDM)
3/275	Lock contact, LH rear door
3/287	Rear seat entry switch, left
4/52	Power Seat Module (PSM), LHD
4/54	Power Seat Module (PSM)
4/93	Keyless Vehicle Module (KVM), RHD
6/32	Rear window wiper motor, V50/C30
6/35	Fuel pump, auxiliary heater
8/51	Igniter, side airbag, driver's side, LHD
8/52	Igniter, side airbag, passenger side, RHD
8/92	Lap belt tensioner, driver, LHD
9/2	Heated rear window, C70
9/12	Seat Heating Module (SHM), driver's side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
10/3	License plate lighting, S40/V50/C70
10/19	Auxiliary brake light, V50/C70
10/26	Reading light, rear left
10/114	Vanity mirror lighting, left, C70, LHD

31/67 Right B-post	
3/26	Switch unit, power driver's seat, RHD
3/27	Switch unit, power passenger seat, LHD
3/77	Lock unit, rear right door
3/86	Power window switch, right rear door
3/129	Right rear door module (RDM)
3/276	Lock contact, RH rear door
3/288	Rear seat entry switch, right
4/52	Power Seat Module (PSM), RHD
4/54	Power Seat Module (PSM)
4/93	Keyless Vehicle Module (KVM), LHD
7/93	Occupant Weight Sensor (OWS), USA/CDN
7/158	Mass movement sensor rear
8/51	Igniter, side airbag, driver's side, RHD
8/52	Igniter, side airbag, passenger side, LHD
8/92	Driver's lap belt tensioner, RHD
9/12	Seat Heating Module (SHM), driver's side, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
10/27	Reading light, rear right
10/114	Vanity mirror lighting, left, C70, RHD
16/105	Audio module (AUD), C30

Ground connections

31/80 - 31/107

31/80 LH wheel housing

4/16	Brake Control Module (BCM), valves
------	------------------------------------

31/83 A-post, driver's side

3/1	Ignition switch
3/6	Switch, hazard warning flashers
3/254	Steering Wheel Module (SWM)
5/1	Driver Information Module (DIM)
17/13	Data link connector

31/84 A-post, passenger side

3/281	Infotainment Control Module (ICM)
4/56	Central Electronic Module (CEM)
7/51	Accelerator pedal sensor
7/149	Rain Sensor Module (RSM)
8/31	Airbag igniter, passenger side
8/32	Igniter, airbag stage 2, passenger side
16/1	Integrated Audio Module (IAM)
16/46	RTI Display
16/60	Phone Module (PHM)
16/108	Multimedia Module (MMM)
16/147	Bluetooth Phone Module (BPM)

31/88 Engine

9/32	PTC resistor, crankcase ventilation
20/3	Spark plug and ignition coil
20/4	Spark plug and ignition coil

31/89 Engine

20/5	Spark plug and ignition coil
20/6	Spark plug and ignition coil
20/7	Spark plug and ignition coil

31/102 Front member

2/192	Relay, electric engine heater
-------	-------------------------------

31/107 Tailgate (V50)

16/16	Window antenna amplifier
31/117	Ground connection, roof, V50

Ground connections

31/110 - 31/115

31/110 Right MacPherson strut tower

3/271	Contact, immobilizer, clutch pedal
4/7	Combustion Preheater Module (CPM)
6/1	Wiper Motor Module (WMM)
6/28	Motor, passenger compartment fan
6/73	Coolant pump
6/104	Pump, high pressure headlight washer
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
8/119	Pressure monitor, climate control system
8/127	Pressure switch, climate control system, Diesel
10/2	Lamp housing, front right
10/6	Fog light, front right

31/112 Right MacPherson strut tower

9/41	PTC element, Diesel
------	---------------------

31/114 LH wheel housing

2/142	Relay pre-heater fuel filter
3/9	Contact brake light
3/62	Hood alarm contact
4/71	Cooling fan control module
4/114	Headlamp Control Module (HCM)
6/71	Electrical power steering module (EPS)
6/114	Vacuum pump, Gasoline
8/84	Switch, vacuum pump
10/1	Lamp housing, front left
10/5	Fog light, front left
16/10	Horn 1
16/11	Horn 2
16/35	Siren Control Module (SCM)

31/115 Left A-post

3/126	Driver Door Module (DDM), LHD
3/127	Passenger Door Module (PDM), RHD
4/83	Fuel pump control module, RHD
6/33	Fuel pump, RHD
9/38	Electrically heated fuel filter
26/5	DC/AC converter, fuel tank

Ground connections

31/116 - 31/132

31/116 Right A-post

3/126	Driver Door Module (DDM), RHD
3/127	Passenger Door Module (PDM), LHD
4/83	Fuel pump control module, LHD, Gasoline
6/33	Fuel pump
9/38	Electrically heated fuel filter
26/5	DC/AC converter, fuel tank

31/117 Roof

31/107	Ground connection, tailgate (V50)
--------	-----------------------------------

31/119 Left MacPherson strut tower

4/16	Brake Control Module (BCM)
------	----------------------------

31/131 Behind lamp housing, front left

1/3	Secondary battery
-----	-------------------

31/132 LH wheel housing


3/10	Reversing light contact
4/28	Transmission control module
4/46	Engine Control Module (ECM)
8/3	Electromagnetic clutch, climate control system
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

Ground connections

Grounded to chassis

Grounded directly to chassis	
3/4	Switch unit, cruise control (SWS)
3/37	Contact horn
3/47	Parking brake contact
4/9	Supplemental Restraint System Module (SRS)
4/56	Central Electronic Module (CEM)
6/25	Starter motor
6/26	Alternator
7/6	Oil pressure monitor
8/3	Electromagnetic clutch, climate control system
8/33	Igniter, belt tensioner, driver's side
8/34	Igniter, belt tensioner, passenger side
8/55	Igniter, rear left belt tensioner
8/56	Igniter, rear right belt tensioner
8/66	Igniter, left inflatable curtain
8/67	Igniter, right inflatable curtain
8/128	Driver's belt force limiter
8/129	Passenger belt force limiter
16/16	Window antenna amplifier
16/67	Antenna amplifier, bumper, C70
16/141	Interference filter, rear window, left
16/142	Interference filter, rear window, right
16/150	AM/FM antenna and amplifier, right rear fender, C70
16/150	Window antenna amplifier, left, C30
18/4	Contact reel
20/22-26	Glow plug

Control modules Overview locations

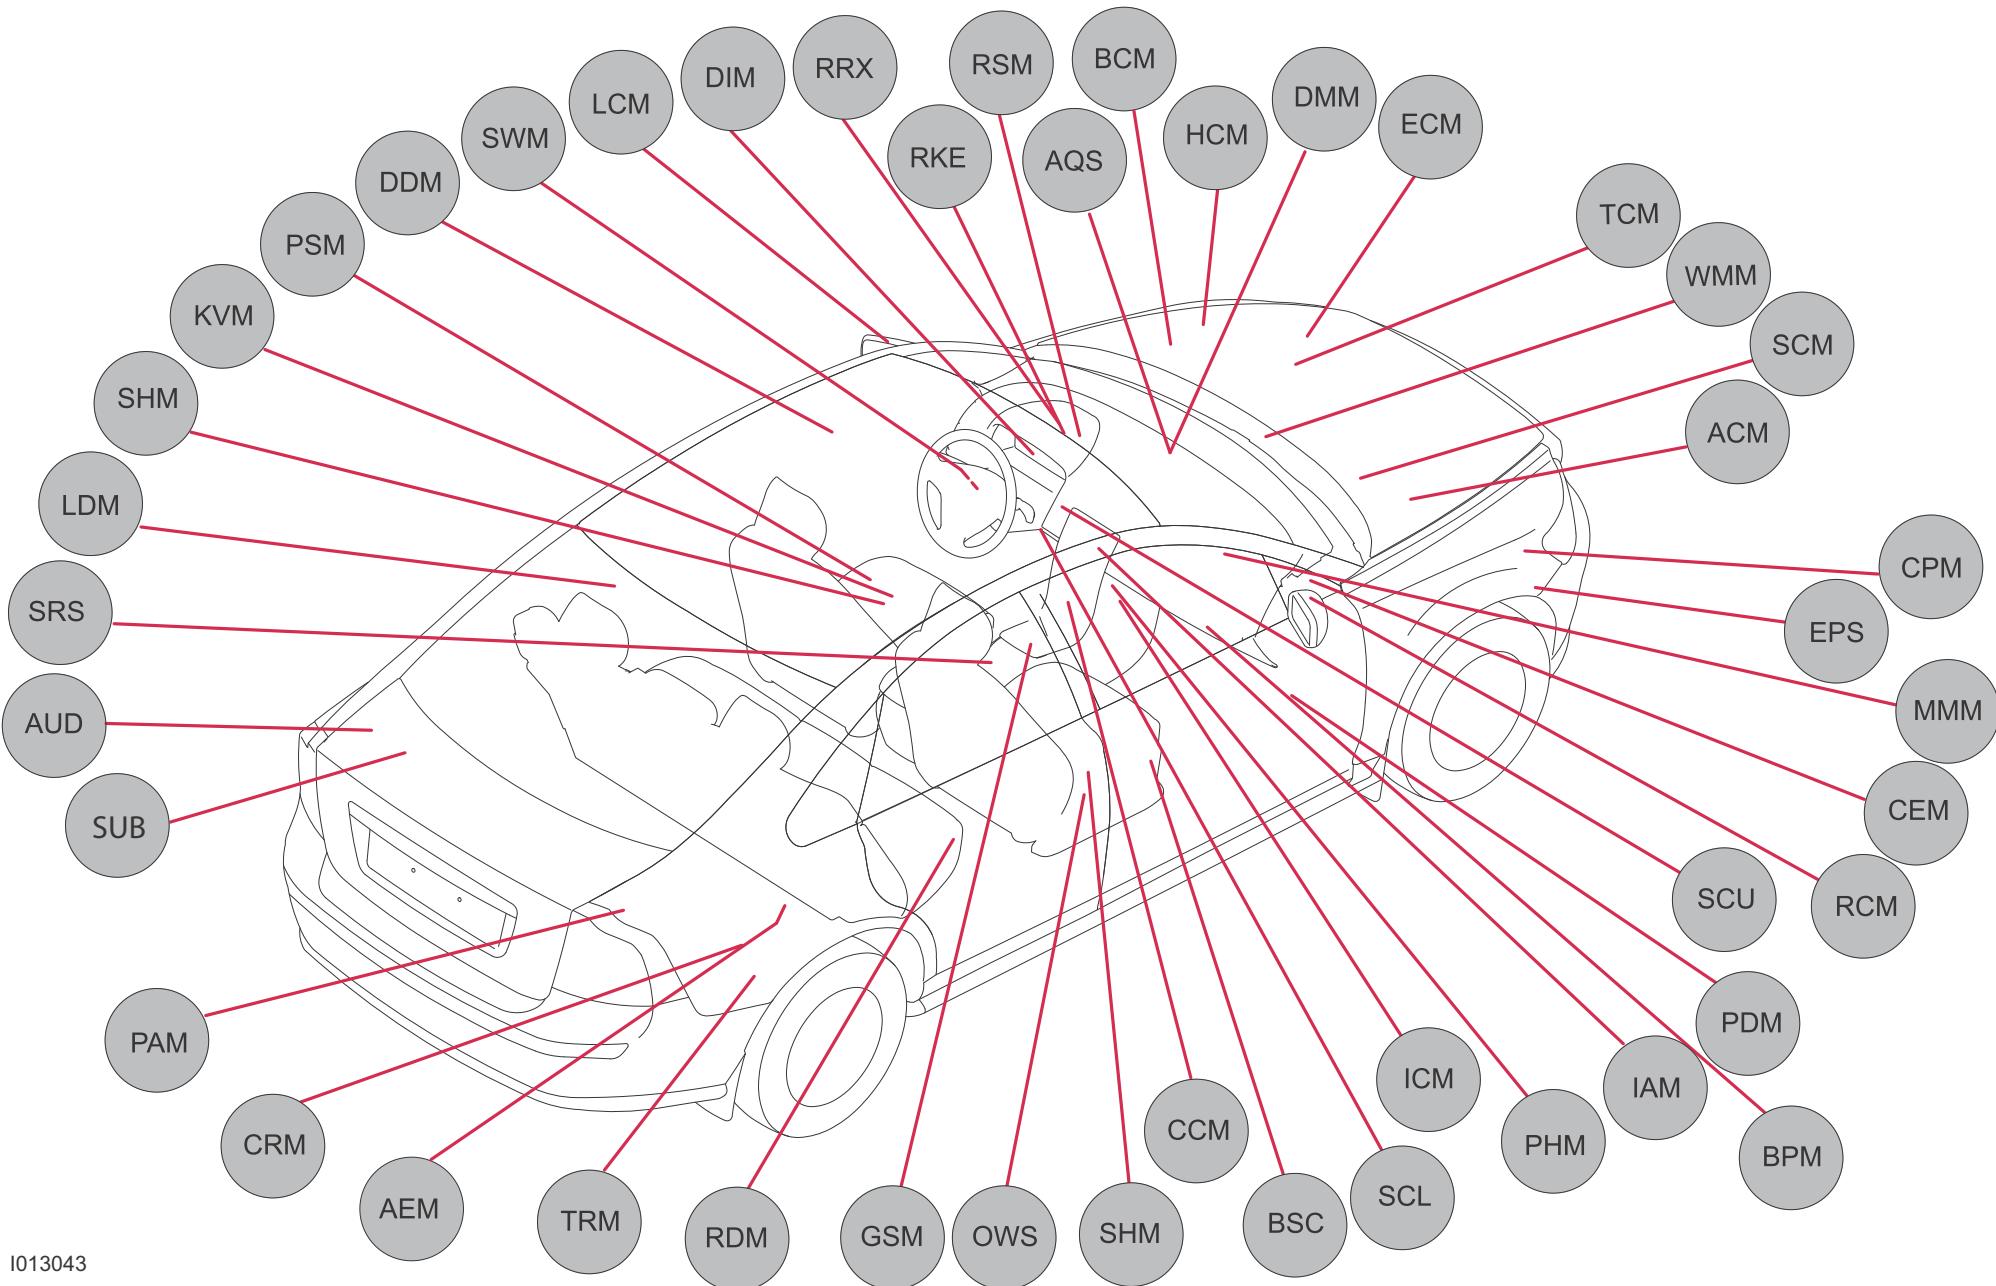


Control modules

Overview designations

Unit	Designation	
ACM	6/26	Alternator Control Module (ACM)
AEM	4/78	Accessory electronic module (AEM)
AQS	7/159	Air Quality Sensor (AQS)
AUD	16/105	Audio module (AUD)
BCM	4/16	Brake Control Module (BCM)
BPM	16/147	Bluetooth Phone Module (BPM)
BSC	7/164	Body Sensor Cluster Stability Sensor (BSC)
CCM	3/112	Climate Control Module (CCM)
CEM	4/56	Central Electronic Module (CEM)
CPM	4/7	Combustion Preheater Module (CPM)
DDM	3/126	Driver Door Module (DDM)
DIM	5/1	Driver Information Module (DIM)
DMM	6/48	Damper Motor Module (DMM), recirculation
	6/95	Damper Motor Module (DMM), temperature, left side
	6/96	Damper Motor Module (DMM), temperature, right side
	6/102	Damper Motor Module (DMM), defroster
	6/103	Damper Motor Module (DMM), floor/ventilation
ECM	4/46	Engine Control Module (ECM)
EPS	6/71	Electrical power steering module (EPS)
GPS	16/139	Global positioning system module (GPS)
GSM	3/156	Gear Selector Module (GSM)
HCM	4/114	Headlamp Control Module (HCM)
IAM	16/1	Integrated Audio Module (IAM)
ICM	3/281	Infotainment Control Module (ICM)
KVM	4/93	Keyless Vehicle Module (KVM)
LCM	4/126	Left Camera Module (LCM)
LDM	3/128	Left rear door module (LDM)
MMM	16/108	Multimedia Module (MMM)
OWS	7/93	Occupant Weight Sensor (OWS)
PAM	4/86	Parking Assistance Module (PAM)
PDM	3/127	Passenger Door Module (PDM)
PHM	16/60	Phone Module (PHM)
PSM	4/52	Power Seat Module (PSM)
	4/54	Power Seat Module (PSM)
RCM	4/127	Right Camera Module (RCM)
RDM	3/129	Right rear door module (RDM)
RKE	4/119	Remote Keyless Entry (RKE)
RRX	4/119	Remote Receiver Module (RRX)
RSM	7/149	Rain Sensor Module (RSM)
SCL	4/102	Steering Column Lock Module (SCL)
SCM	16/35	Siren Control Module (SCM)
SCU	3/1	Start Control Module (SCU)
SHM	9/12	Seat Heating Module (SHM), driver's side
	9/13	Seat Heating Module (SHM), passenger side
SRS	4/9	Supplemental Restraint System Module (SRS)
SUB	16/79	Subwoofer Module (SUB)
SWM	3/254	Steering Wheel Module (SWM)
TCM	4/28	Transmission Control Module (TCM)
TRM	4/110	Trailer Module (TRM)
WMM	6/1	Wiper Motor Module (WMM)

Control modules


Central electronic module (CEM) 1:2

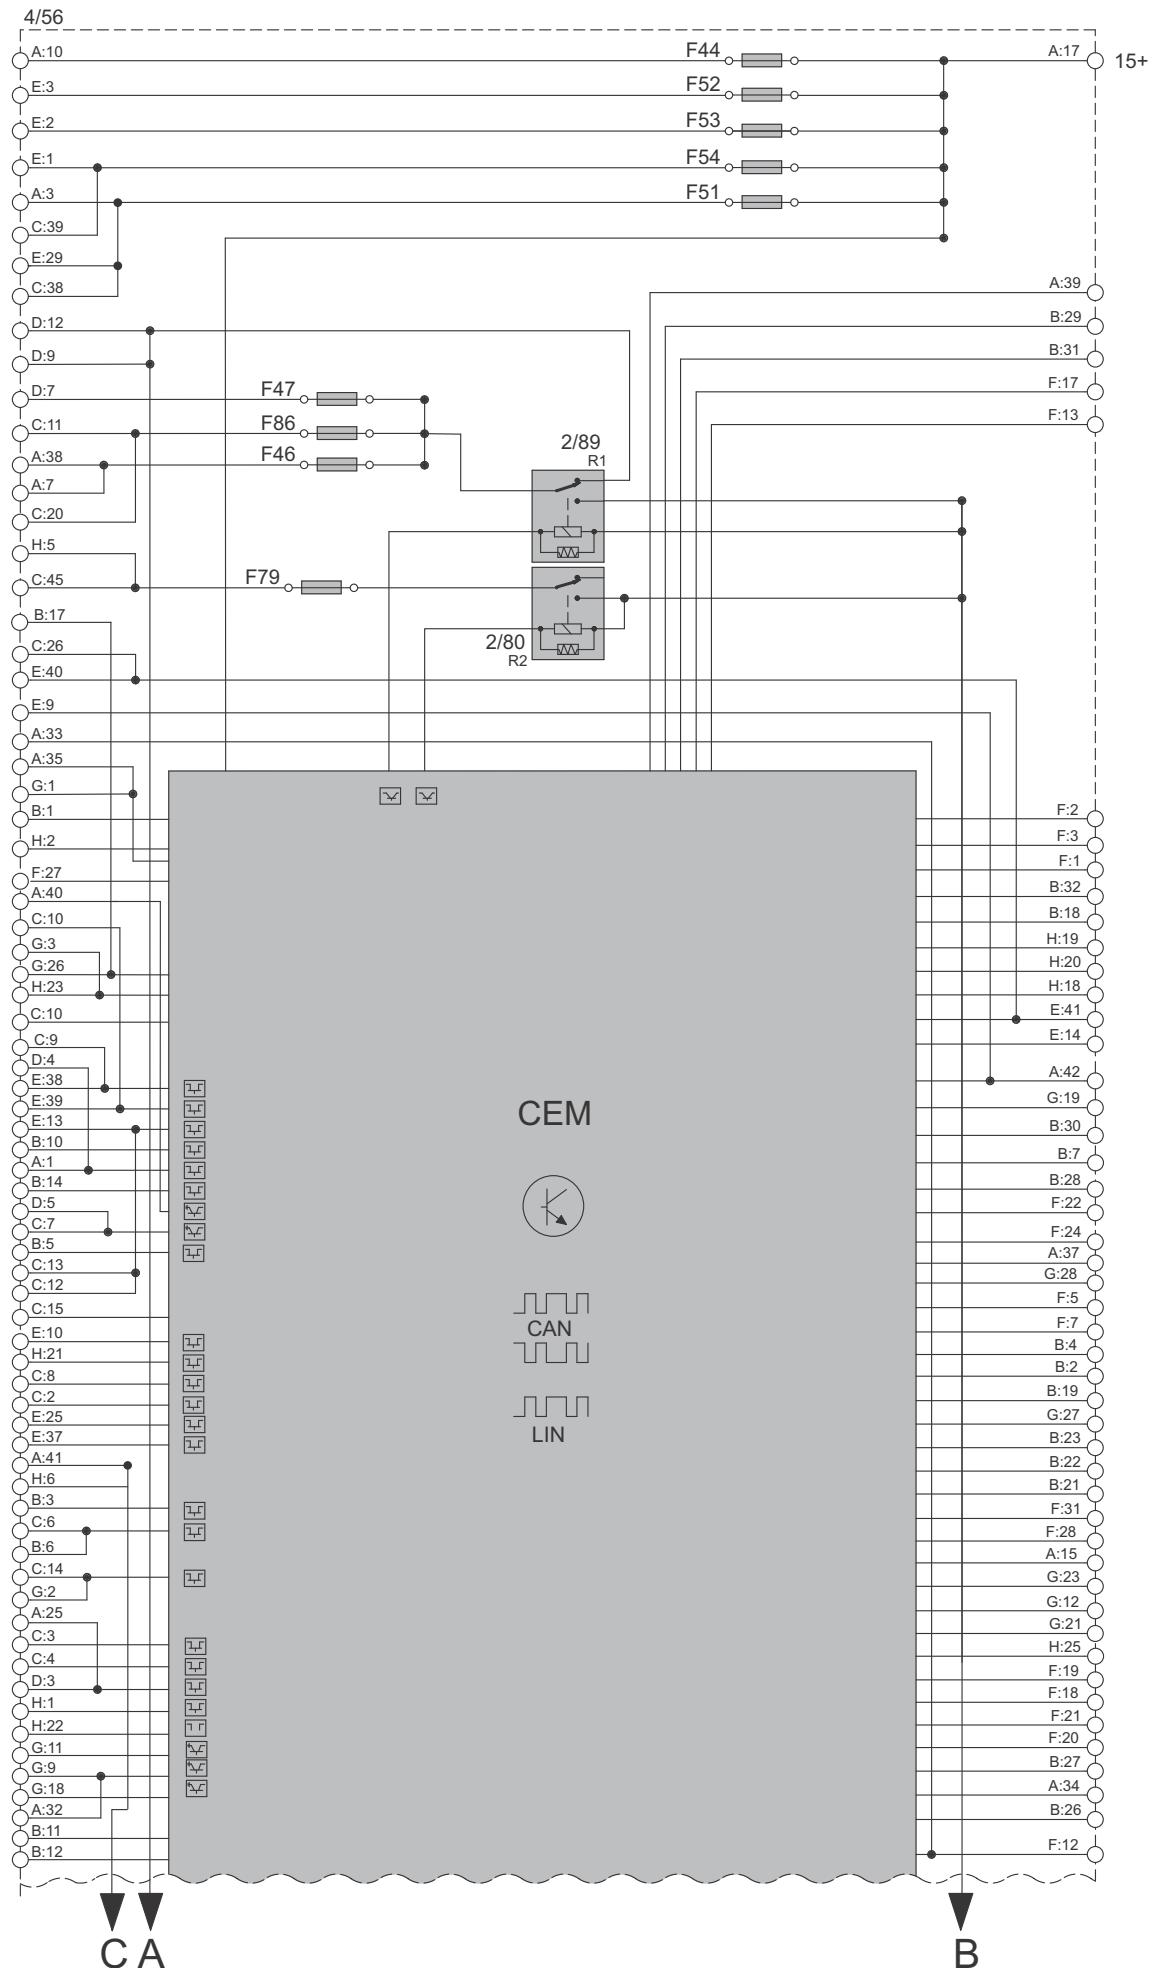

103010


Control modules

Central electronic module (CEM) 2:2

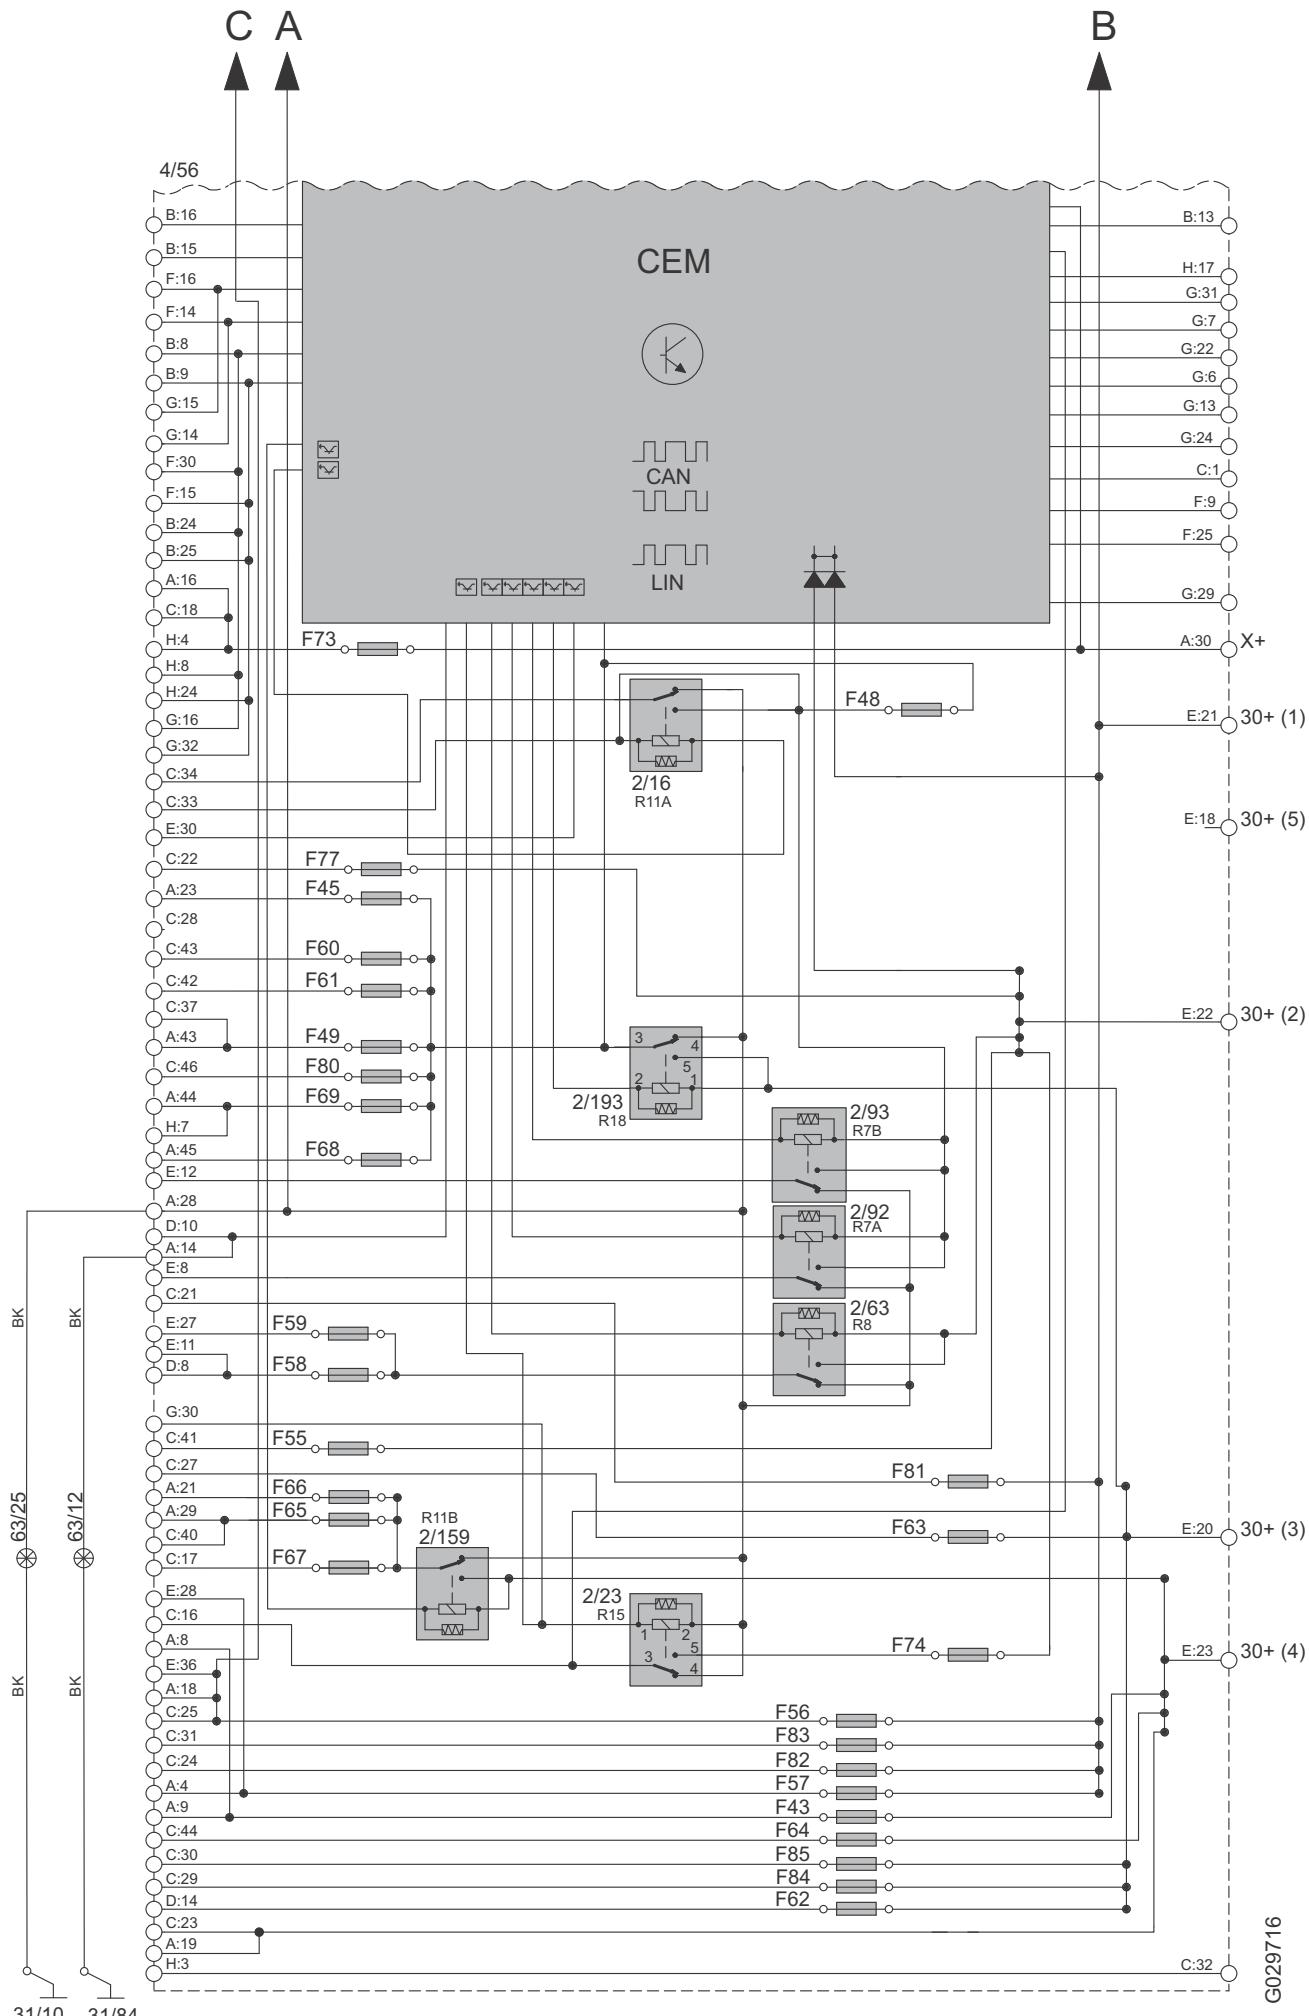

Control modules


Data communication, Low speed CAN 1:2

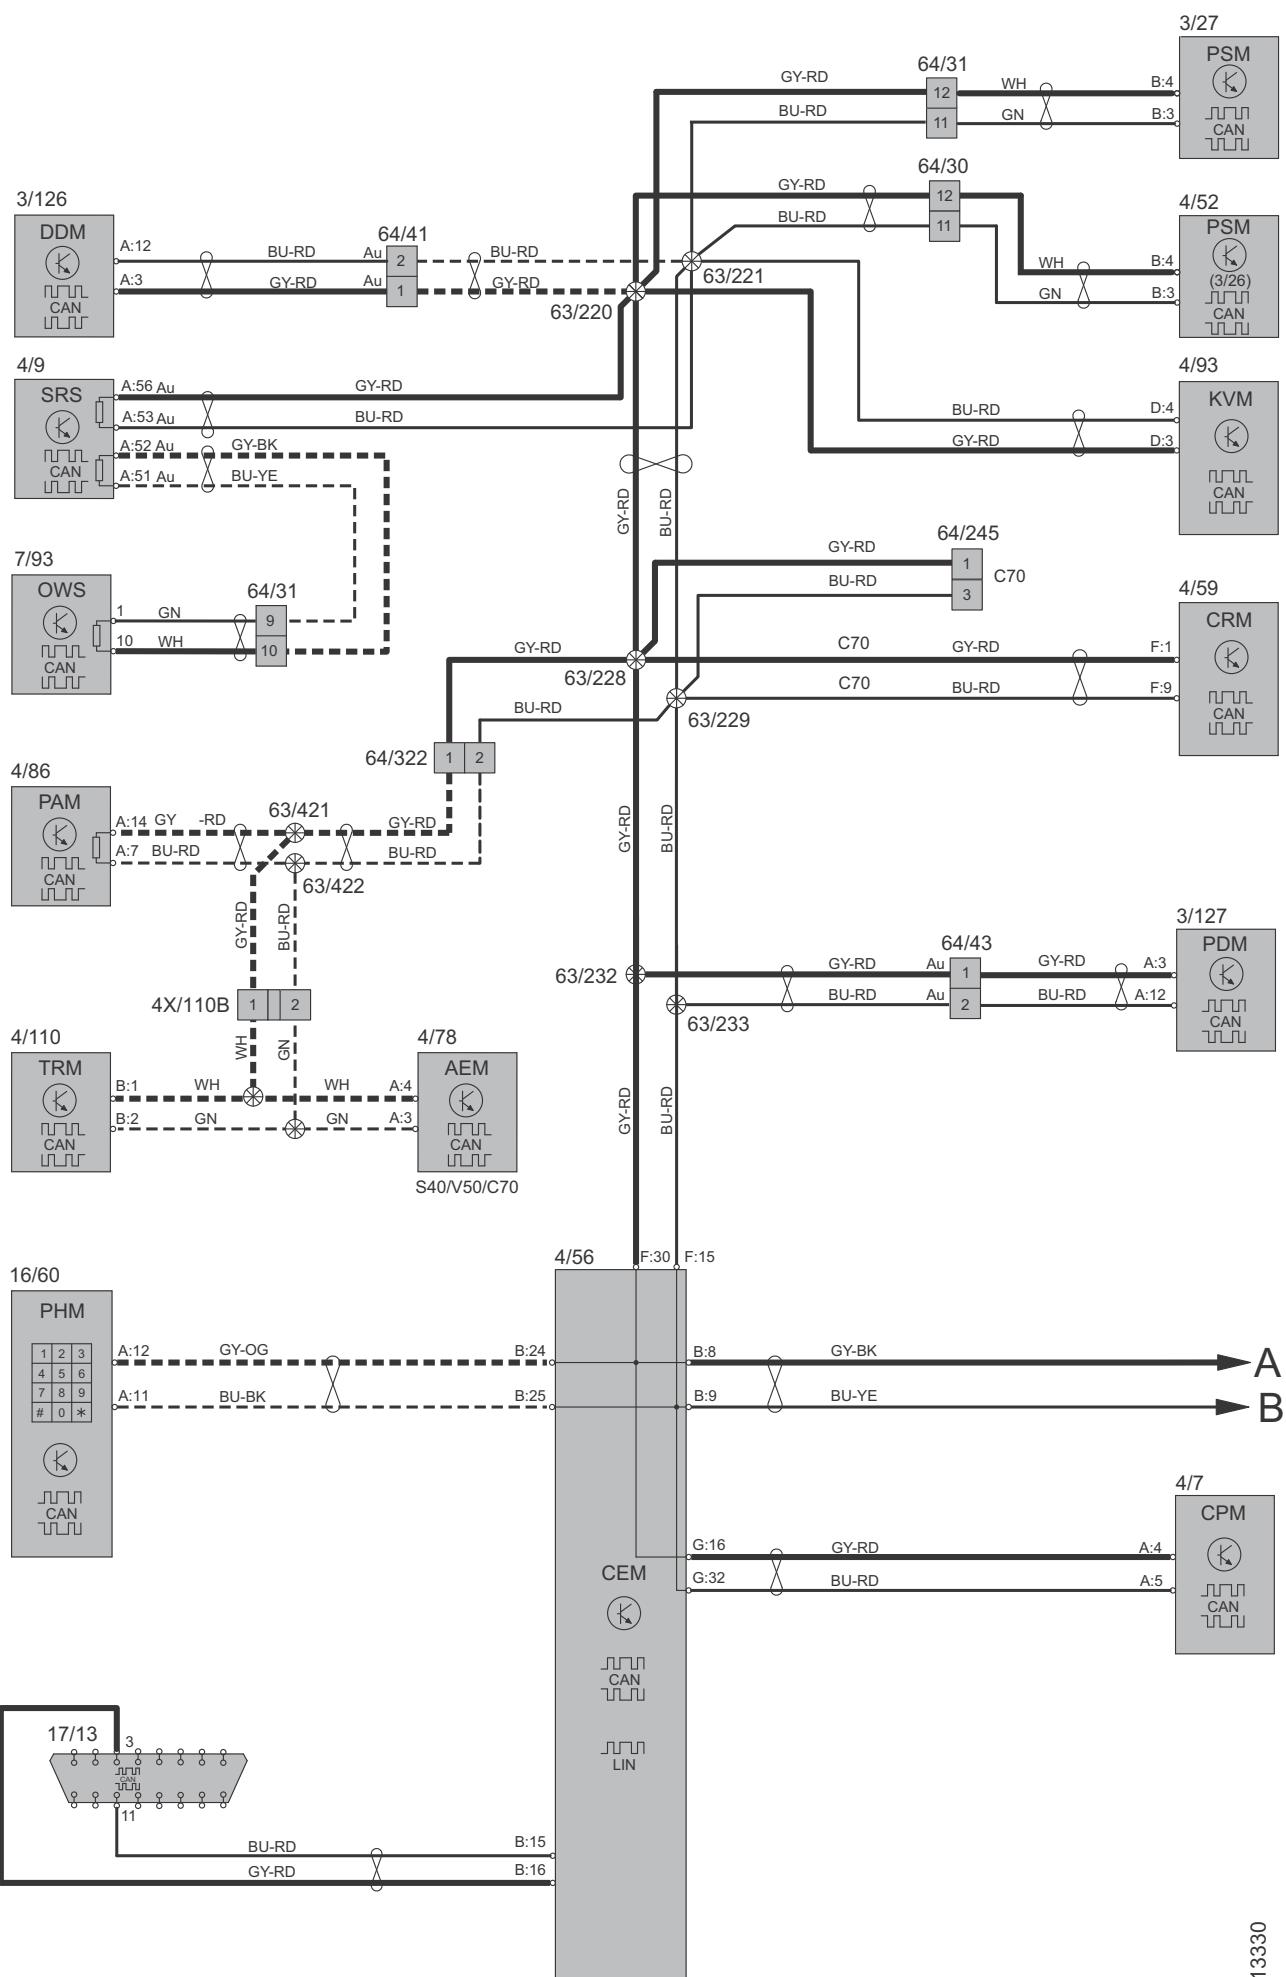

1013330

Control modules


Data communication, Low speed CAN 2:2

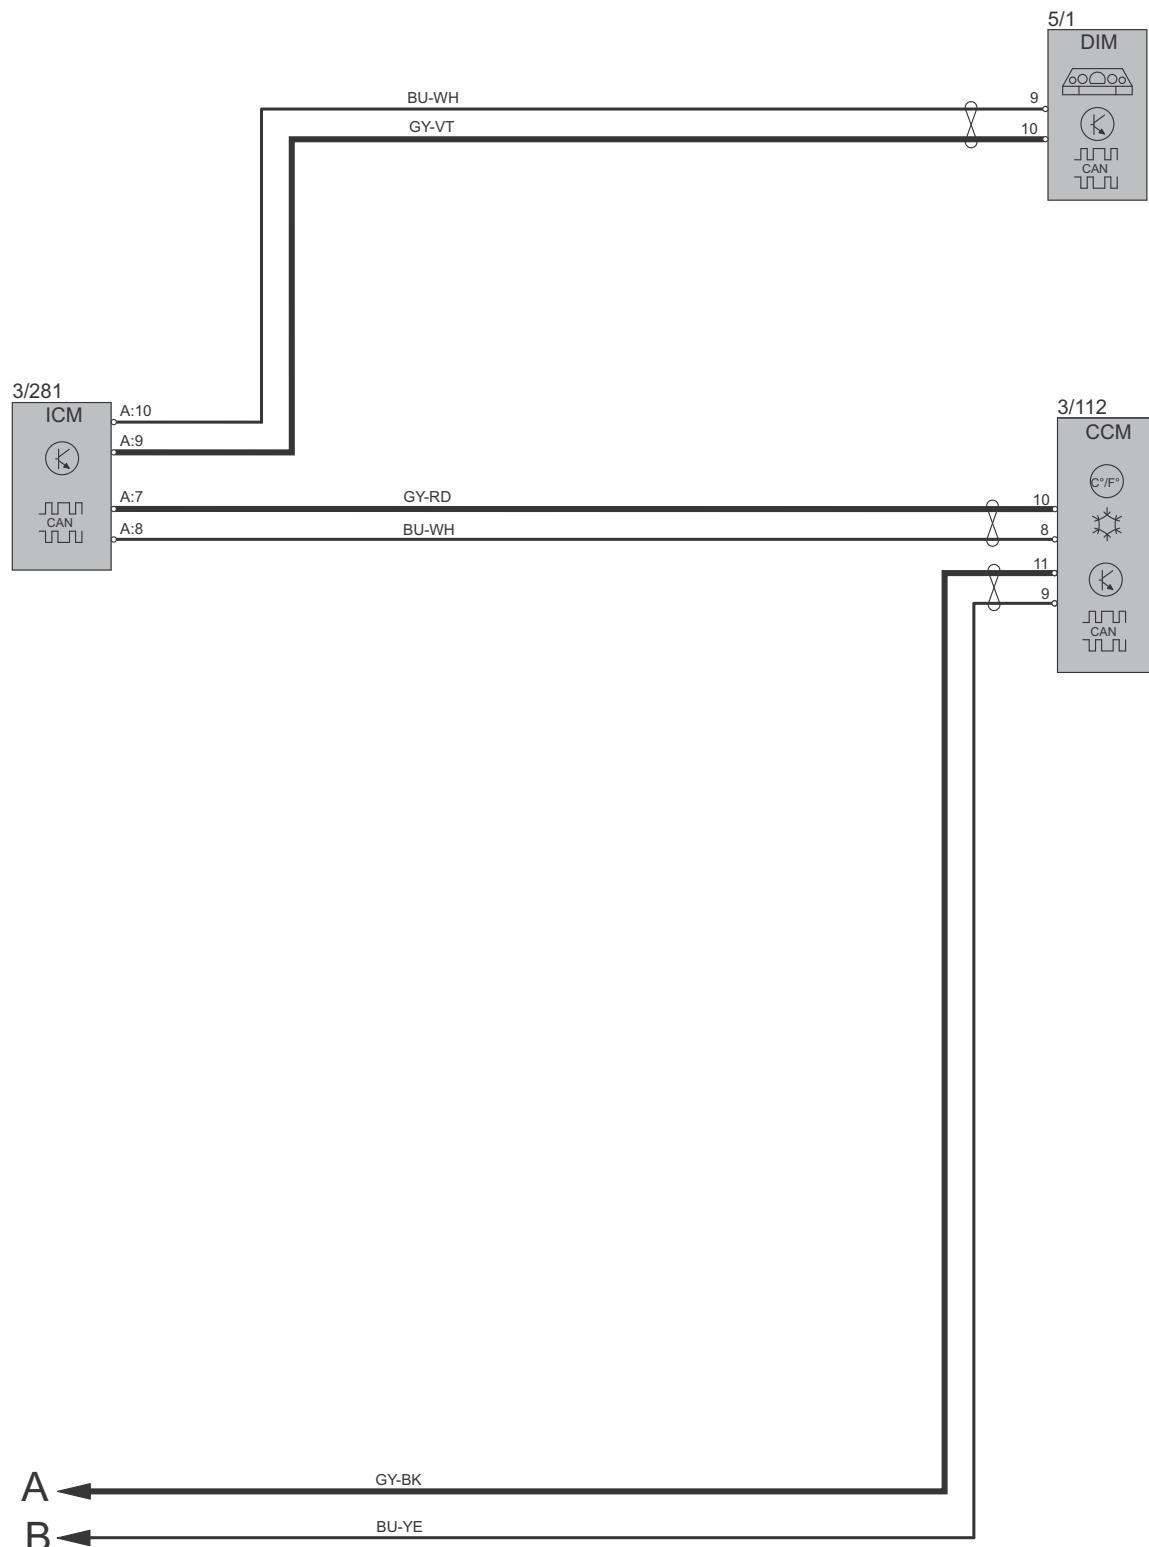

G029729

Control modules


Data communication high speed CAN

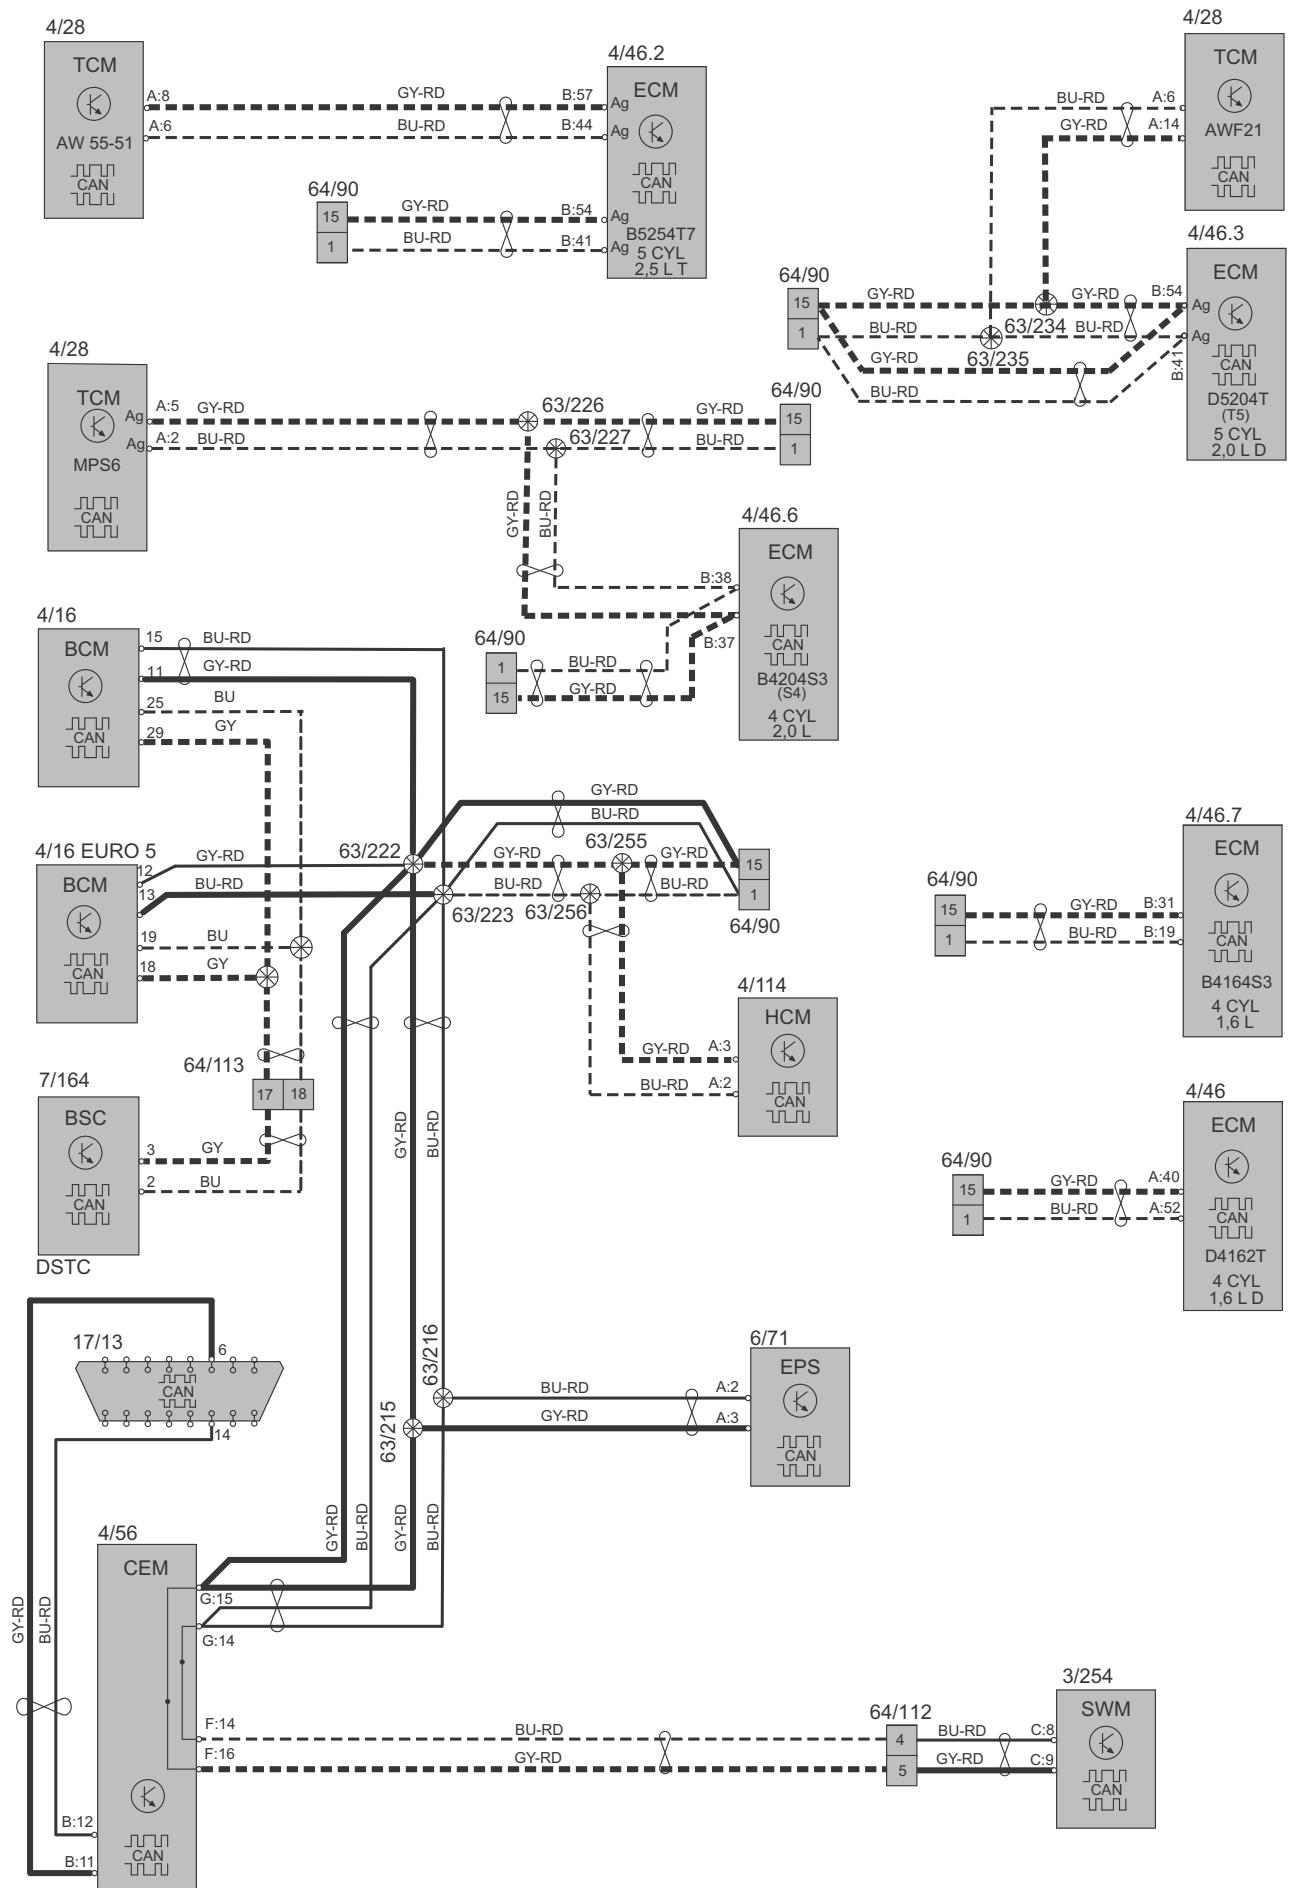

1013331


Control modules

Data communication MOST

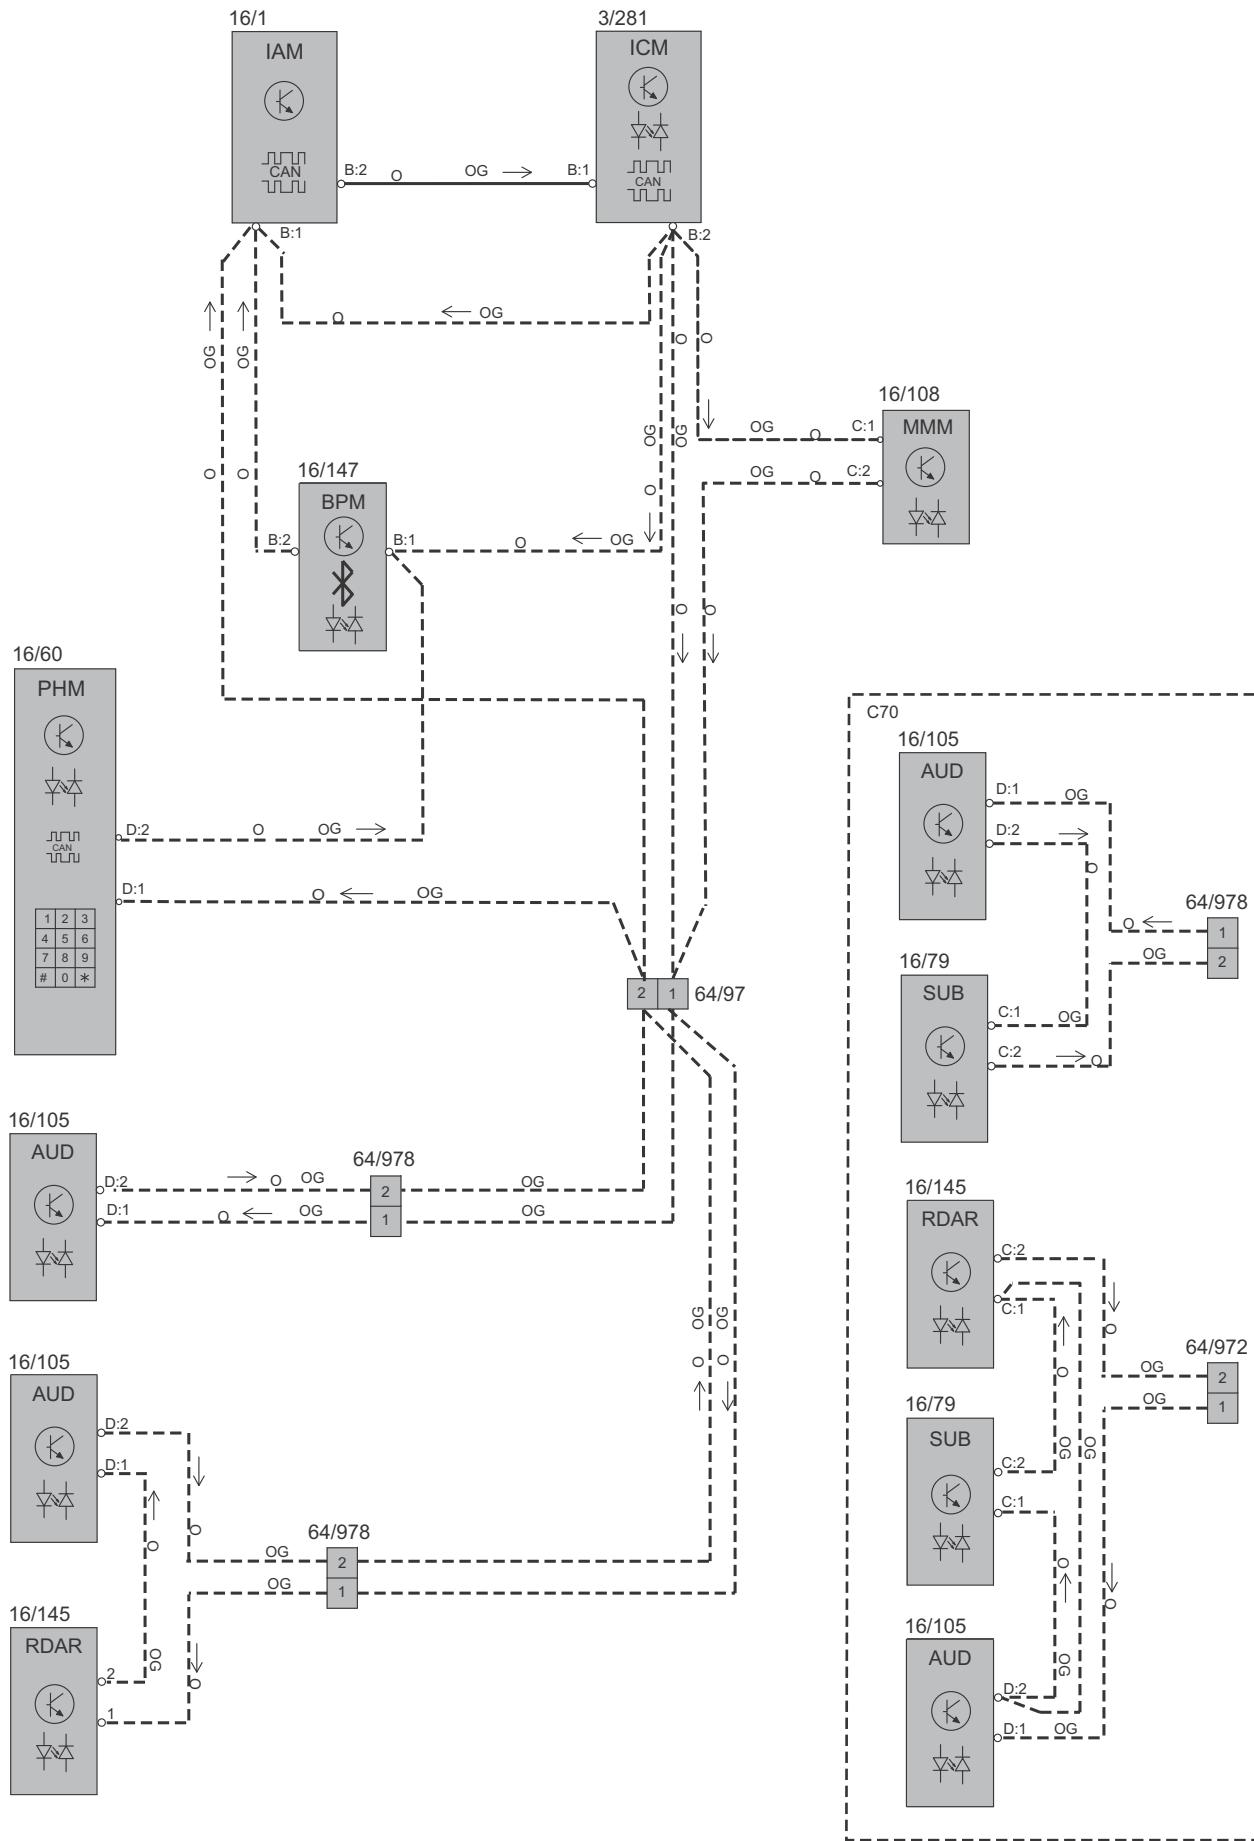


Control modules

Data communication, LIN 1:2

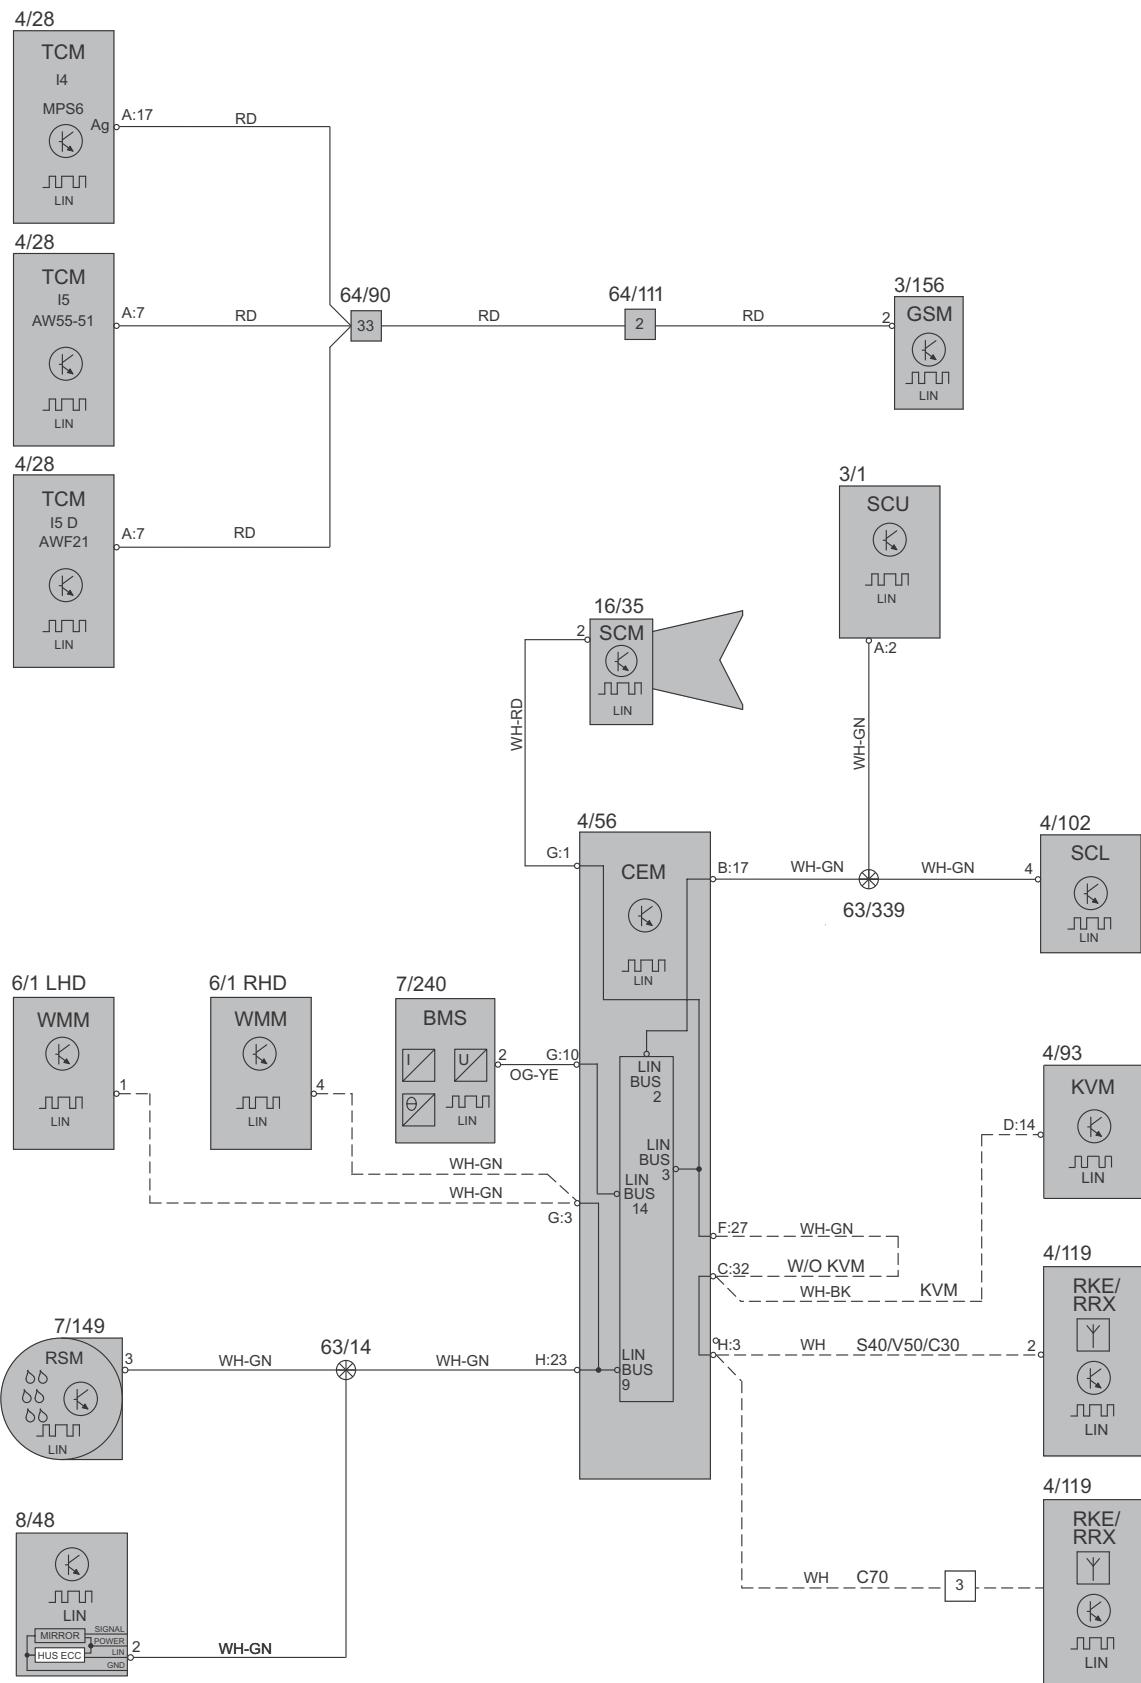


Control modules

Data communication, LIN 2:2

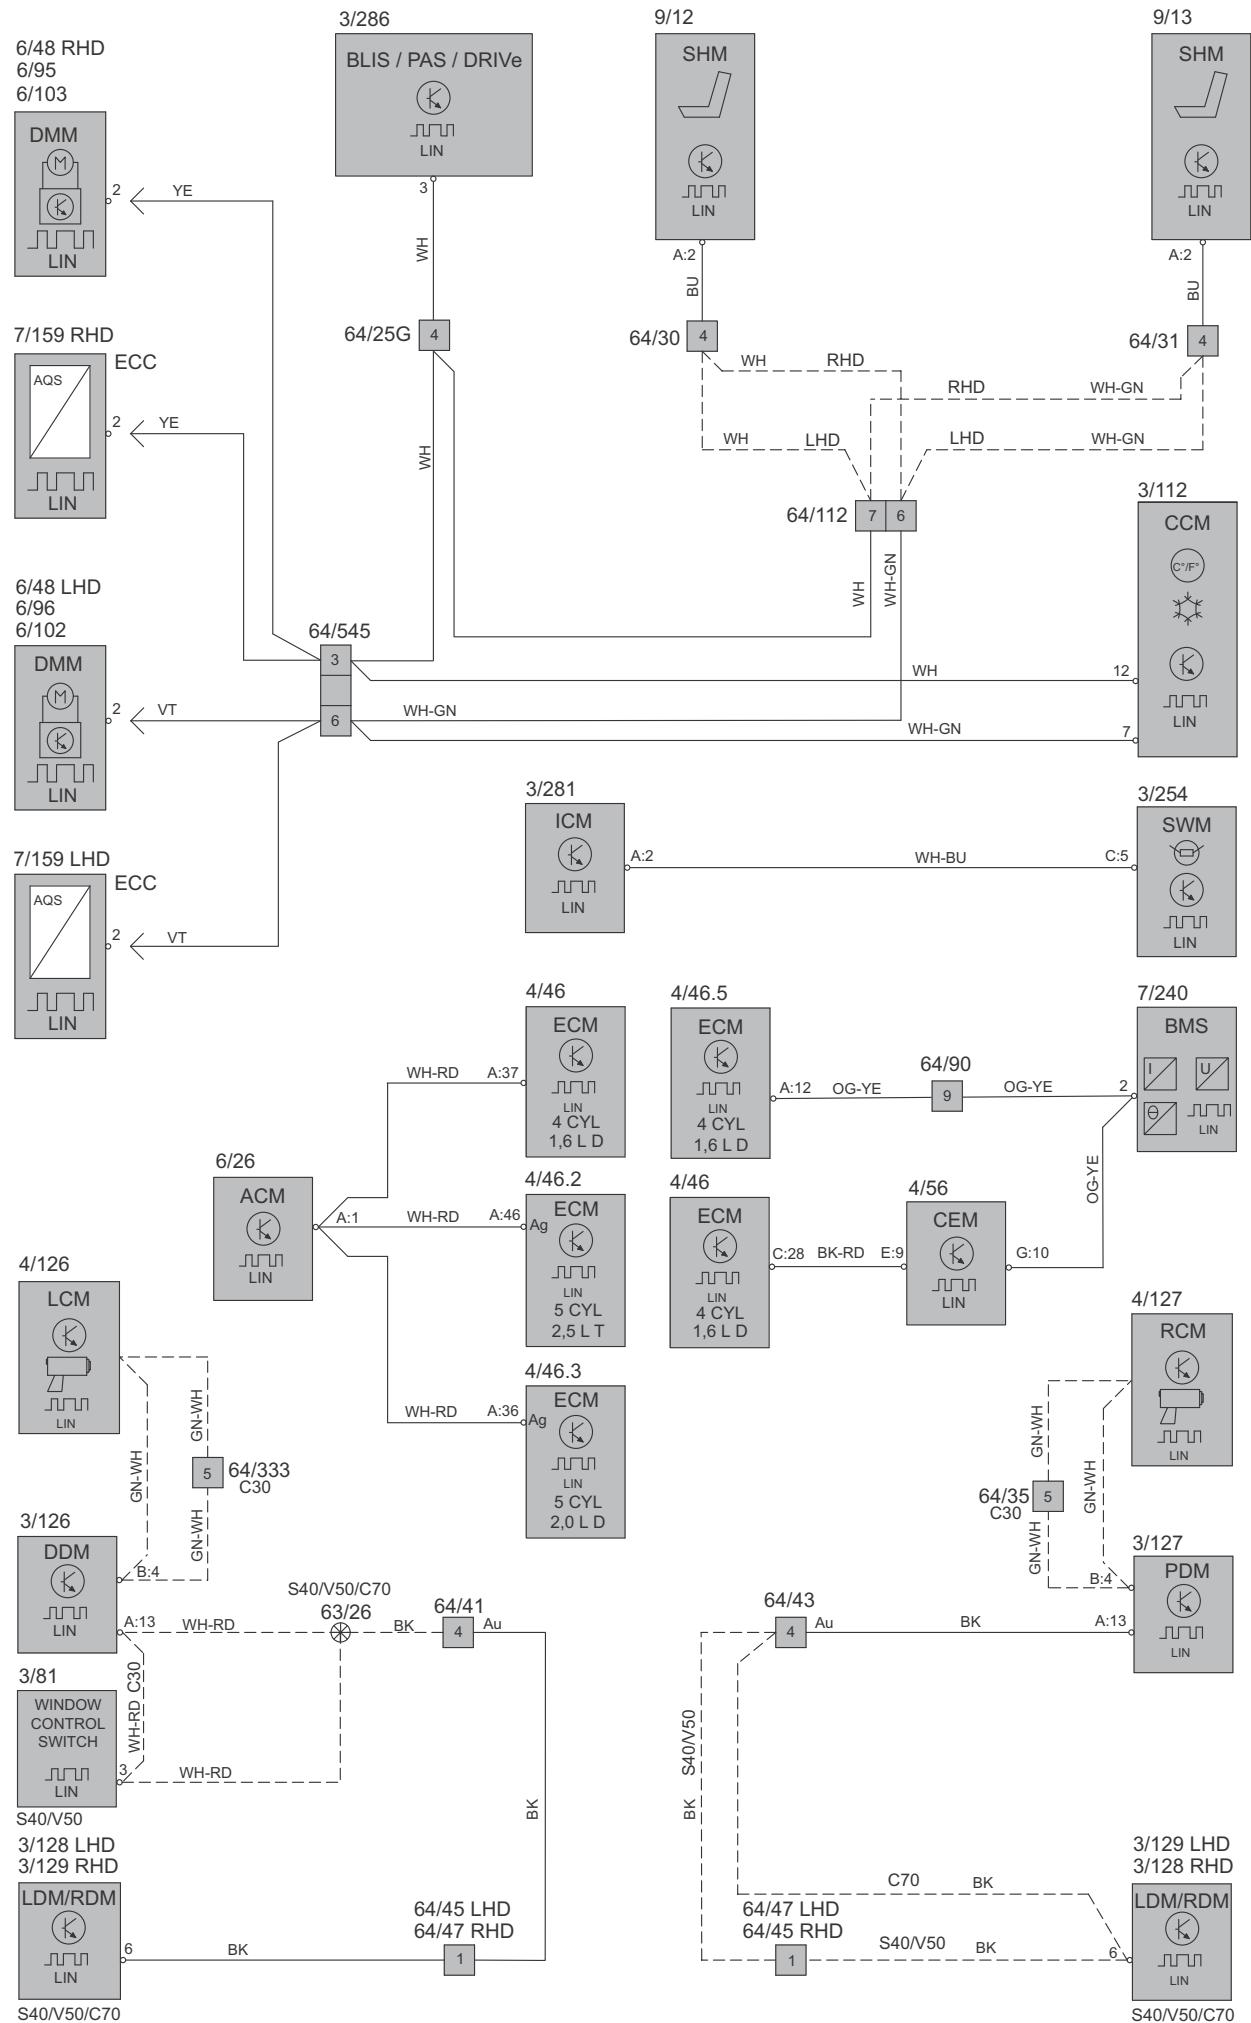


Control modules

Ignition switch (SCU)

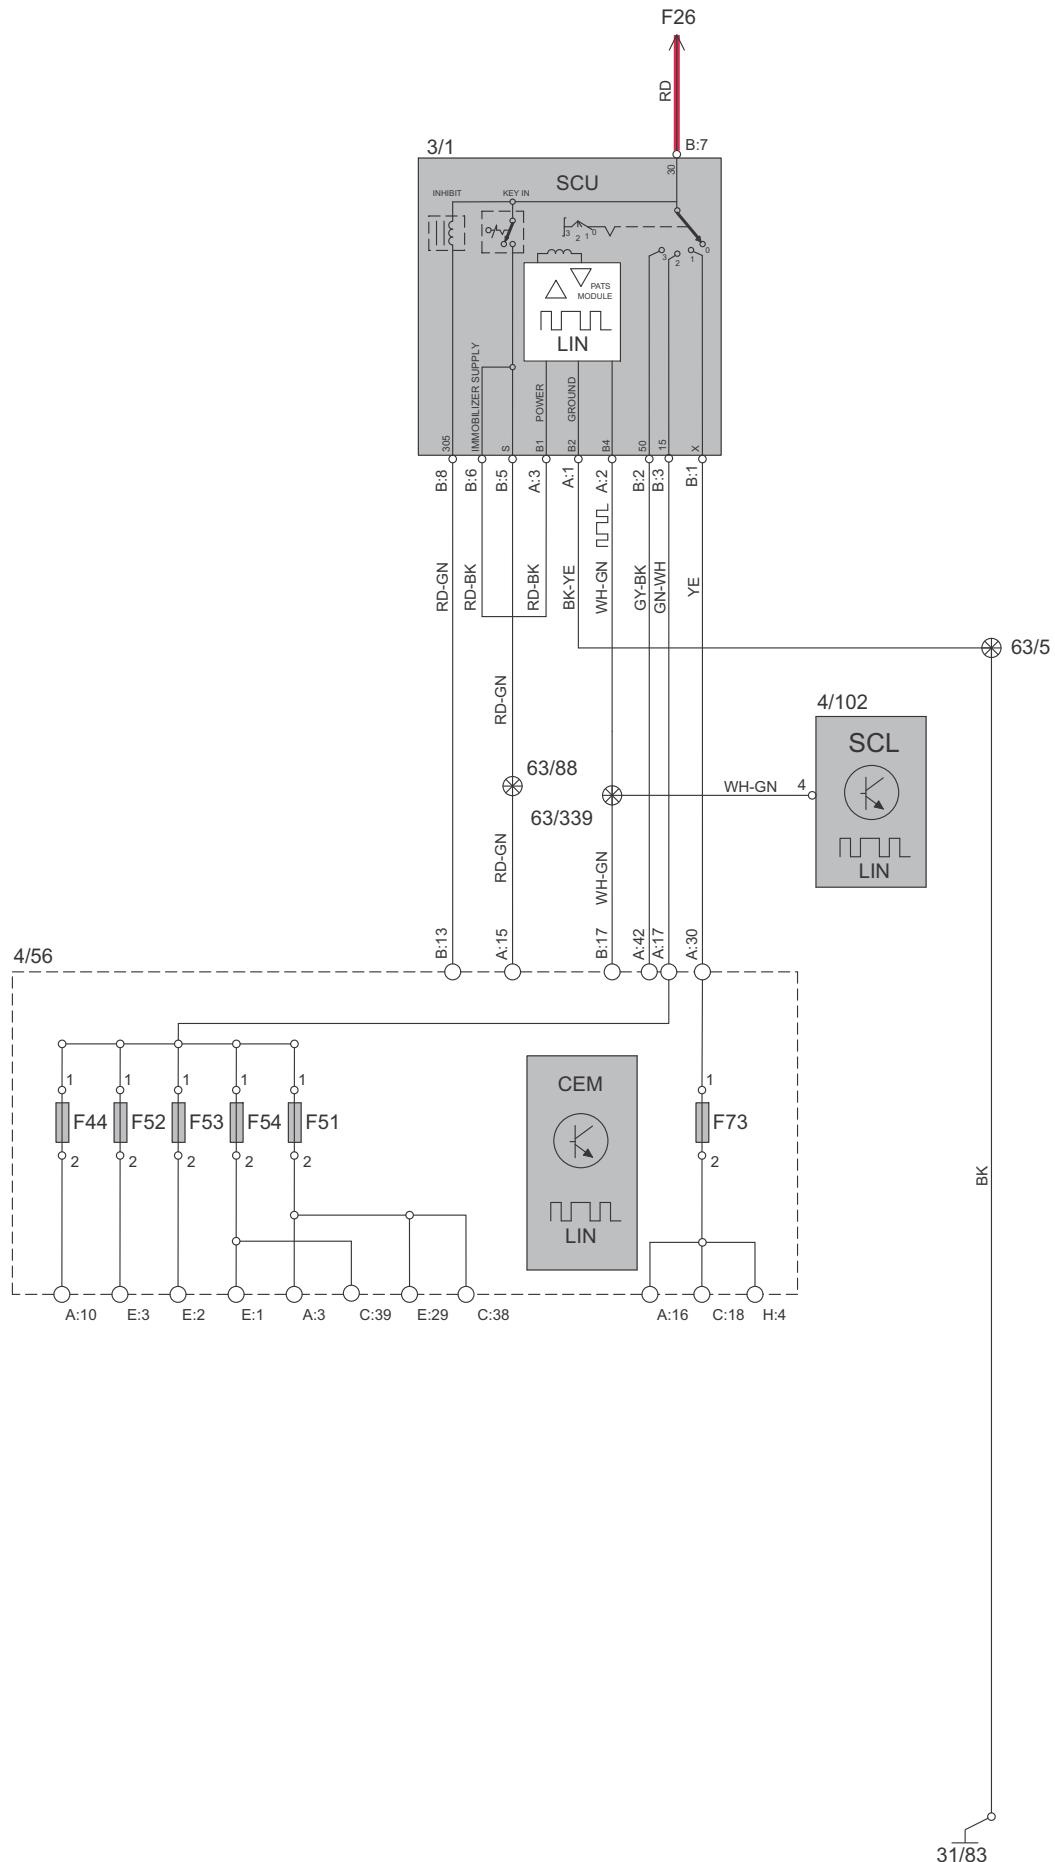

Control modules

Accessory electronic module (AEM)

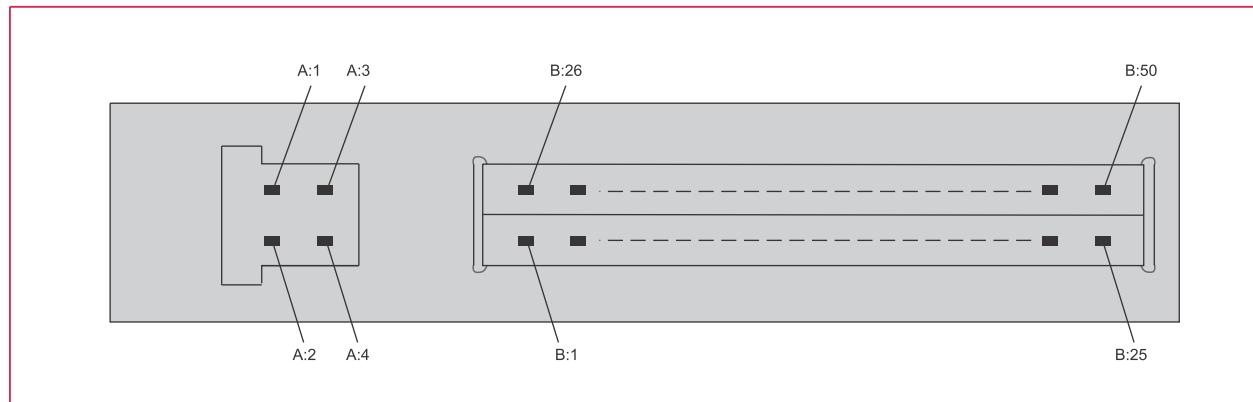


G029740

Pos	Function	Type
A:1	Electrical distribution	Ground
A:2	Electrical distribution	Feed
A:3	CAN communication	Input/output signals
A:4	CAN communication	Input/output signals
B:1	Remote start	Feed
B:2	Remote start	Ground
B:3	Remote start	Input signal
B:4	Electric engine heater	Ground
B:5	Electric engine heater	Steering, alternating current feed
B:11	Handsfree, mute of audio	Input signal
B:15	Alarm signal	Output signal
B:16	Alarm signal	Output signal
B:33	Alarm signal	Output signal
B:34	Alarm signal	Output signal

Group 26 Cooling system


Cooling fan

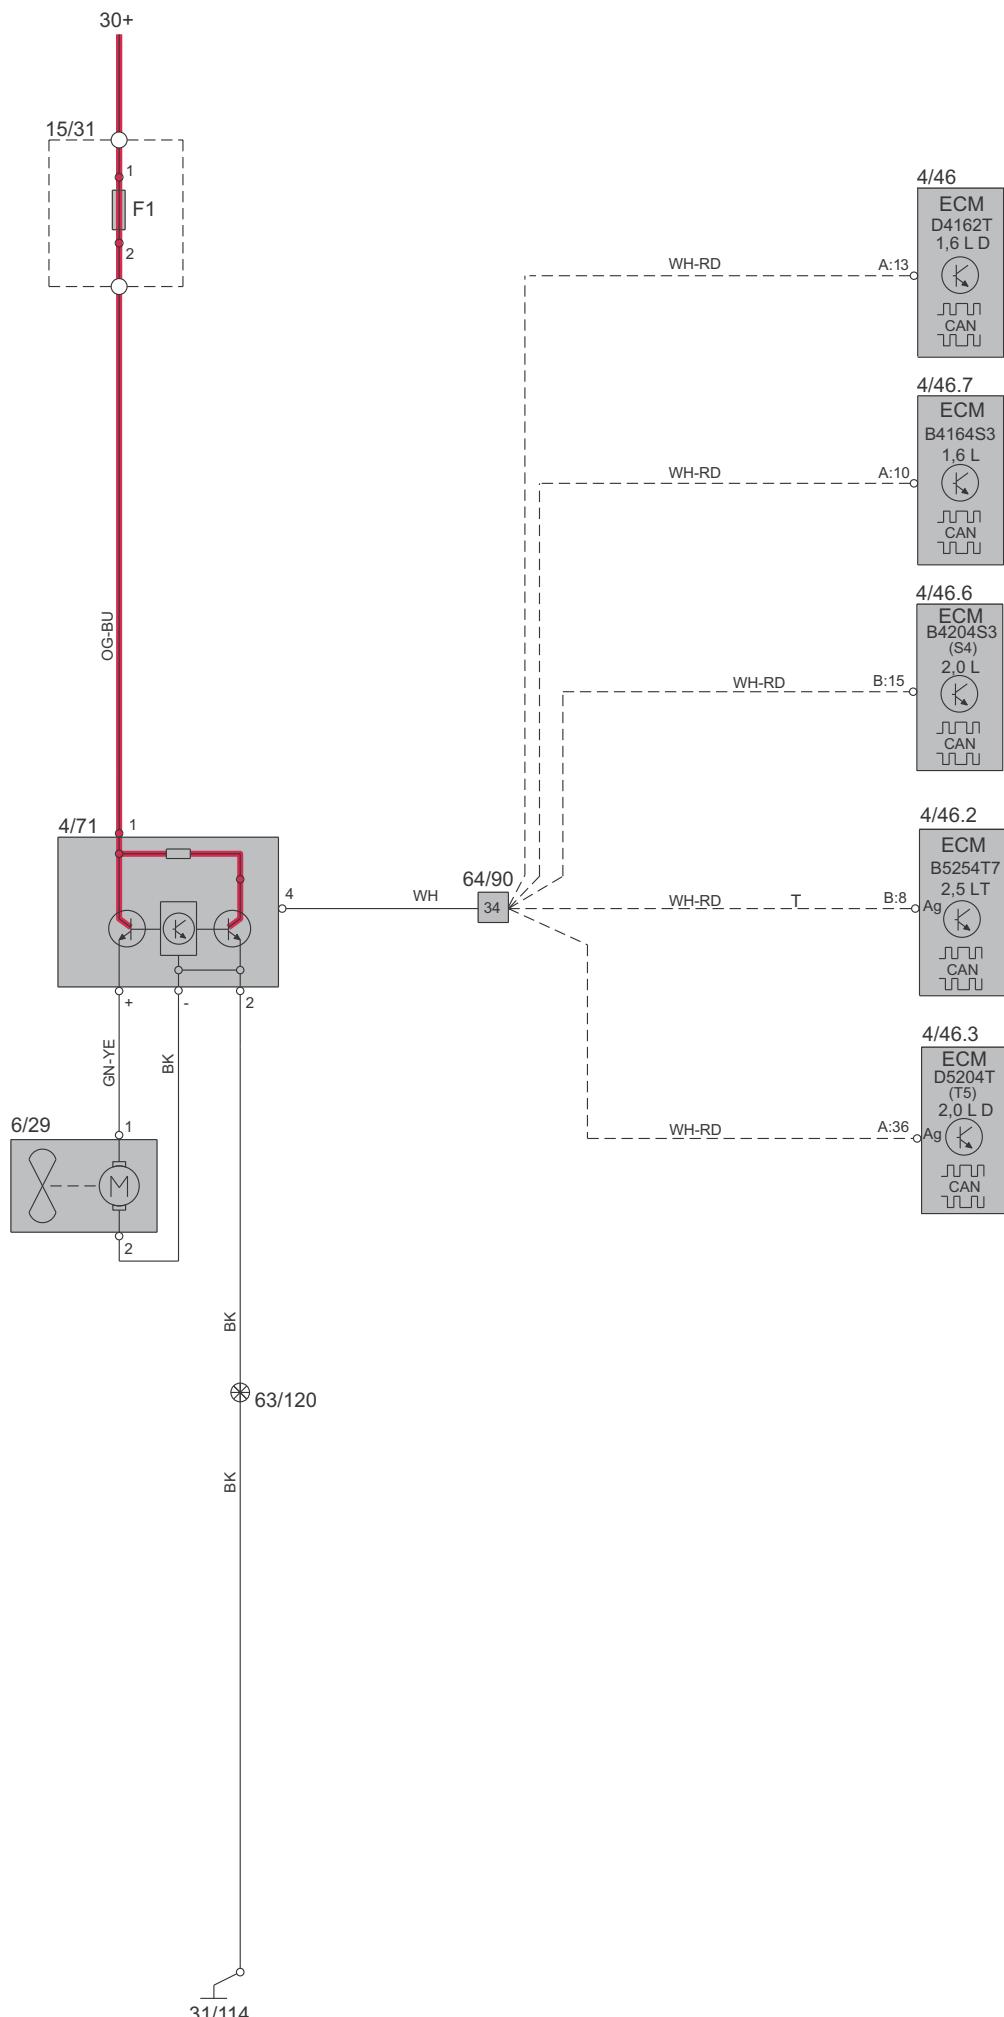

103304

Group 27 Engine controls


Cruise control 4-Cyl.

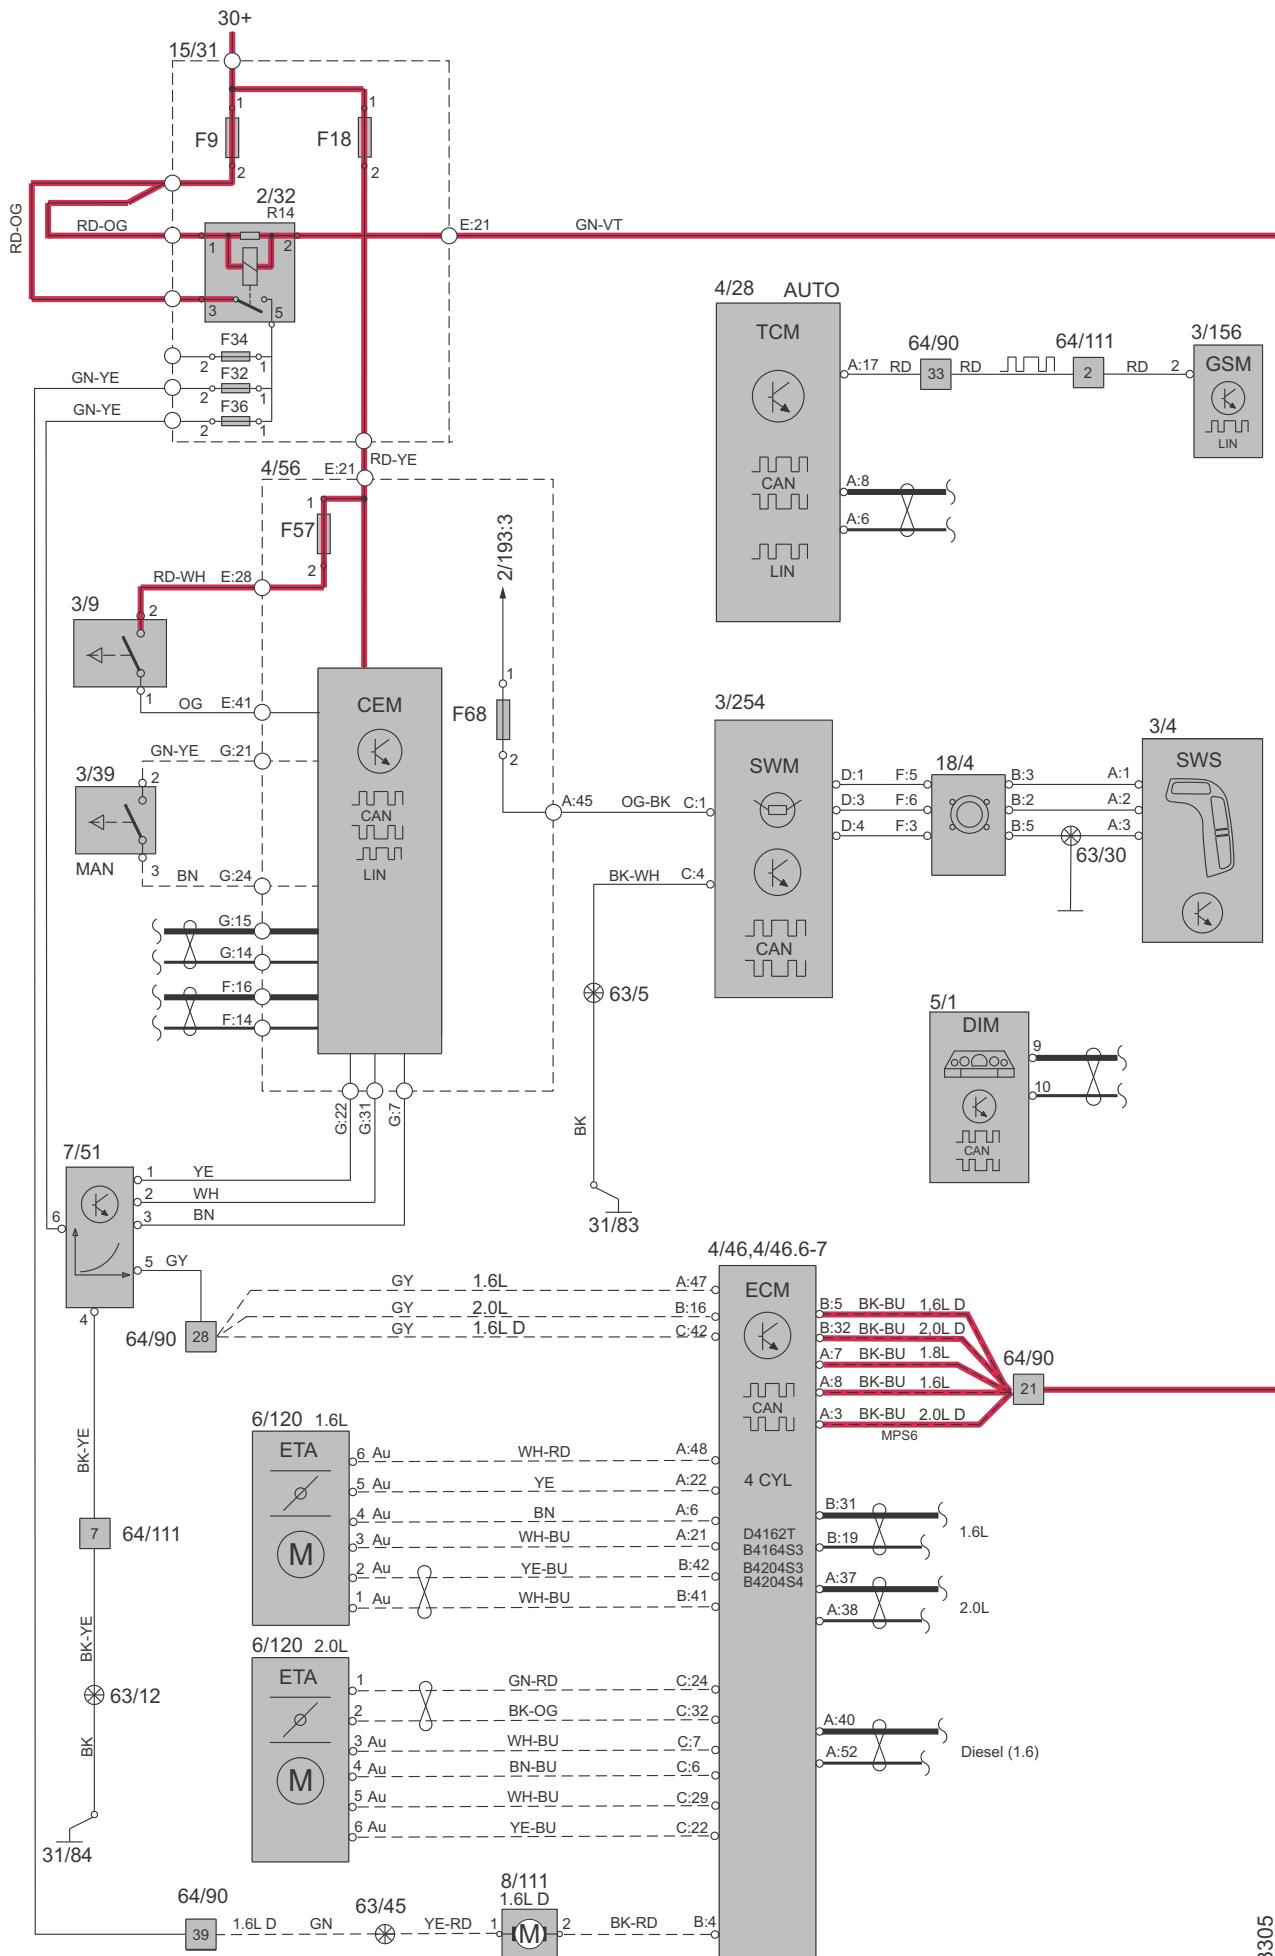

103305


Group 27 Engine controls

Cruise control 5-Cyl.

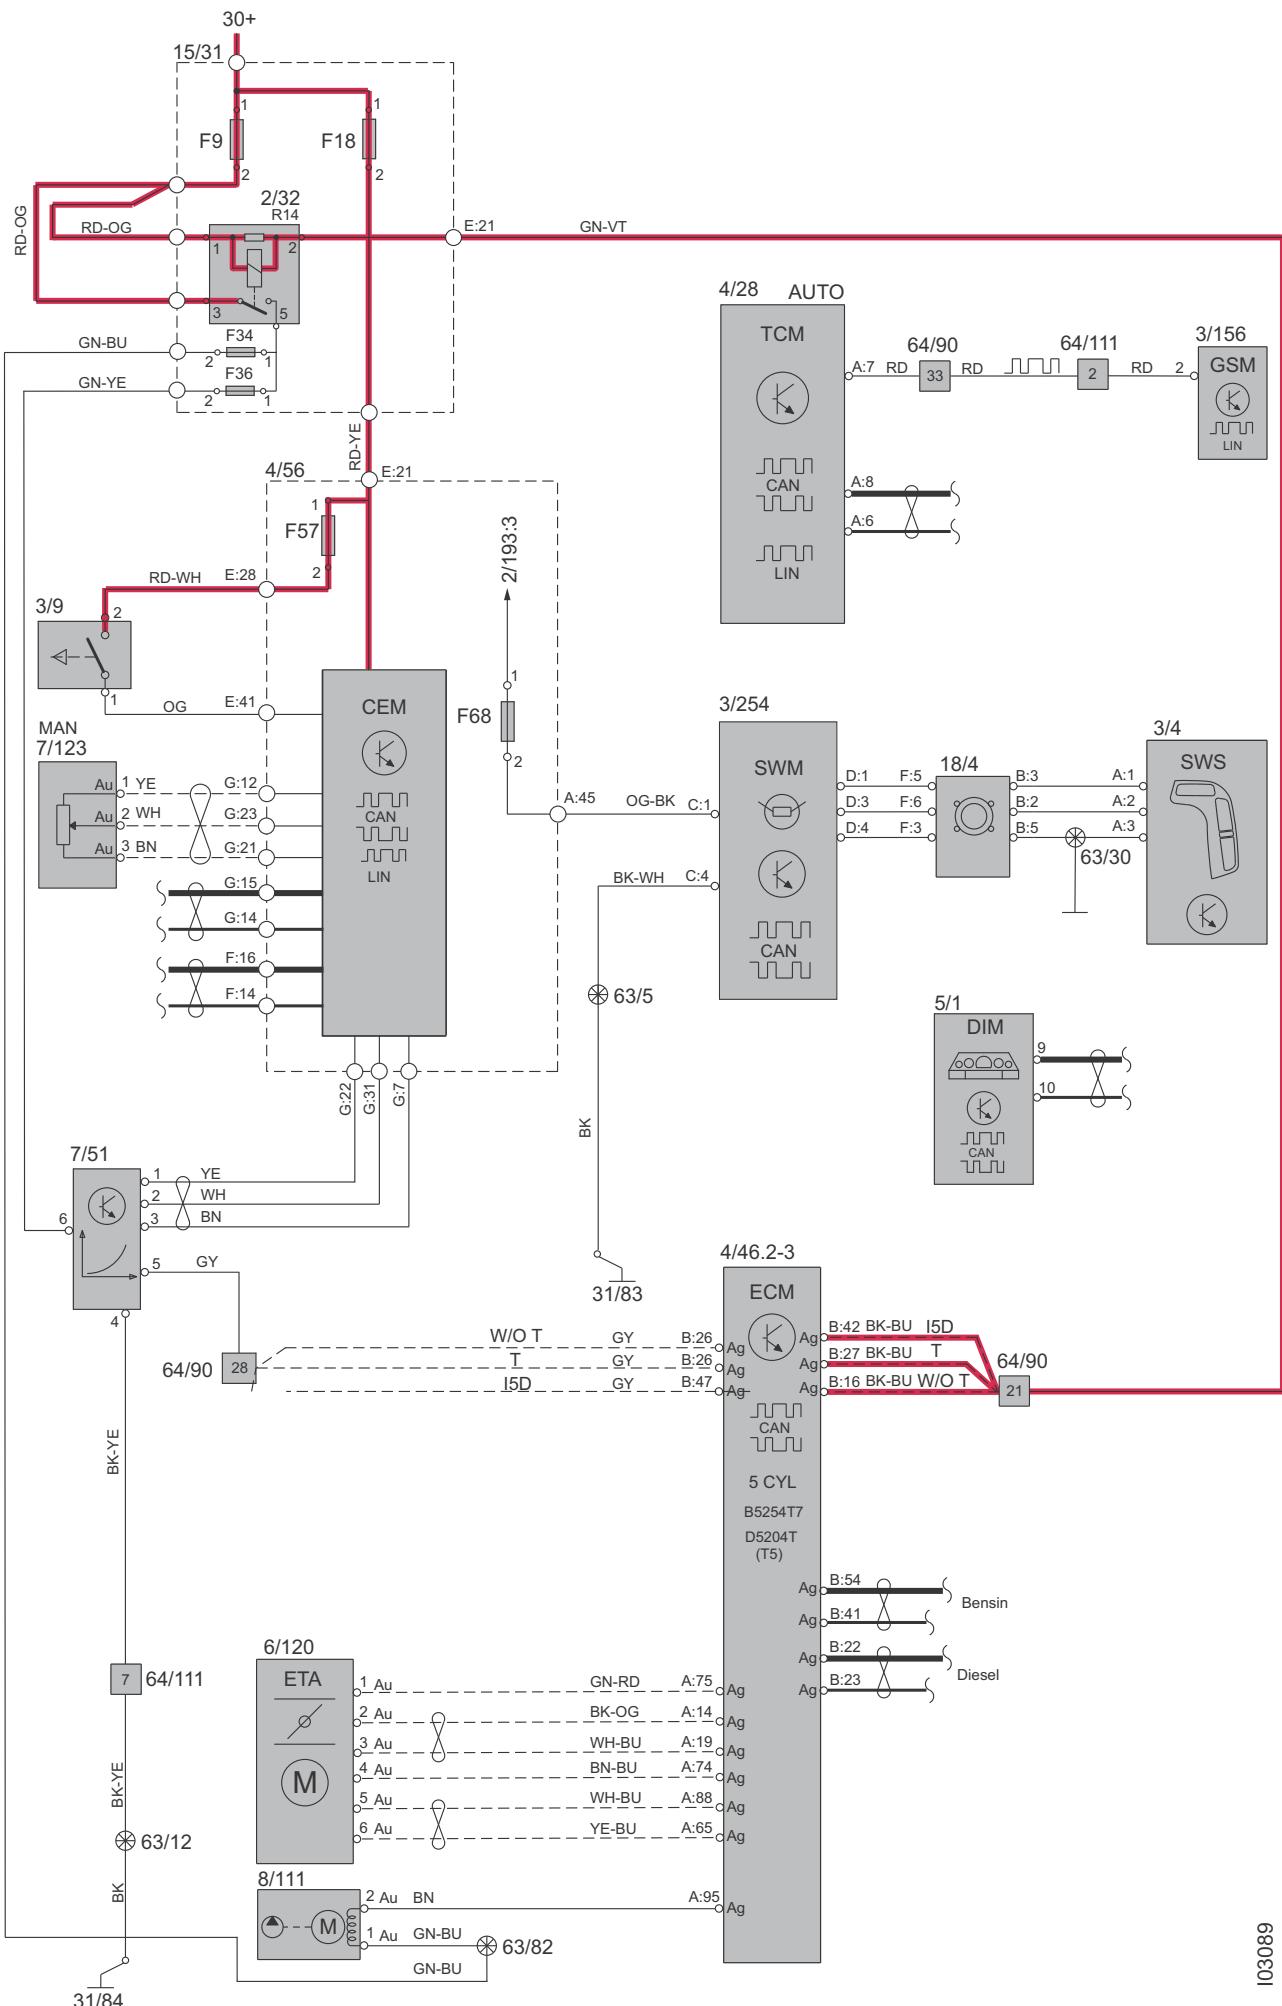


Group 27 Engine controls

Start/stop function

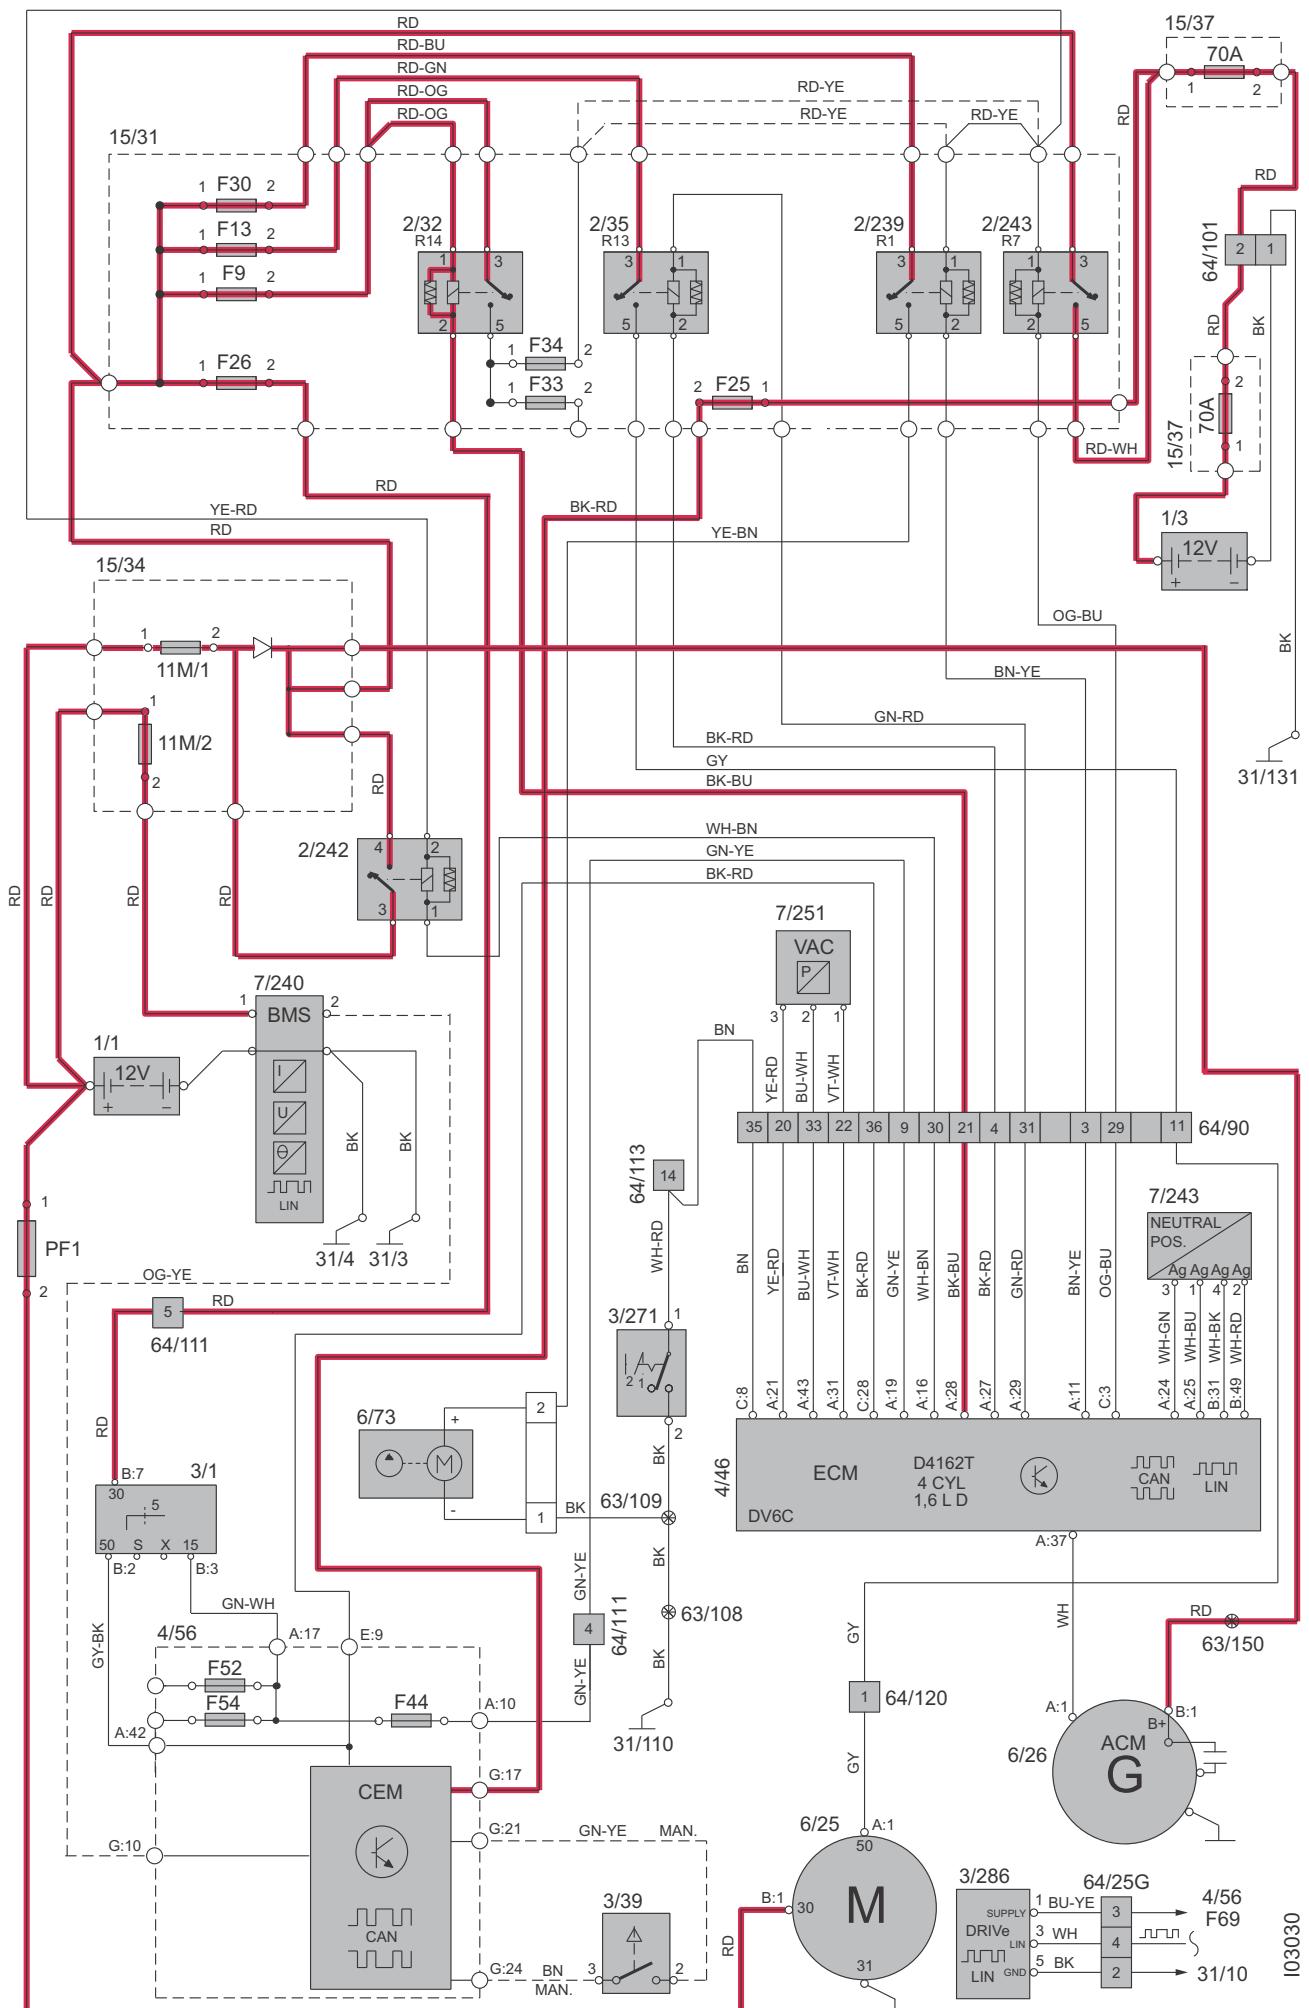


Group 28 Ignition system/control system

Engine management system, 4-Cyl. 1.6l 1:2

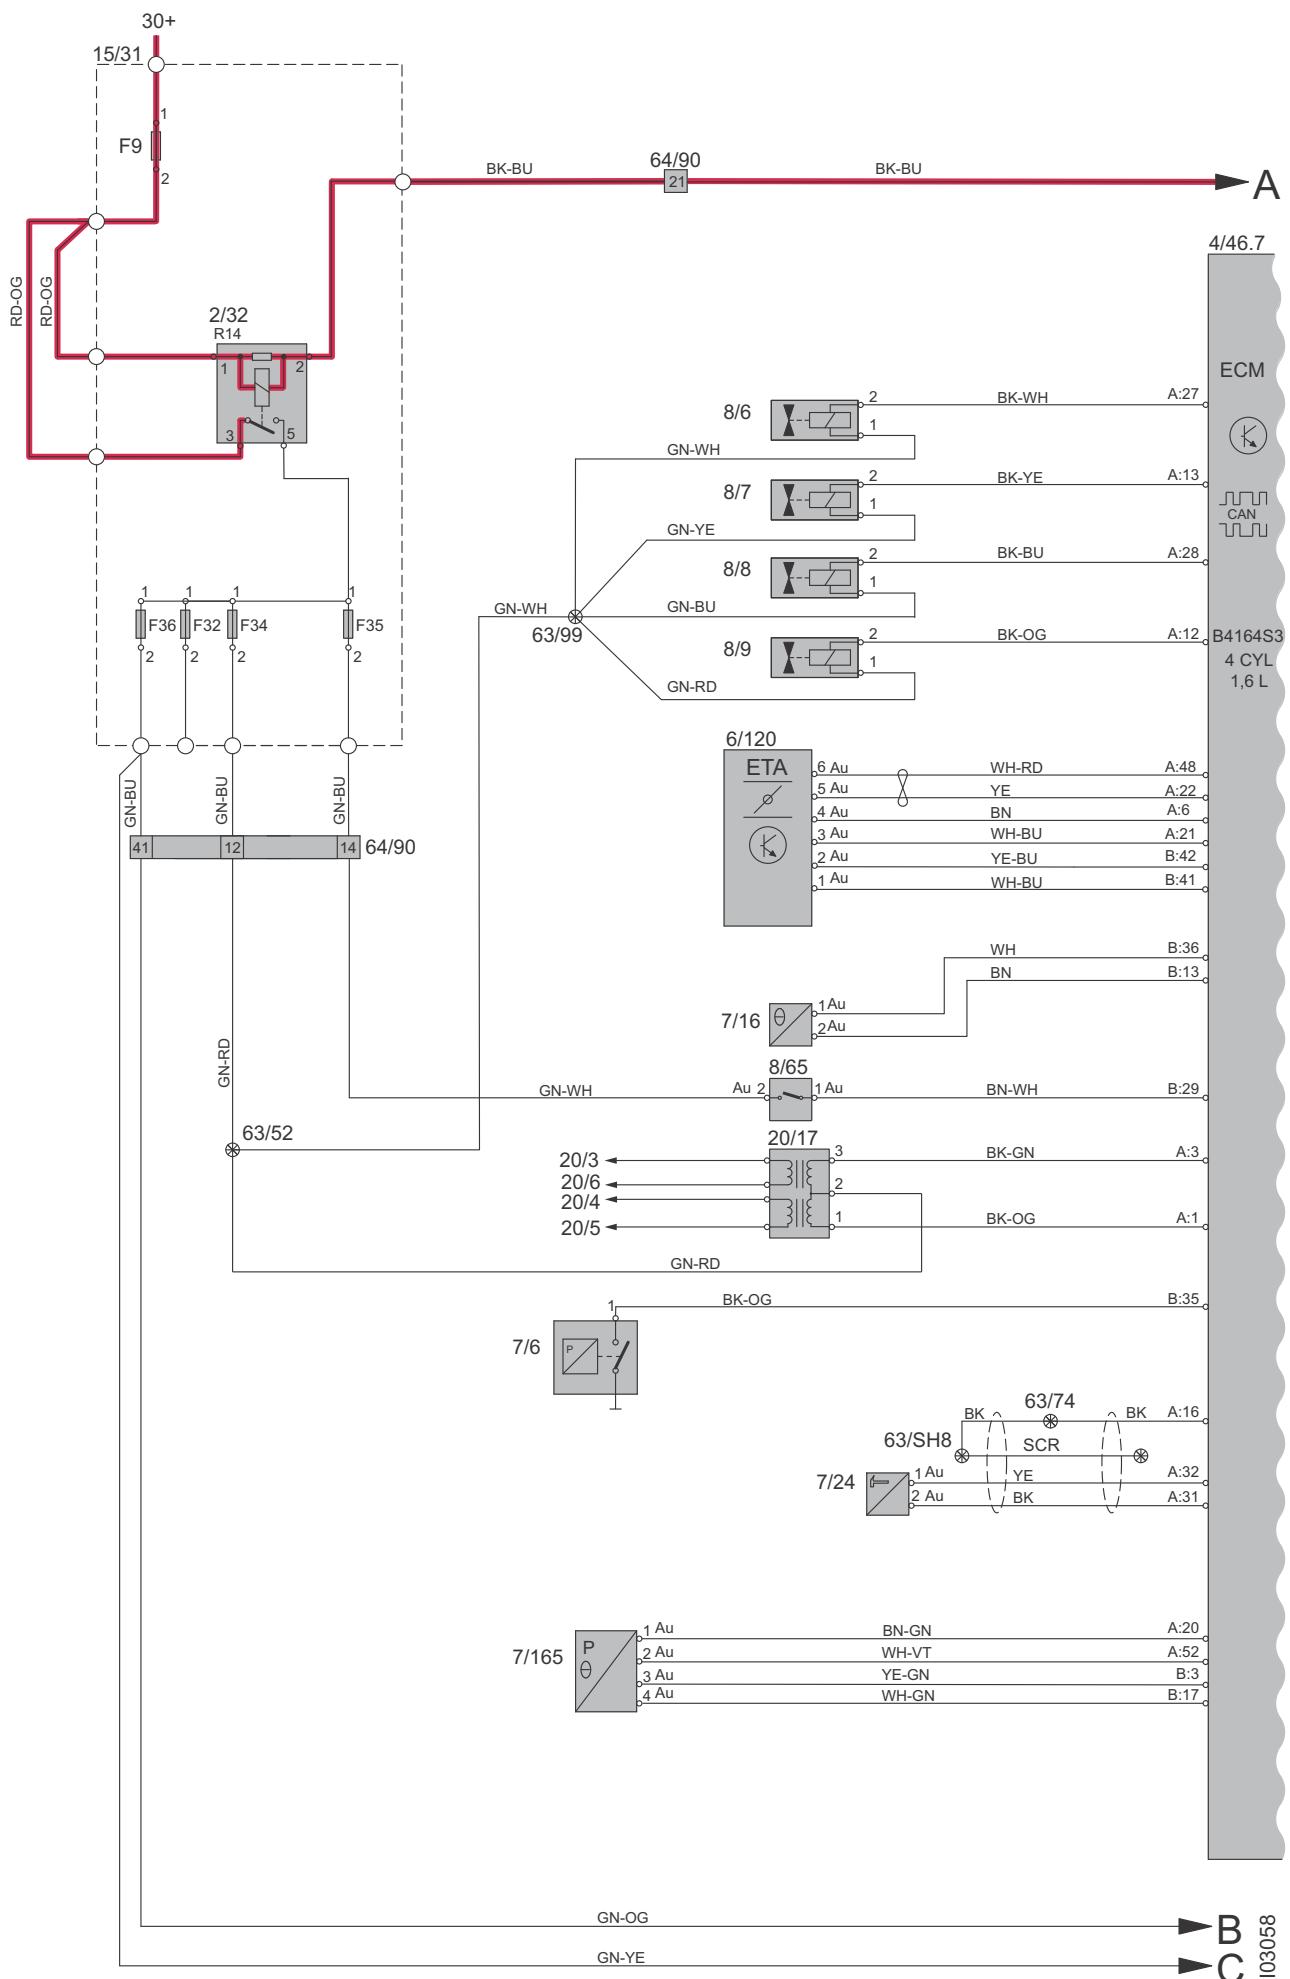


Group 28 Ignition system/control system

Engine management system, 4-Cyl. 1.6l 2:2

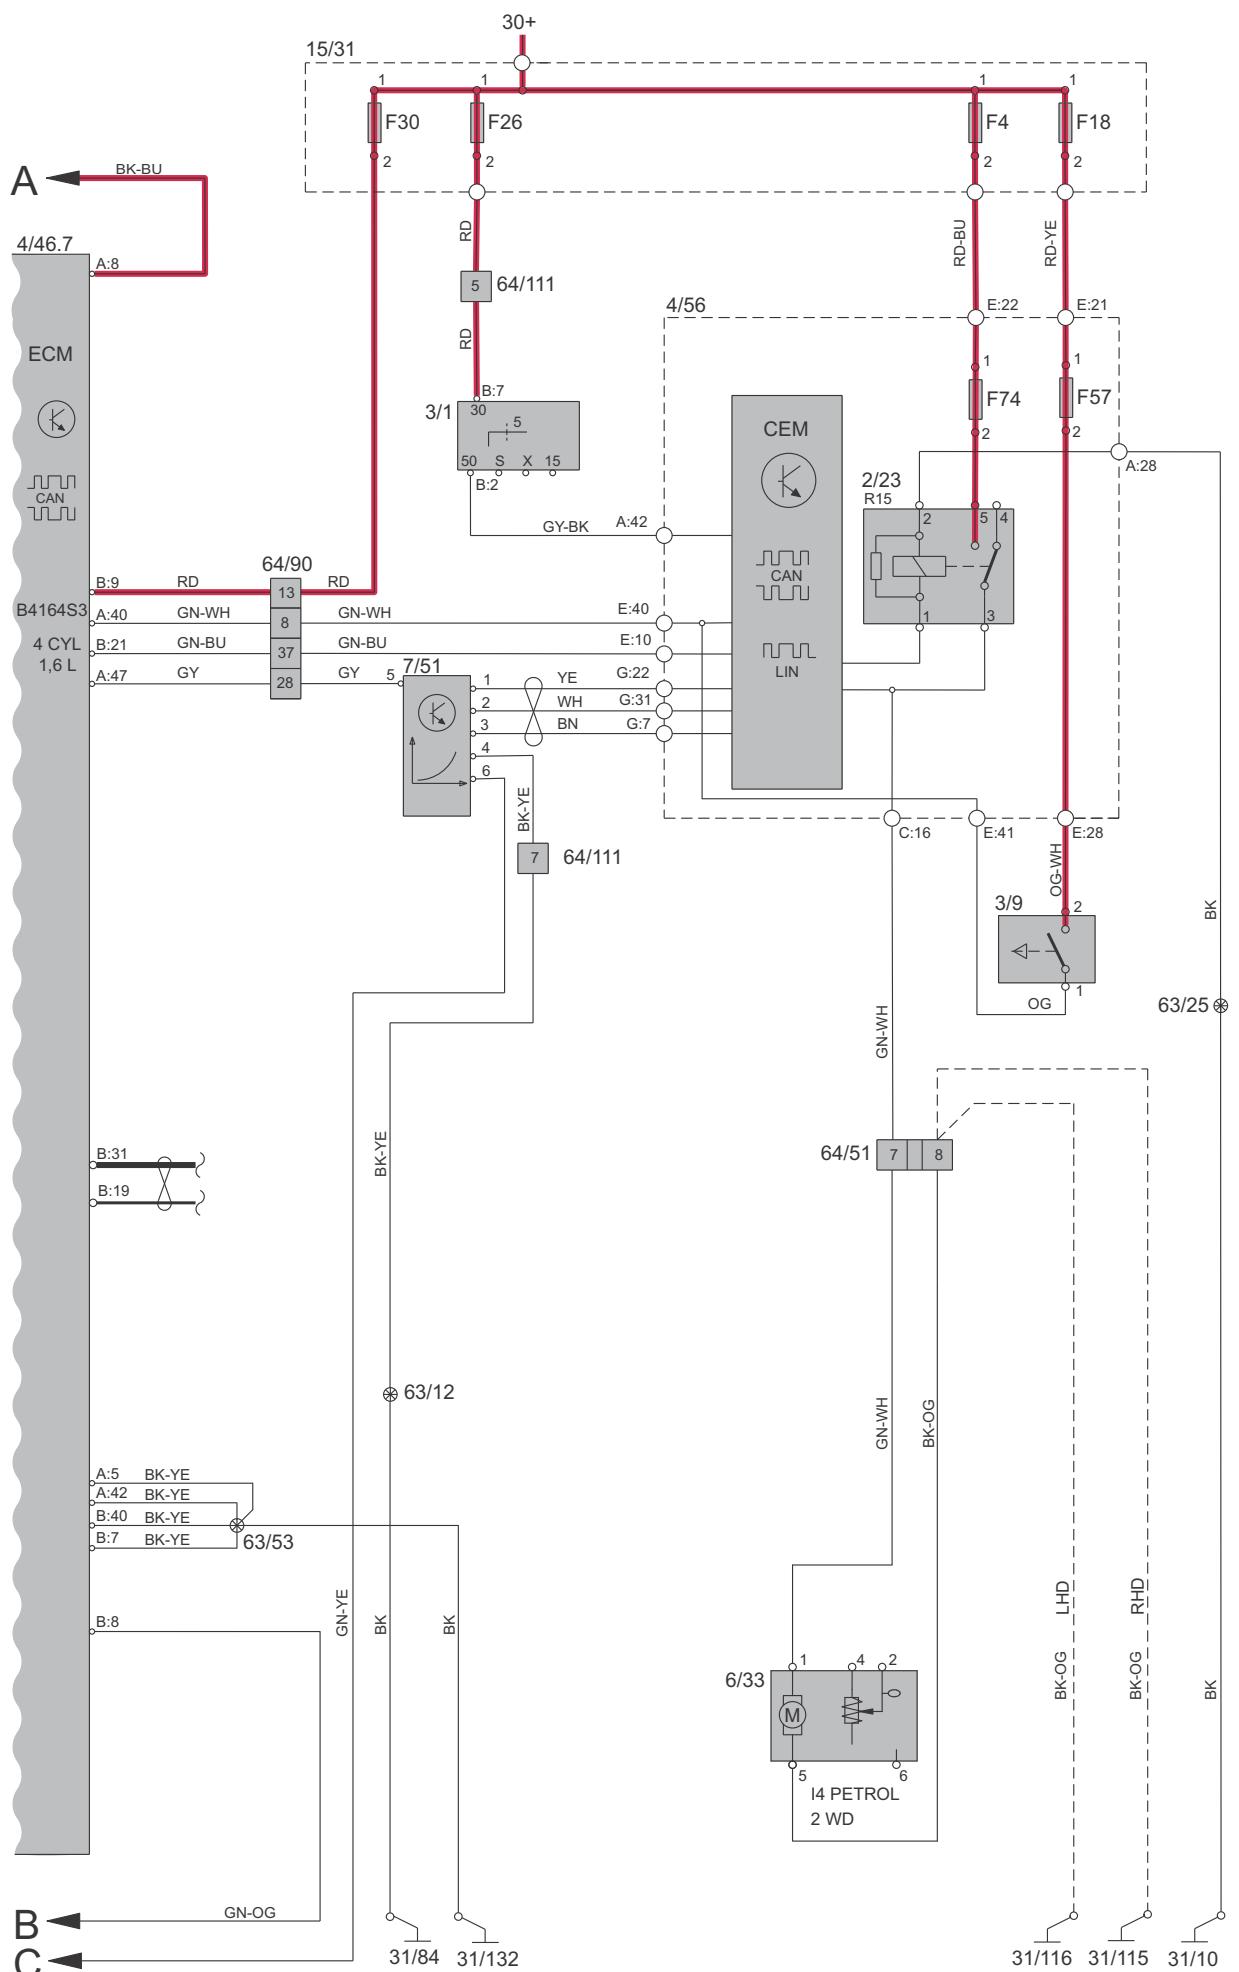


Group 28 Ignition system/control system

Engine management system, 4-Cyl. 2.0l 1:2

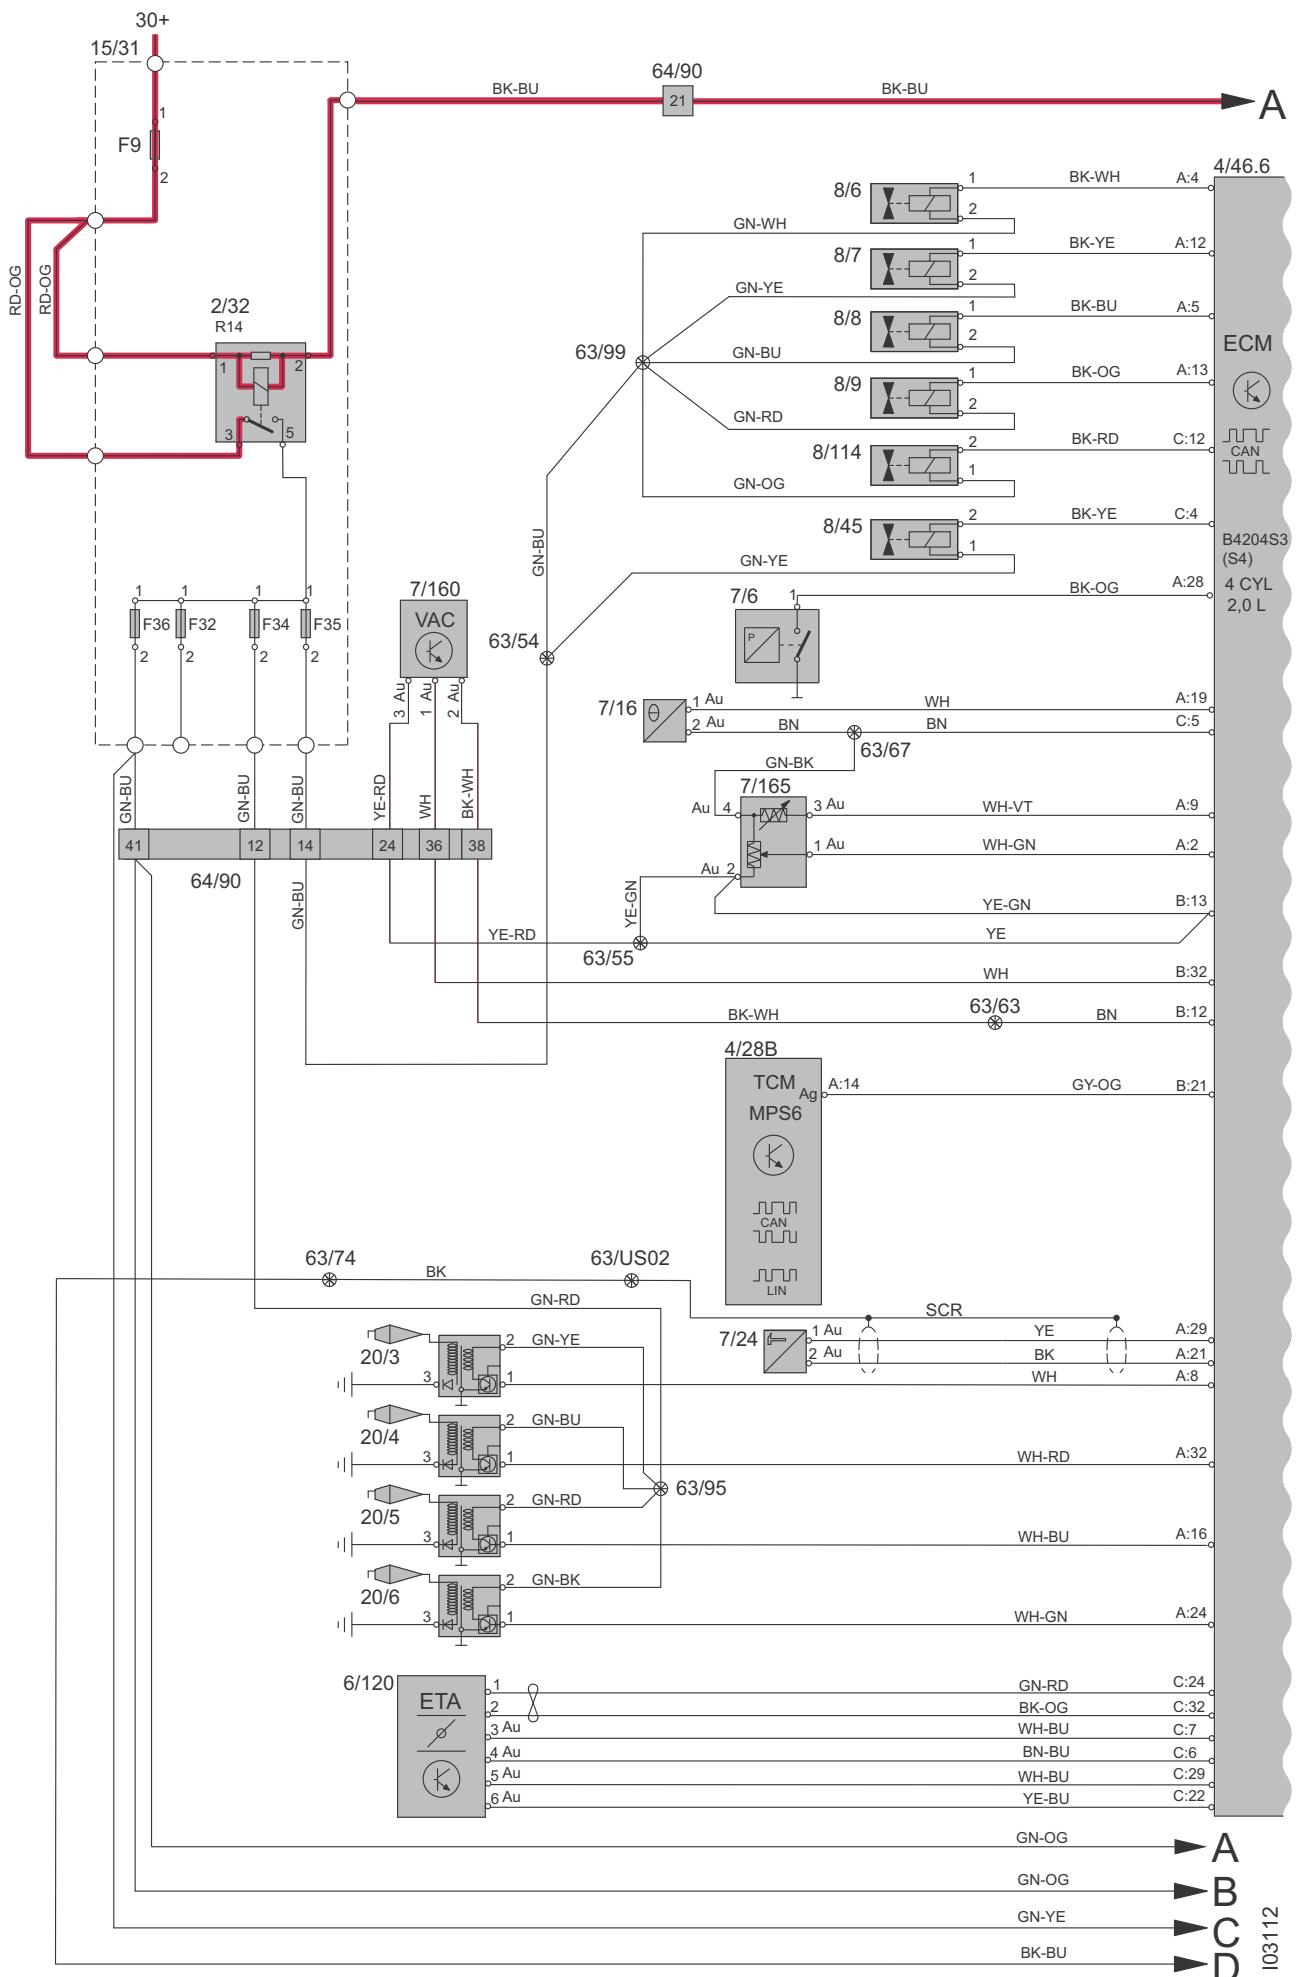


Group 28 Ignition system/control system

Engine management system, 4-Cyl. 2.0l 2:2

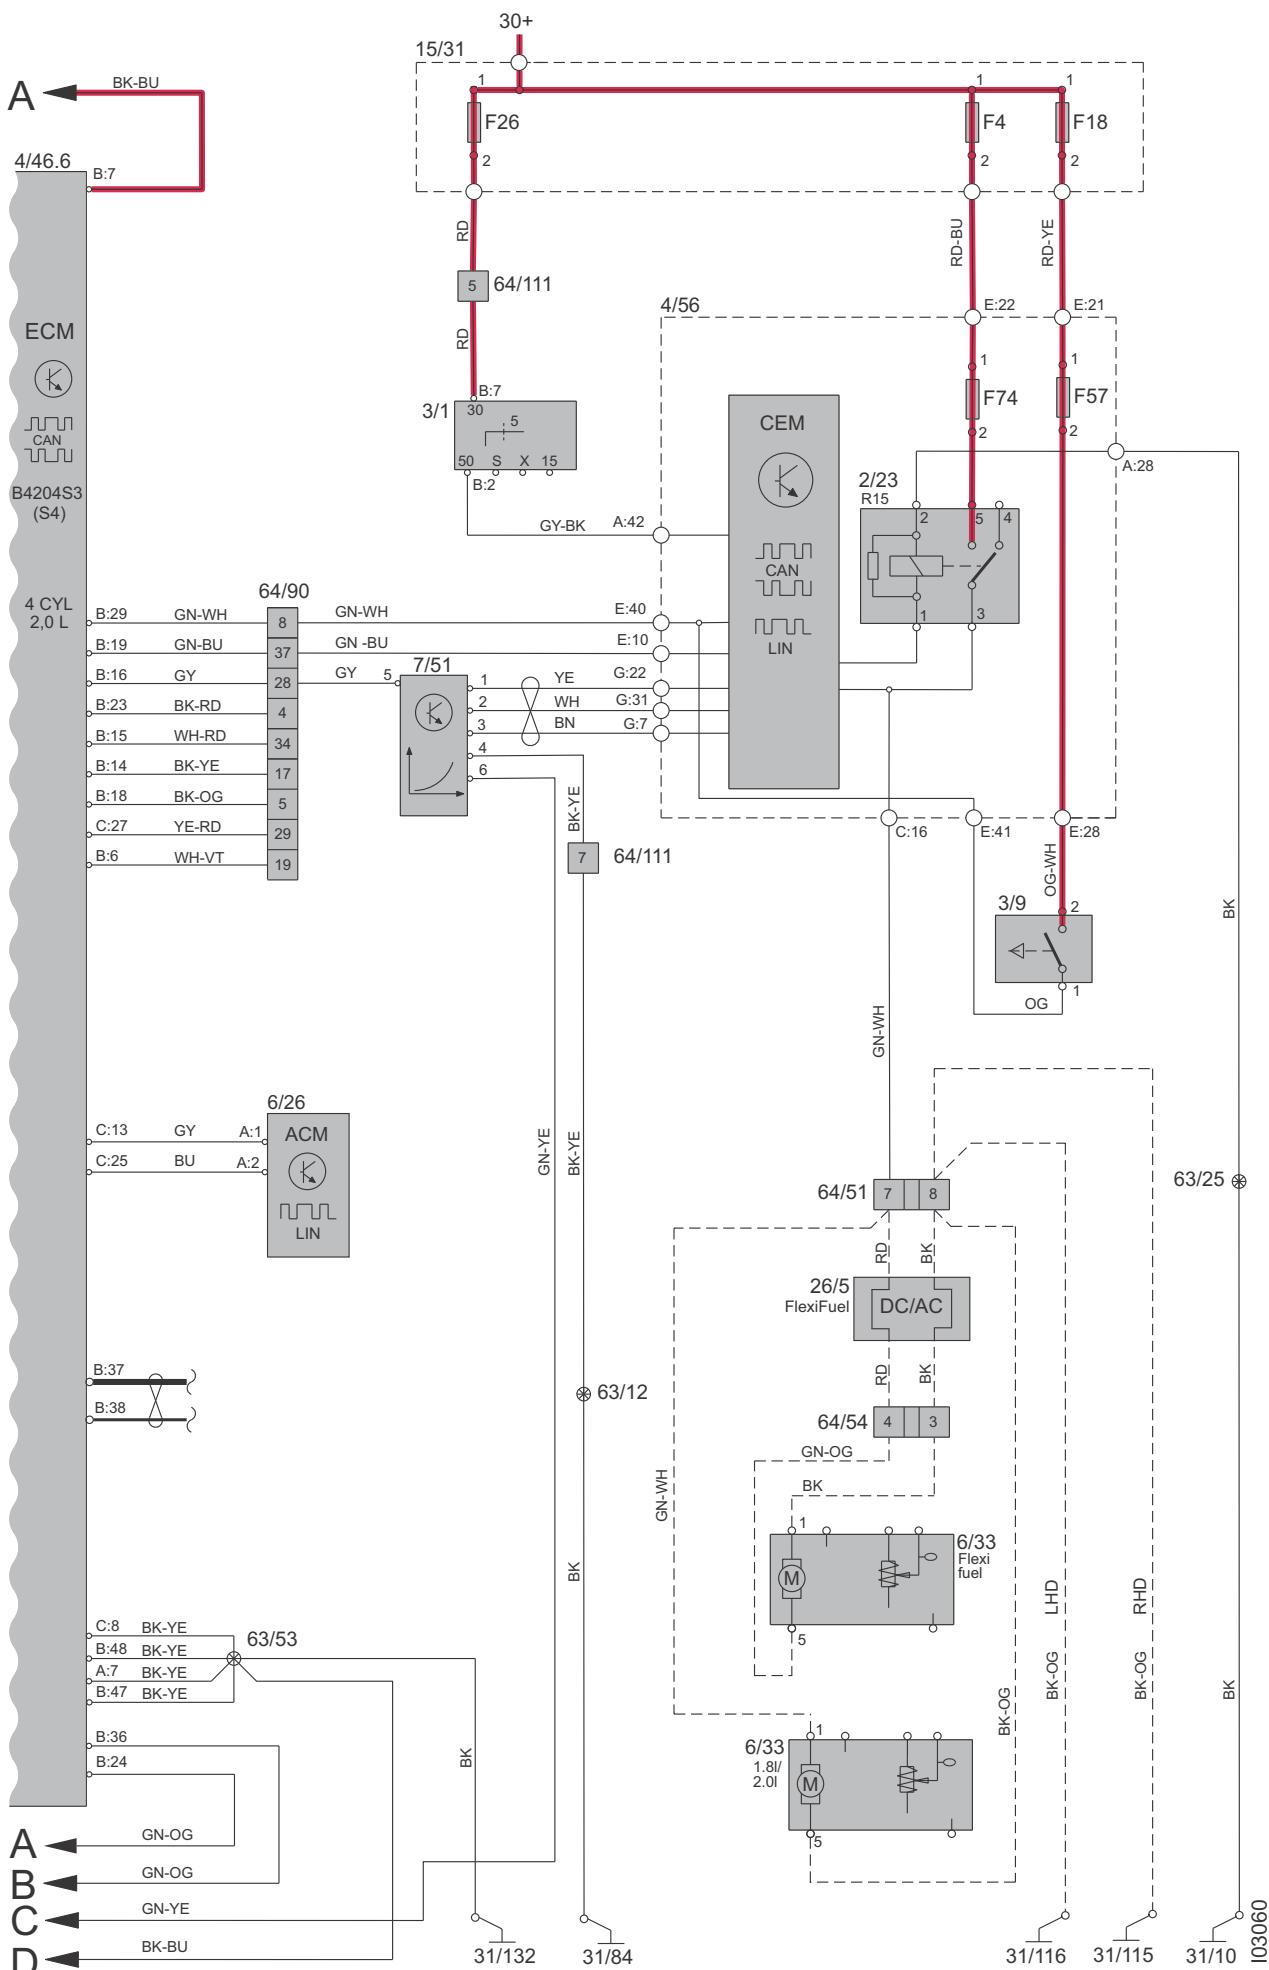


Group 28 Ignition system/control system

Engine management system, 5-Cyl. Turbo 1:2

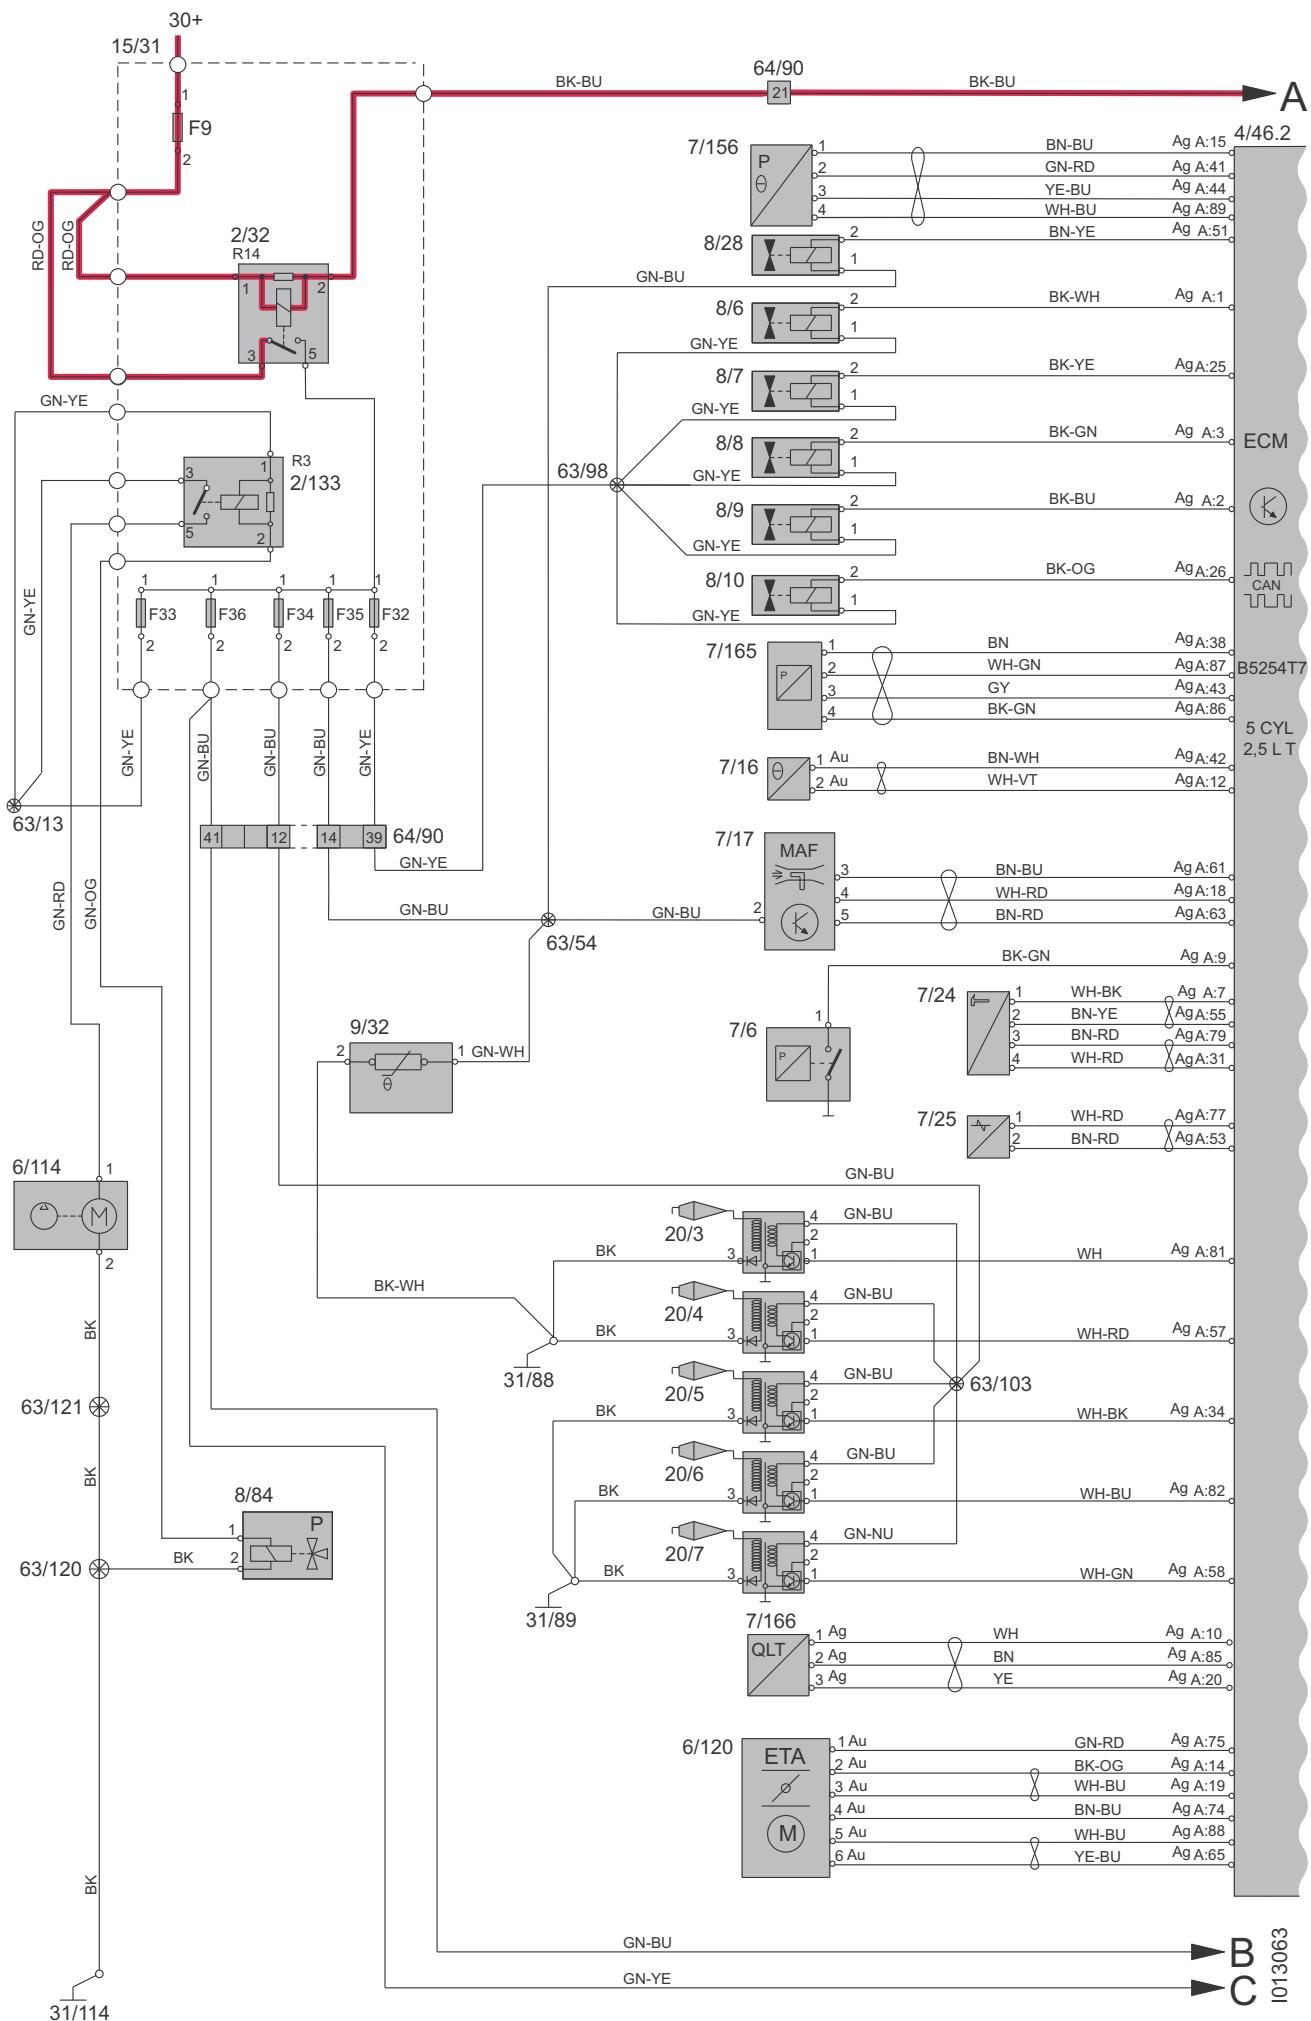


Group 28 Ignition system/control system

Engine management system, 5-Cyl. Turbo 2:2

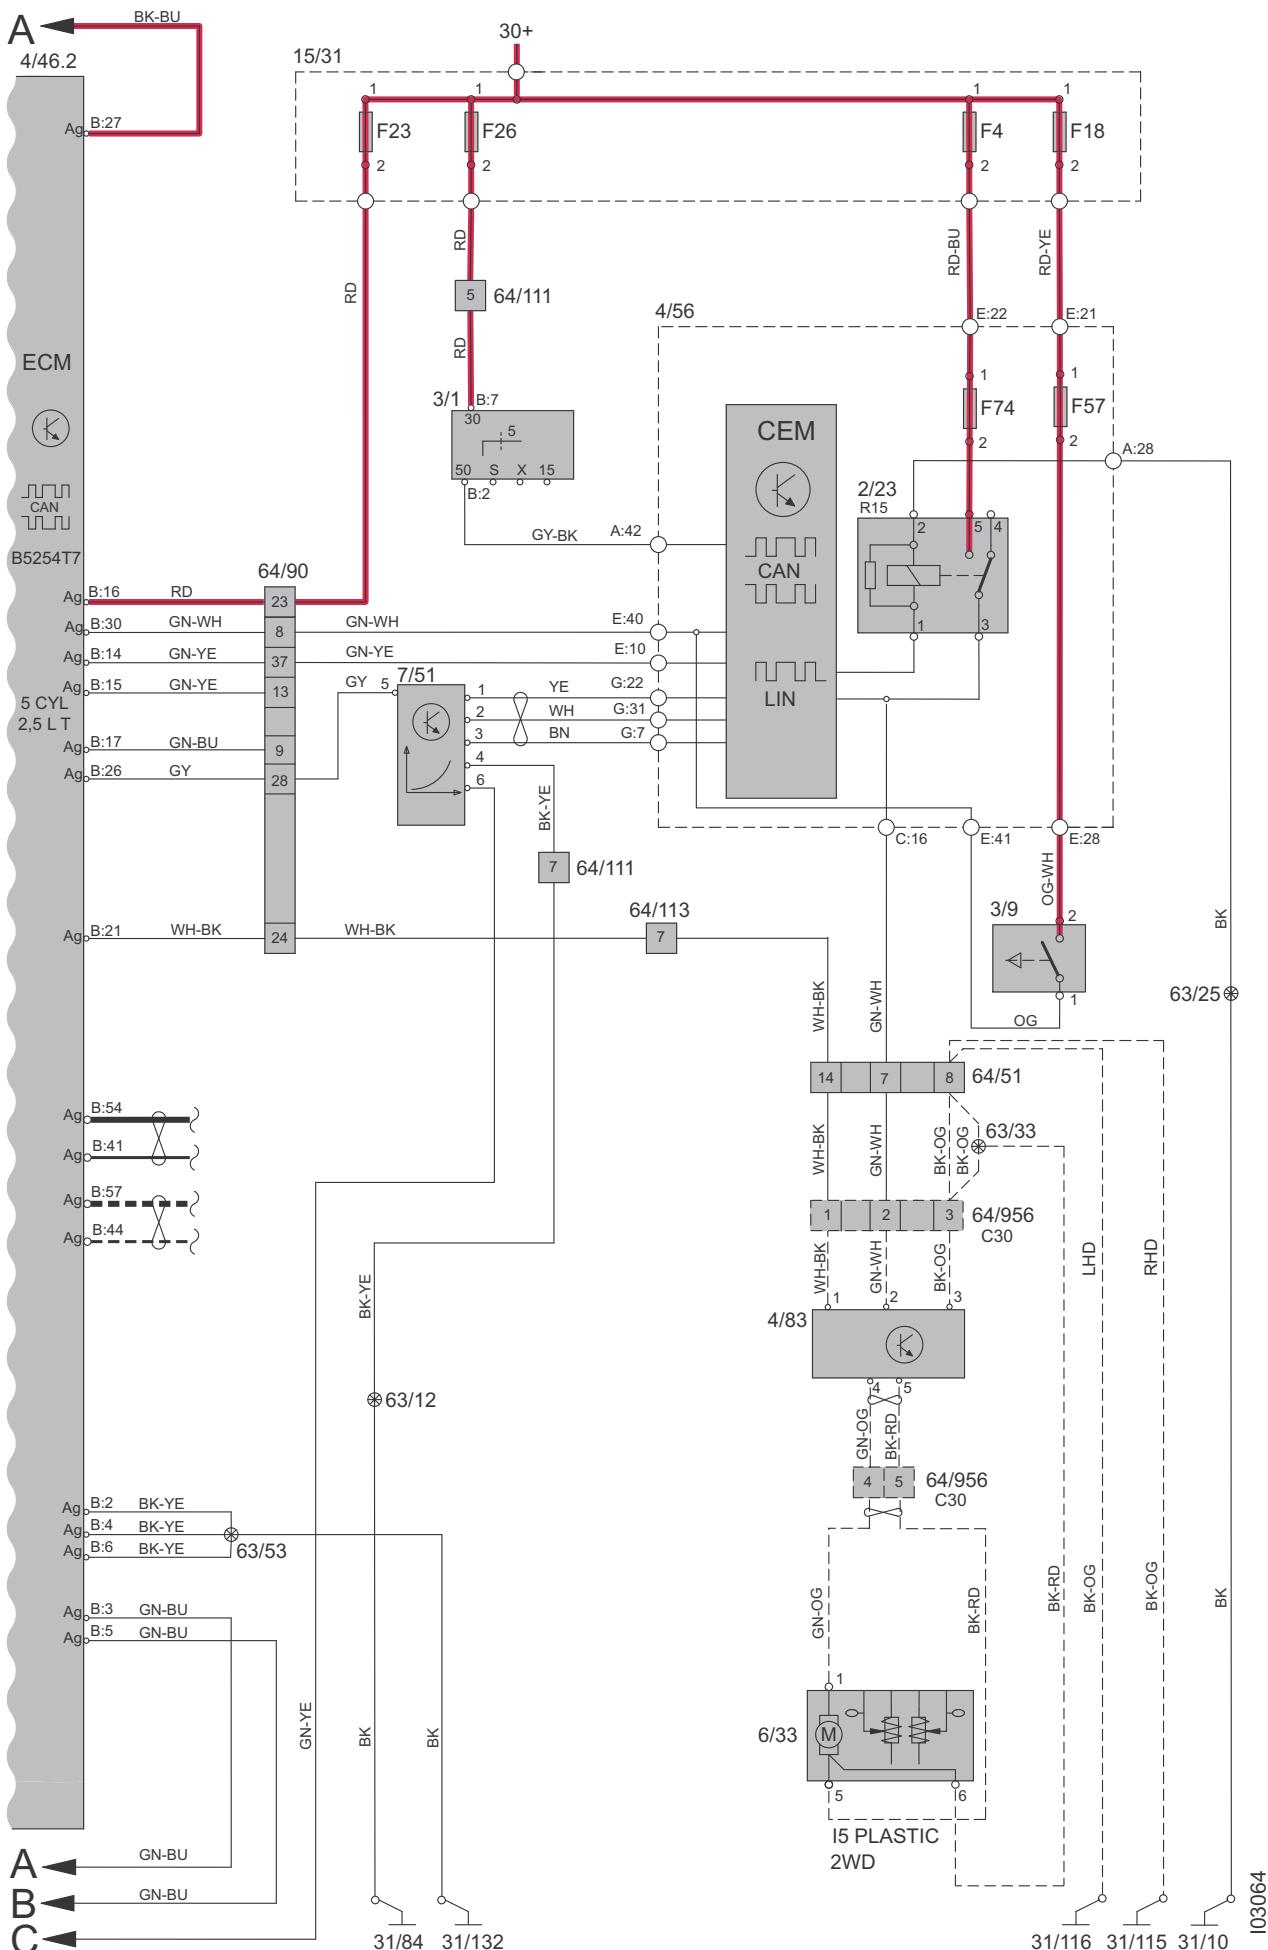


Group 28 Ignition system/control system

Engine management system Diesel, 4-Cyl. 1.6l D4162T 1:2

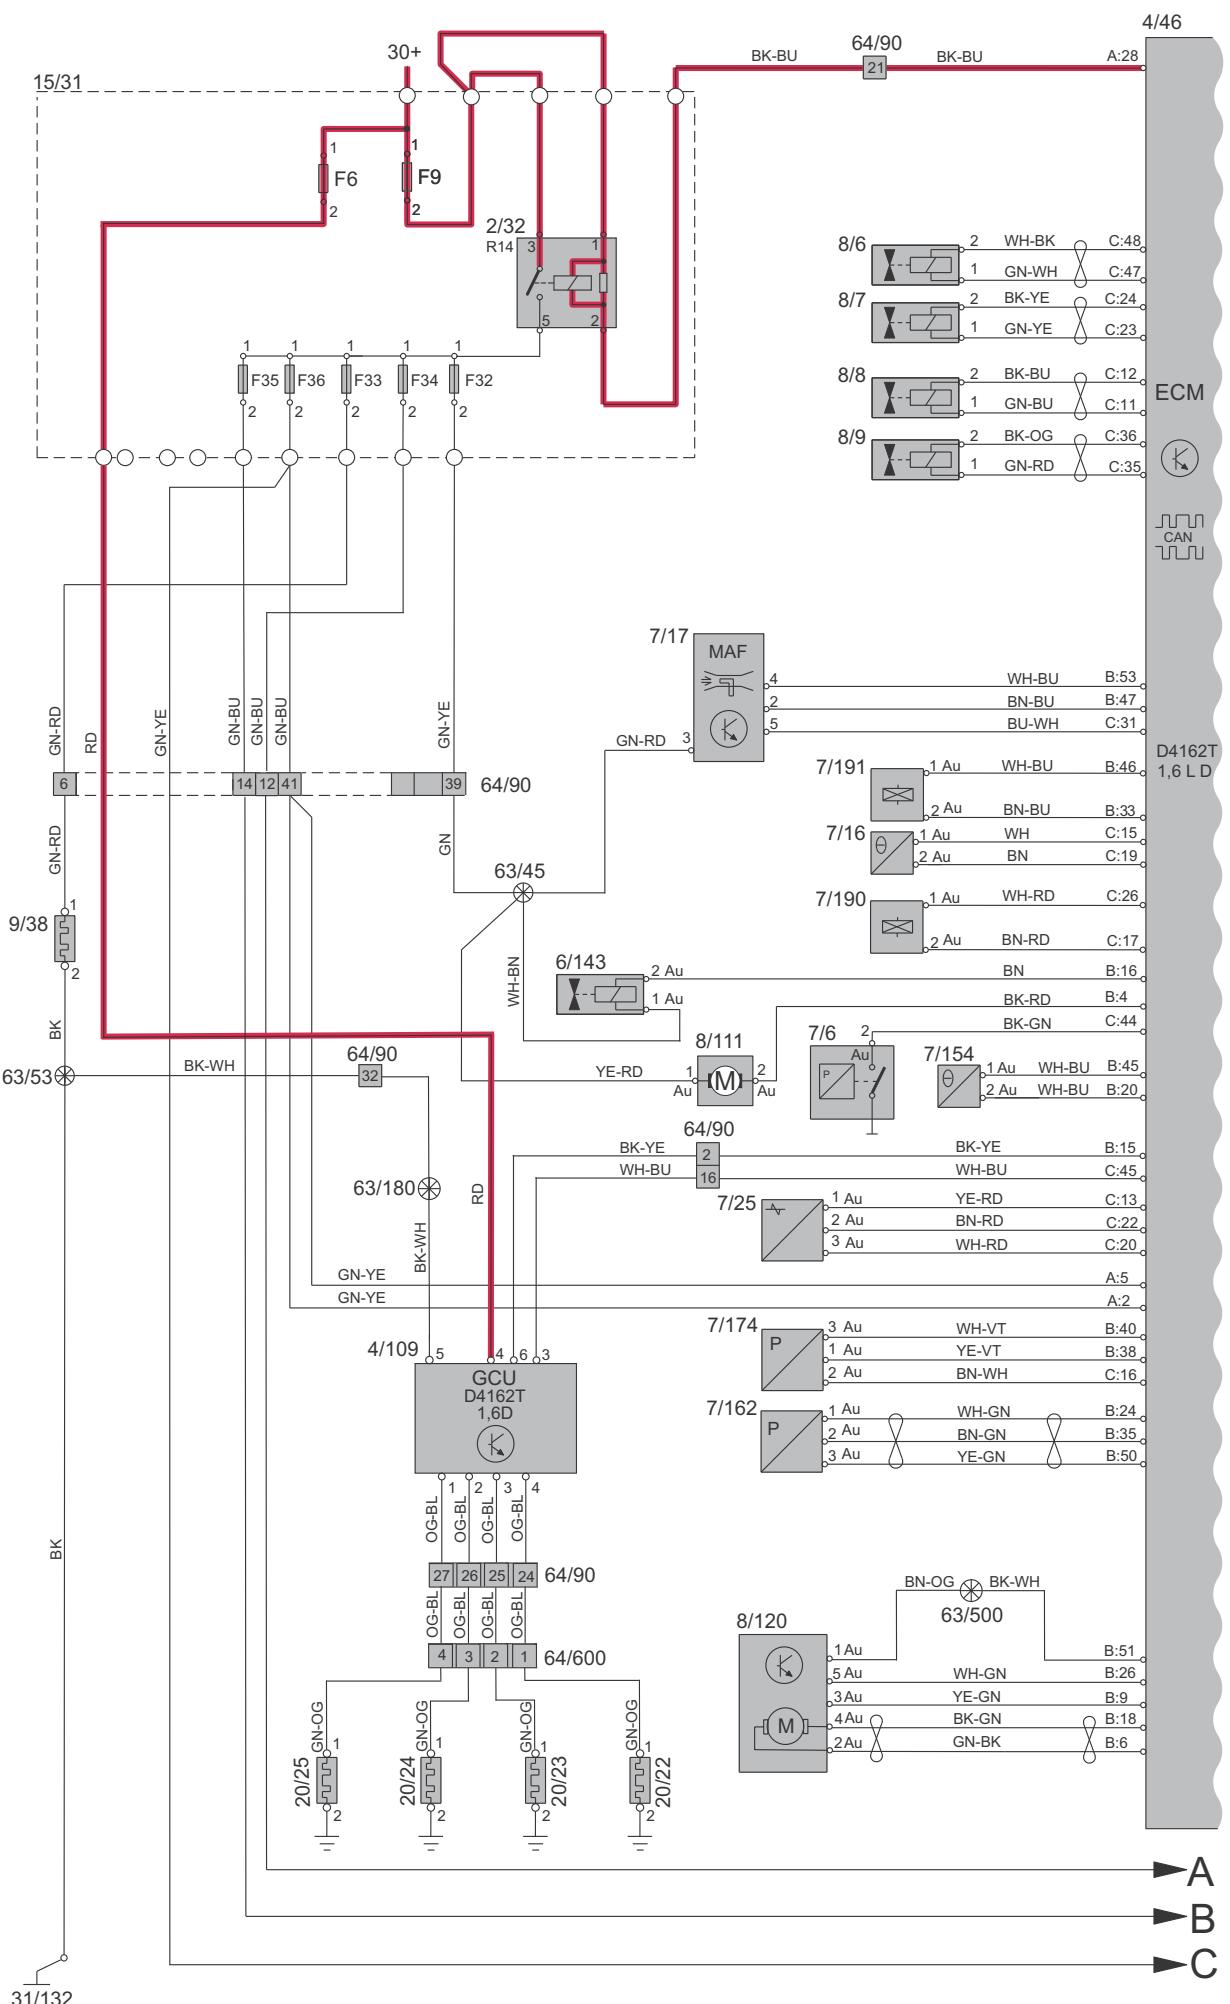


Group 28 Ignition system/control system

Engine management system Diesel, 4-Cyl. 1.6l D4162T 2:2

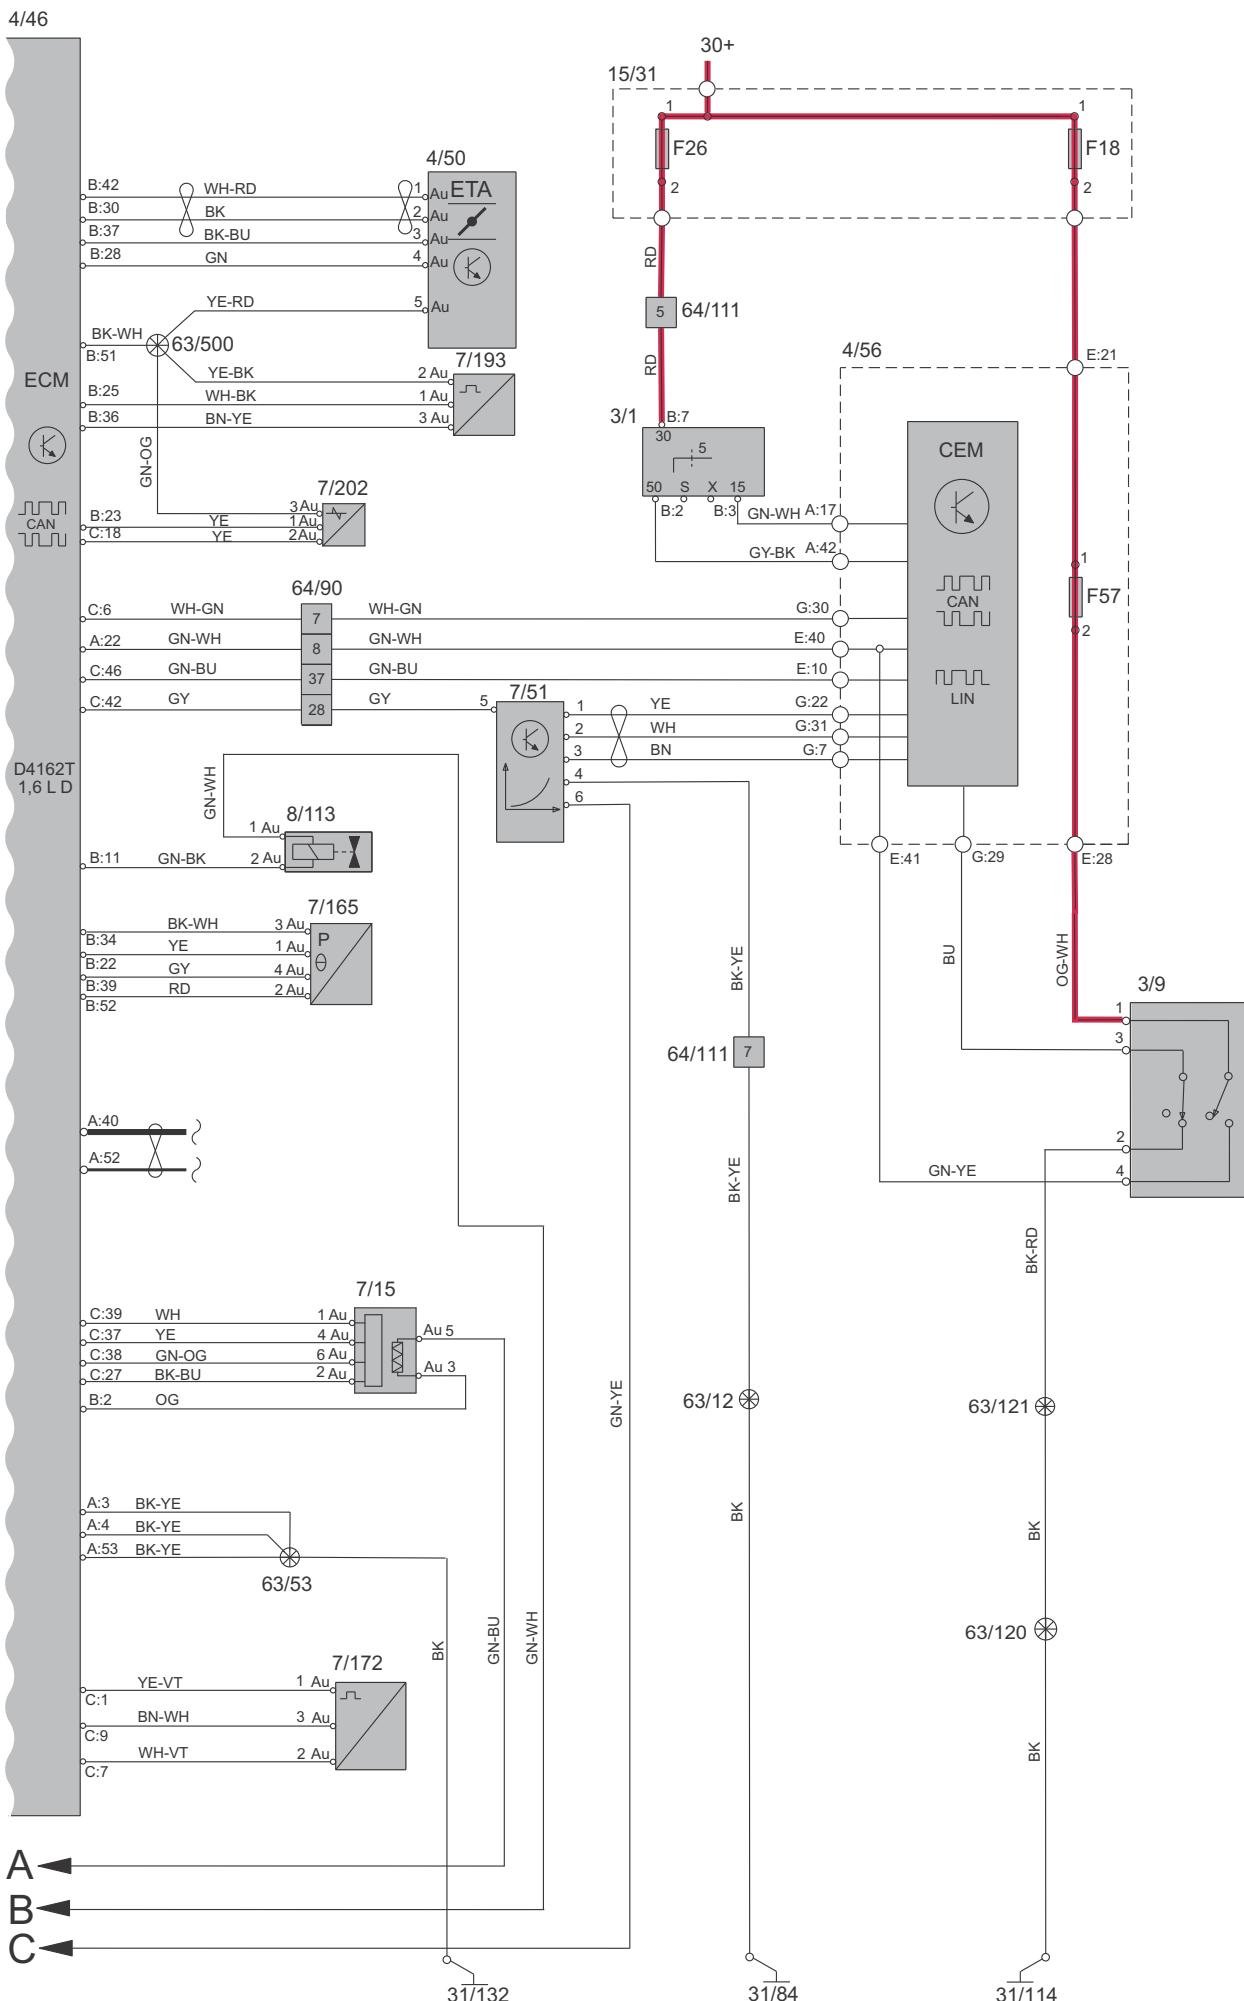


Group 28 Ignition system/control system

Engine management system Diesel, 5-Cyl. 2.0l 1:3

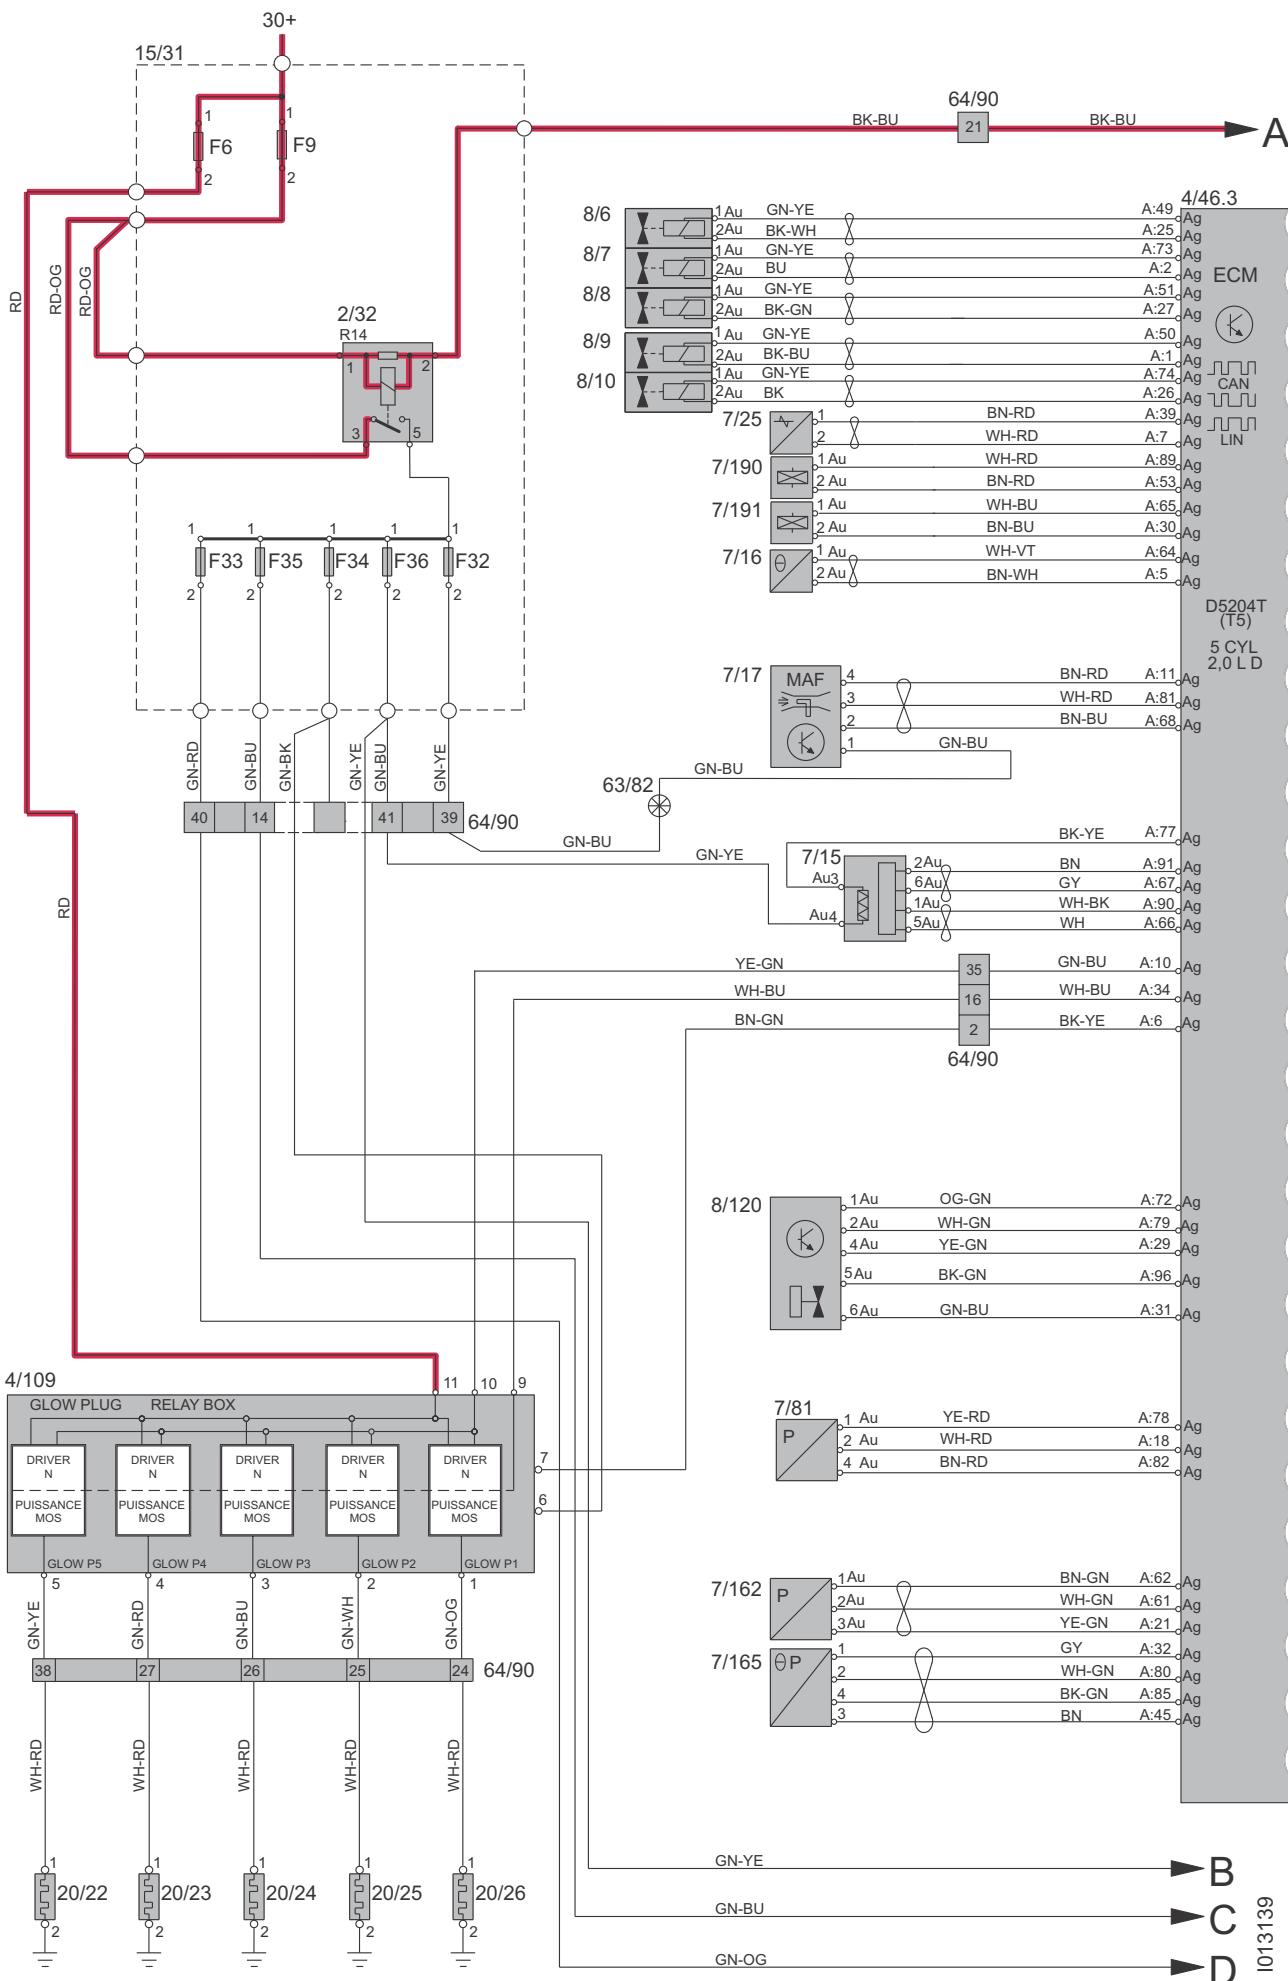


Group 28 Ignition system/control system

Engine management system Diesel, 5-Cyl. 2.0l 2:3

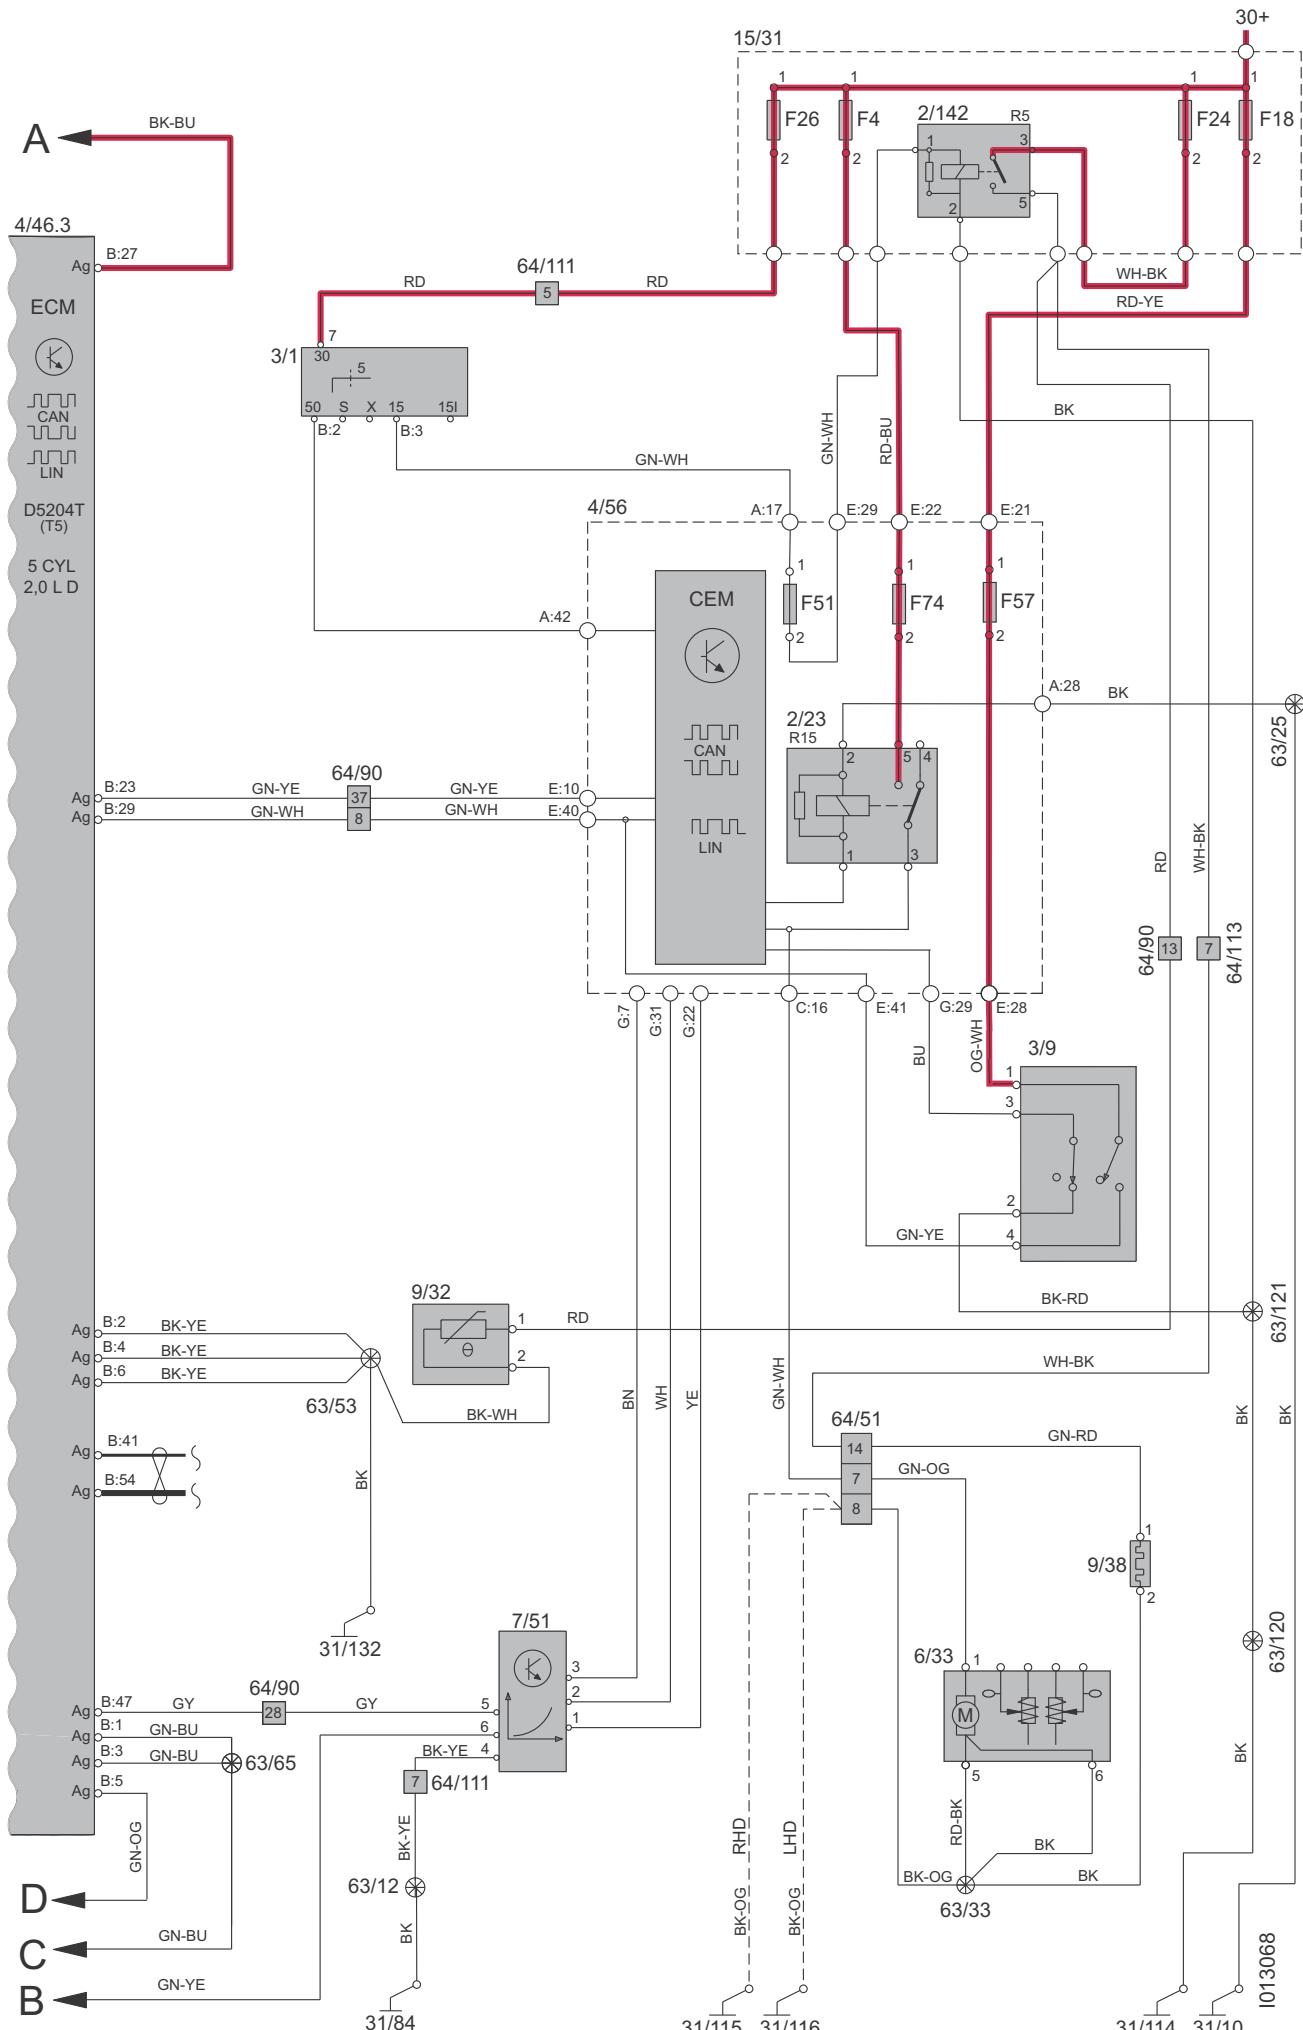

Group 28 Ignition system/control system


Engine management system Diesel, 5-Cyl. 2.0l 3:3

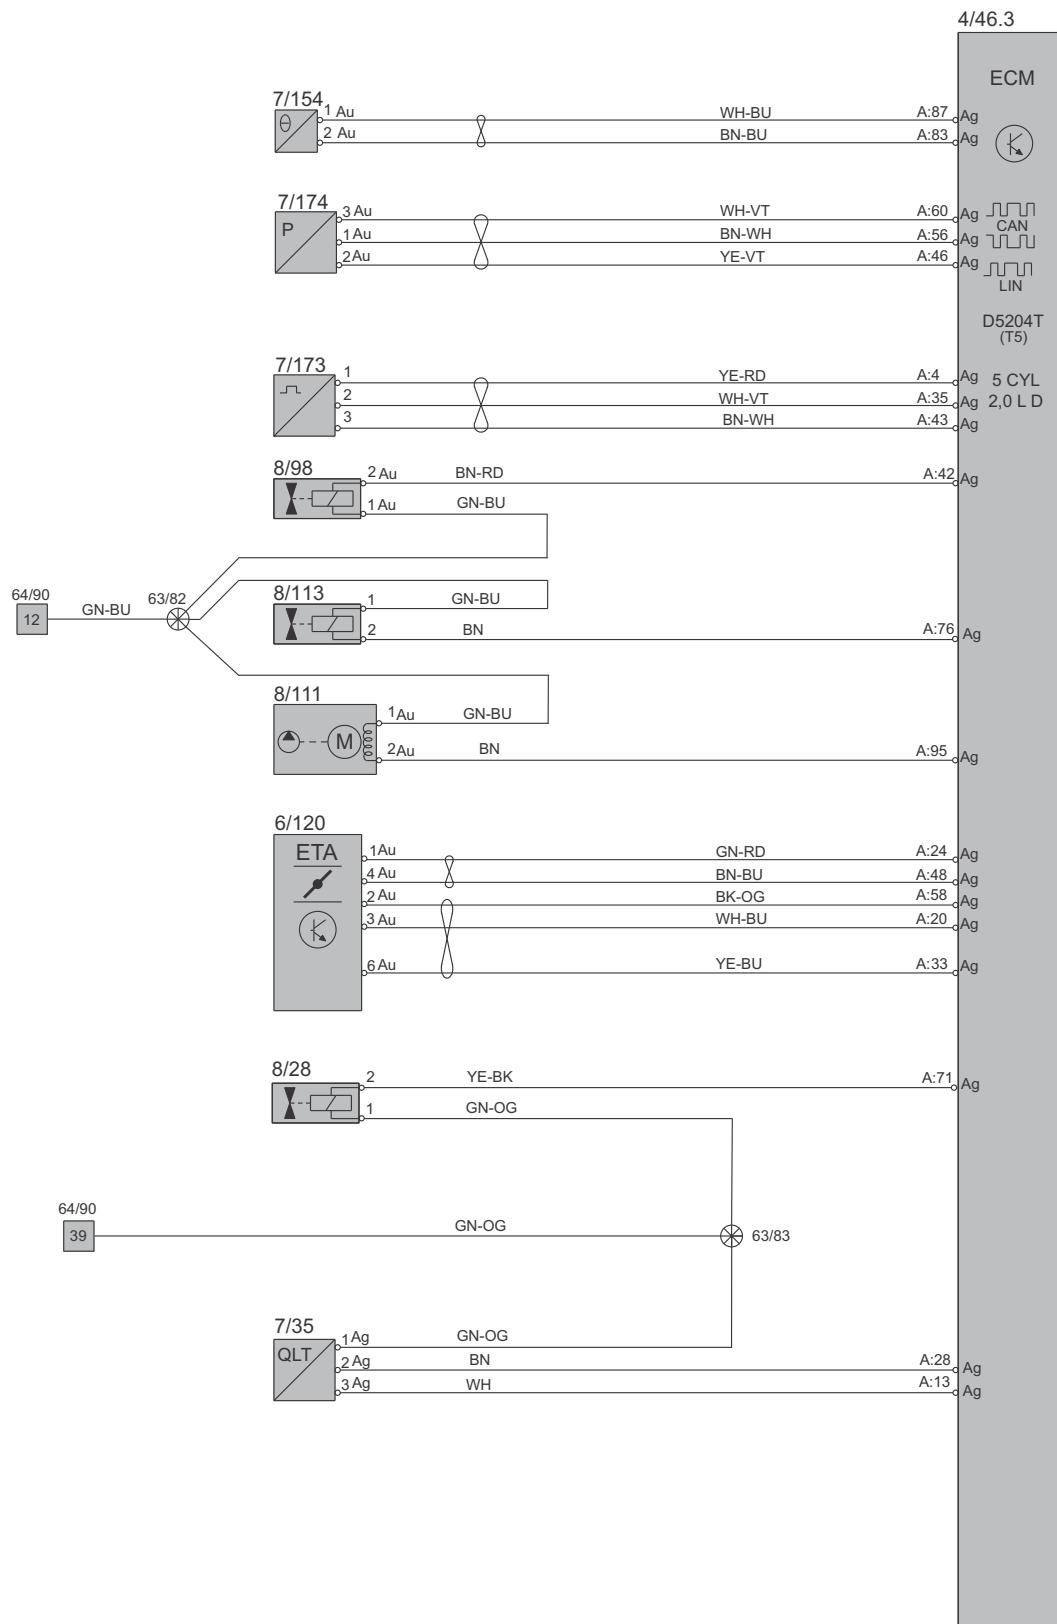

1013069

Group 28 Ignition system/control system


Emission control 4-Cyl. 1.6l

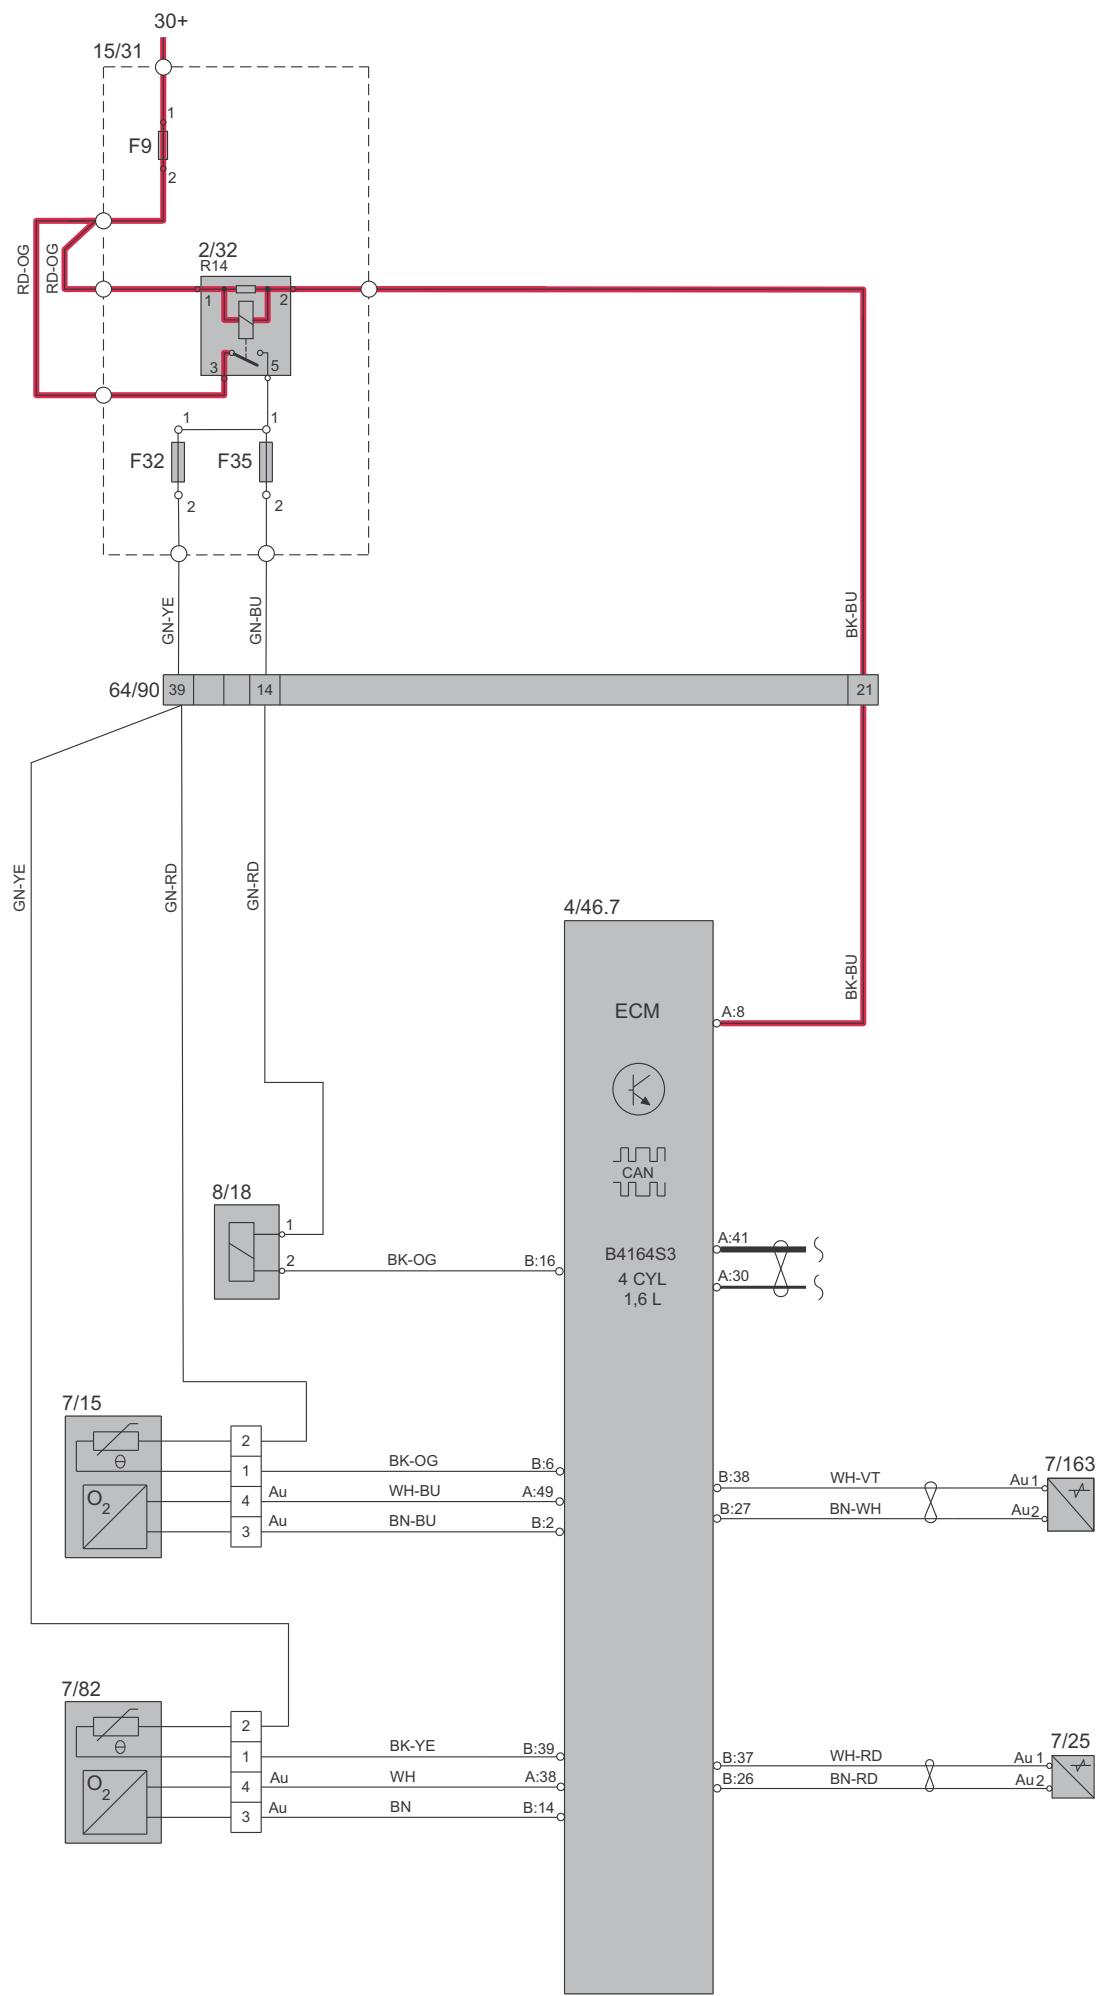

1013070

Group 28 Ignition system/control system


Emission control 4-Cyl. 2.0l

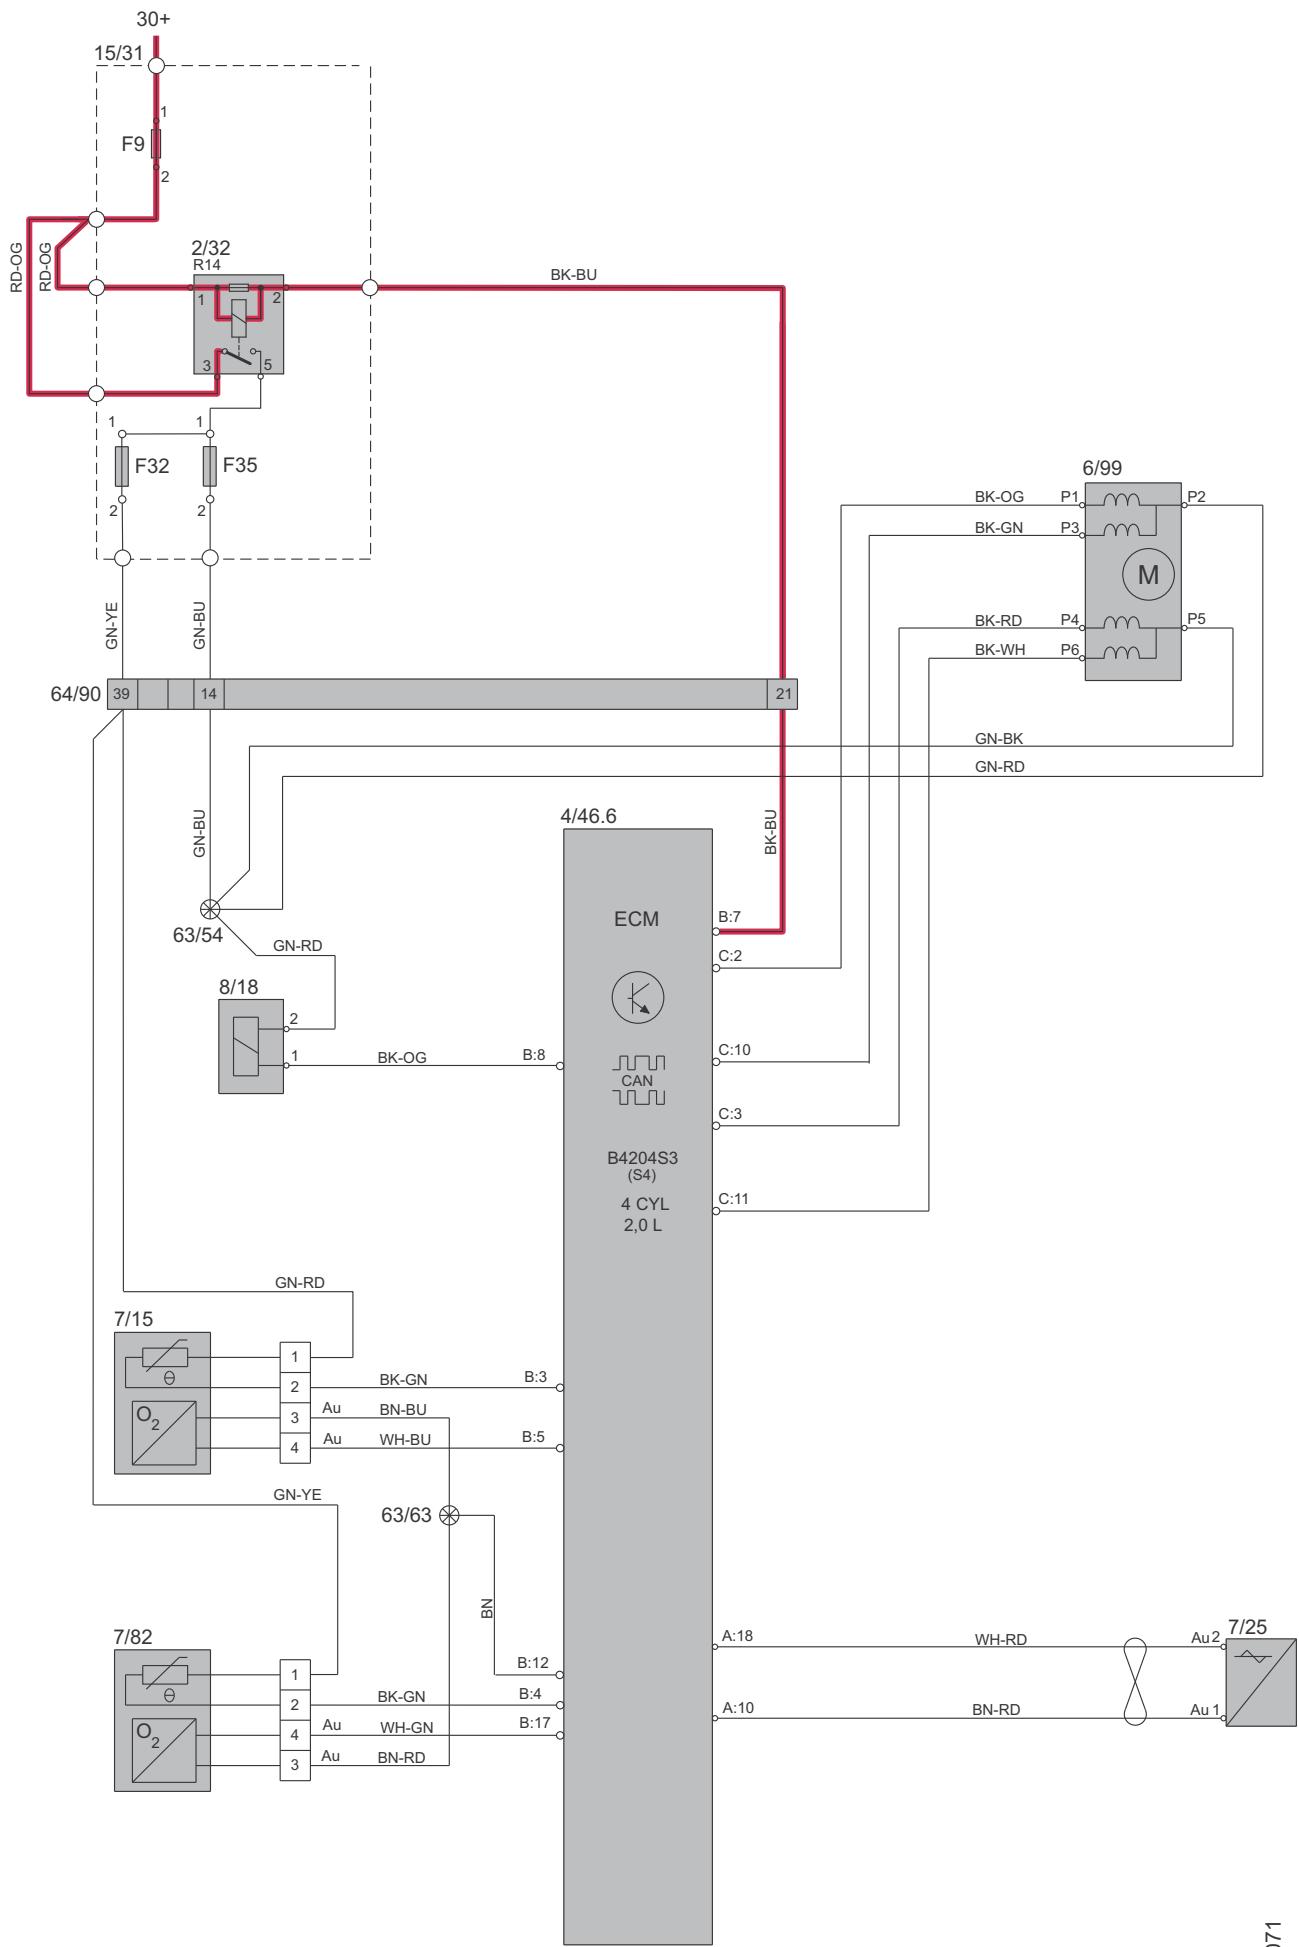

103071

Group 28 Ignition system/control system


Emission control 5-Cyl.

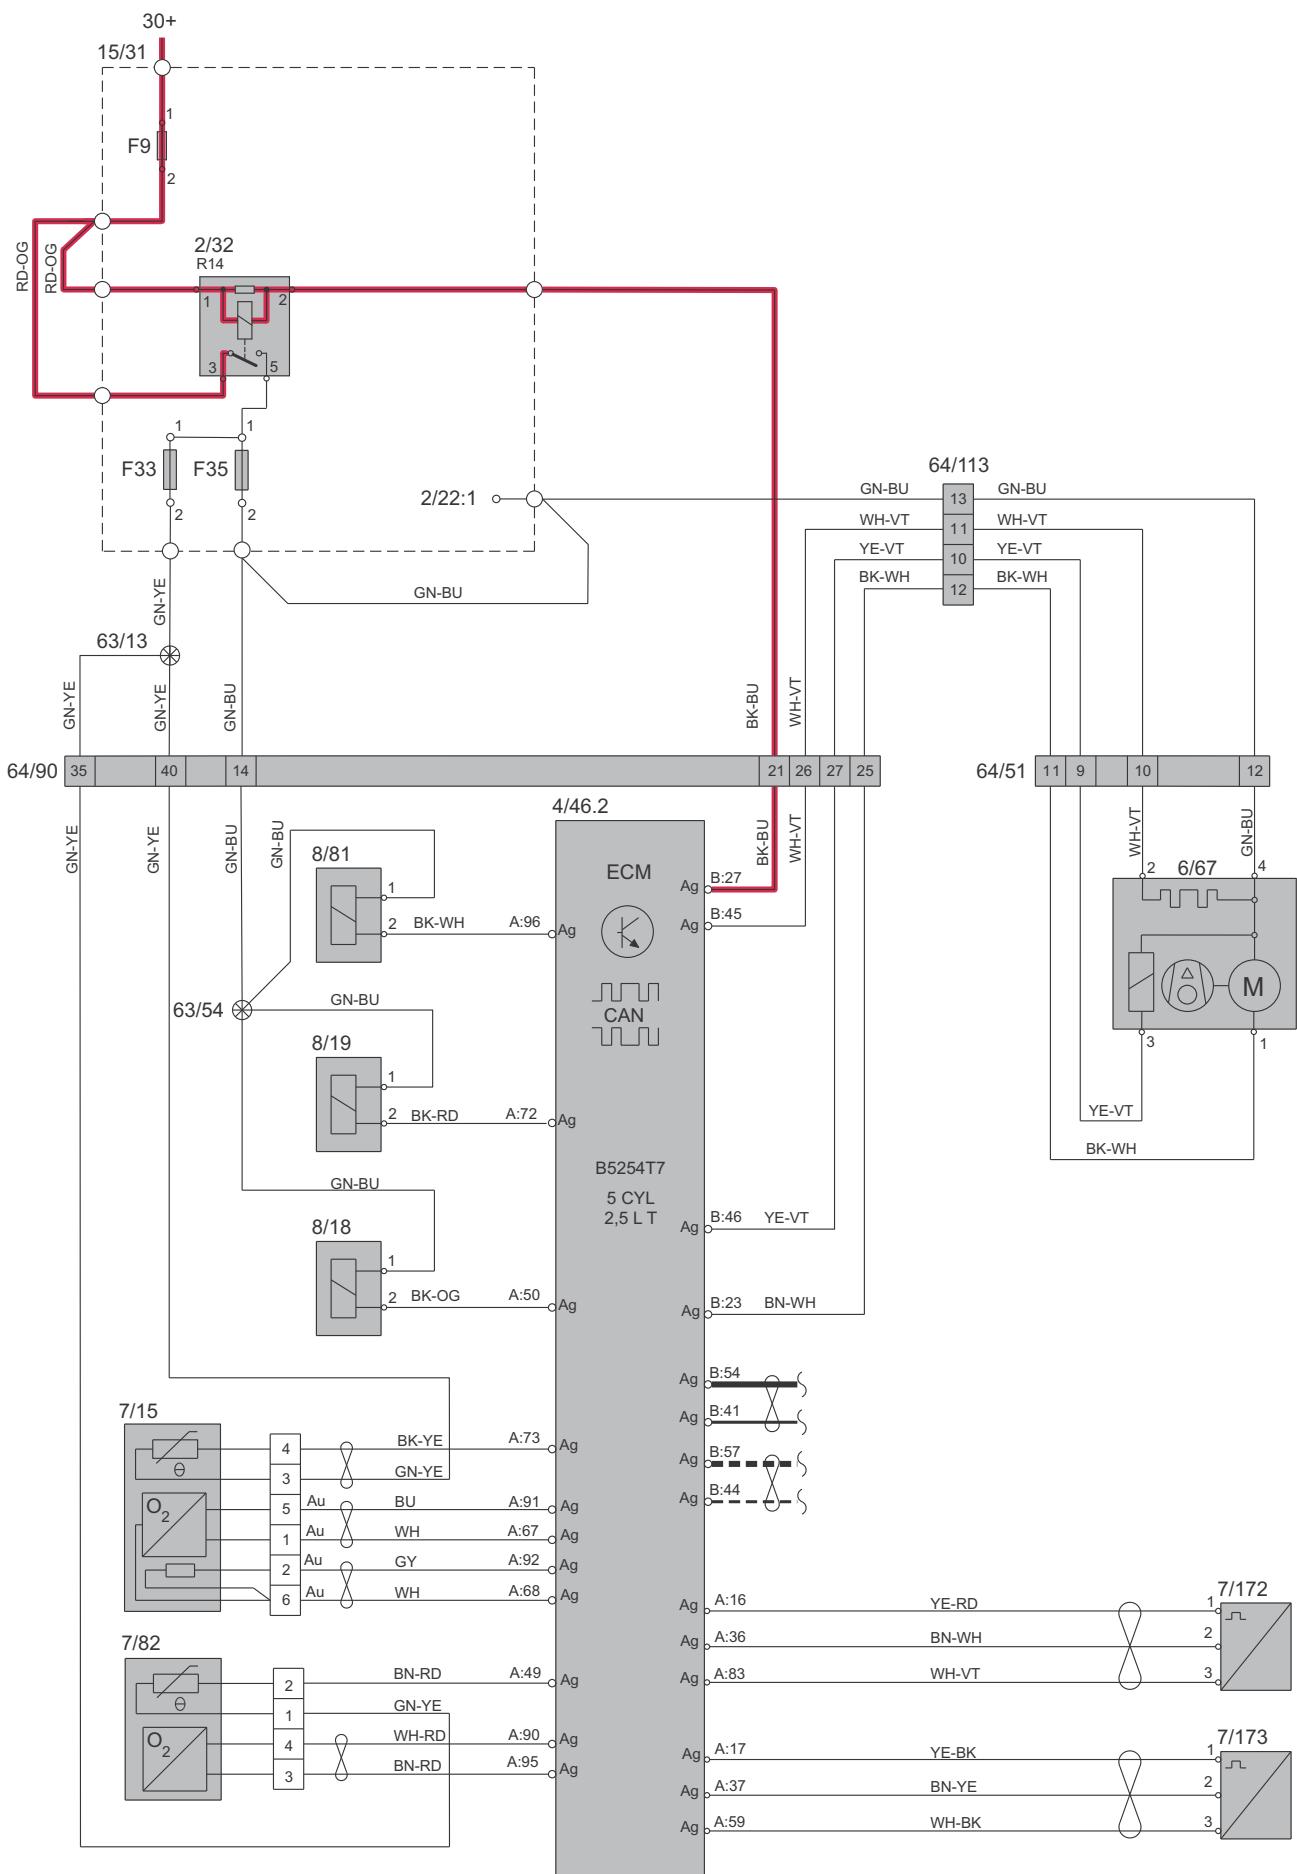

103072


Group 32 Alternator and voltage regulator

Power supply 4-Cyl.

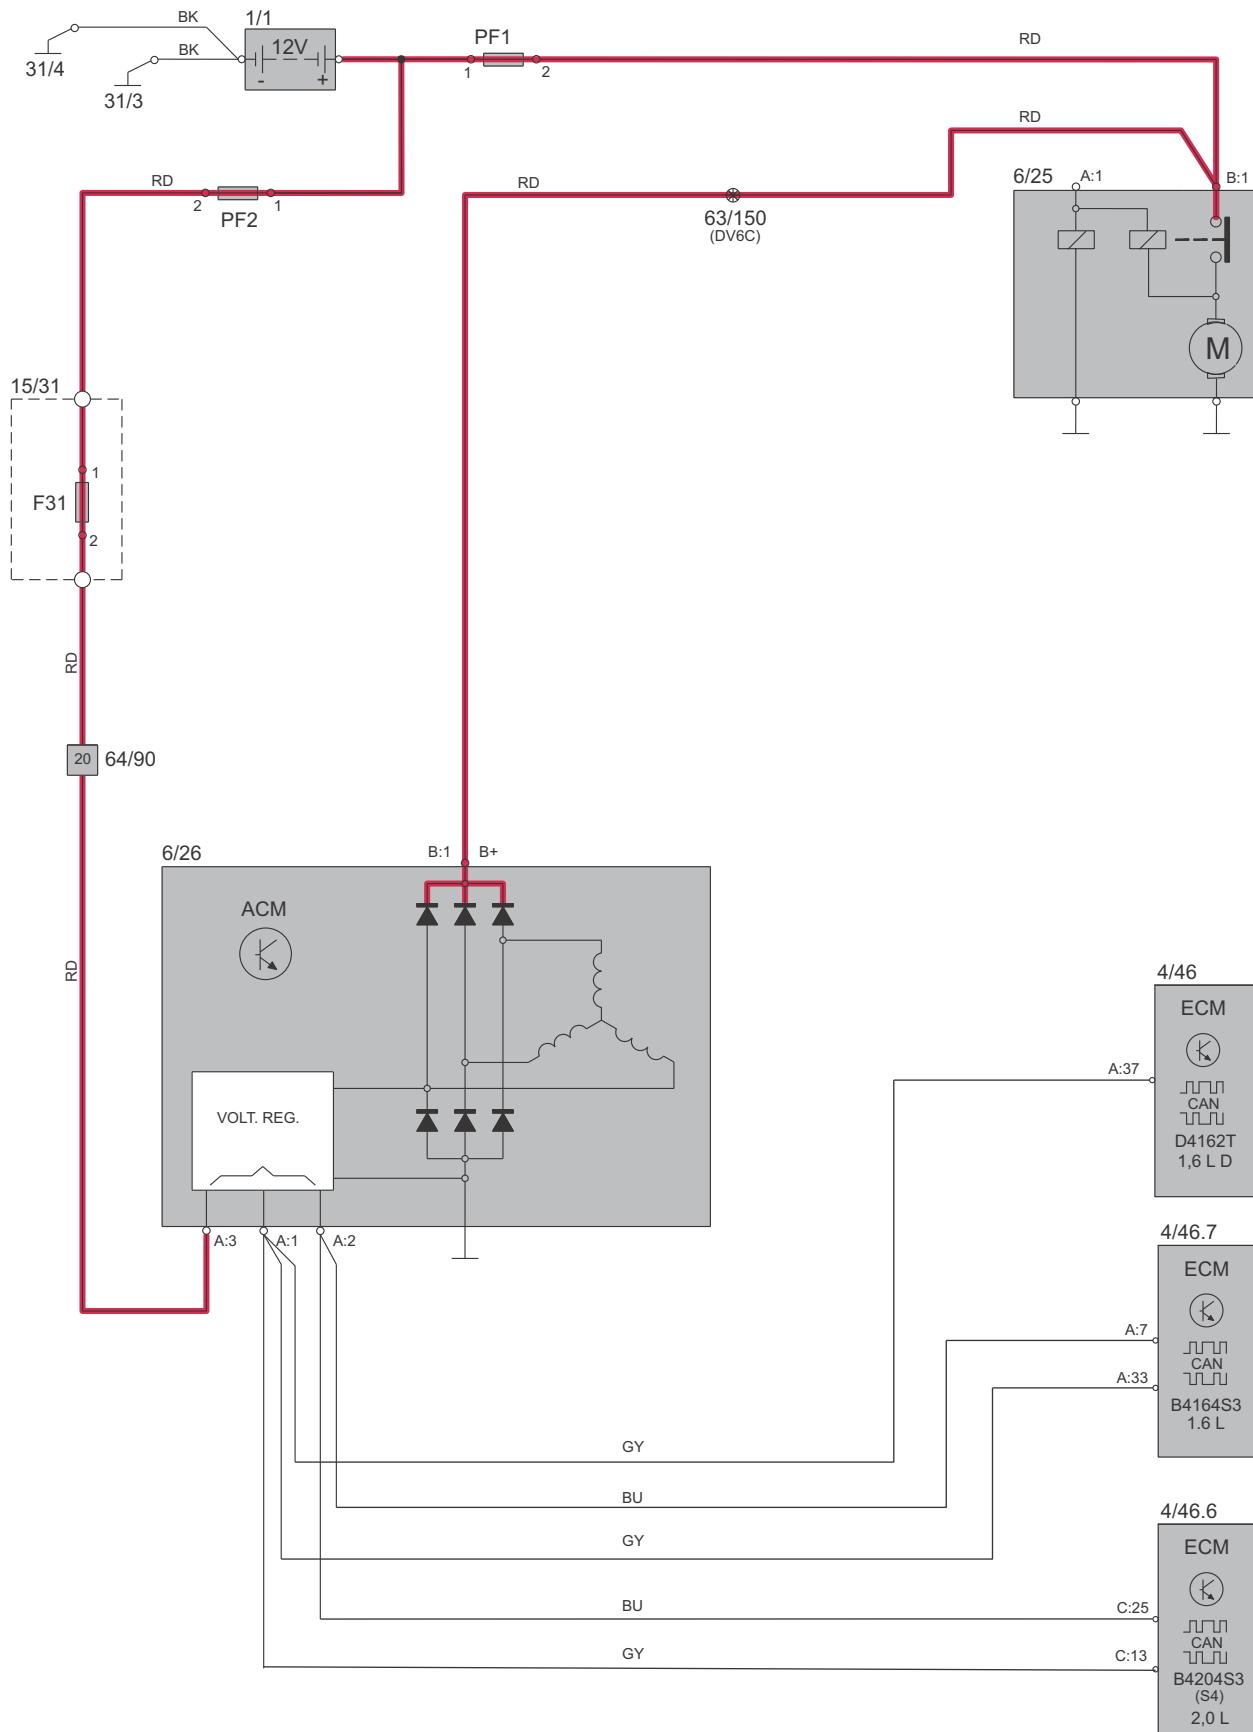

1013306


Group 32 Alternator and voltage regulator Power supply 5-Cyl.

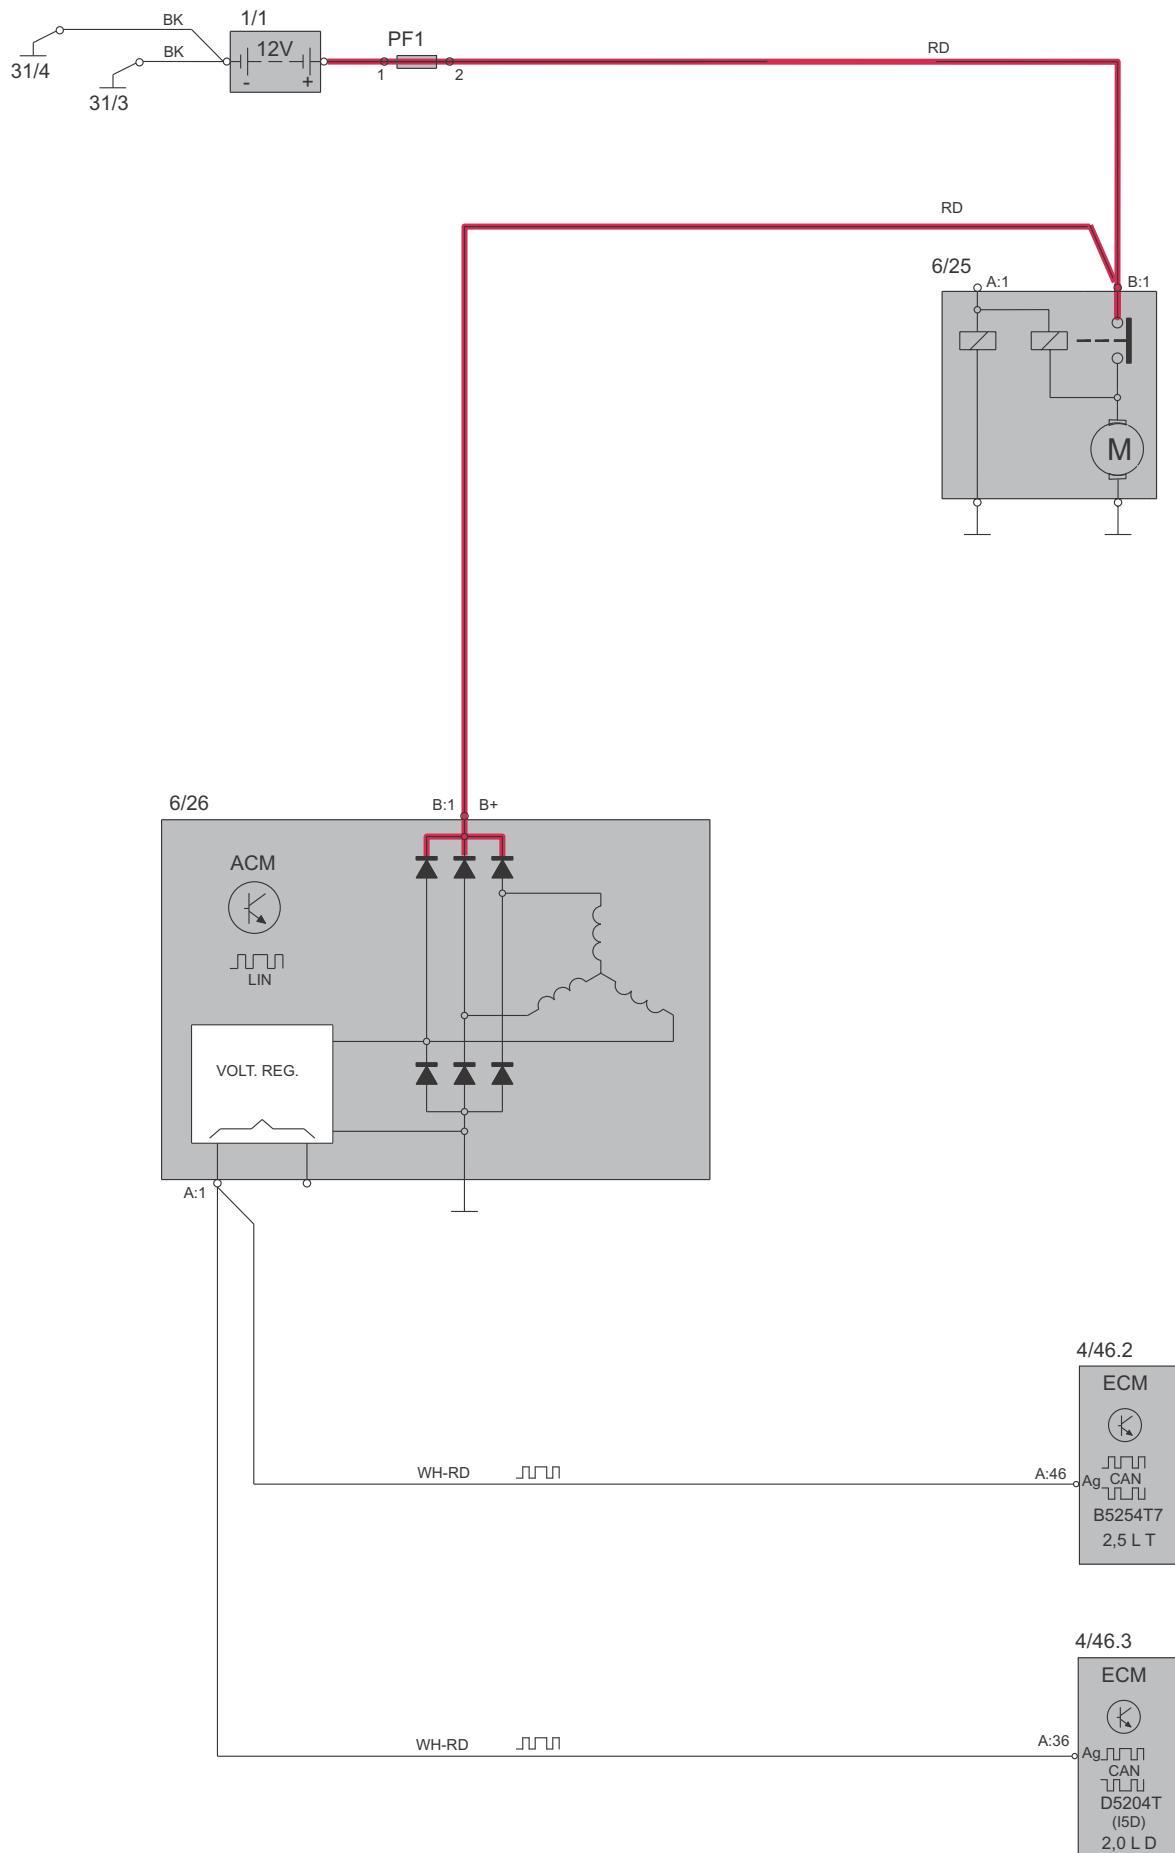

1013076


Group 33 Starting system

Starting system 4-Cyl.

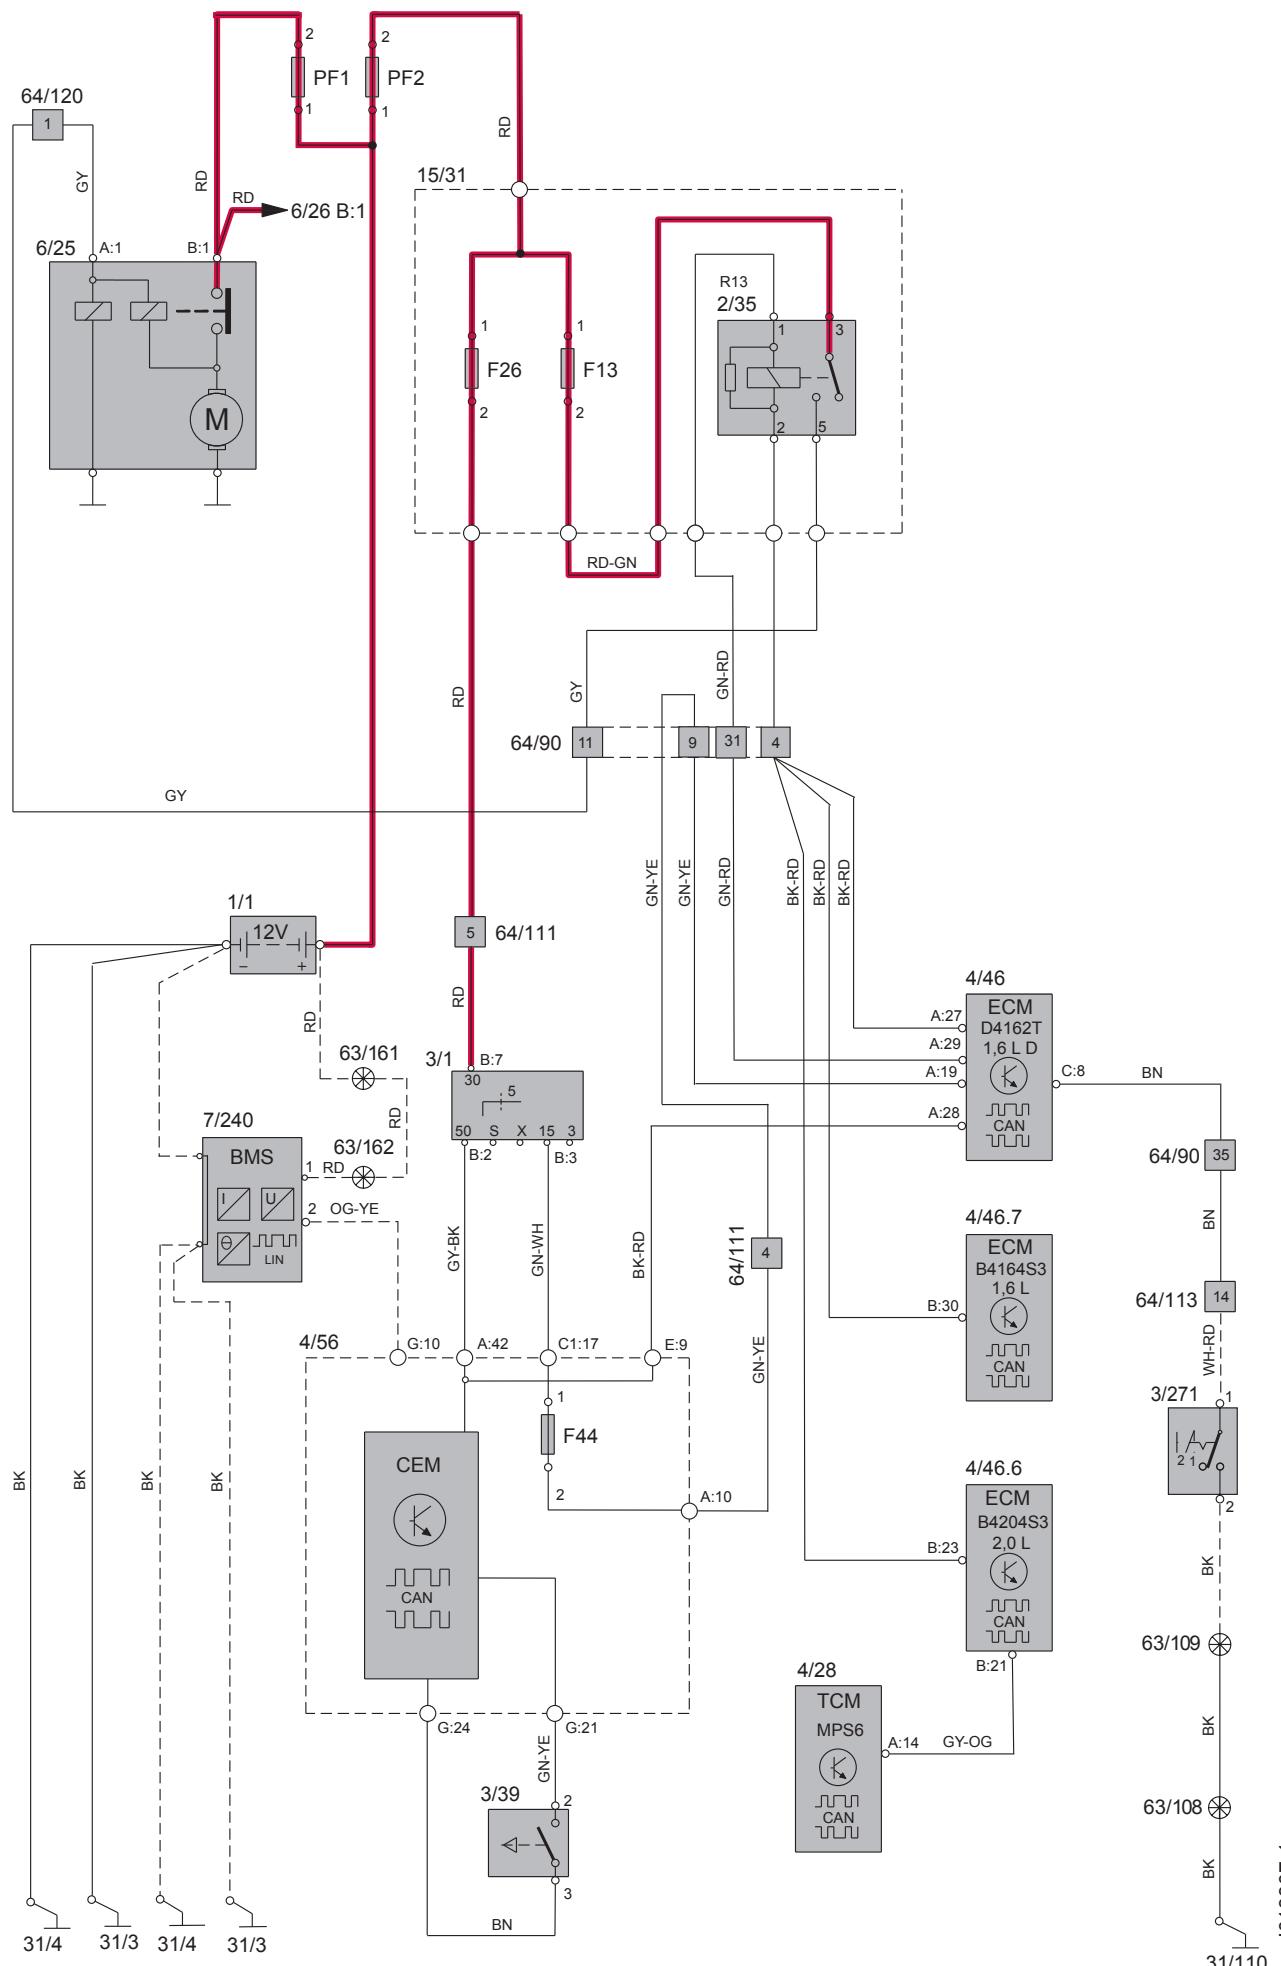


Group 33 Starting system

Starting system 5-Cyl.

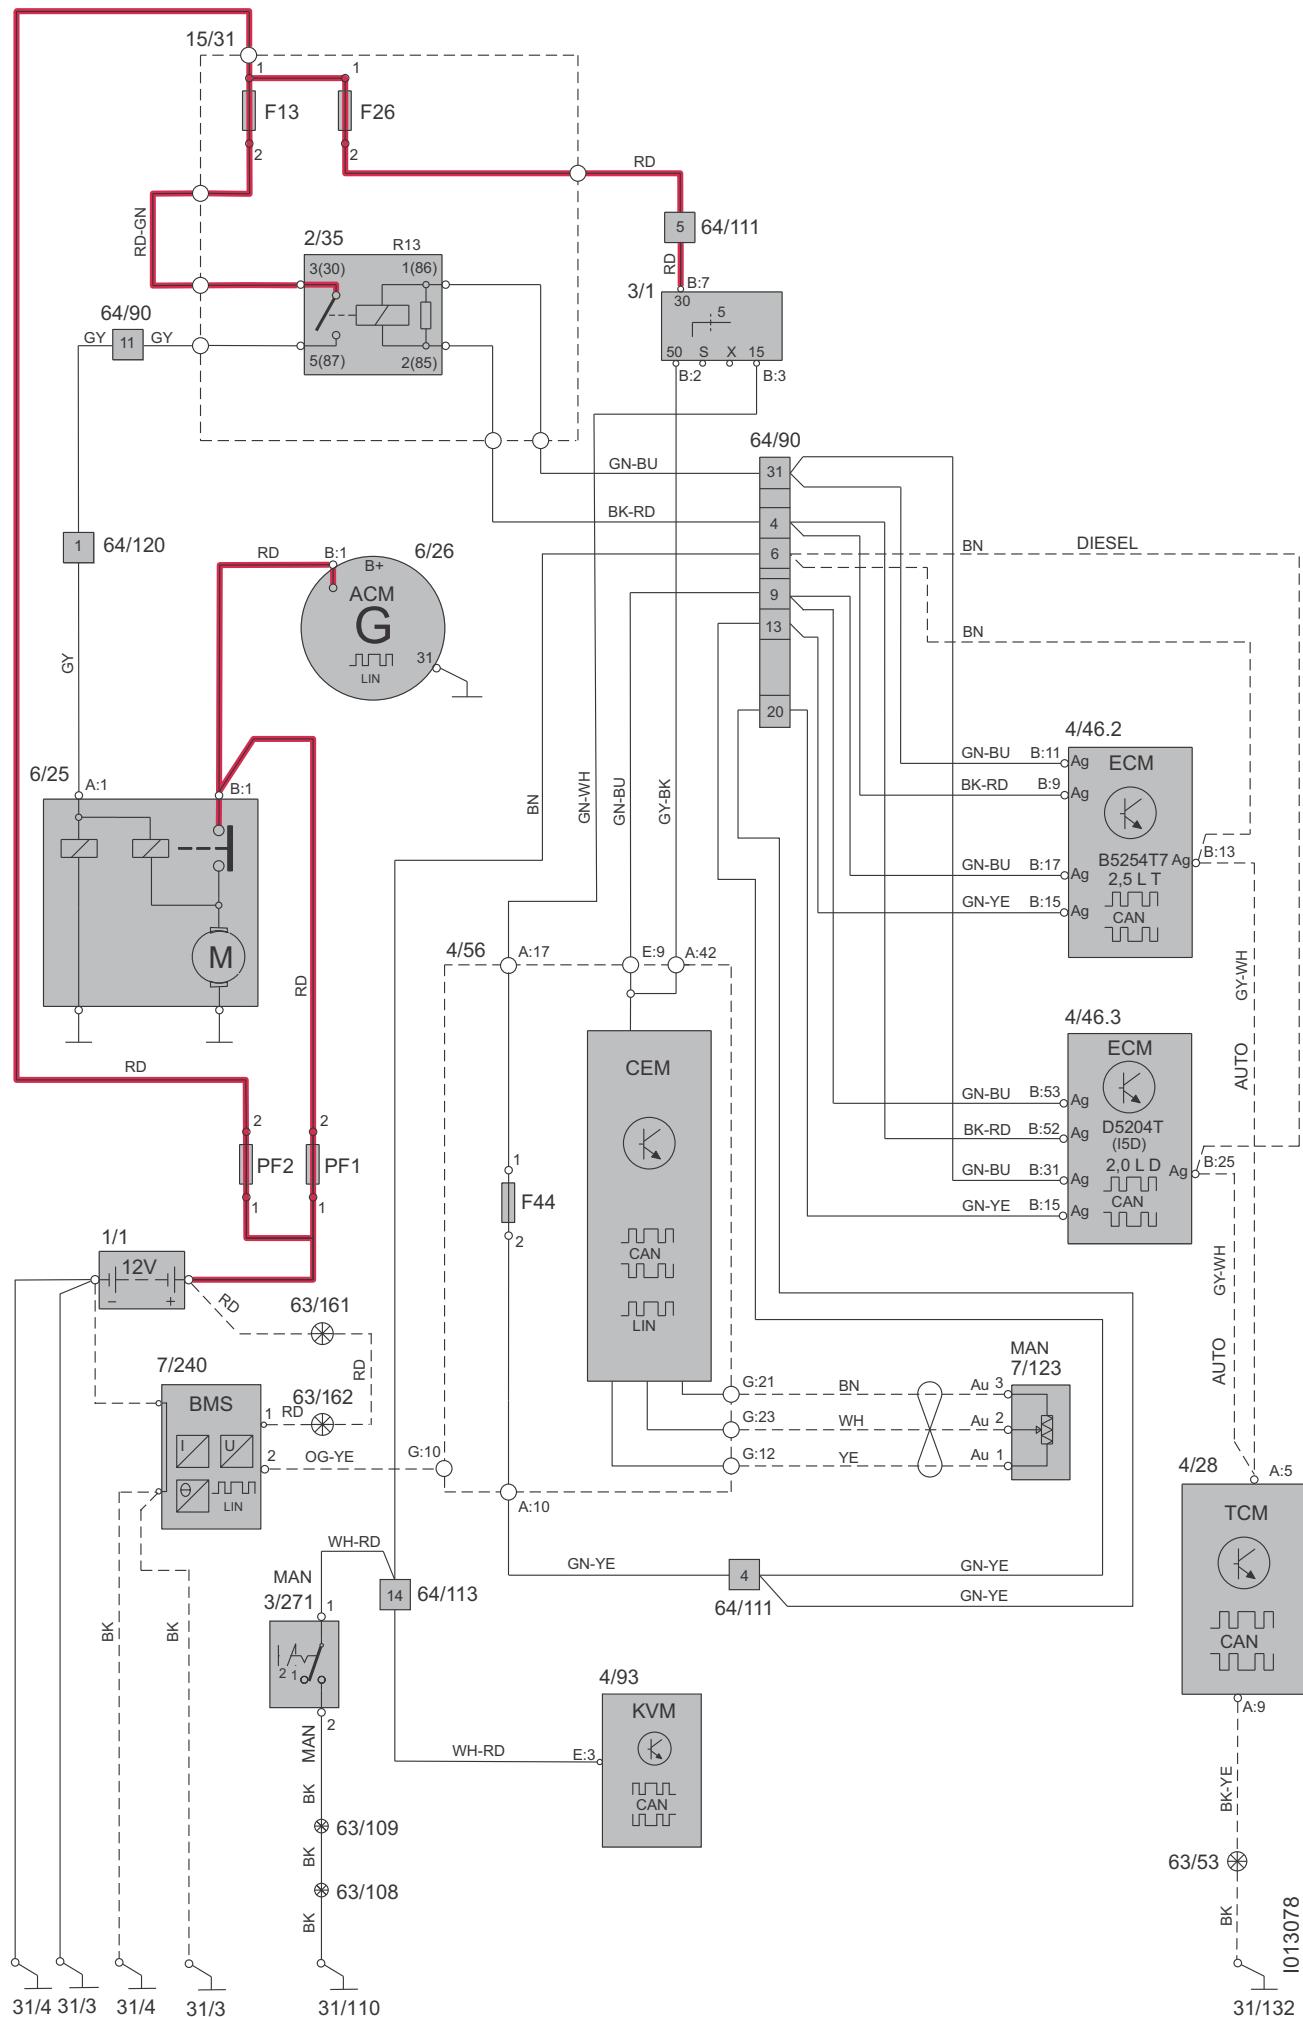


Group 35 Lighting

High and low beam

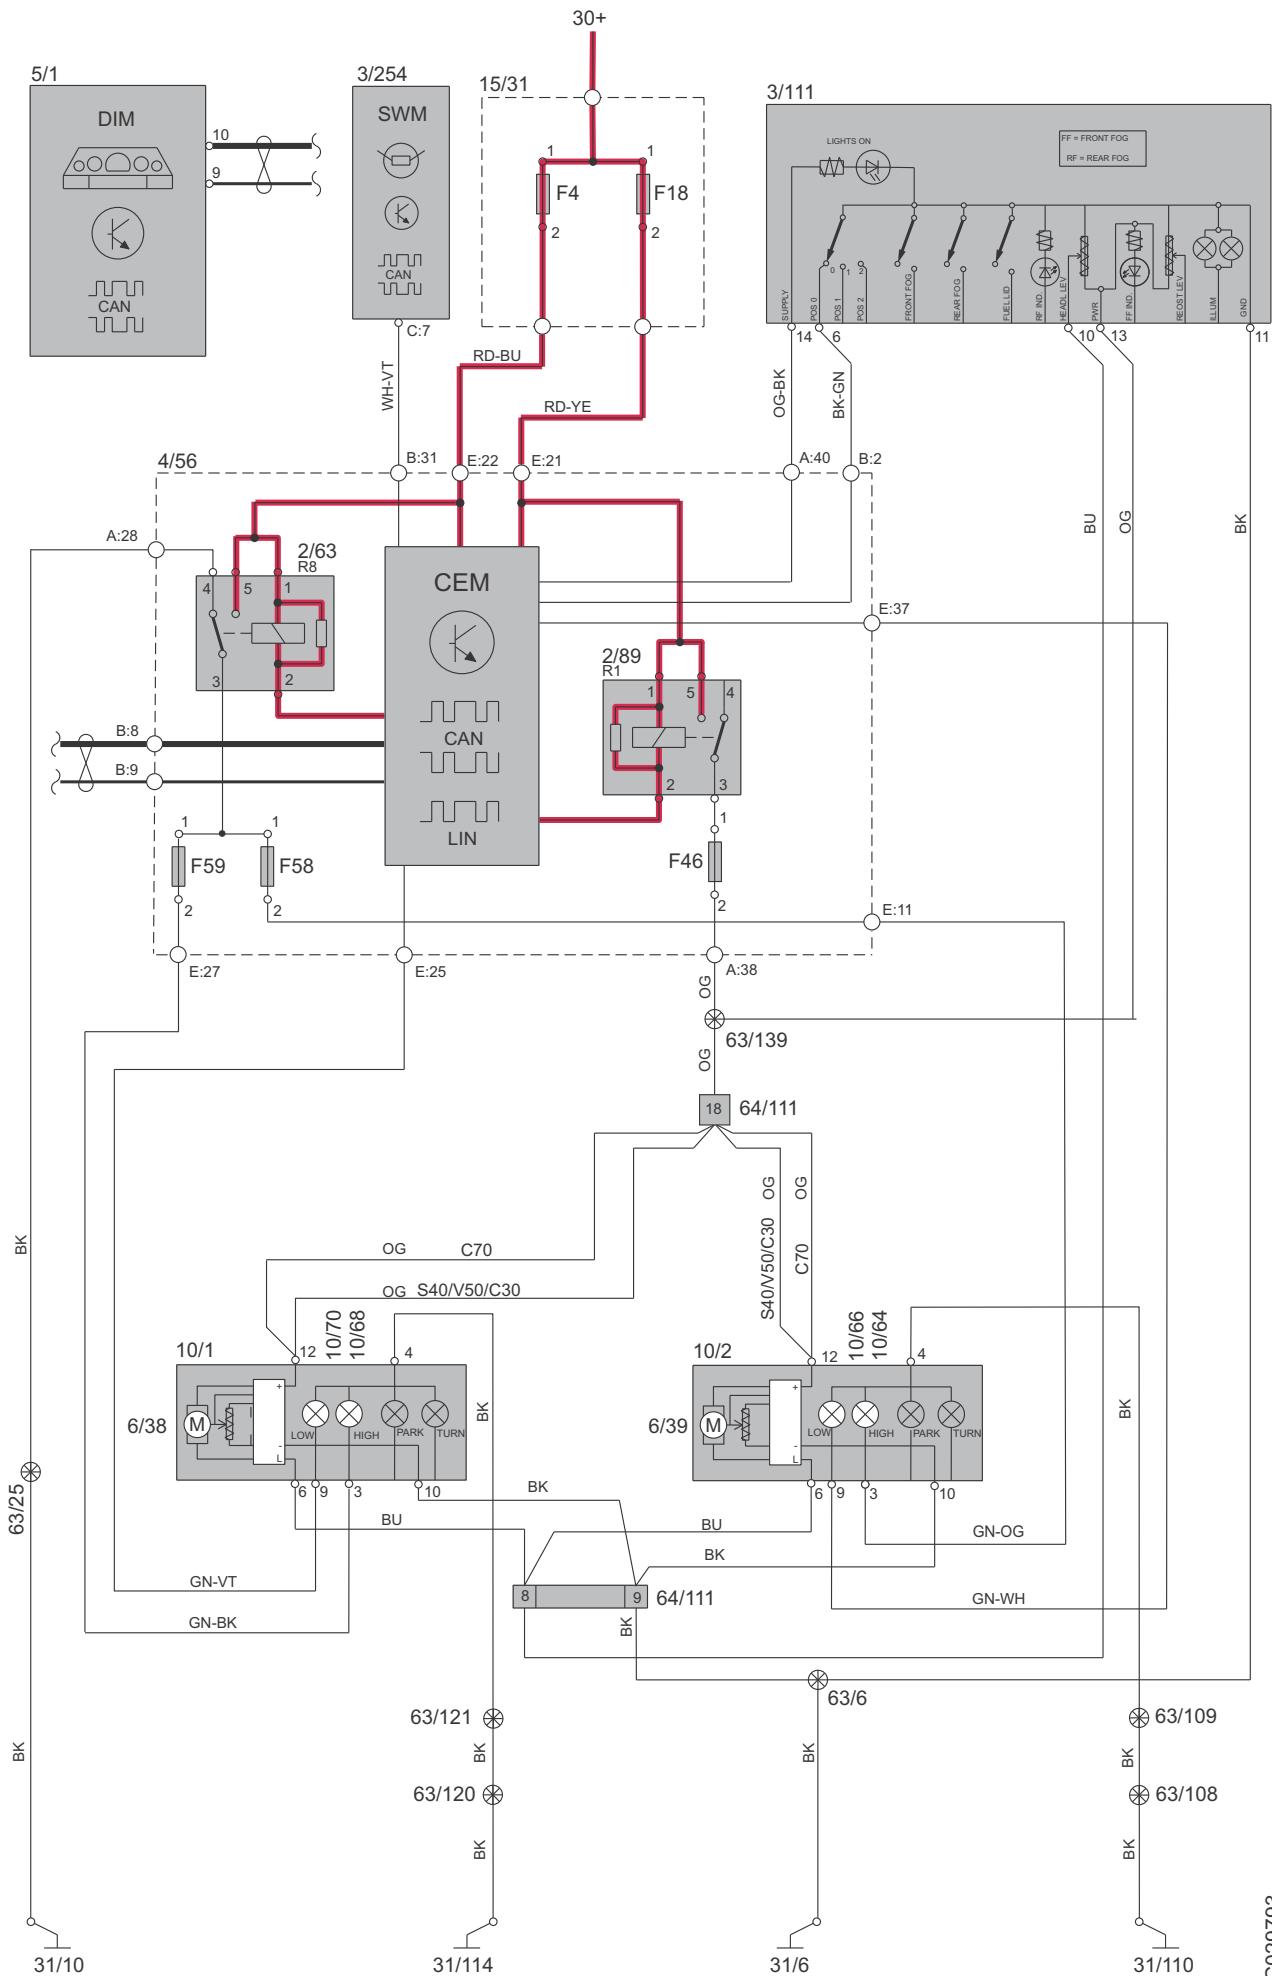


Group 35 Lighting

Active headlight, (Dual Xenon)

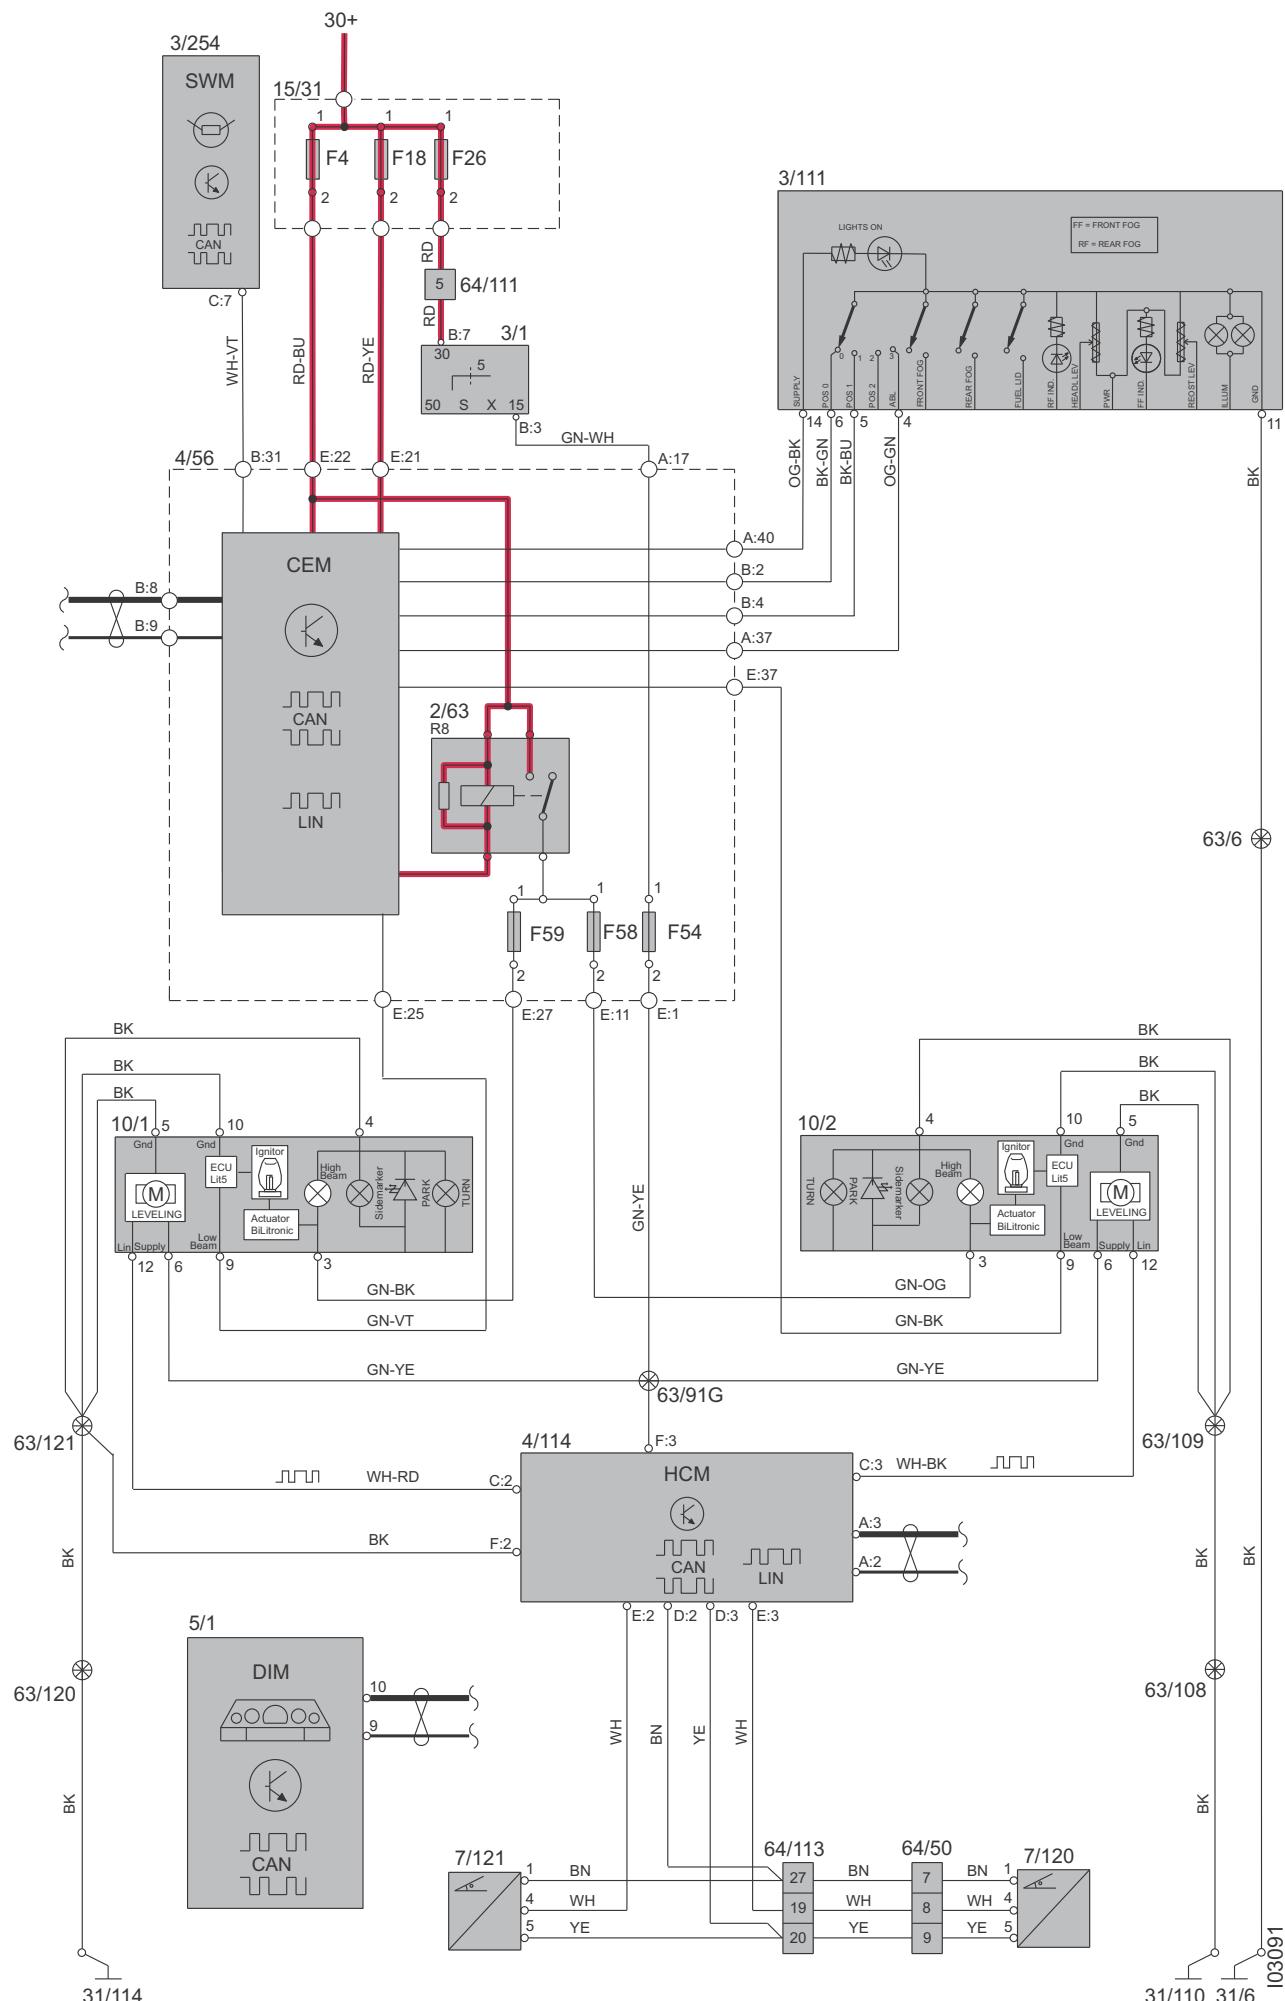


Group 35 Lighting

Running/Parking light, Tail lights S40/V50

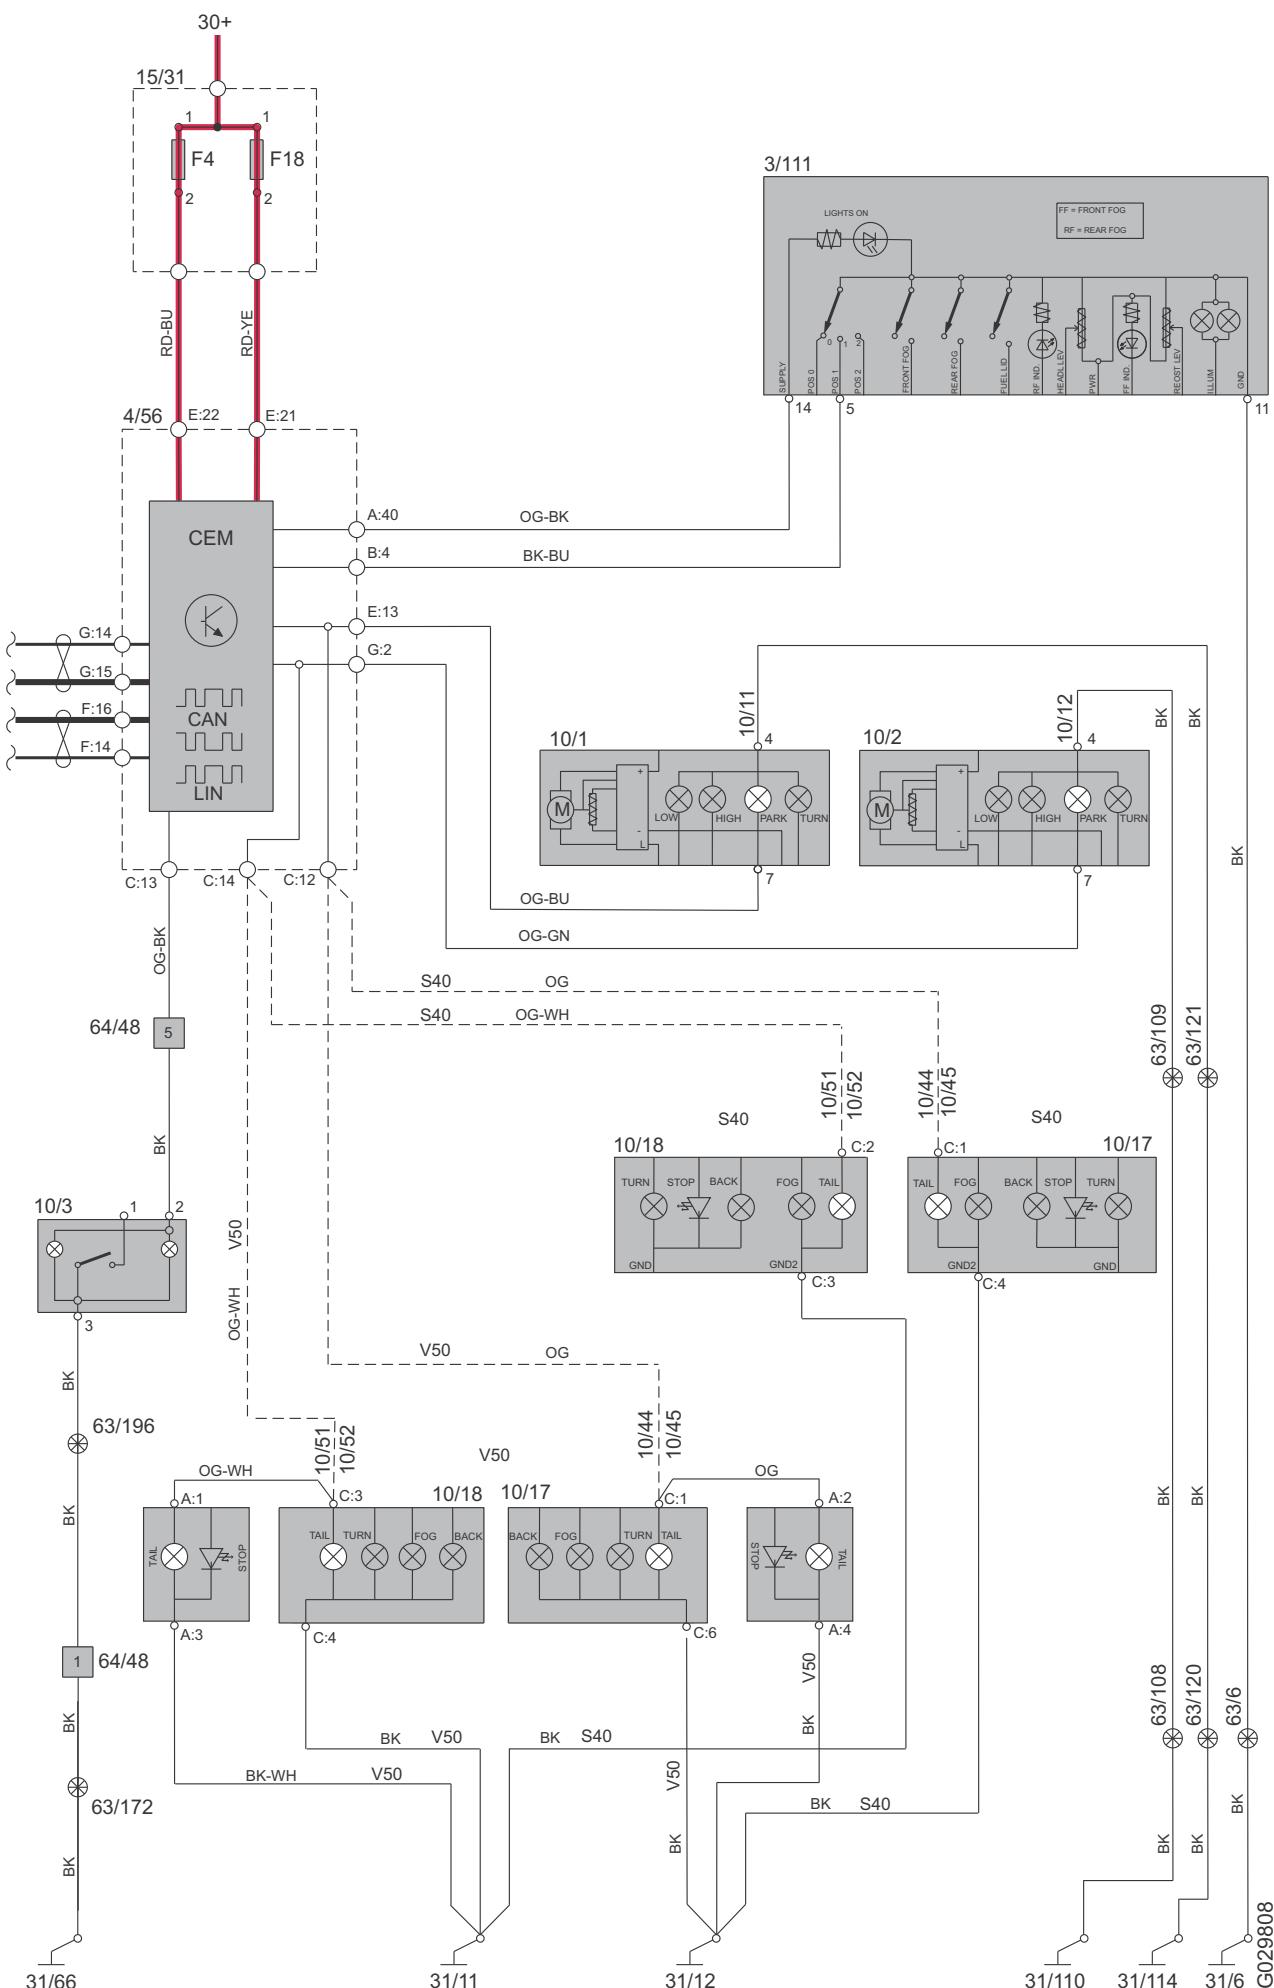


Group 35 Lighting

Running/Parking light, Tail lights (Dual Xenon) S40/V50

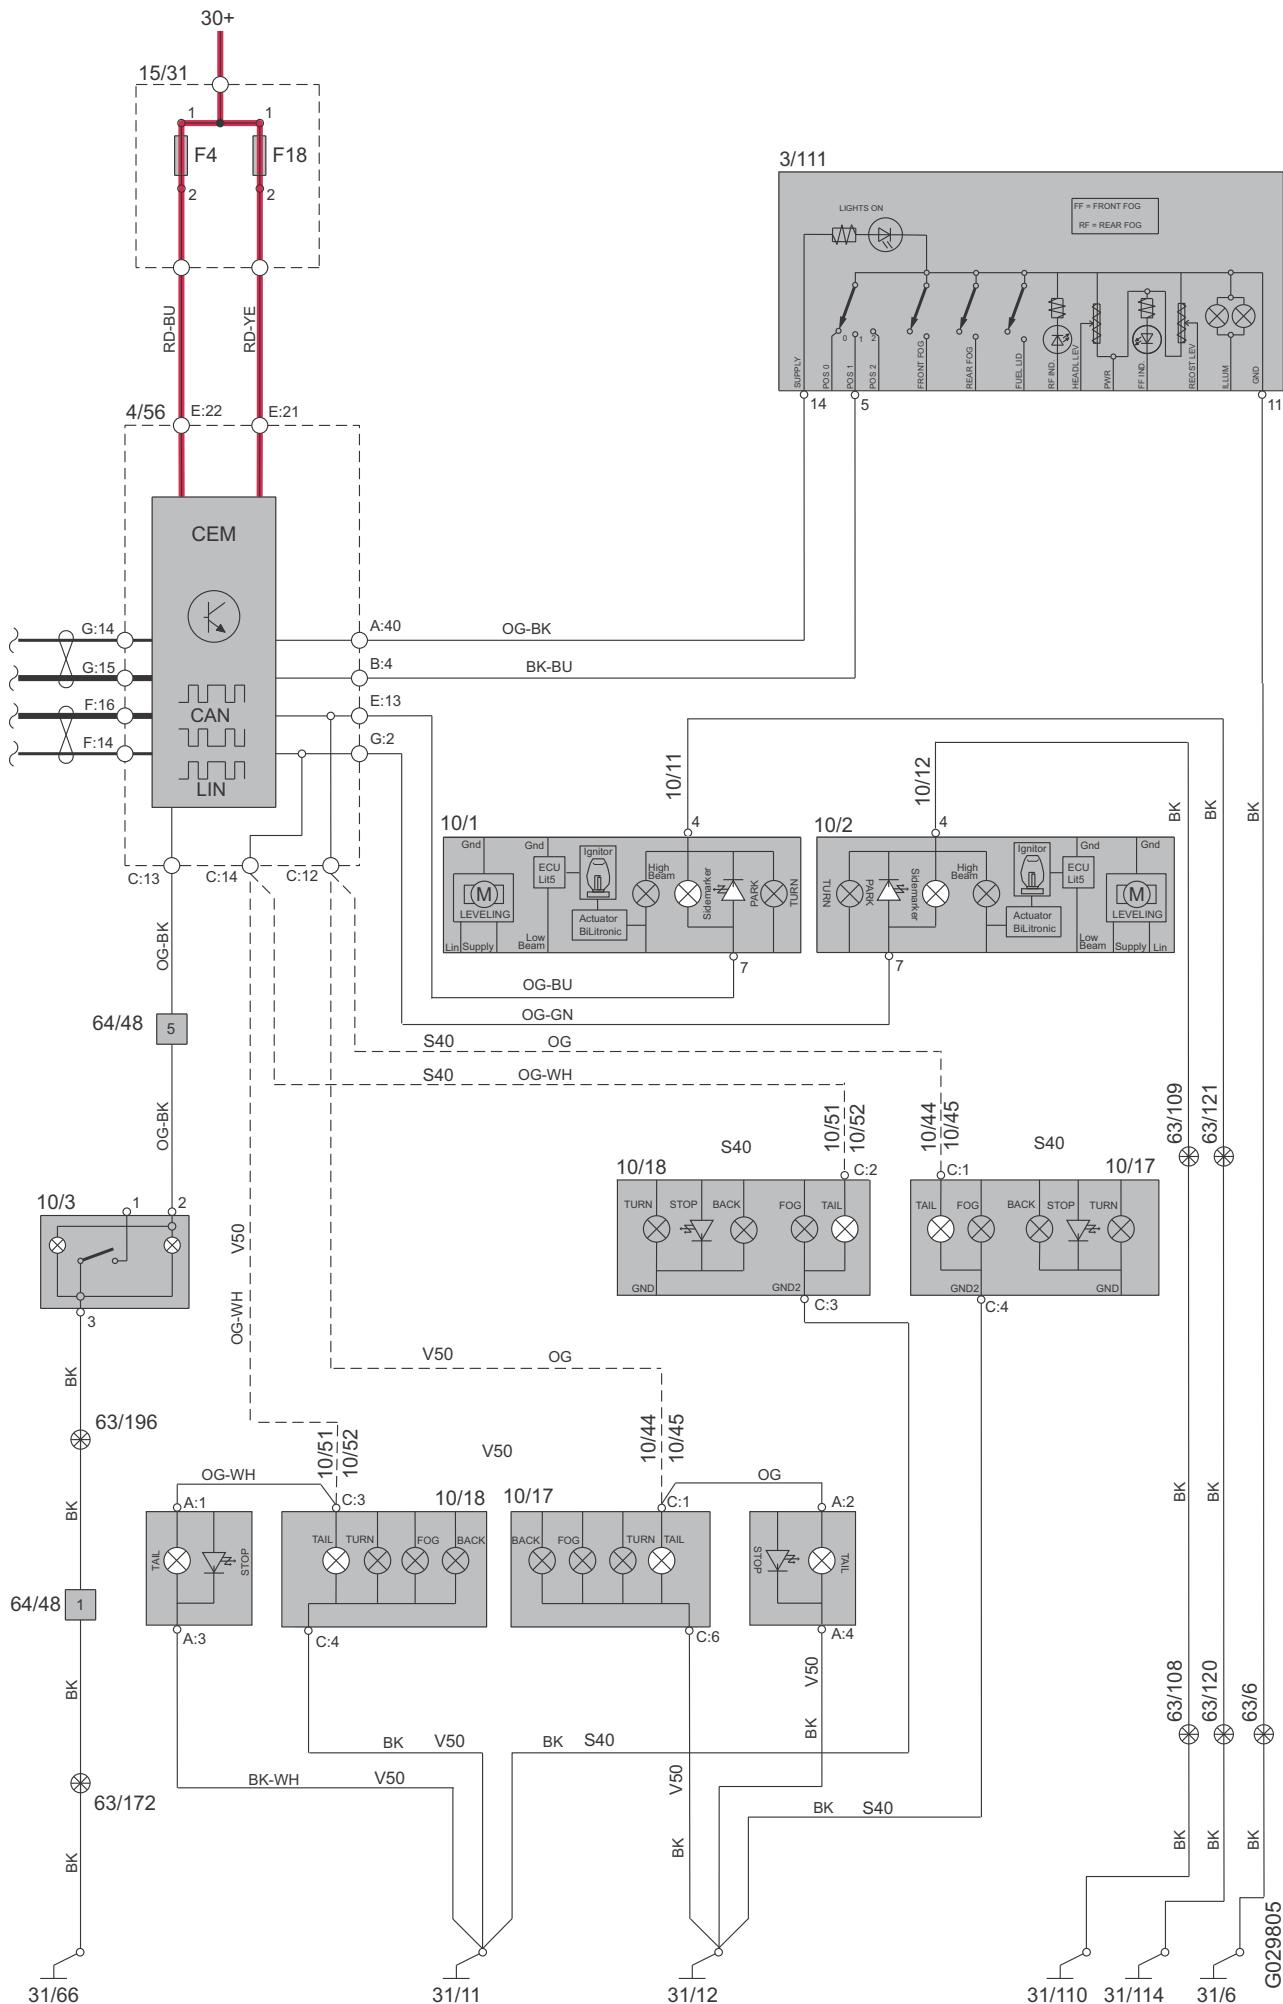


Group 35 Lighting

Running/Parking lights, Tail lights C30/C70

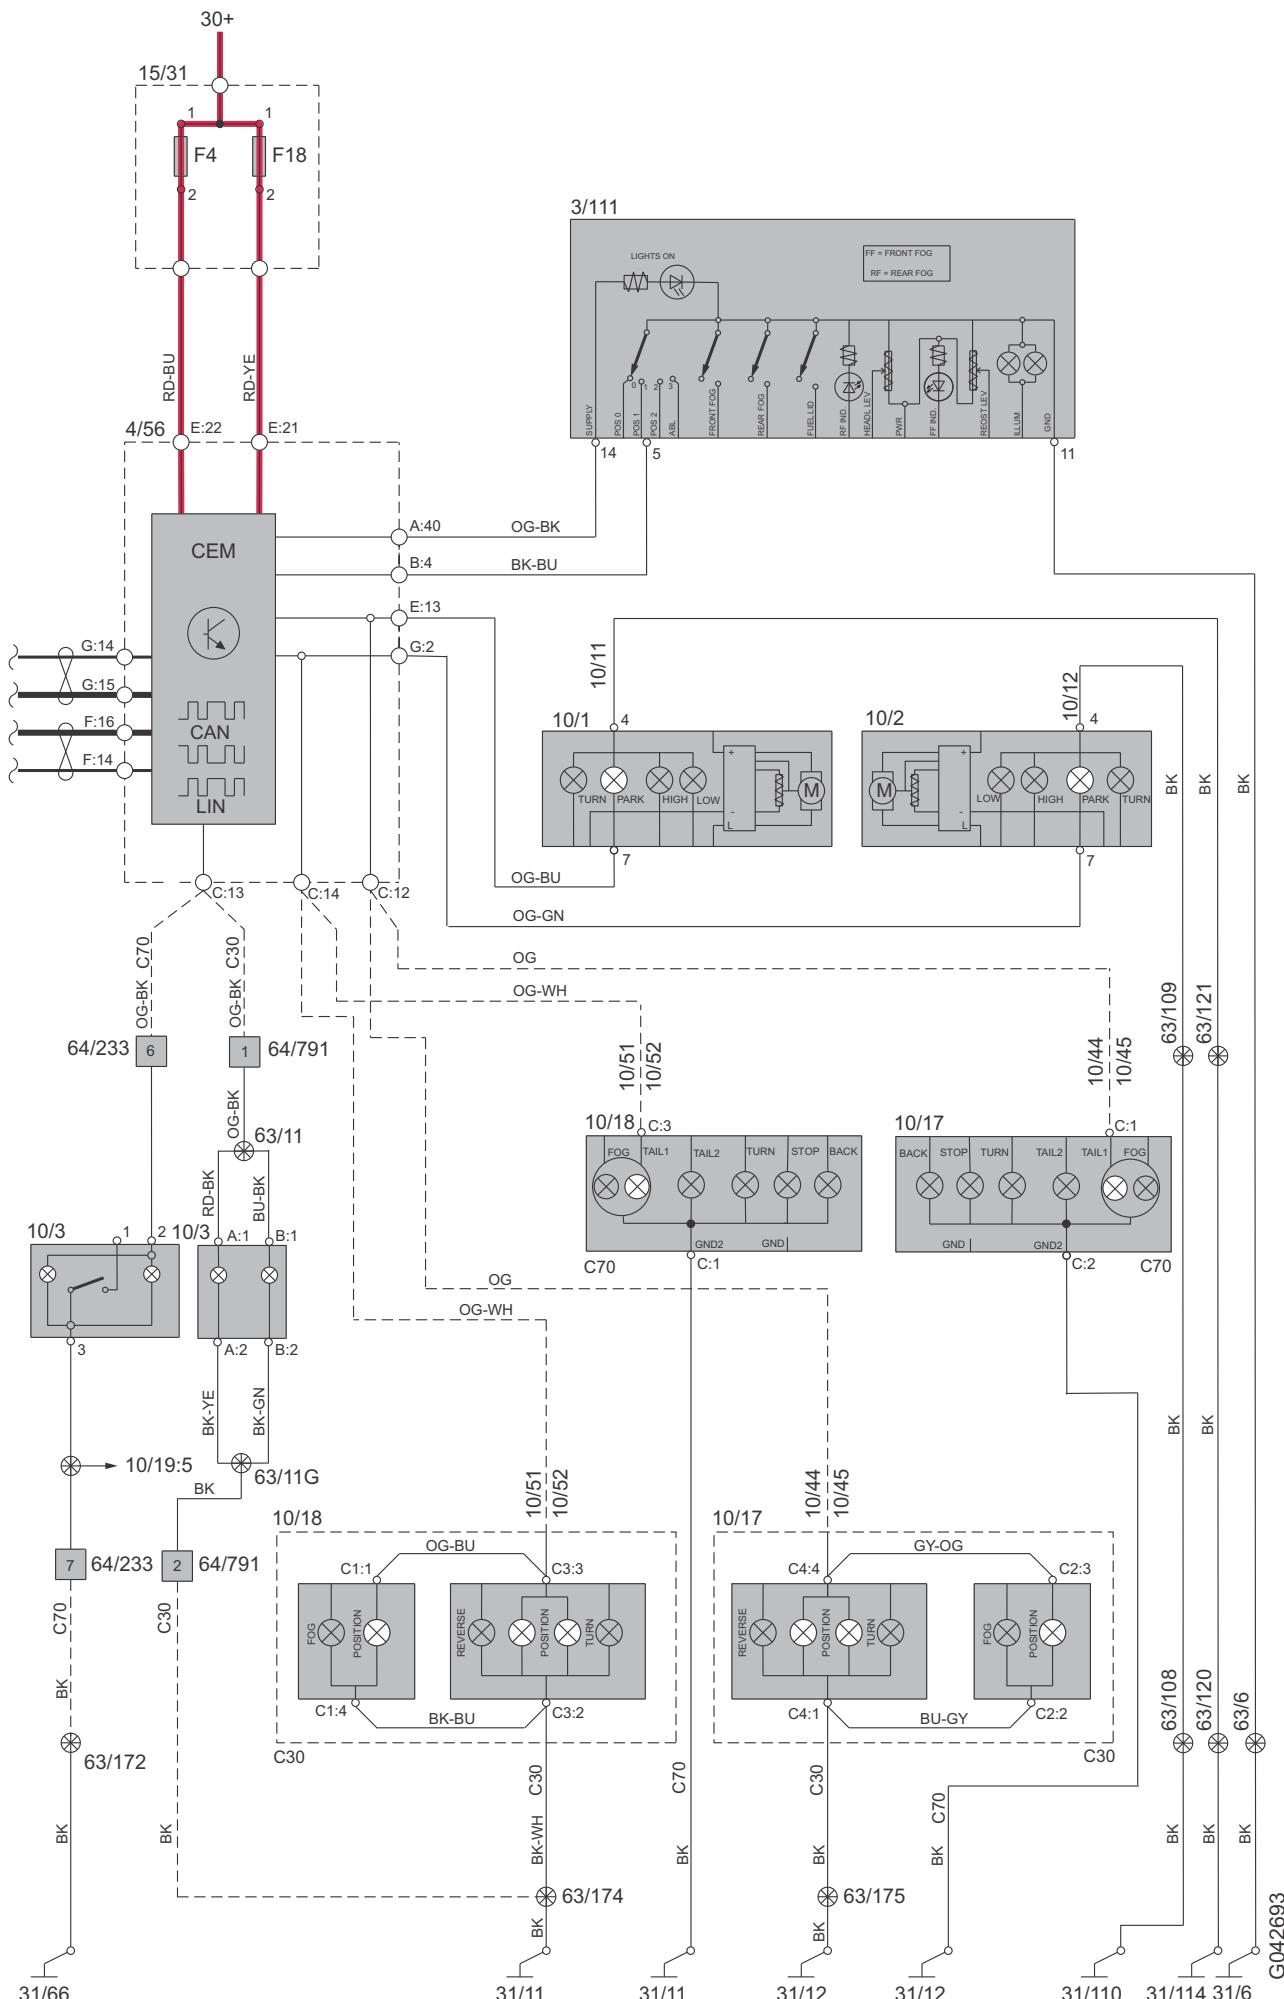


Group 35 Lighting

Running/Parking lights, Tail lights (Dual Xenon) C30/C70

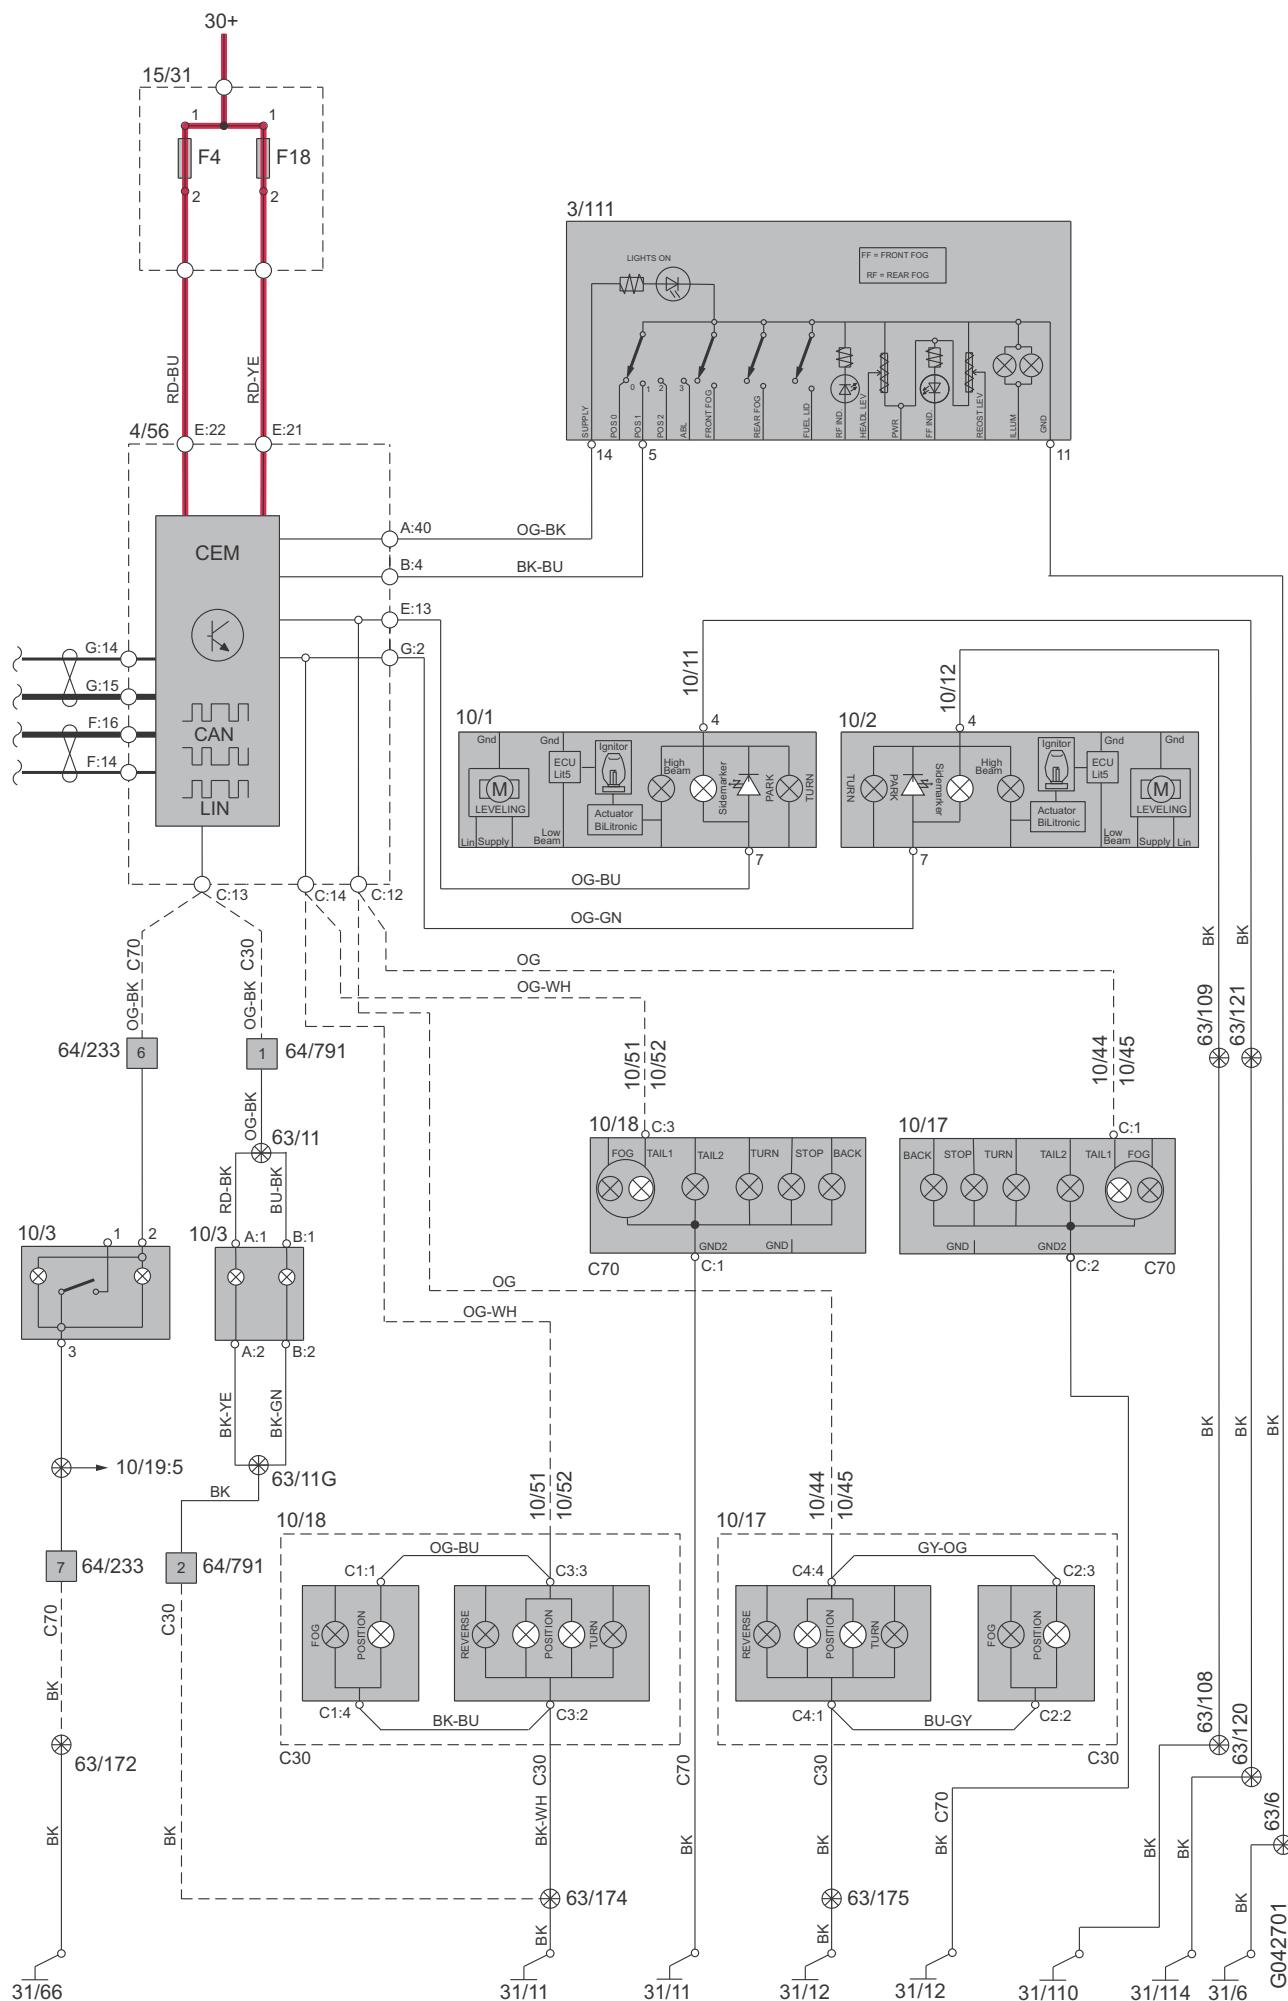


Group 35 Lighting

Brake lights S40/V50

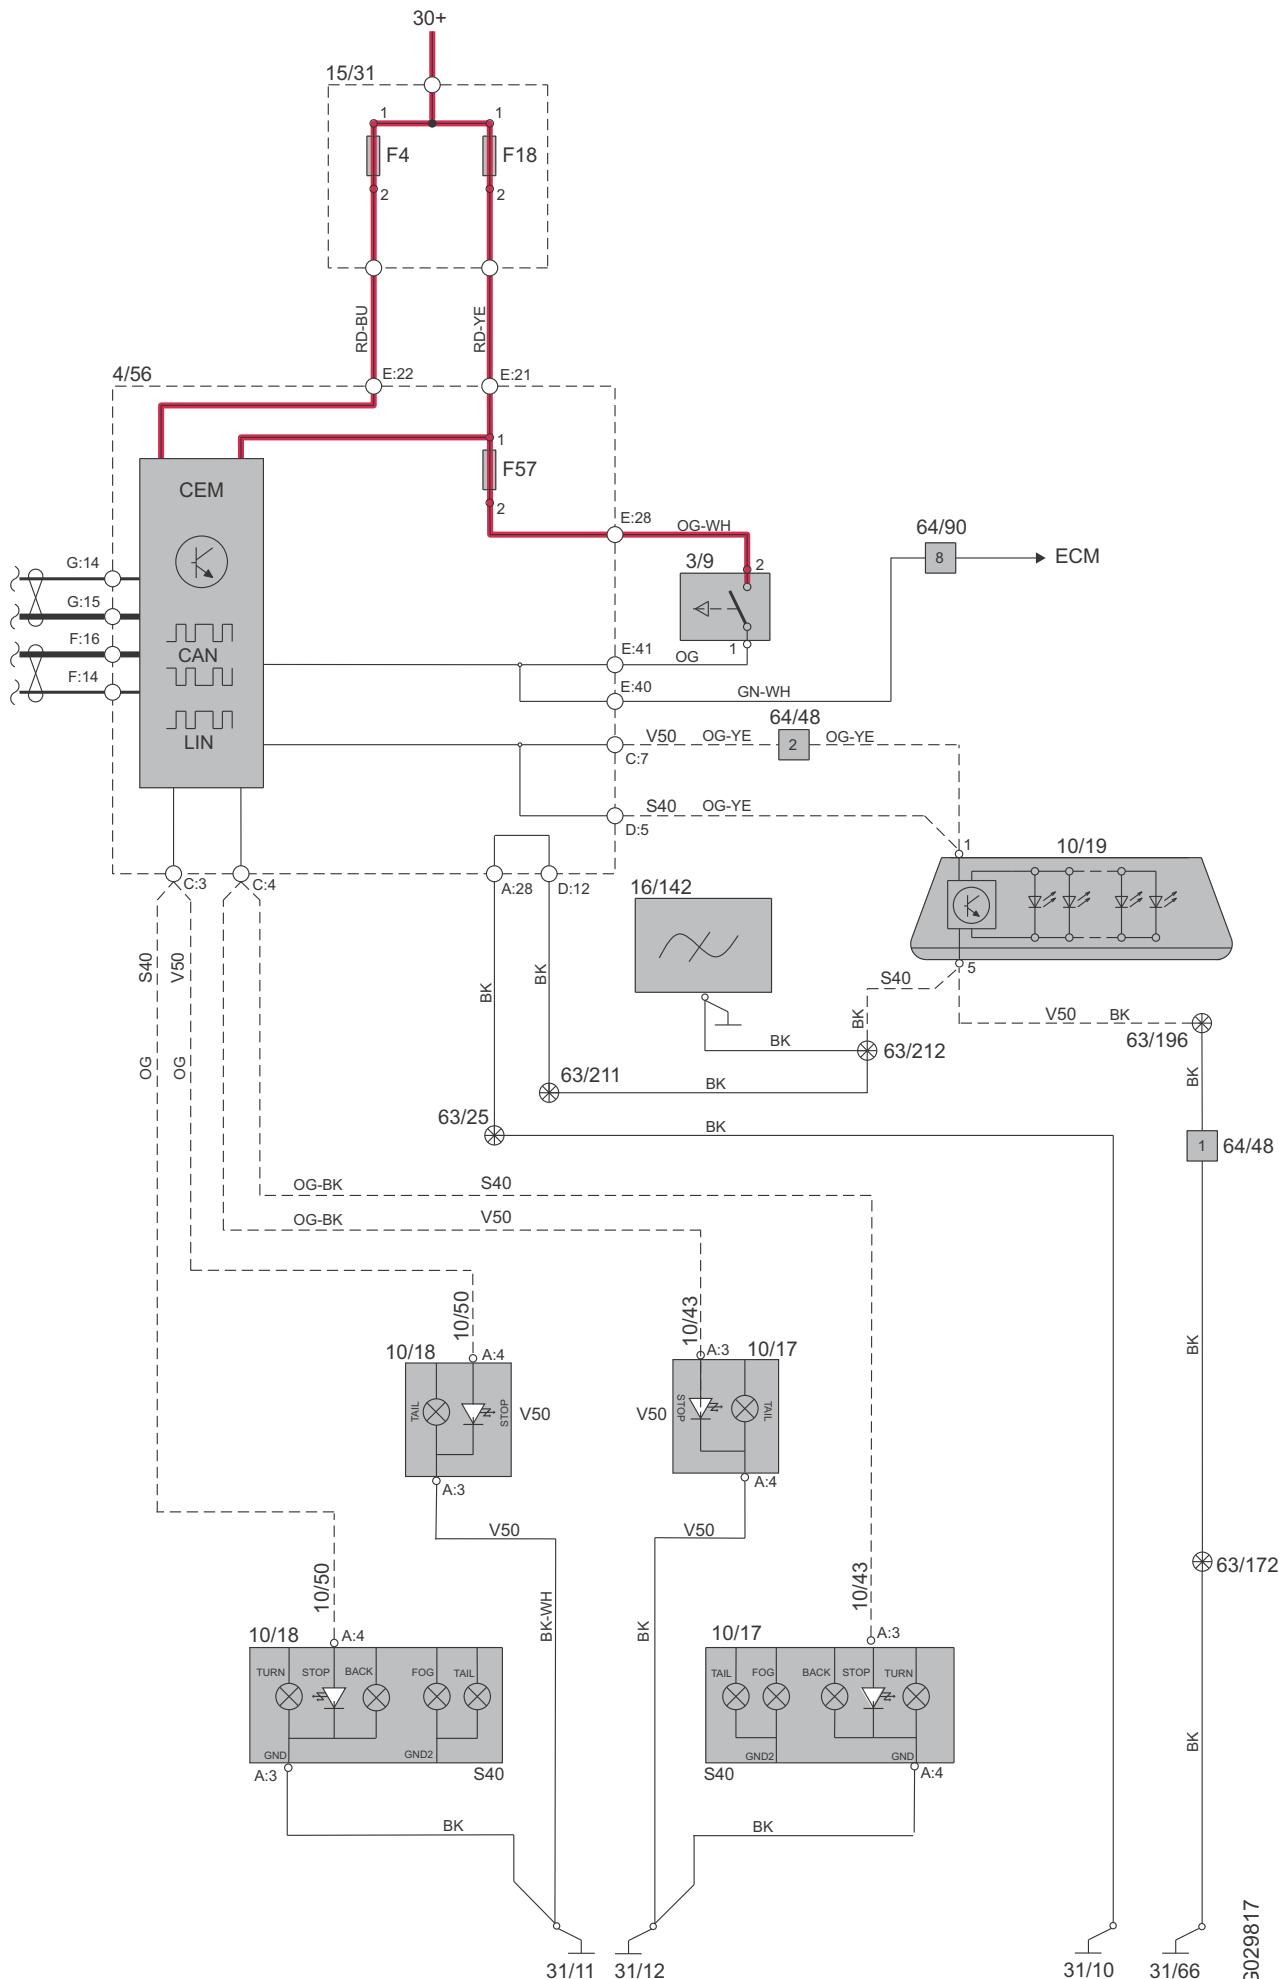


Group 35 Lighting

Brake lights C30/C70

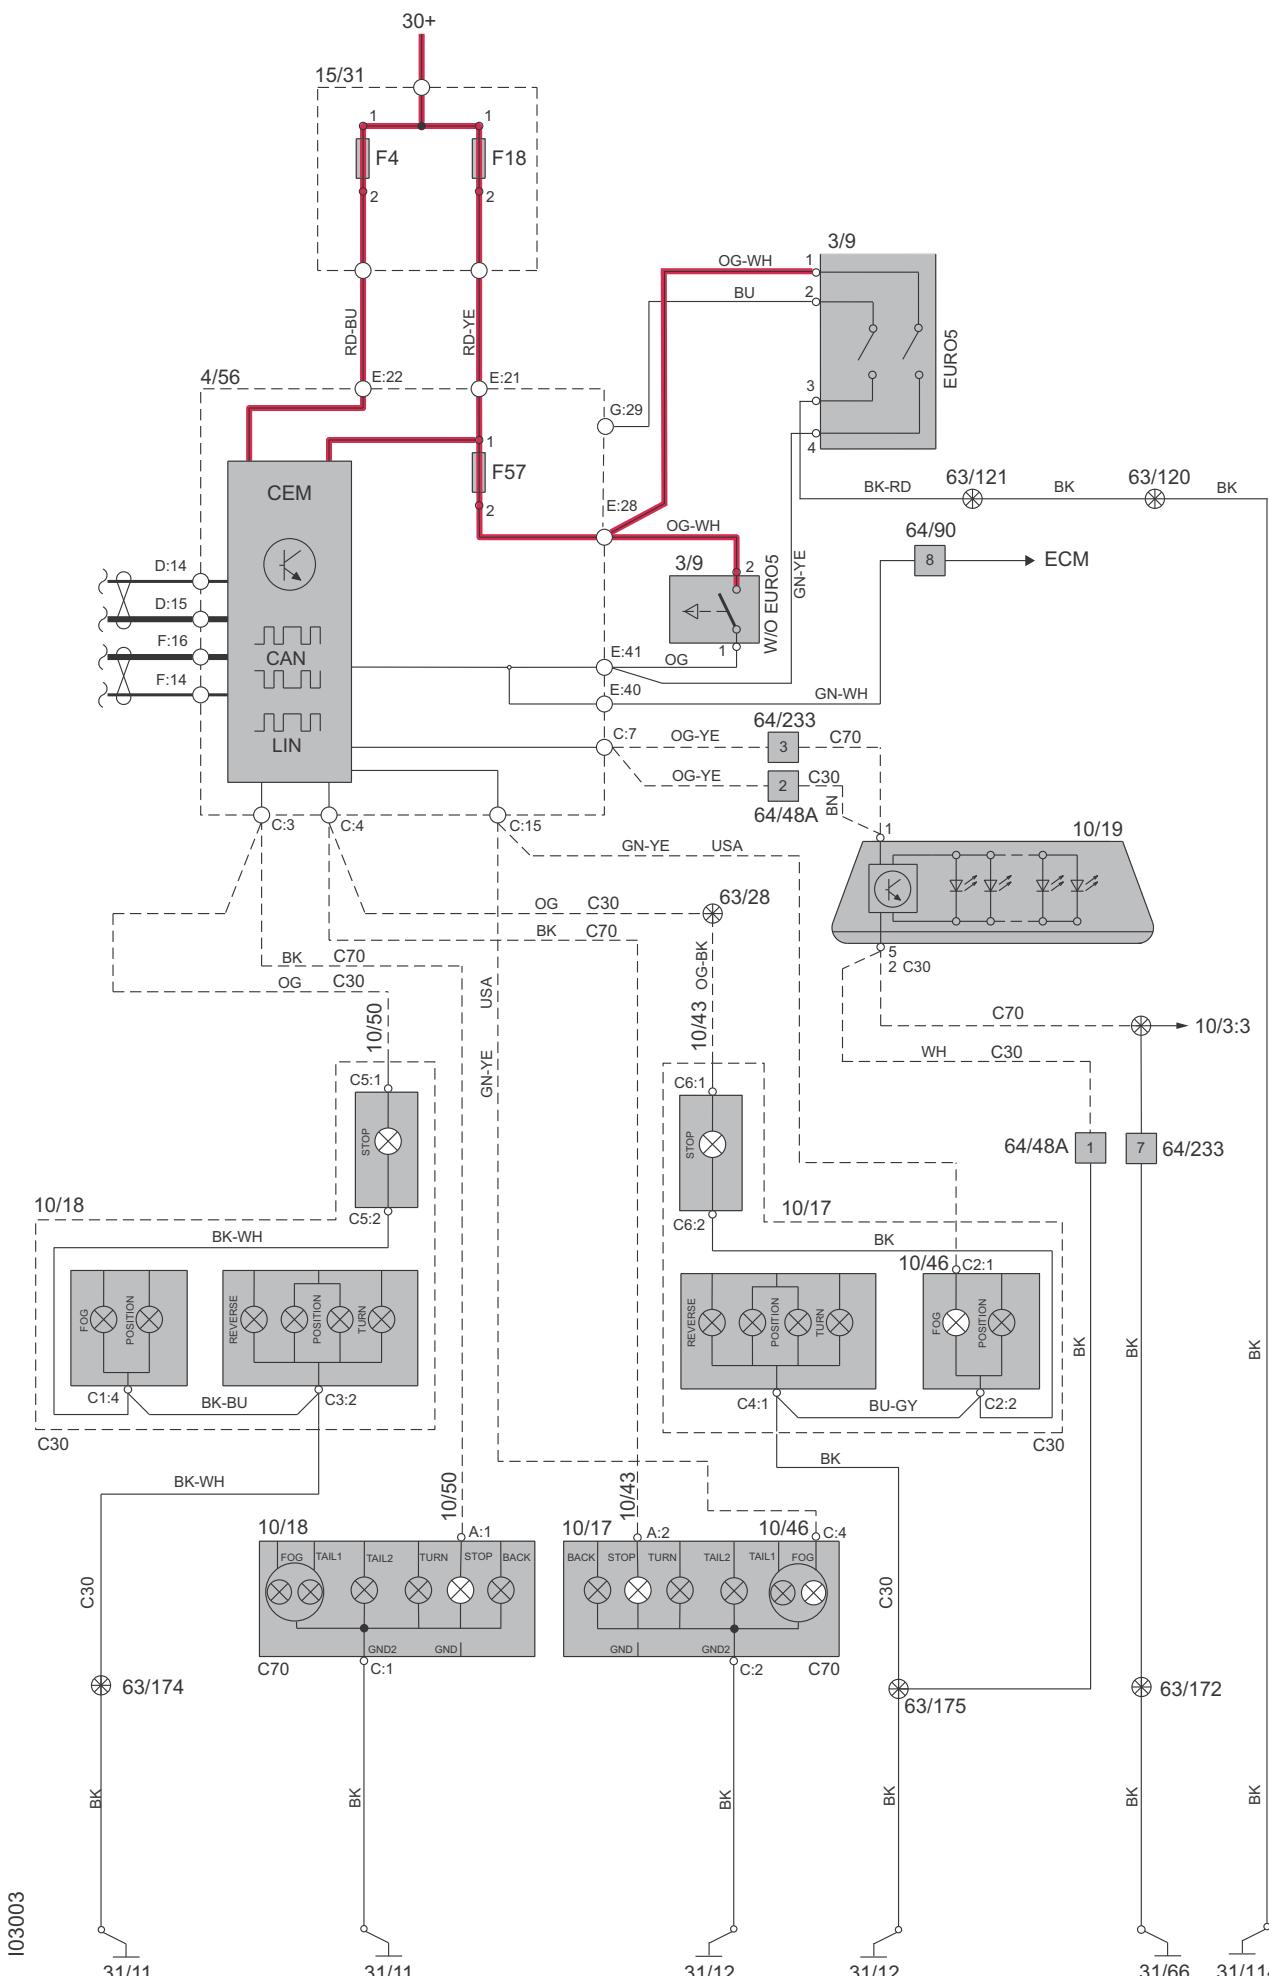


Group 35 Lighting

Reversing lights S40/V50

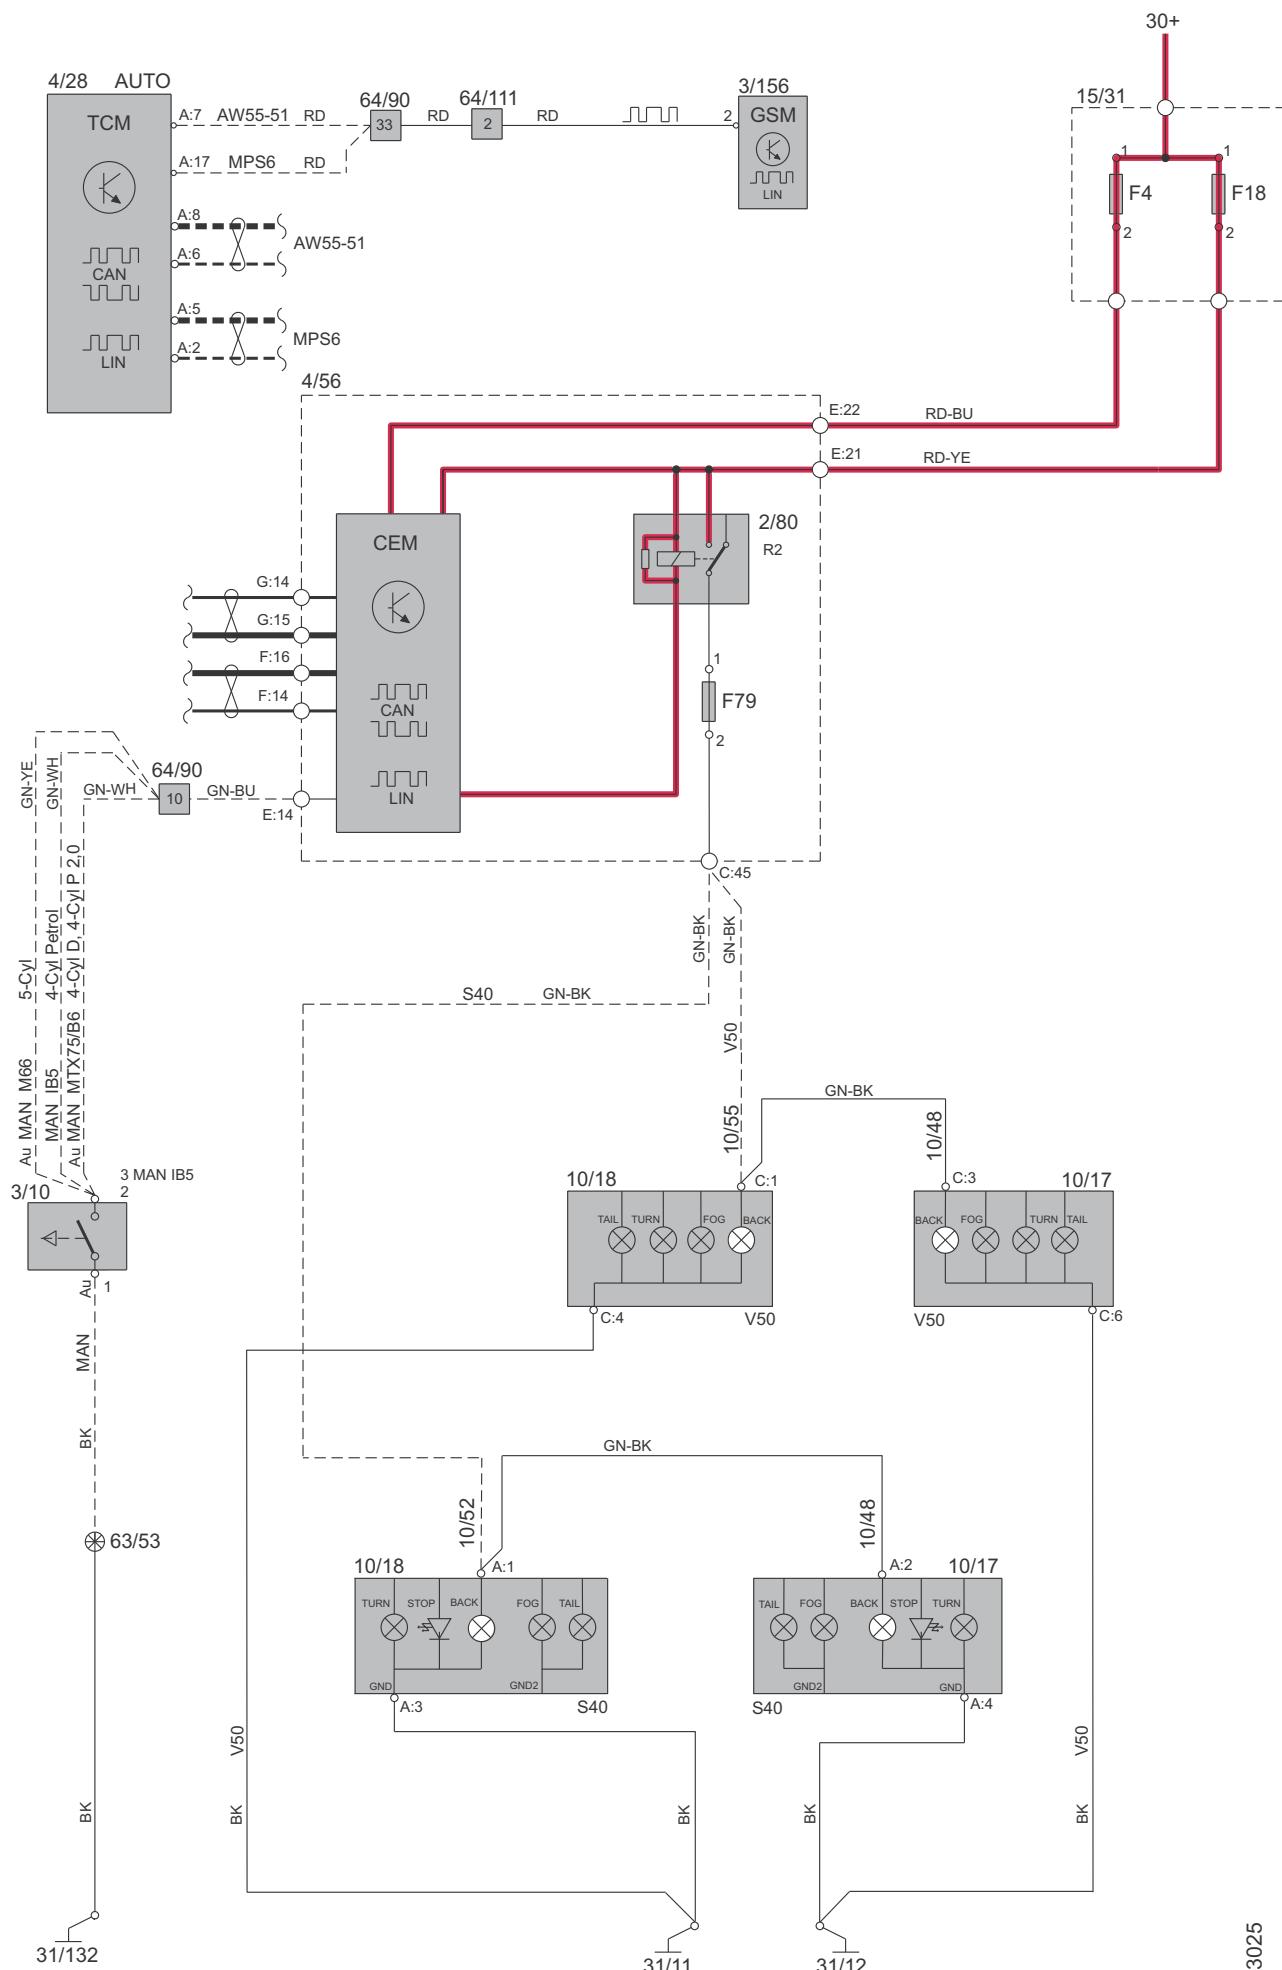


Group 35 Lighting

Reversing lights C30/C70

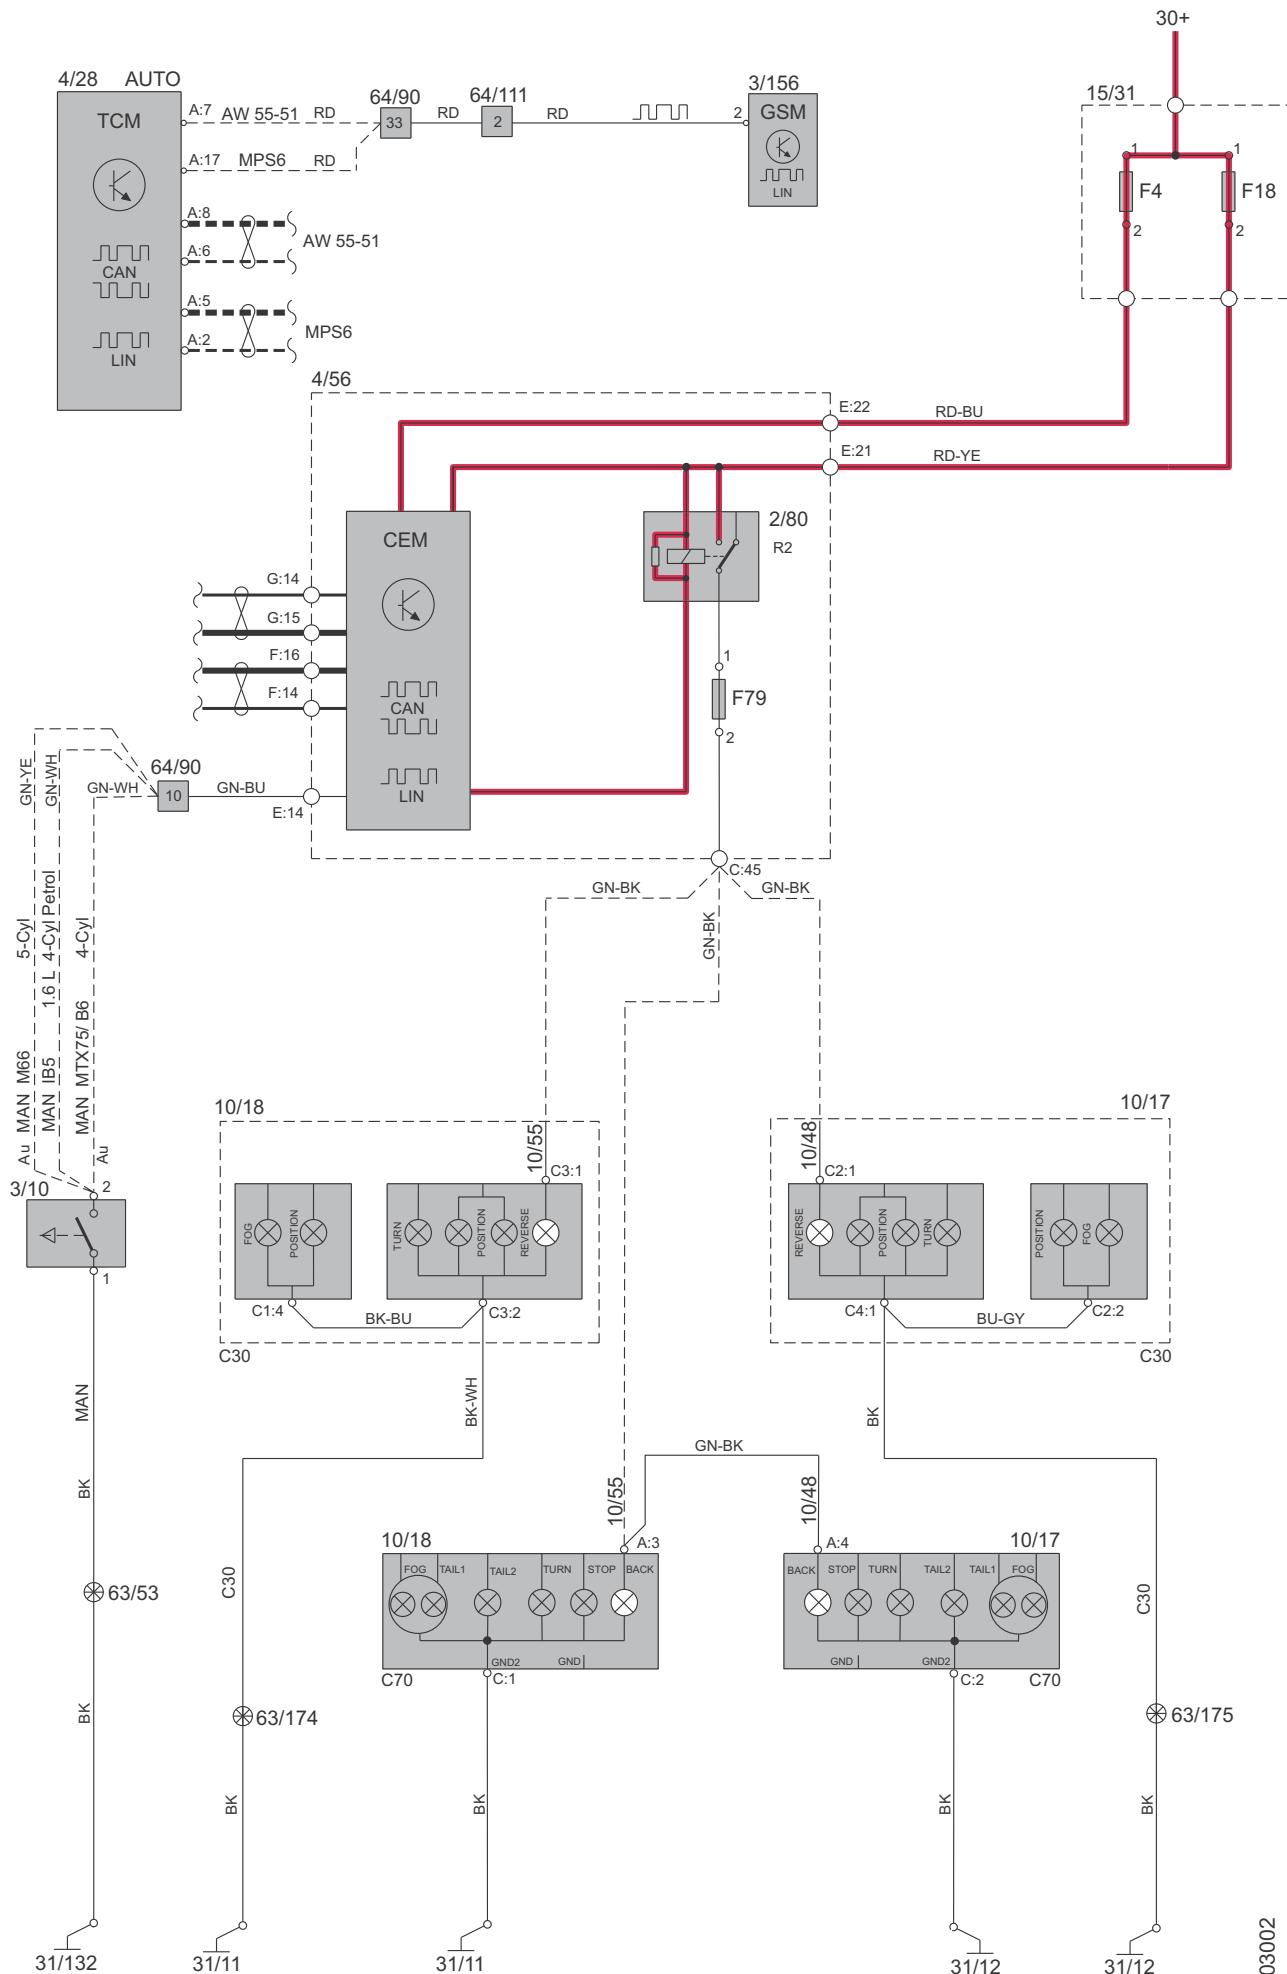


Group 35 Lighting

Fog lights S40/V50

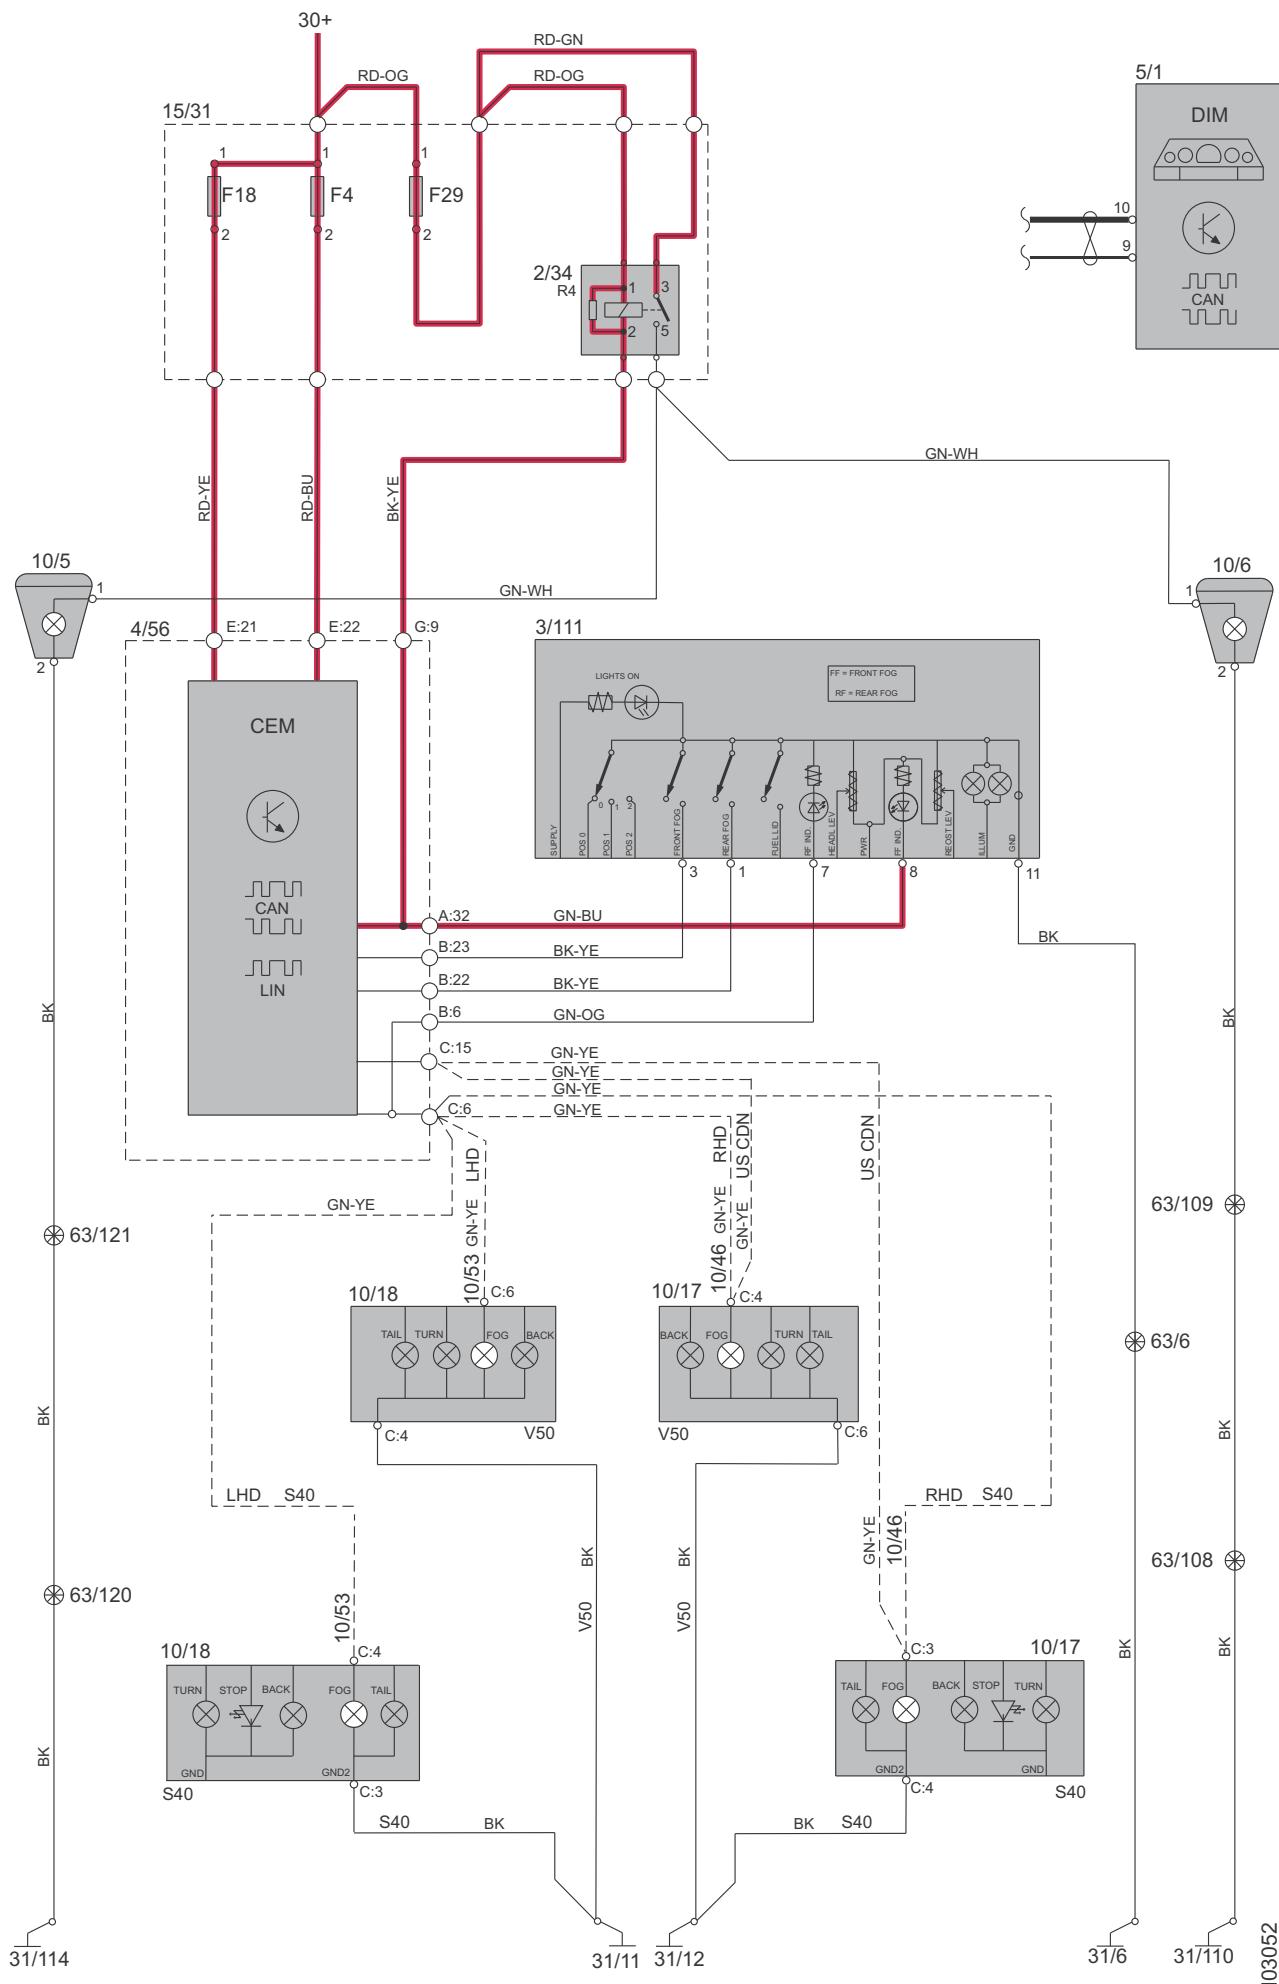


Group 35 Lighting

Fog lights C30/C70

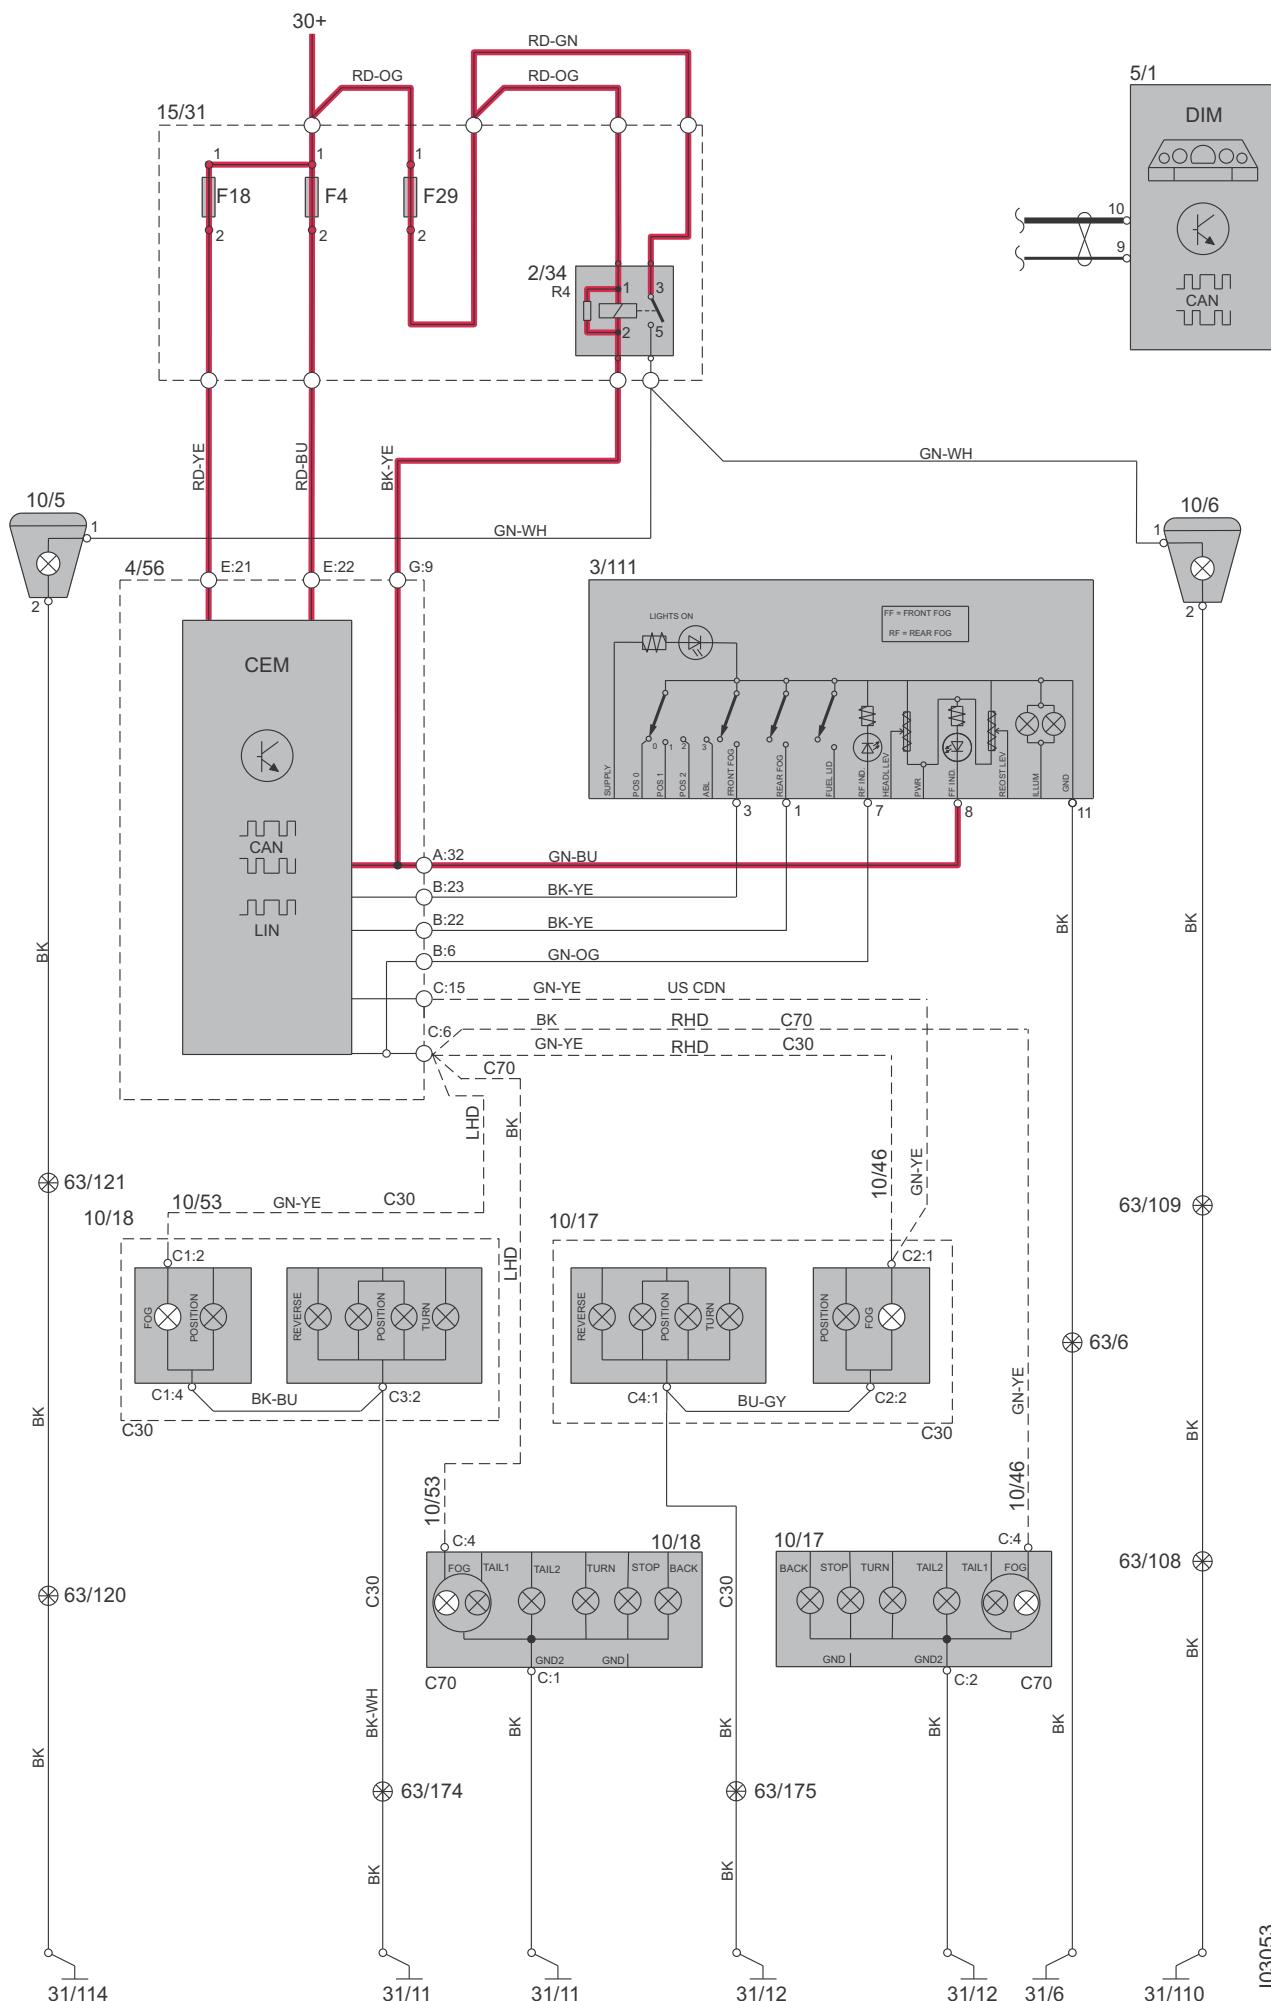


Group 35 Lighting

Fog lights RHD Japan S40/V50

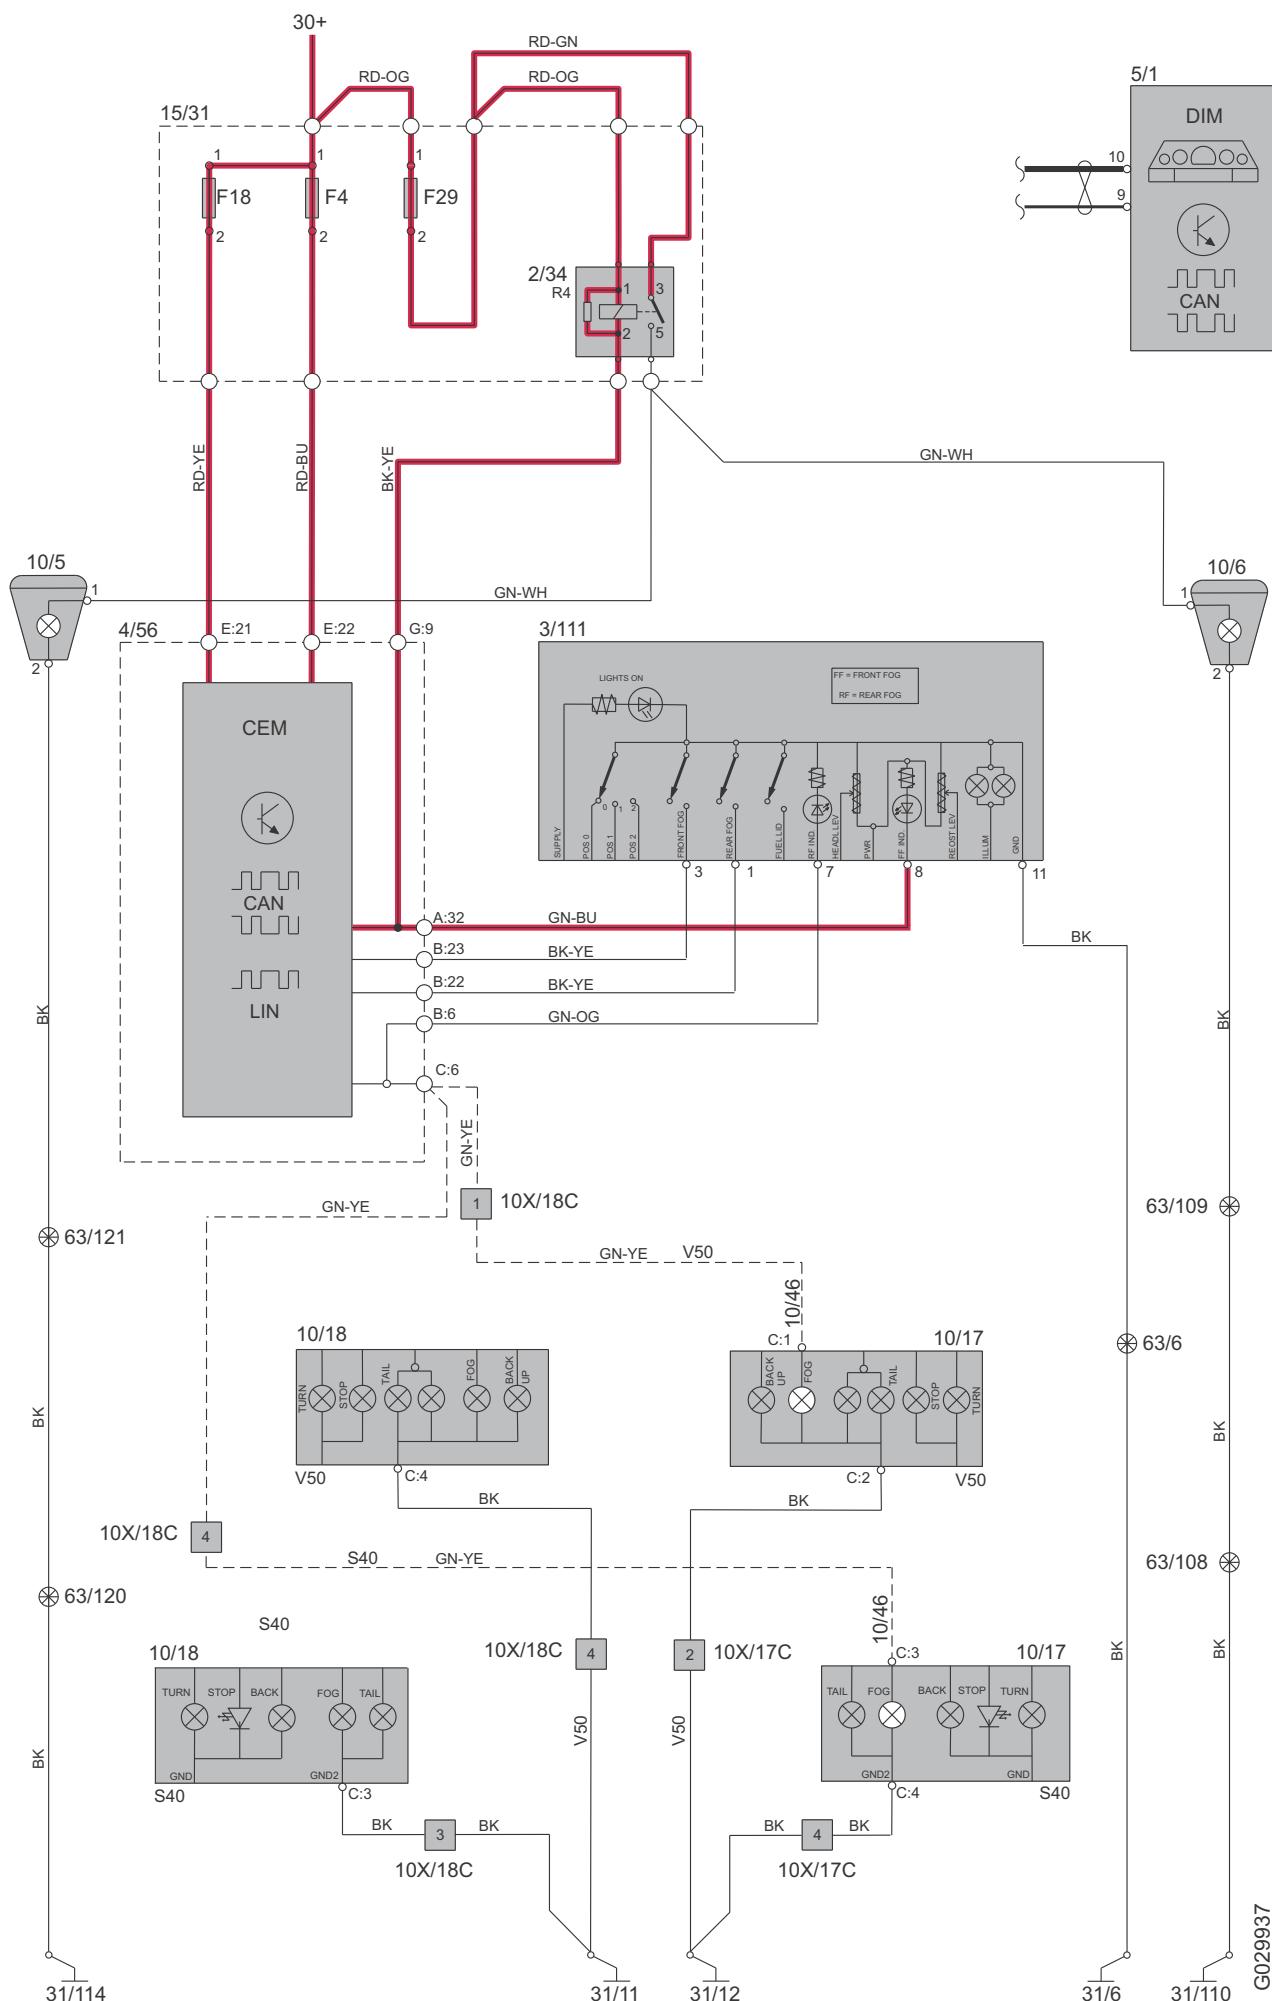


Group 35 Lighting

Fog lights RHD Japan C30/C70

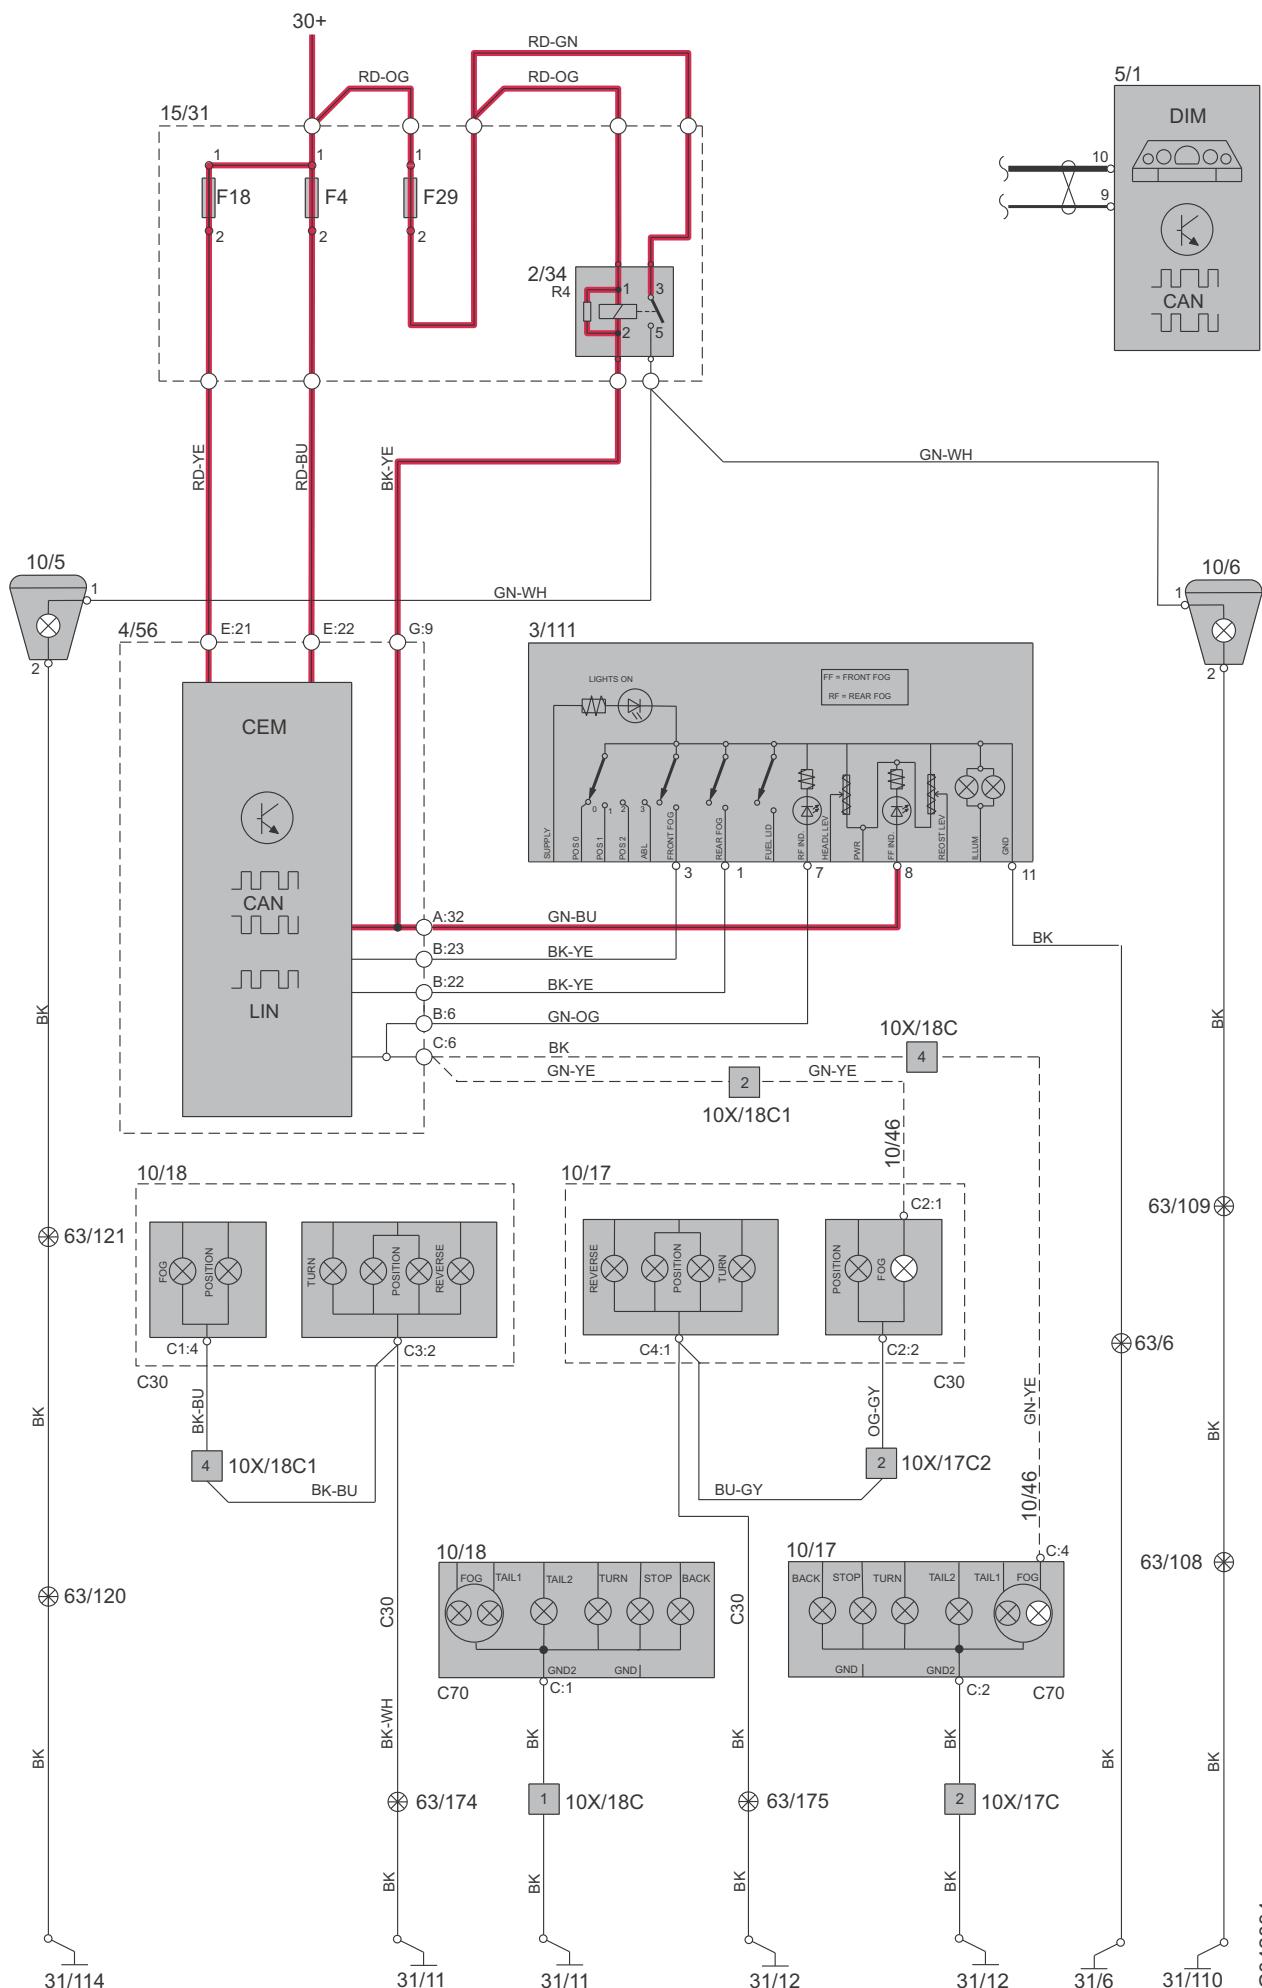


Group 35 Lighting

Interior lighting C30/S40/V50 1:2

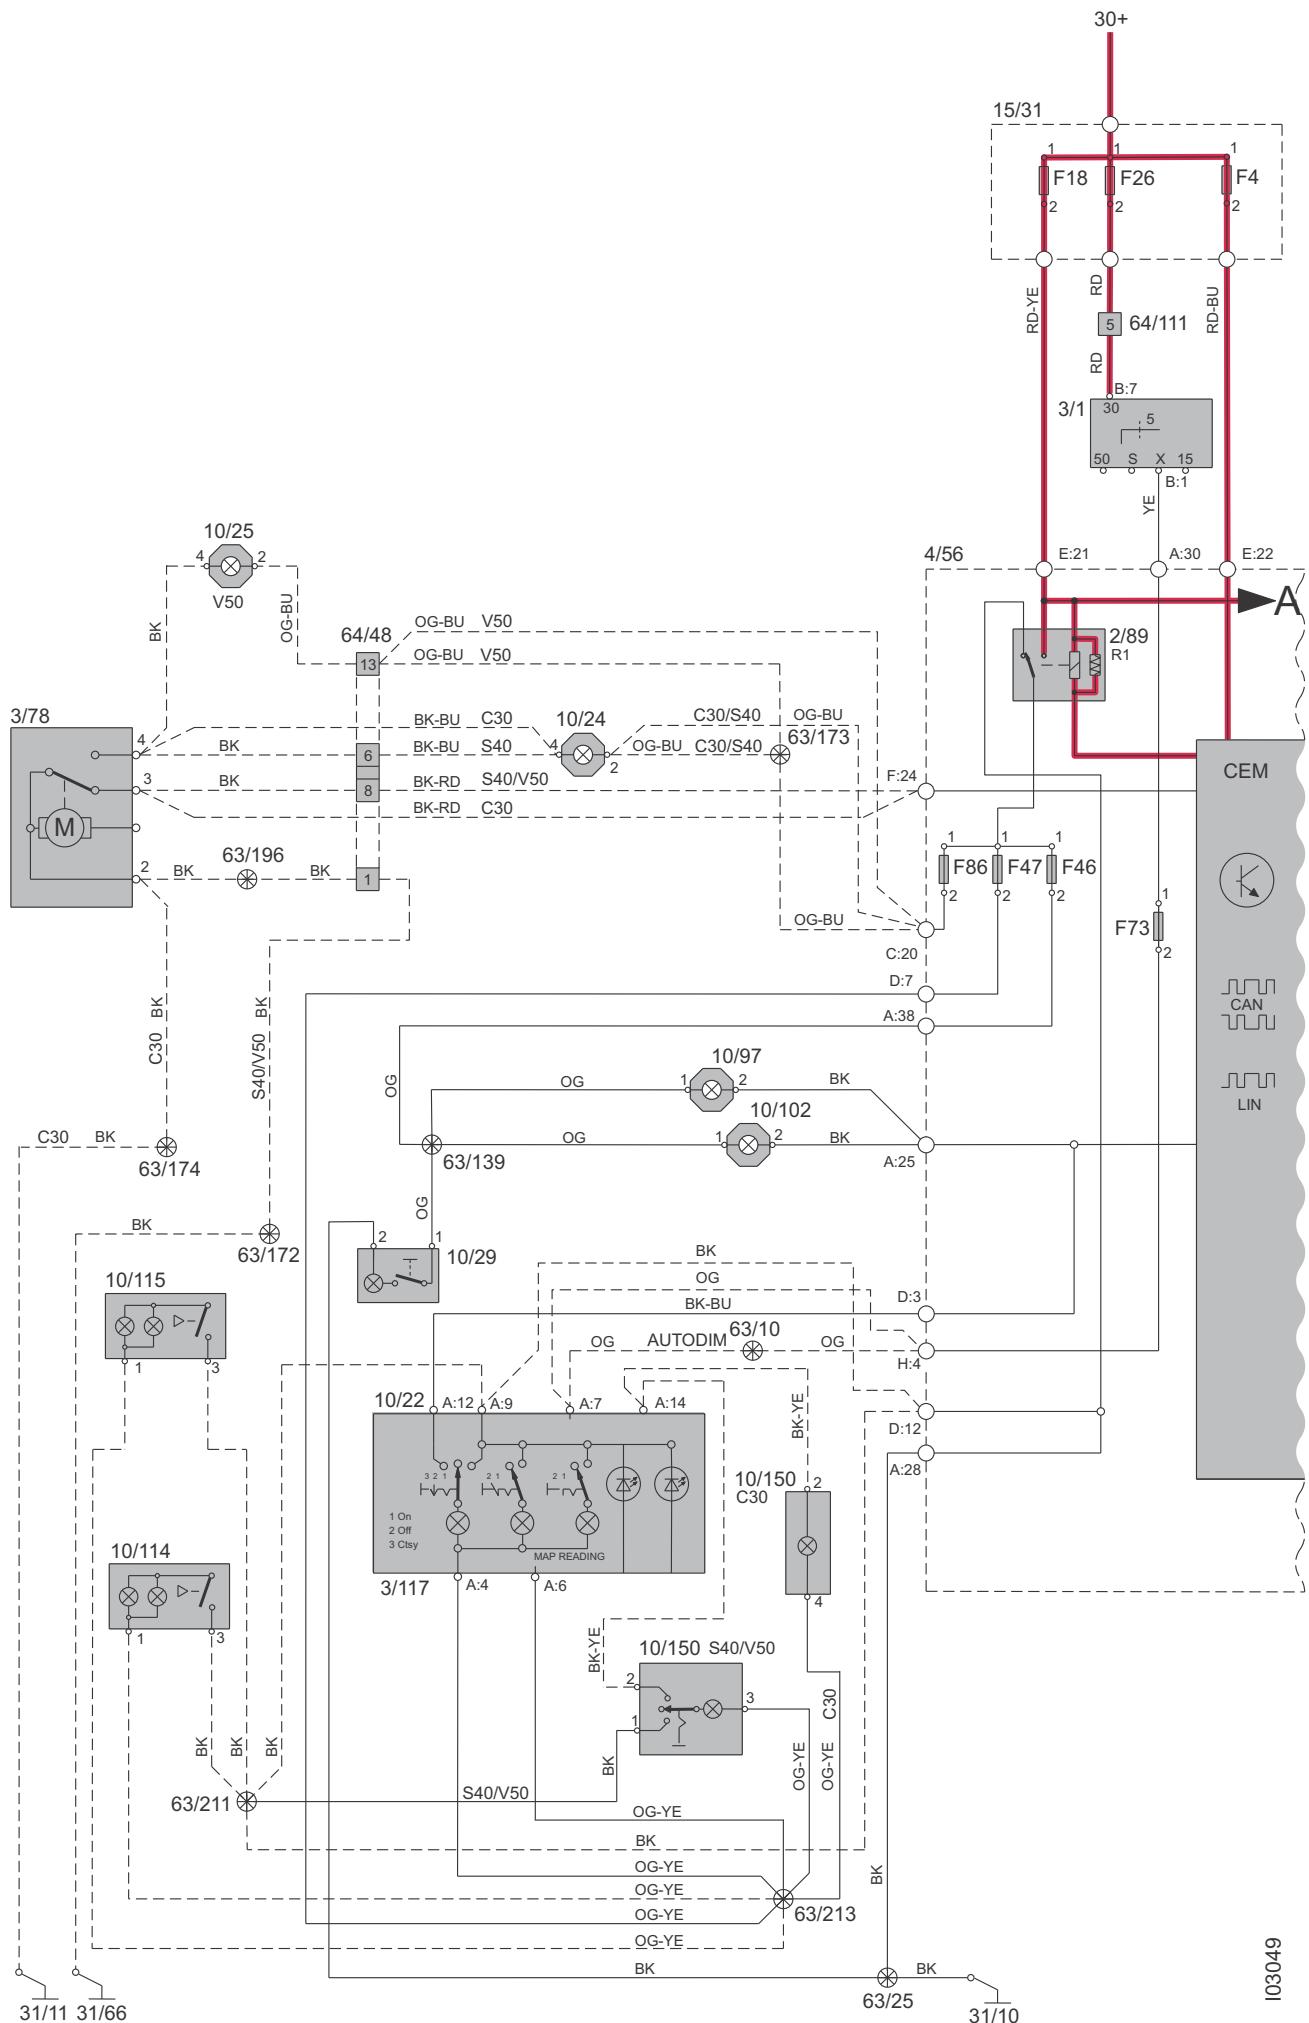


Group 35 Lighting

Interior lighting C30/S40/V50 2:2

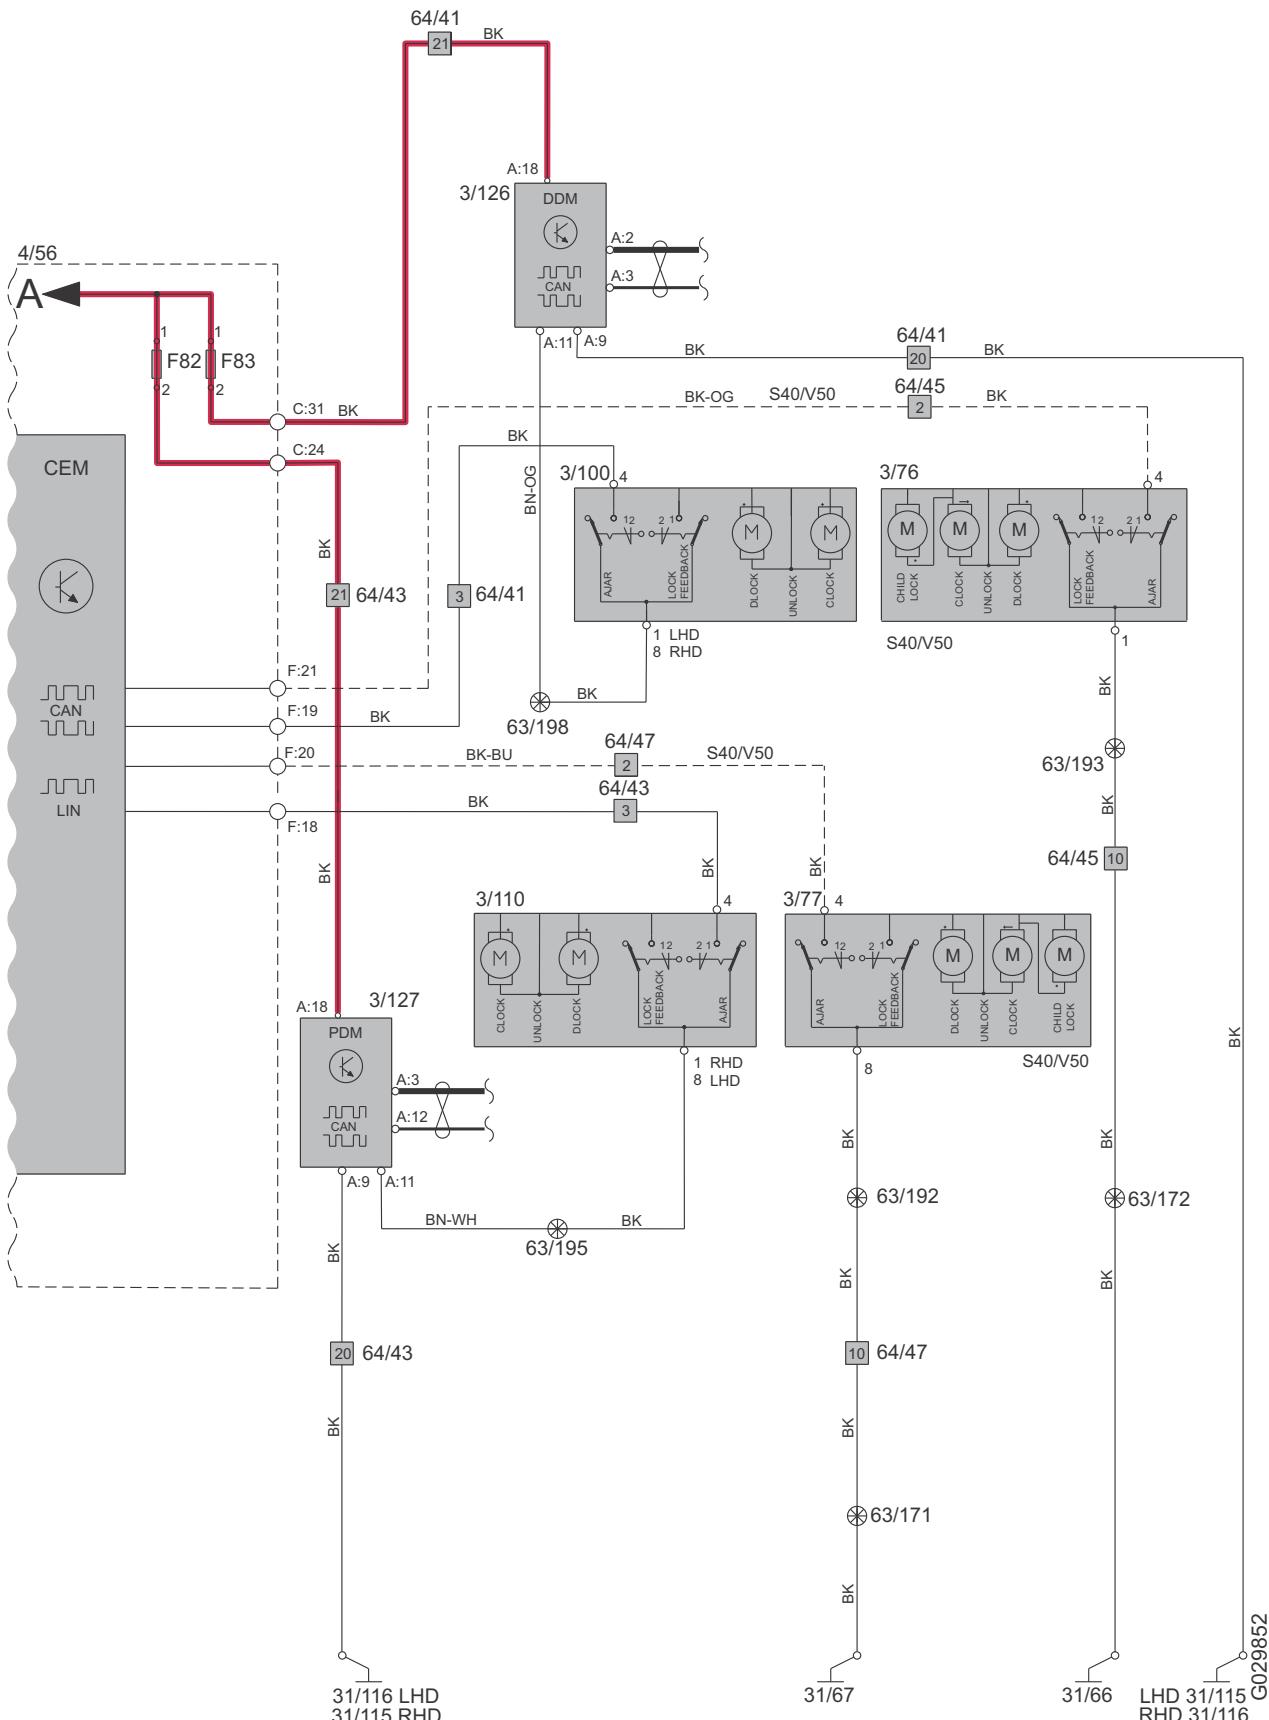

Group 35 Lighting


Interior lighting C70 1:2

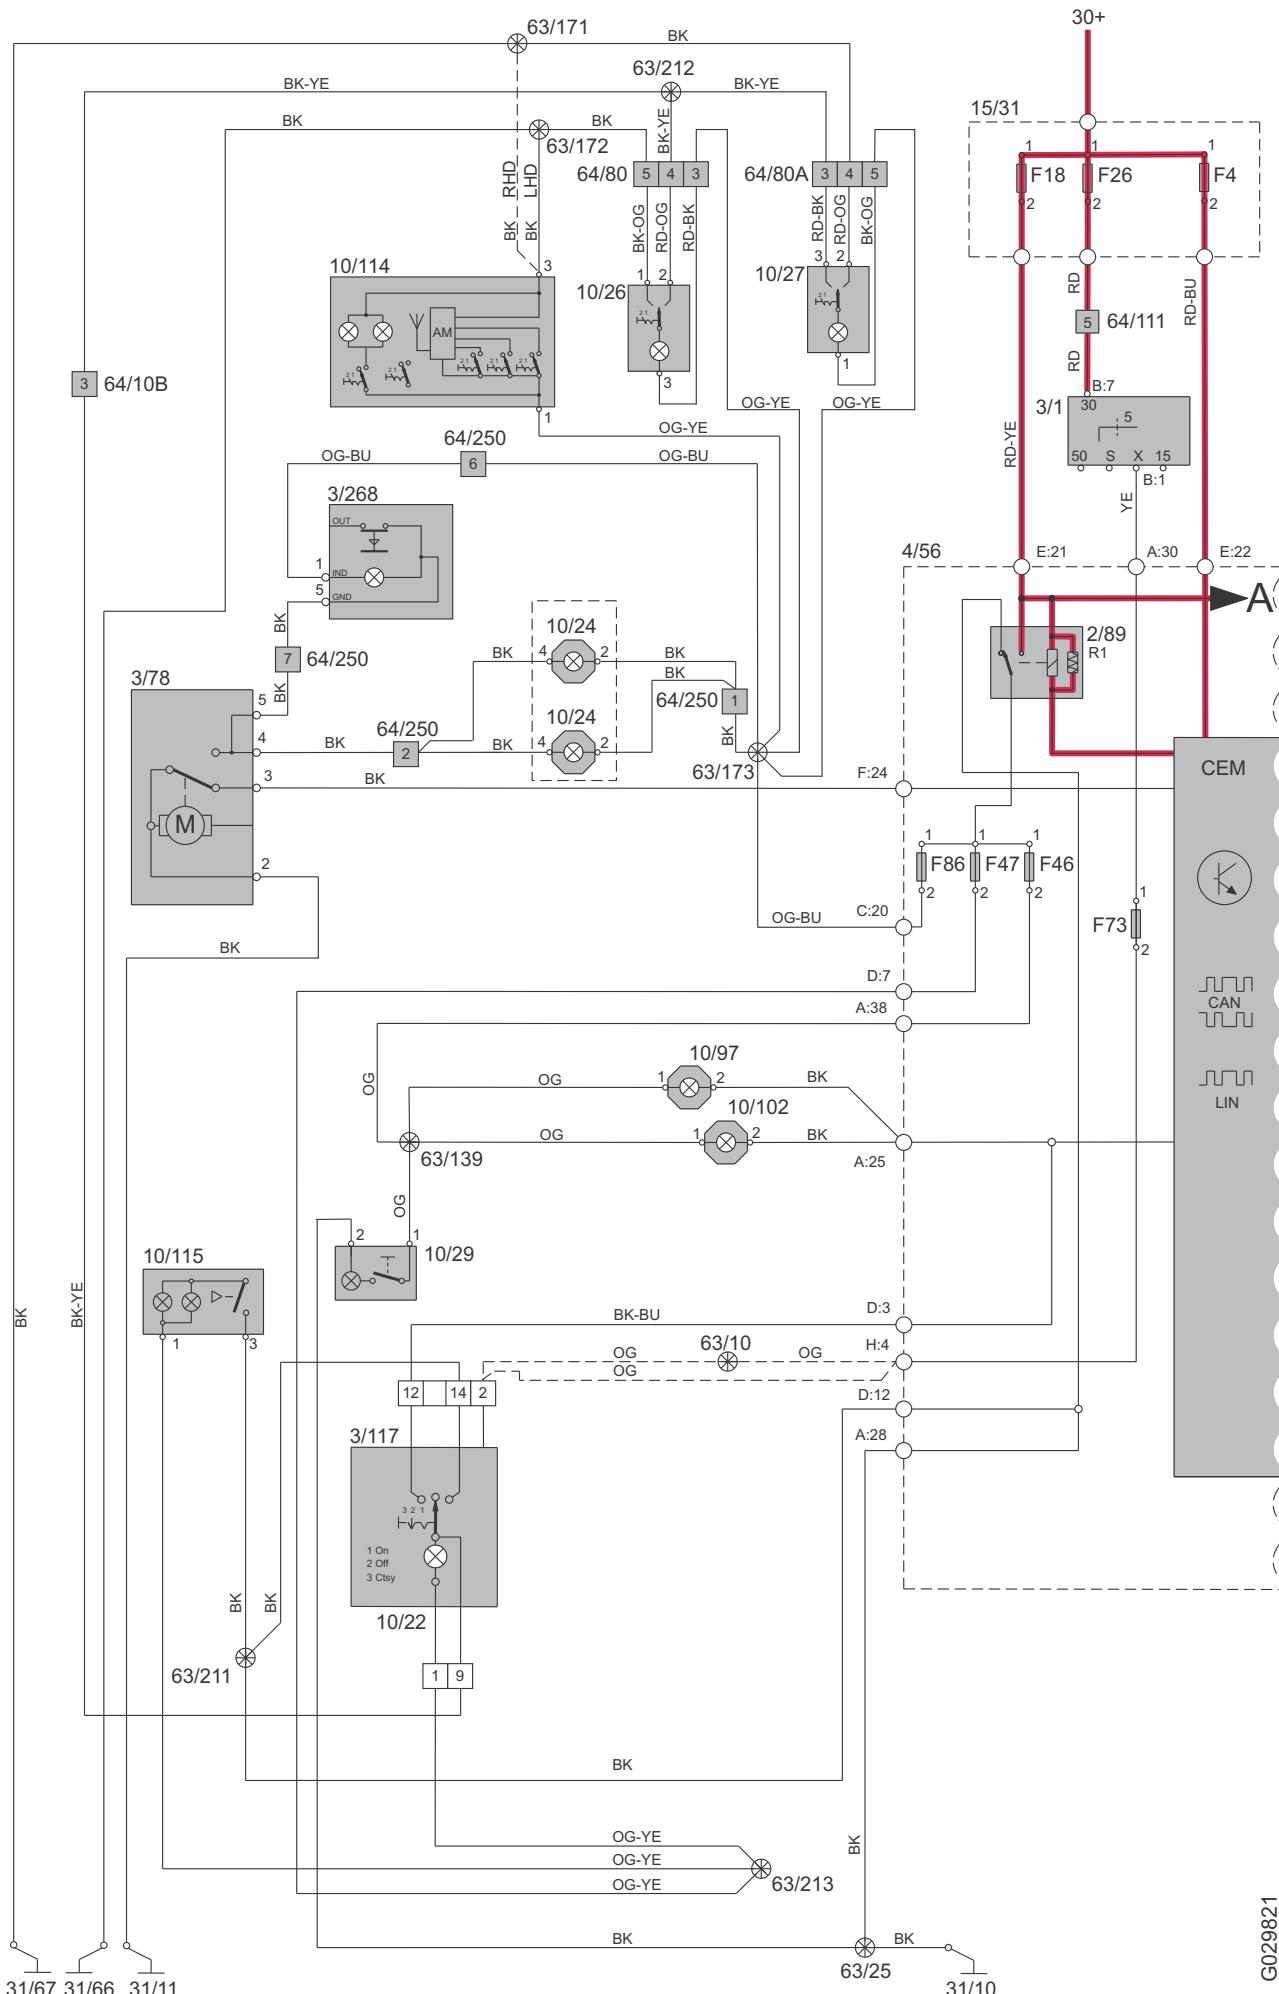

G029821

Group 35 Lighting


Interior lighting C70 2:2

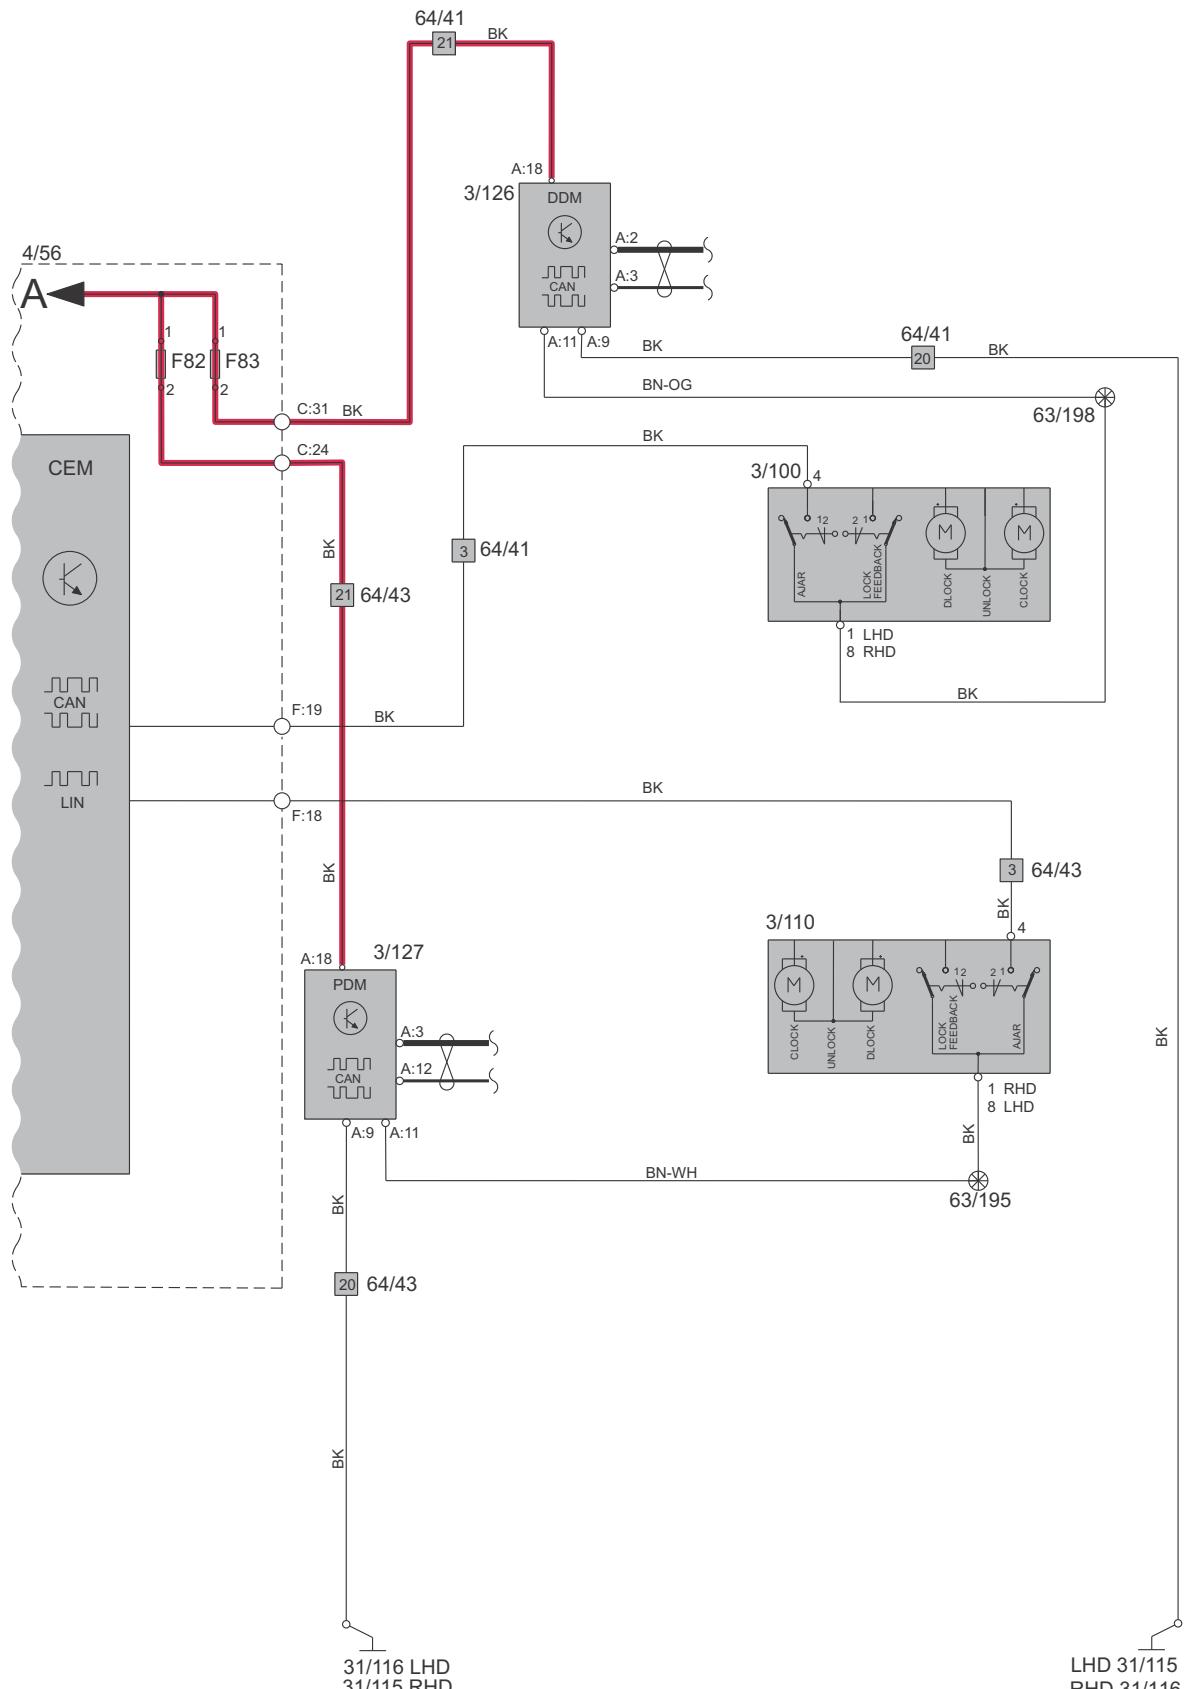

G029842


Group 35 Lighting

Follow-me-home lighting

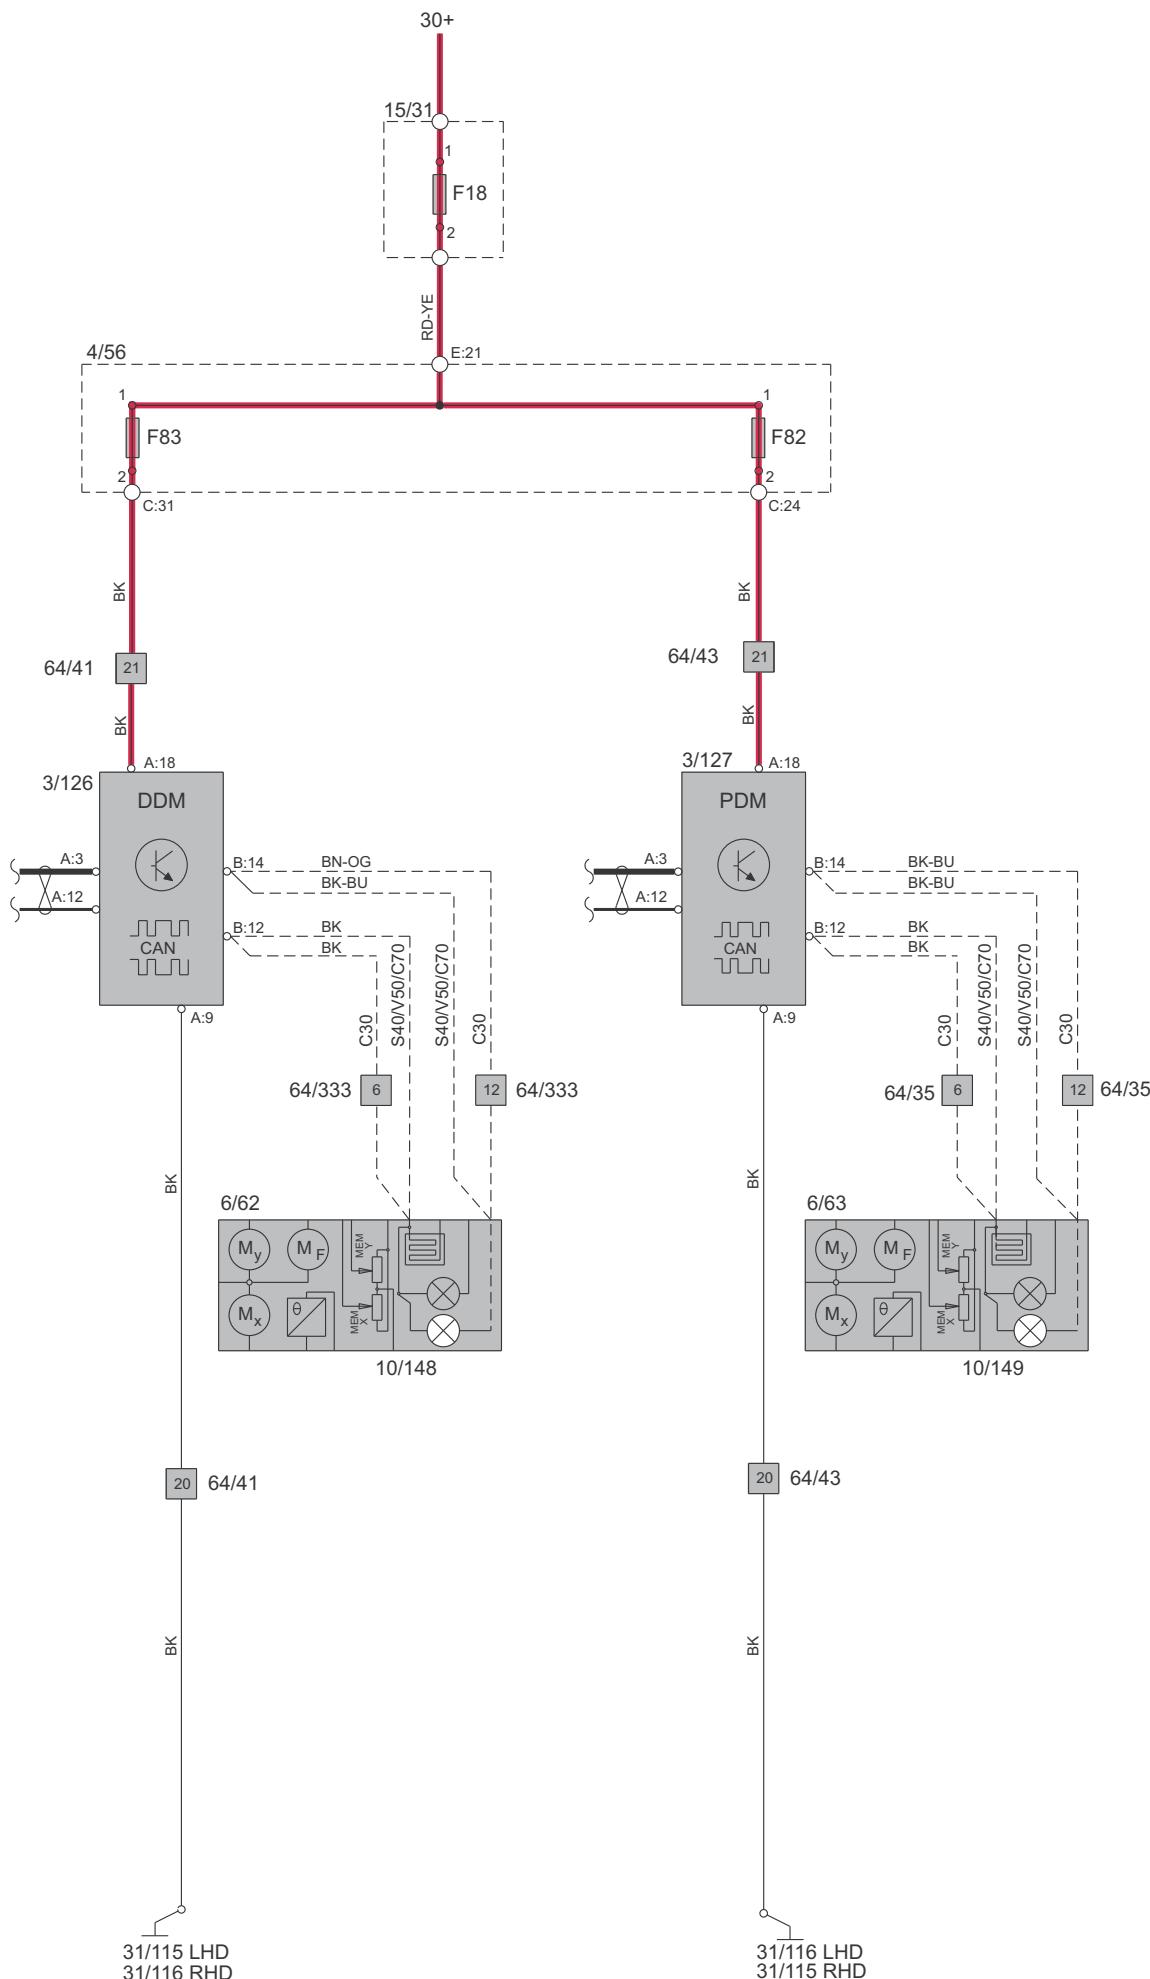


Group 35 Lighting

Instrument and control illumination

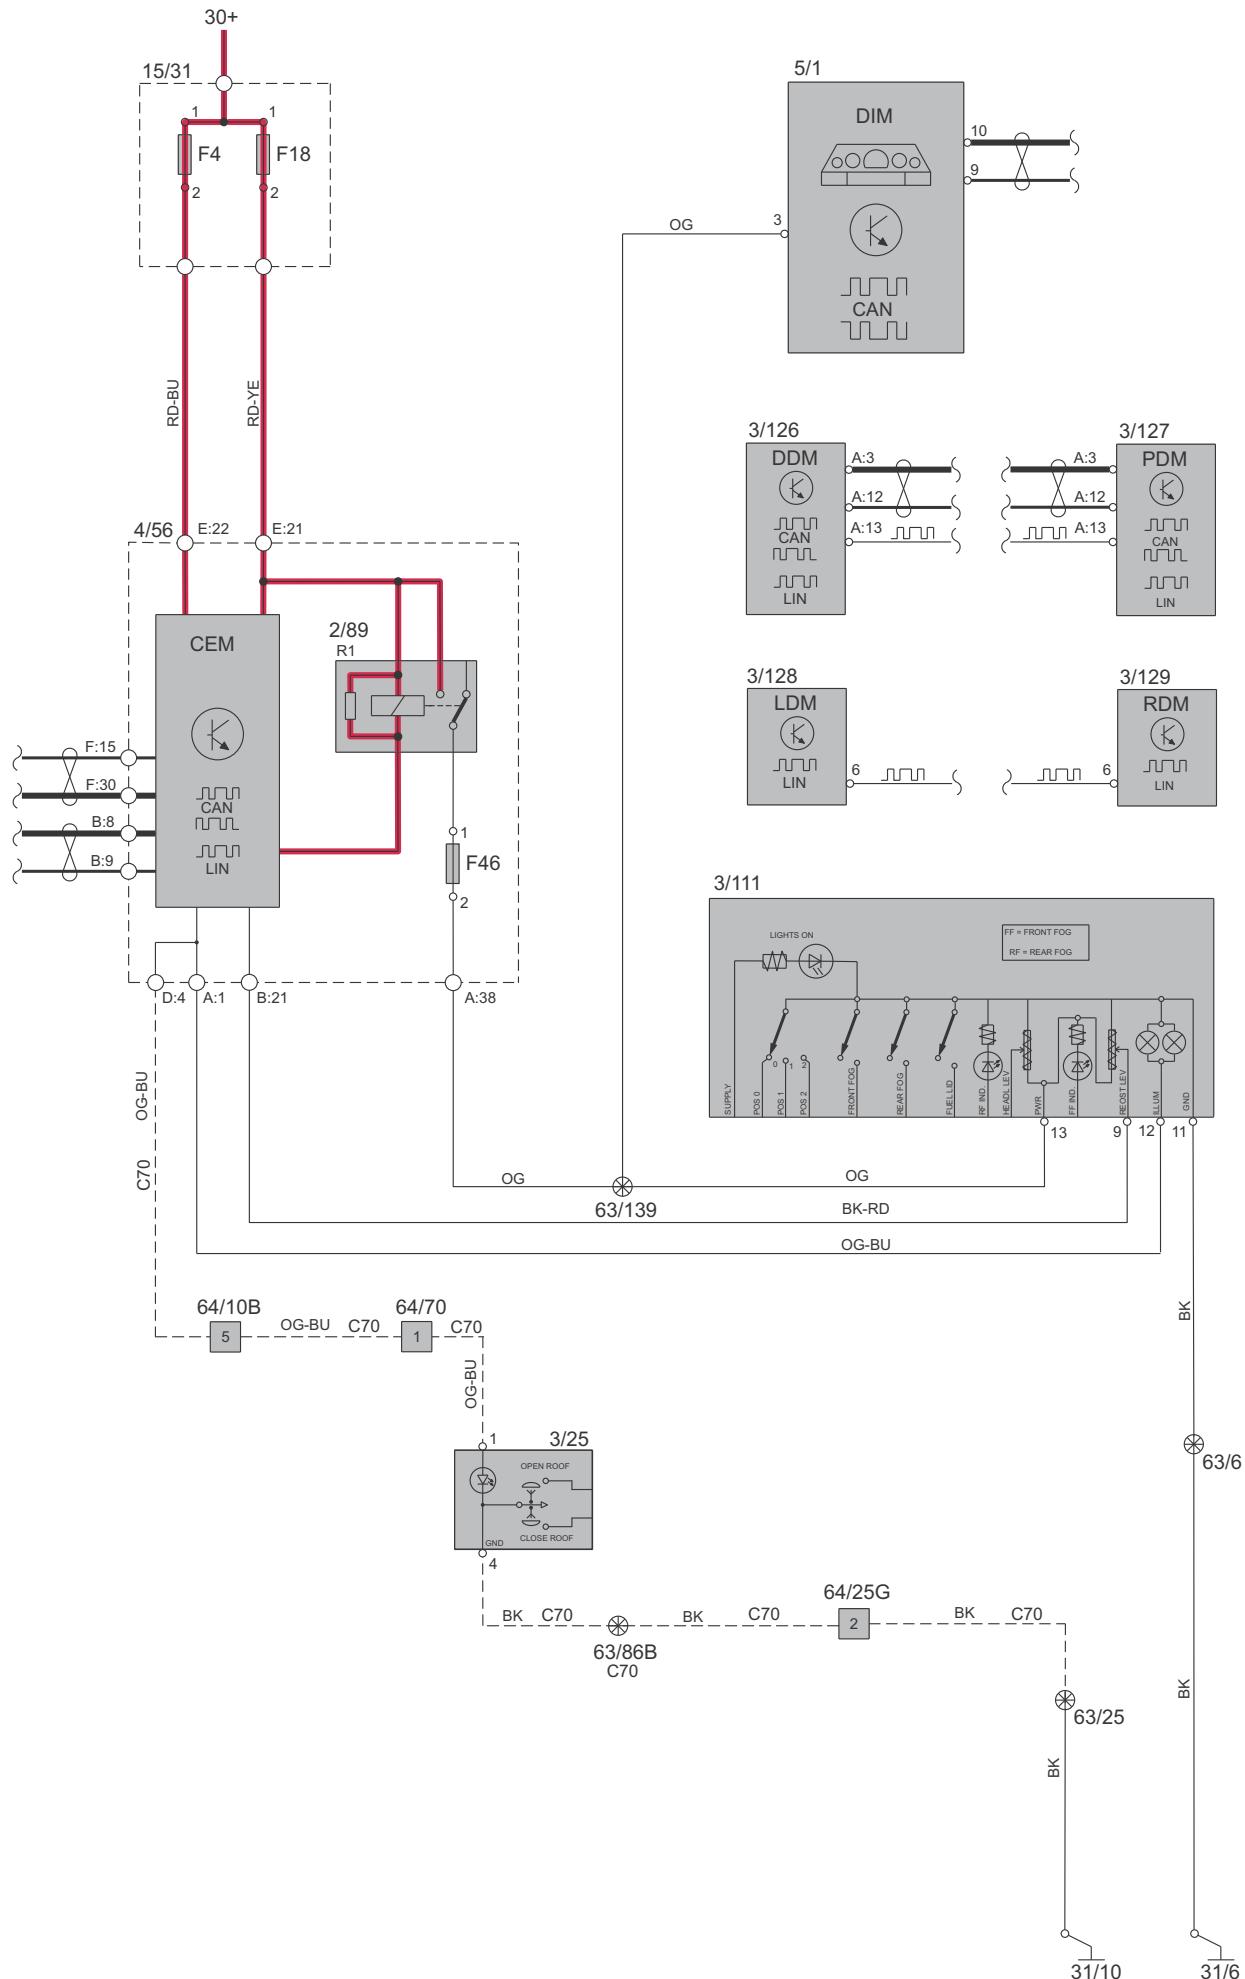

Group 35 Lighting, Accessories


Auxiliary lights

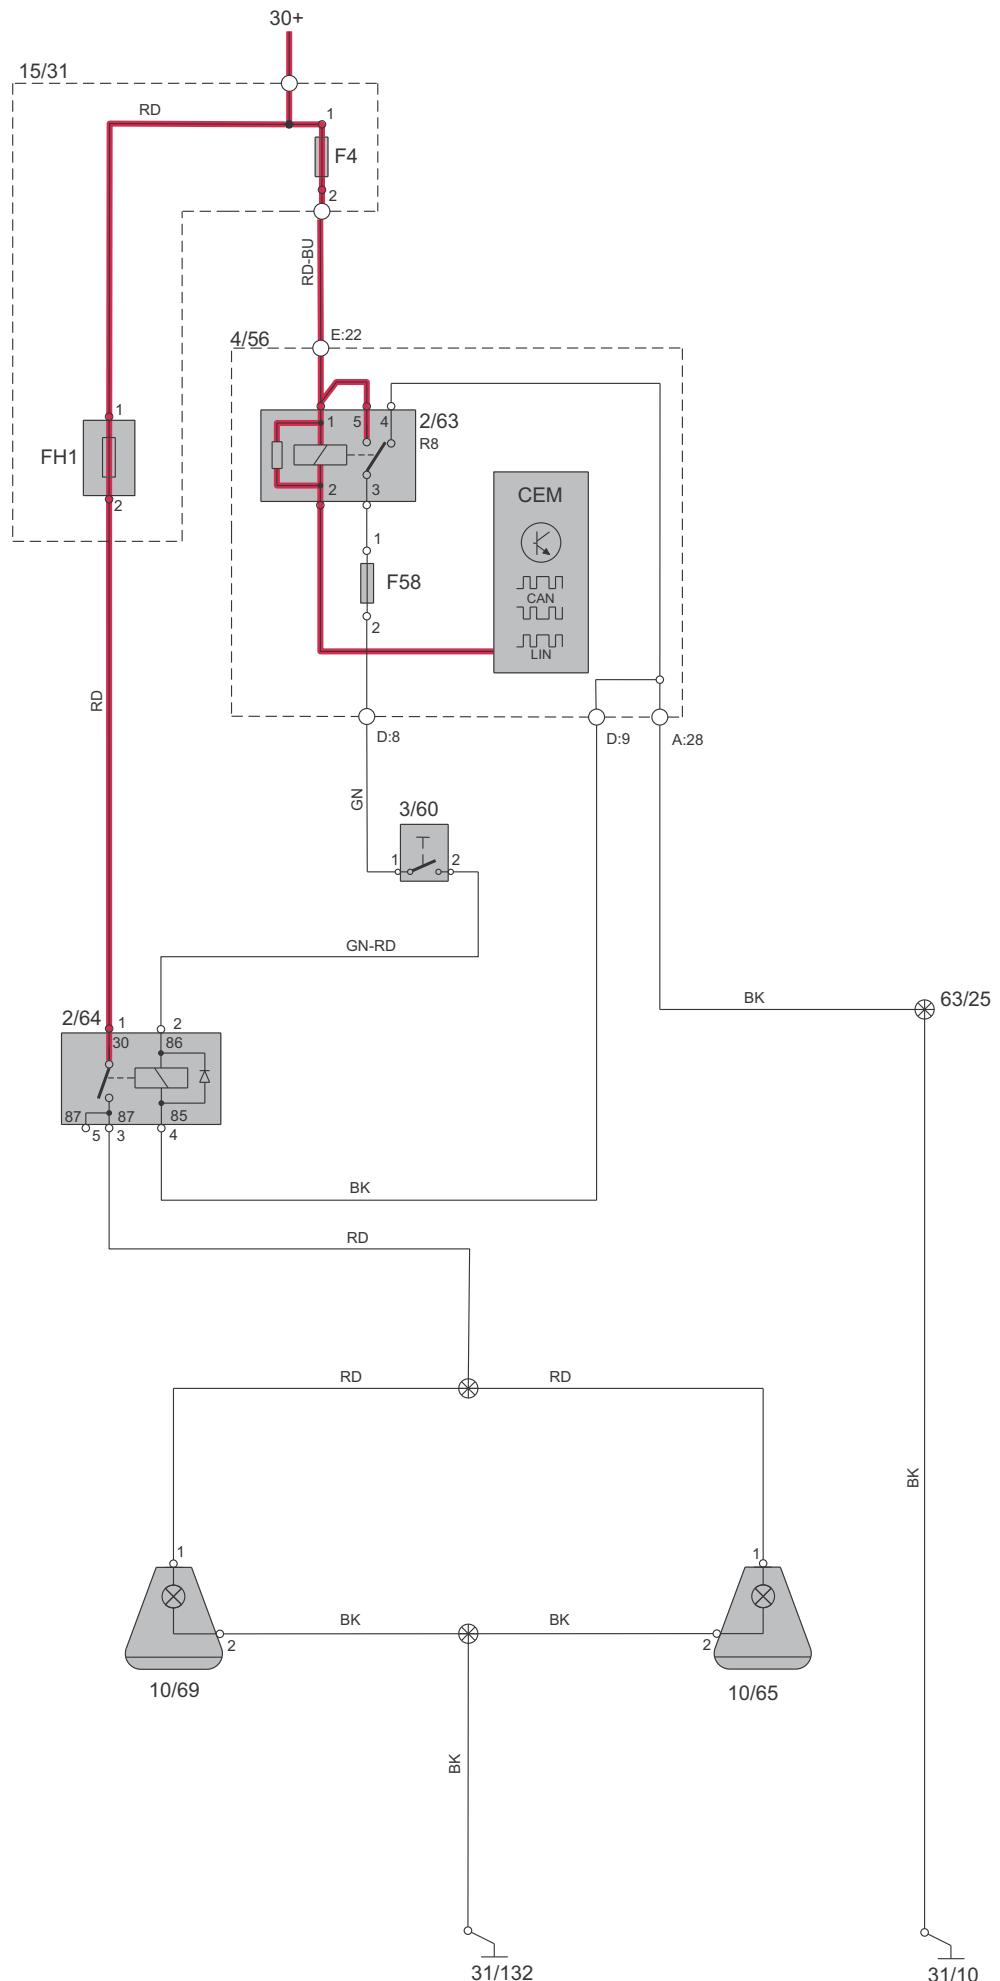

G029943


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers S40/V50

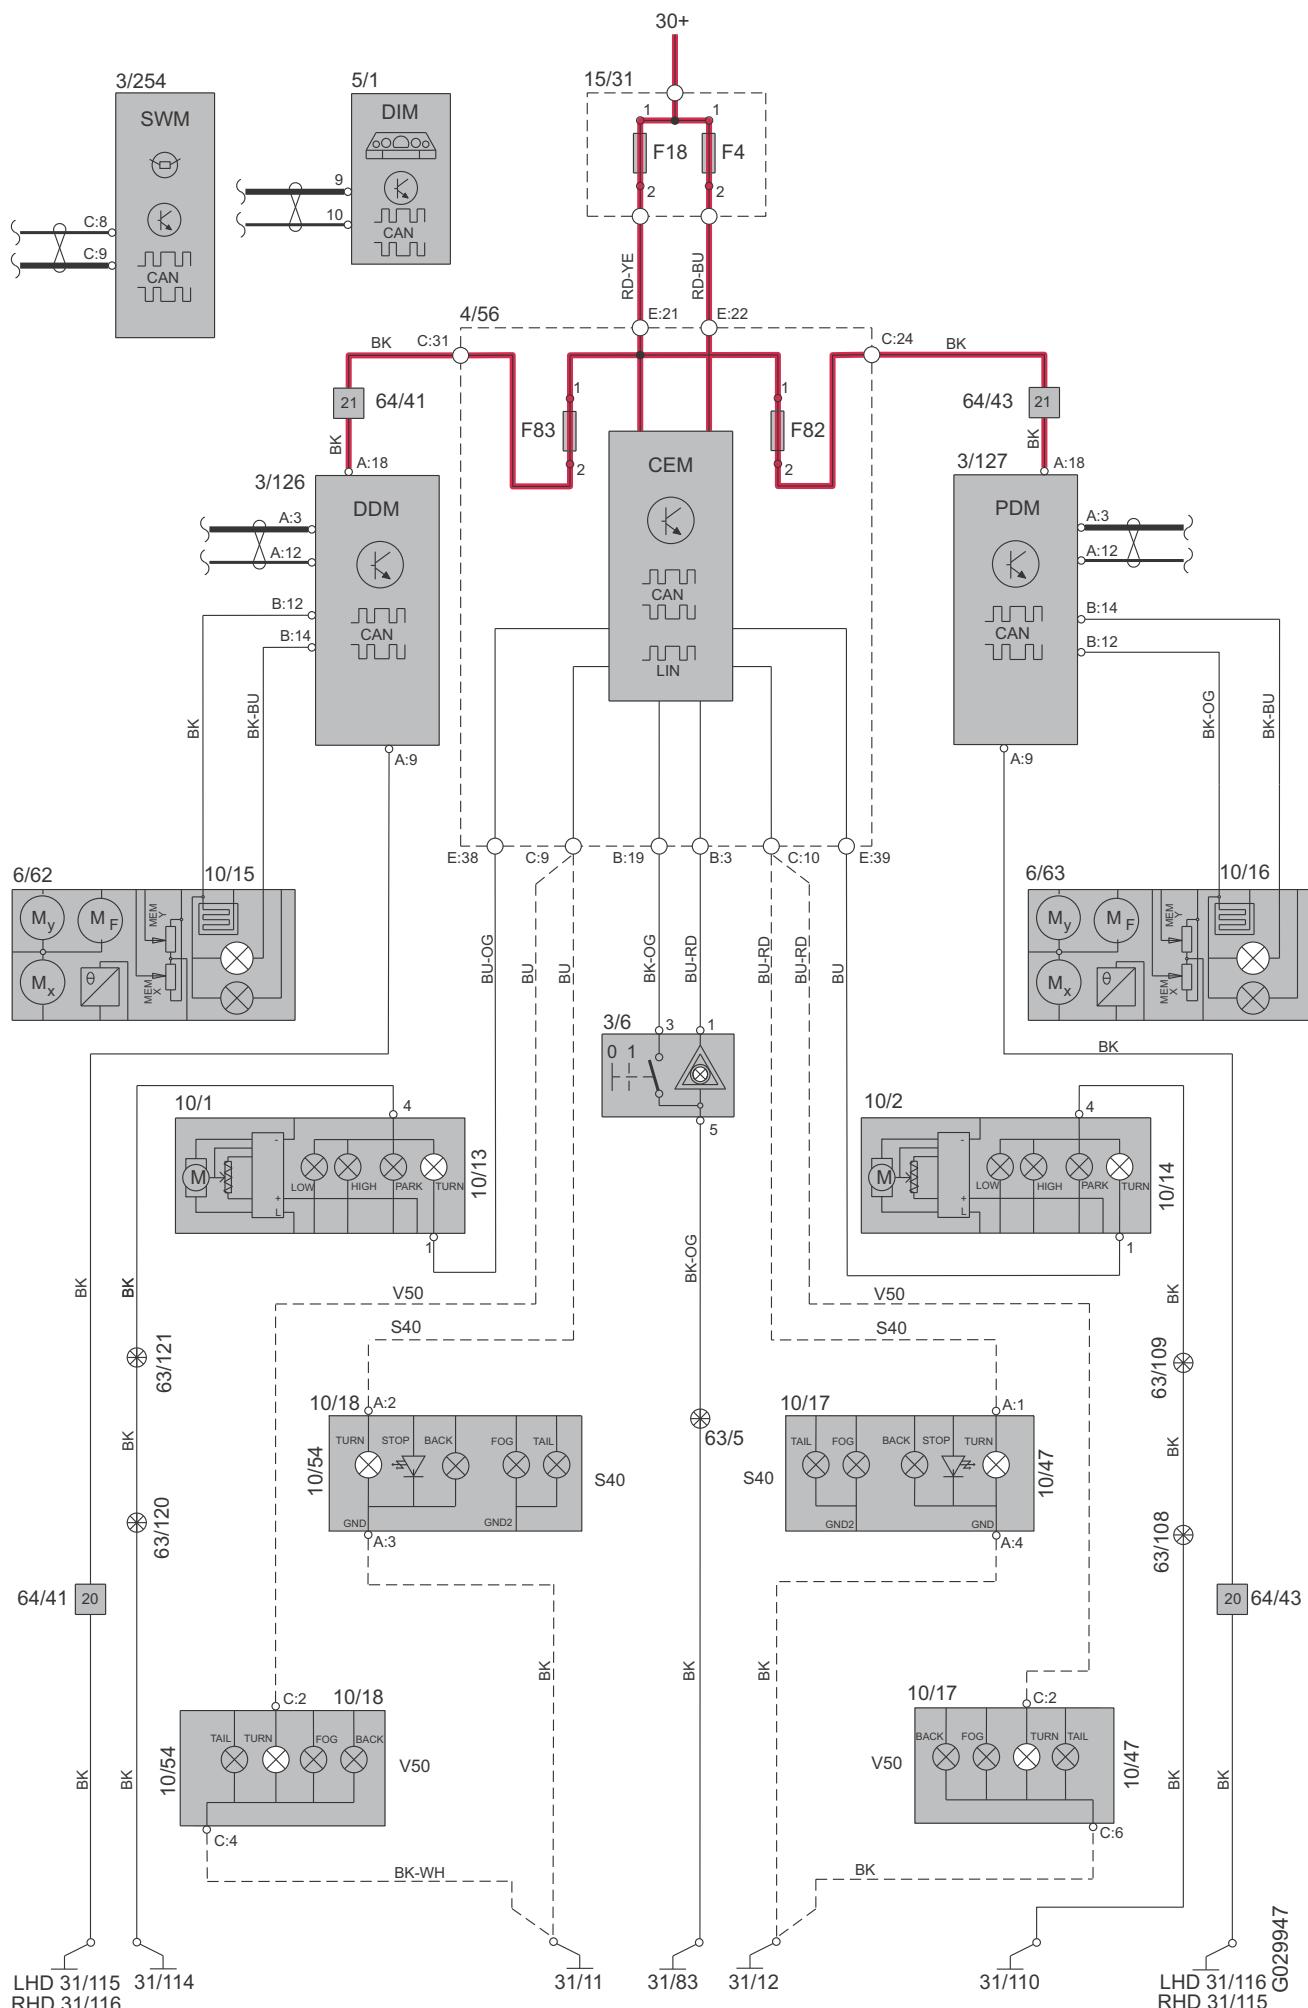


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers (Dual Xenon) S40/V50

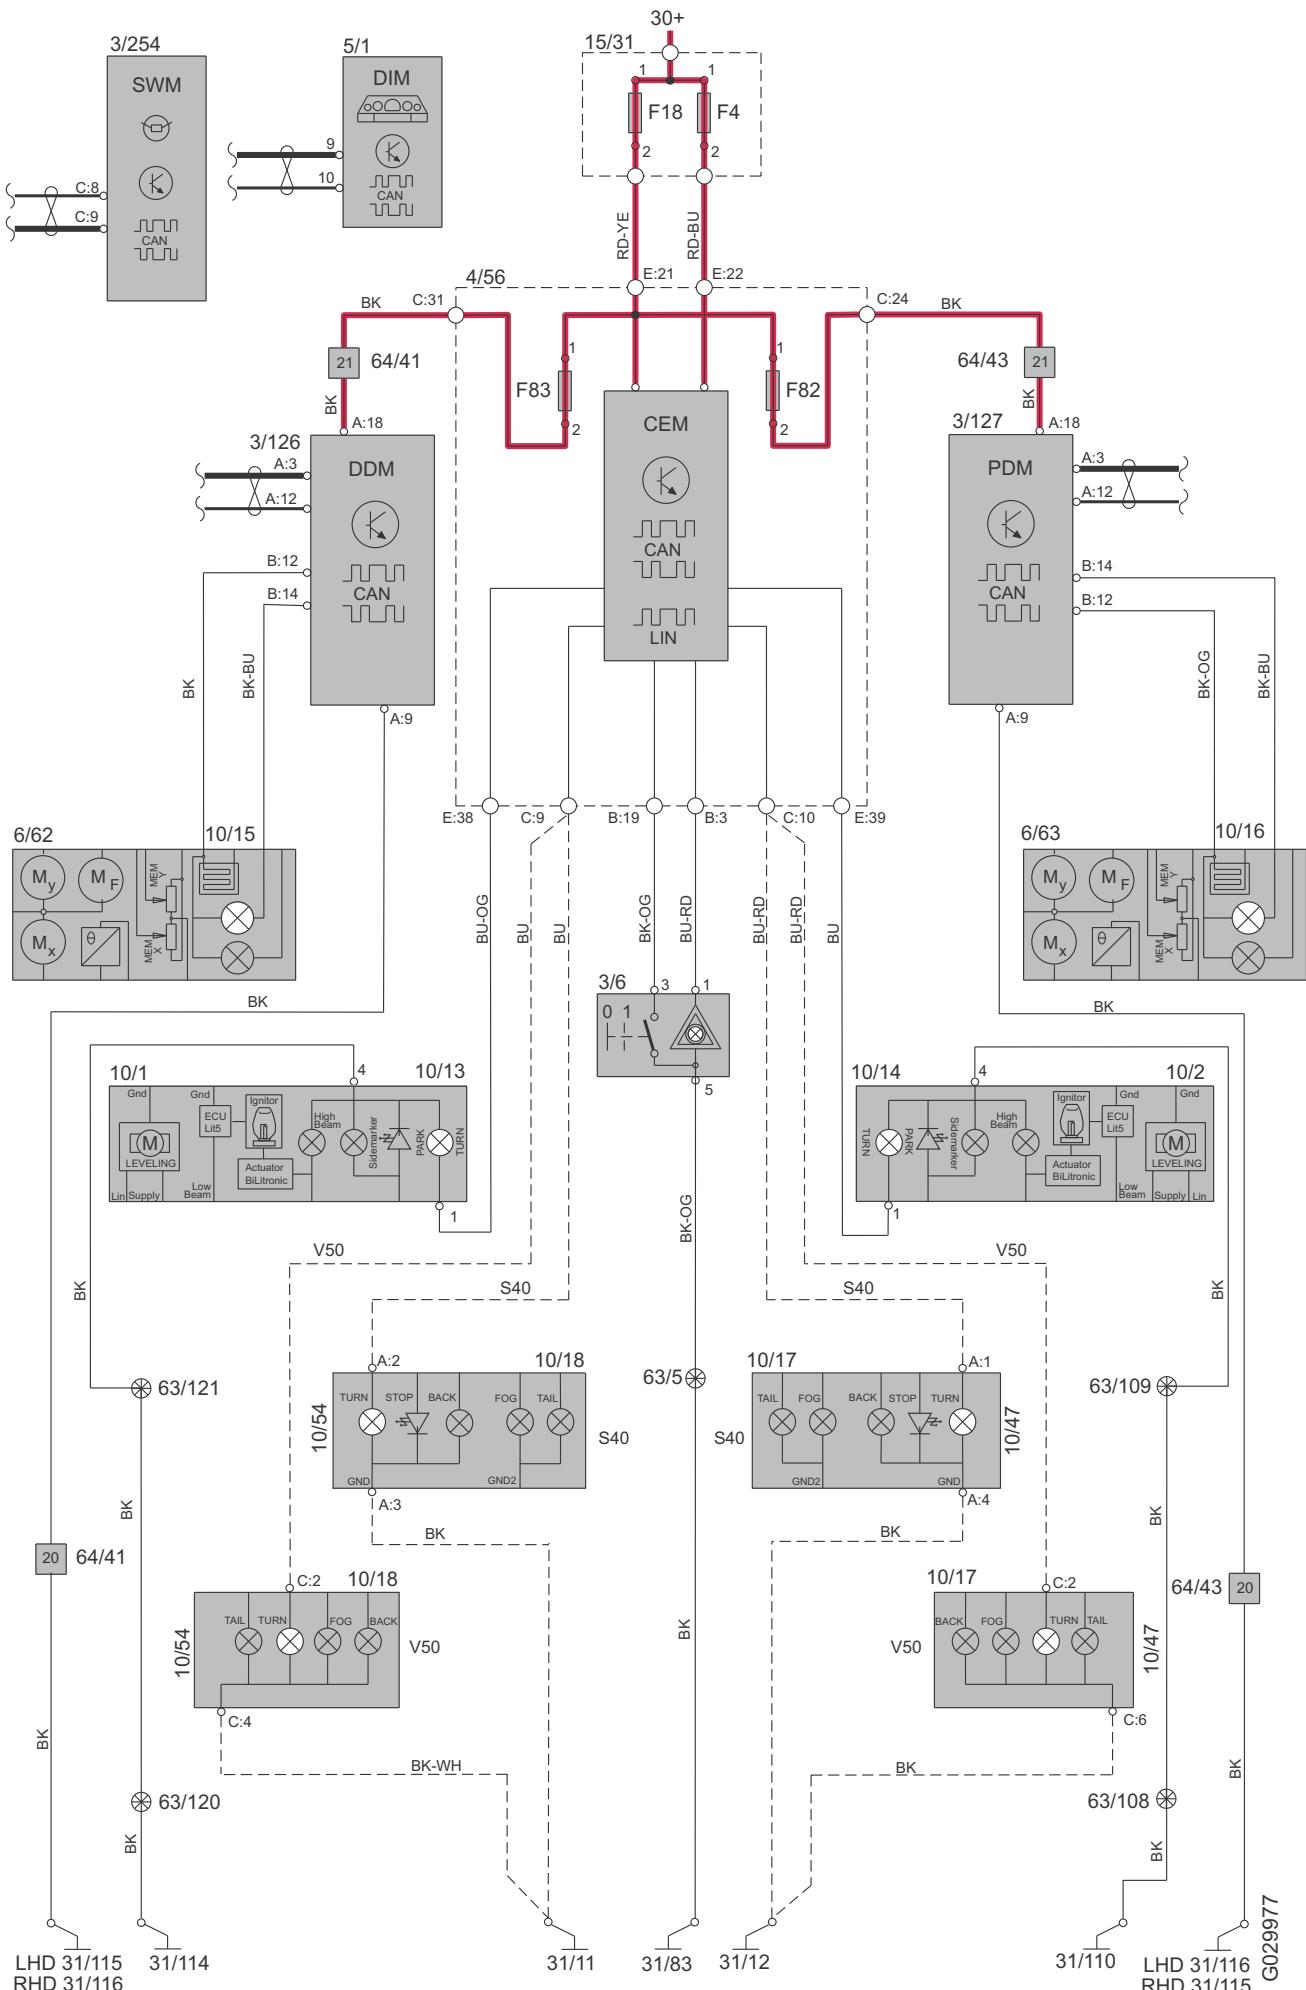


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers C30/C70

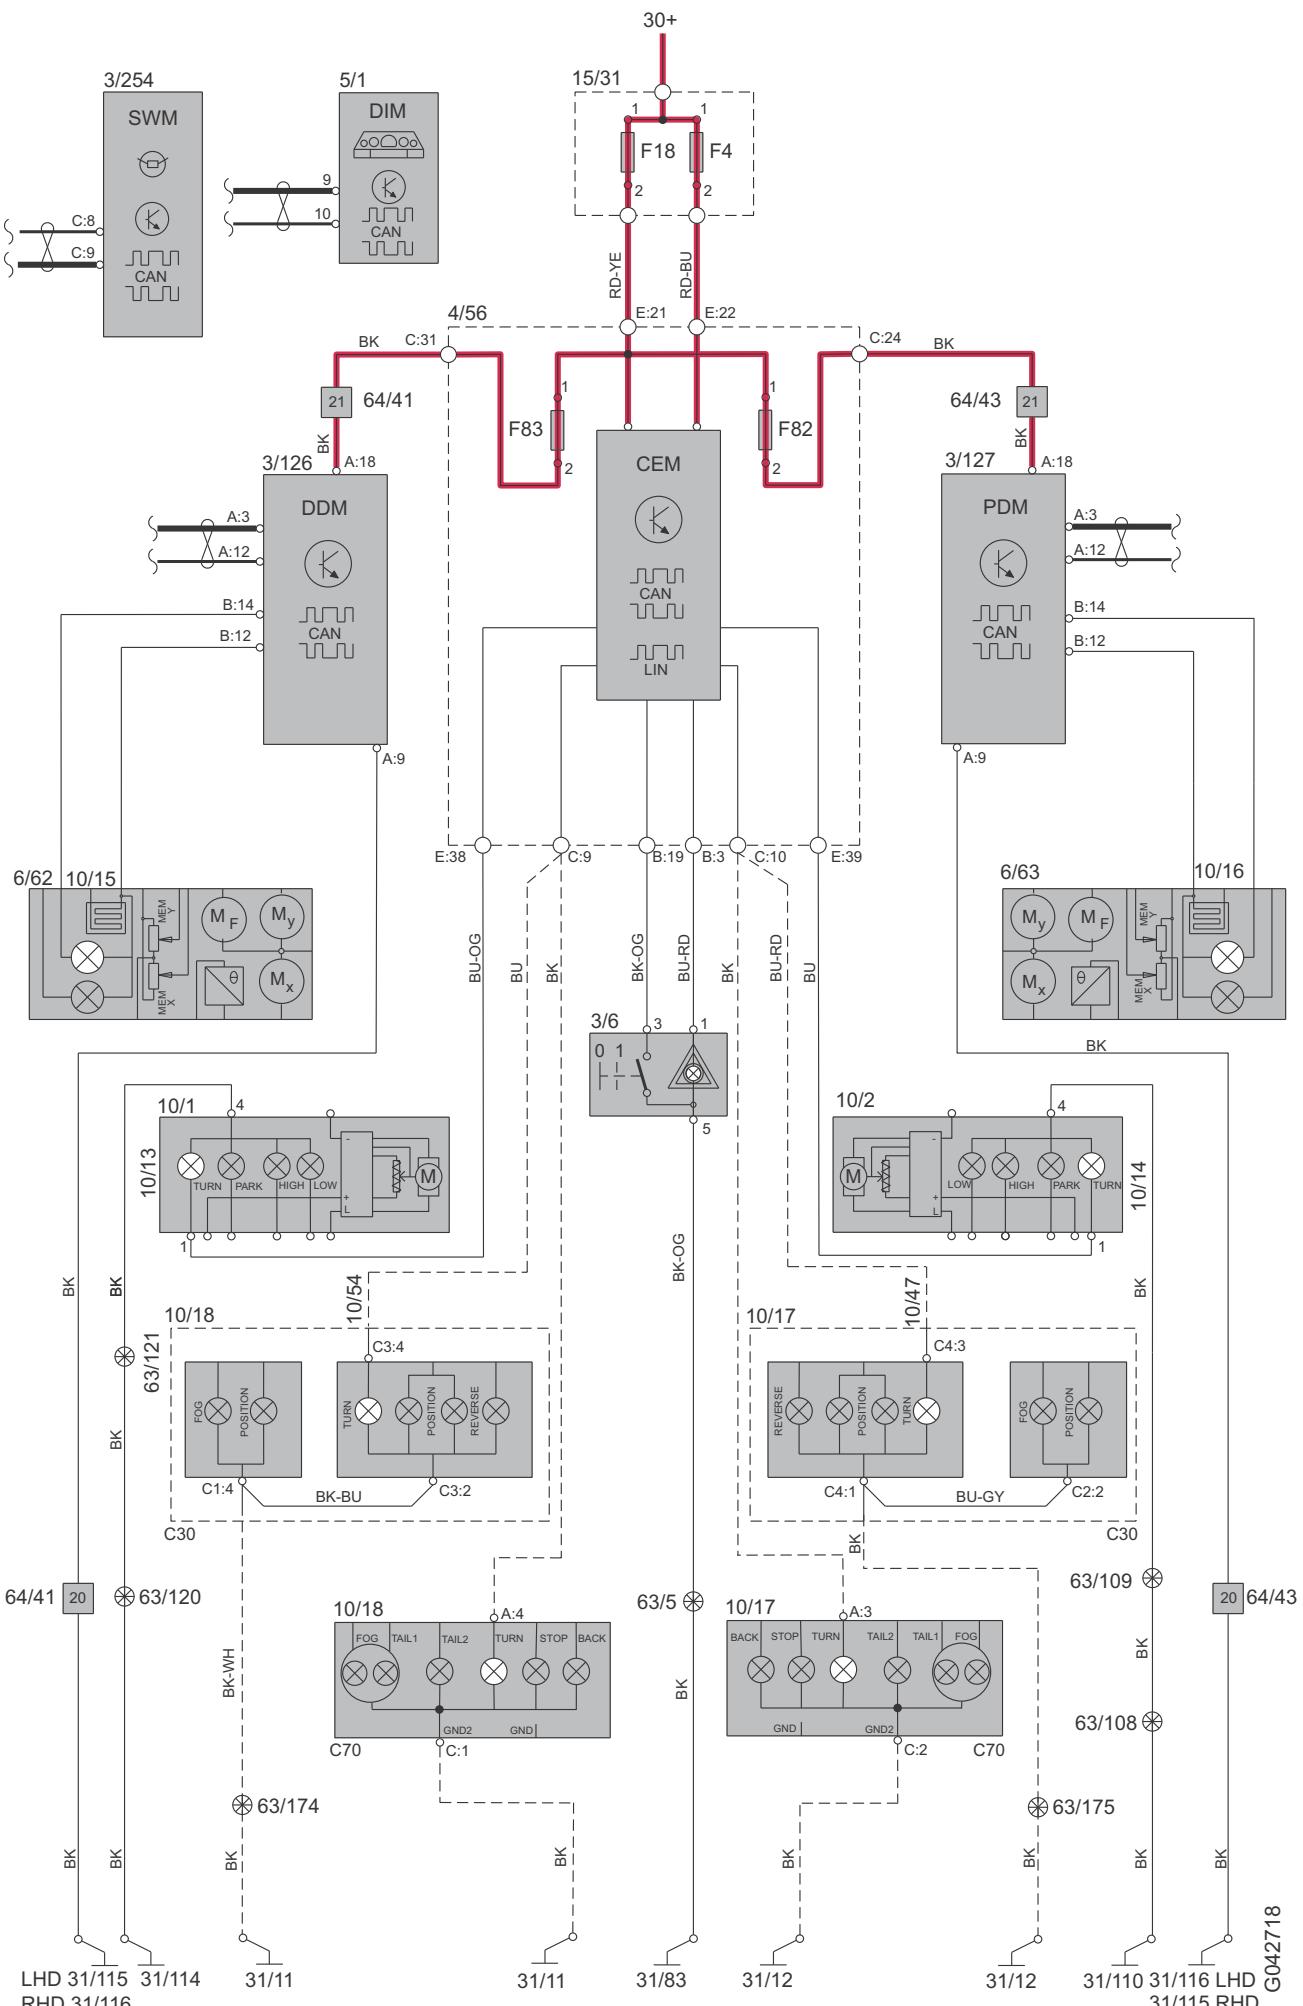


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers (Dual Xenon) C30/C70

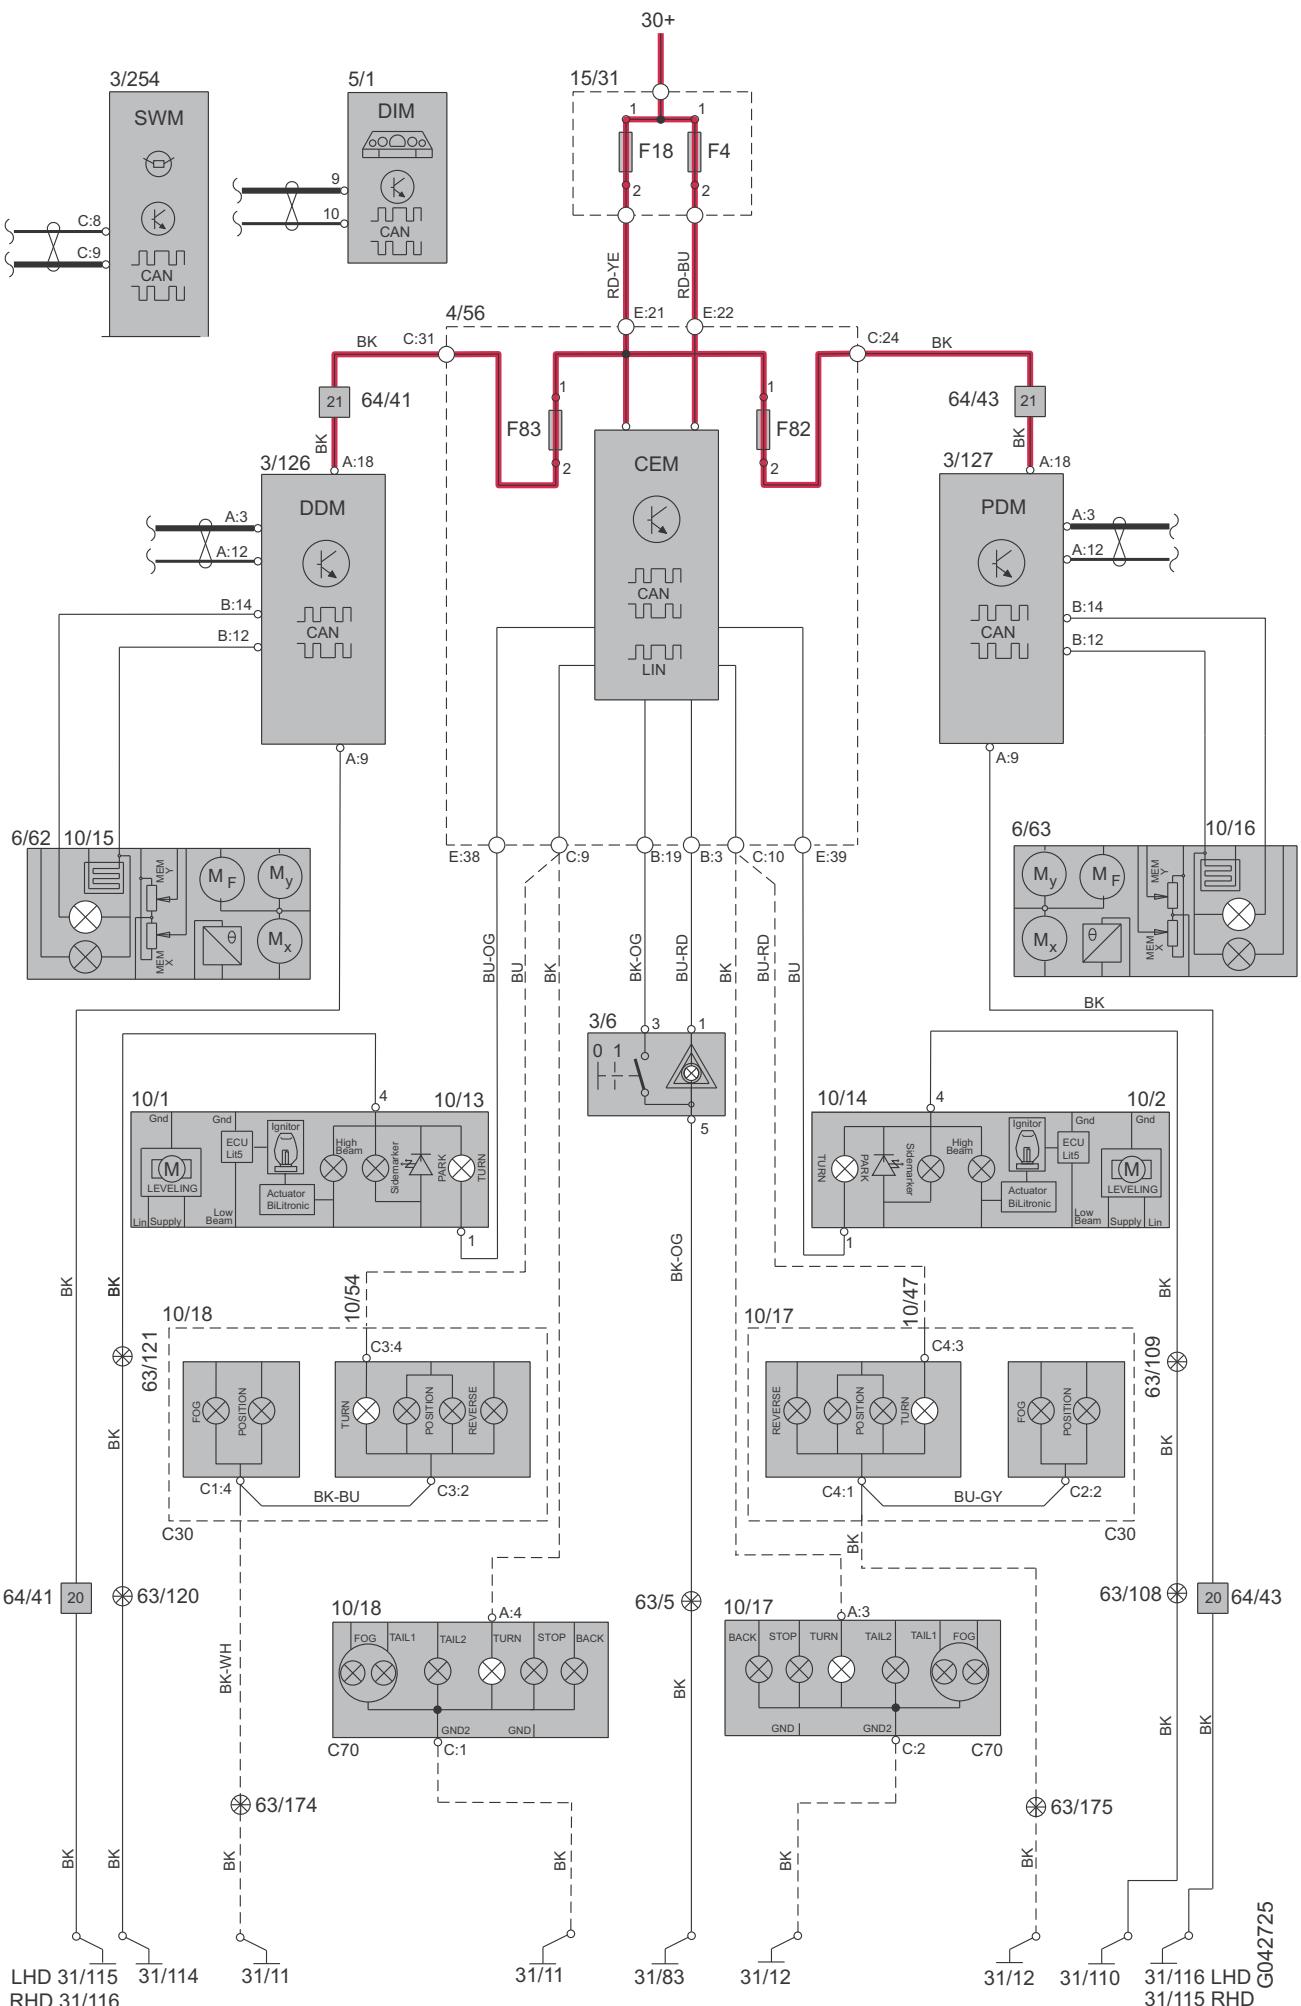


Group 36 Additional electrical equipment

Wiper/washer windshield

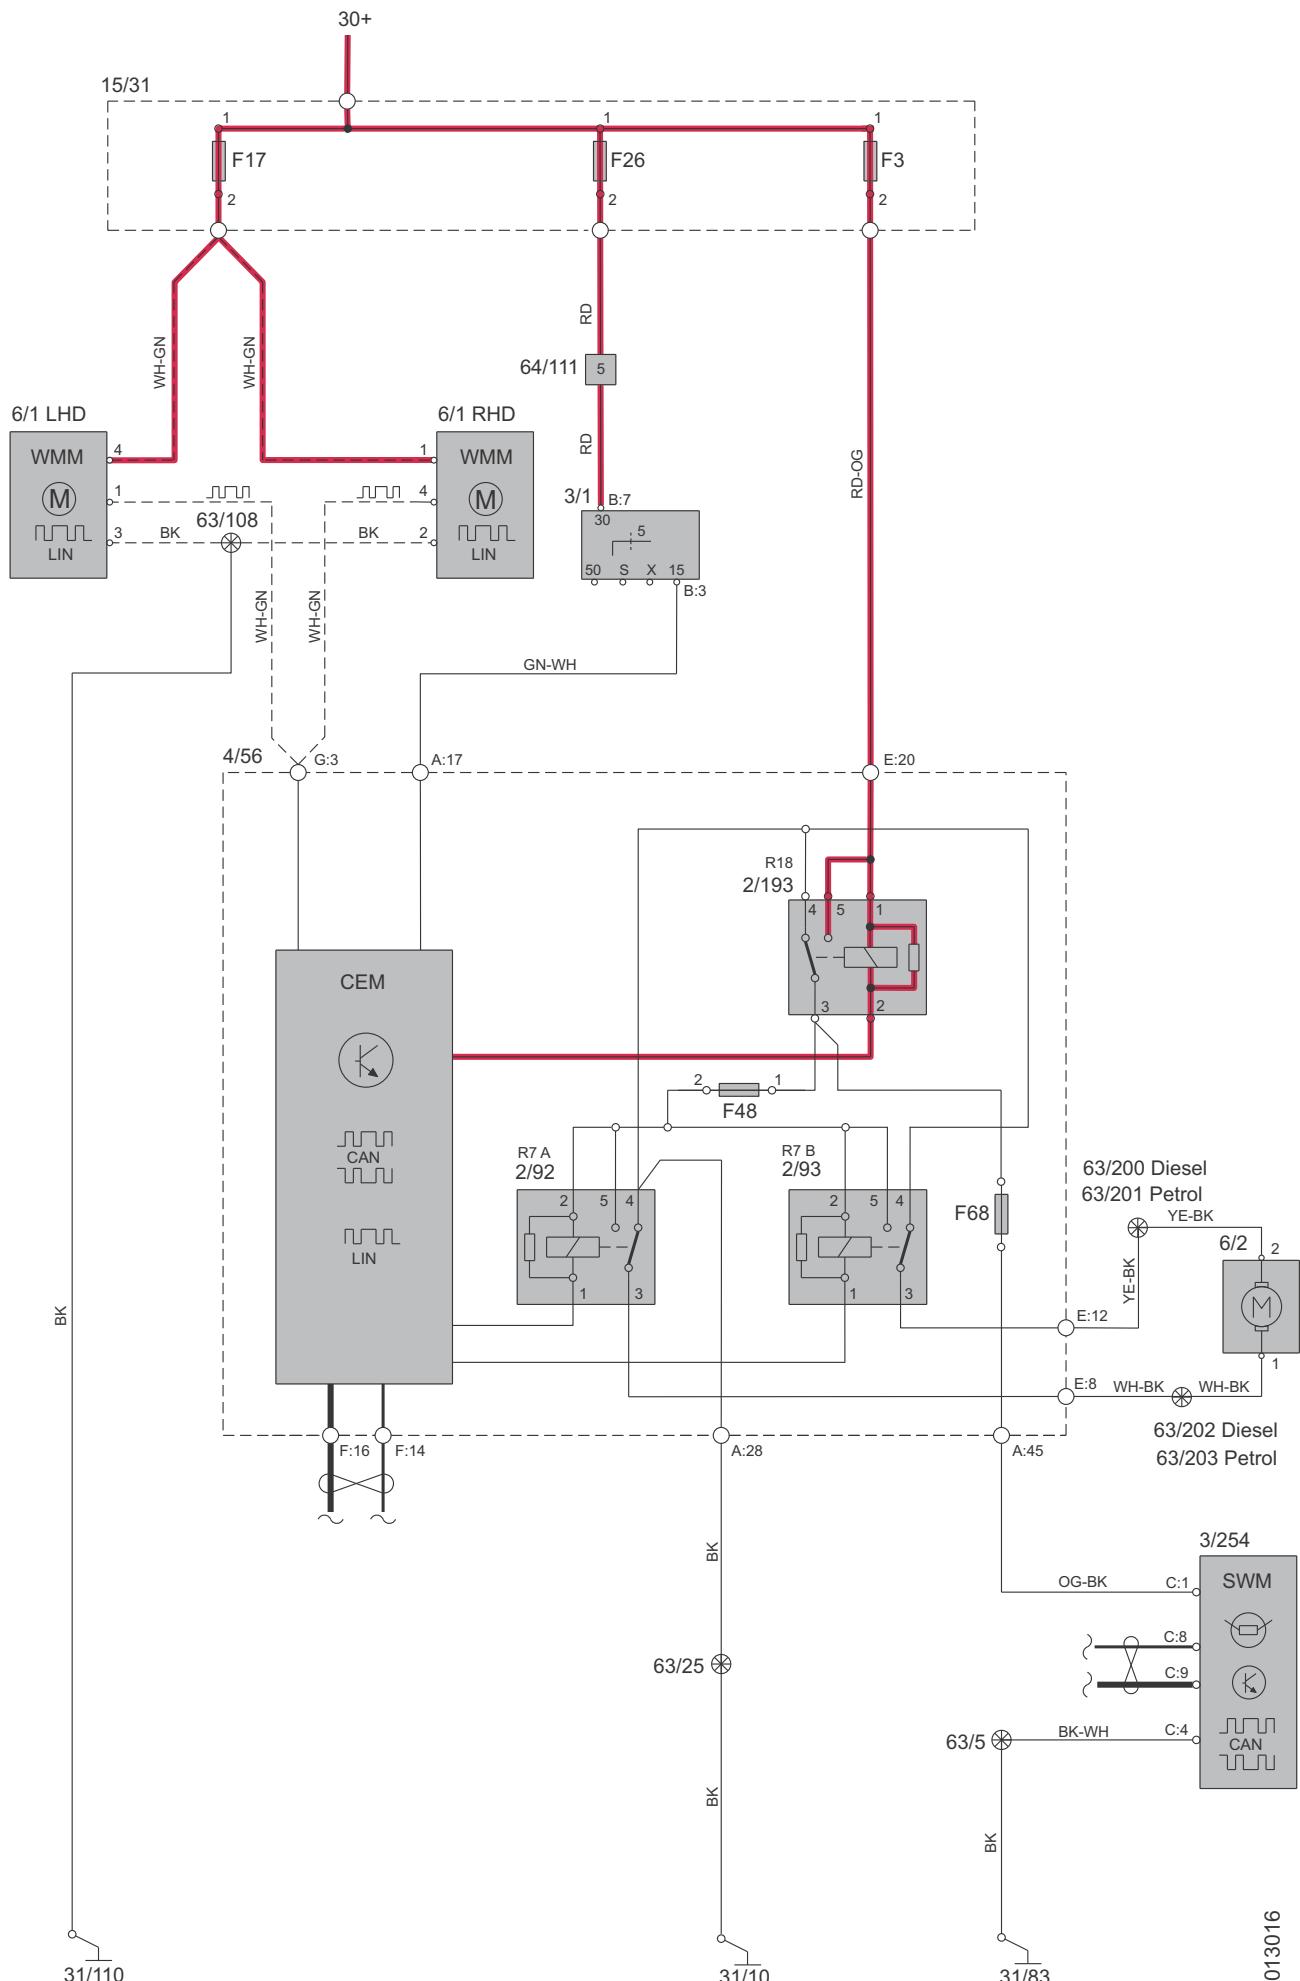


Group 36 Additional electrical equipment

Washer headlights

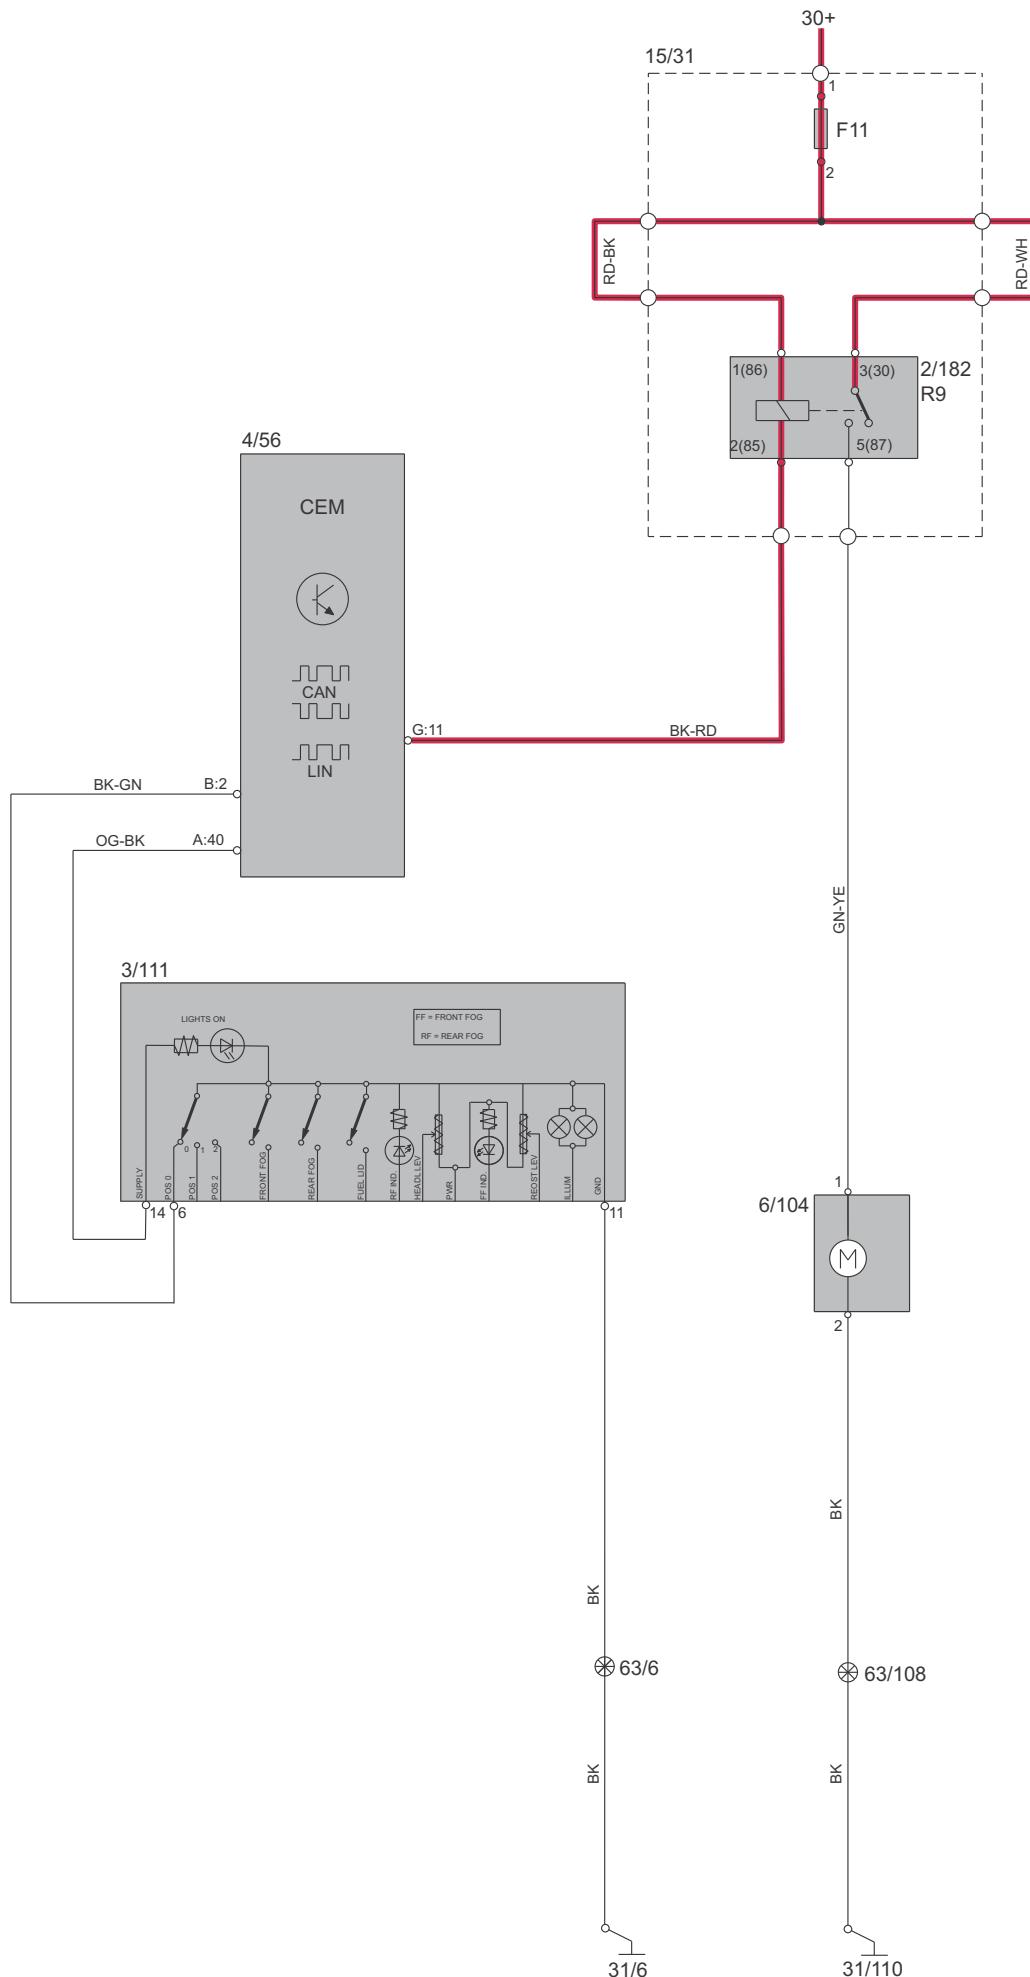

Group 36 Additional electrical equipment


Wiper/washer rear window C30/V50

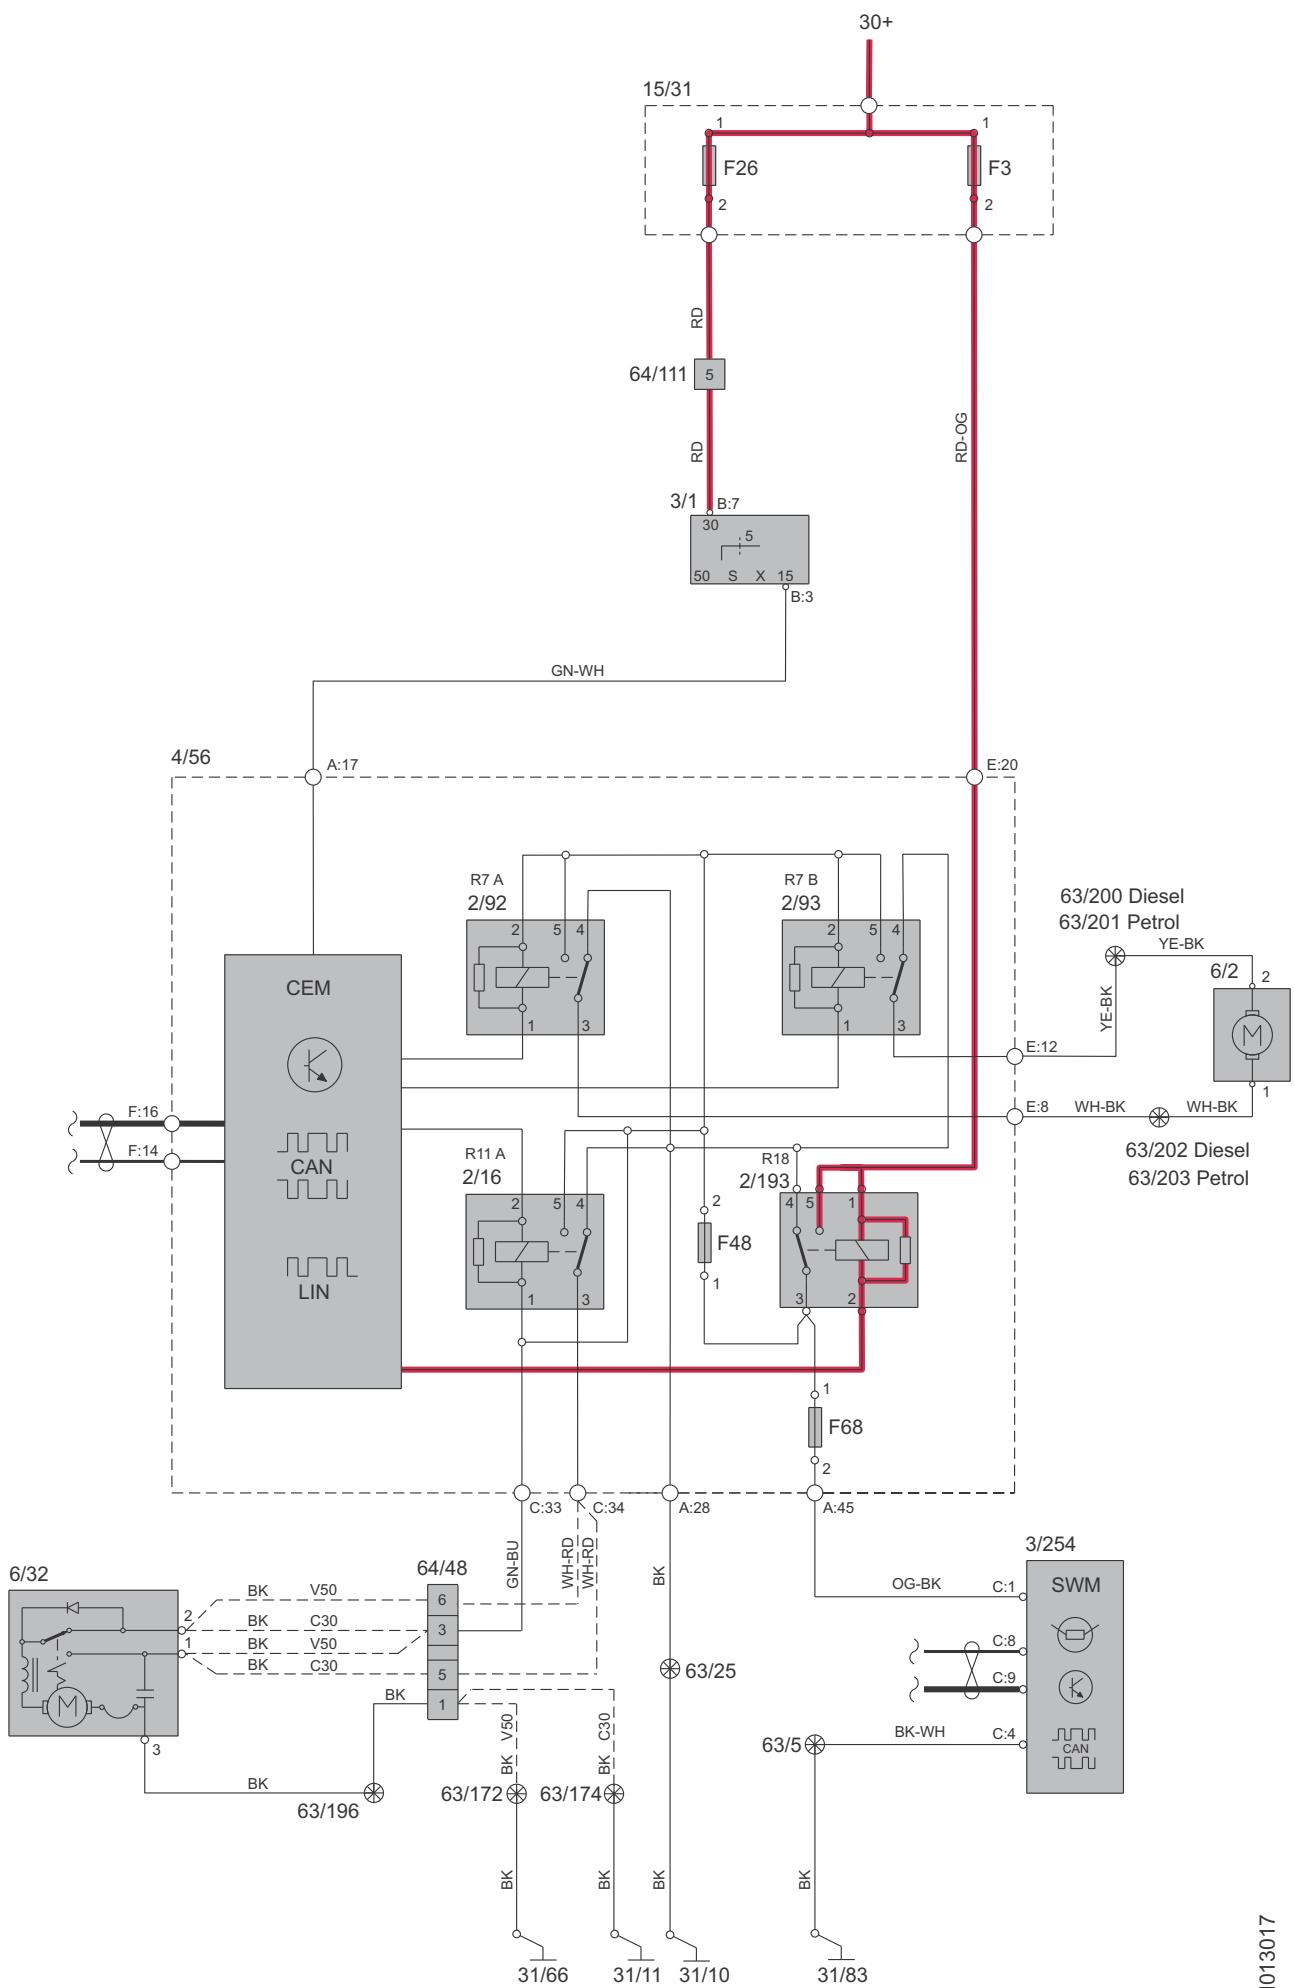

1013017


Group 36 Additional electrical equipment

Rain sensor

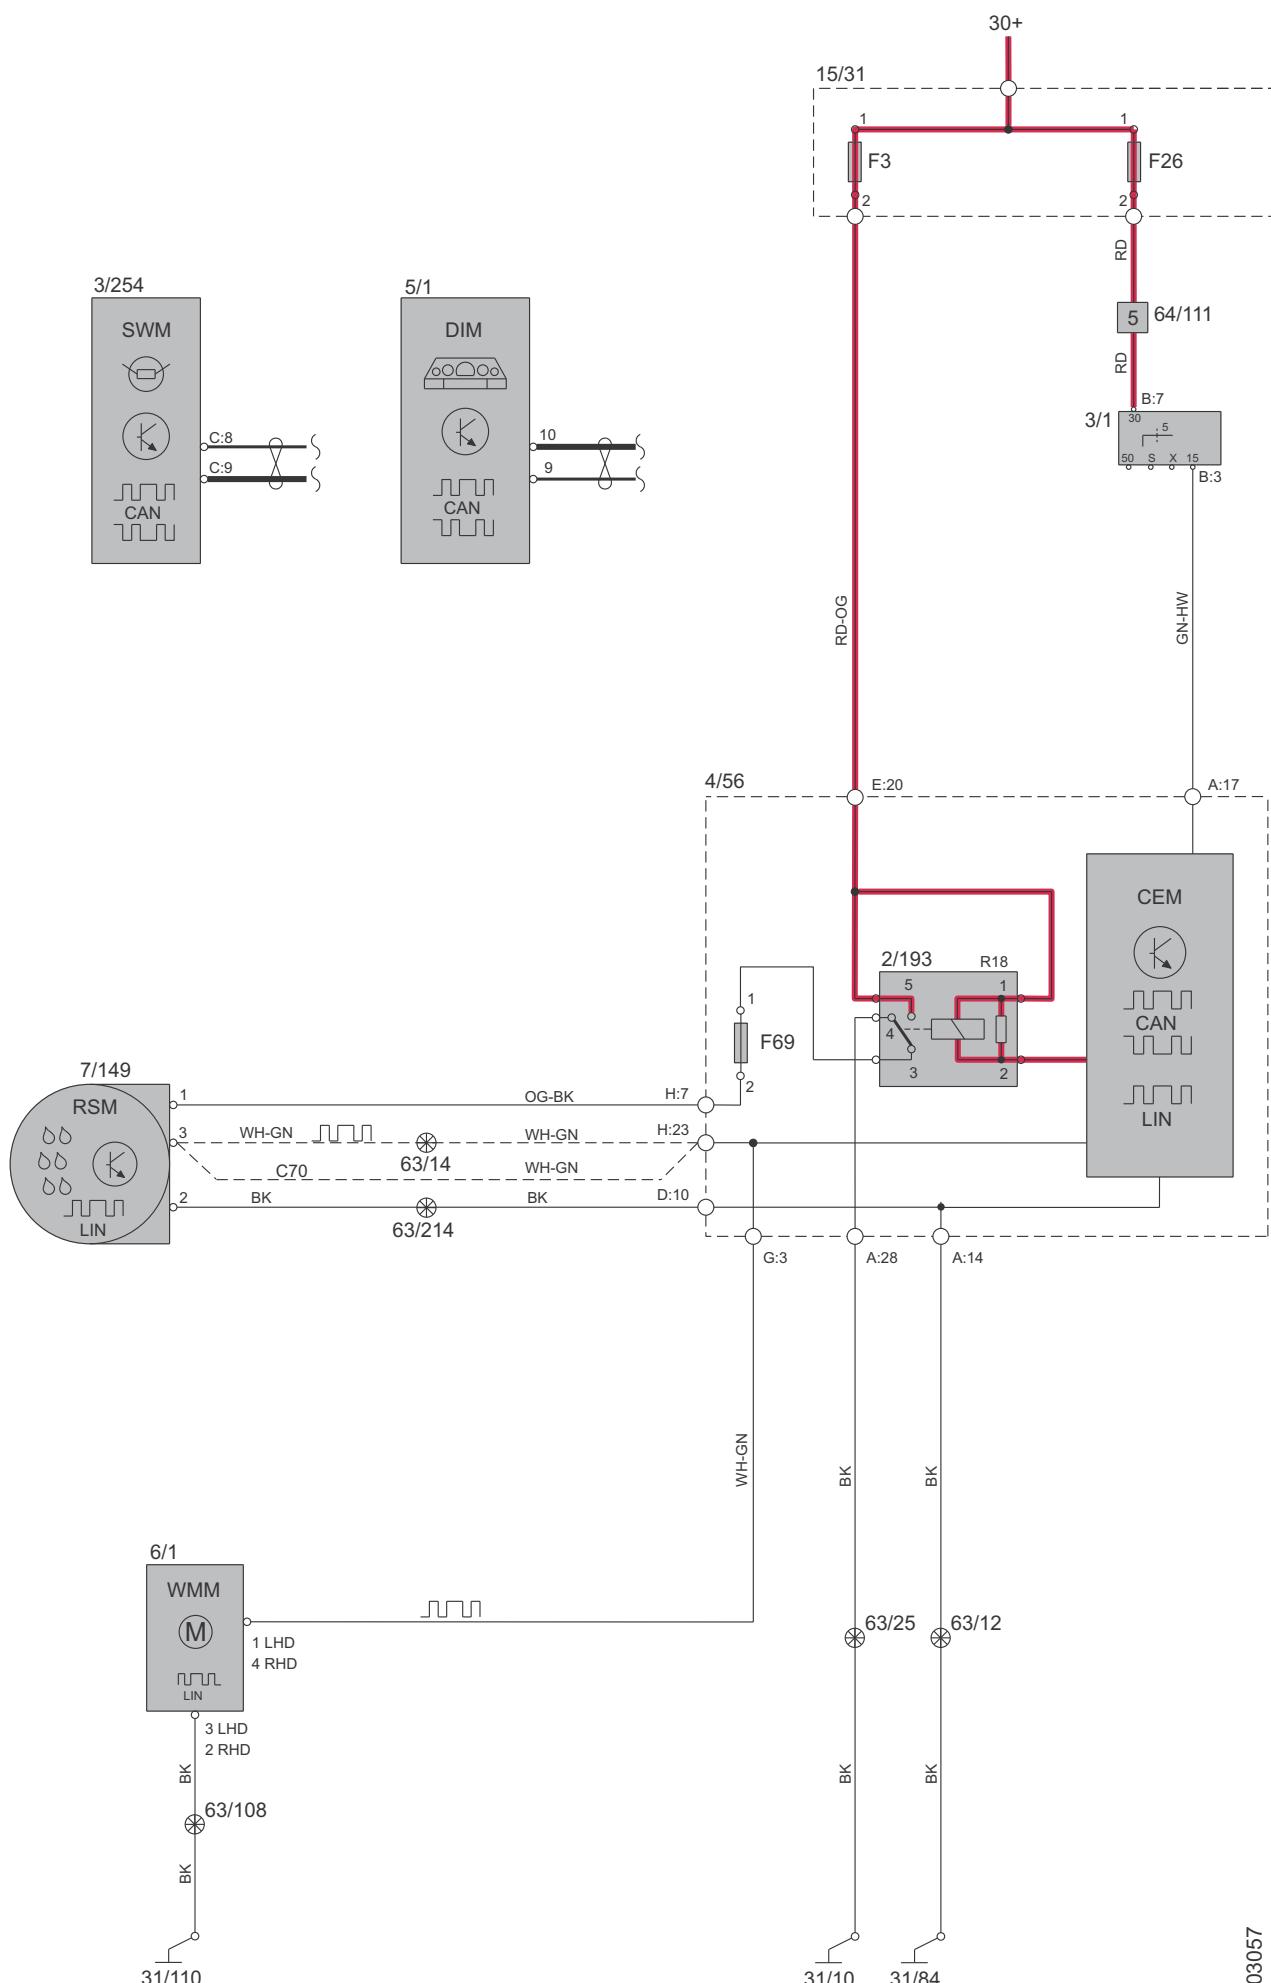


Group 36 Additional electrical equipment

Parking assistance

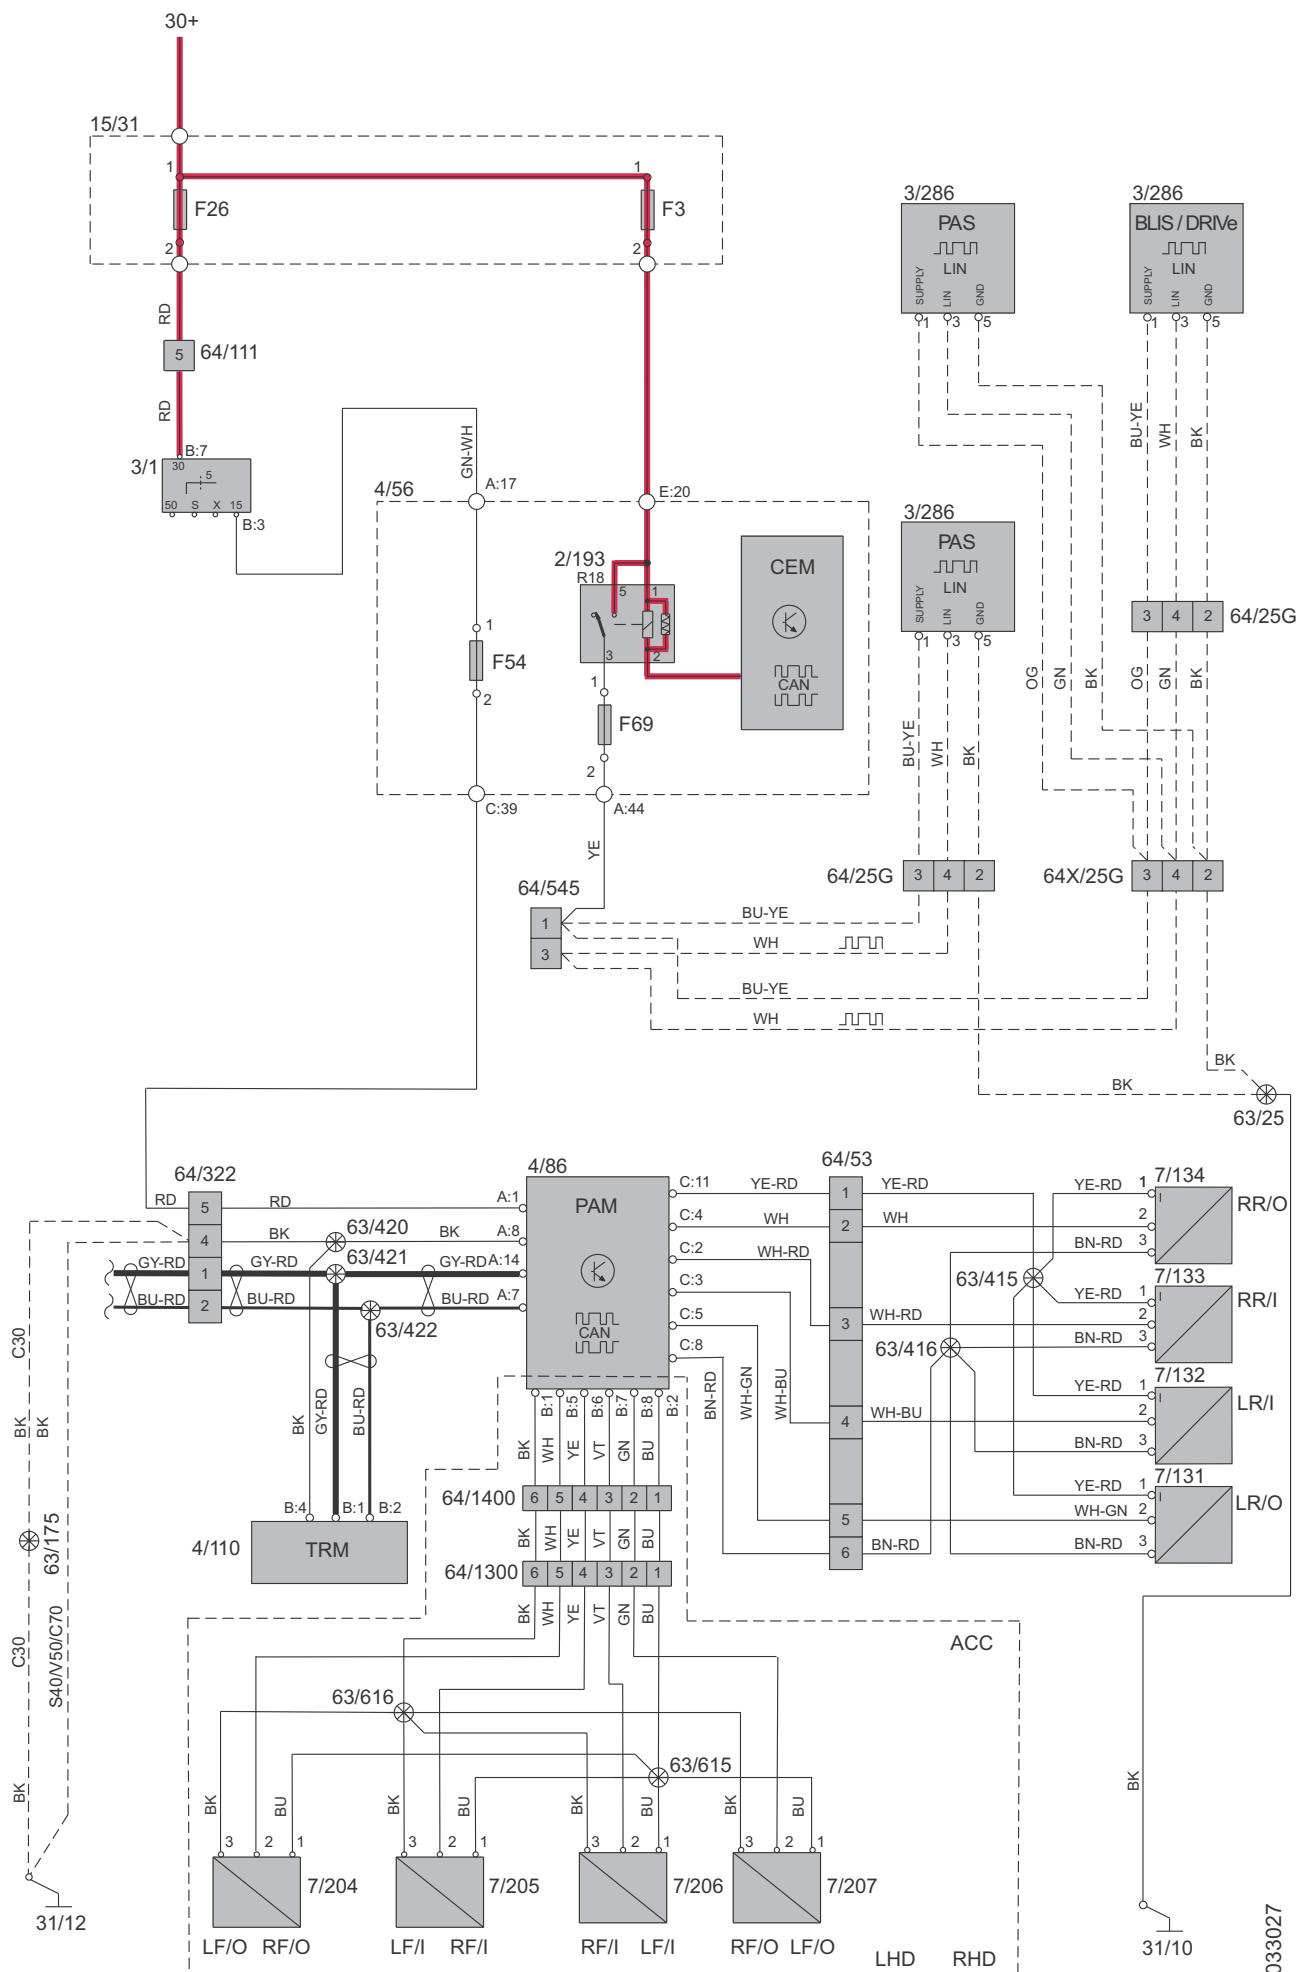


Group 36 Additional electrical equipment

Keyless vehicle C30/S40/V50 1:2

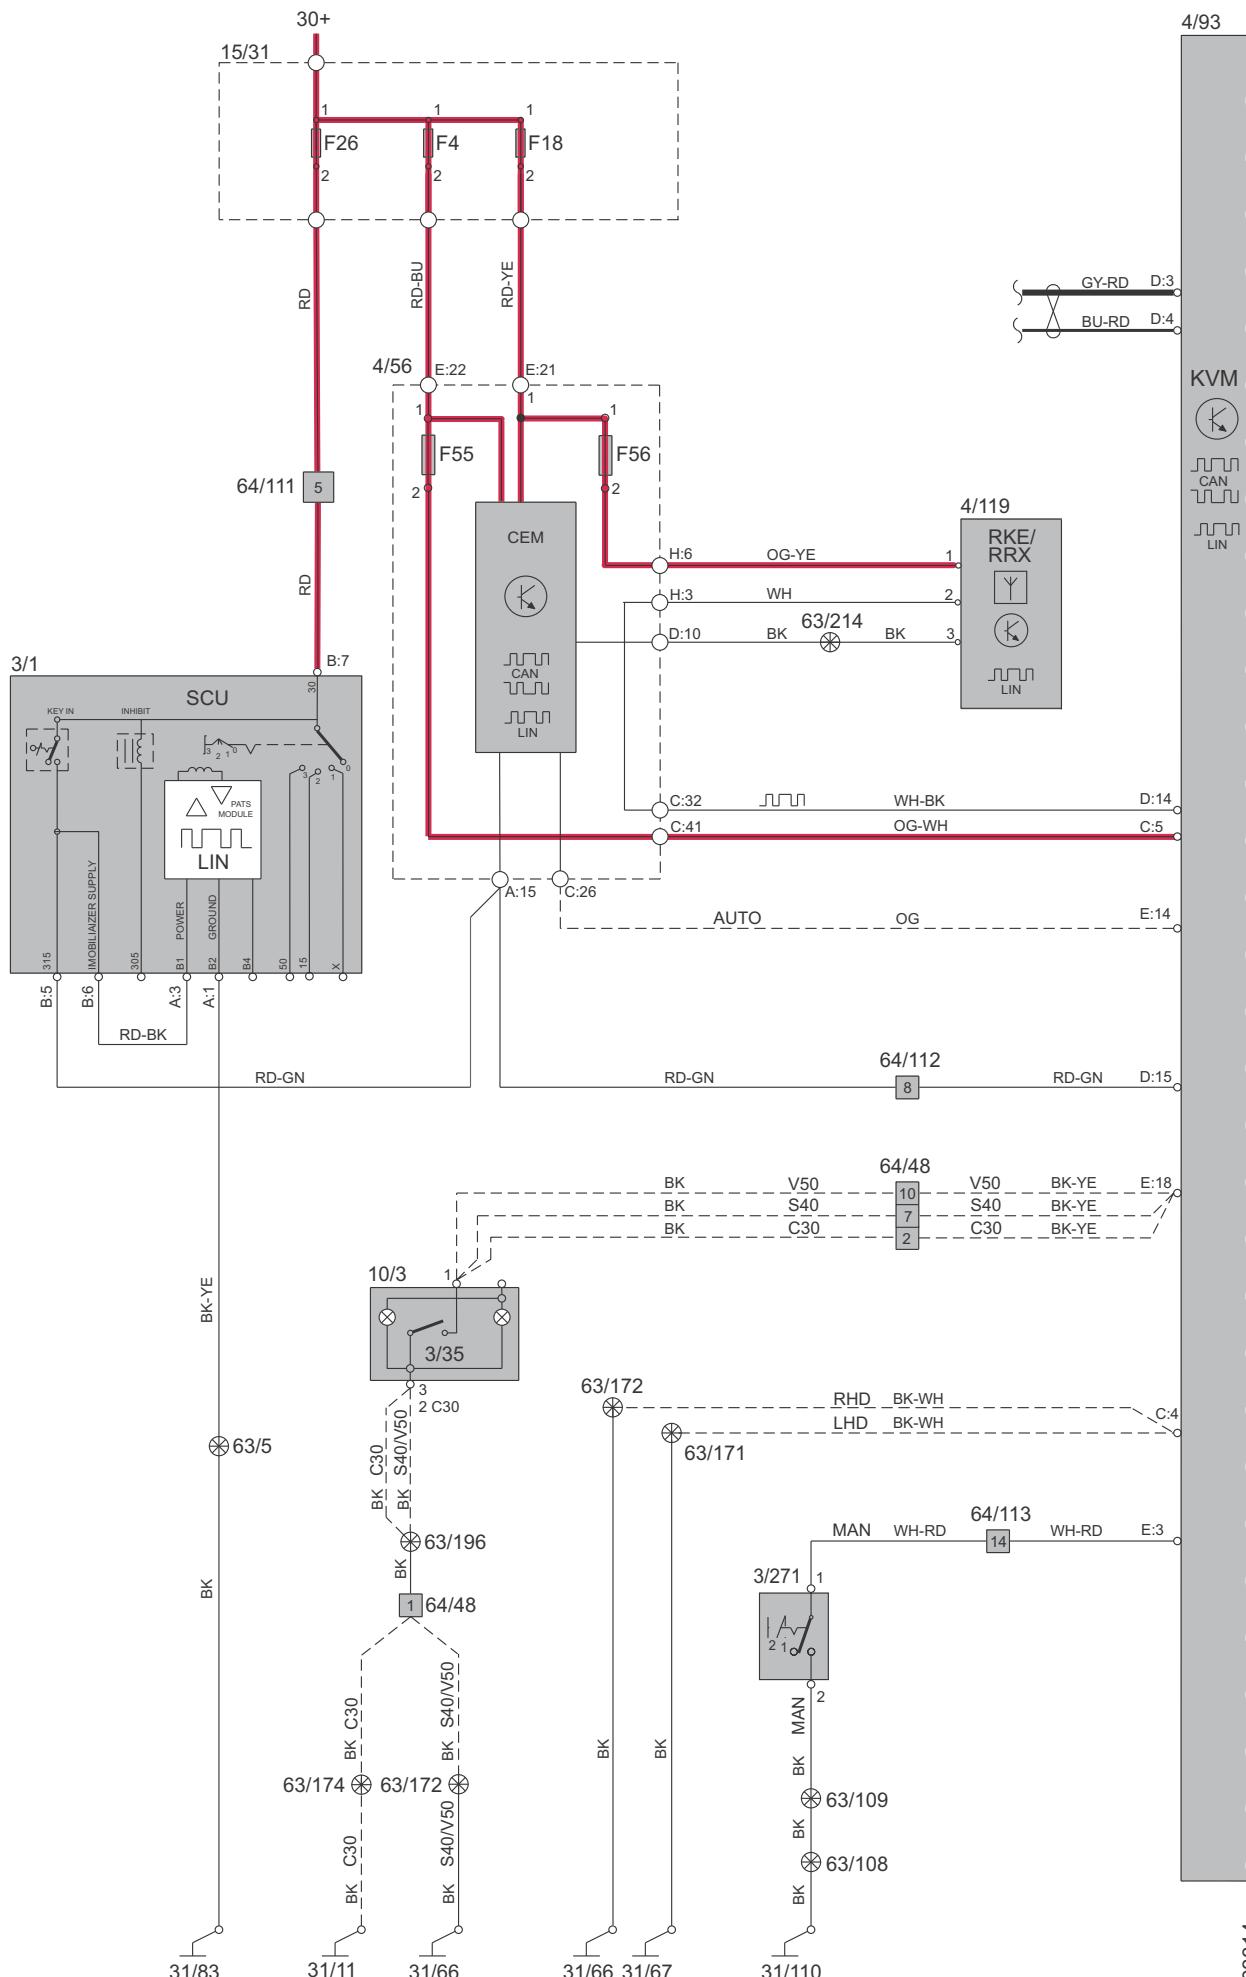

Group 36 Additional electrical equipment


Keyless vehicle C30/S40/V50 2:2

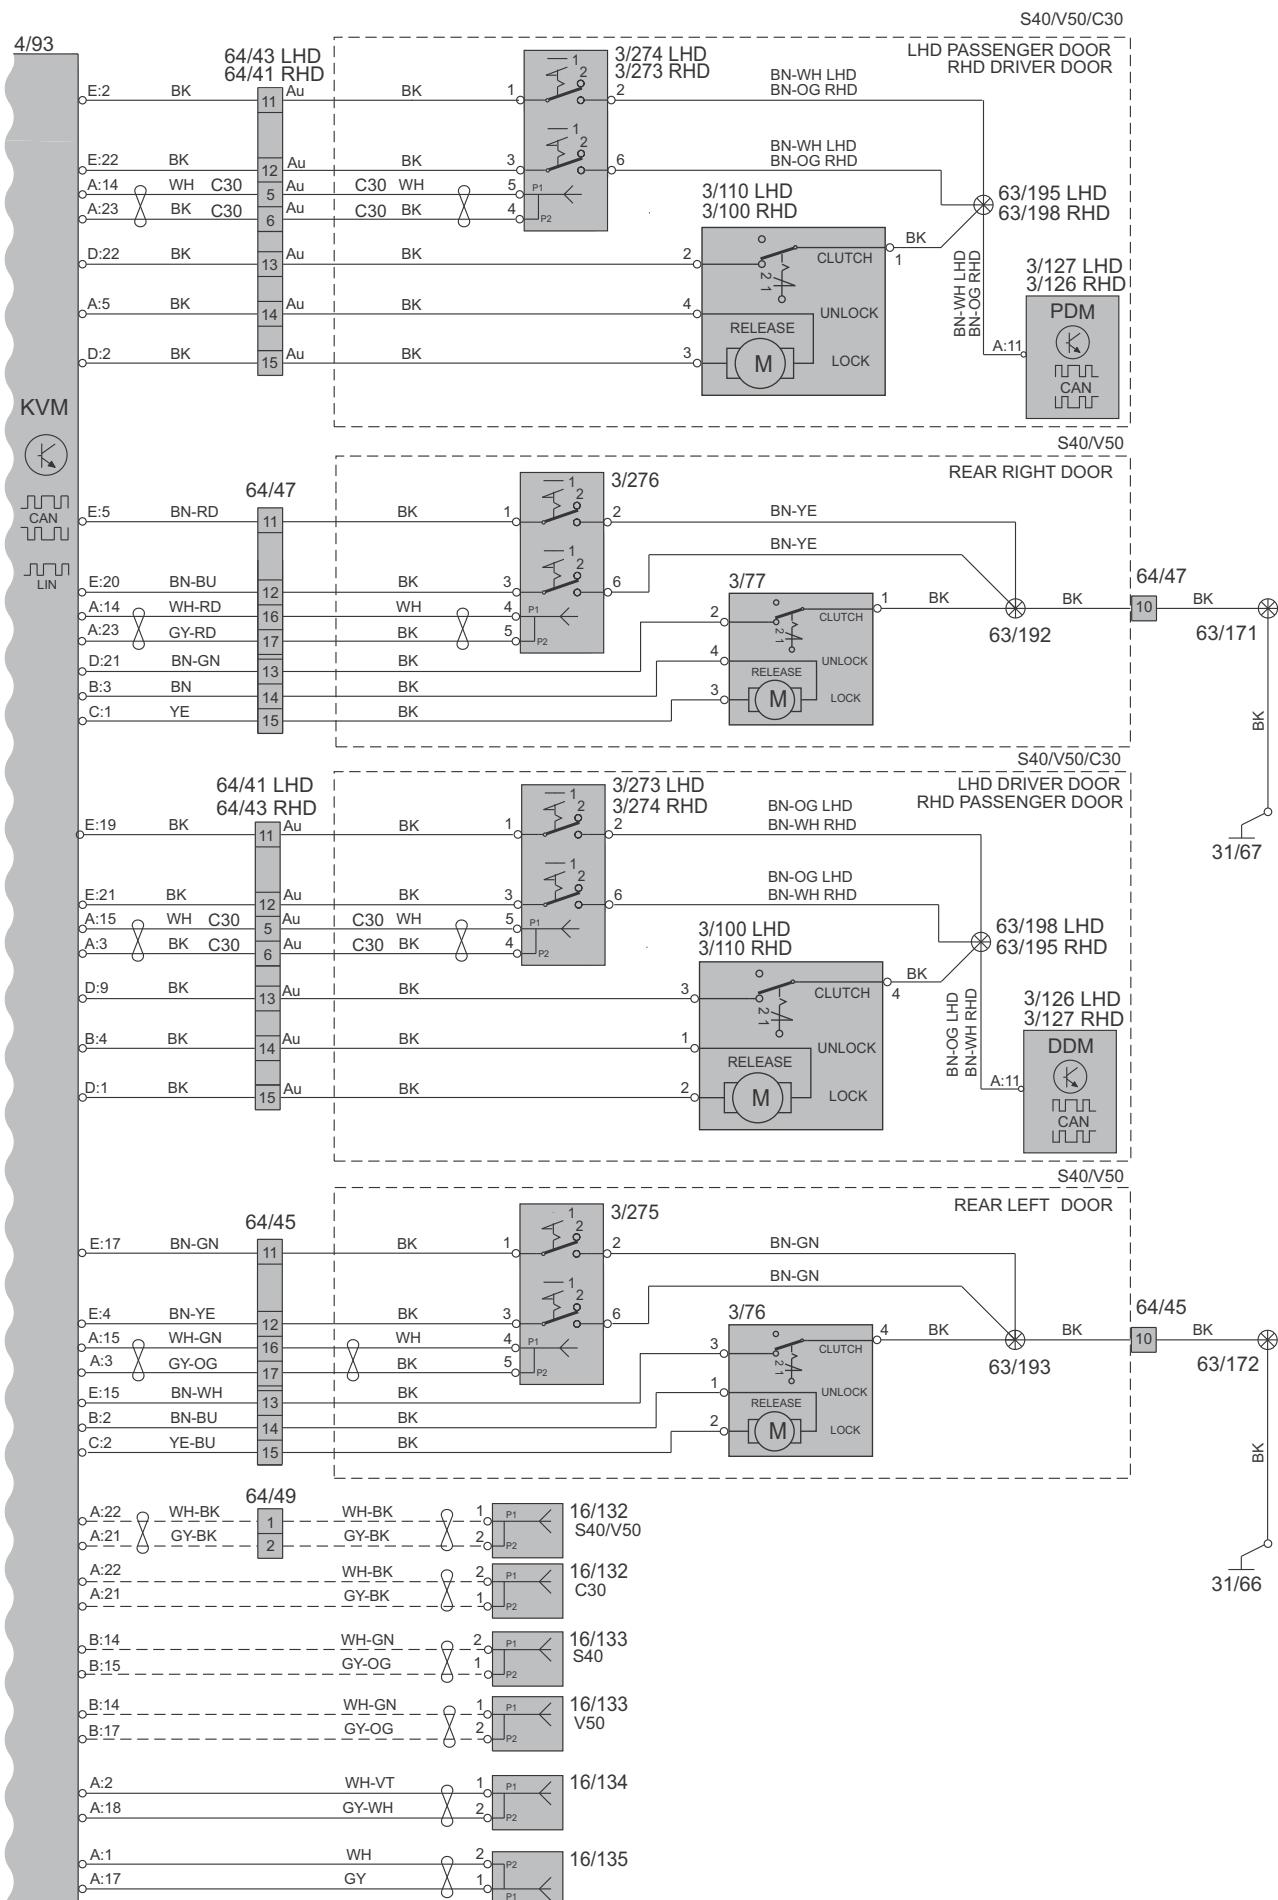

G030039

Group 36 Additional electrical equipment


Keyless vehicle C70 1:2

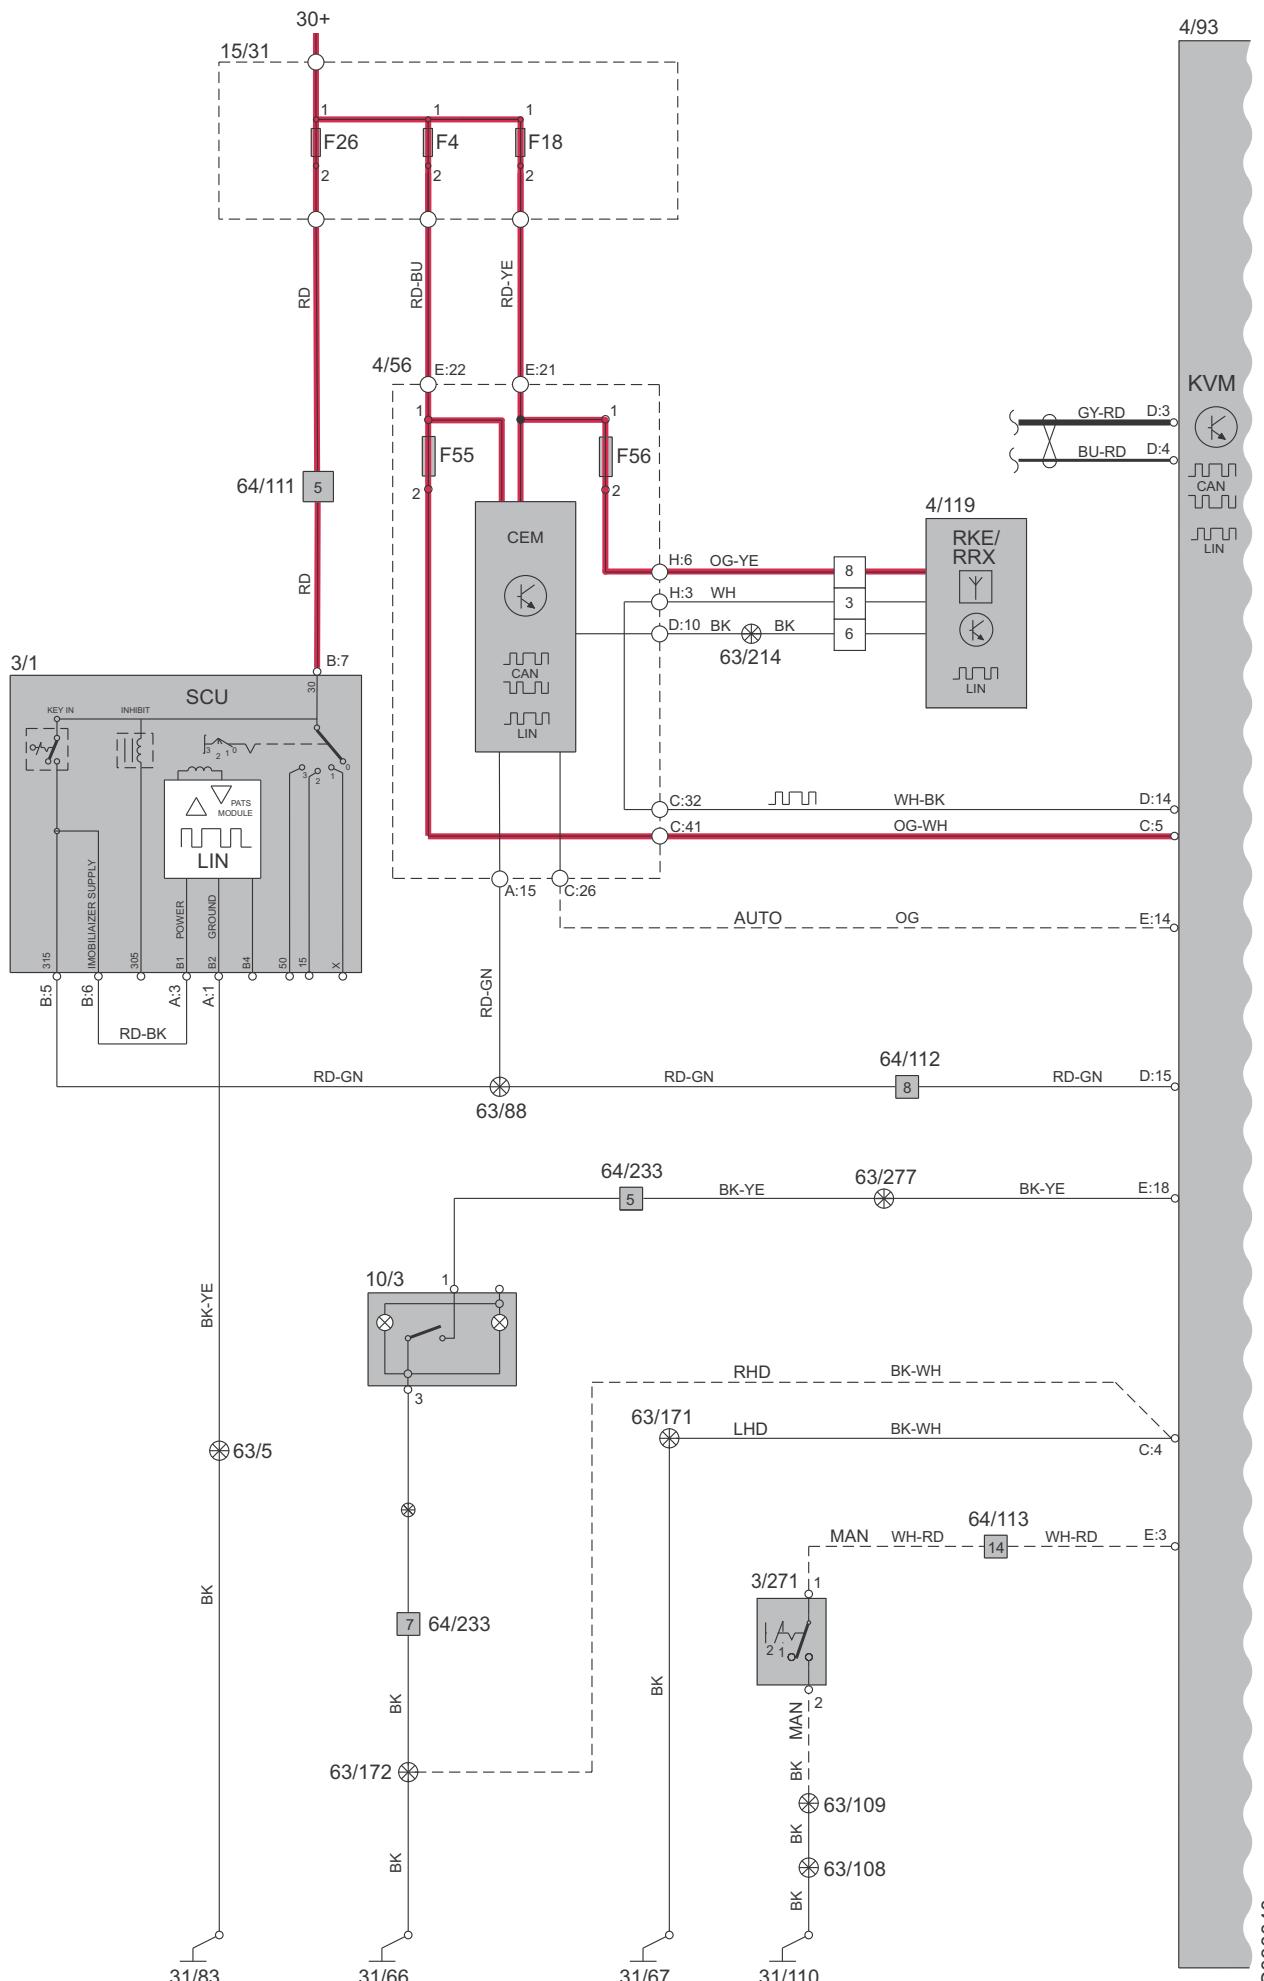

Group 36 Additional electrical equipment


Keyless vehicle C70 2:2

4/93

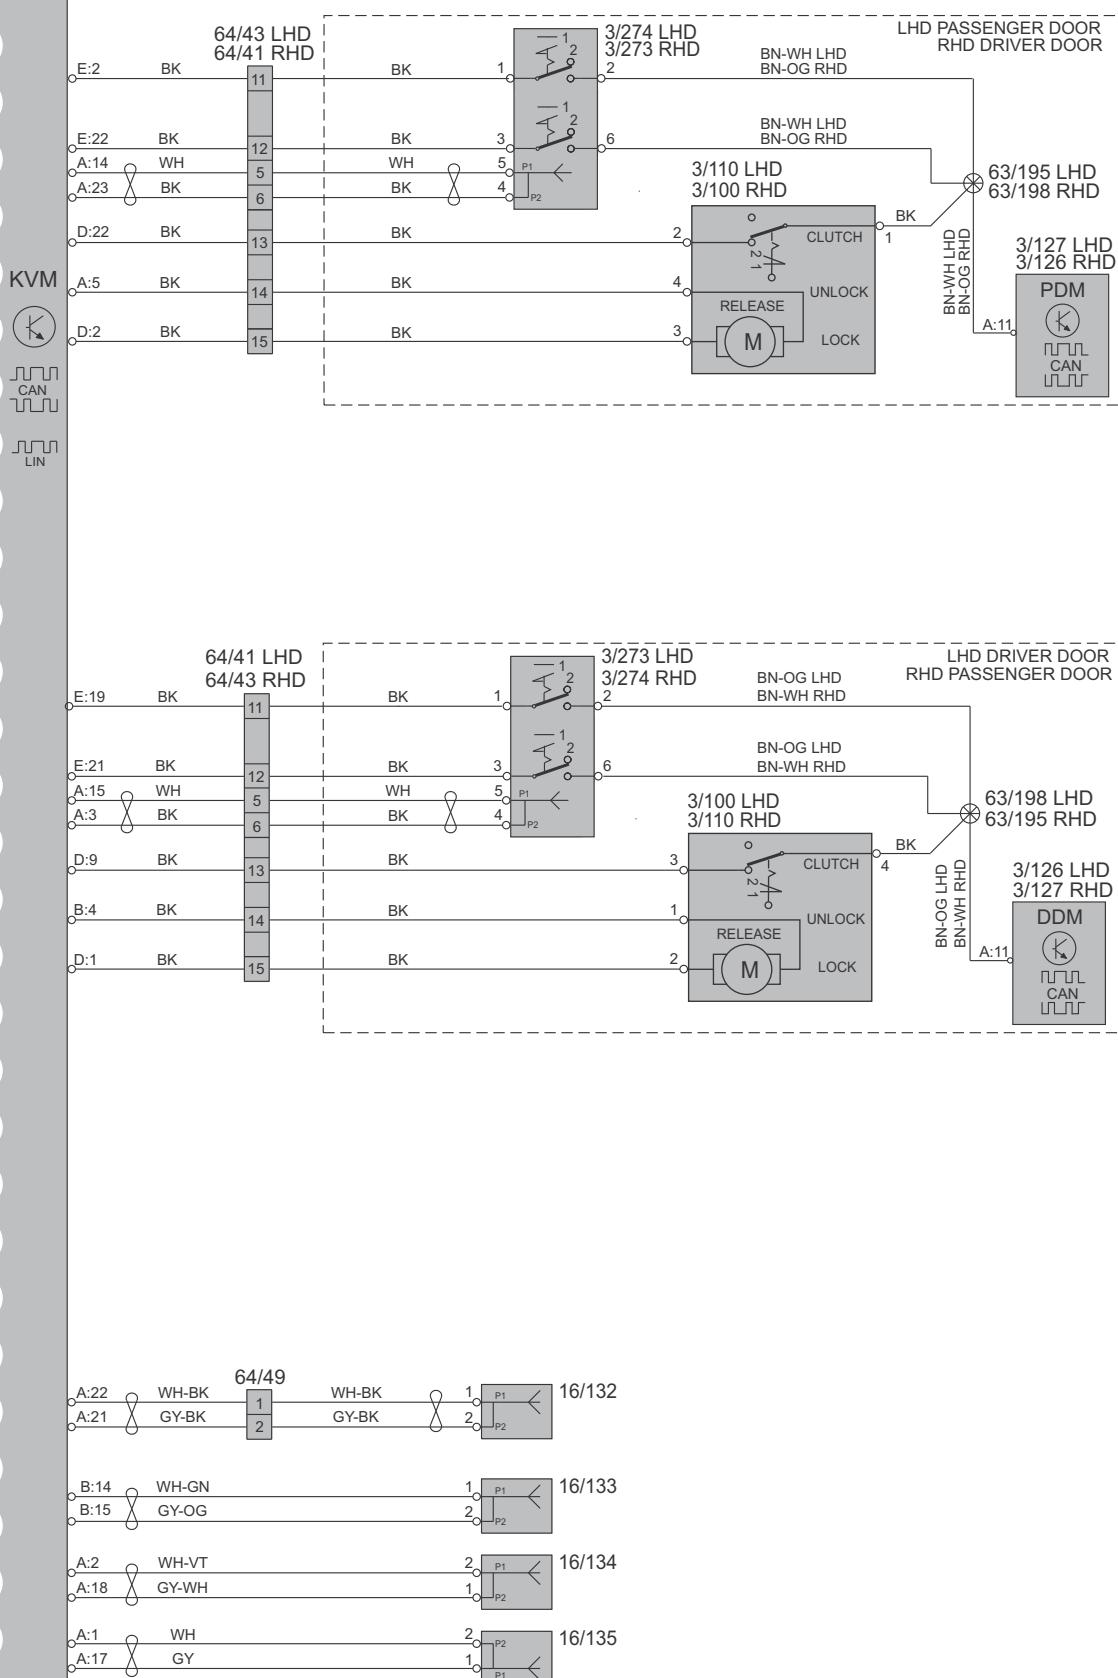


G030041

Group 36 Additional electrical equipment Immobilizer/Steering column lock (SCL)

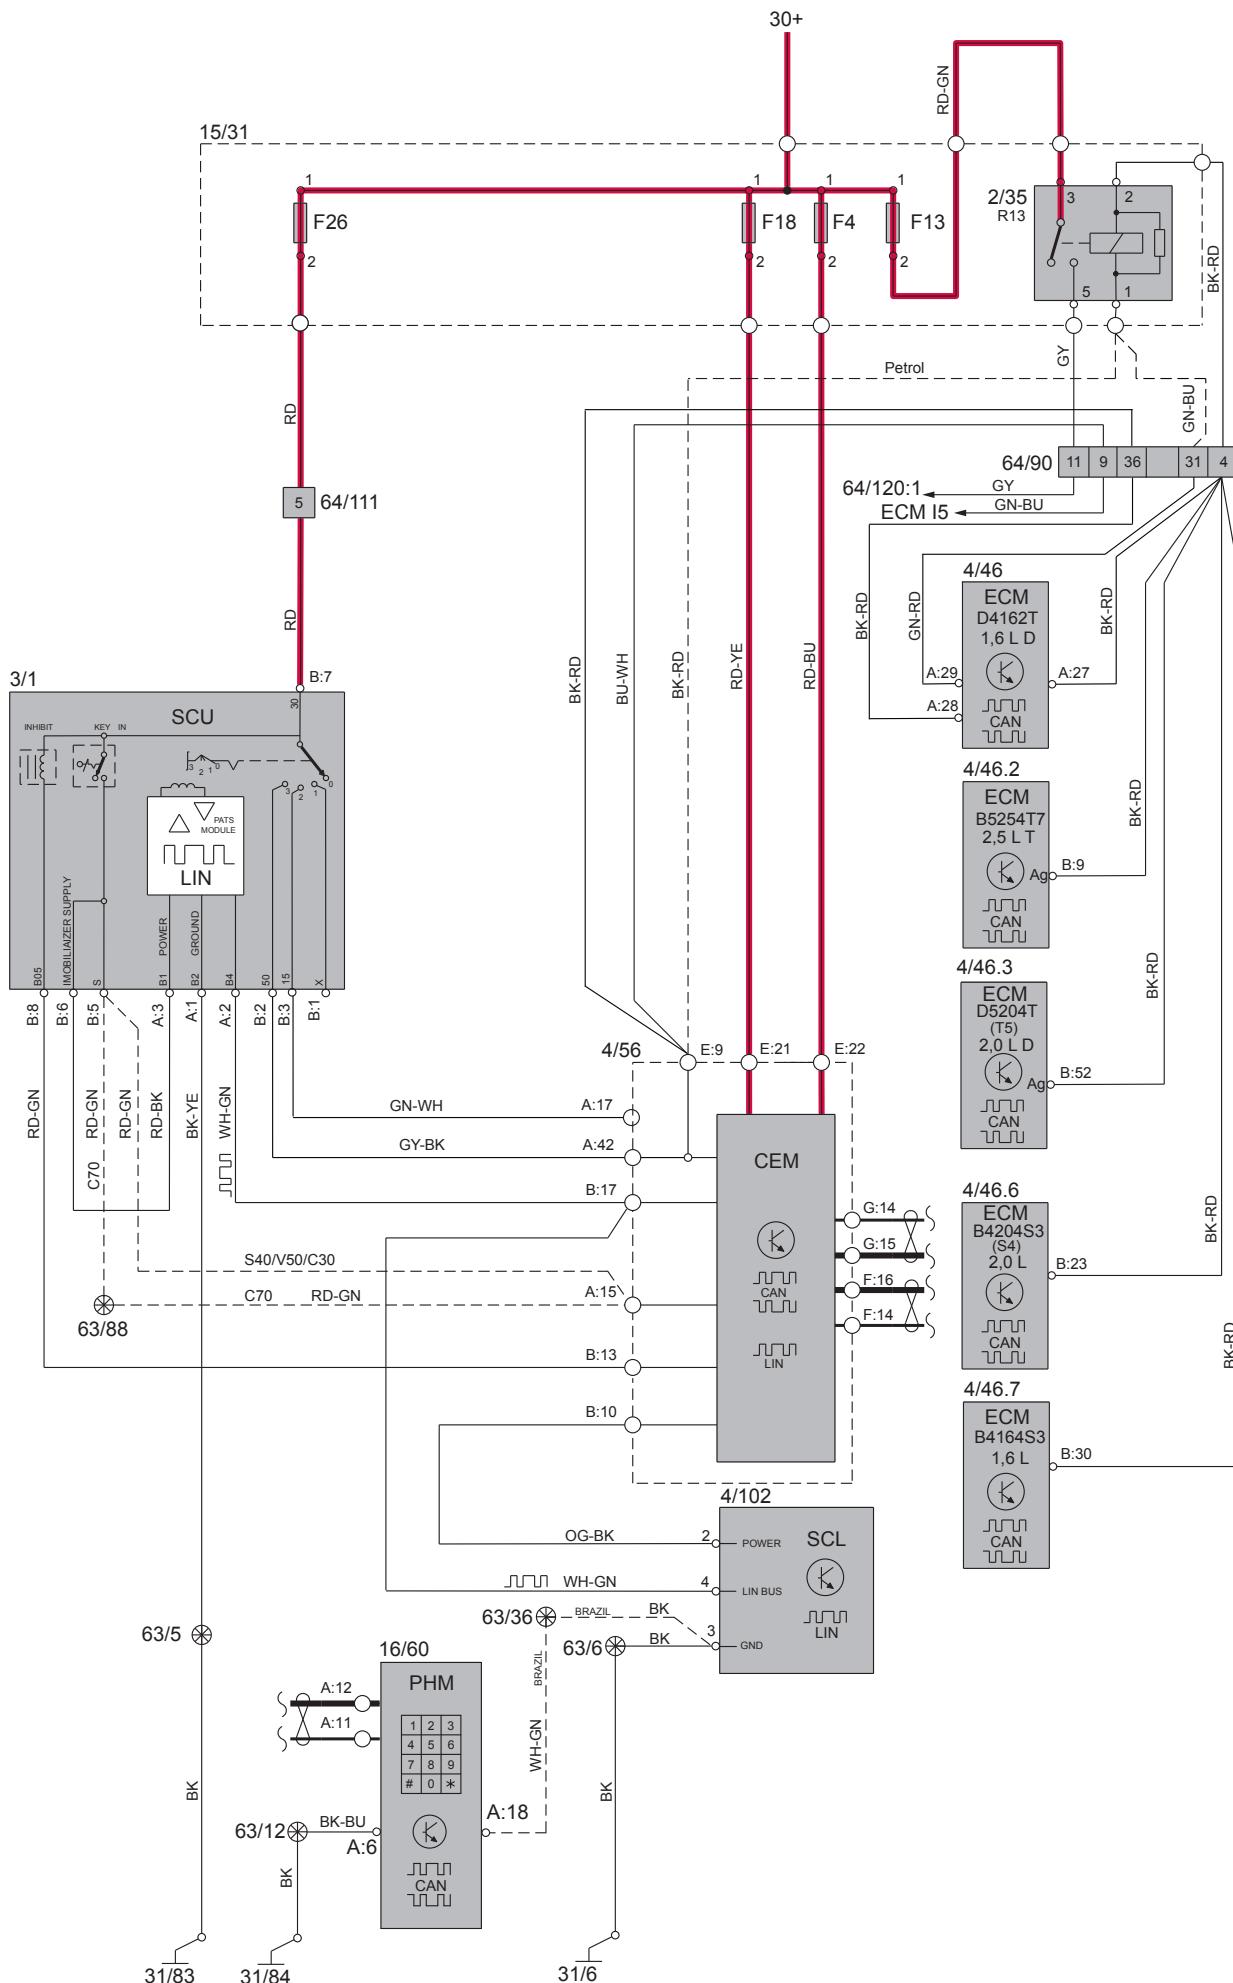


Group 36 Additional electrical equipment

Horn

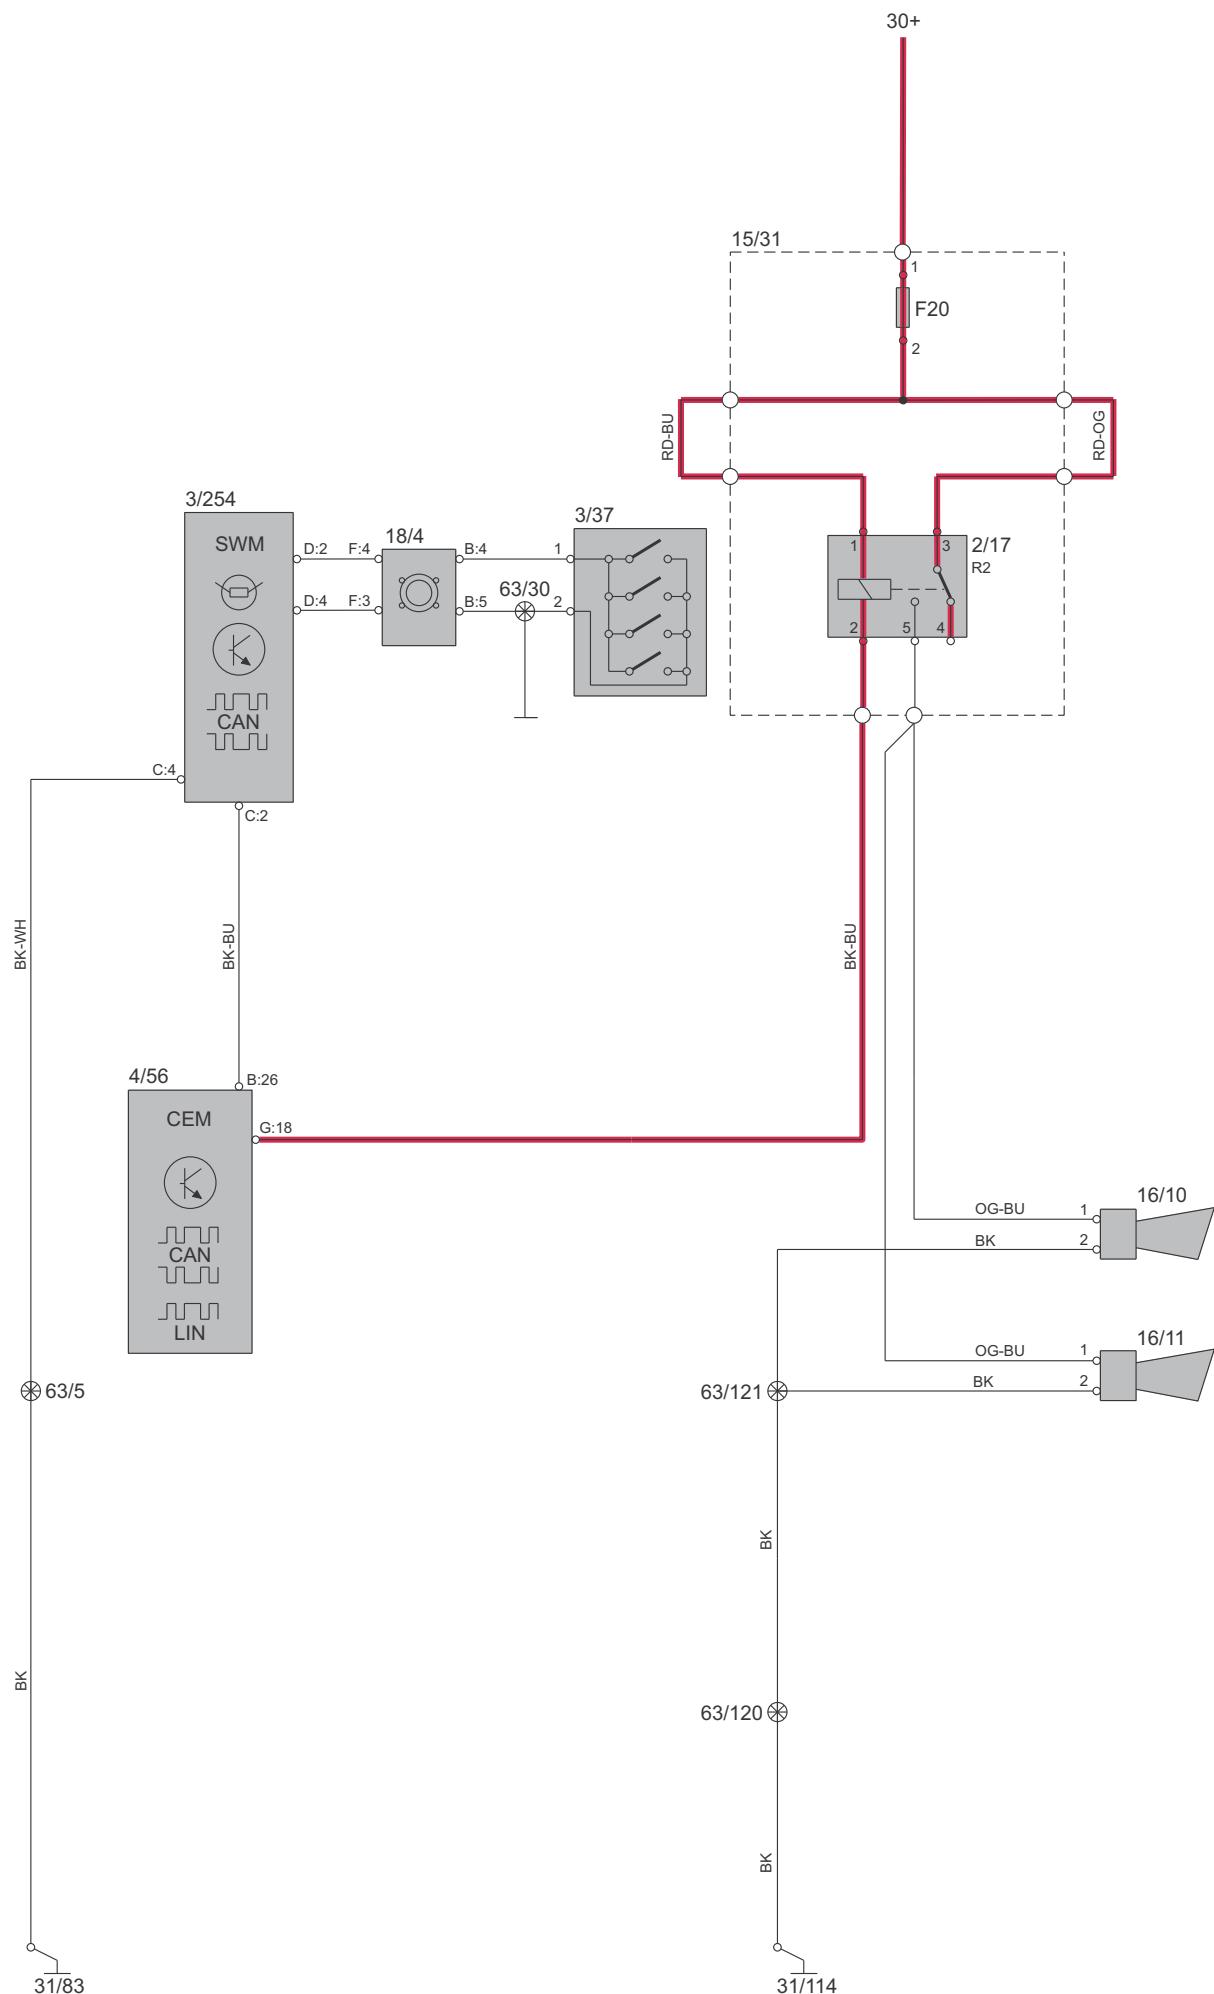


Group 36 Additional electrical equipment

Anti-theft alarm C30

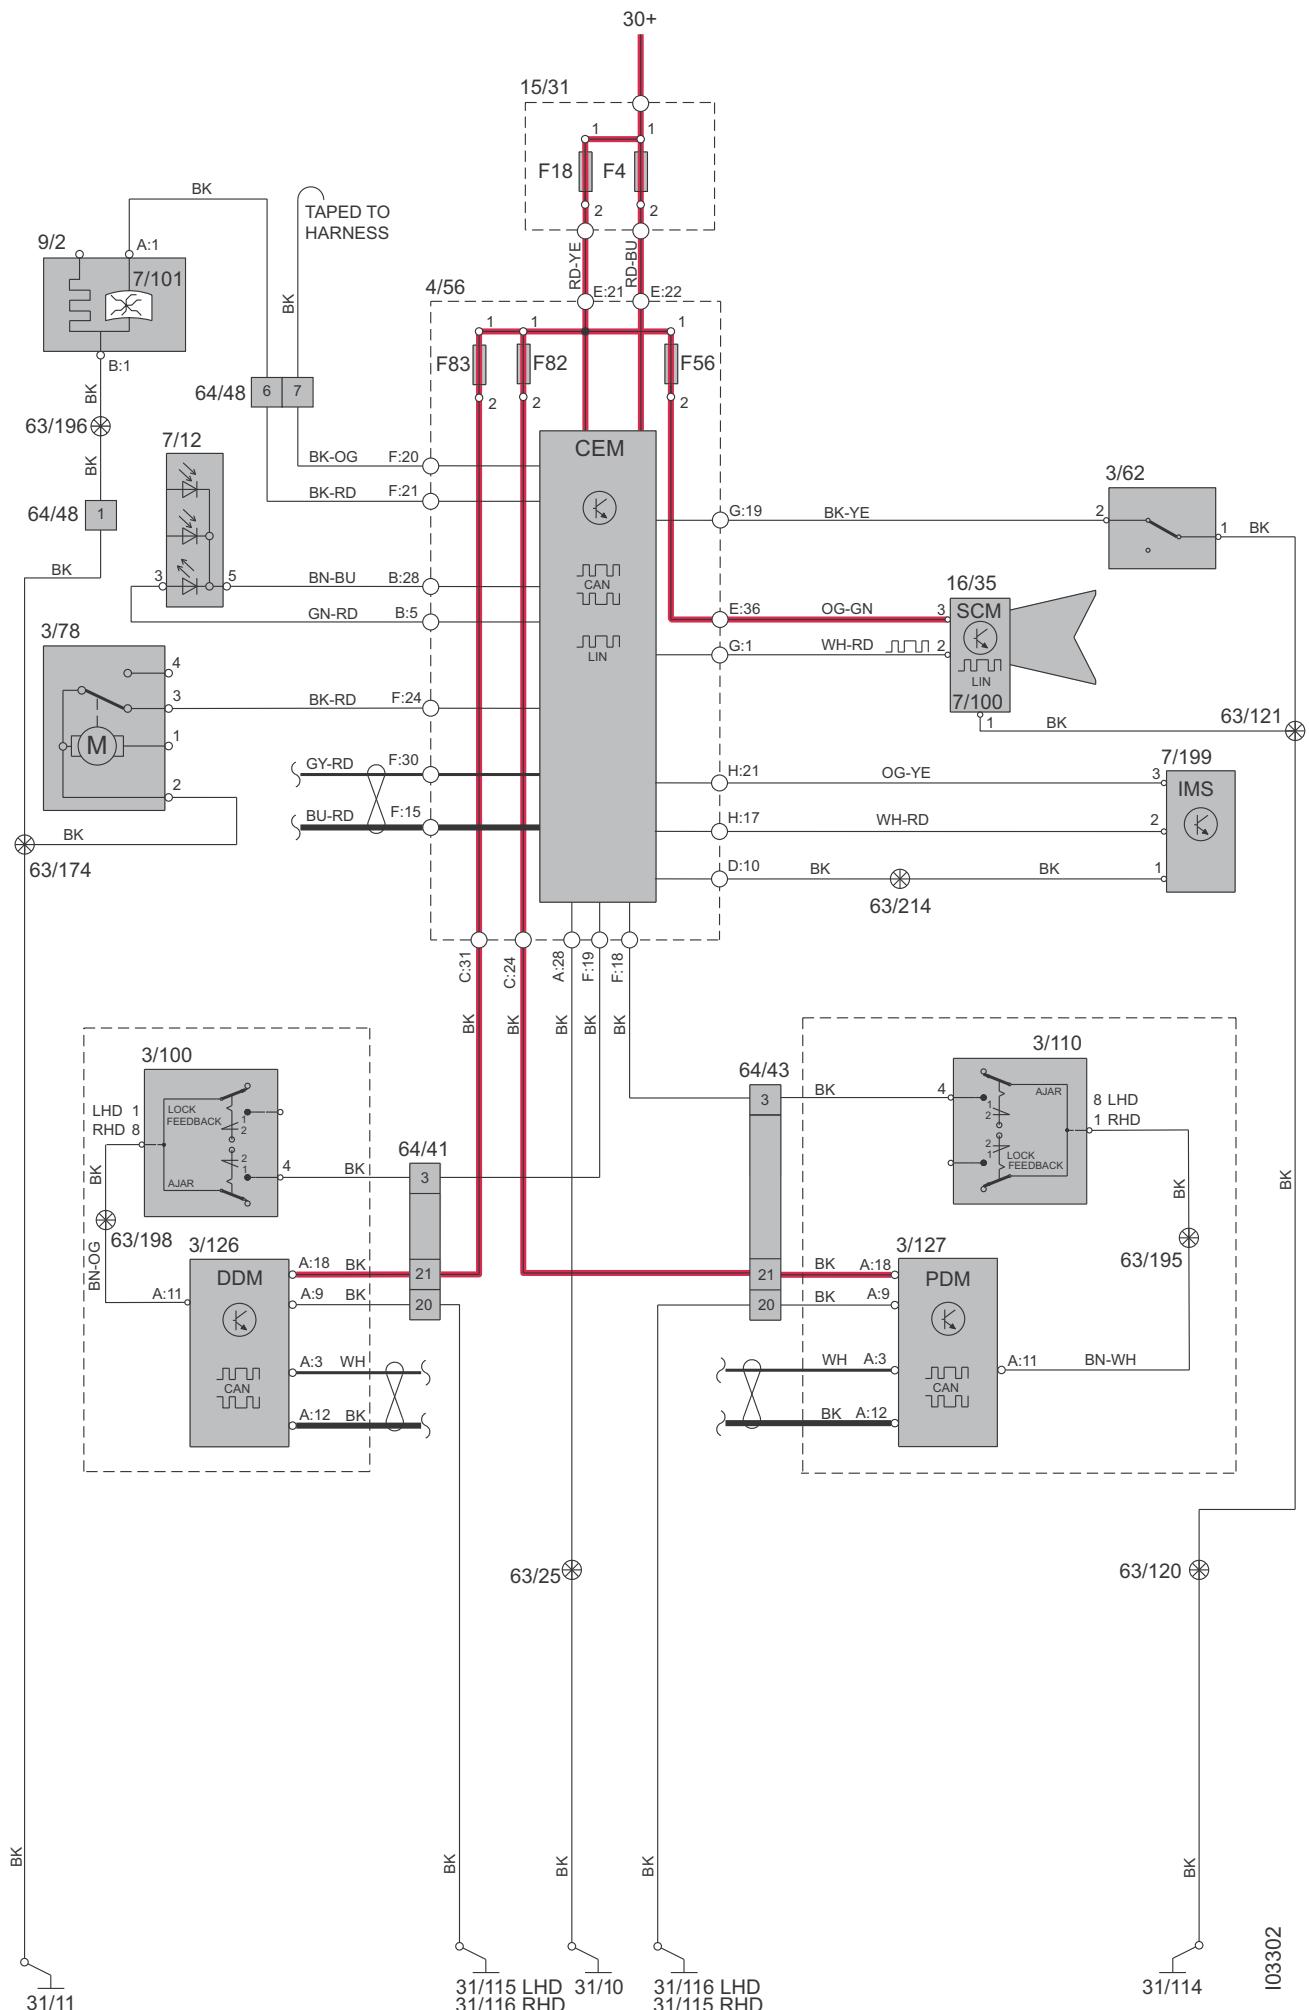


Group 36 Additional electrical equipment

Anti-theft alarm S40/V50

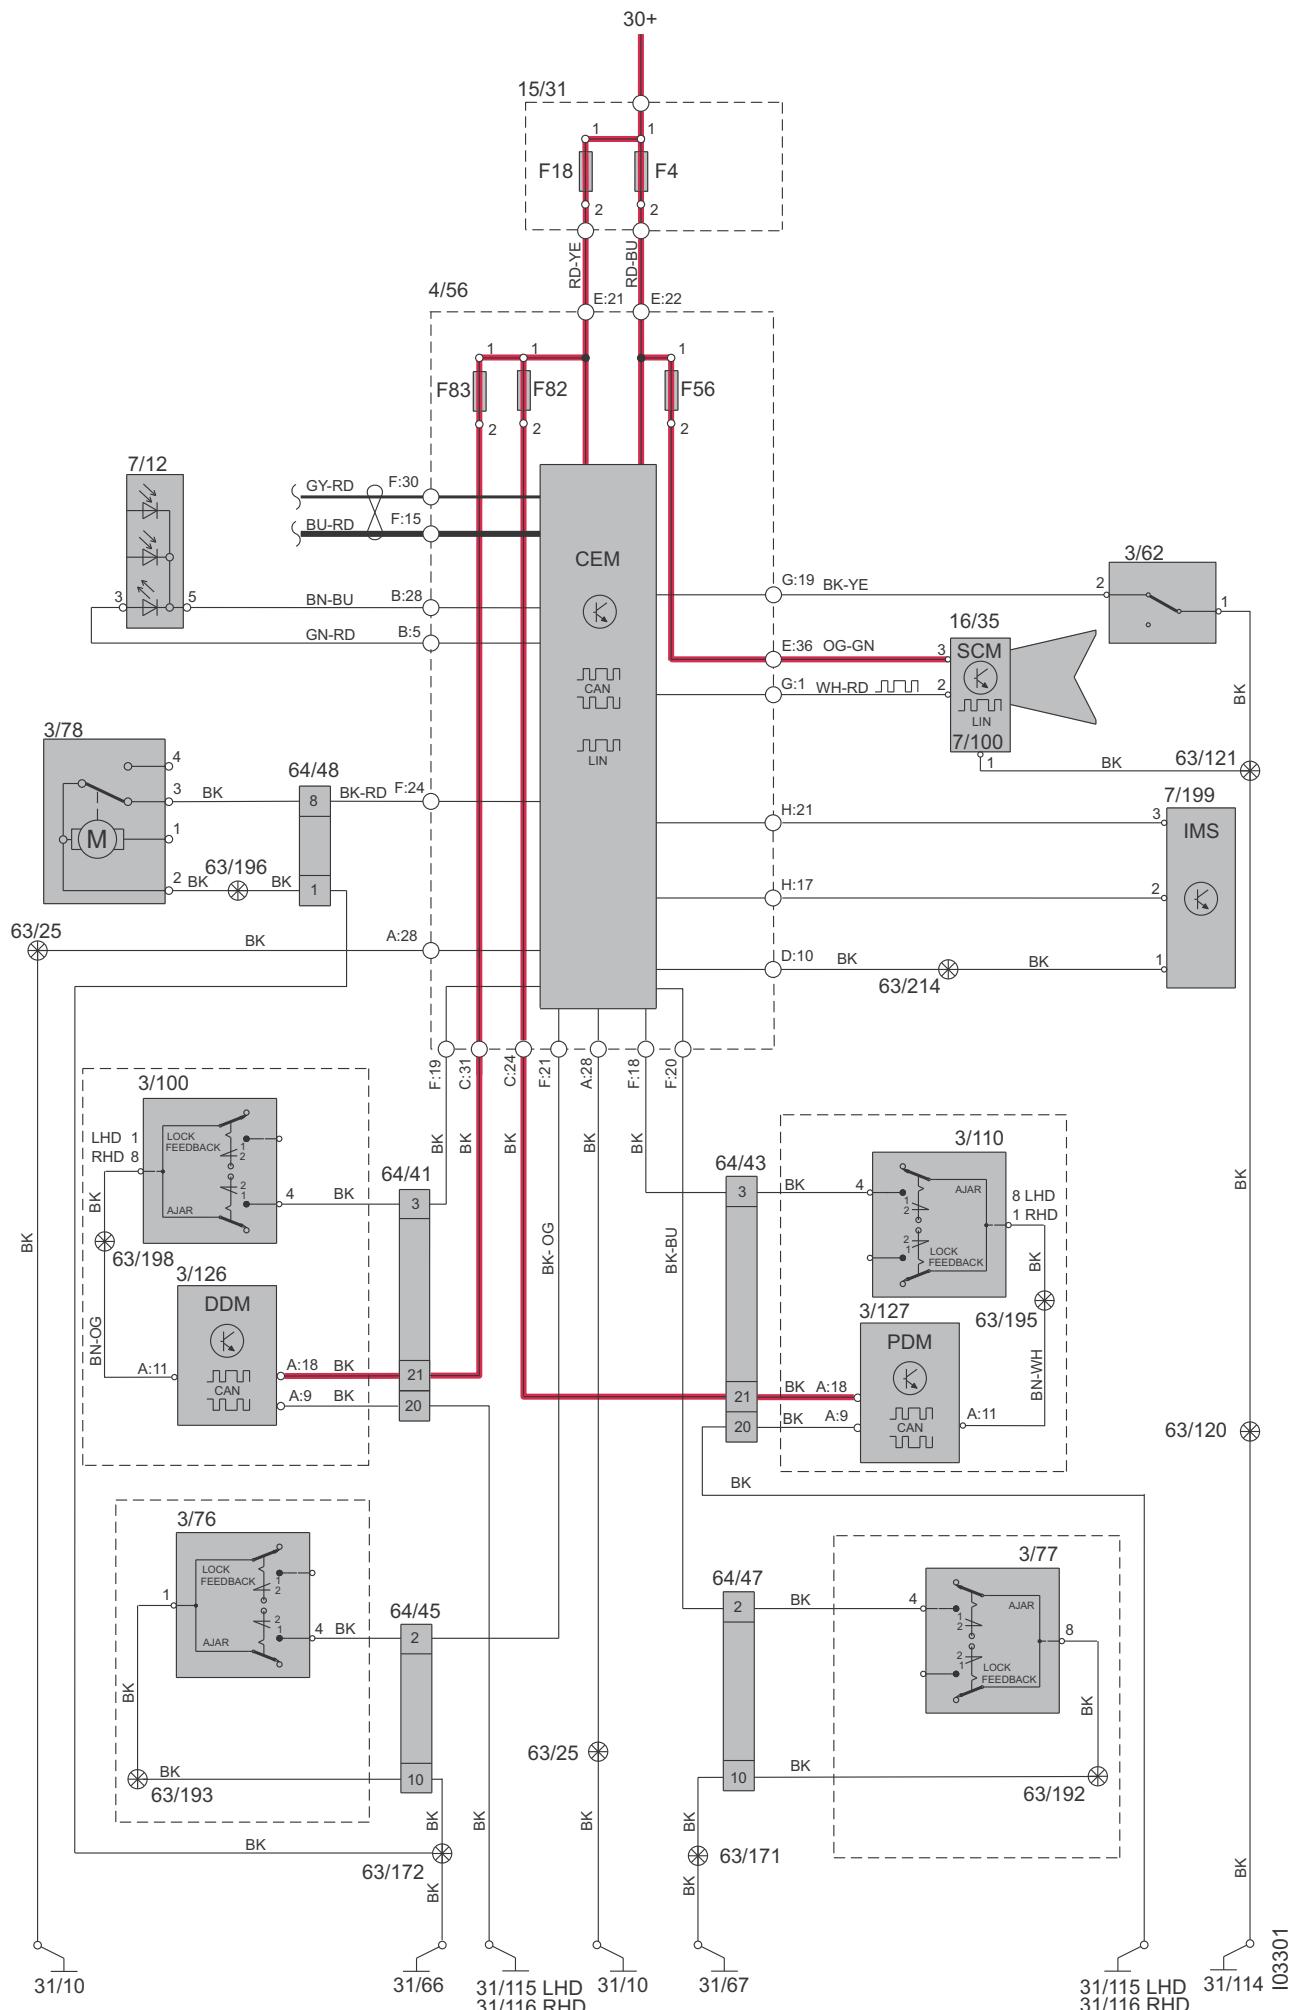


Group 36 Additional electrical equipment

Anti-theft alarm C70

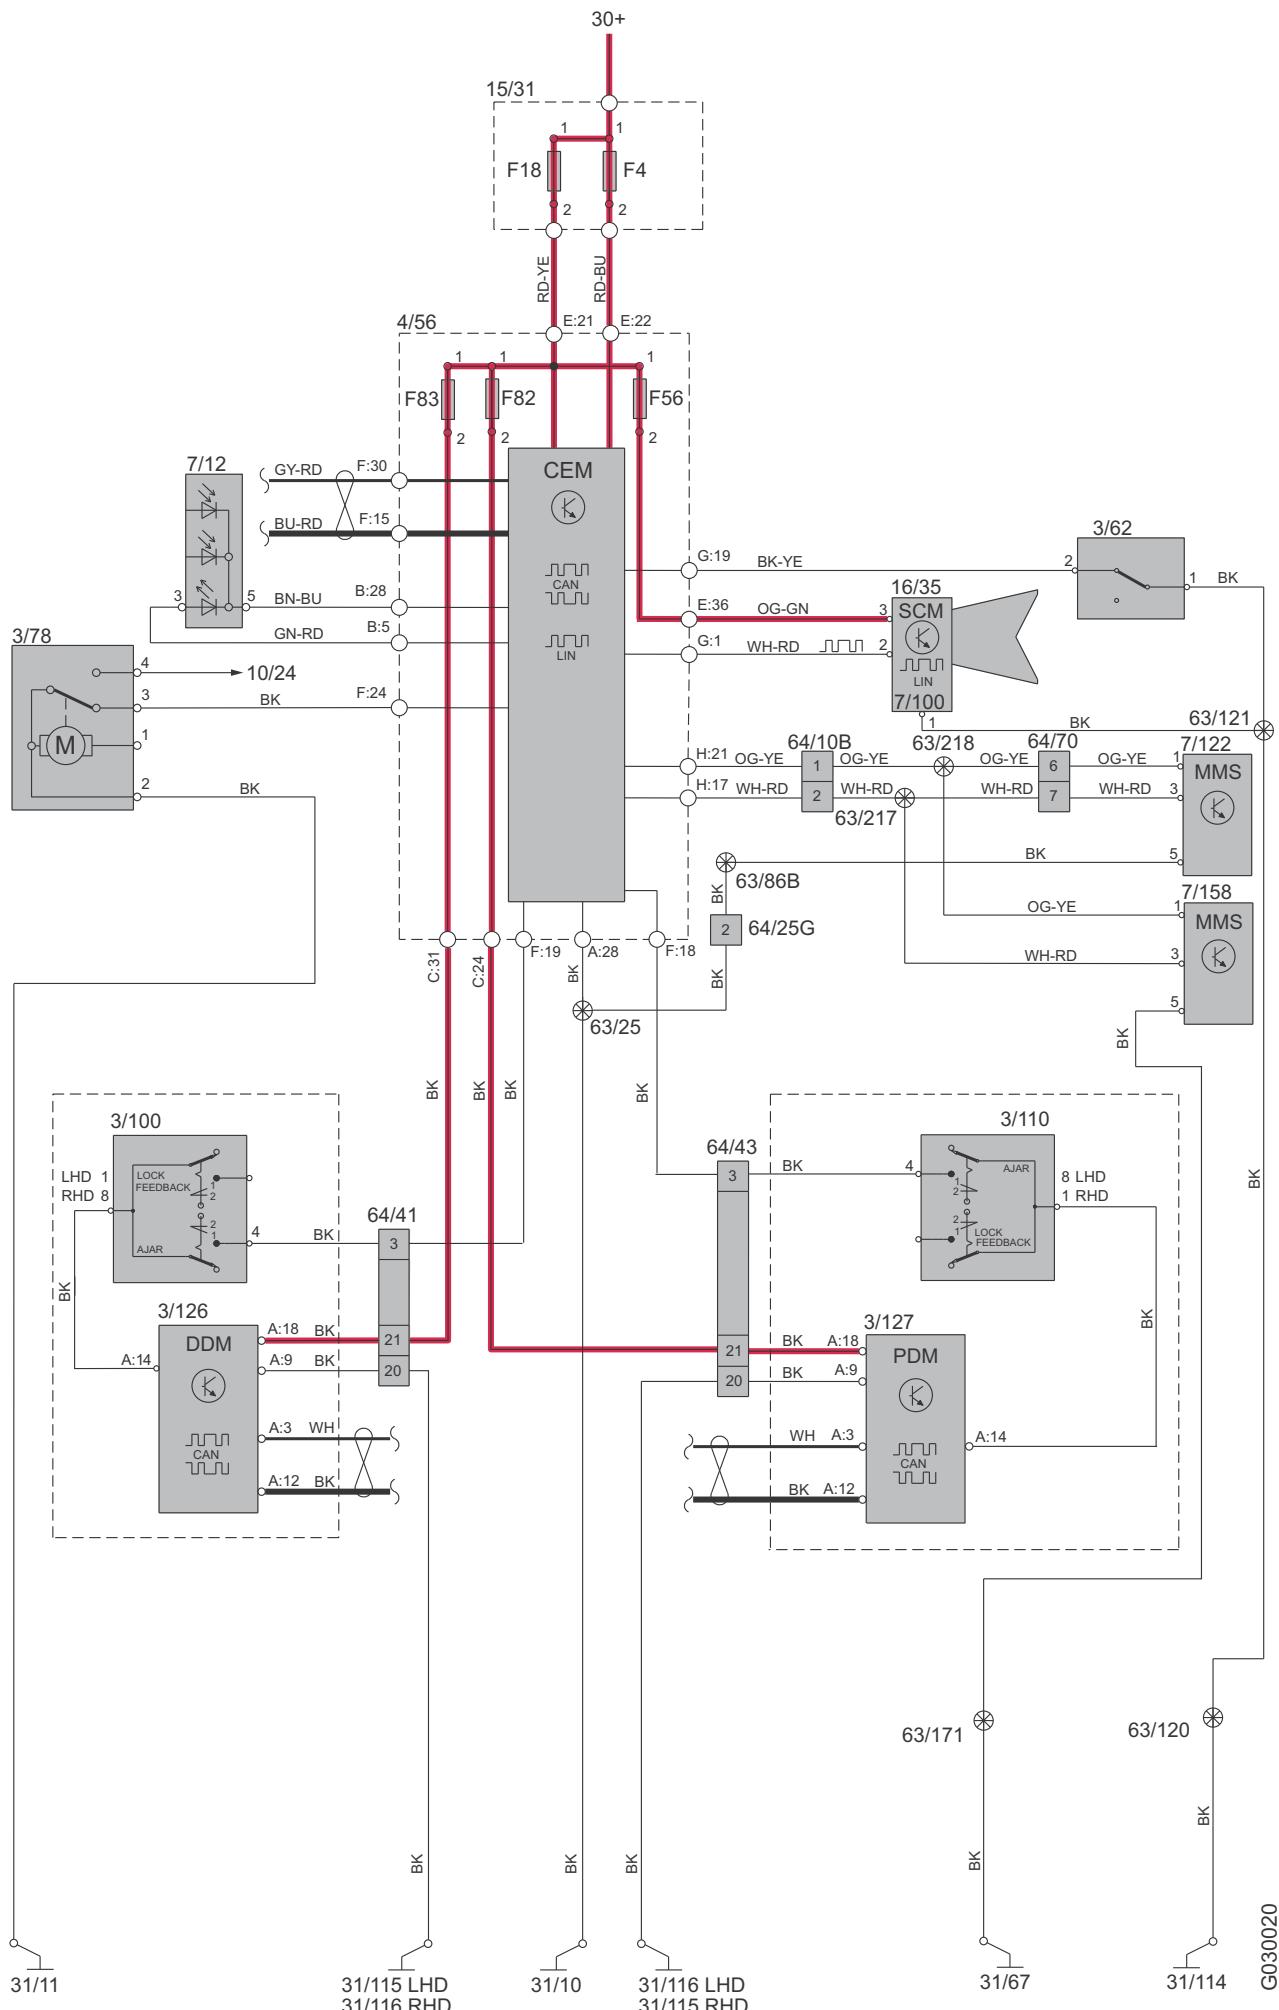


Group 36 Additional electrical equipment, Accessories

Alcohol lock

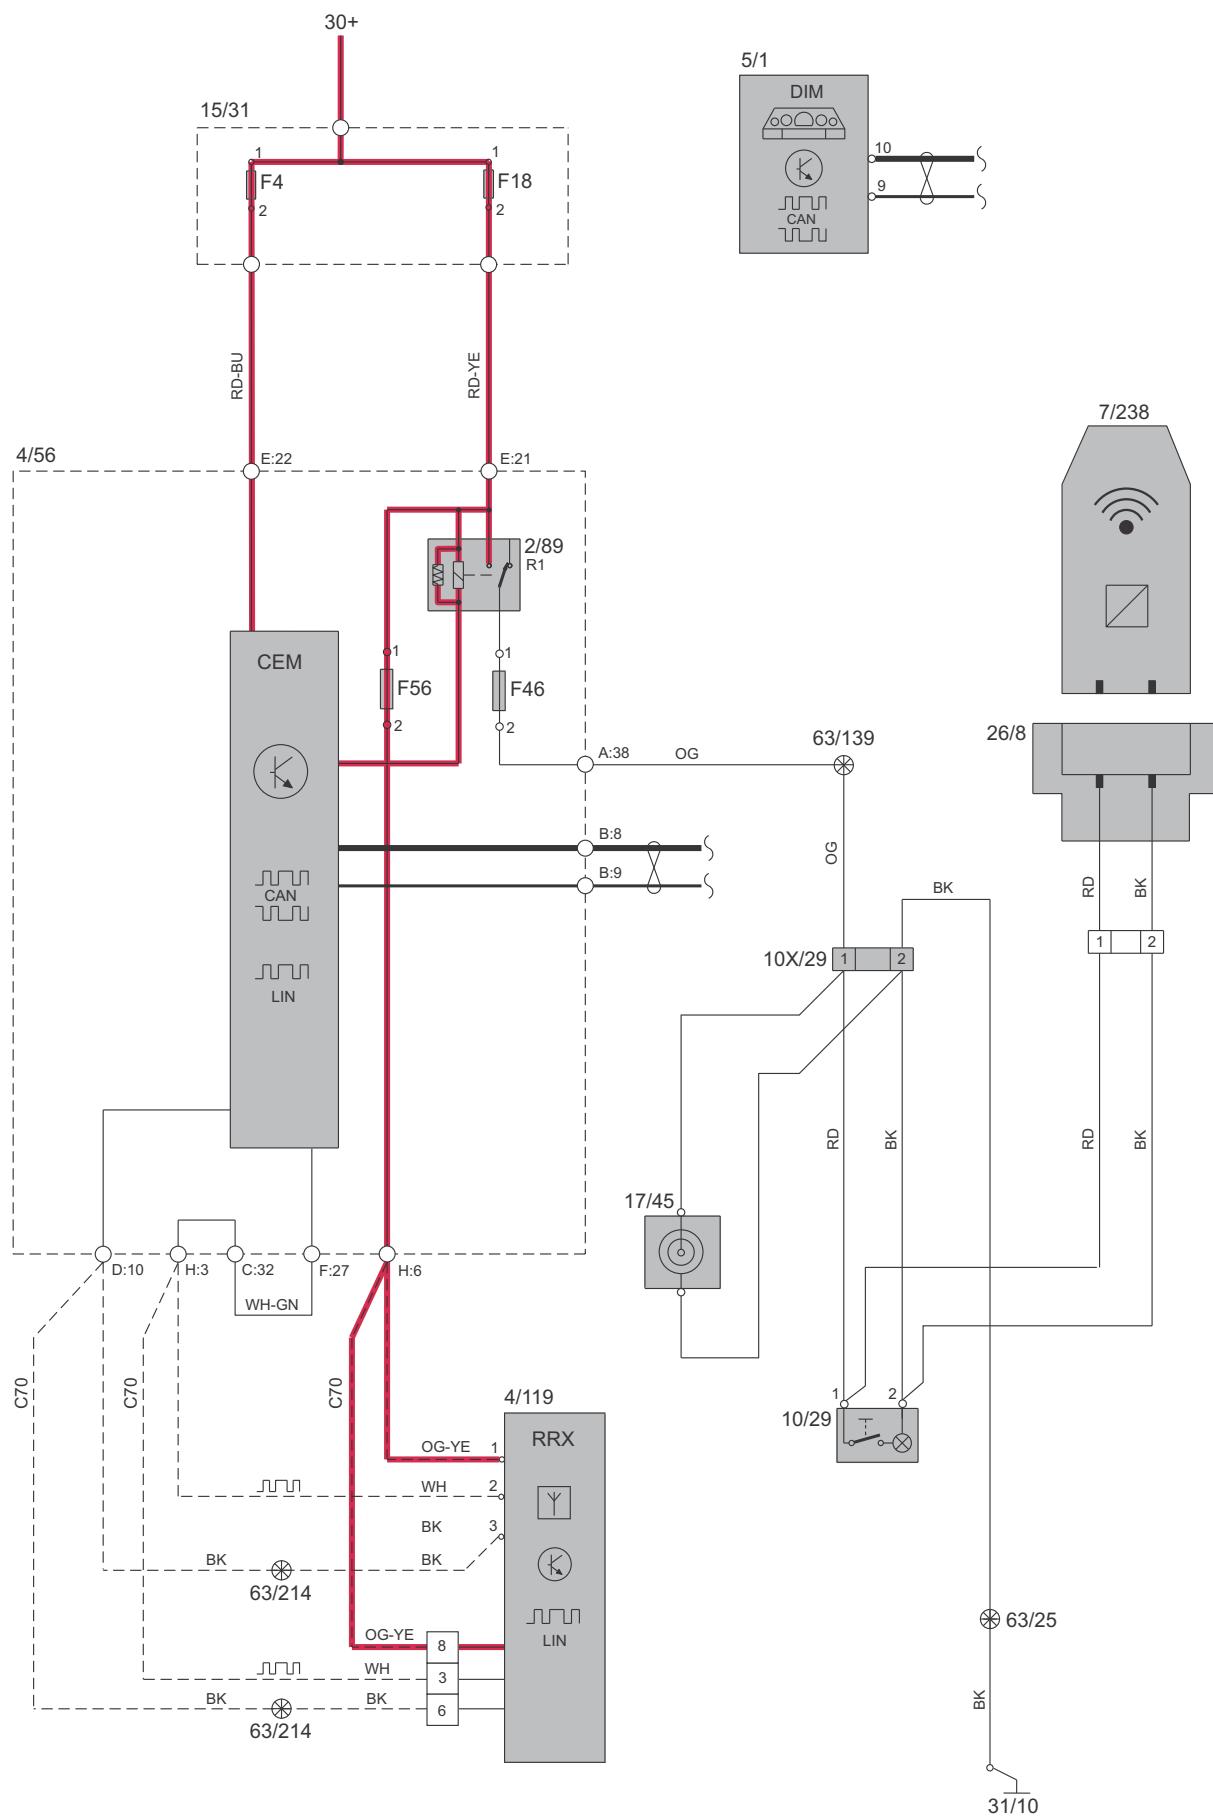

Group 36 Additional electrical equipment, Accessories


Accessory Electronic Module (AEM) C30

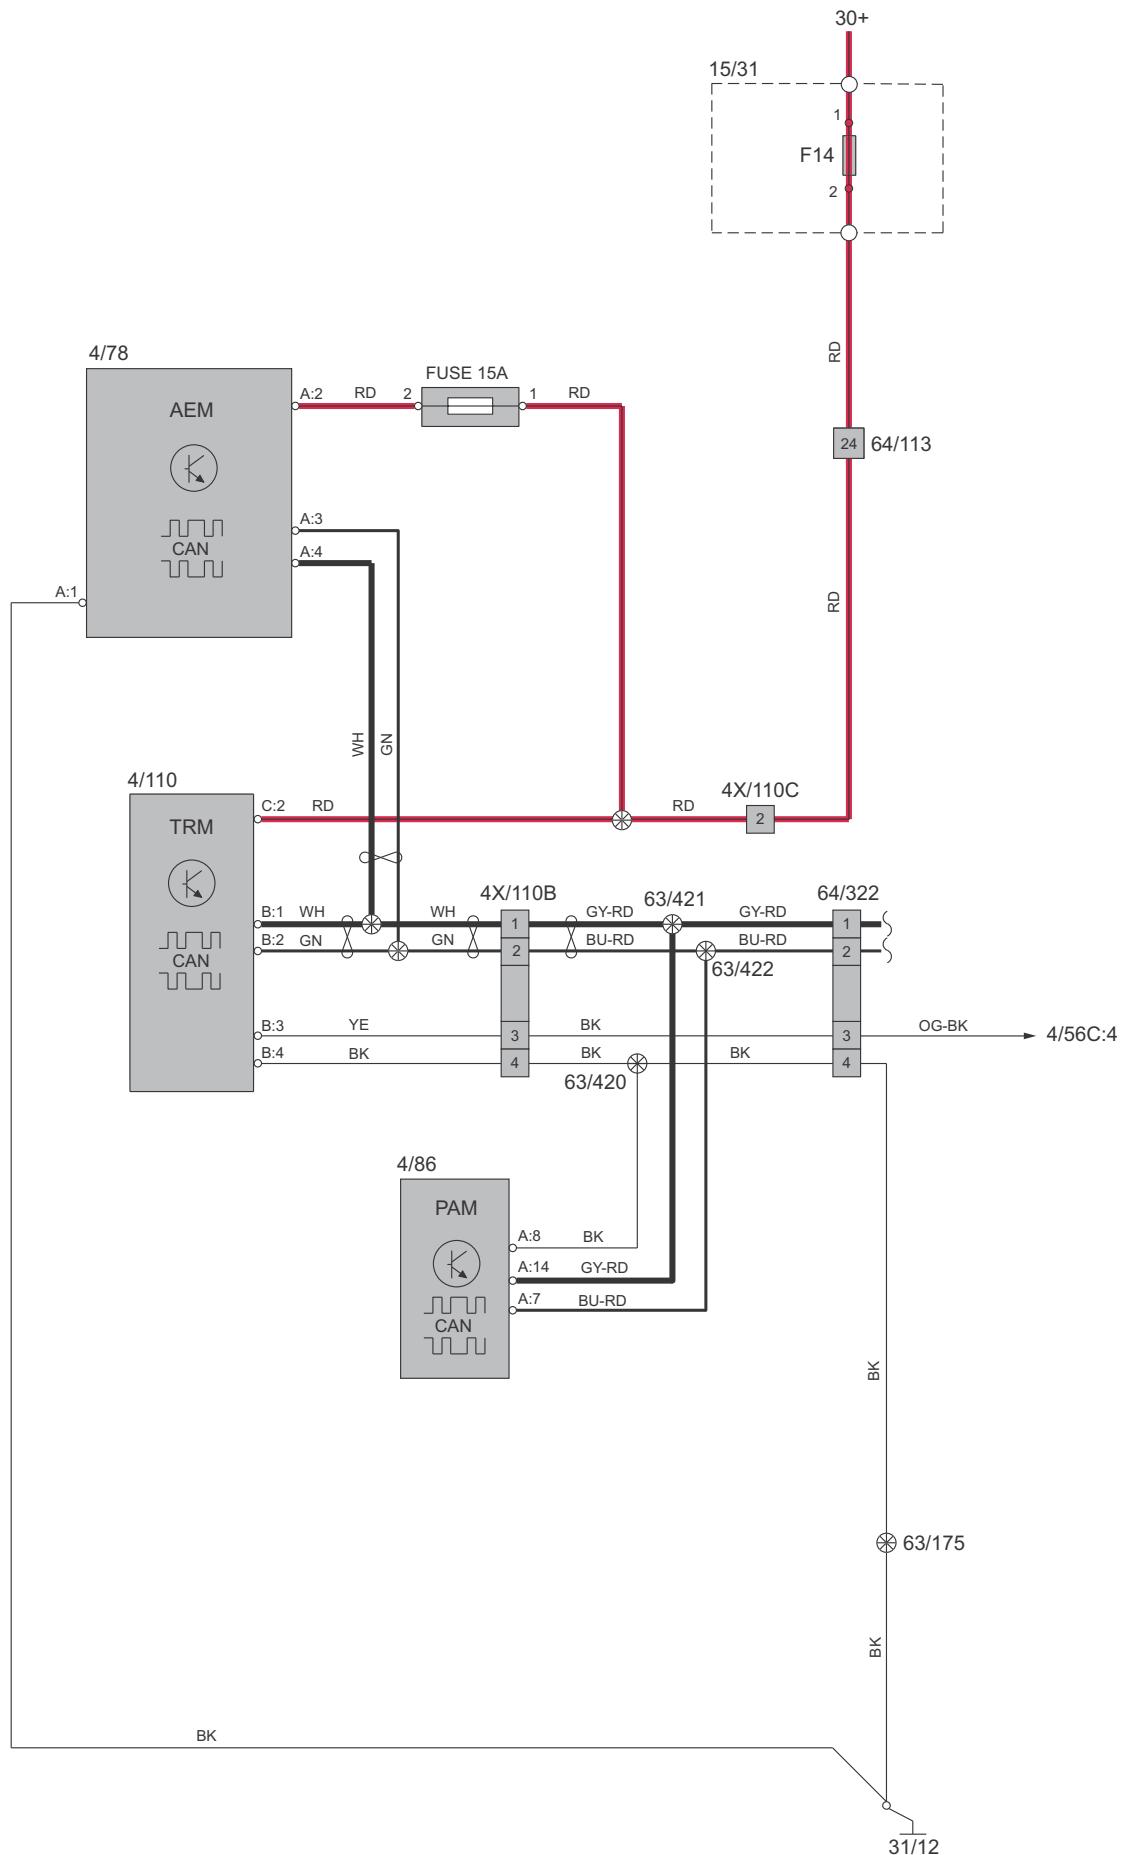

G038994

Group 36 Additional electrical equipment, Accessories


Accessory Electronic Module (AEM), S40/V50/C70

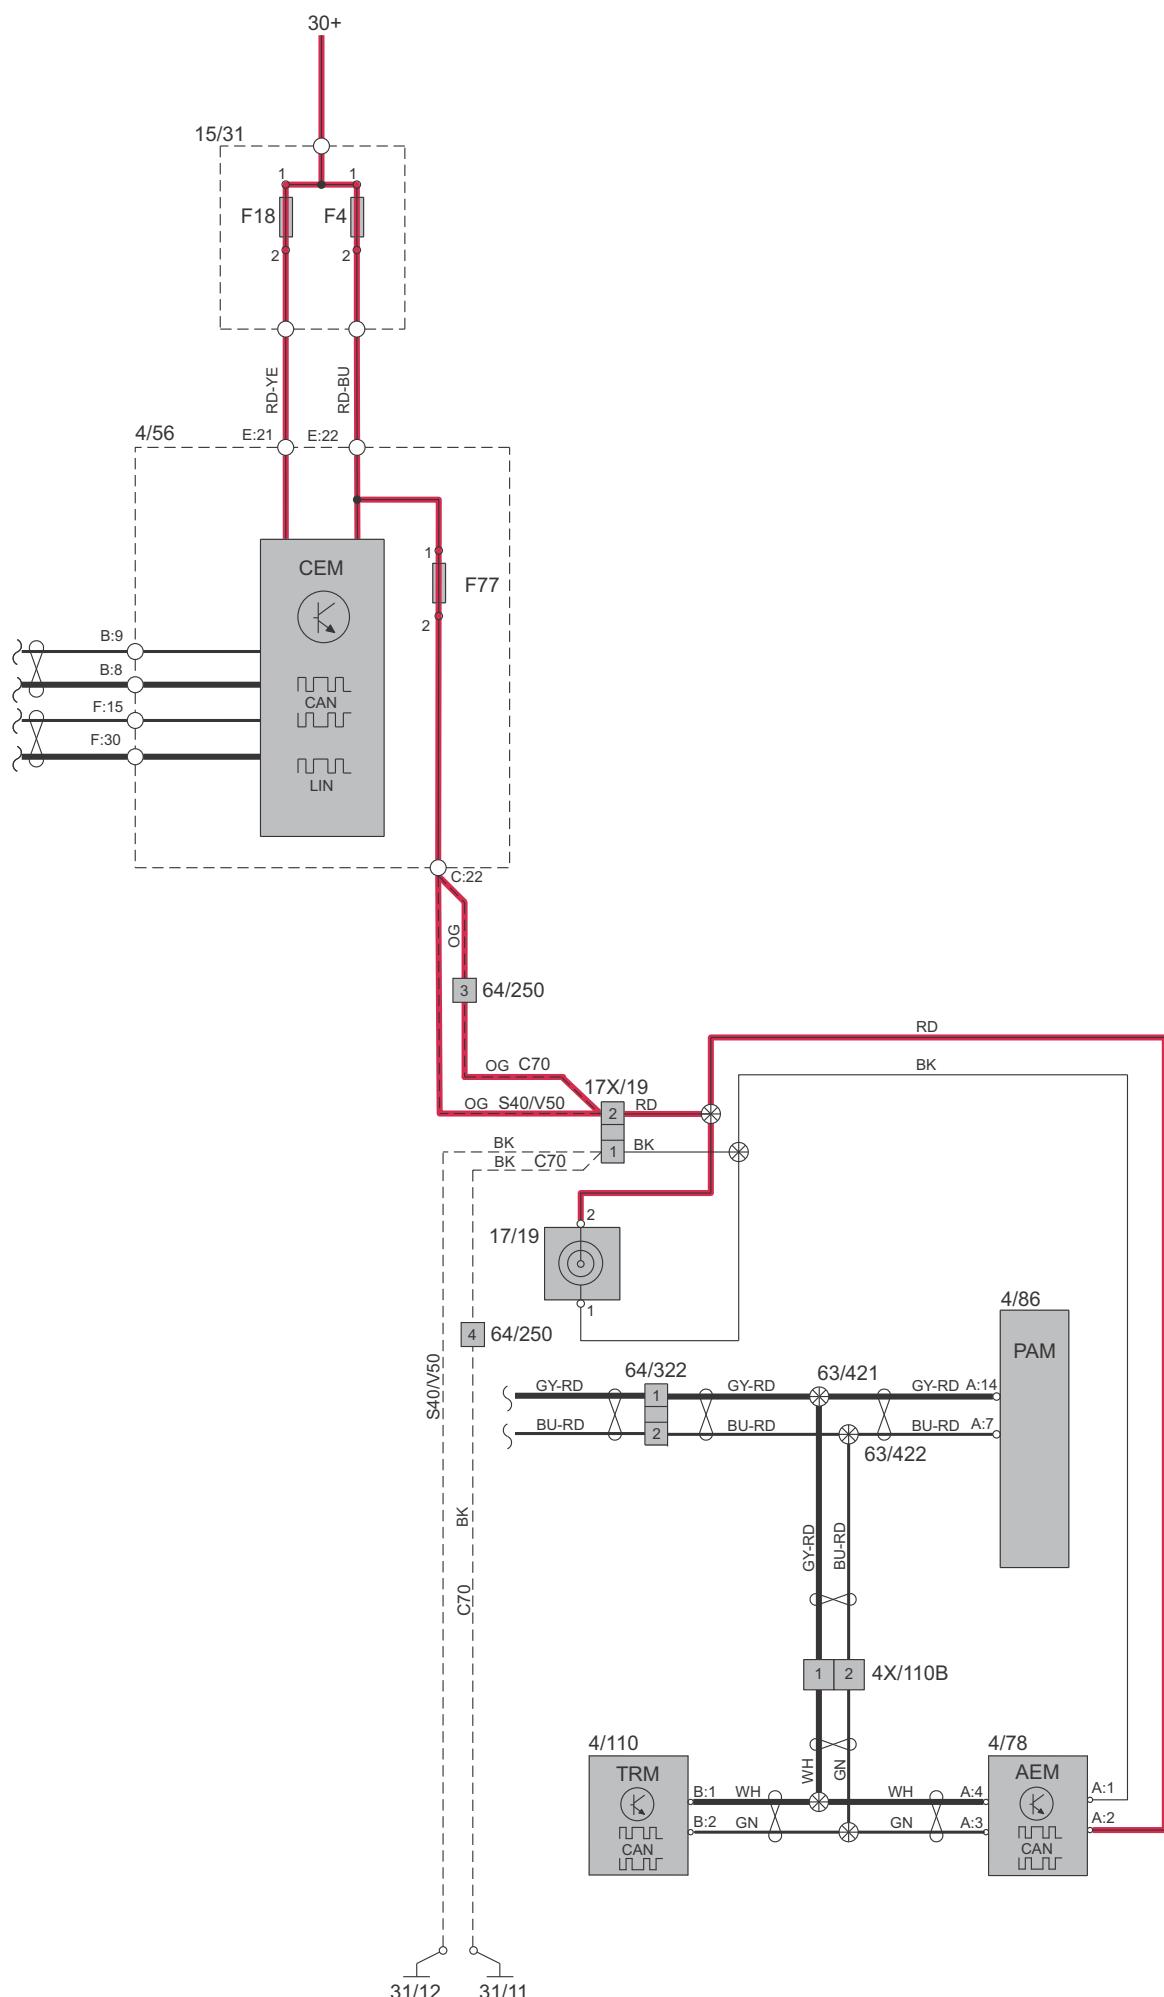

G030036

Group 37 Wiring and fuses


12V outlet C30/S40/V50

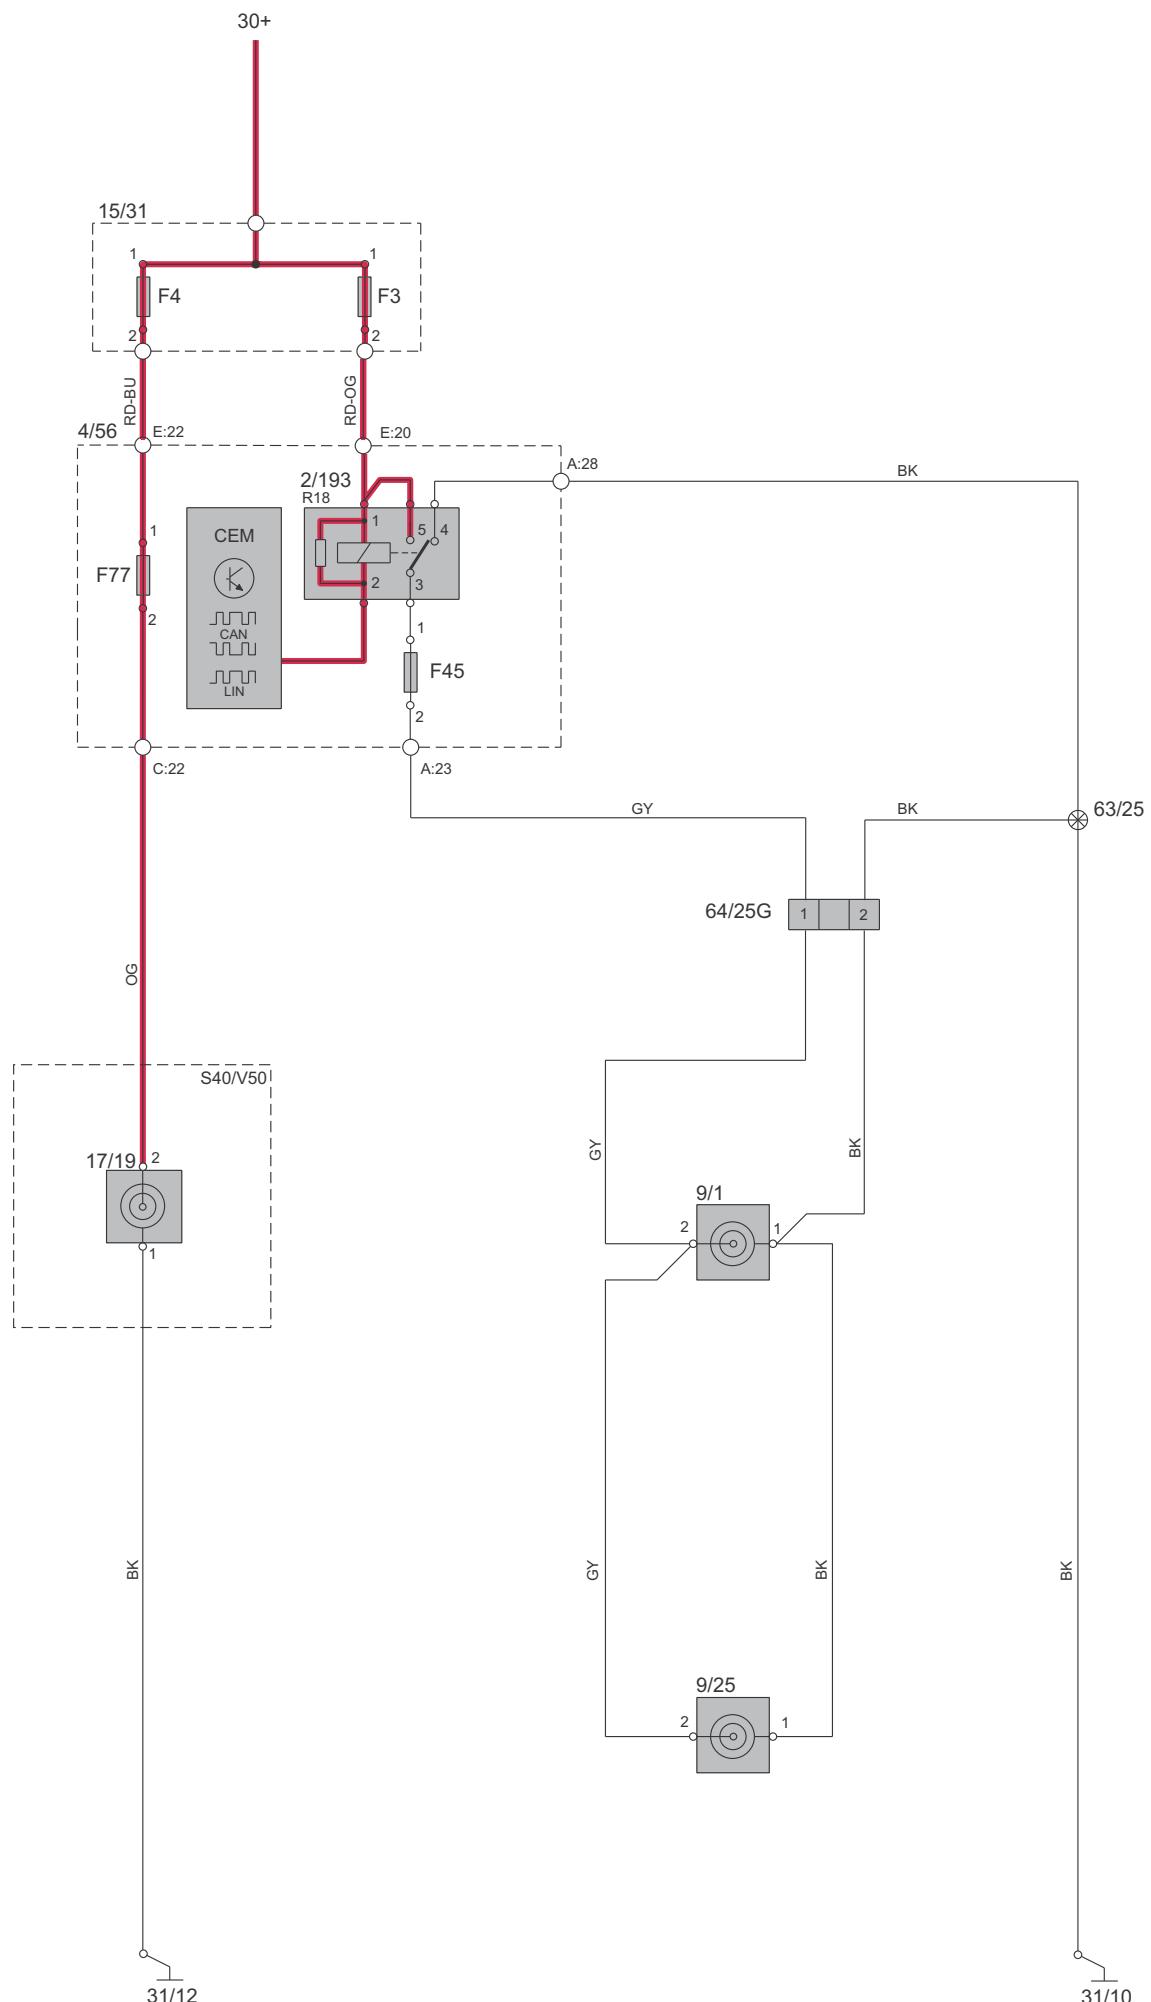

G030046


Group 37 Wiring and fuses

12V outlet, C70

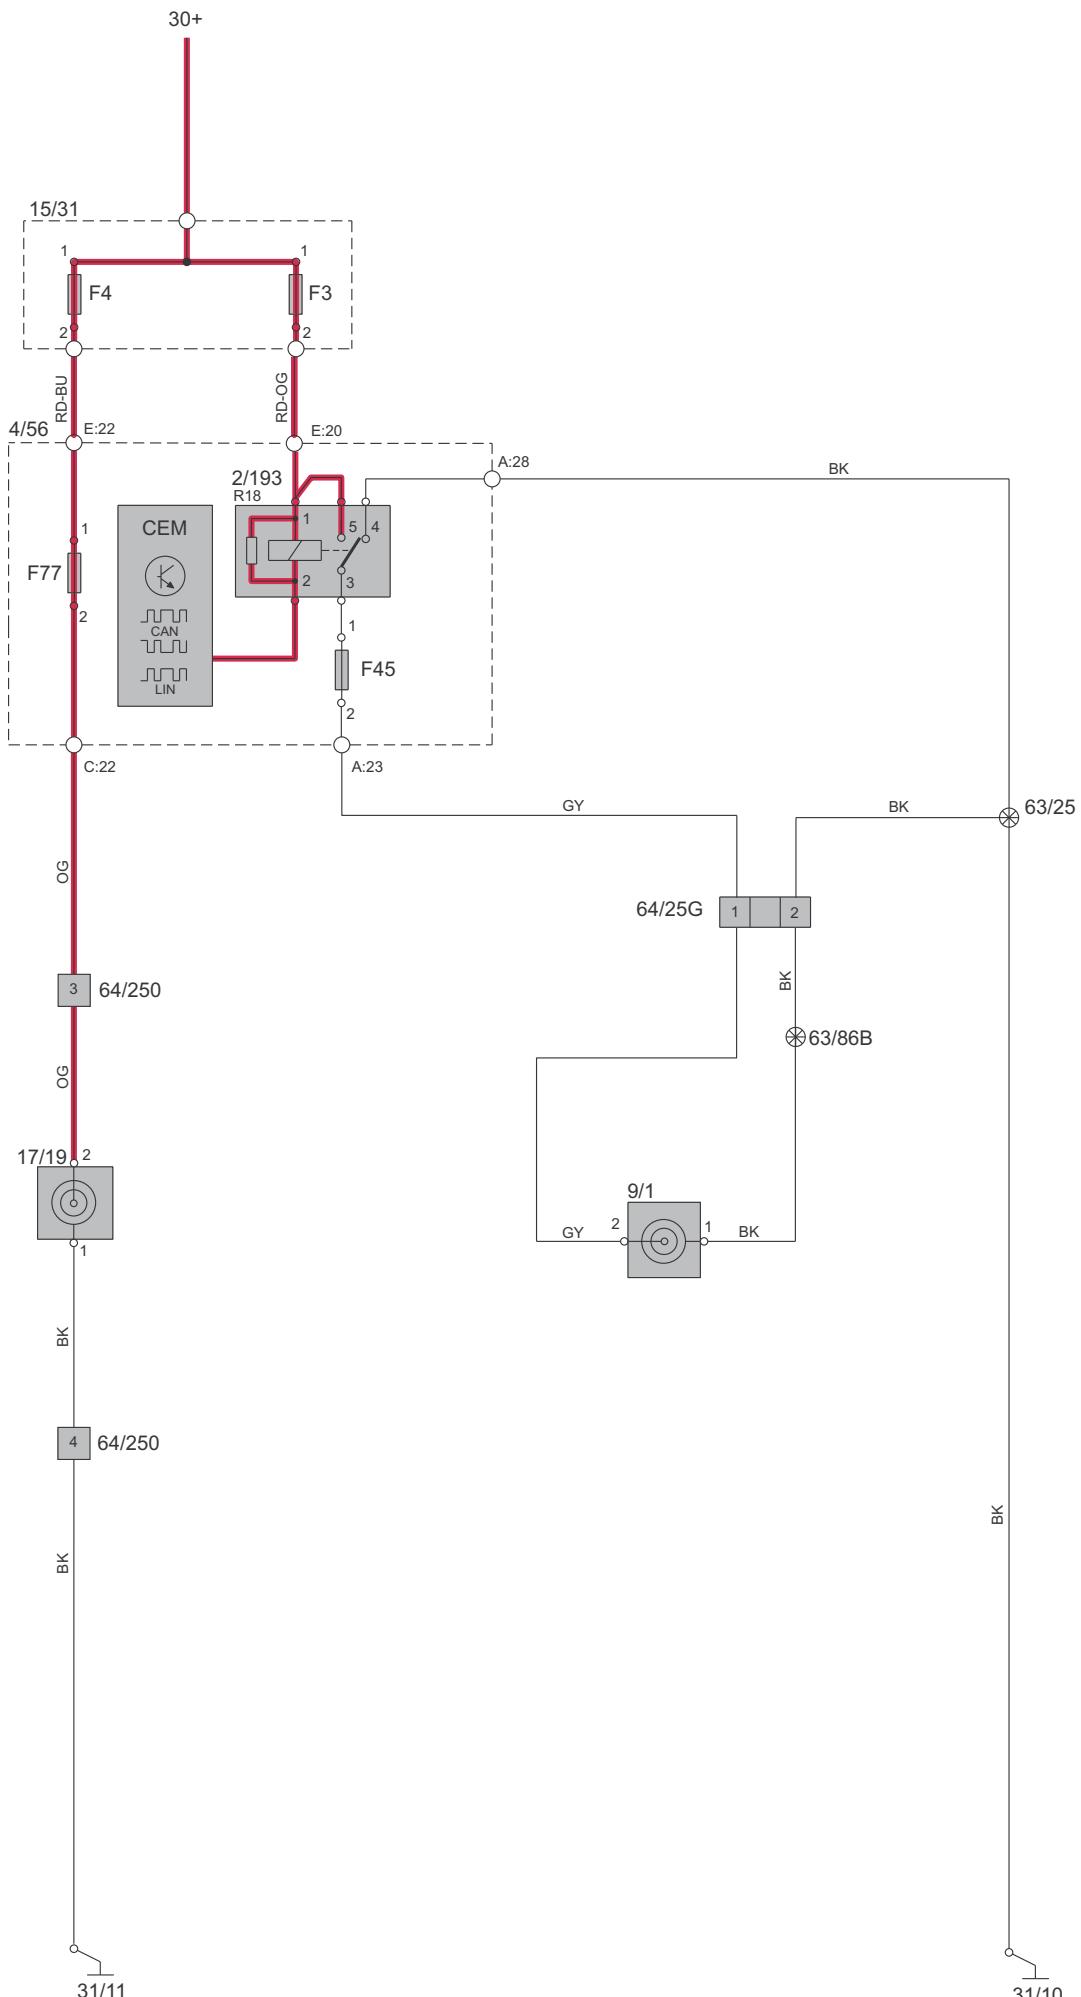

Group 37 Wiring and fuses


Diagnostics system

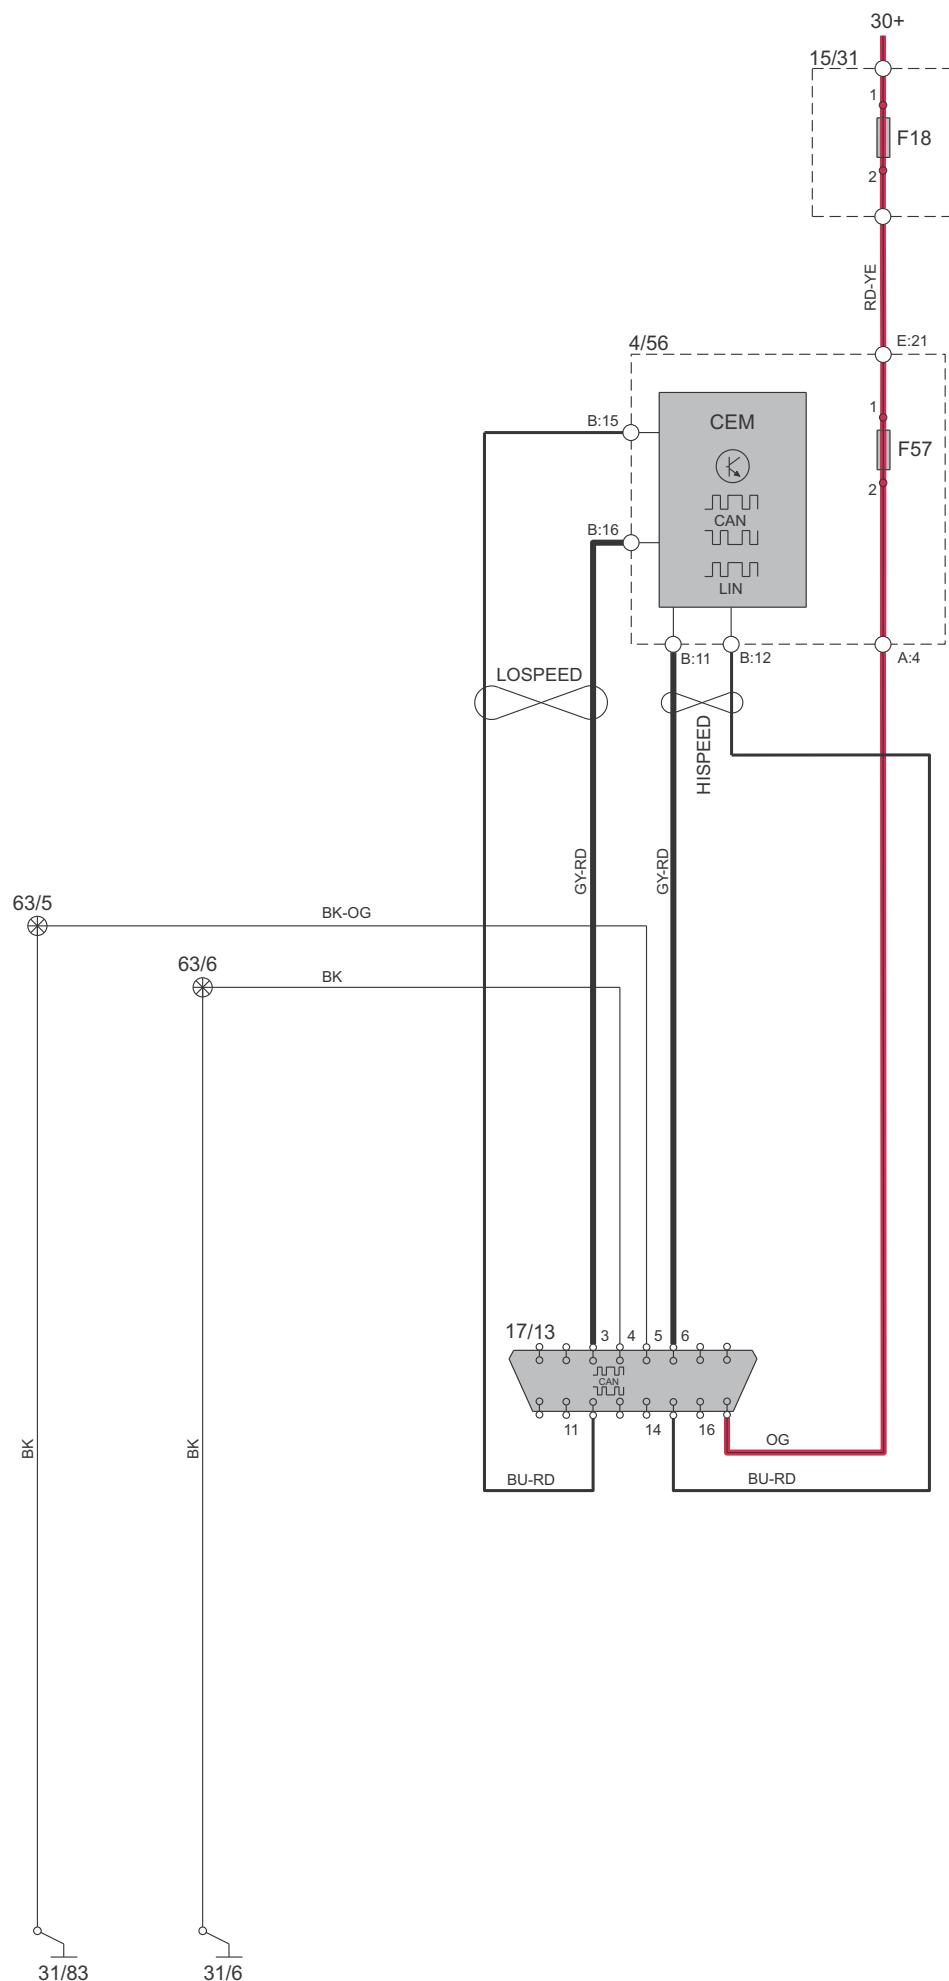

G030045

Group 37 Wiring and fuses, Accessories


Cable harness towbar/tow hitch 4-pin S40/V50

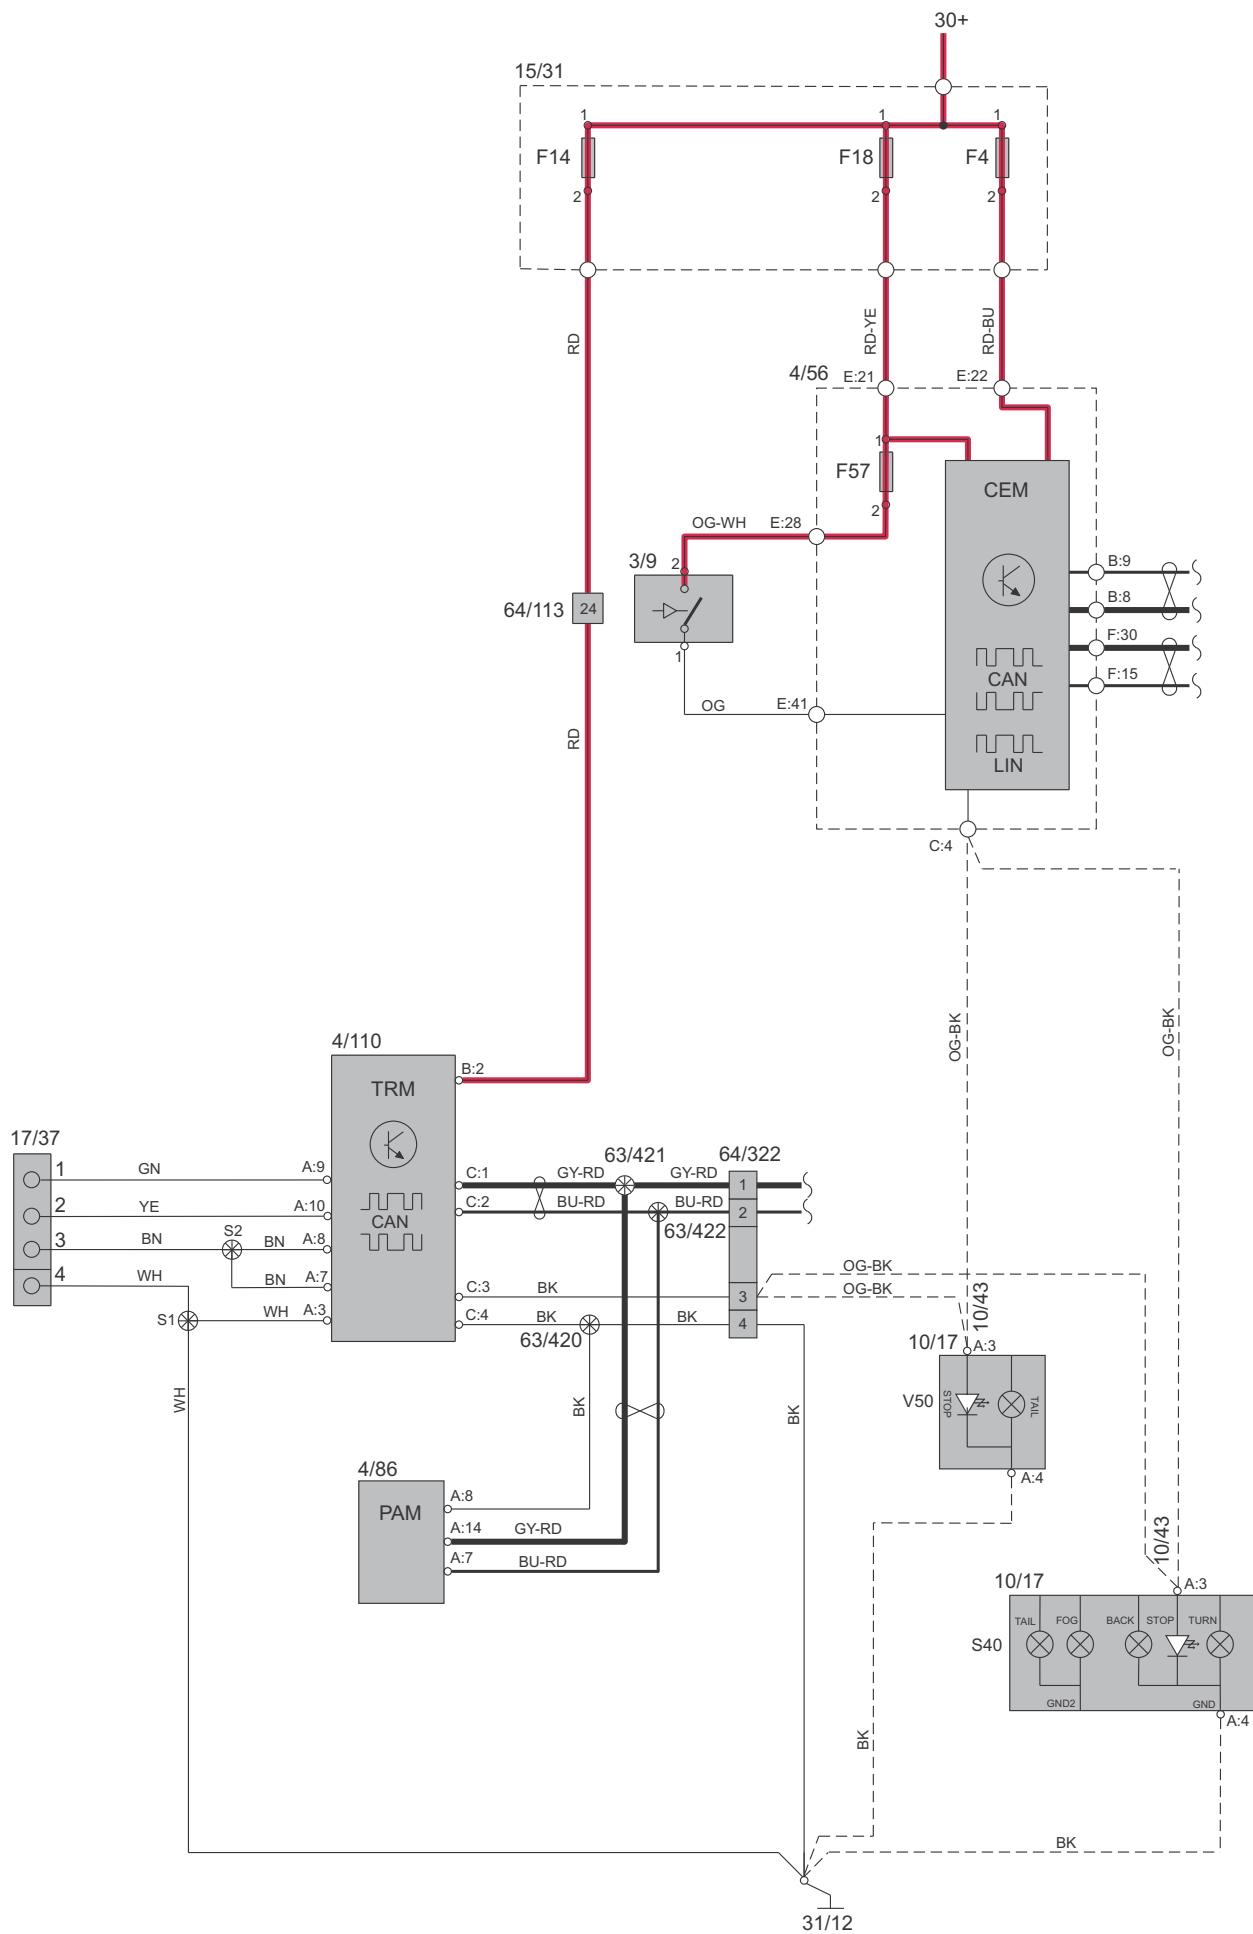

10173740

Group 37 Wiring and fuses, Accessories


Cable harness towbar/tow hitch 4-pin C30

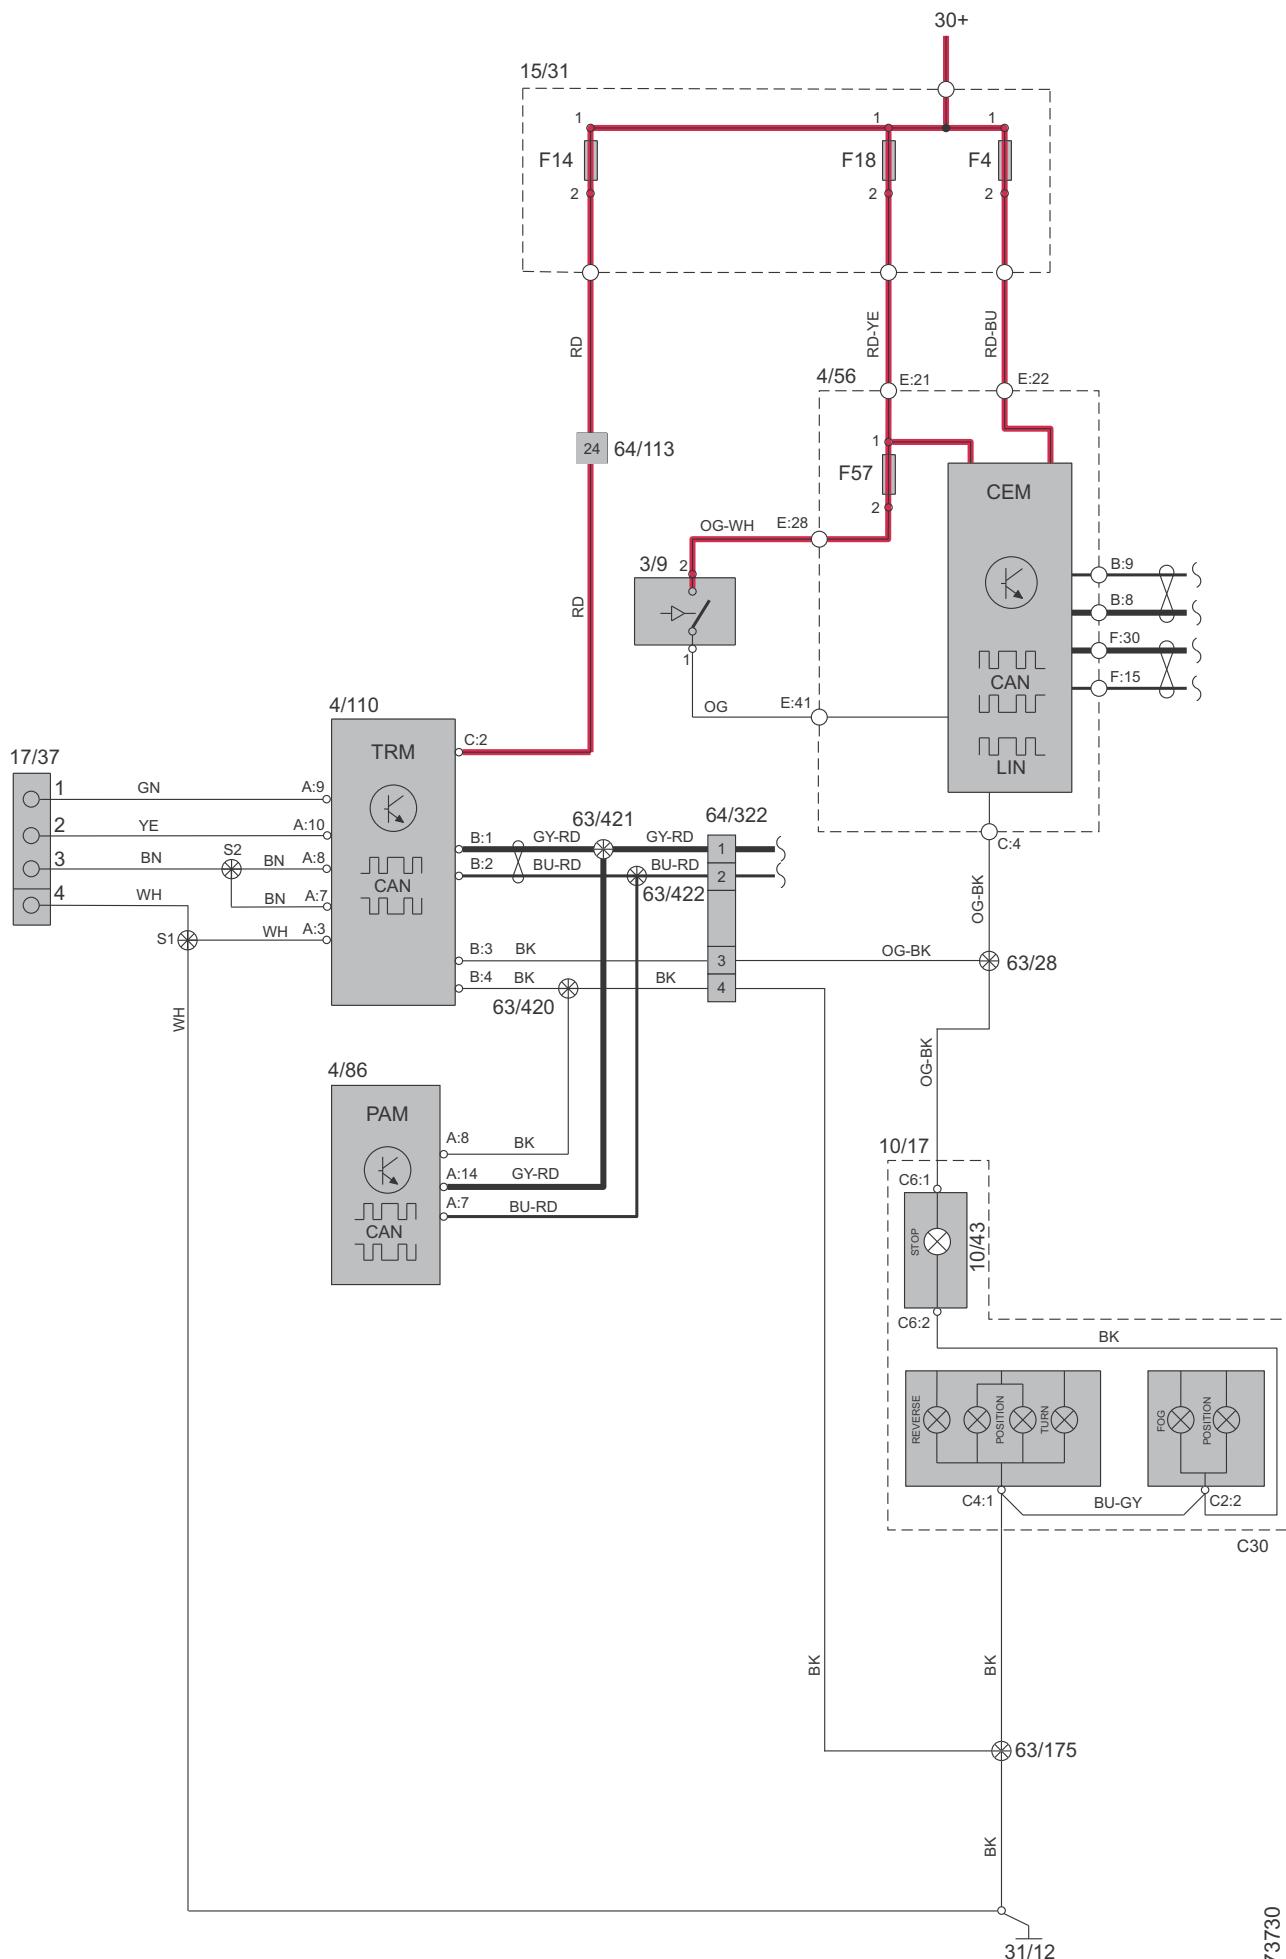

10173730


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 7-pin S40/V50

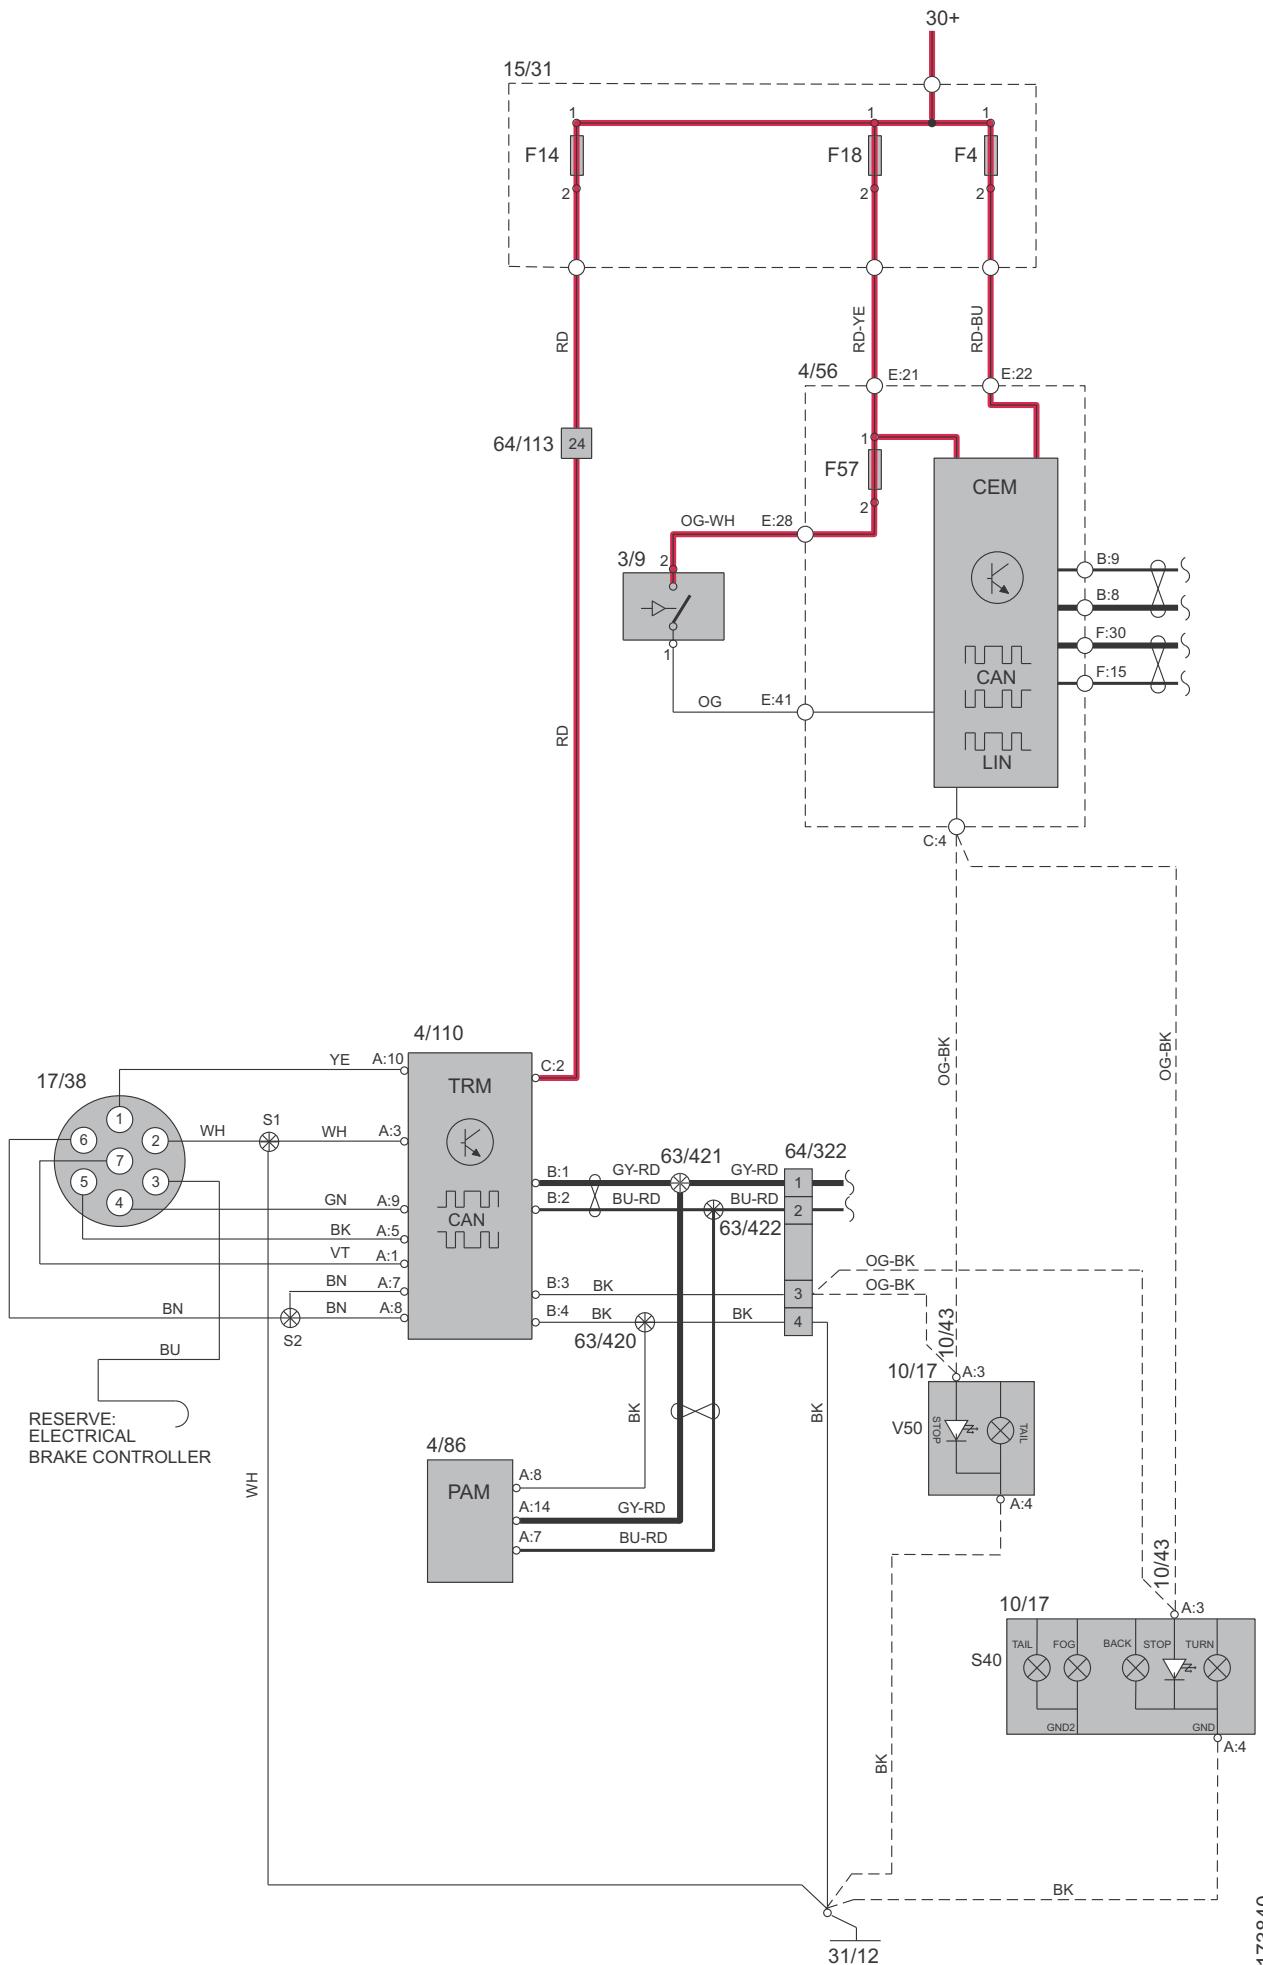


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 7-pin C30/C70

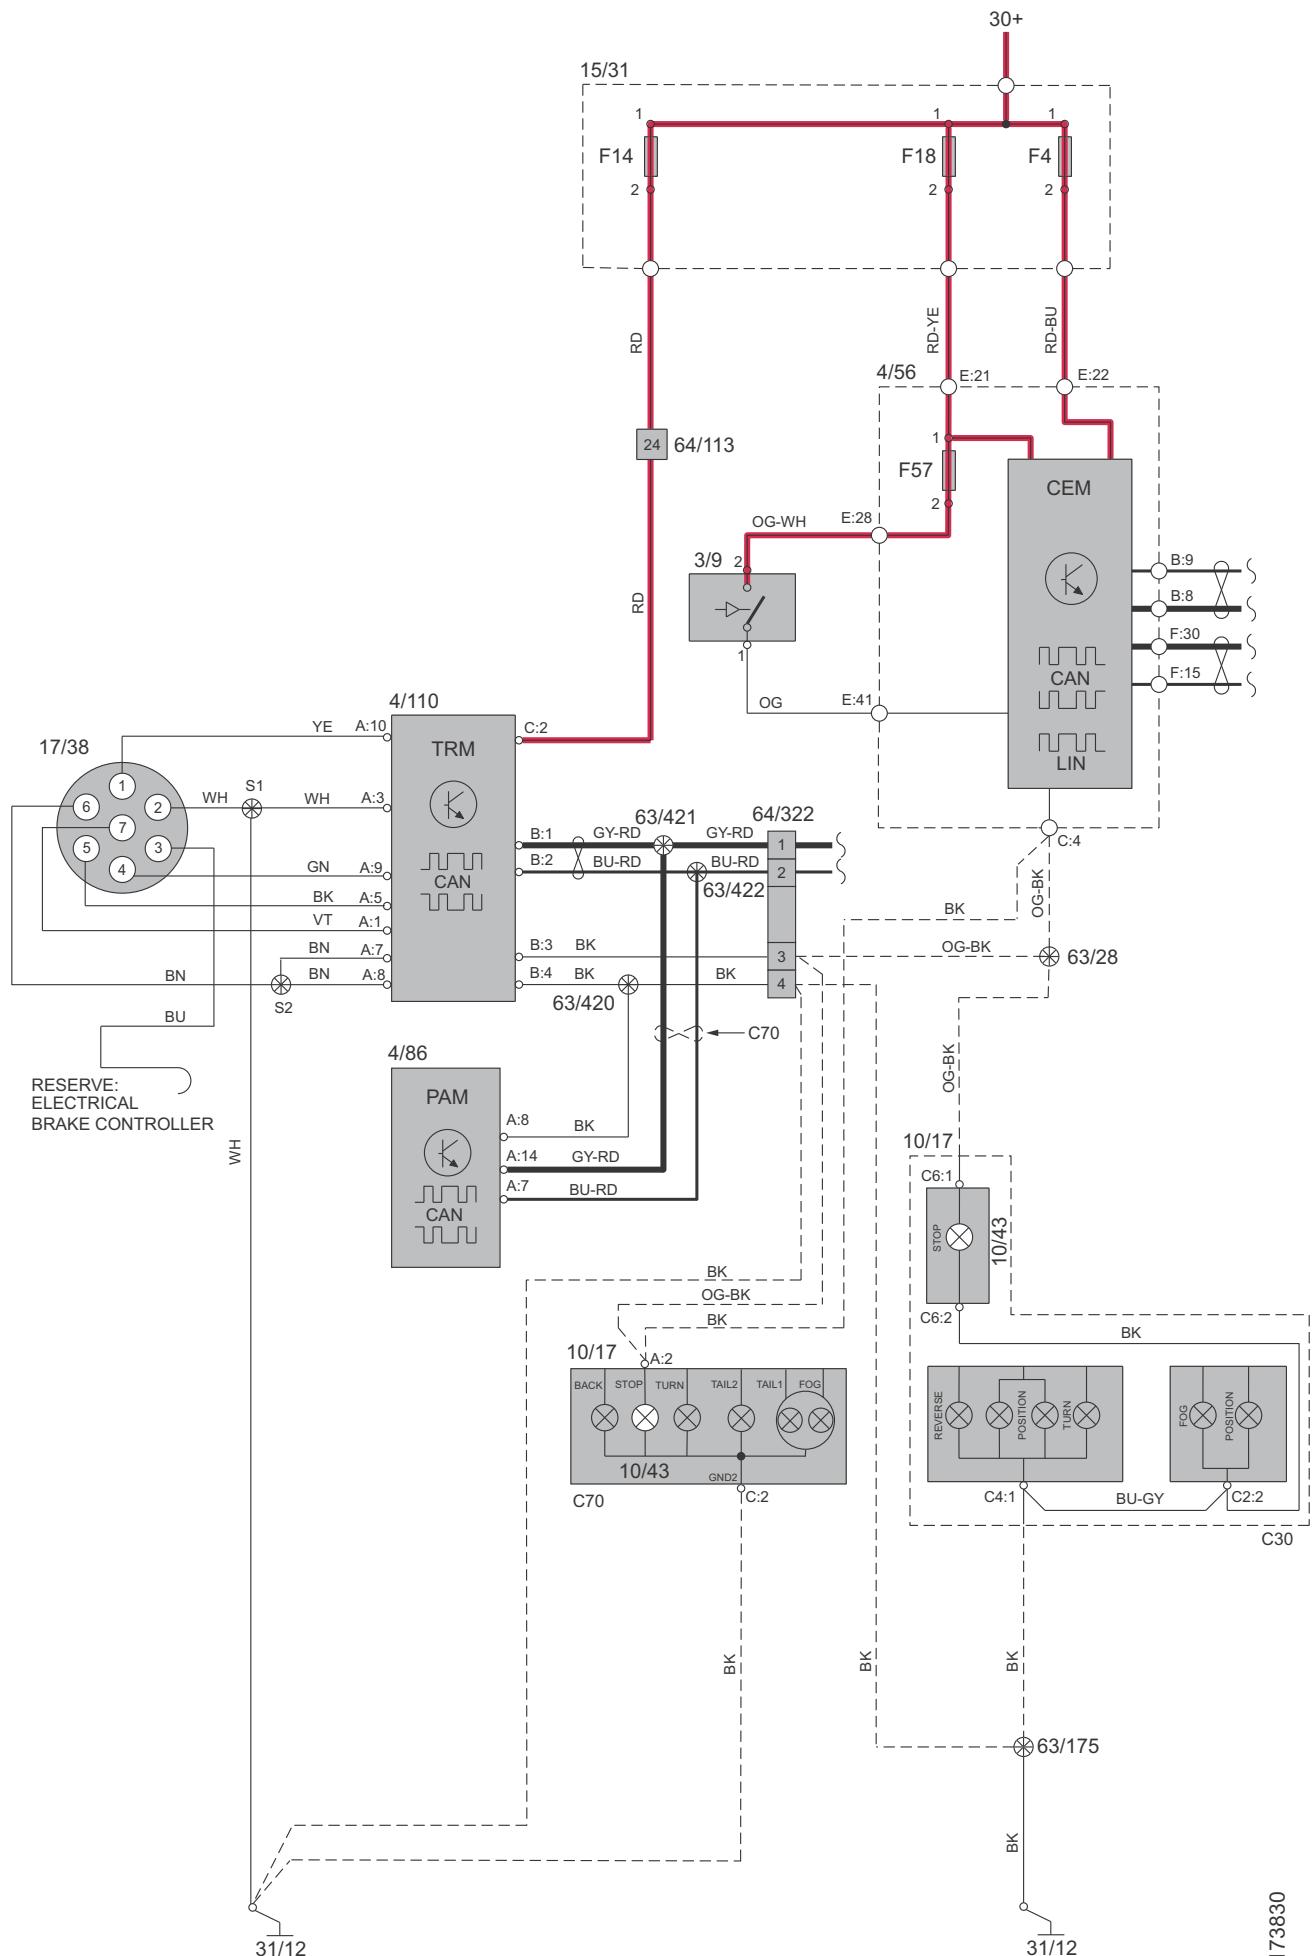


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin S40/V50/C70

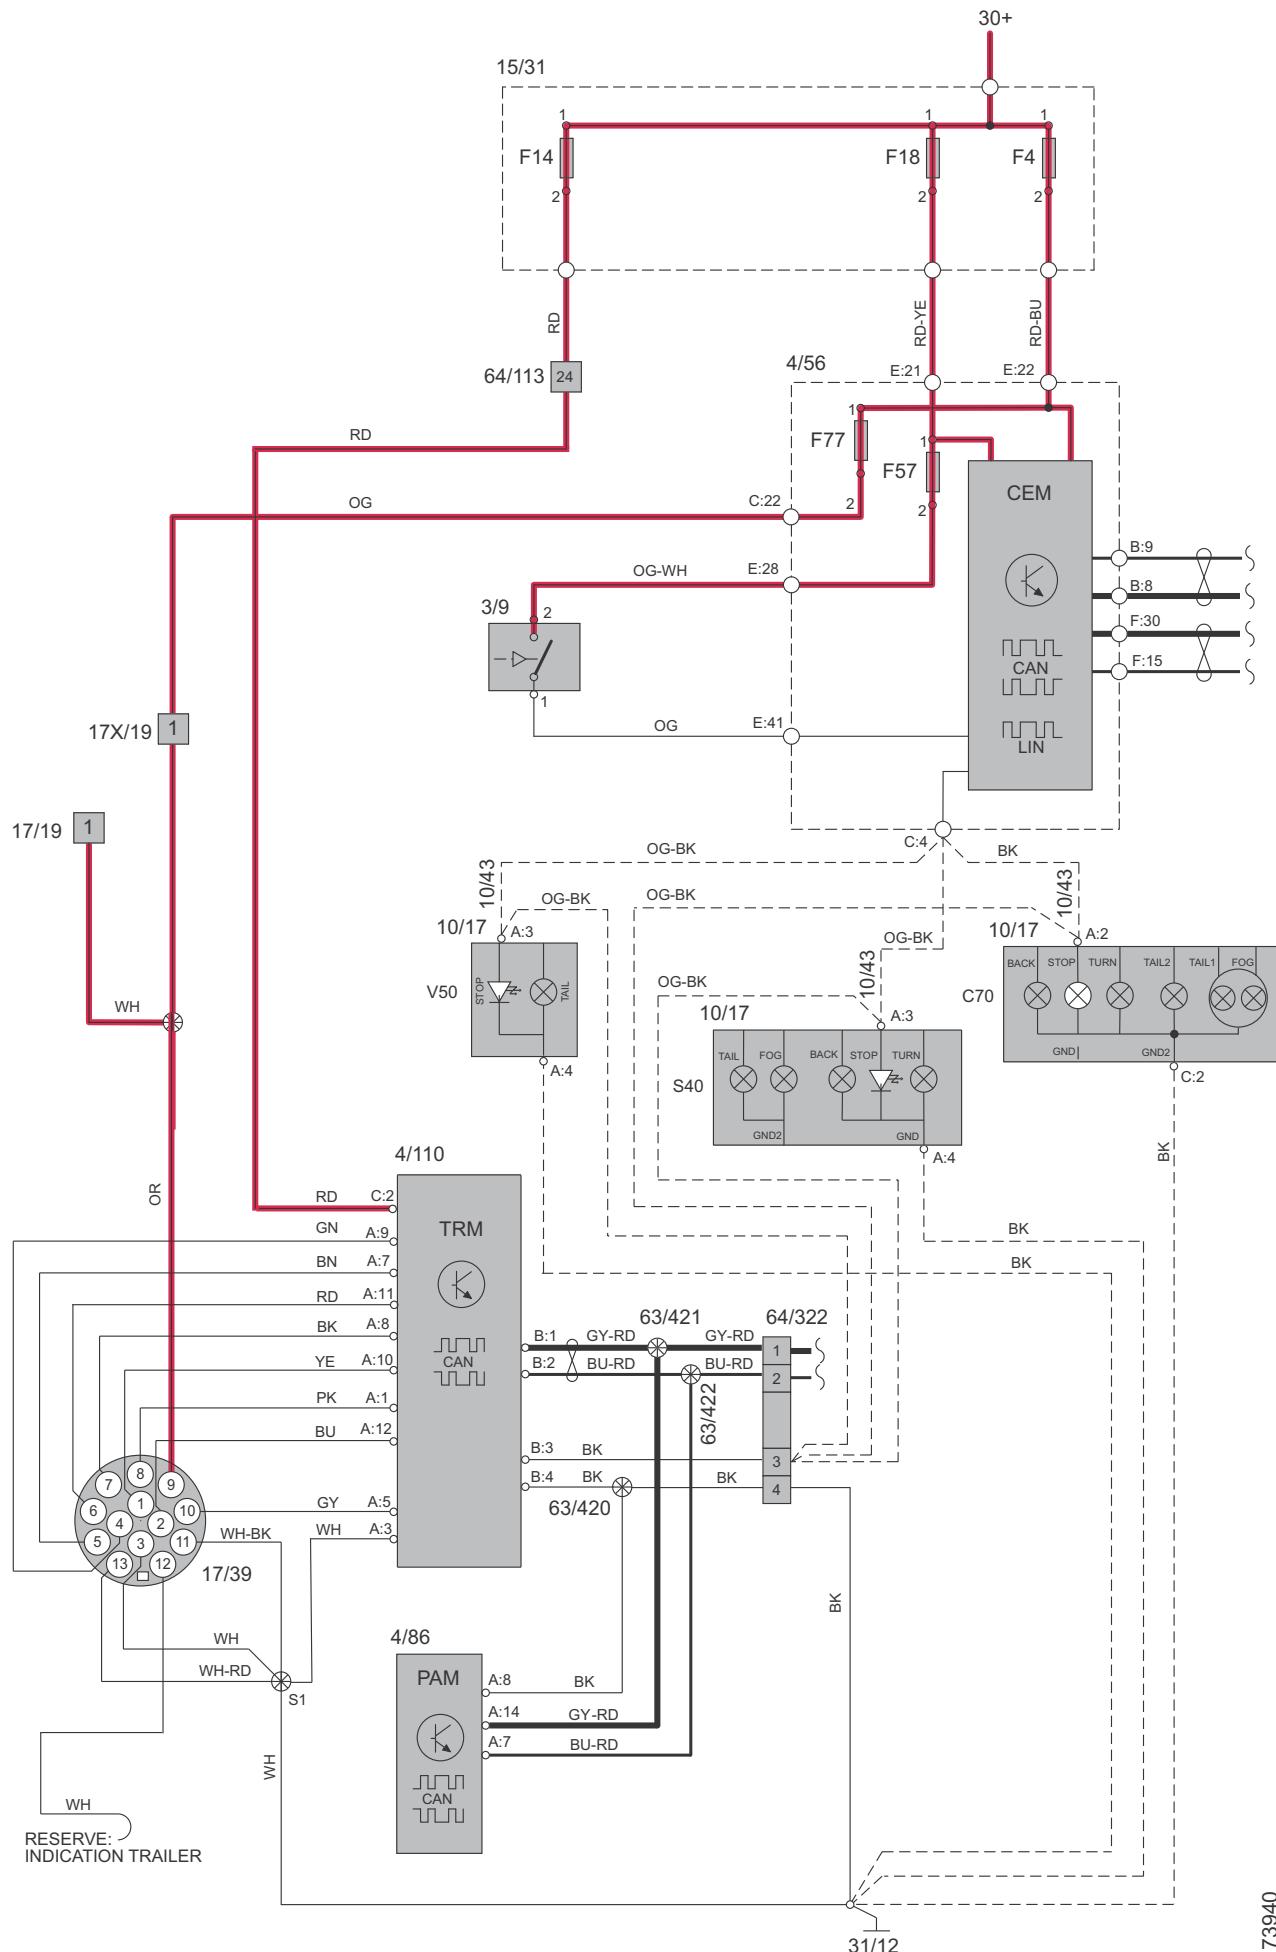


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin C30

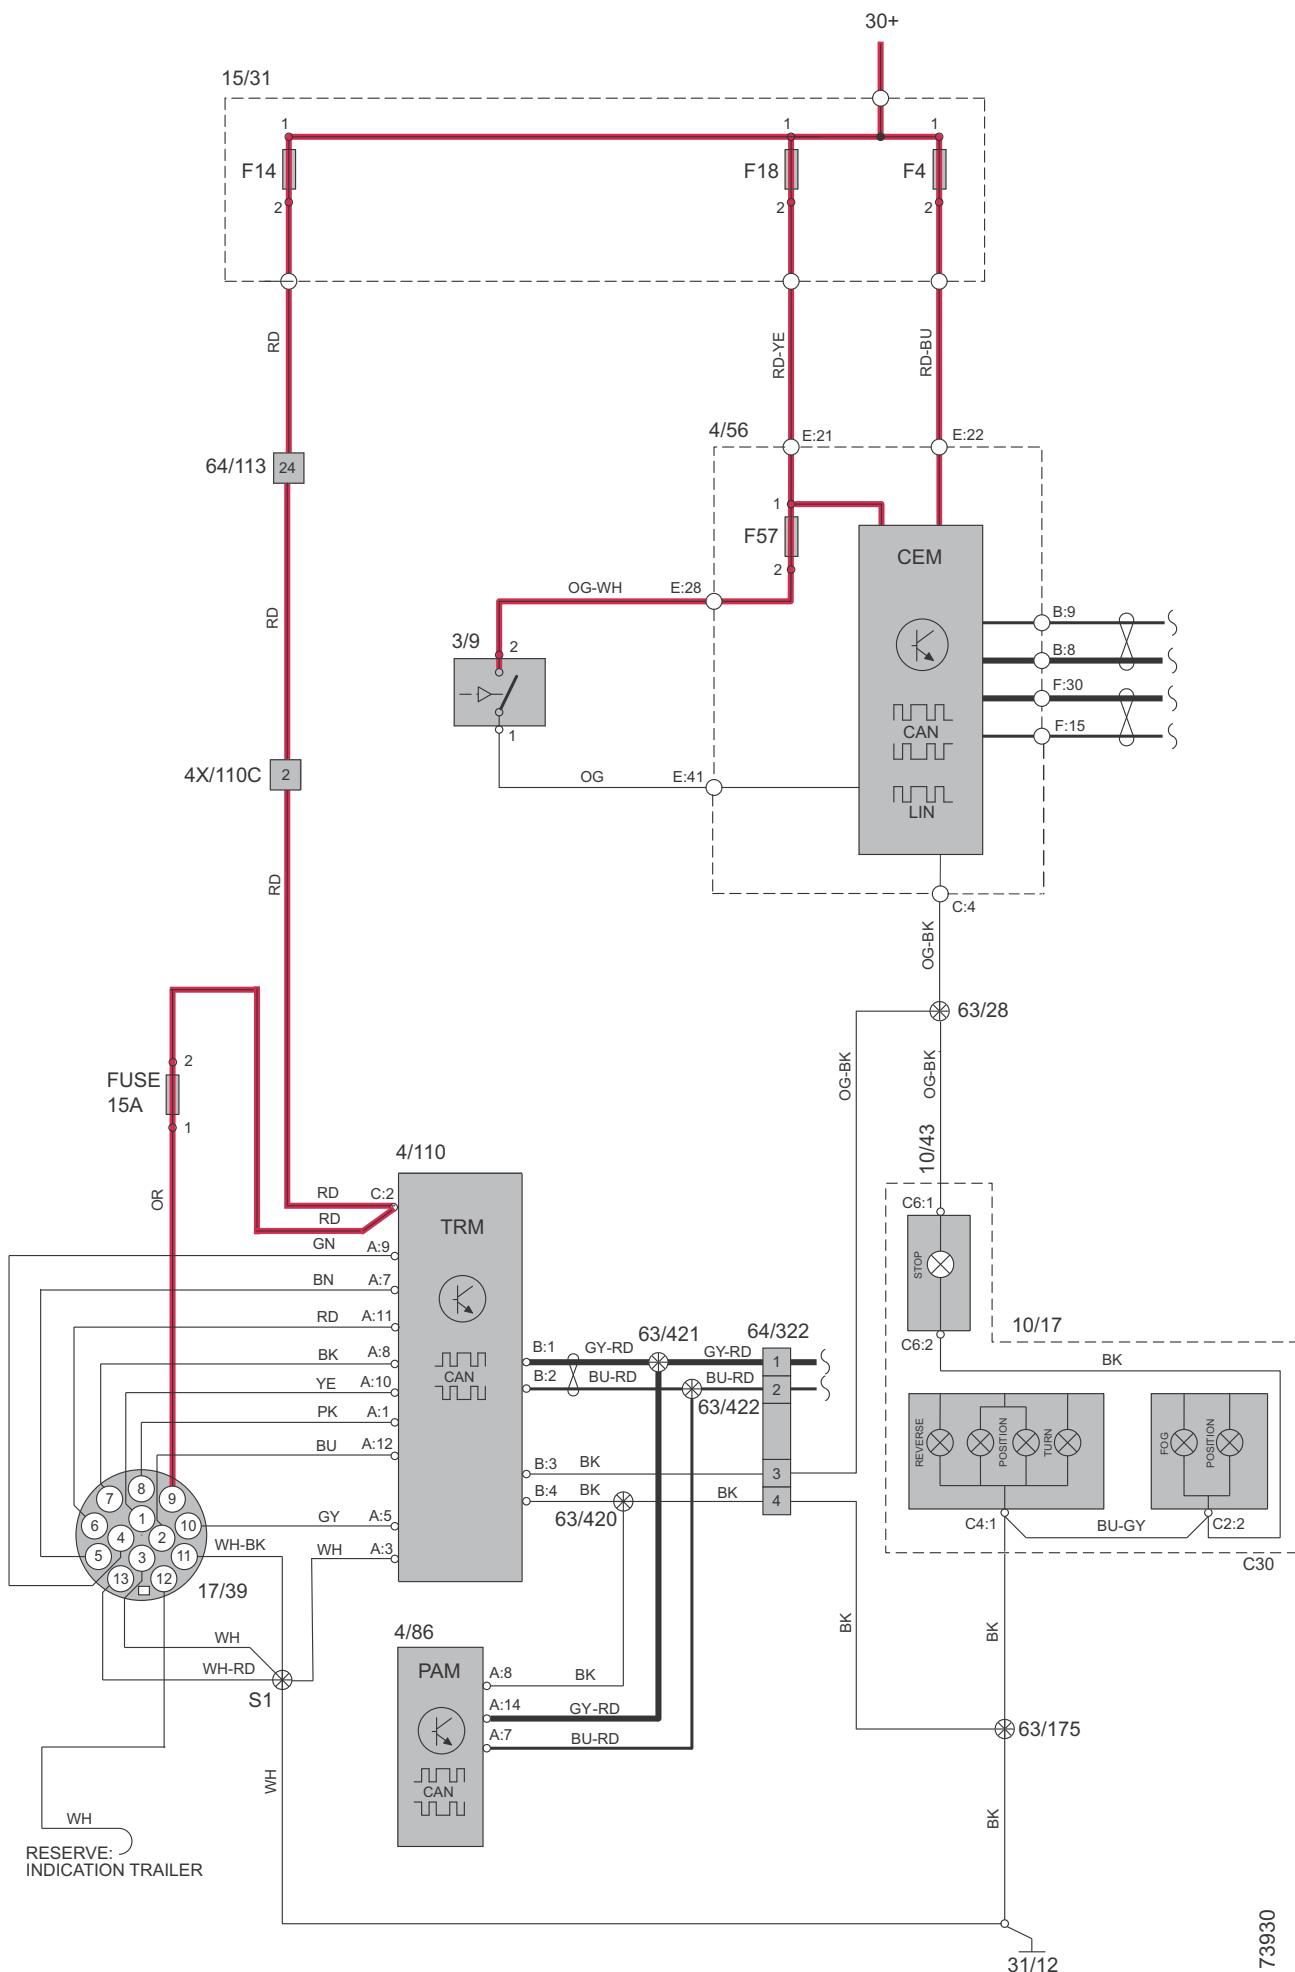


Group 37 Wiring and fuses, Accessories

Accessory USB unit (AUU)

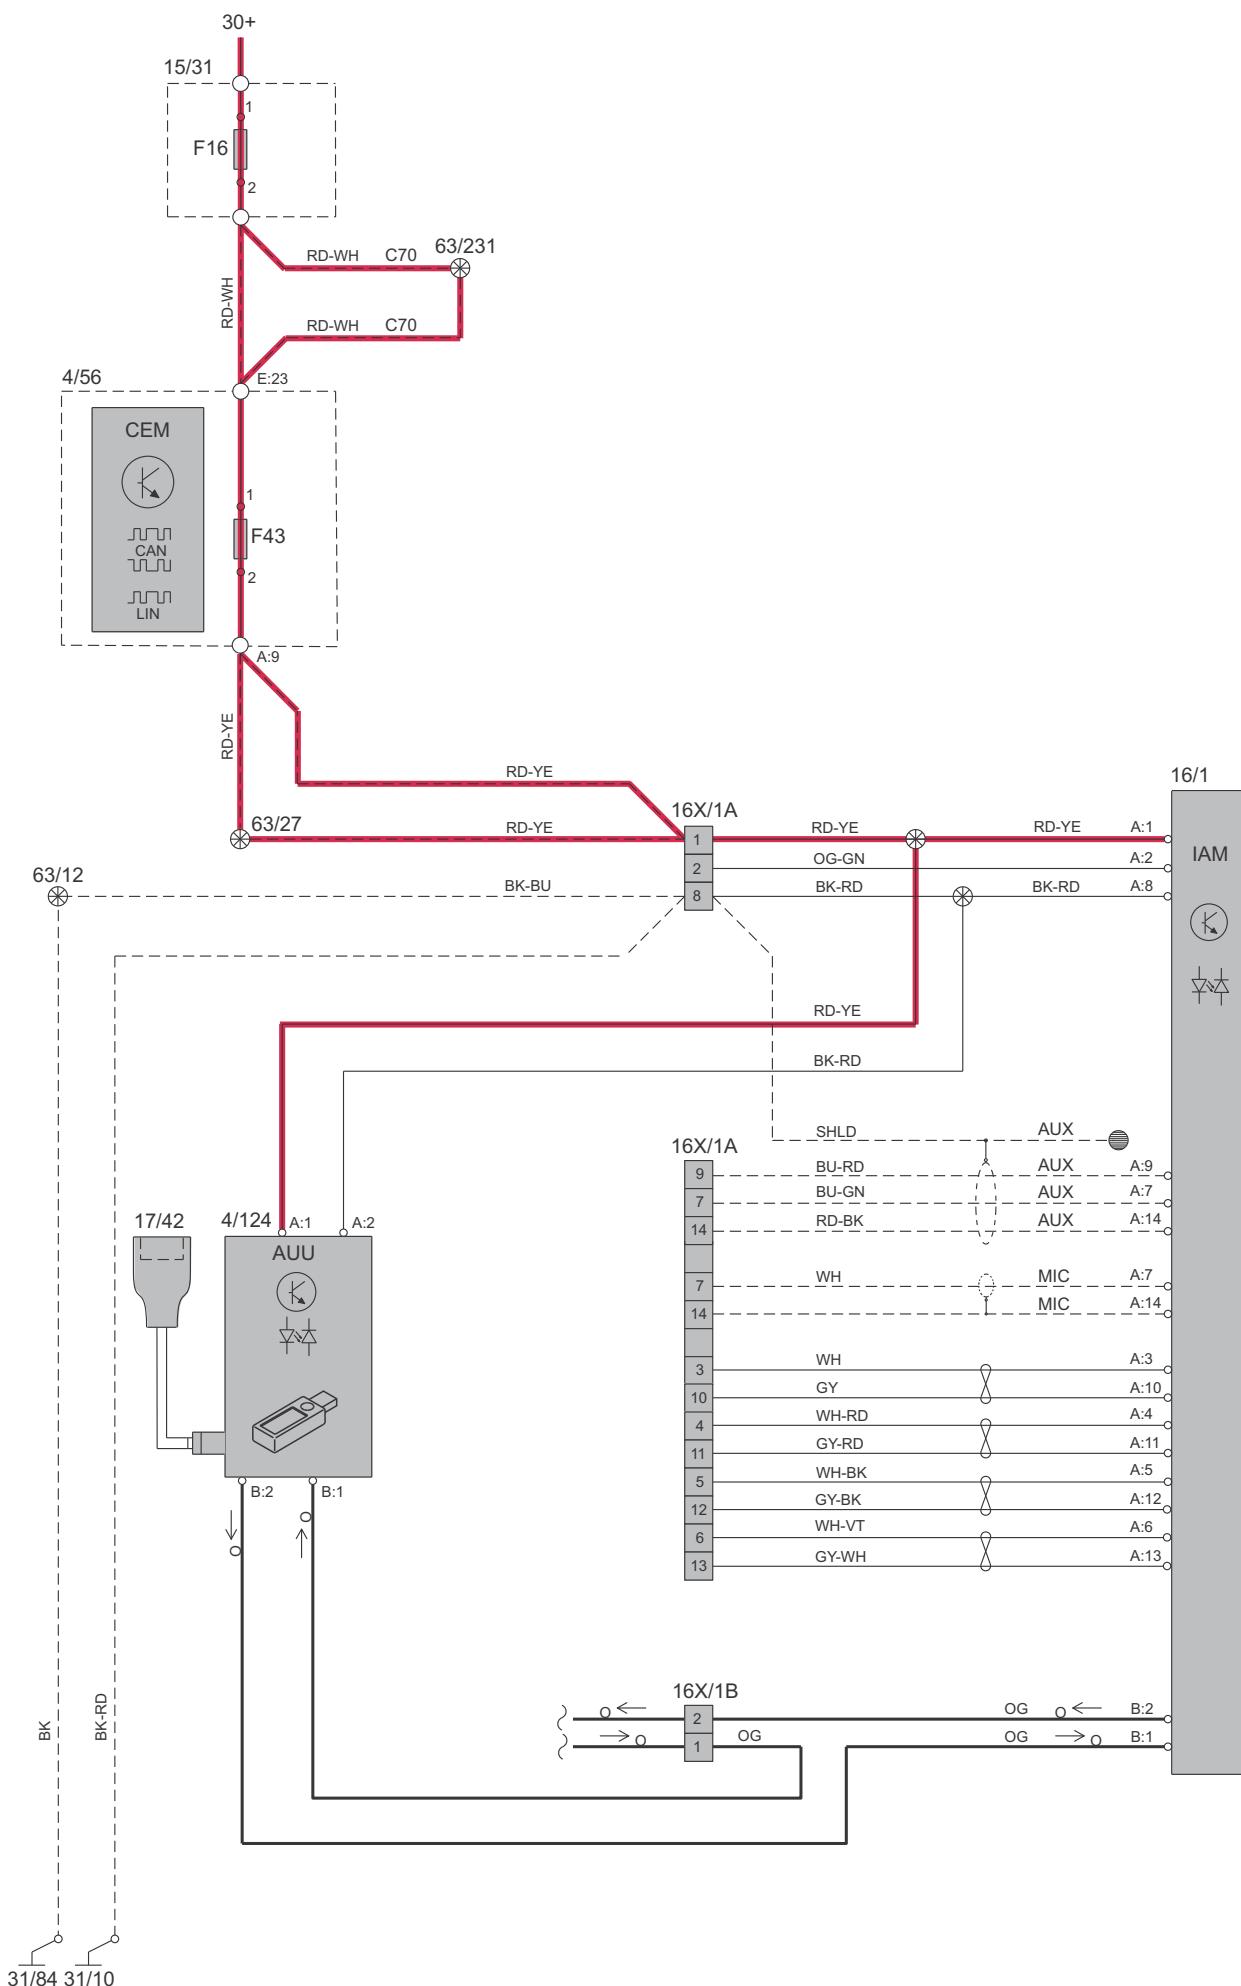

Group 38 Instruments


Driver information module

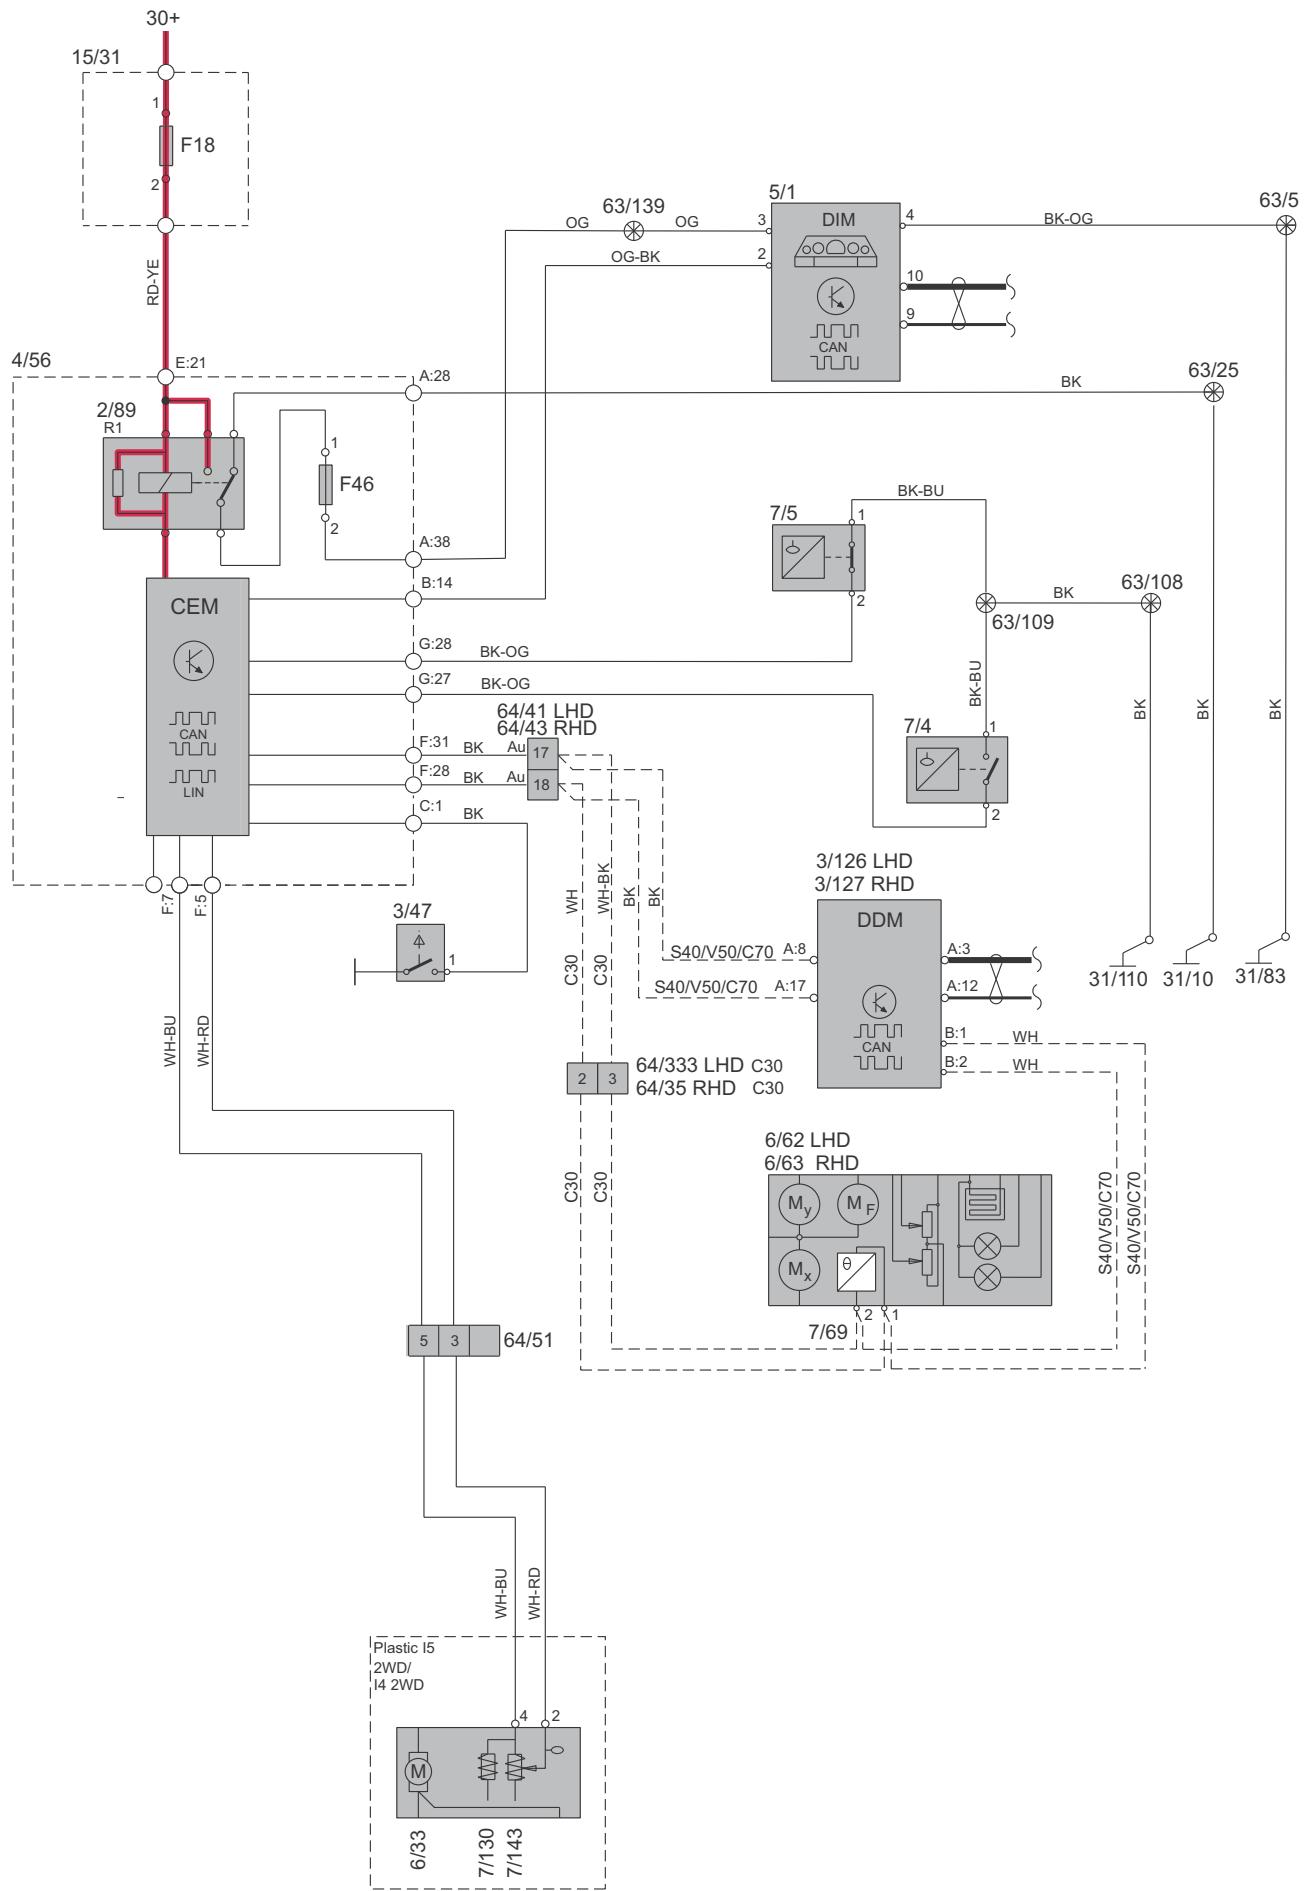

103309


Group 38 Instruments

Seat belt reminder C30/S40/V50

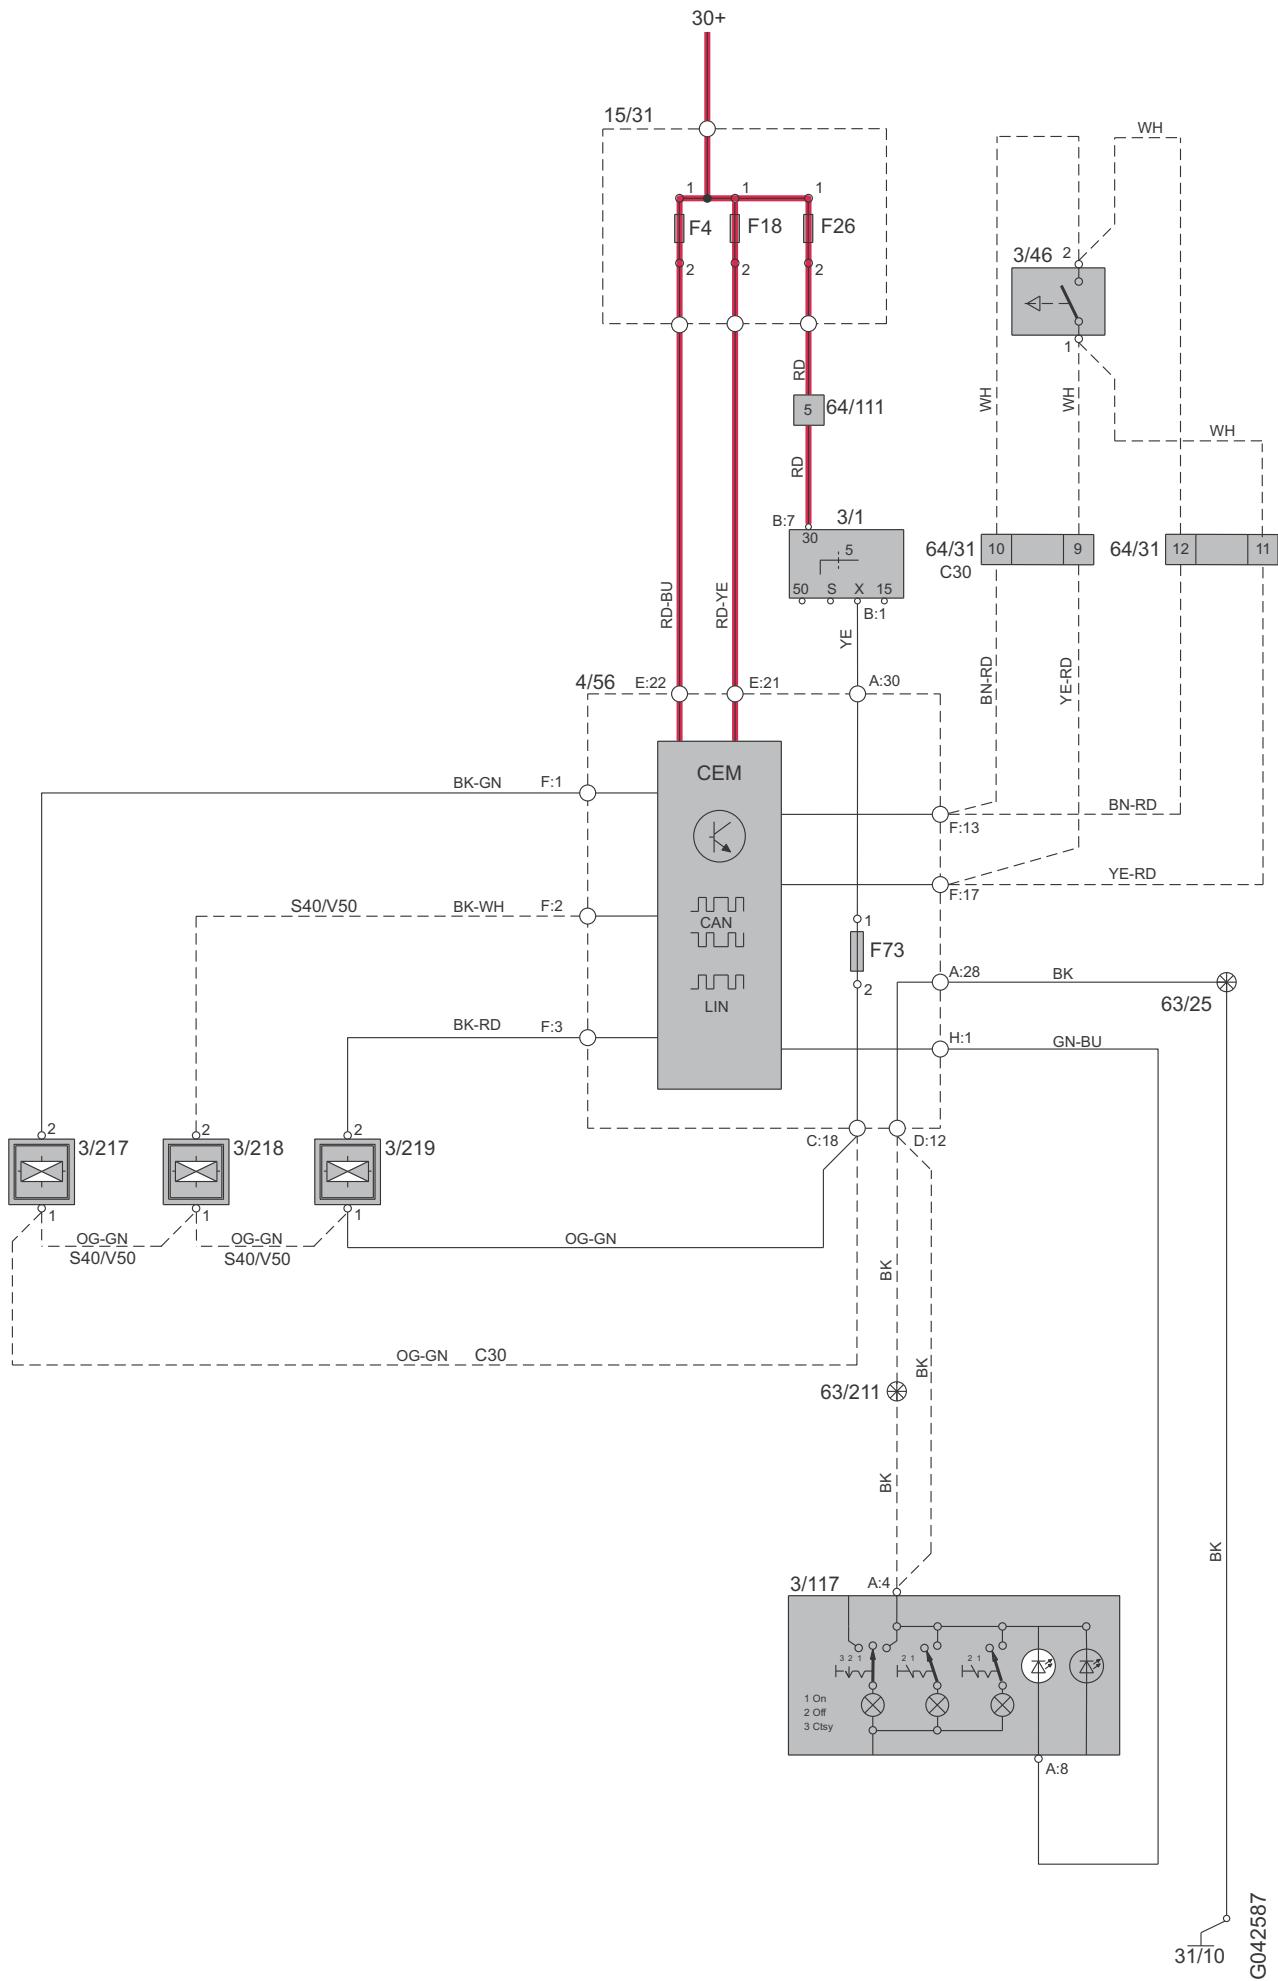


Group 38 Instruments

Seat belt reminder C70

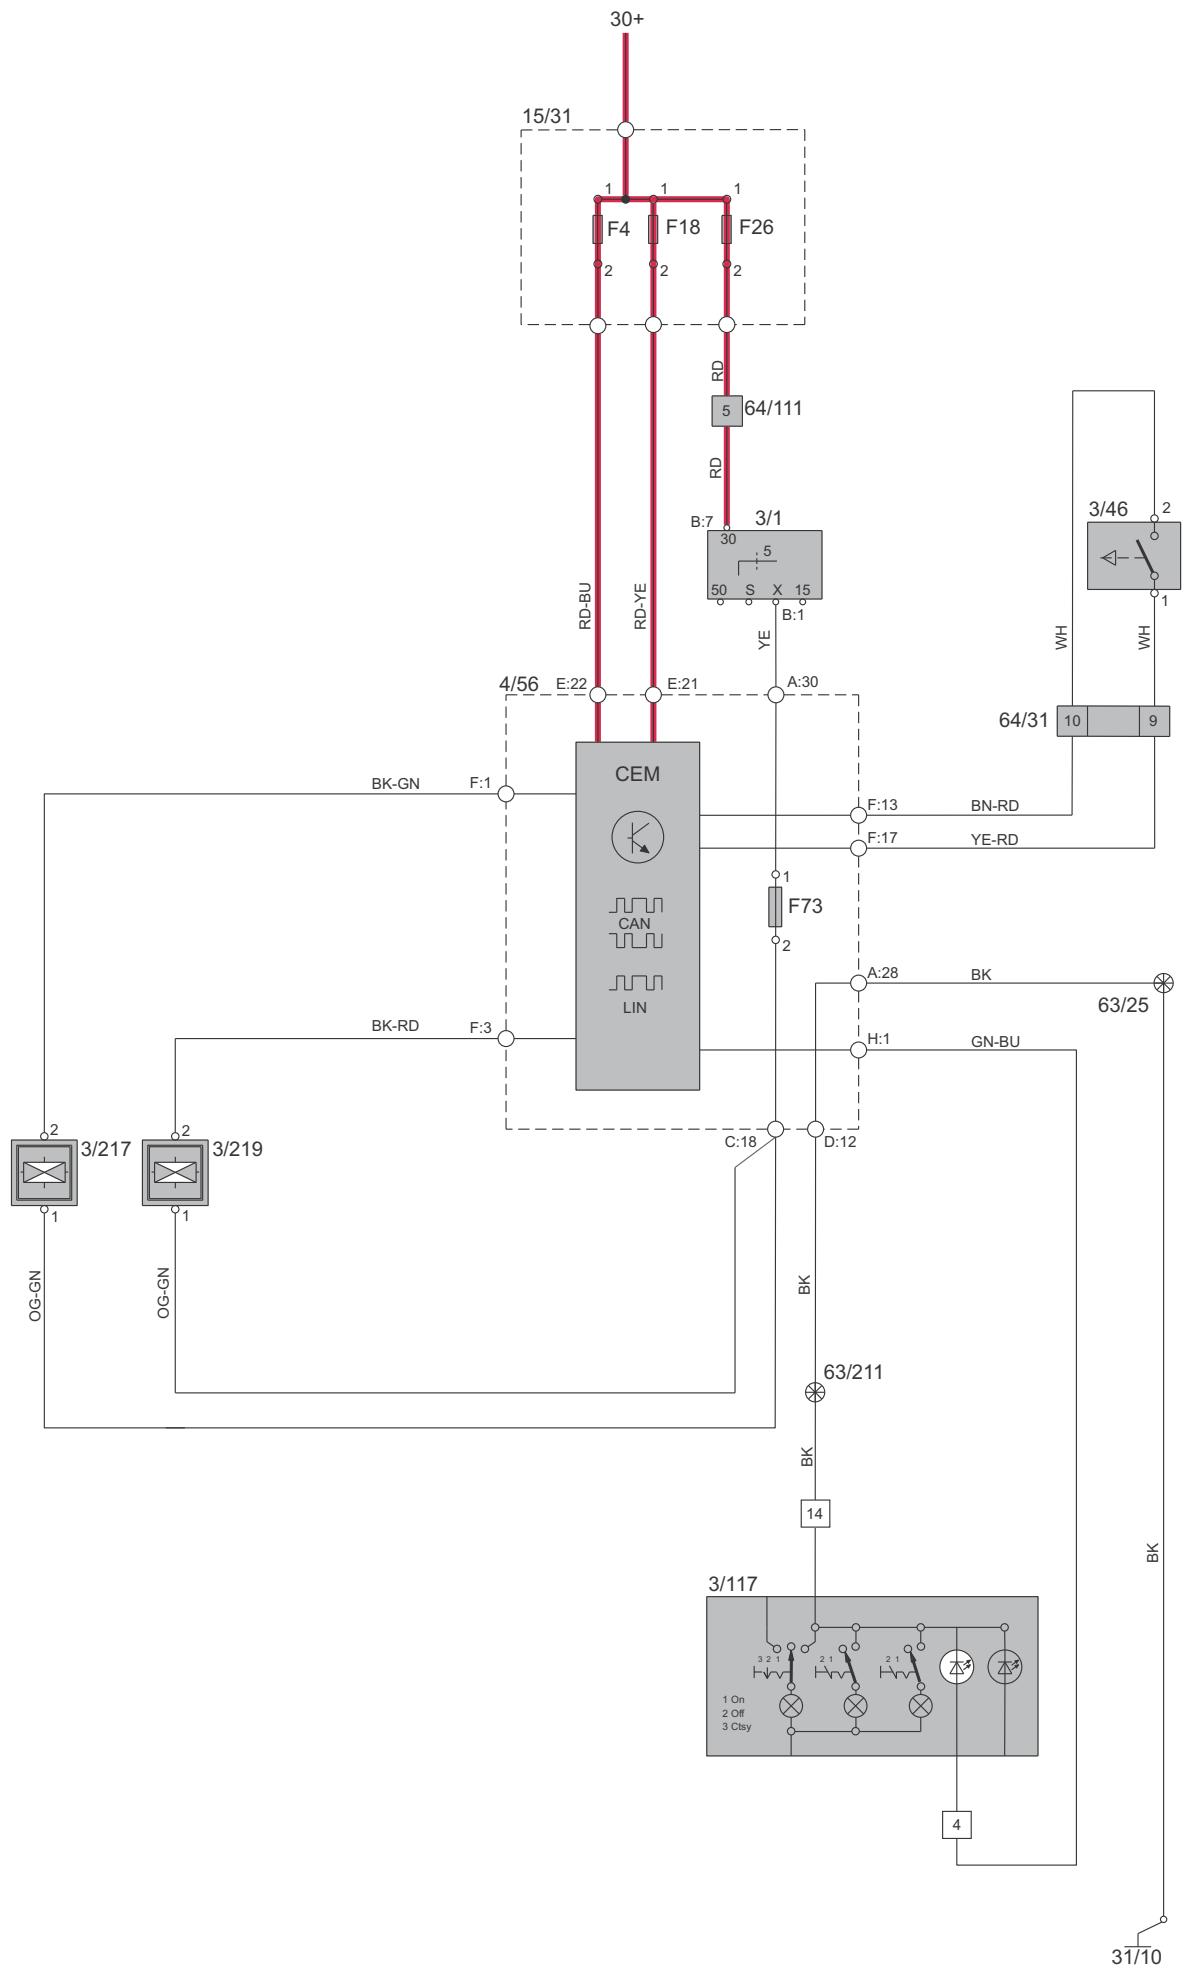


Group 39 Other Audio C30/S40/V50

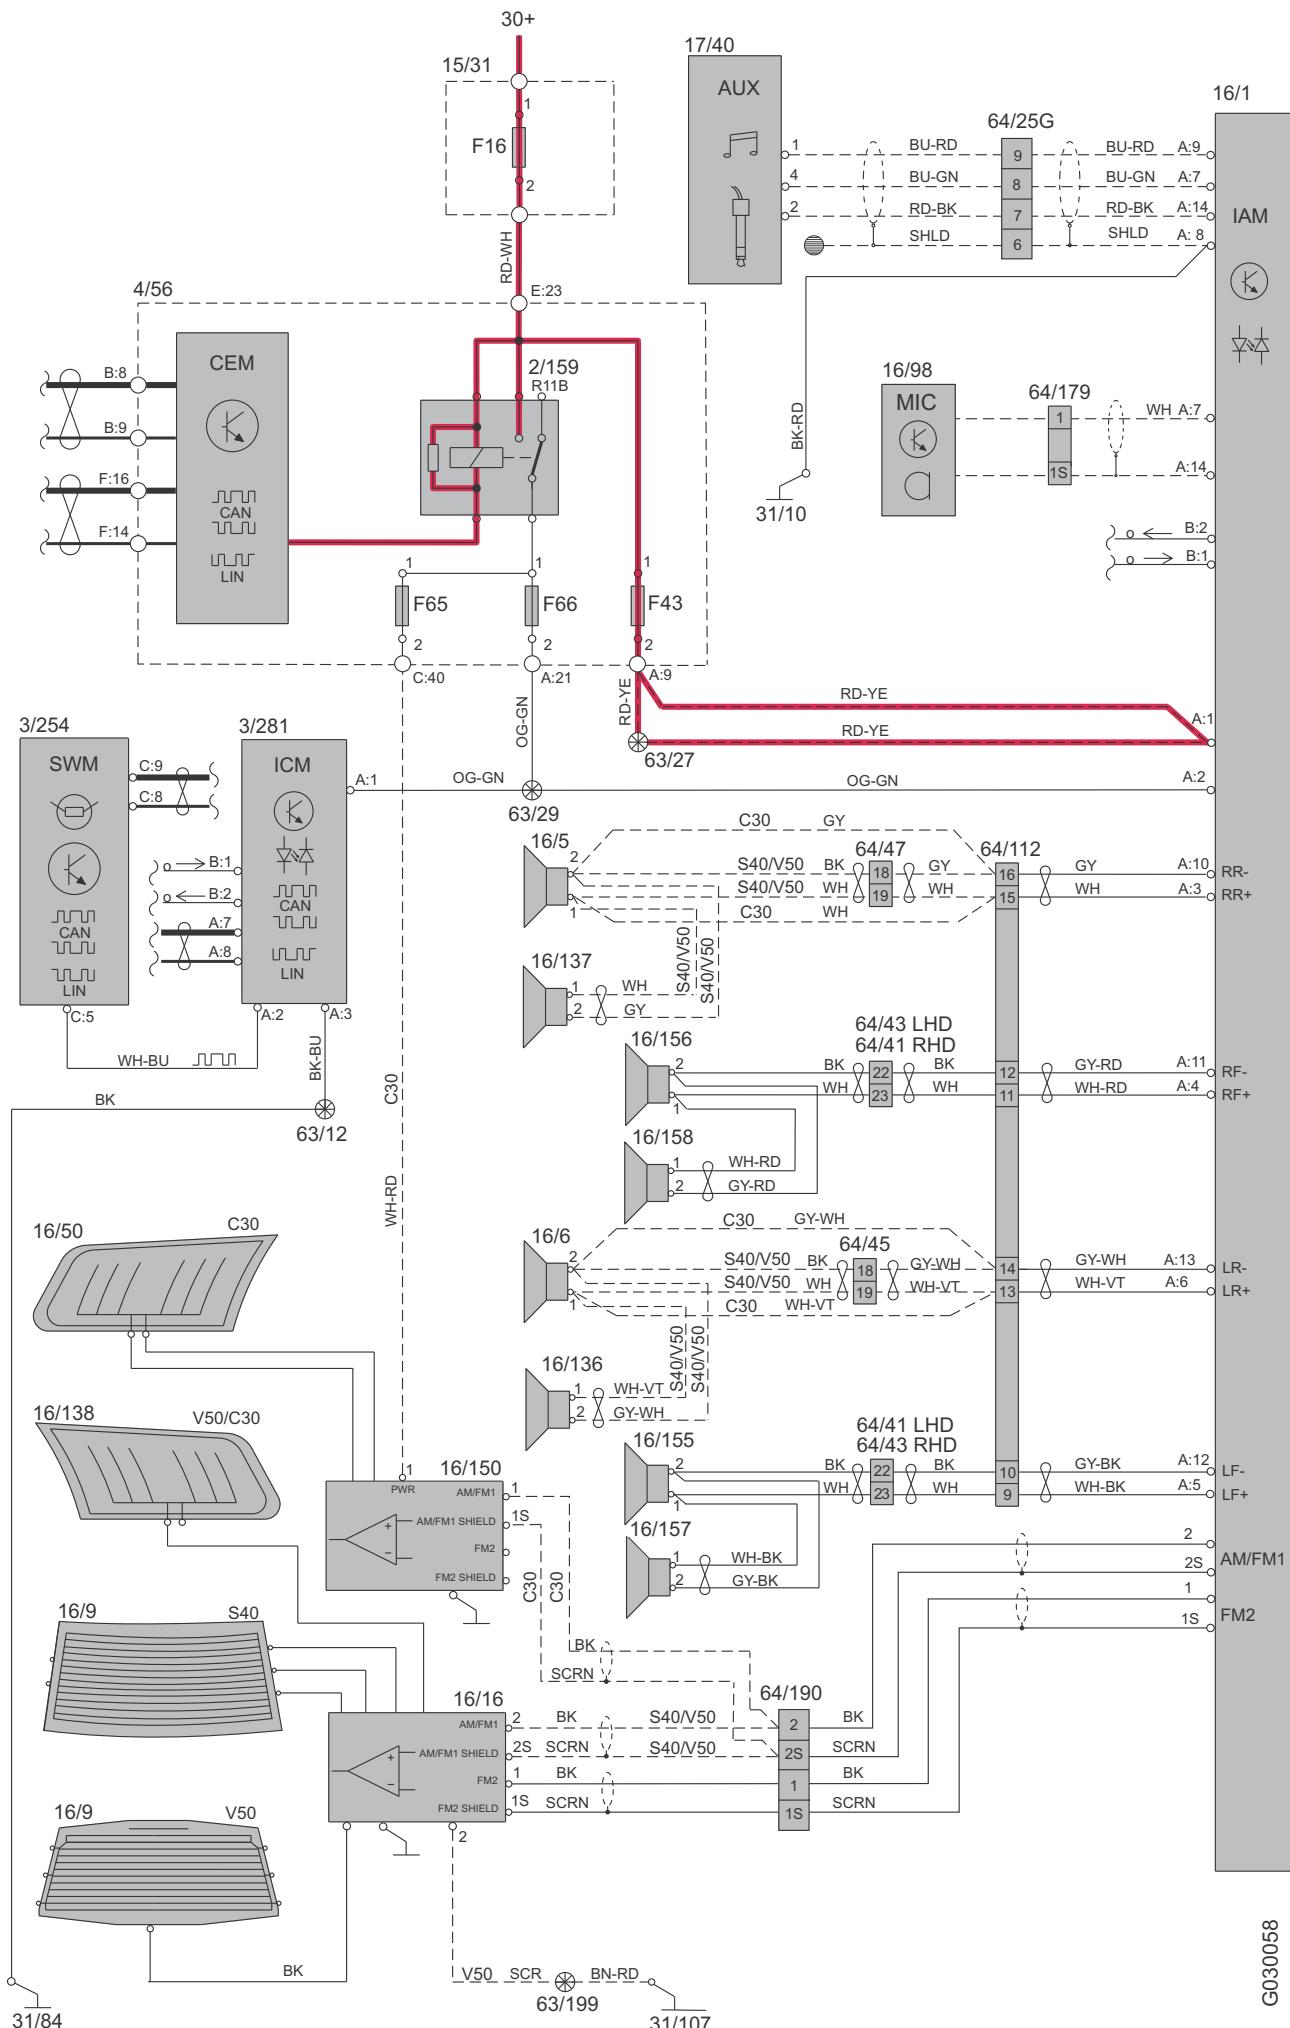


Group 39 Other

Alternative connection audio S40/V50

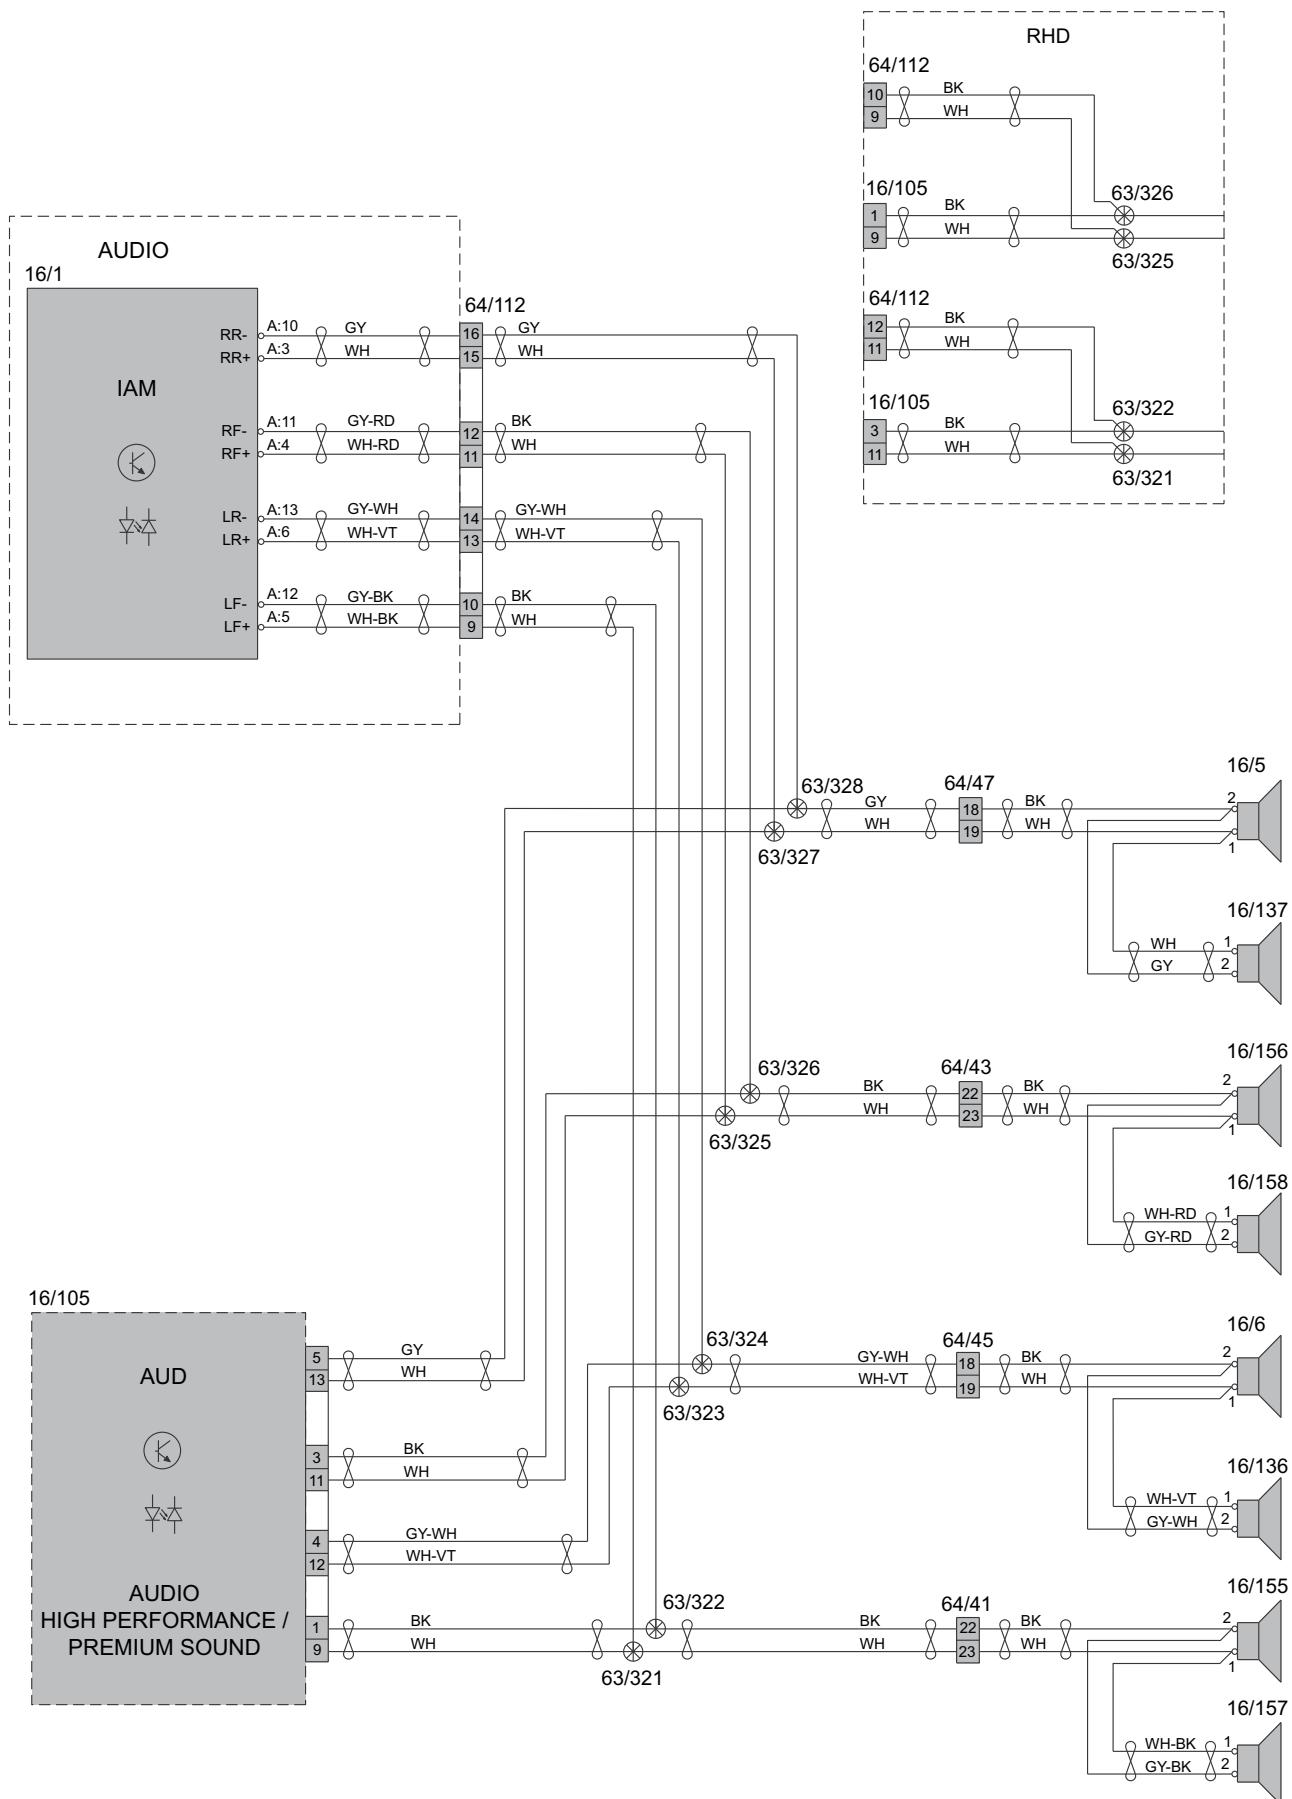


G042798

Group 39 Other Audio C70

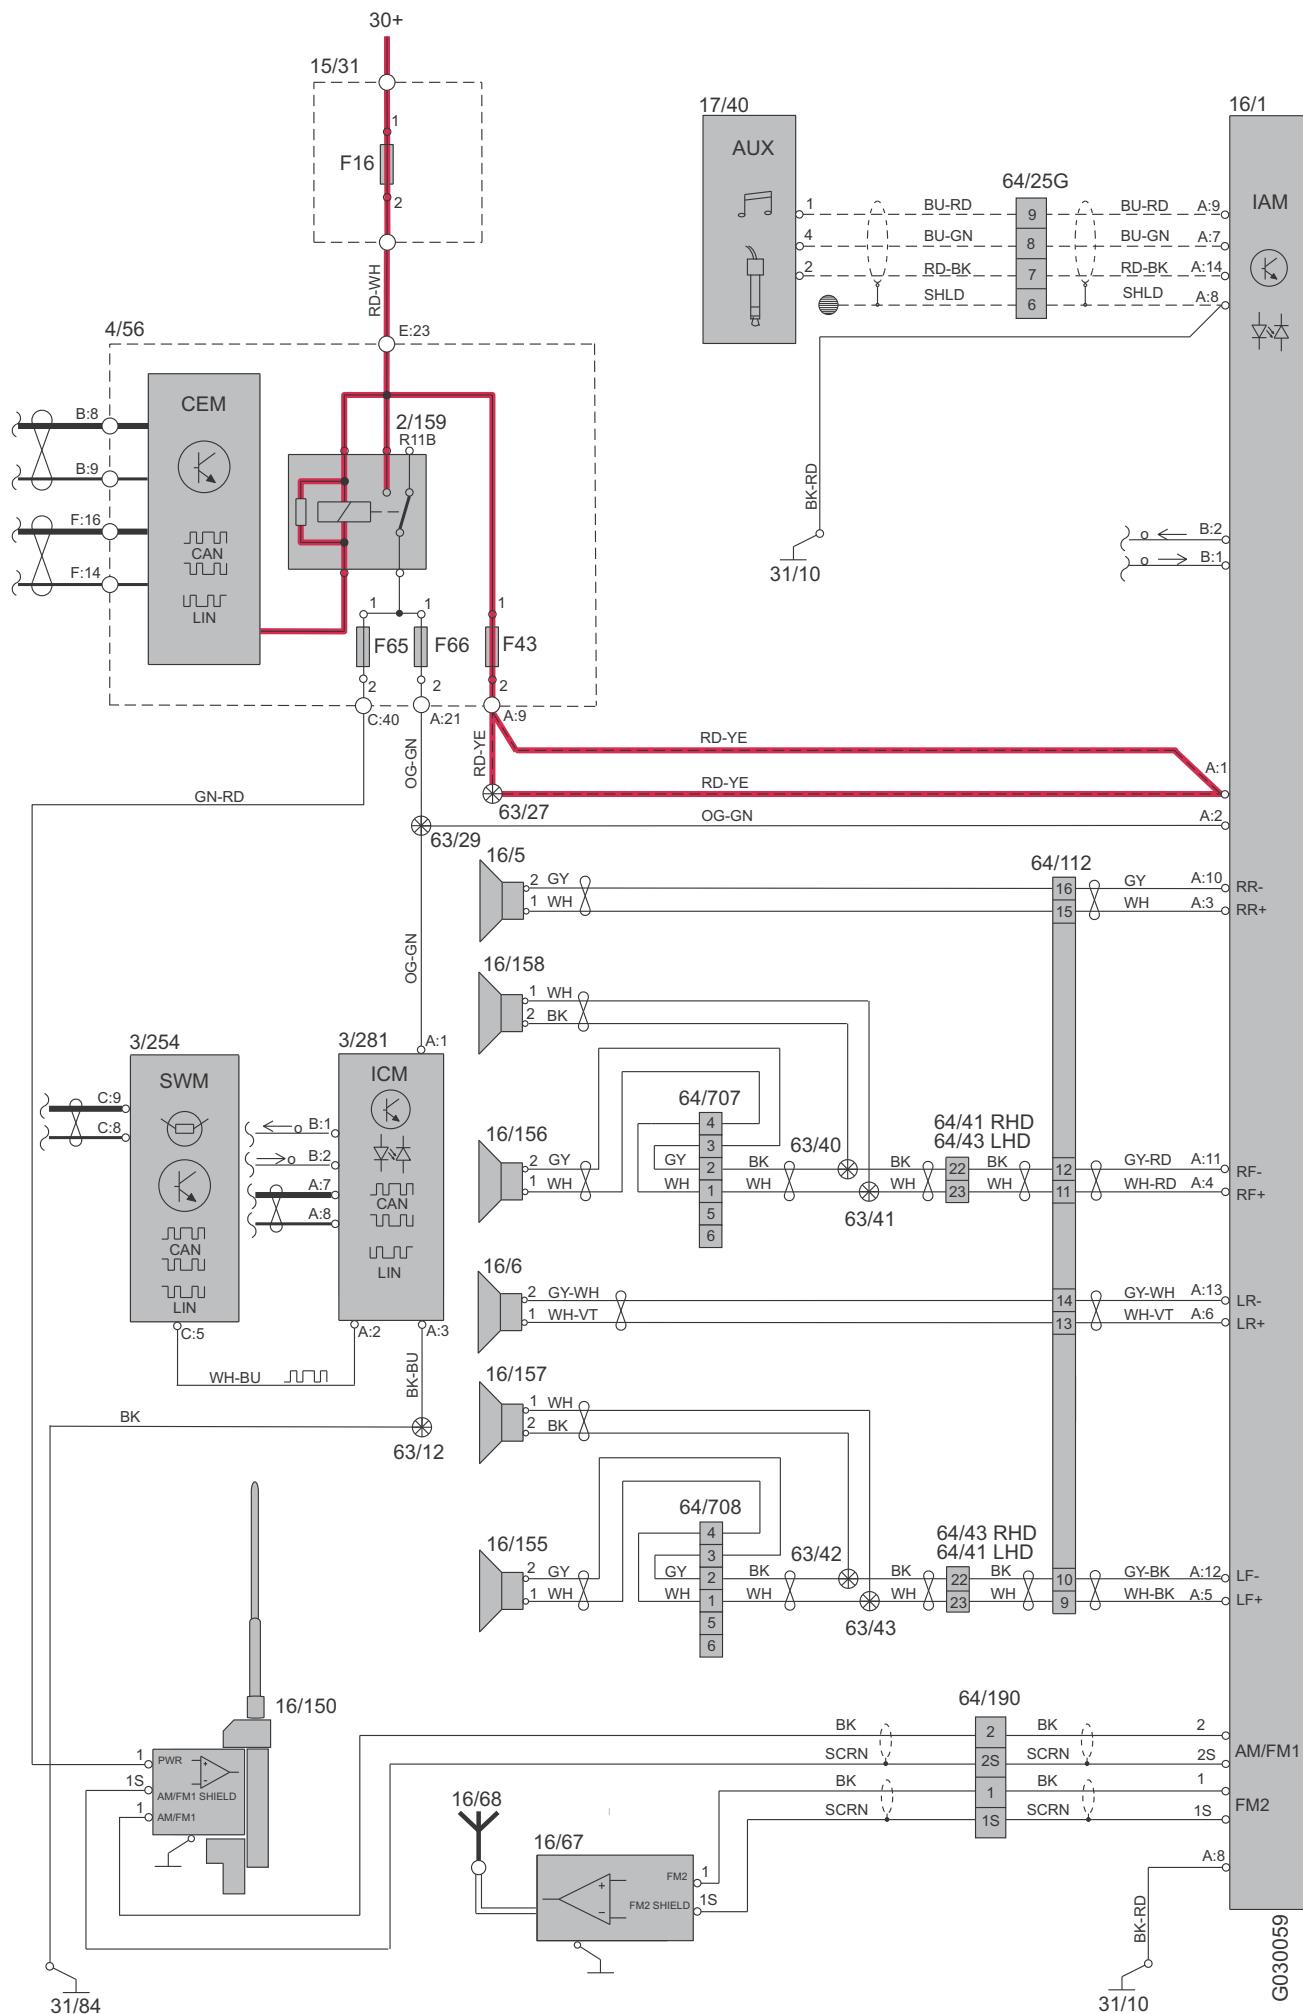


Group 39 Other

Audio High Performance/Premium Sound C30/S40/V50 1:2

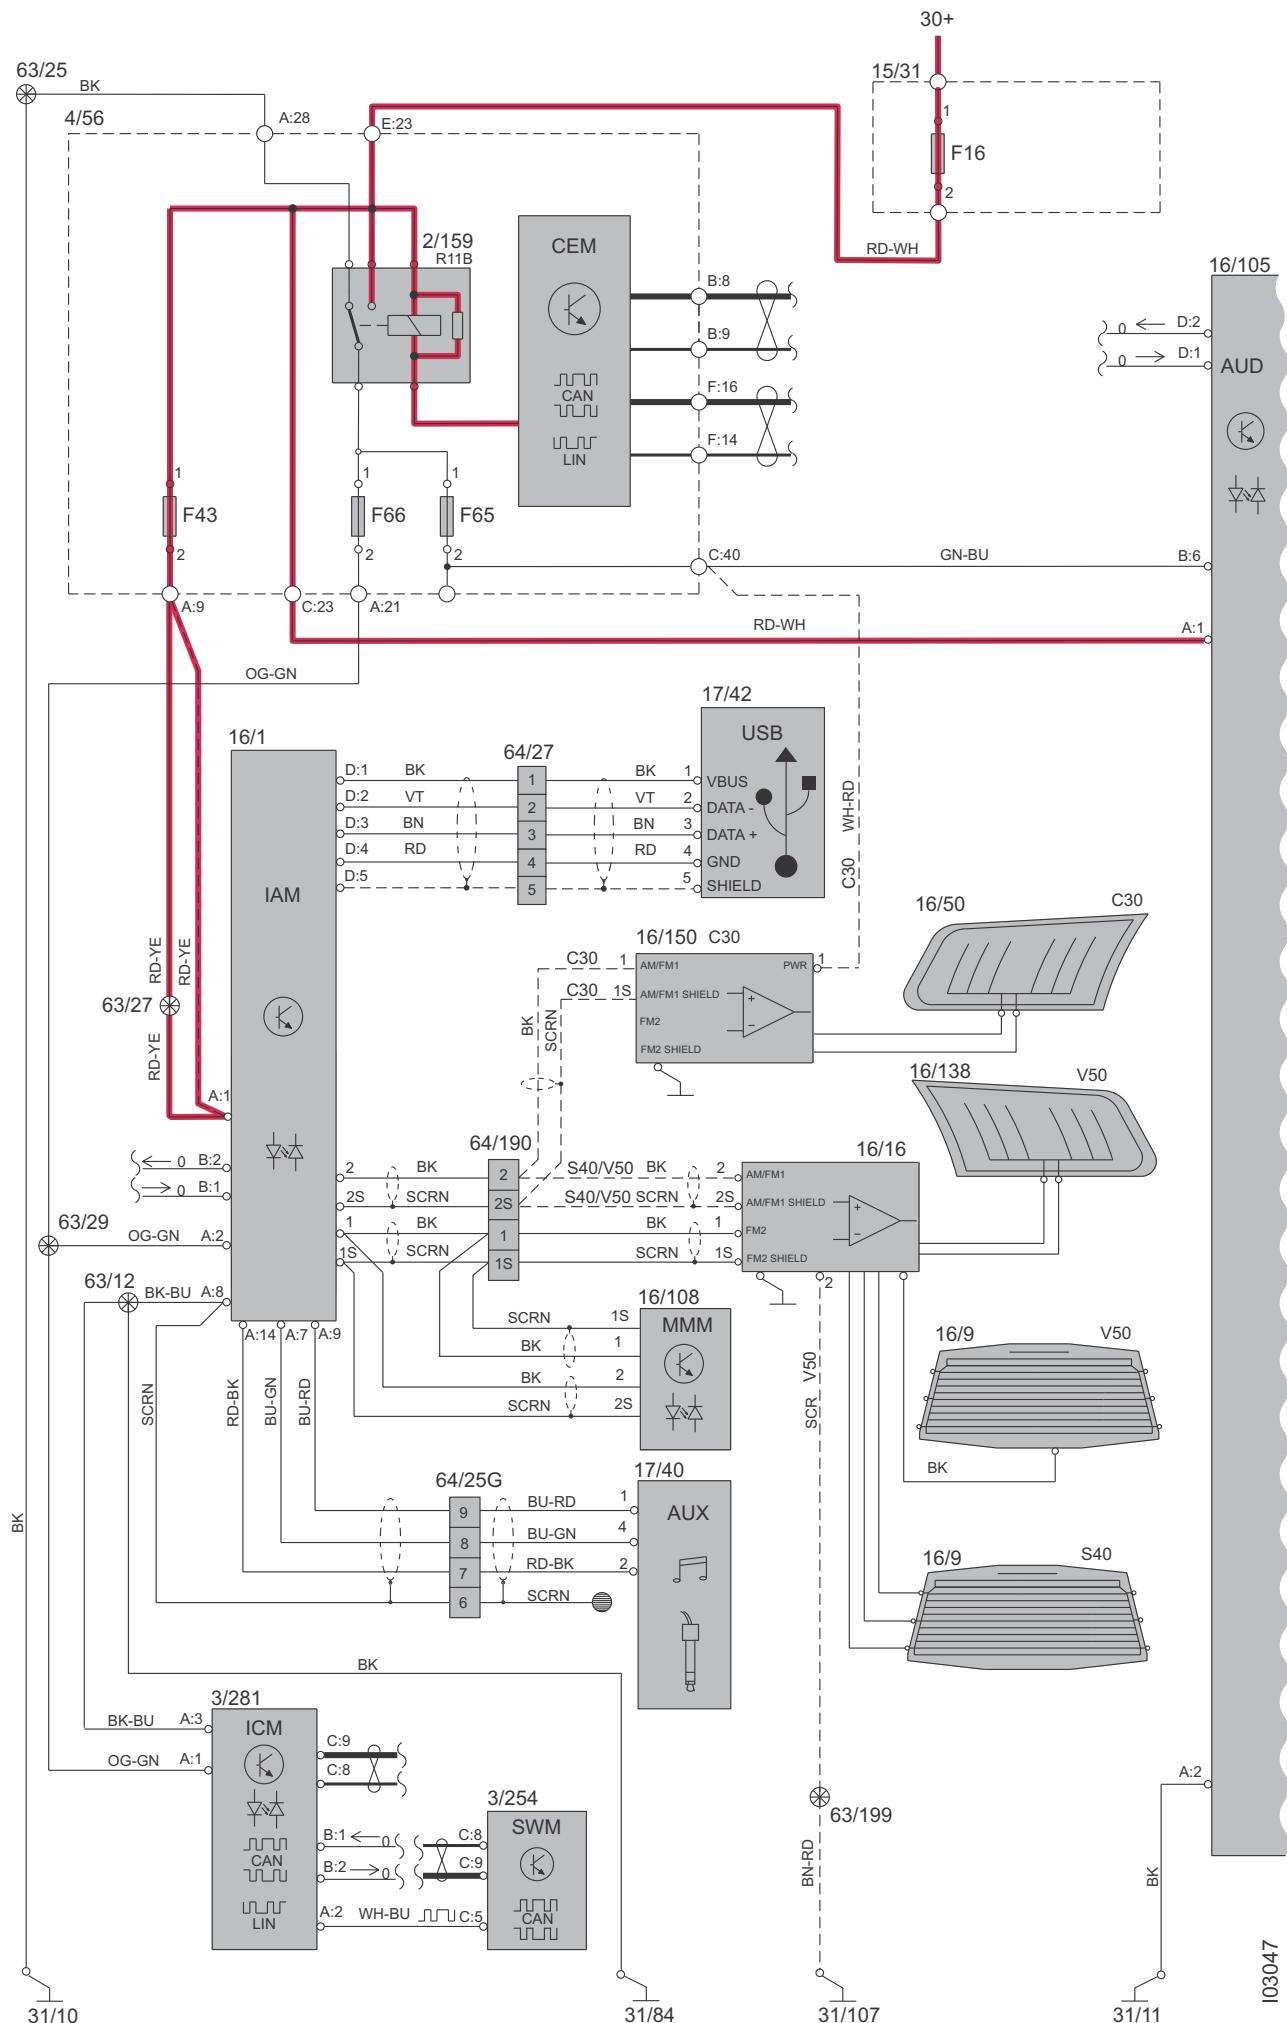

Group 39 Other


Audio High Performance/Premium Sound C30/S40/V50 2:2

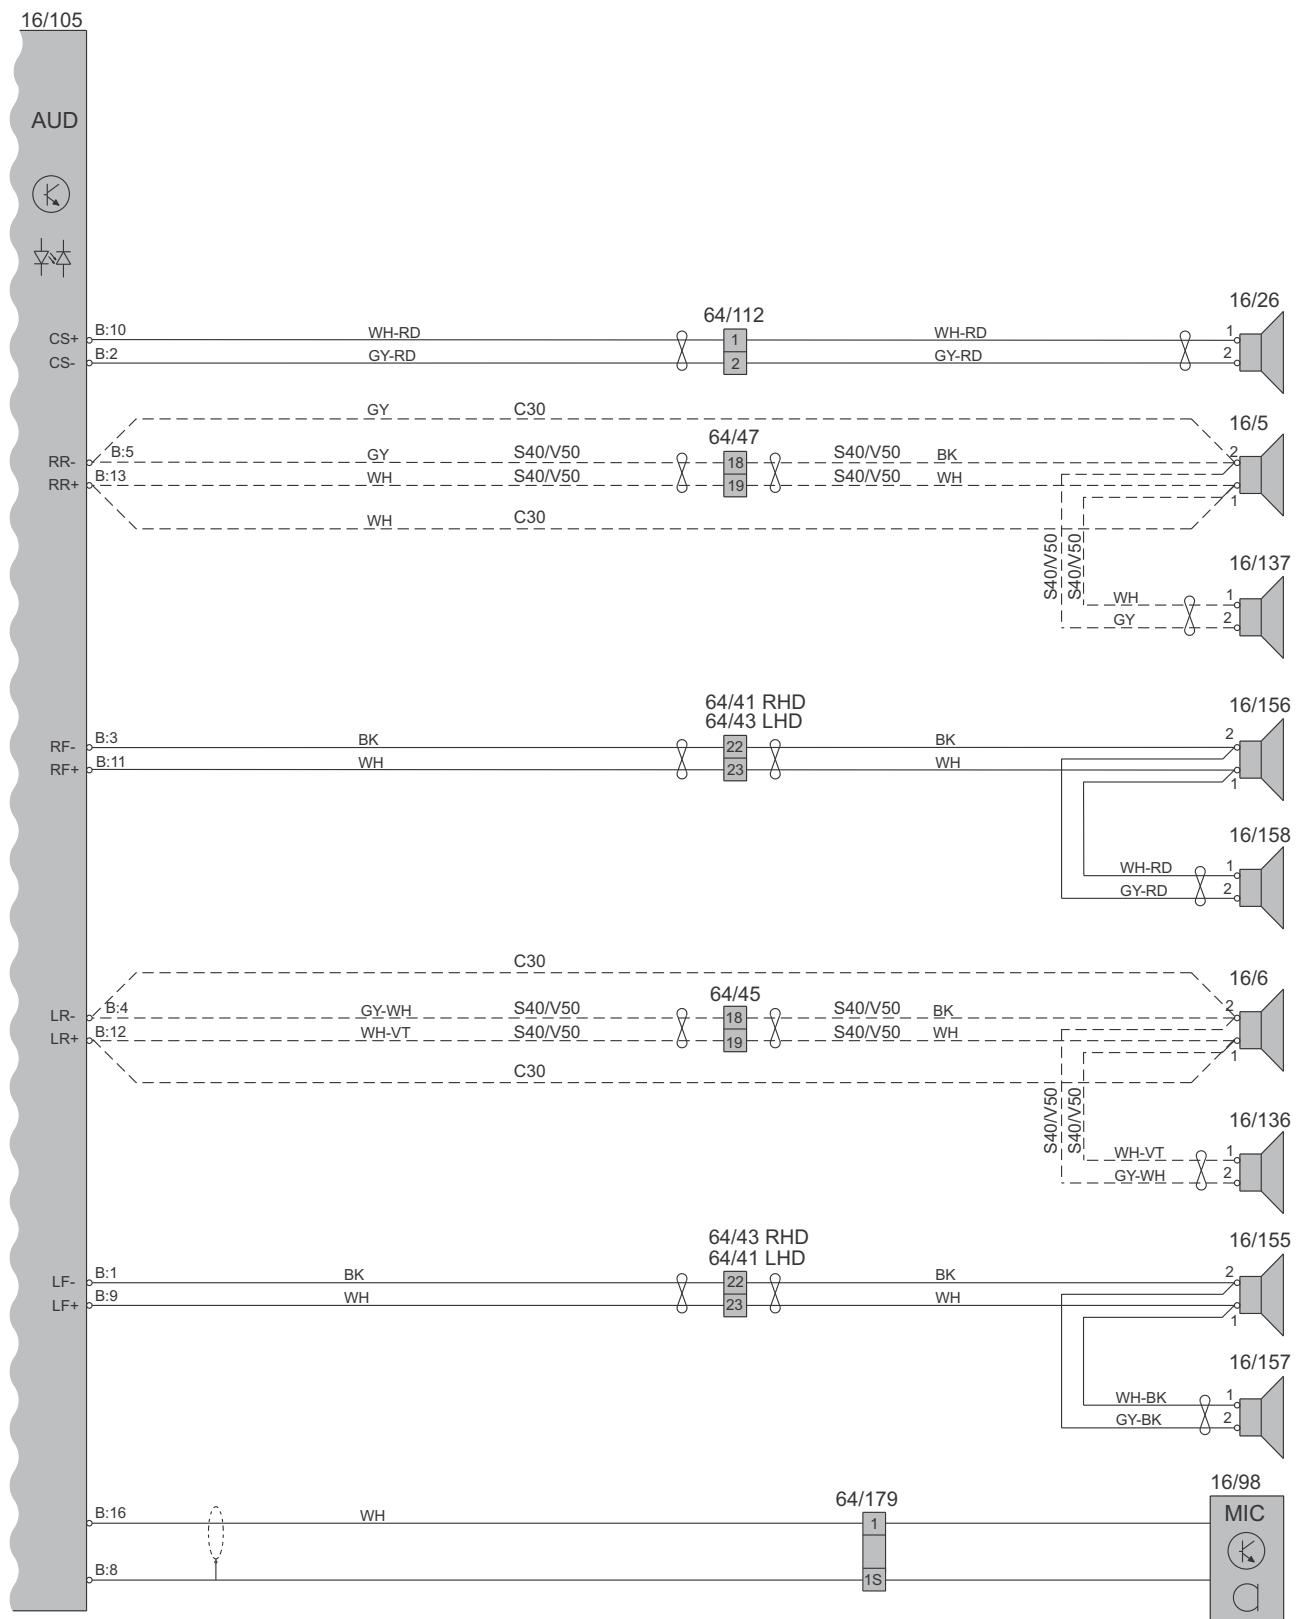

G030063


Group 39 Other

Audio High Performance/Premium Sound C70 1:2

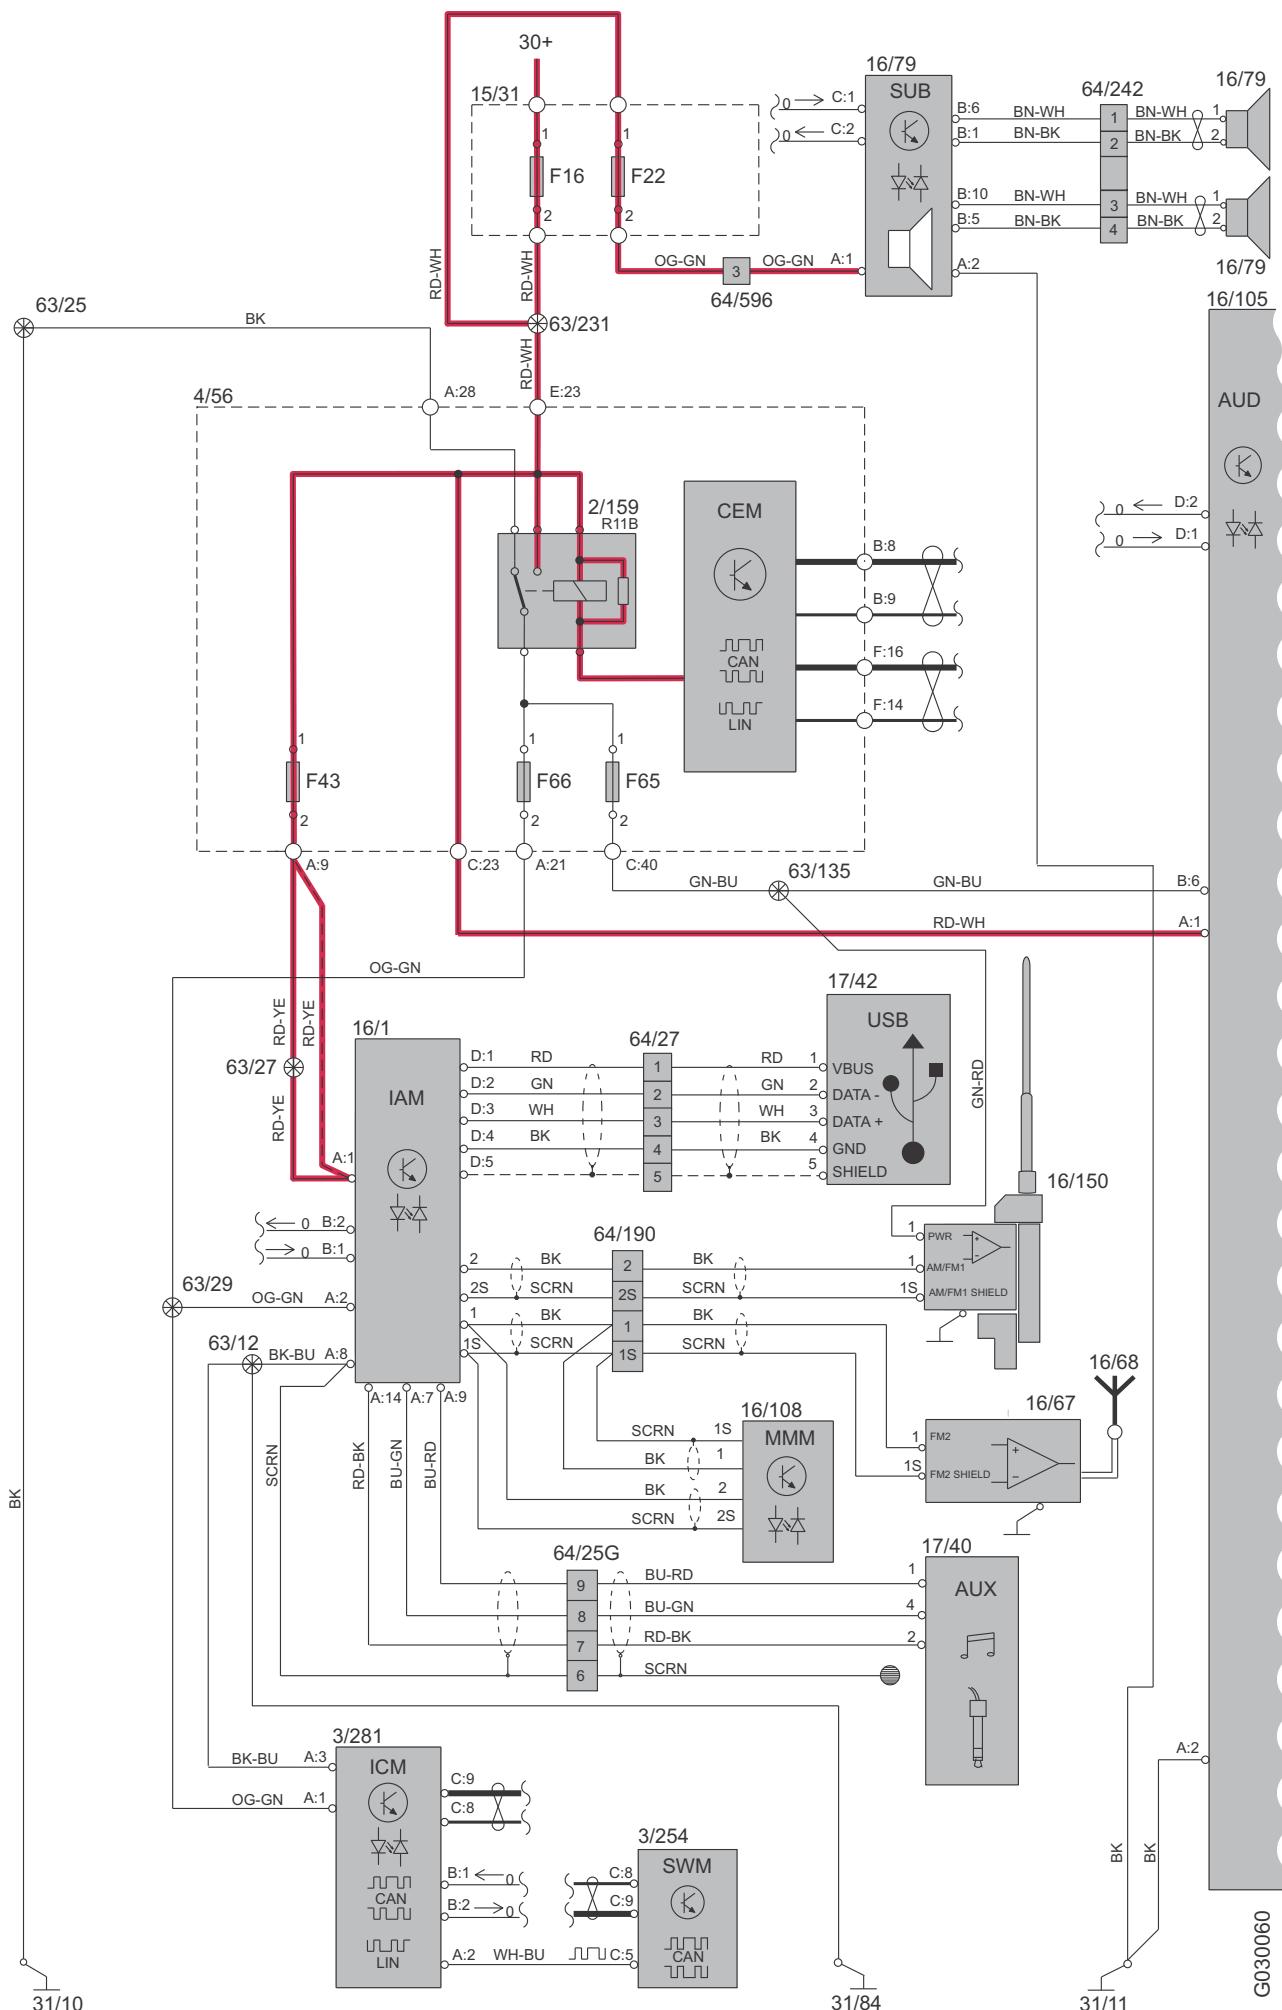


Group 39 Other

Audio High Performance/Premium Sound C70 2:2

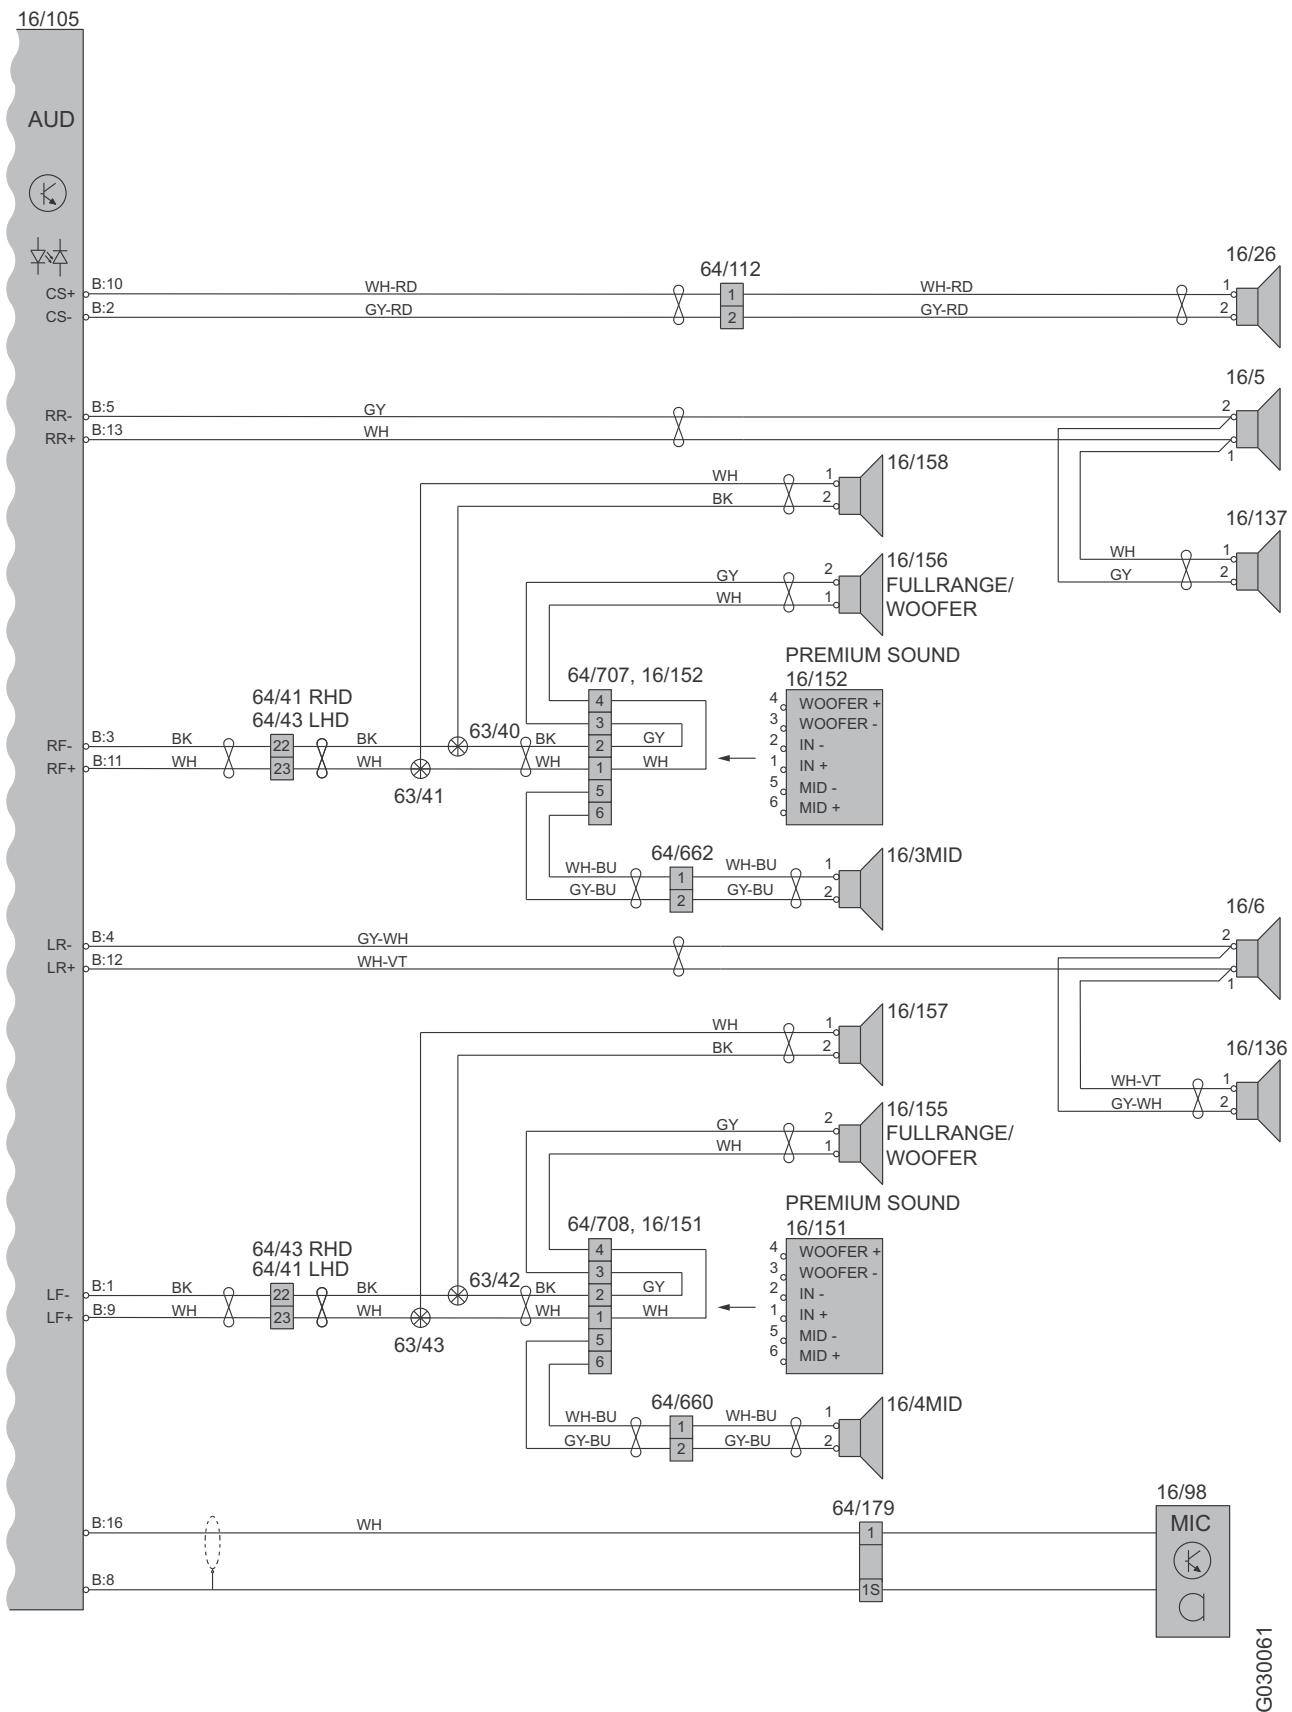


Group 39 Other

Cellular phone 1:2

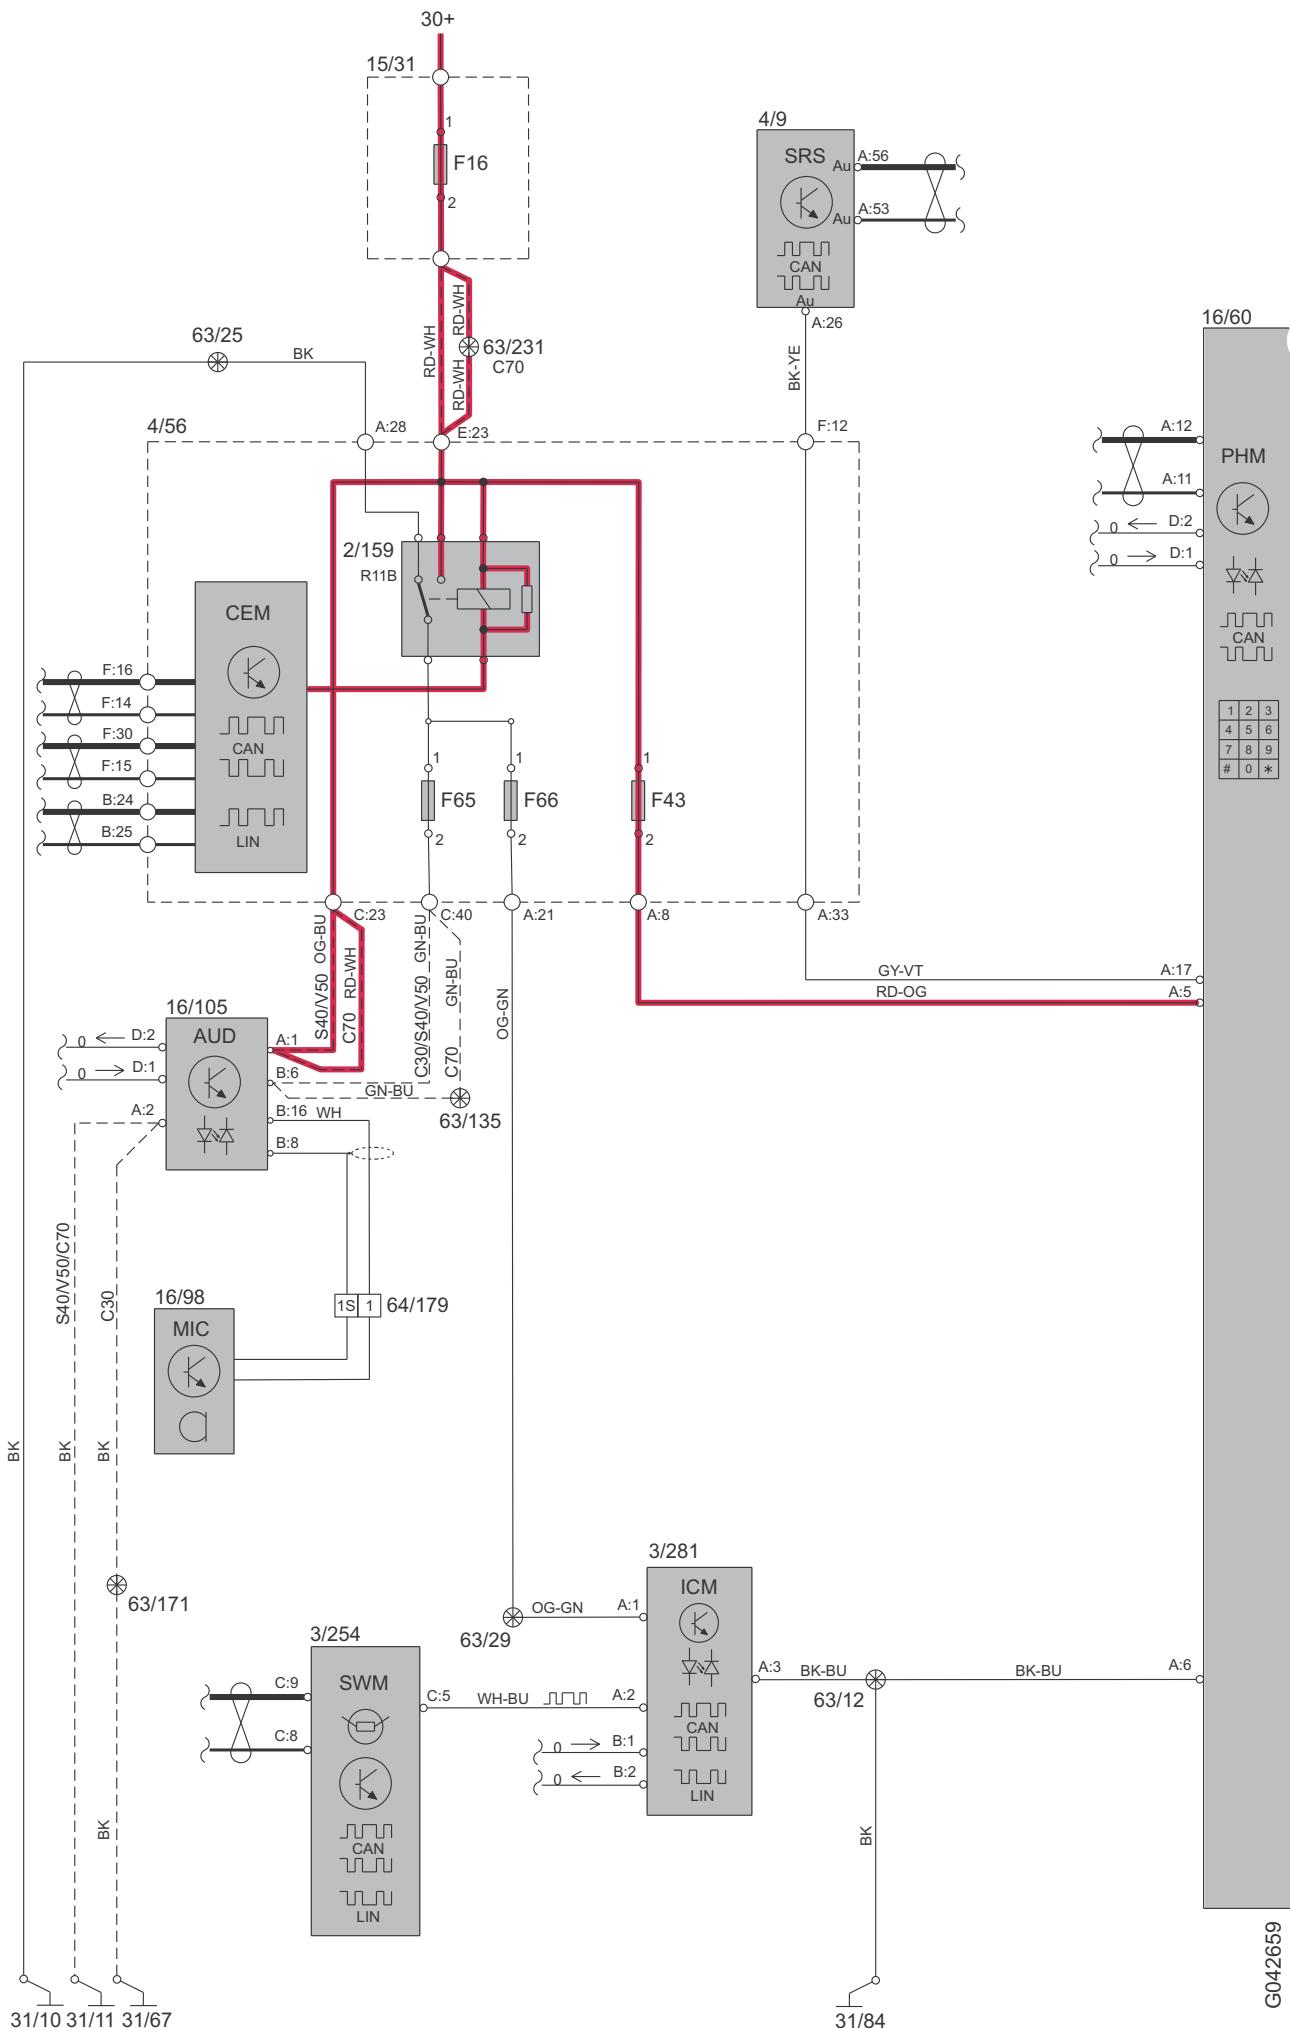


Group 39 Other Cellular phone 2:2

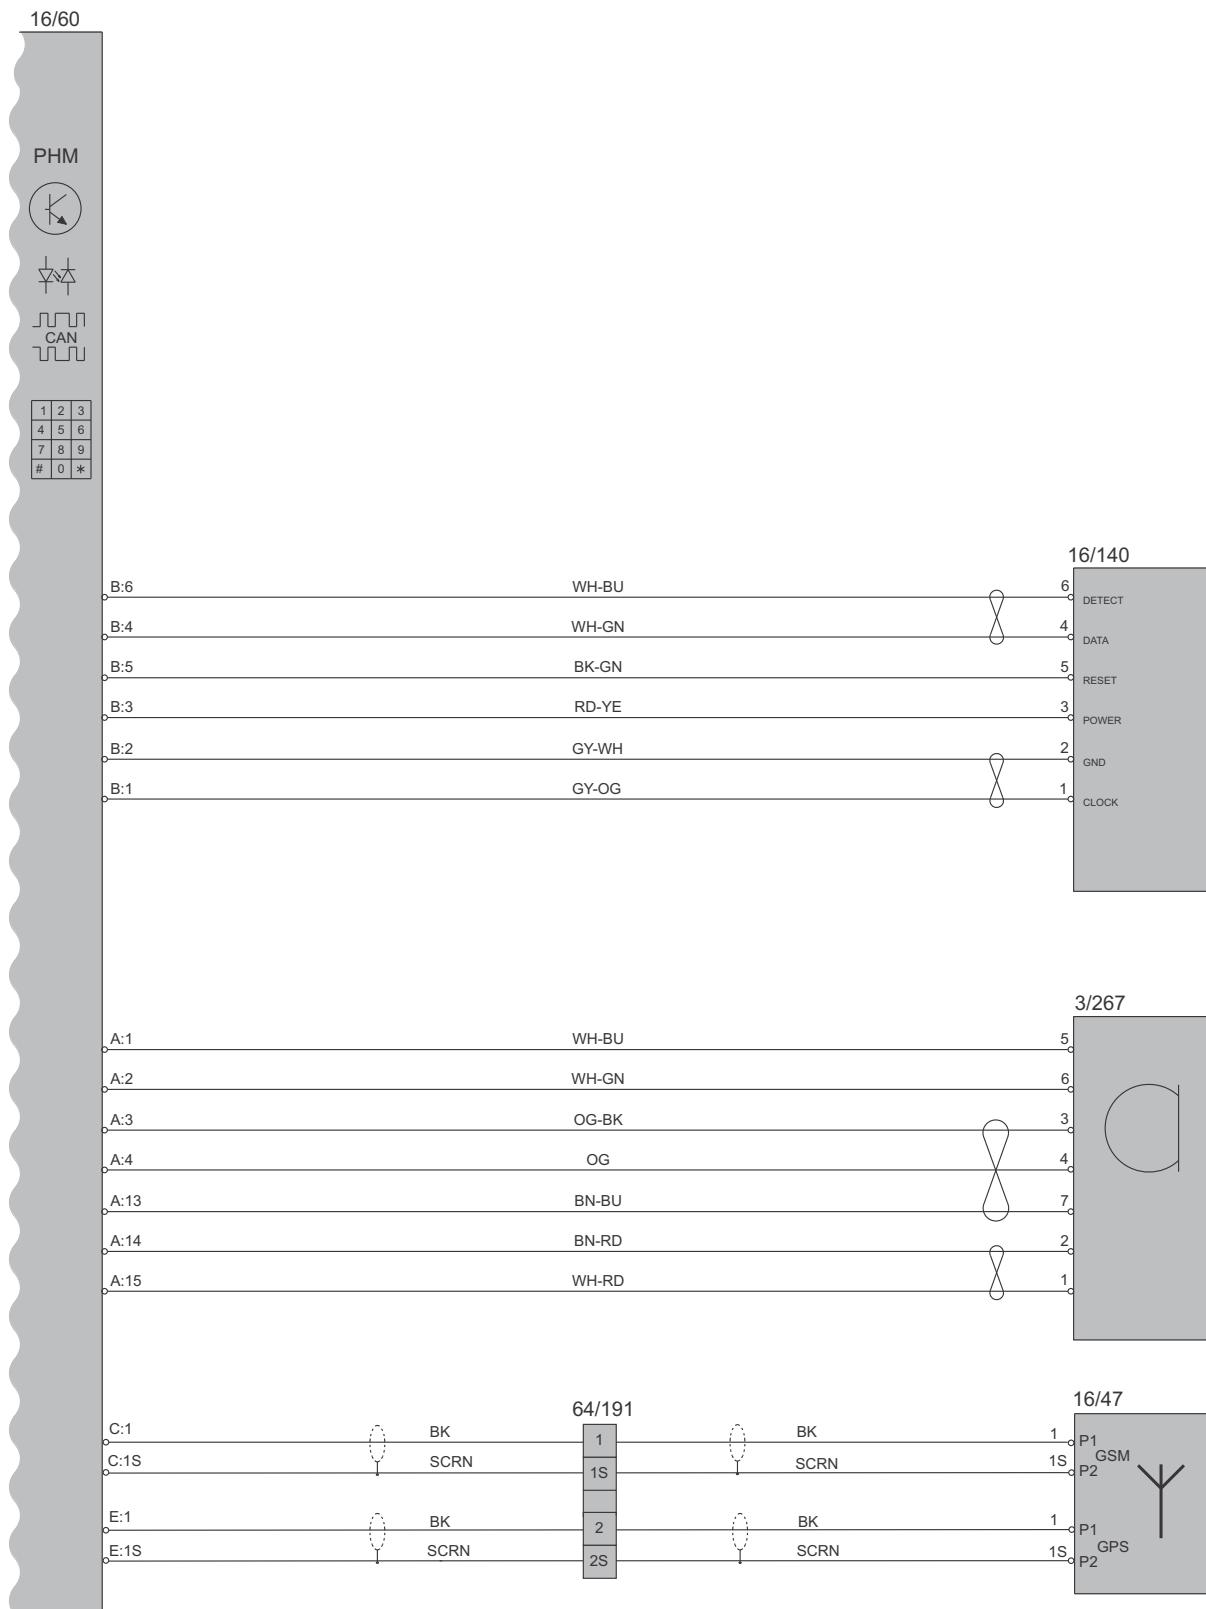

103300


Group 39 Other

Multimedia & Traffic information

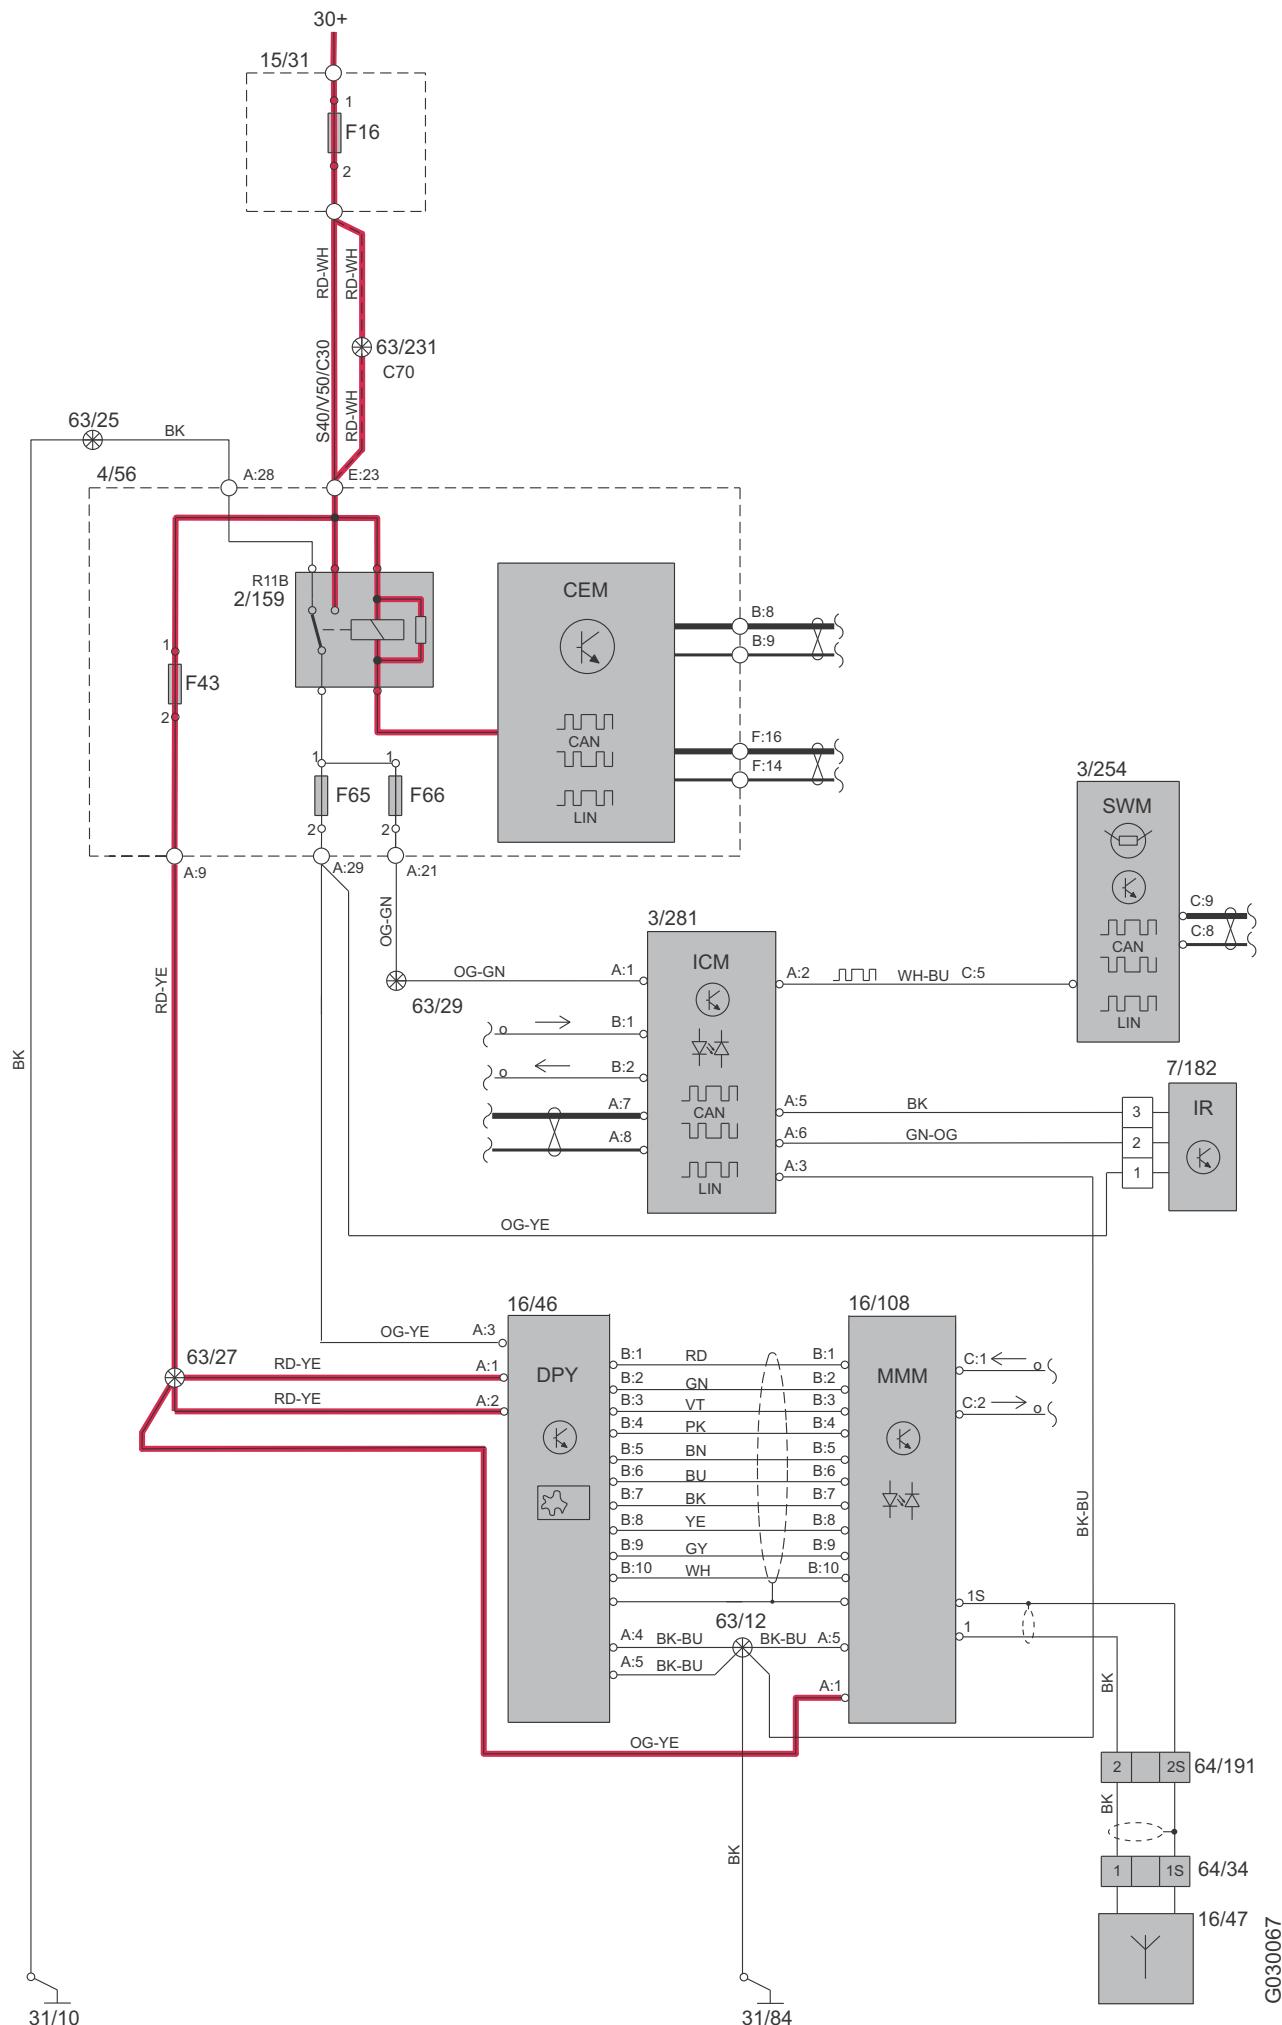


Group 39 Other, Accessories

Satellite radio

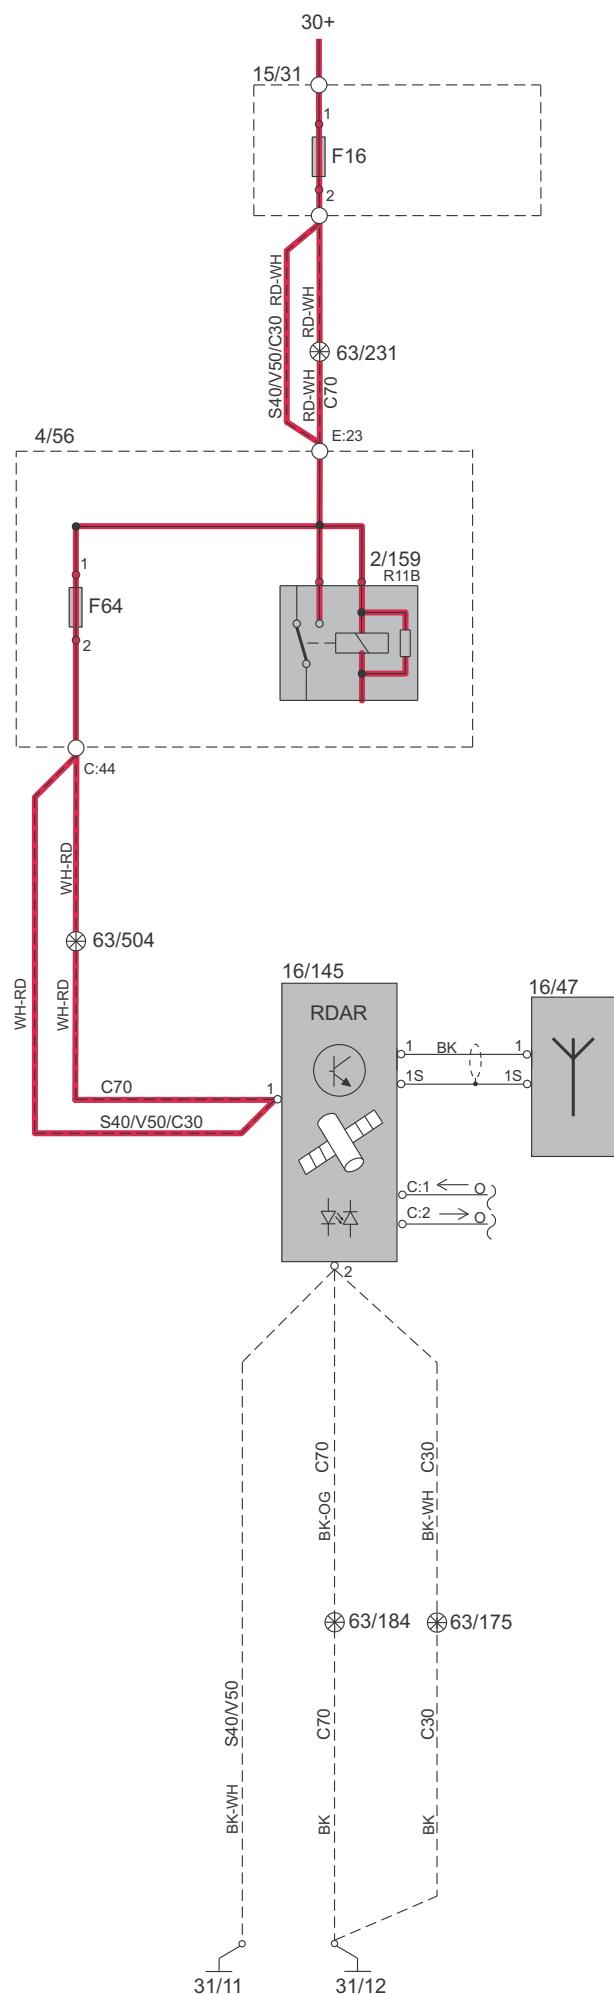


Group 39 Other, Accessories

Subwoofer C70

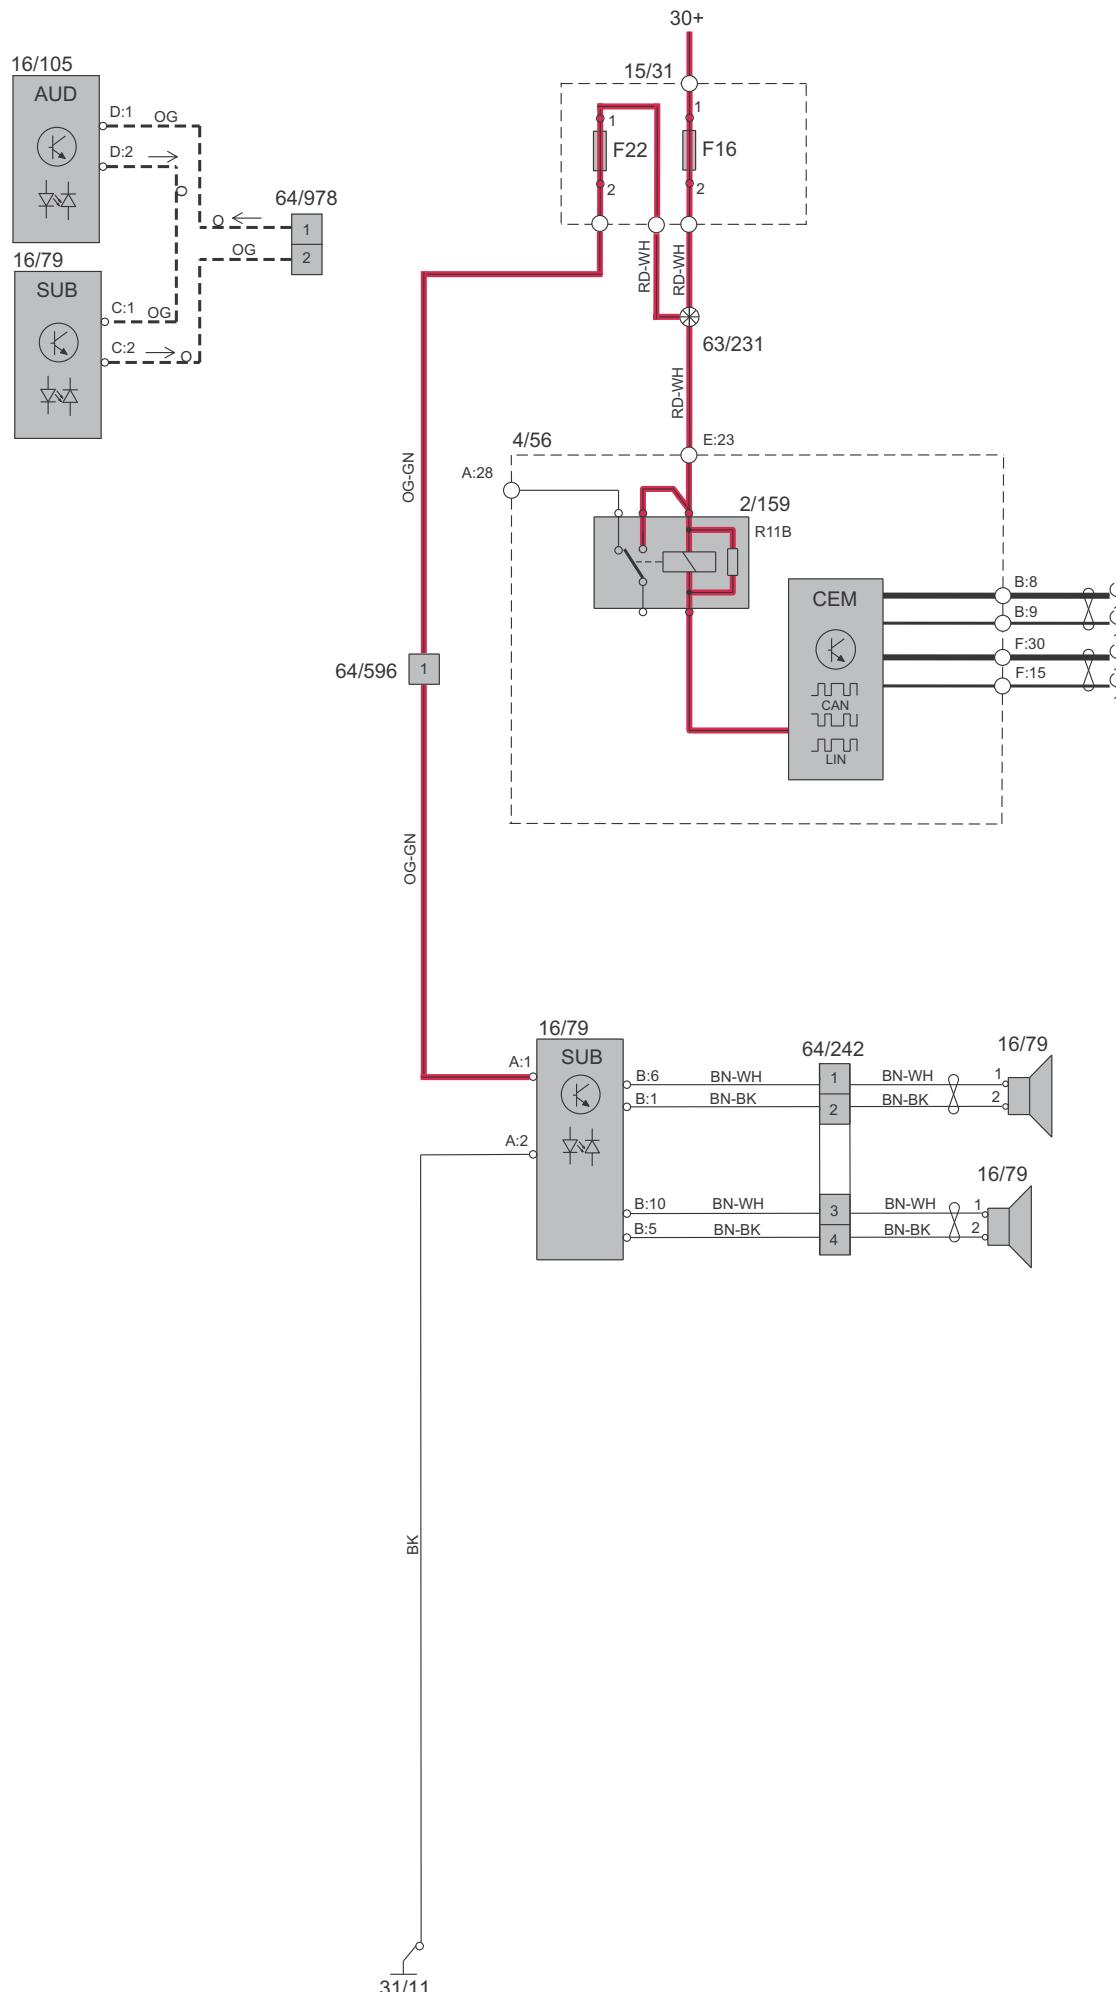


Group 39 Other, Accessories

Navigation system, portable

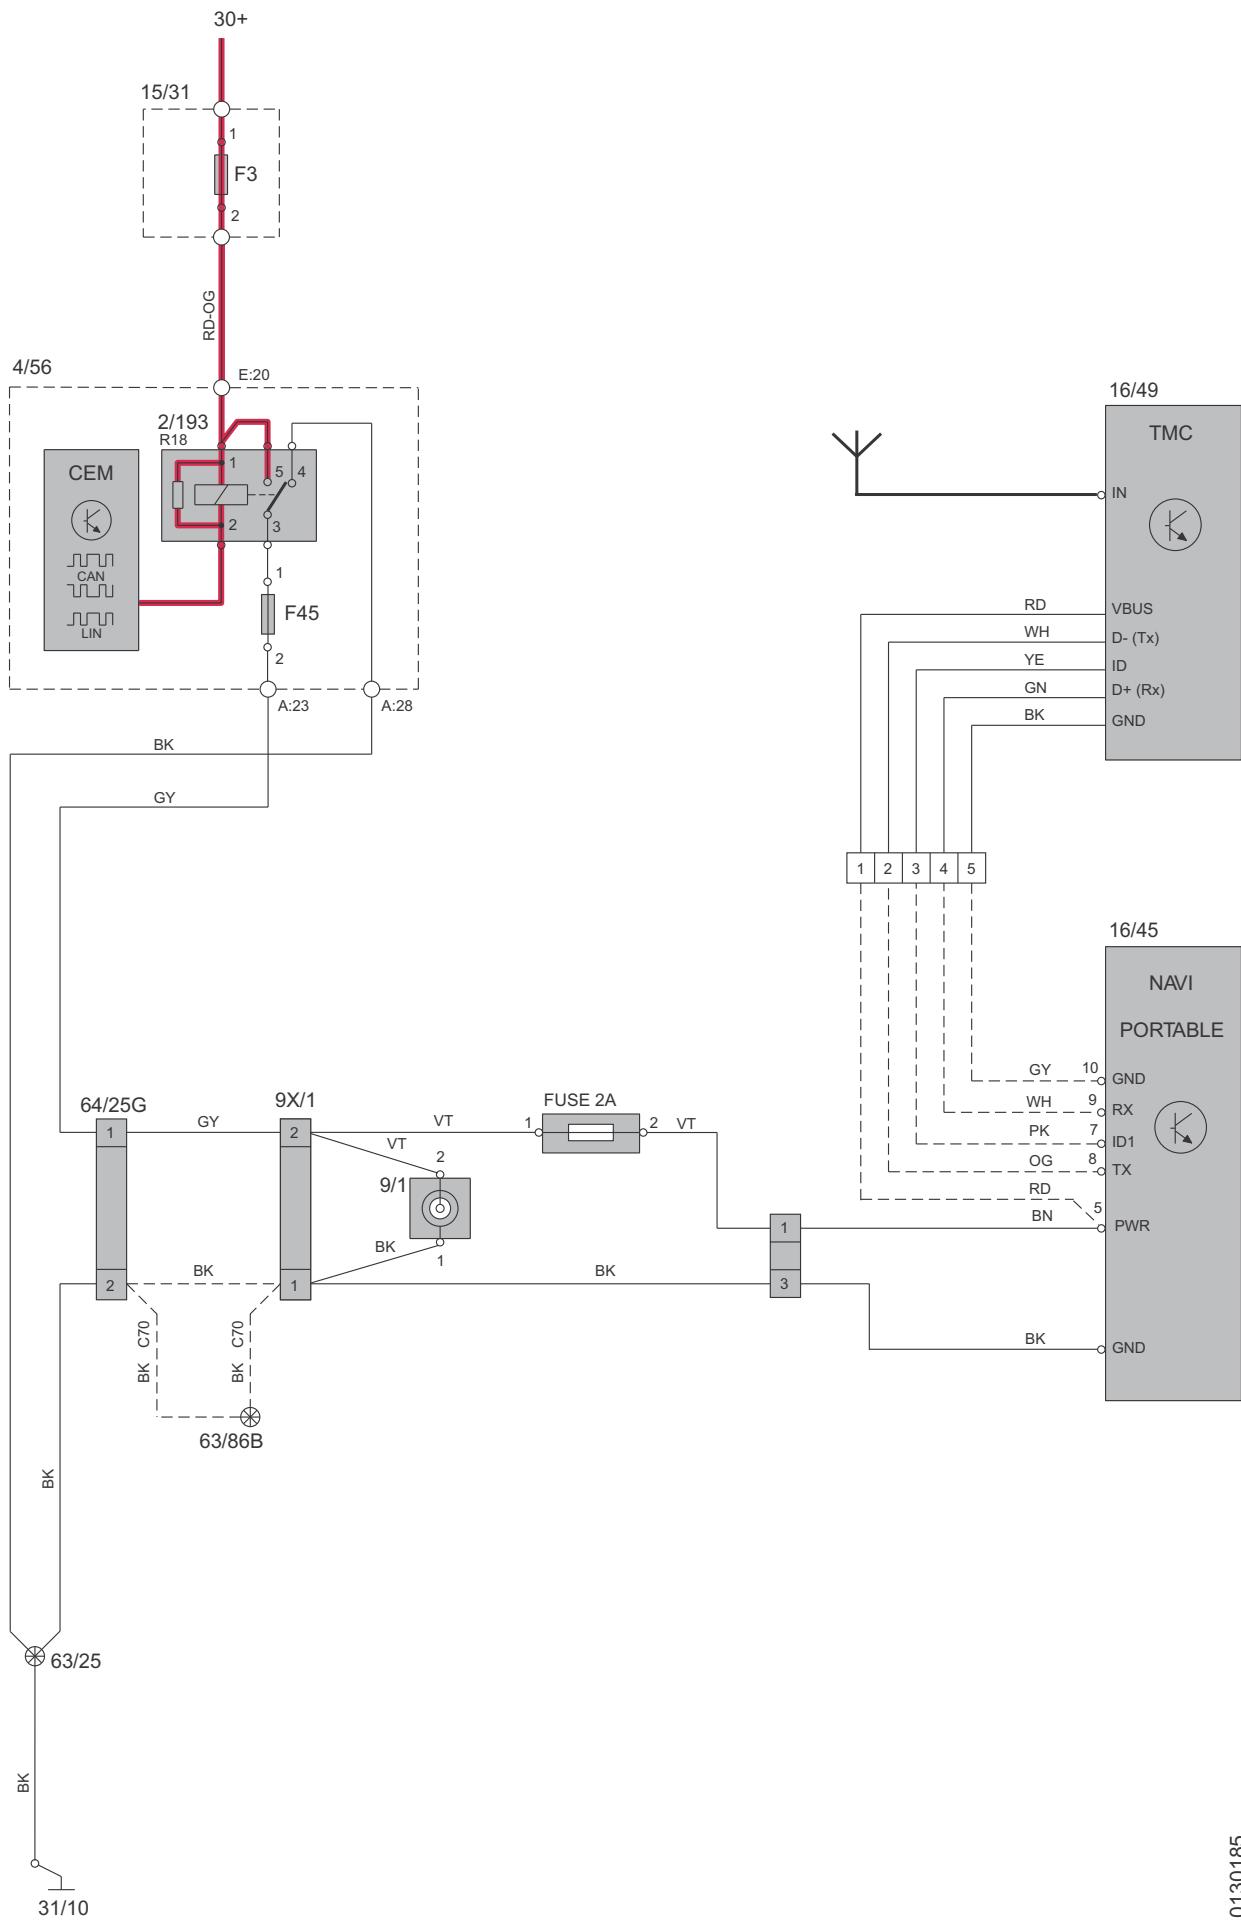

10130185


Group 39 Other Bluetooth

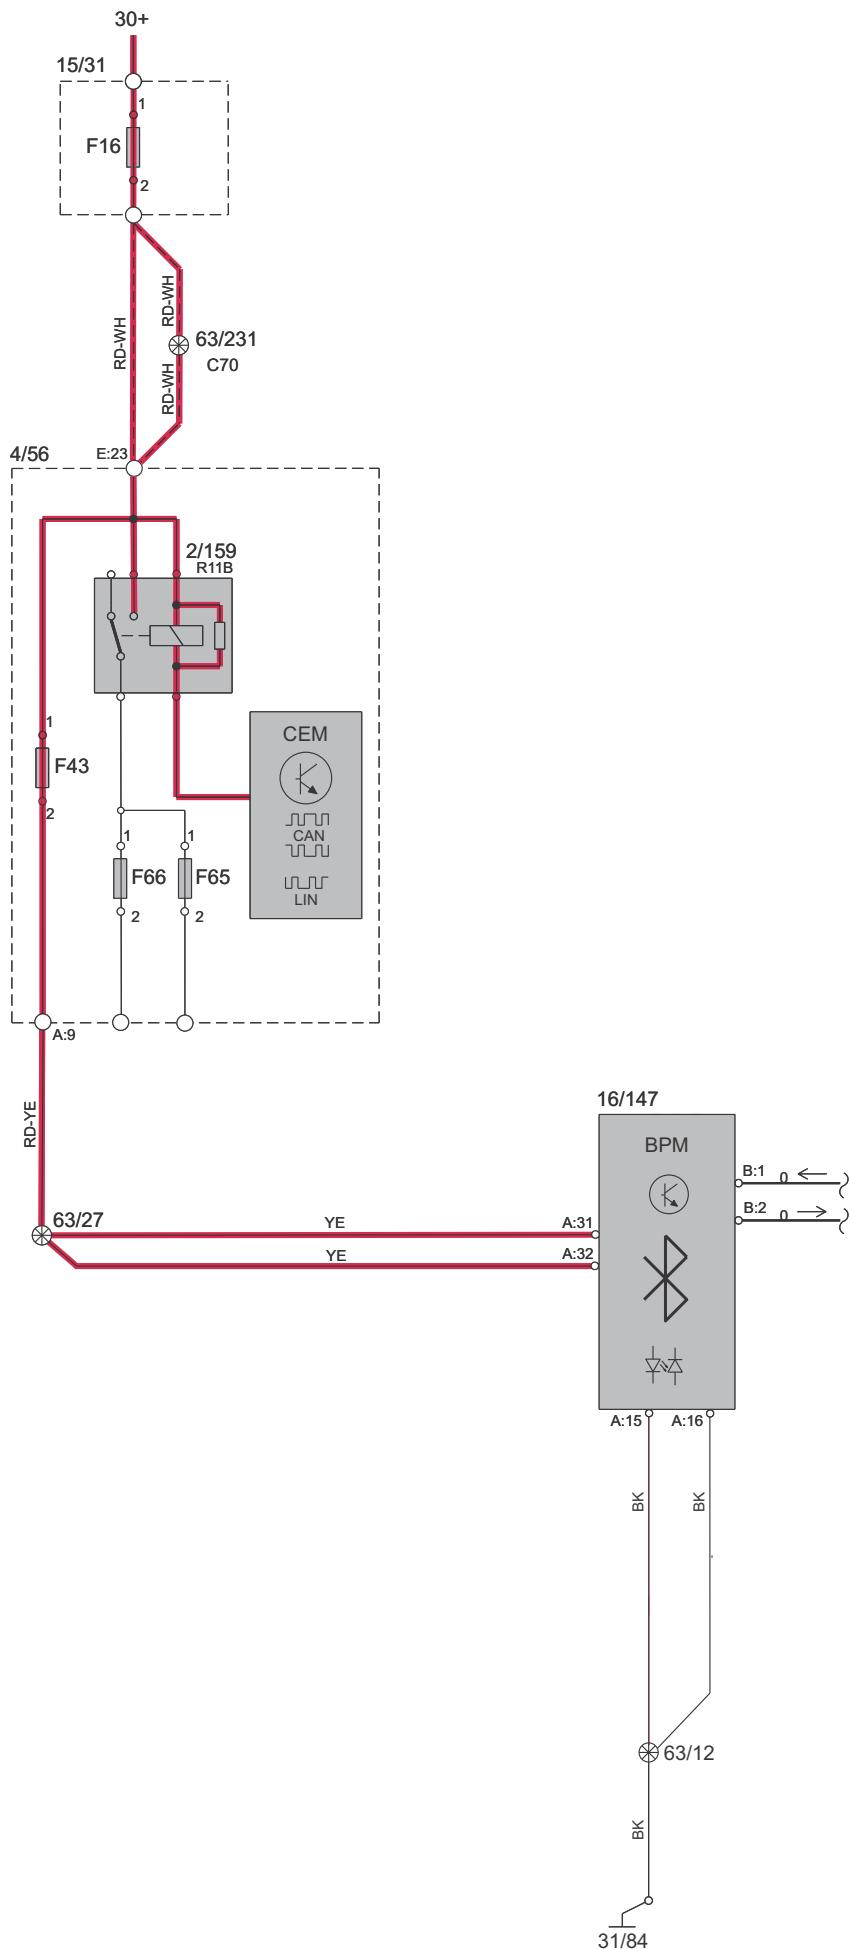

103000


Group 39 Other, Accessories

Bluetooth Handsfree, internal amplifier

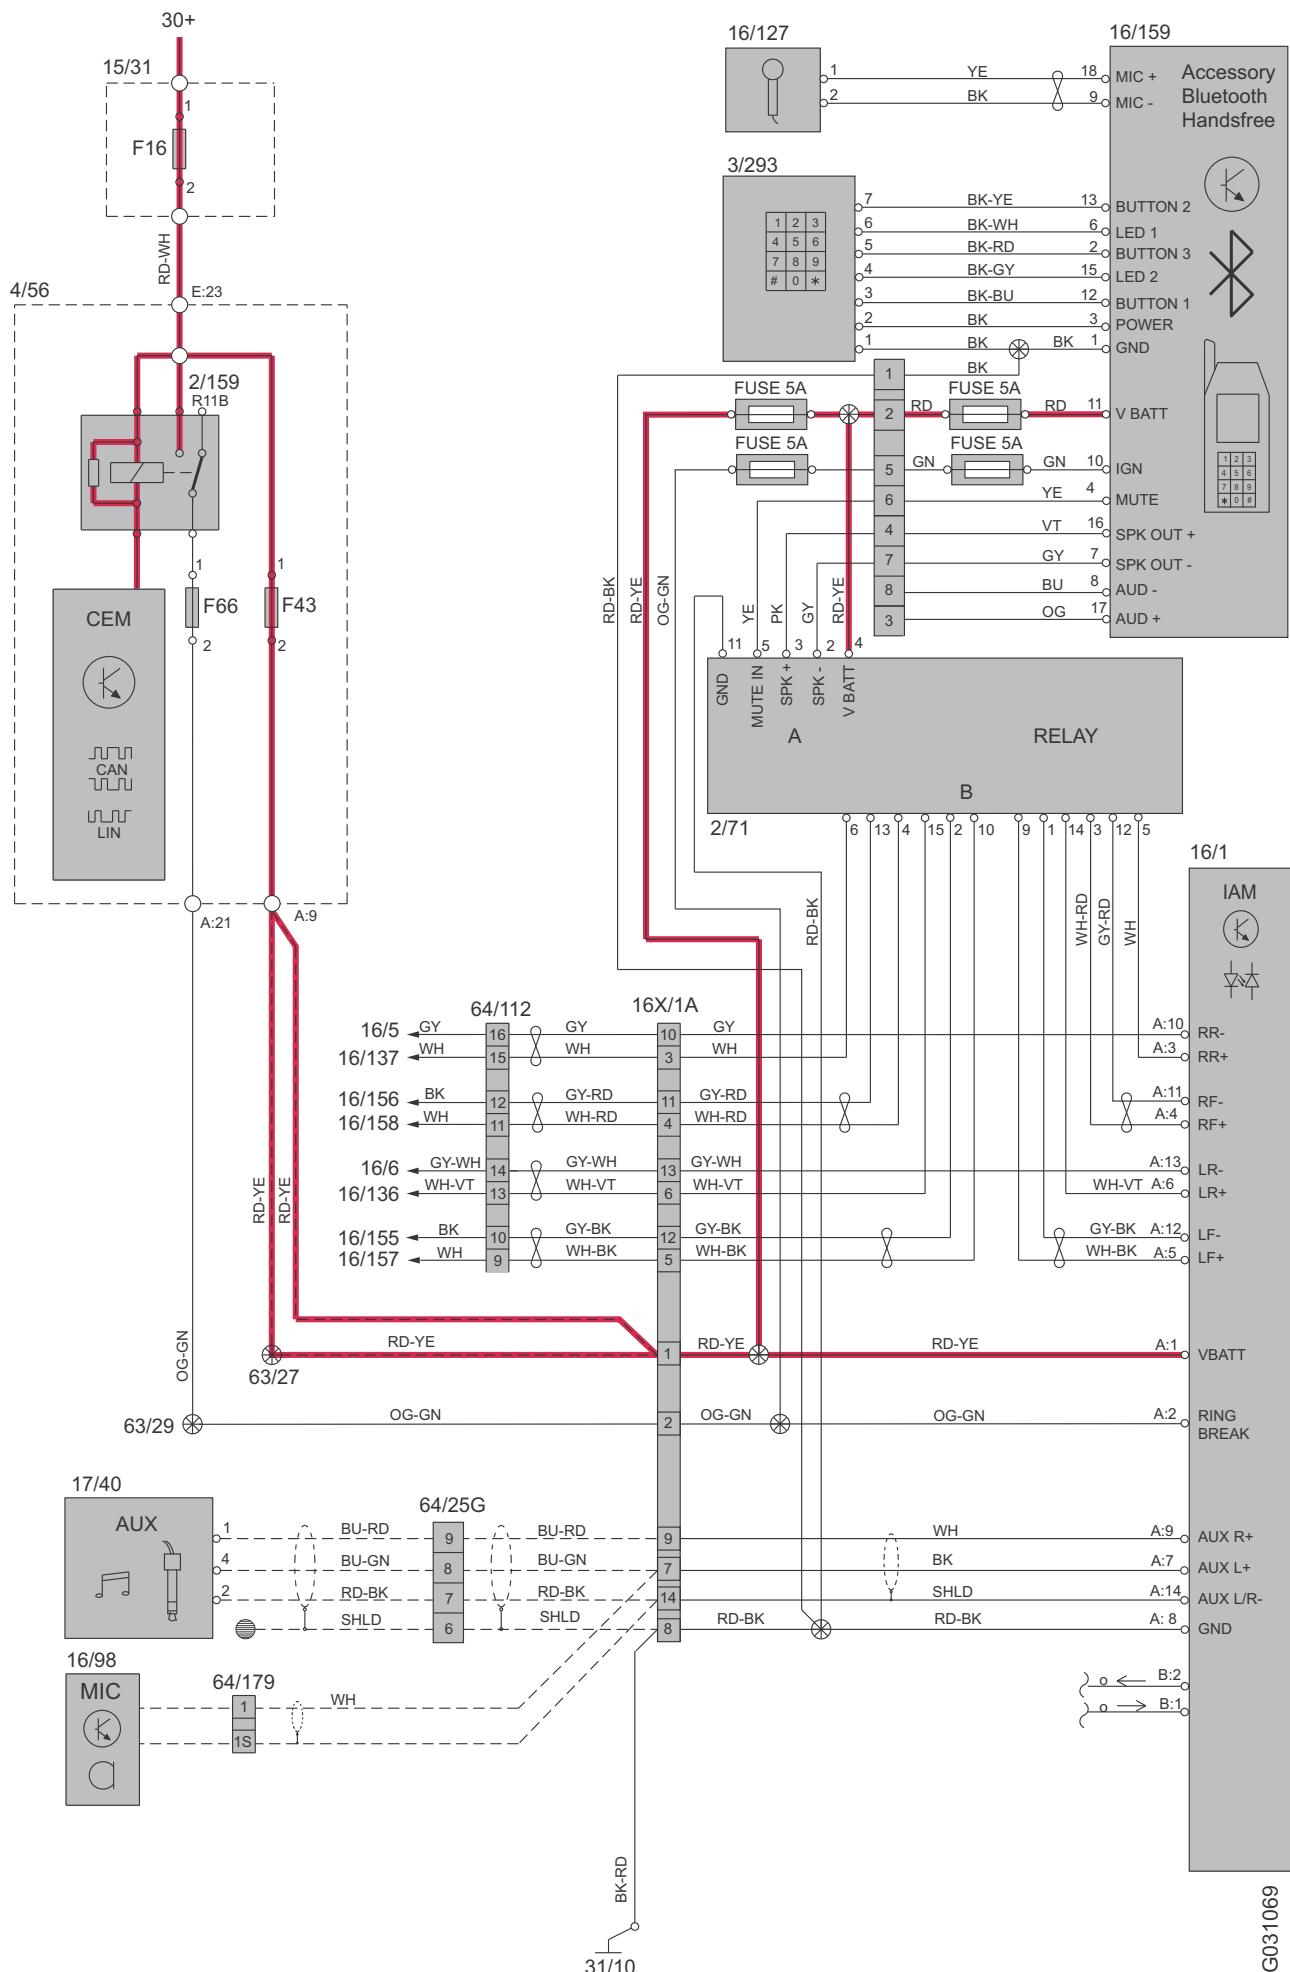


Group 39 Other, Accessories

Bluetooth Handsfree, external amplifier

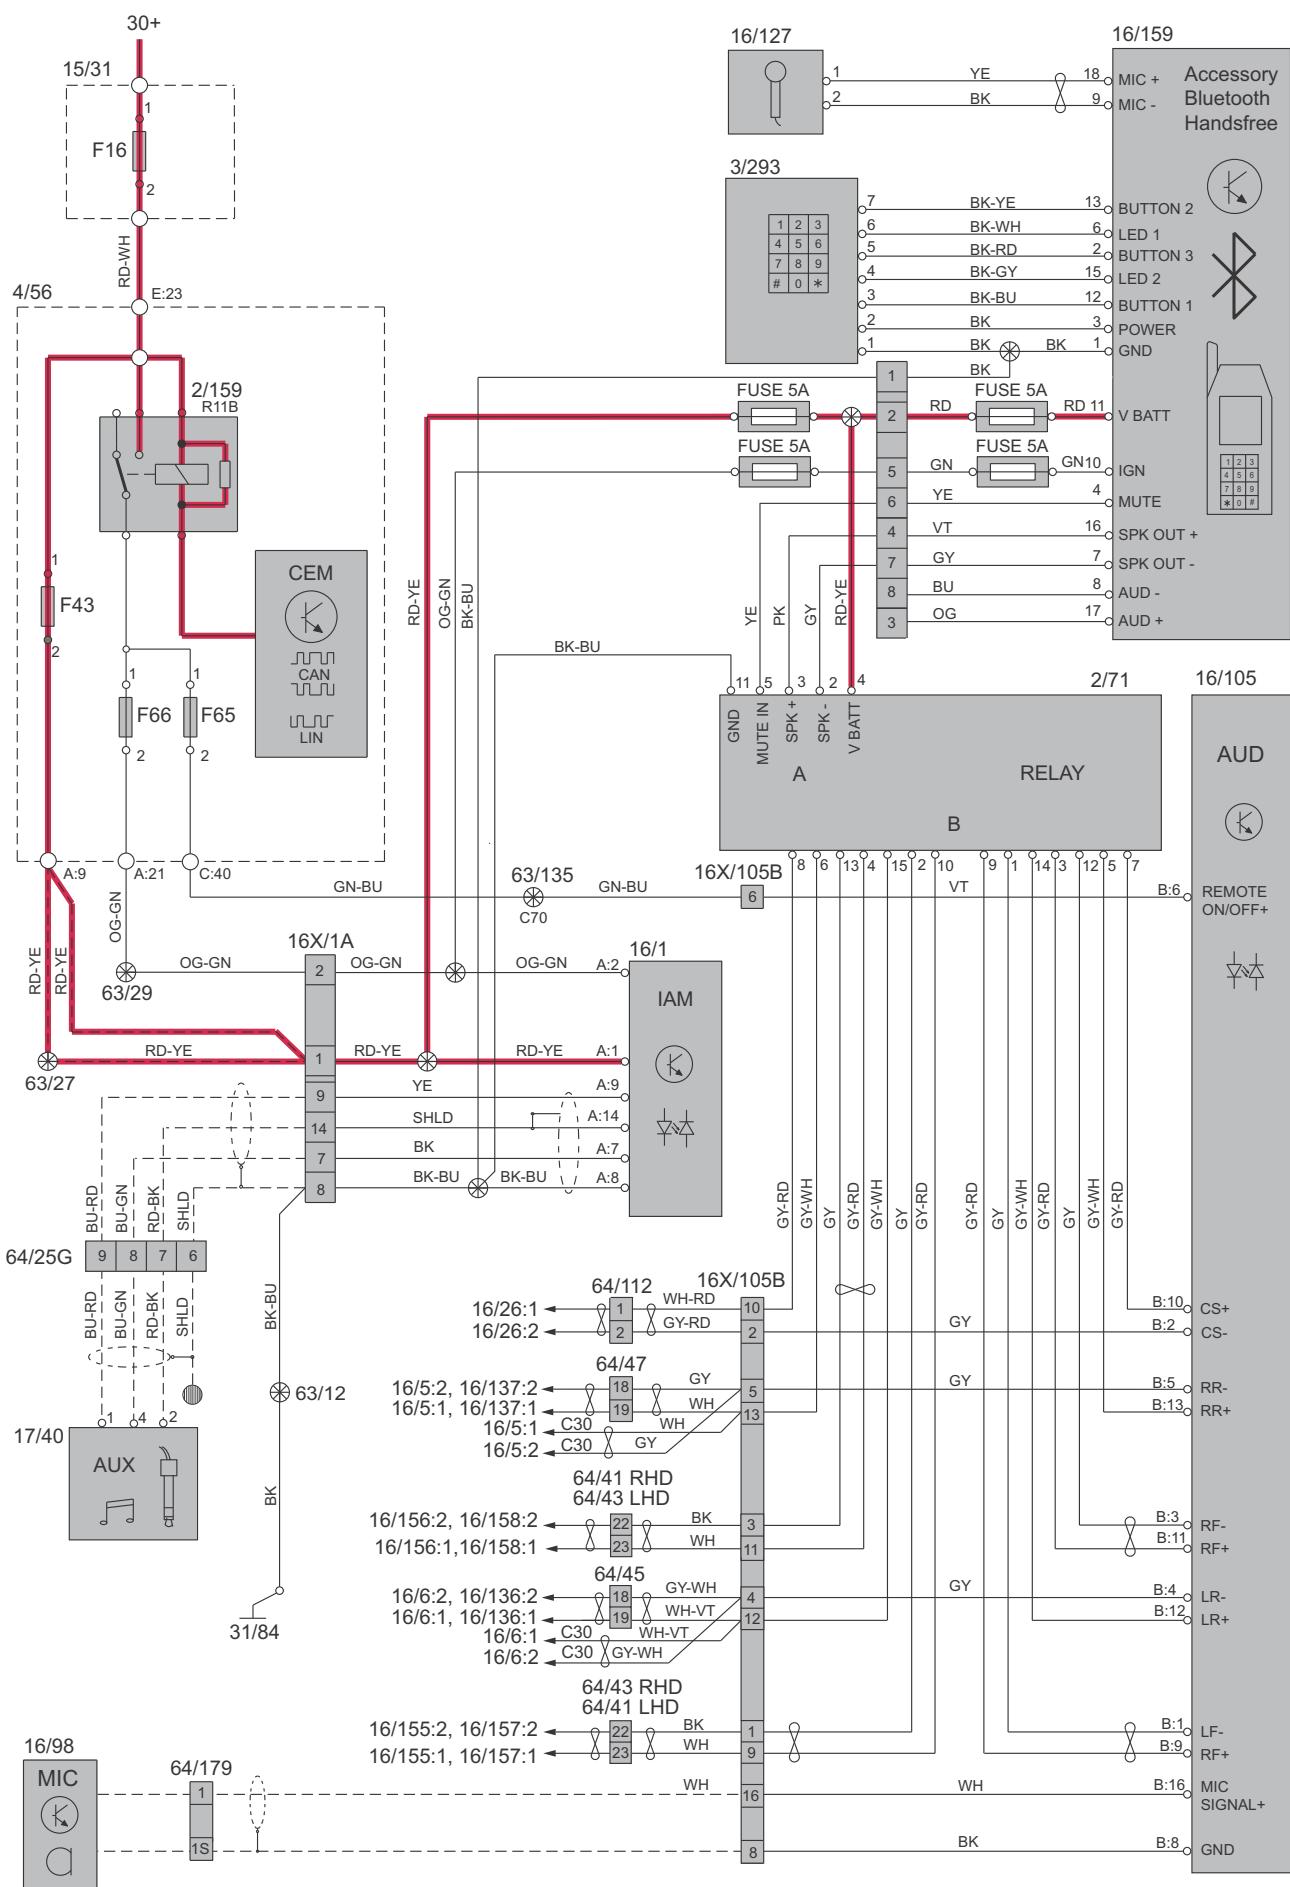


Group 39 Other, Accessories

Bluetooth Handsfree & AUU, internal amplifier

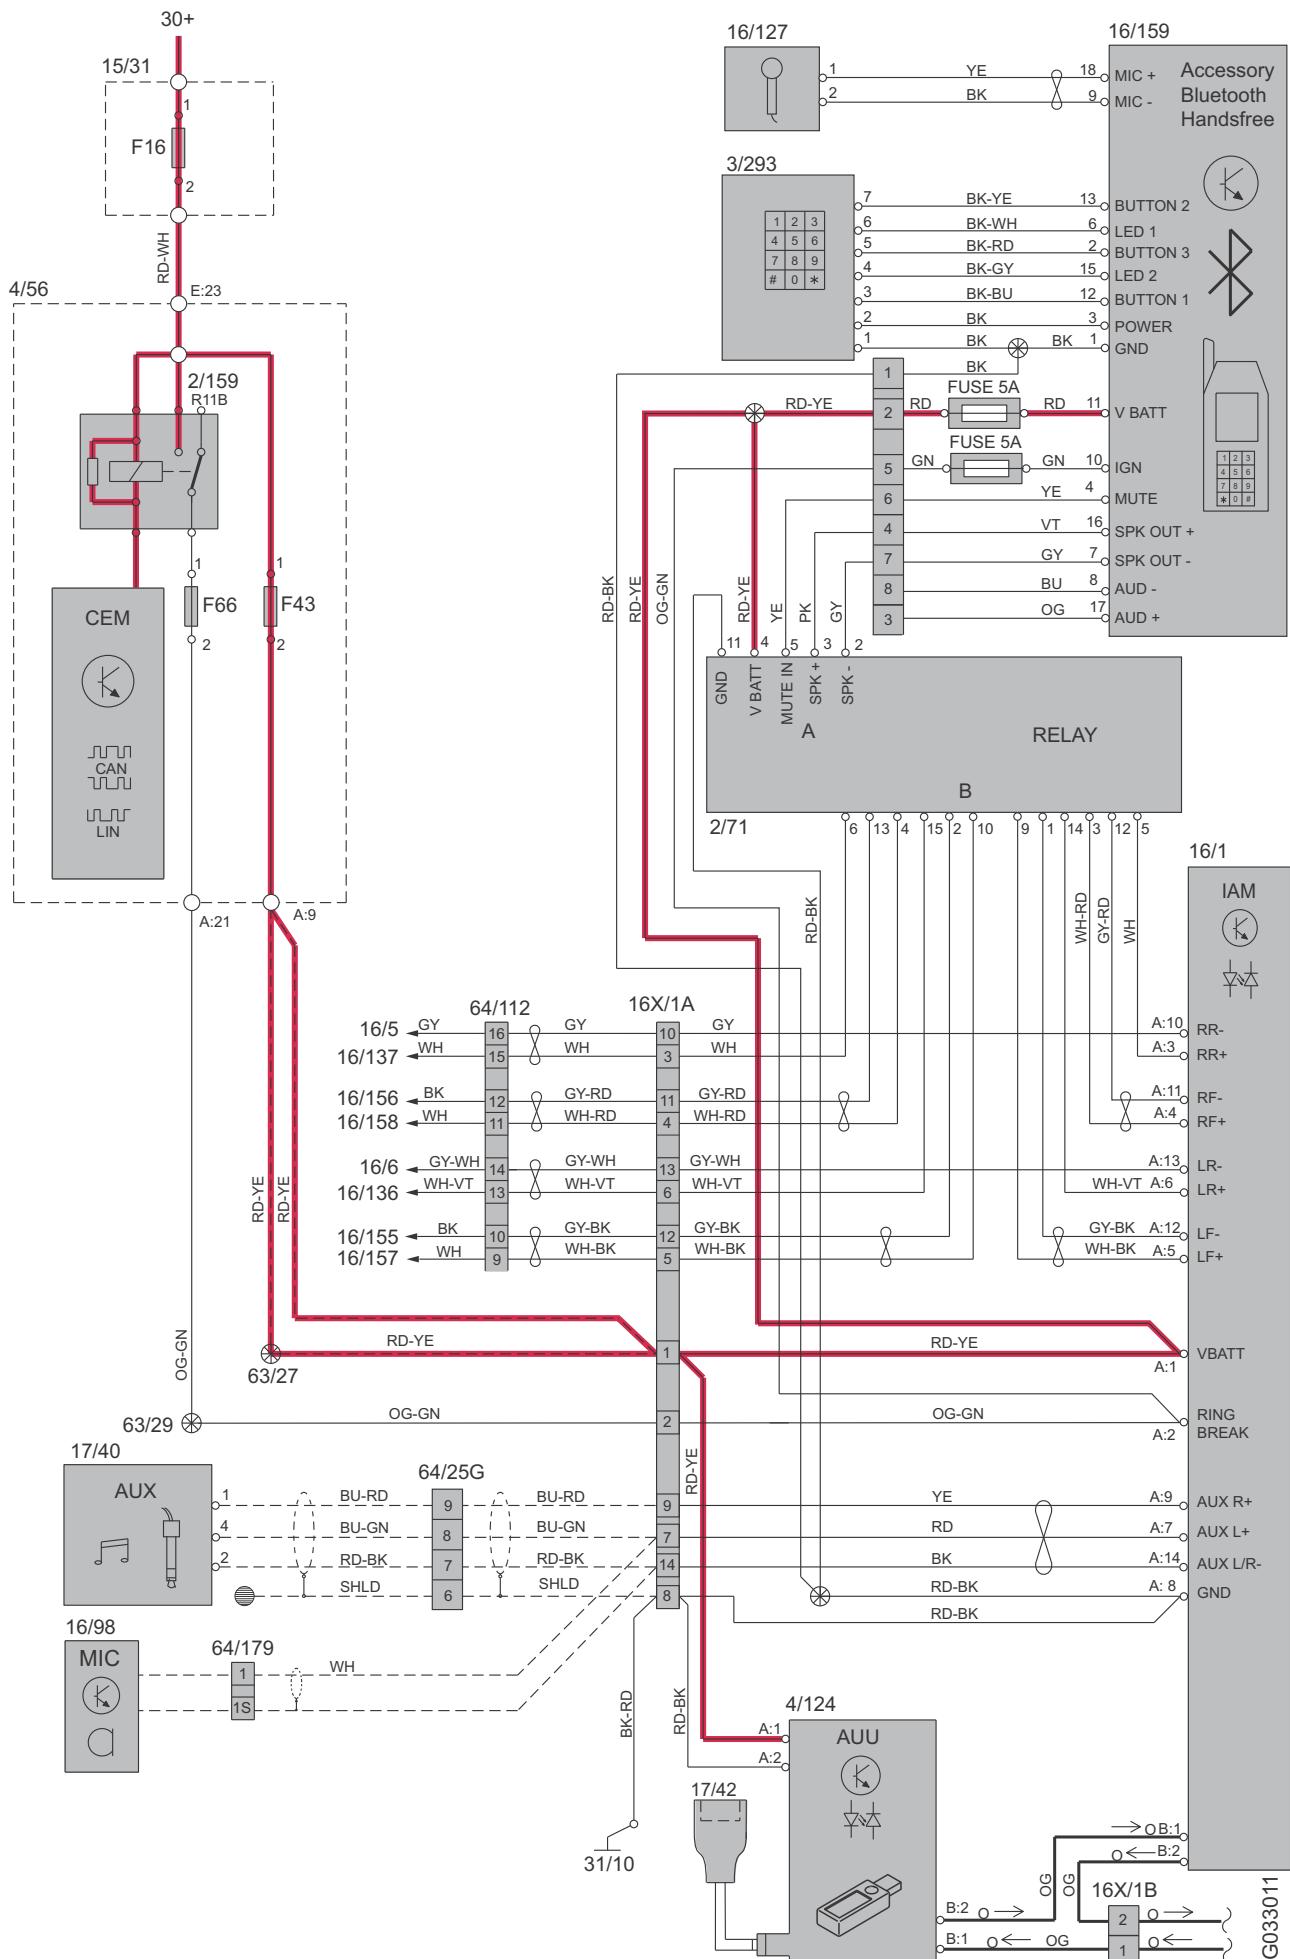

Group 39 Other, Accessories


Bluetooth Handsfree & AUU, external amplifier

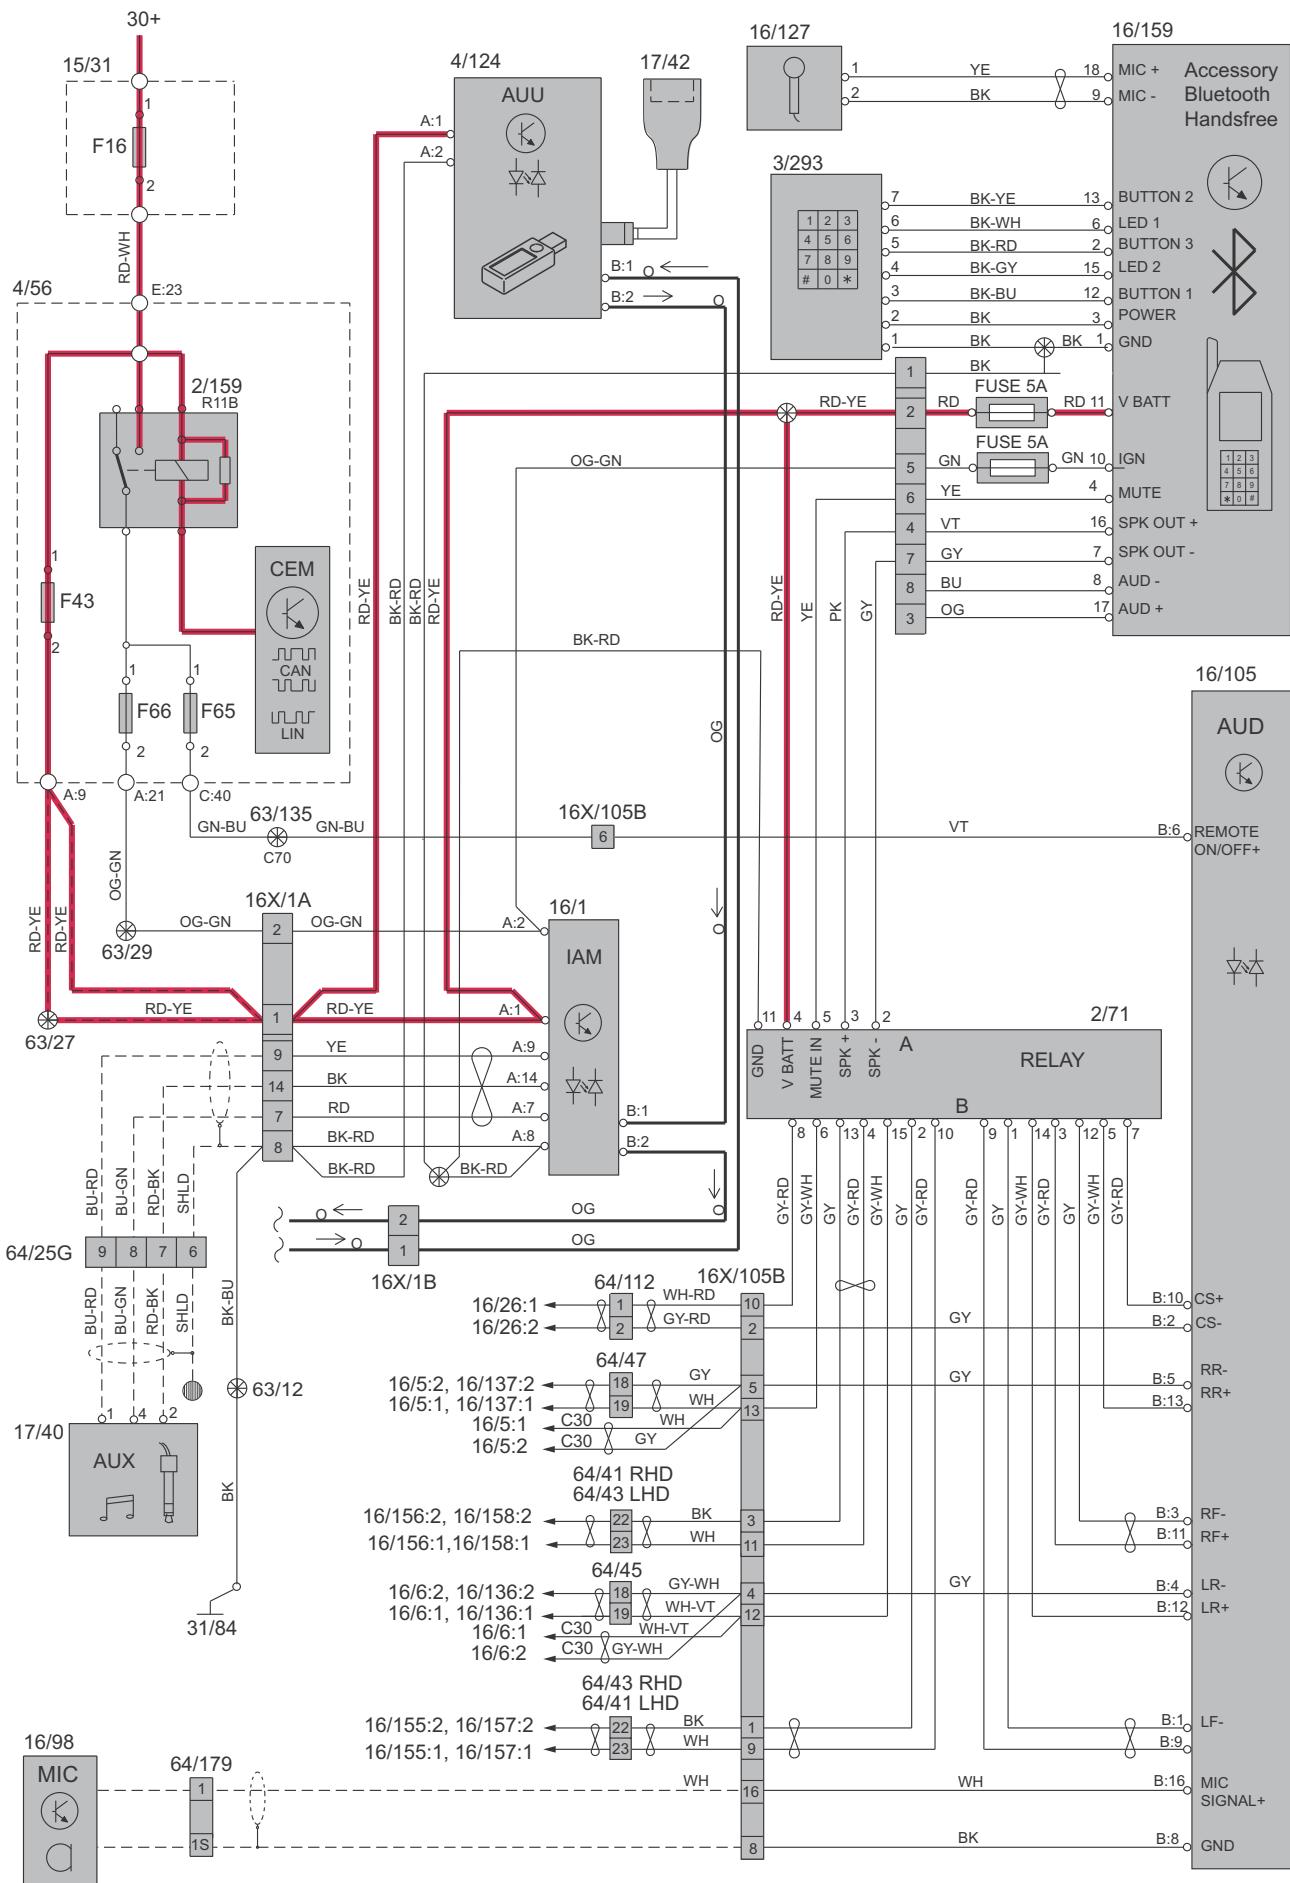

G042657


Group 39 Other, Accessories

Bluetooth Handsfree with AEM, internal amplifier, LHD

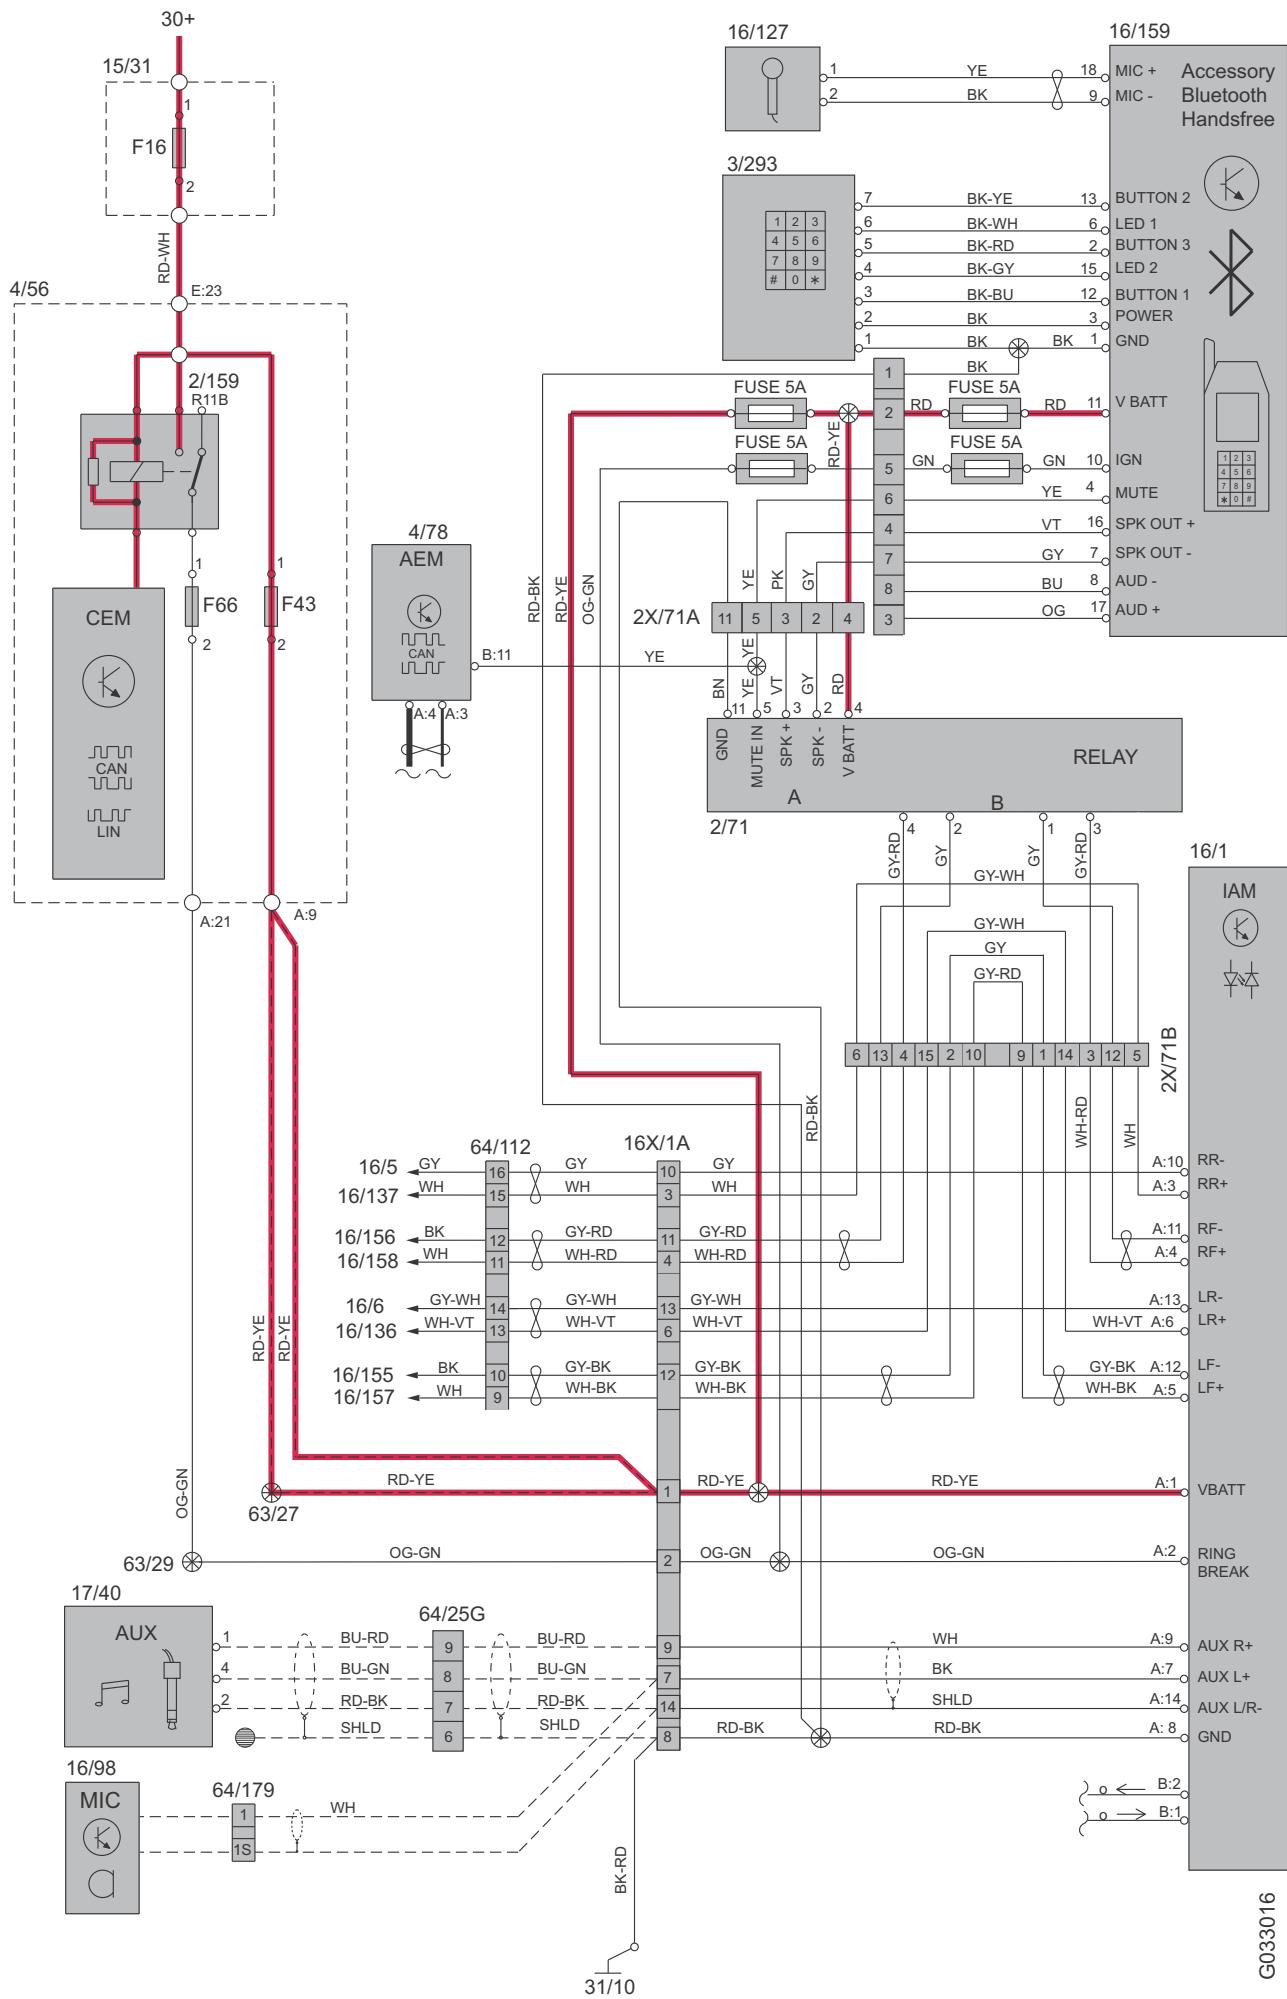


Group 39 Other, Accessories

Bluetooth Handsfree with AEM, internal amplifier, RHD

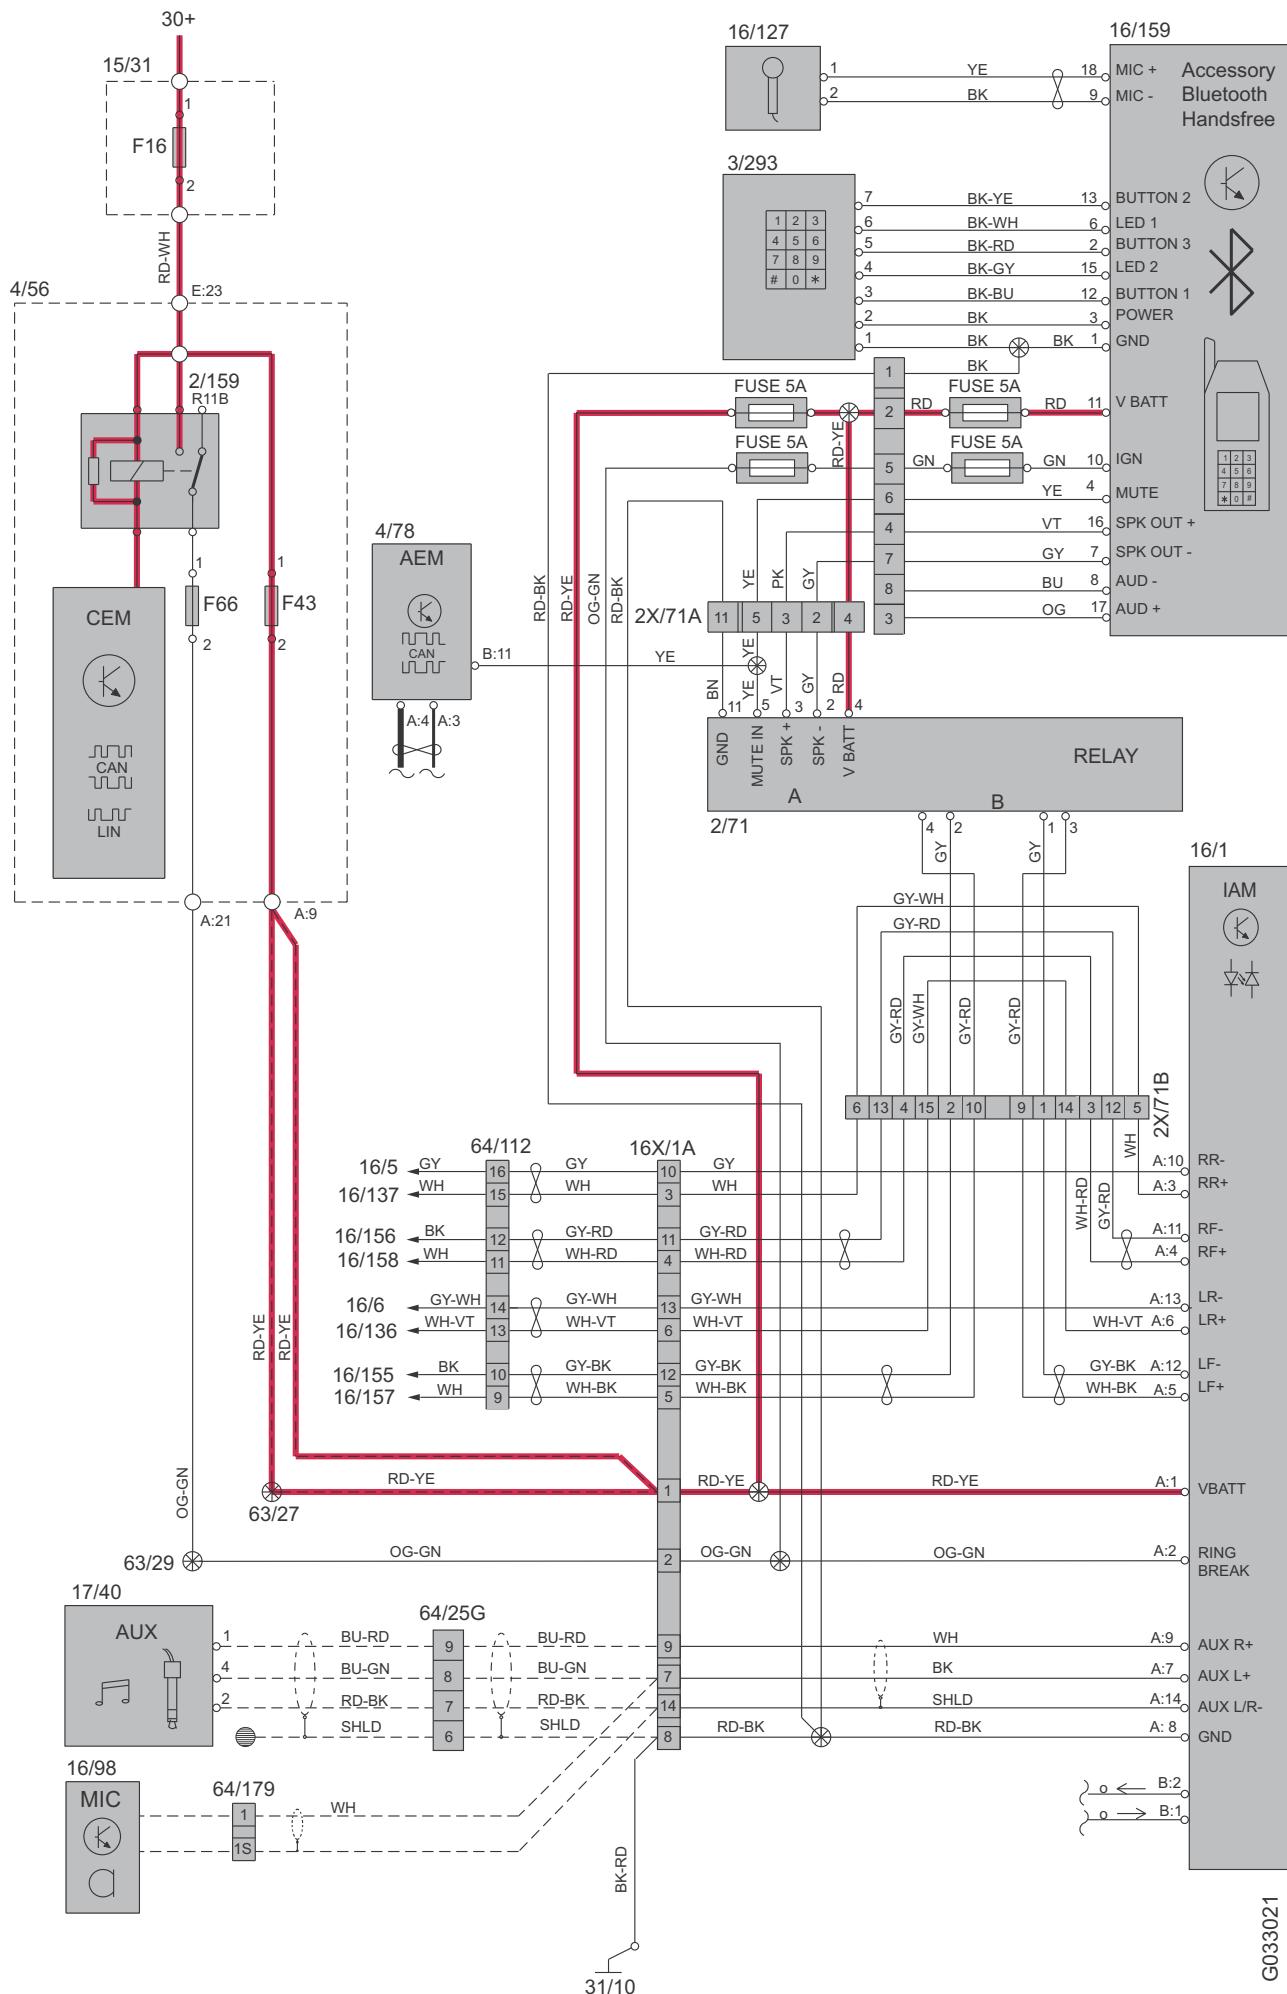

Group 39 Other, Accessories


Bluetooth Handsfree with AEM, external amplifier, LHD

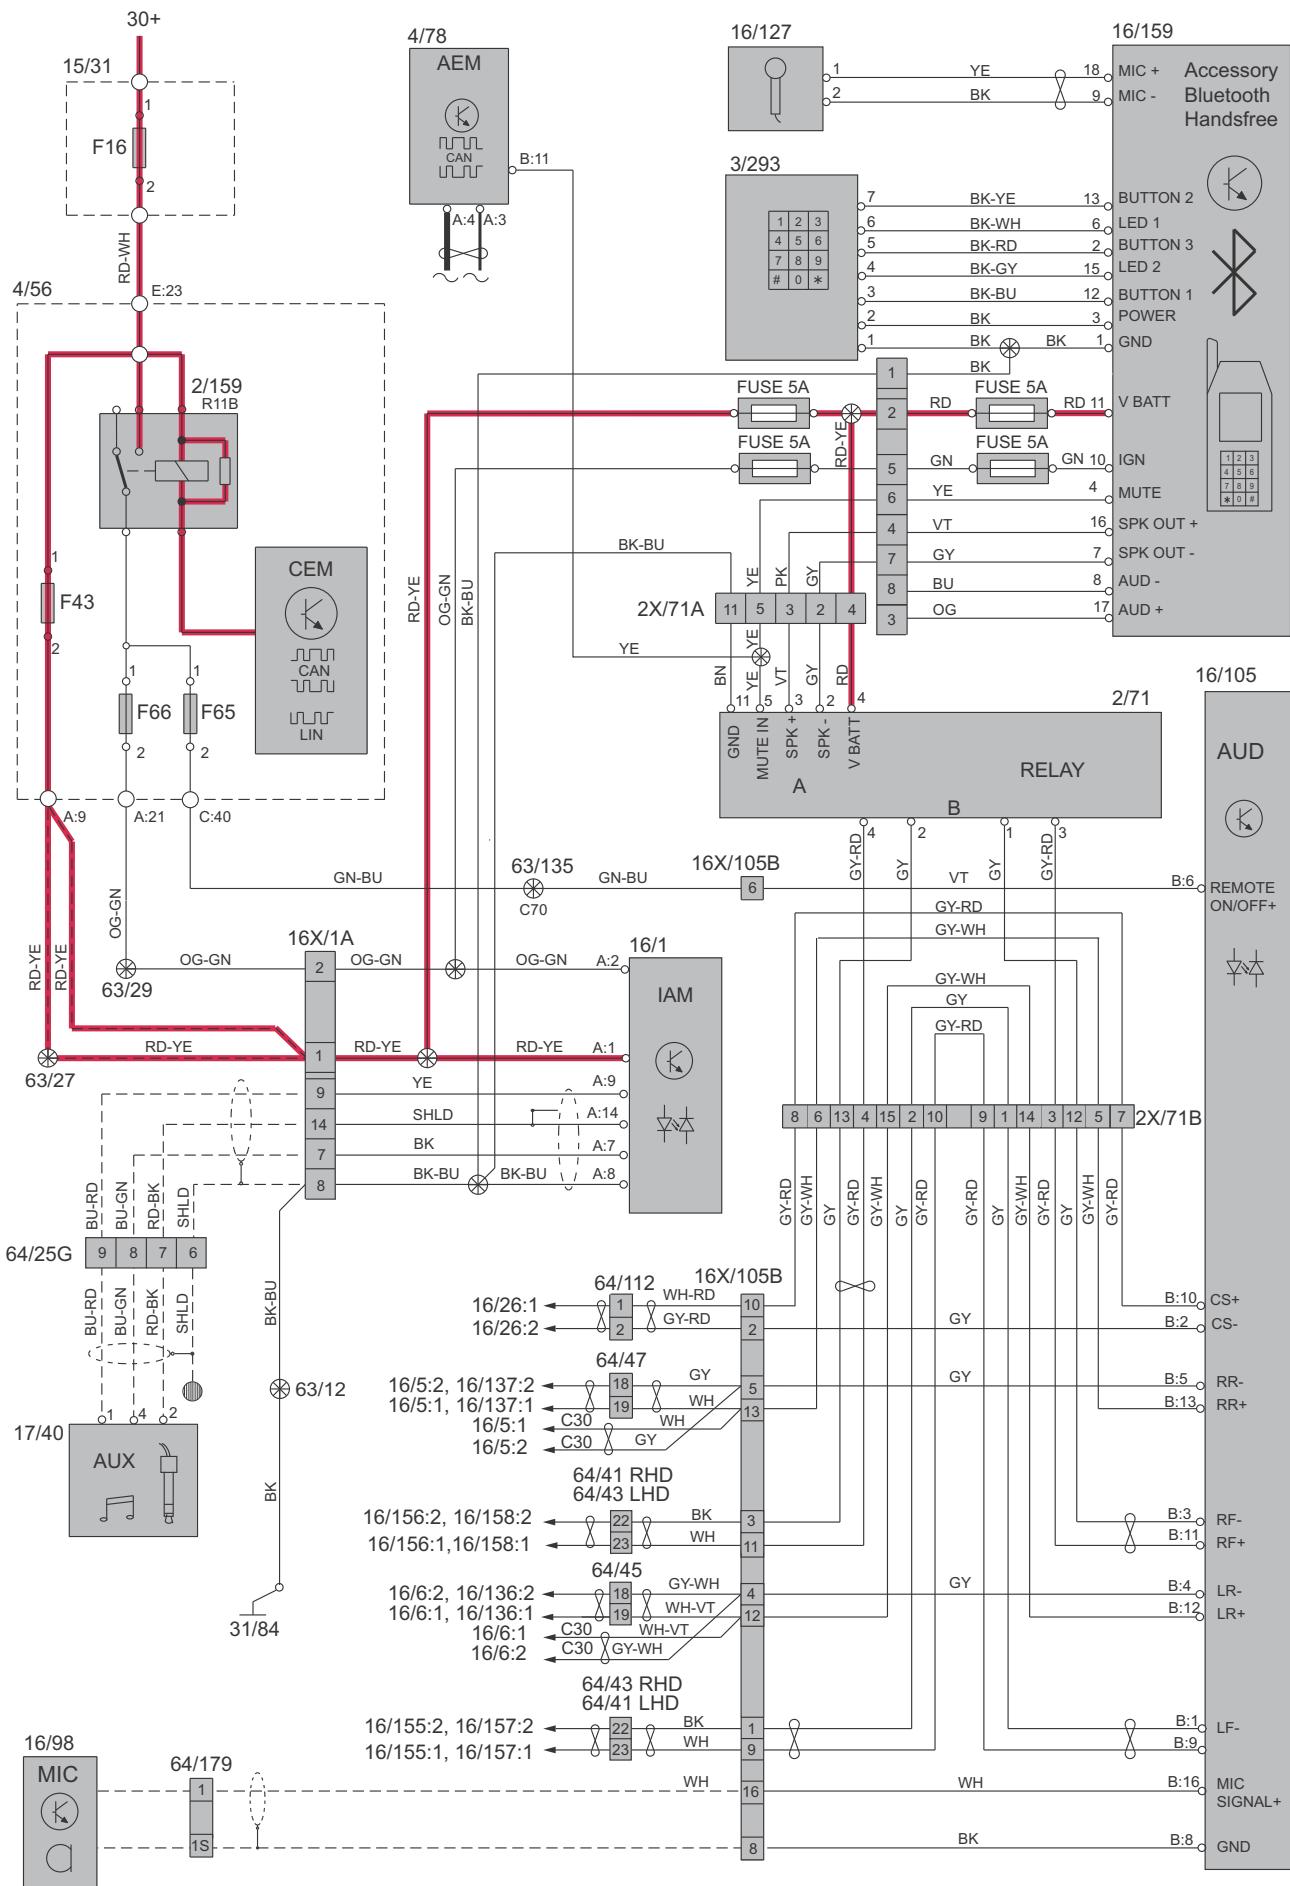

G033017

Group 39 Other, Accessories


Bluetooth Handsfree with AEM, external amplifier, RHD

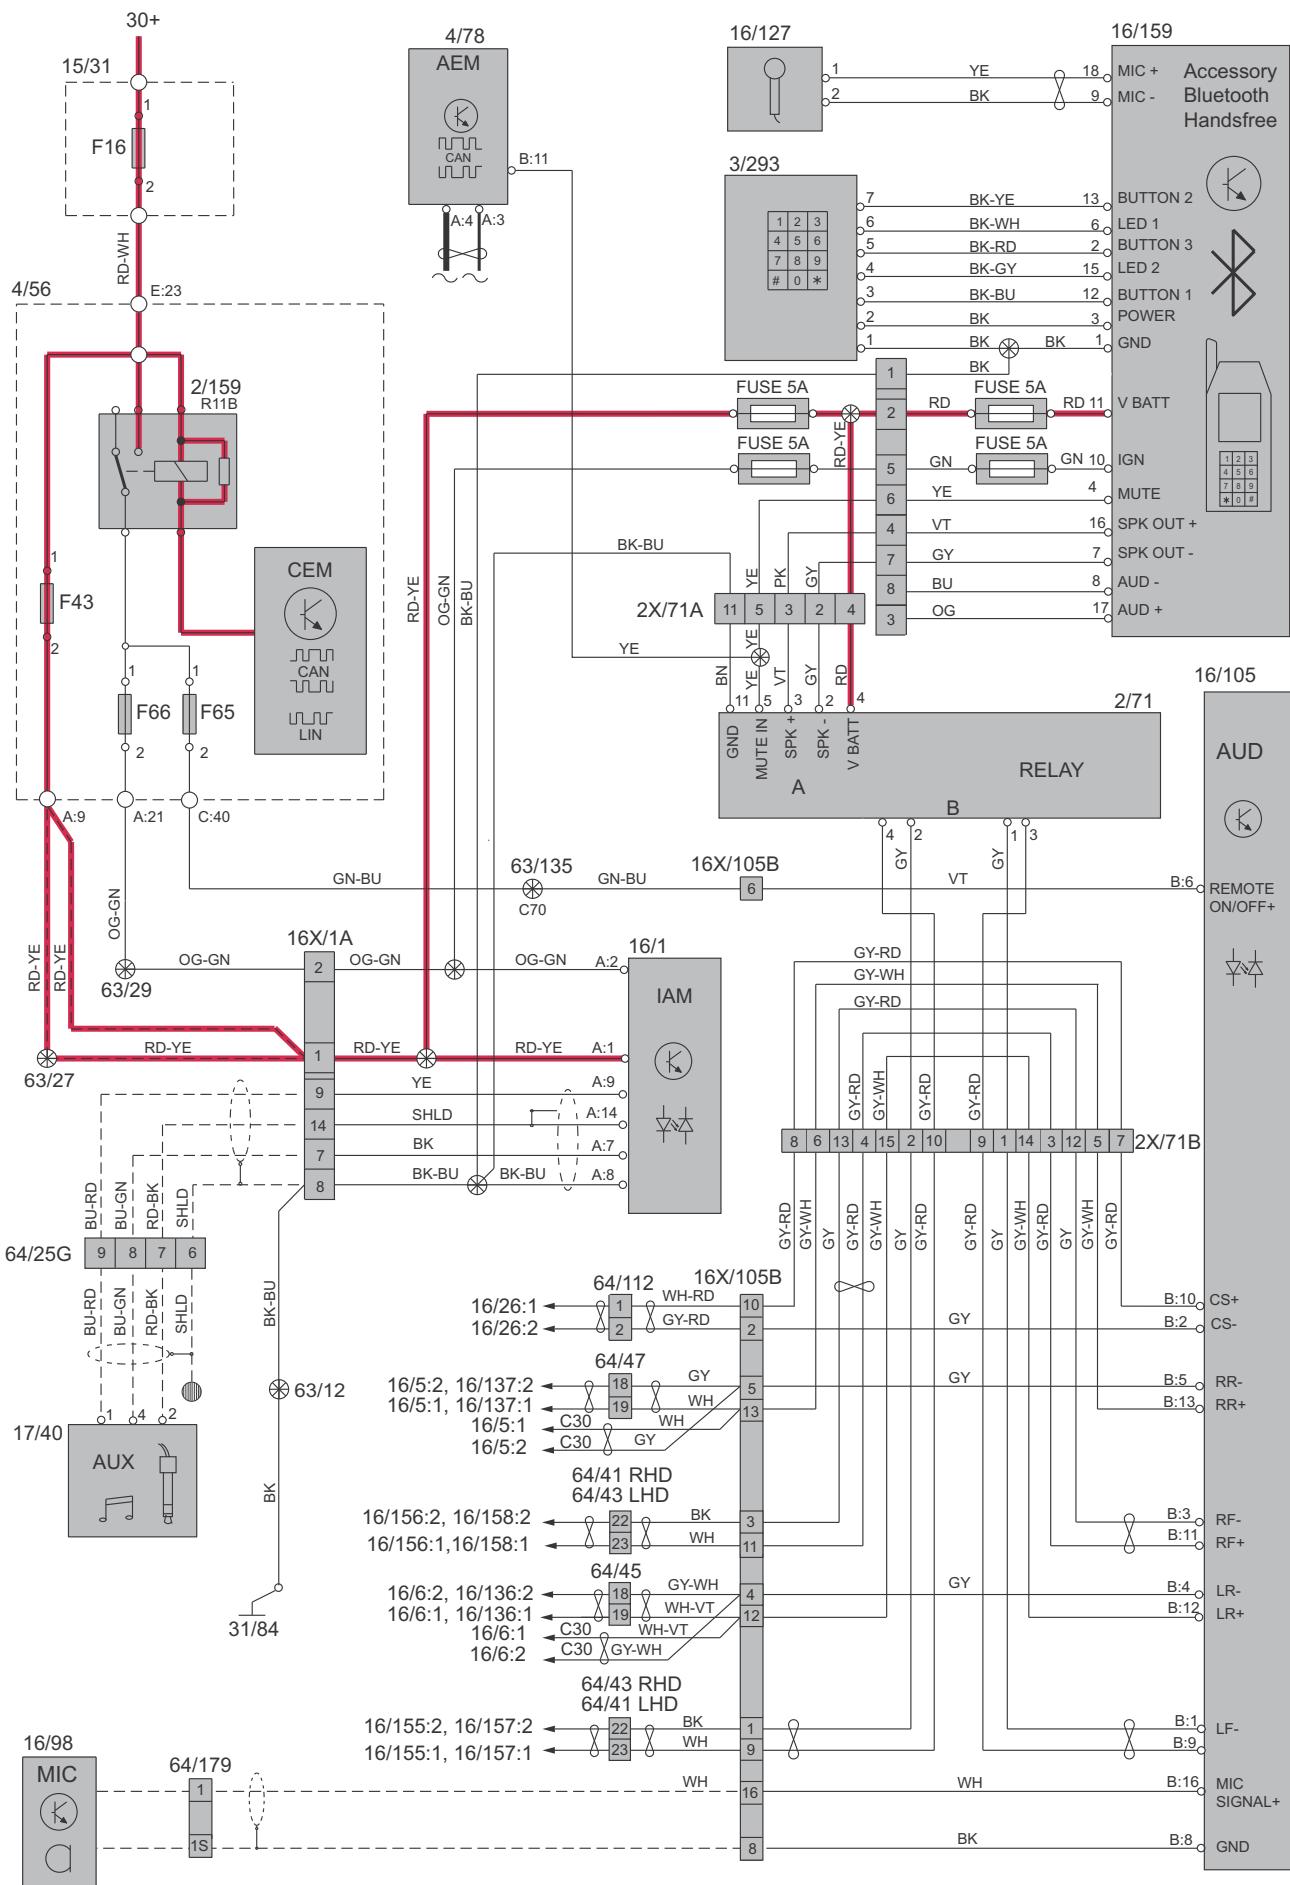

G033019


Group 43 Transmission

Automatic transmission AW55-51

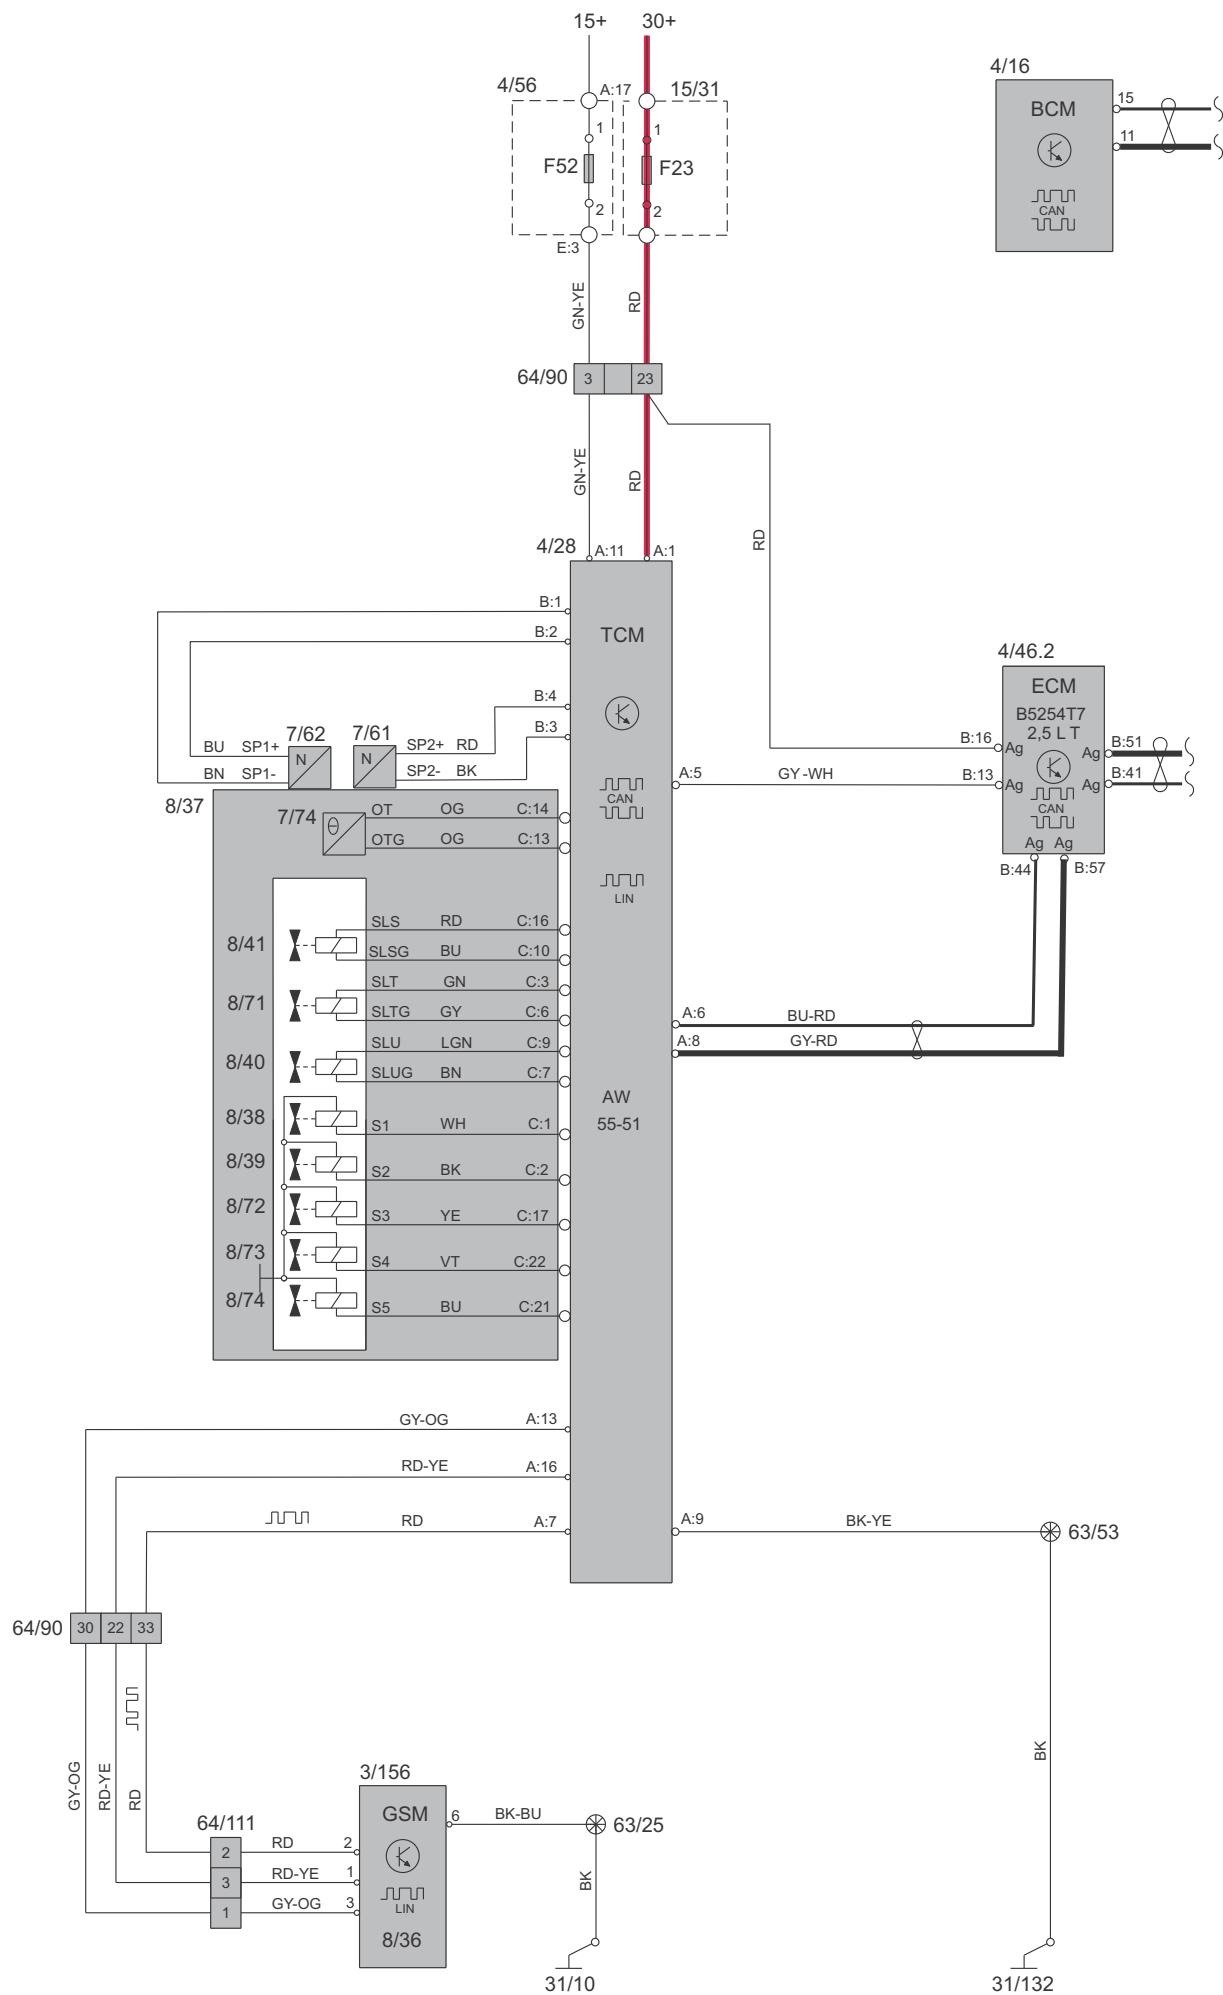


Group 43 Transmission

Automatic transmission AWF21

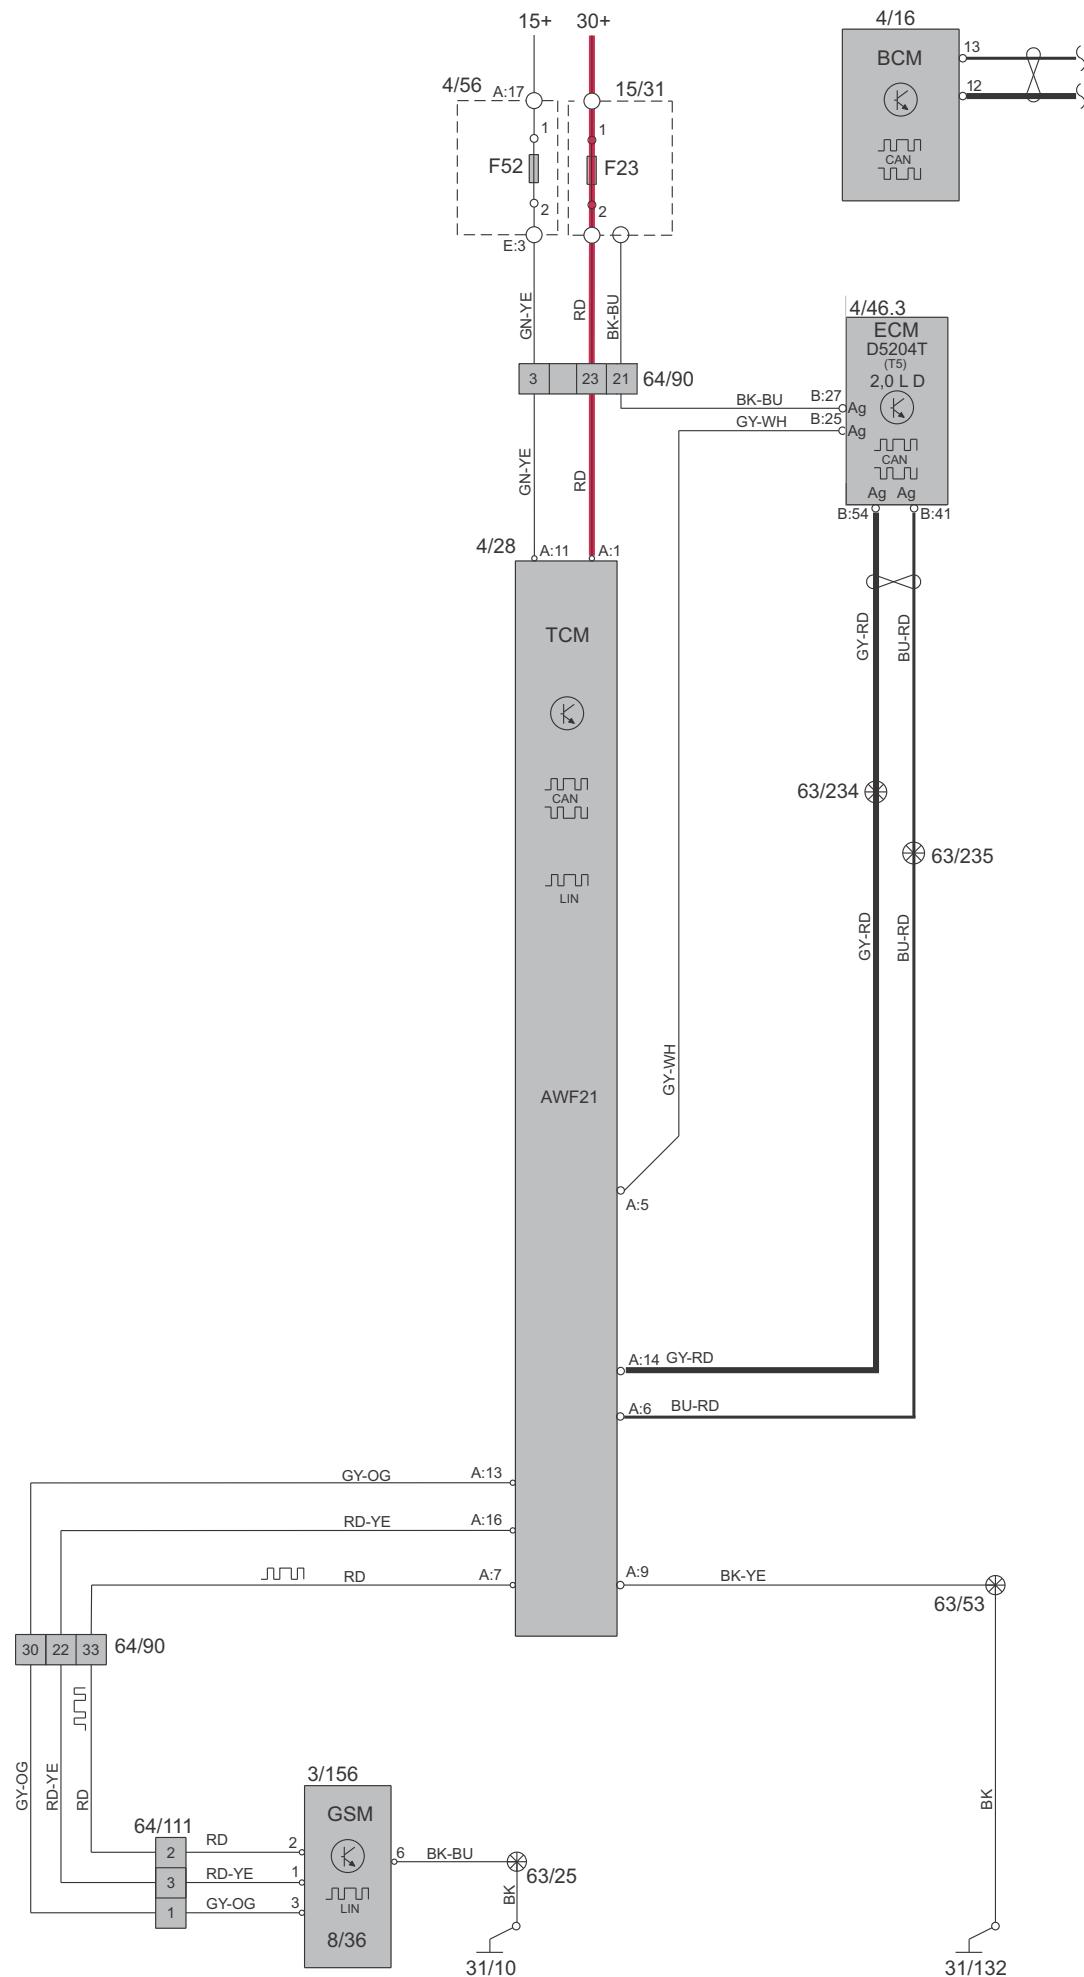


Group 43 Transmission Transmission M66

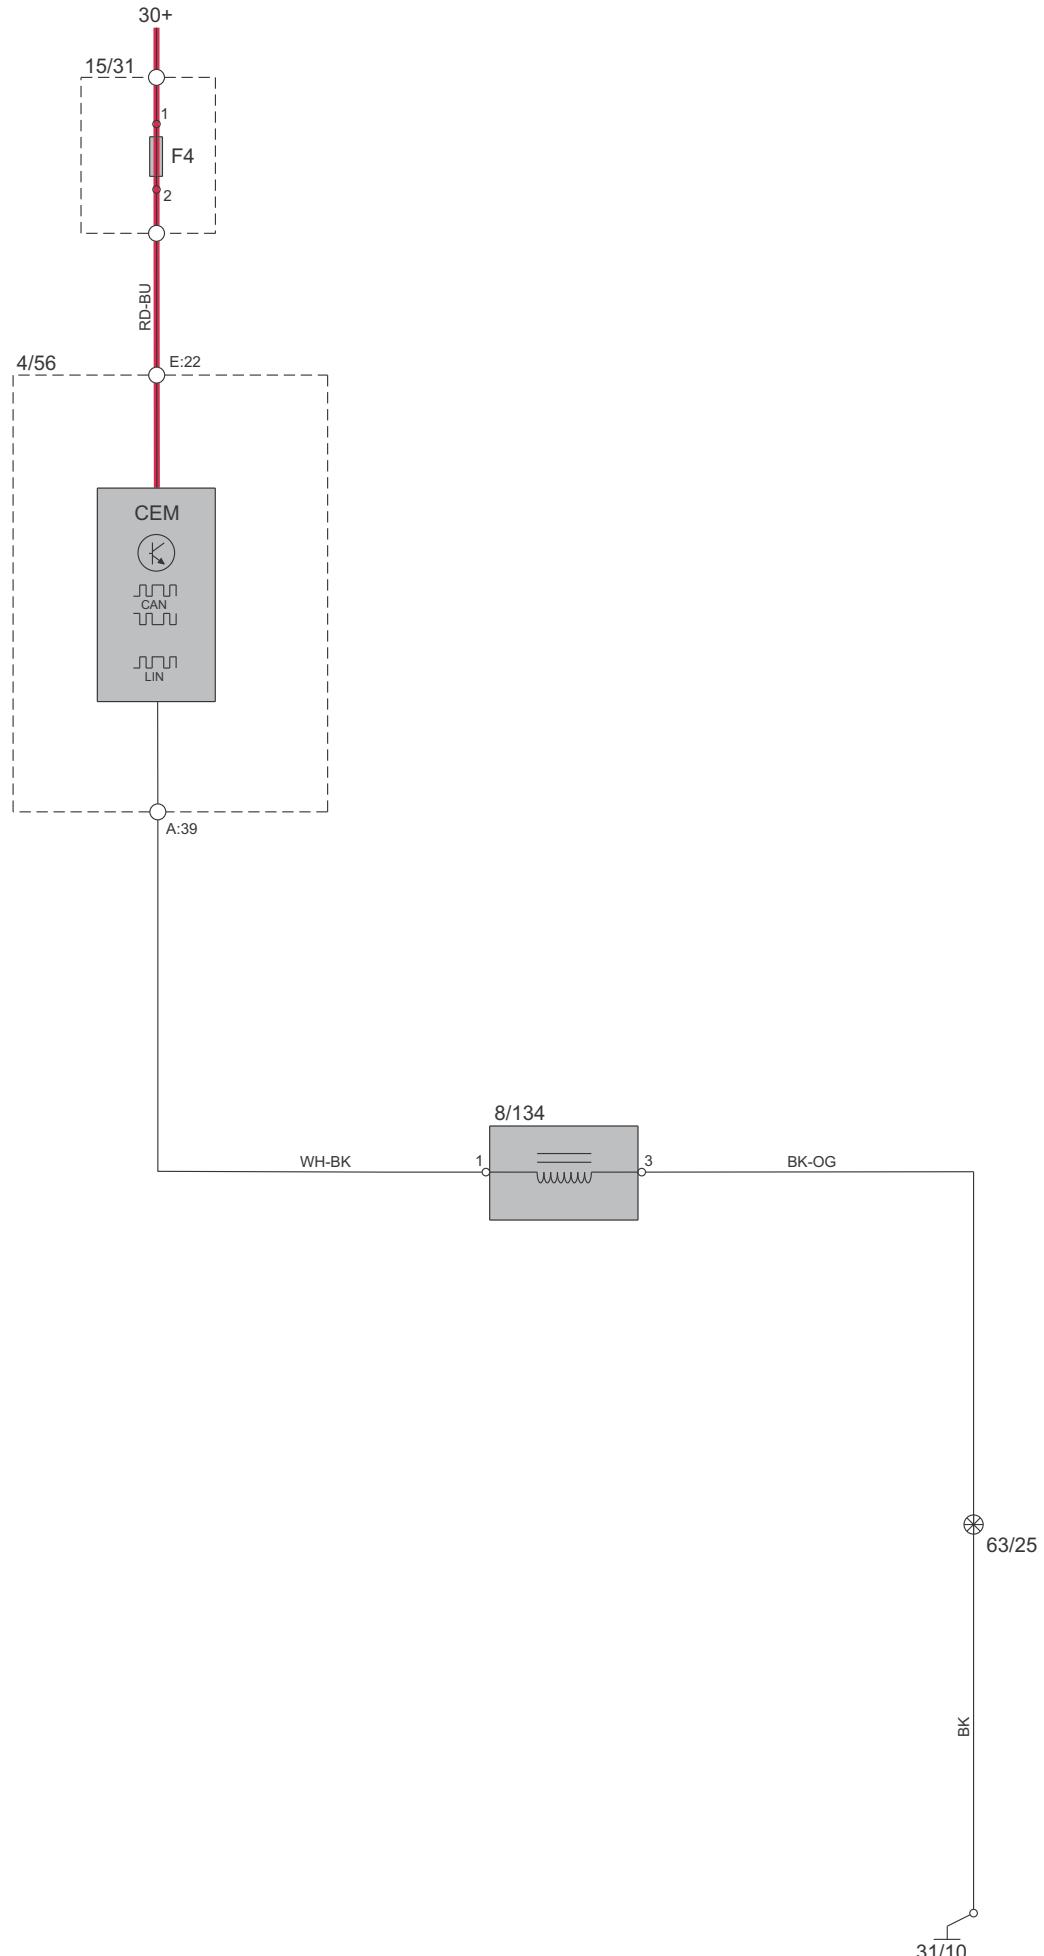


Group 43 Transmission

Automatic transmission MPS6

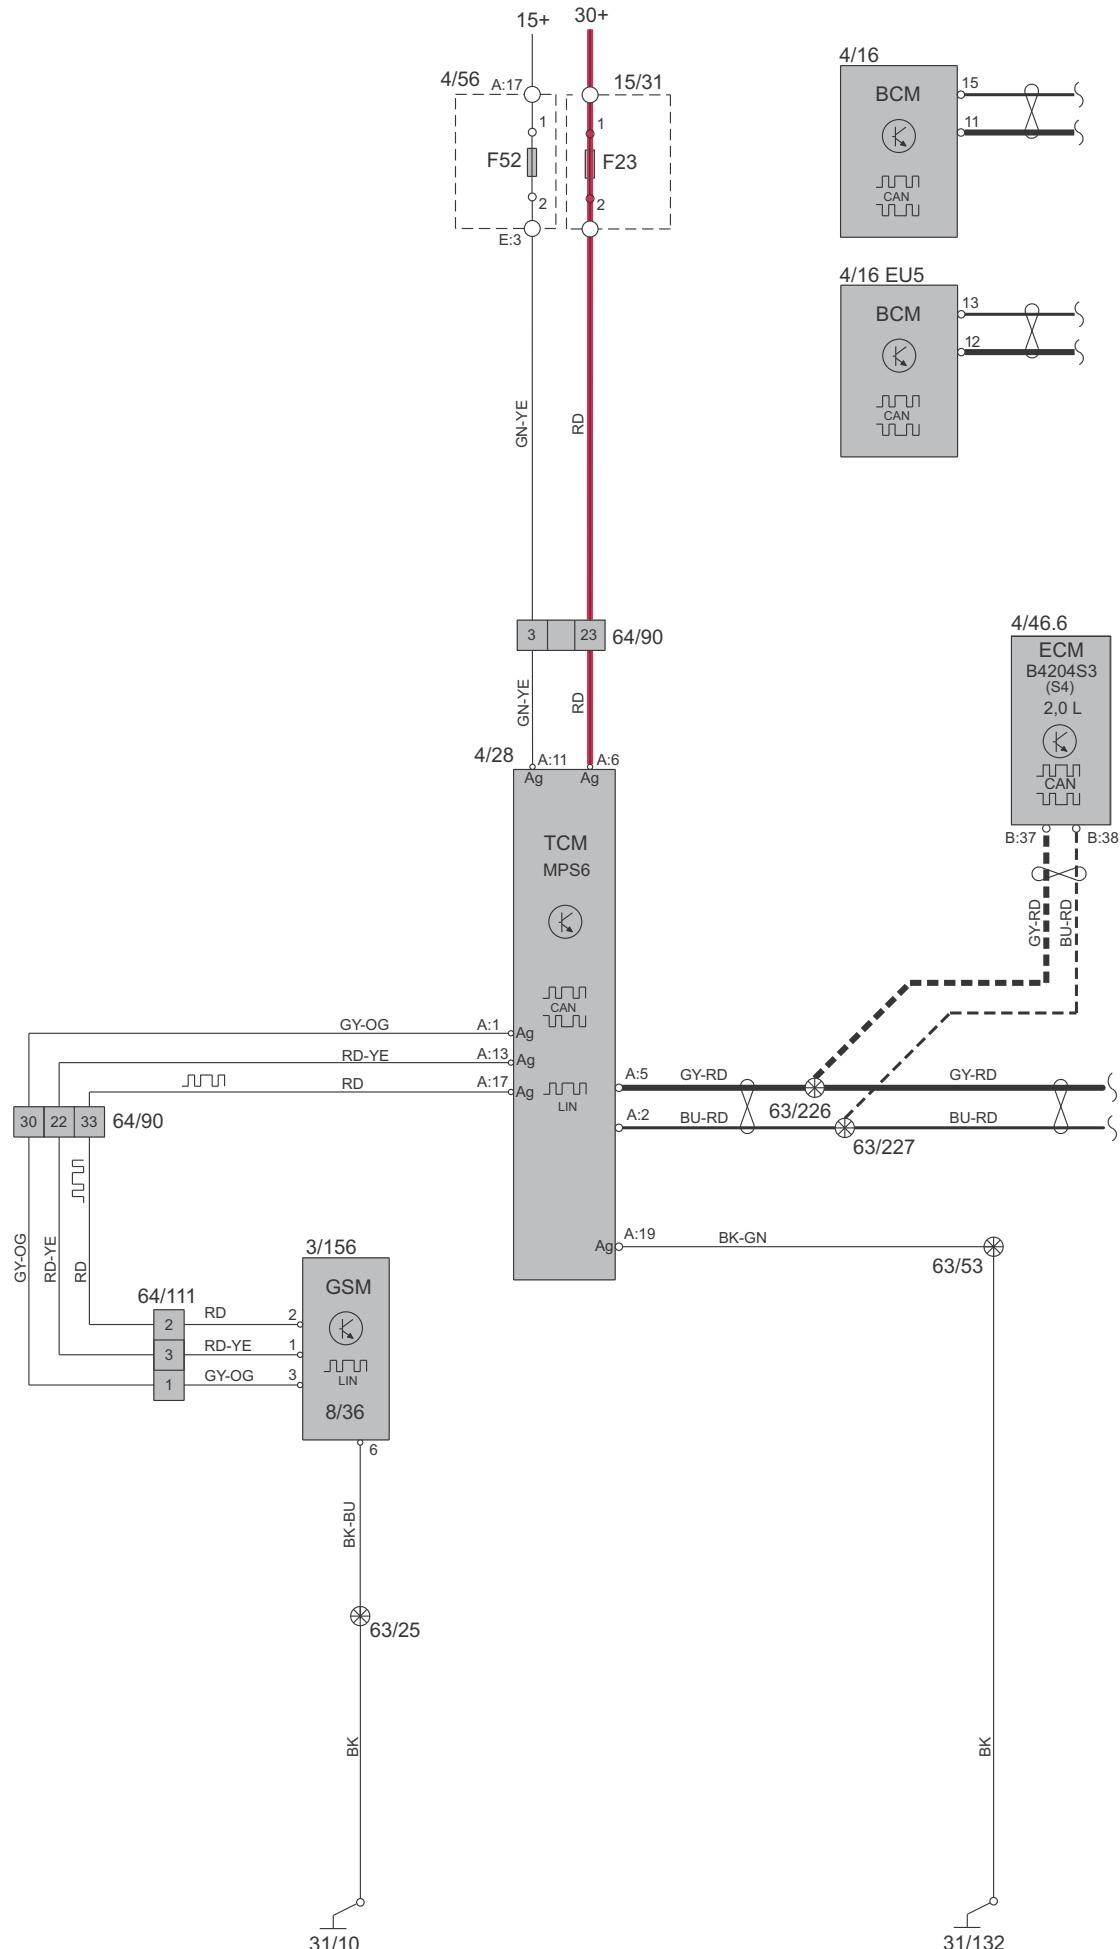


Group 59 Brake system

Brake control system & STC

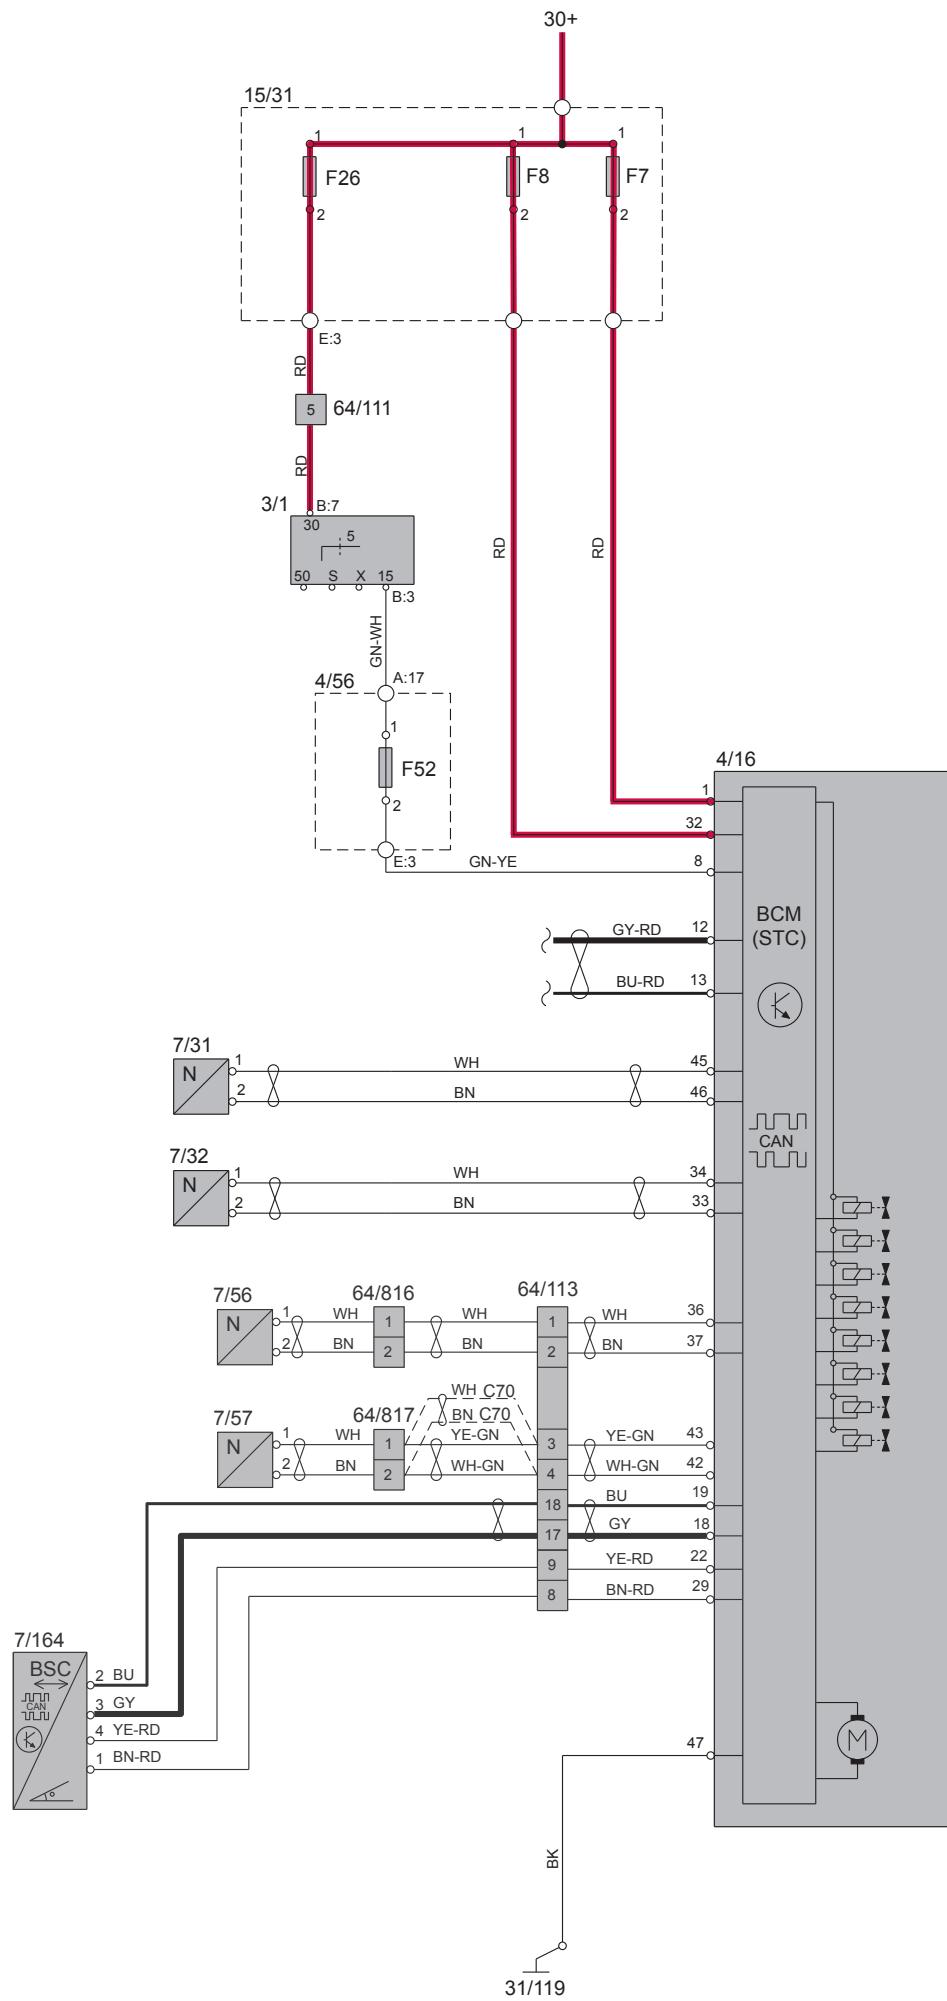

Group 59 Brake system


Brake control system & DSTC

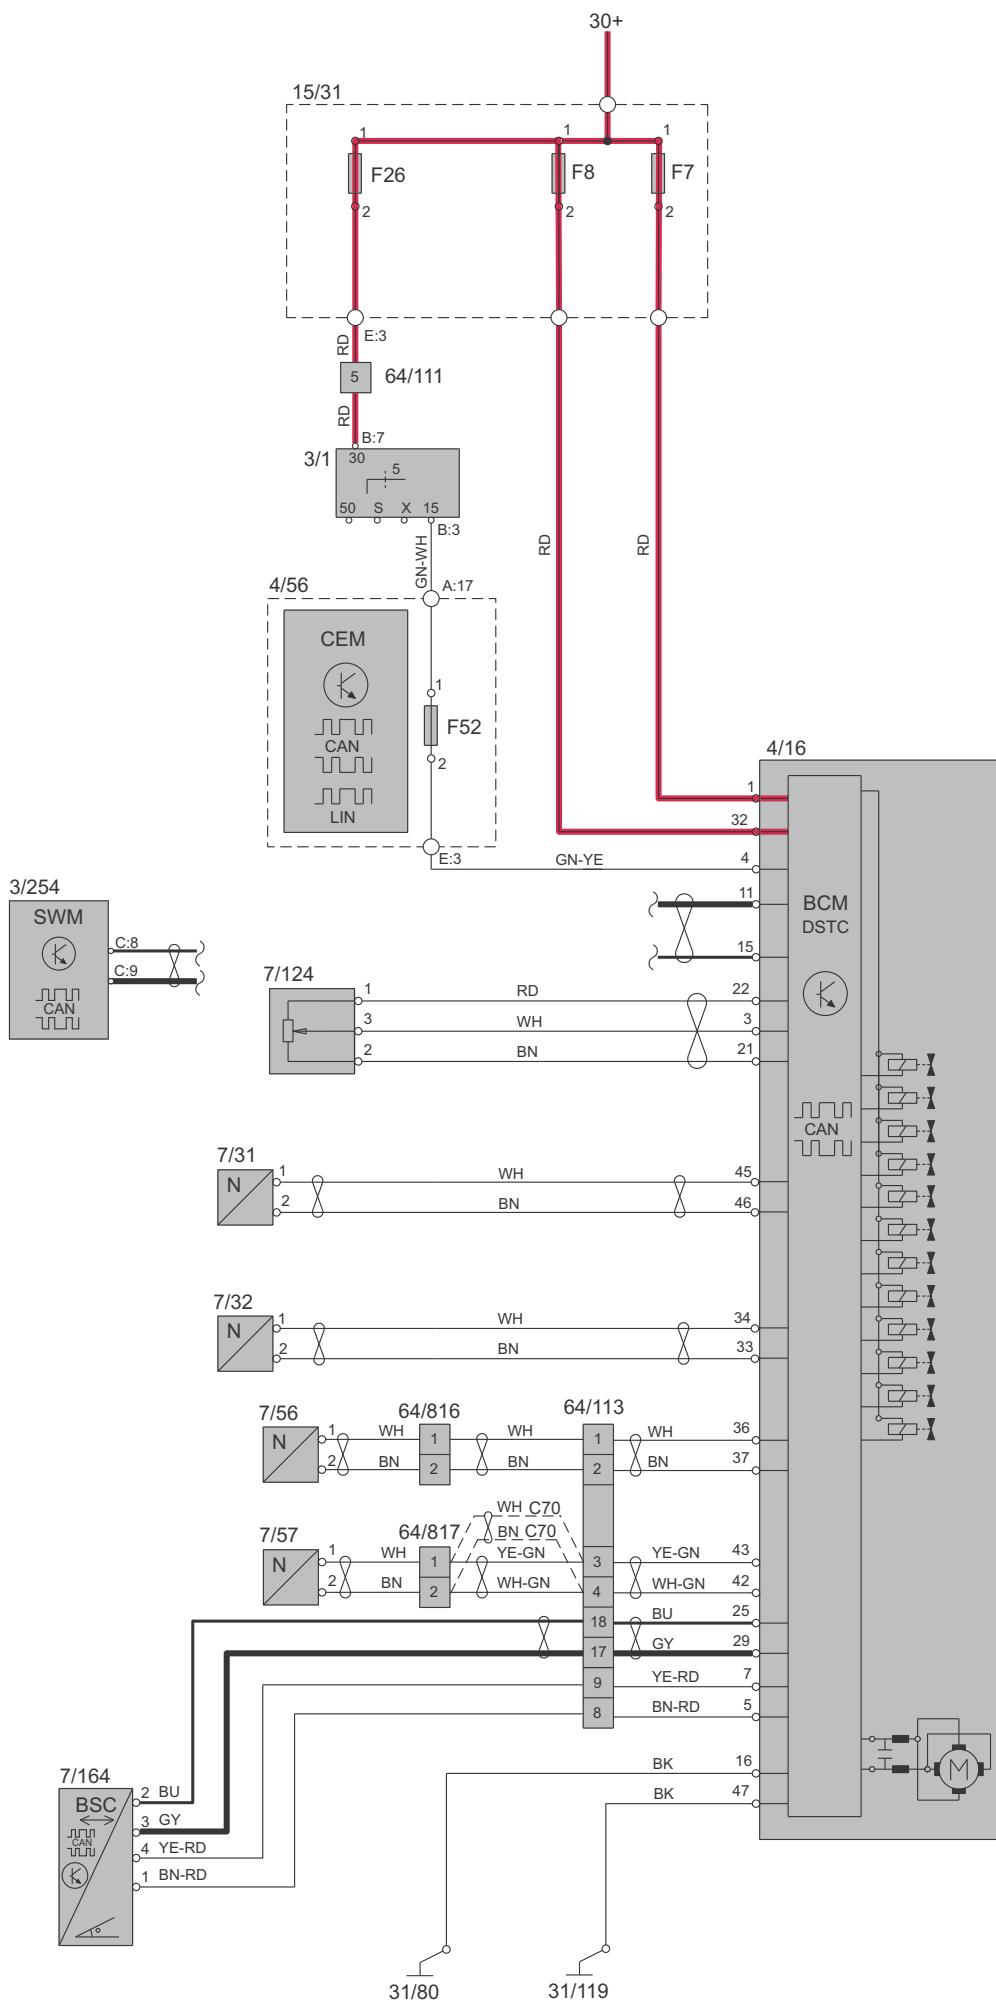

G042494


Group 64 Steering

Speed dependent power steering

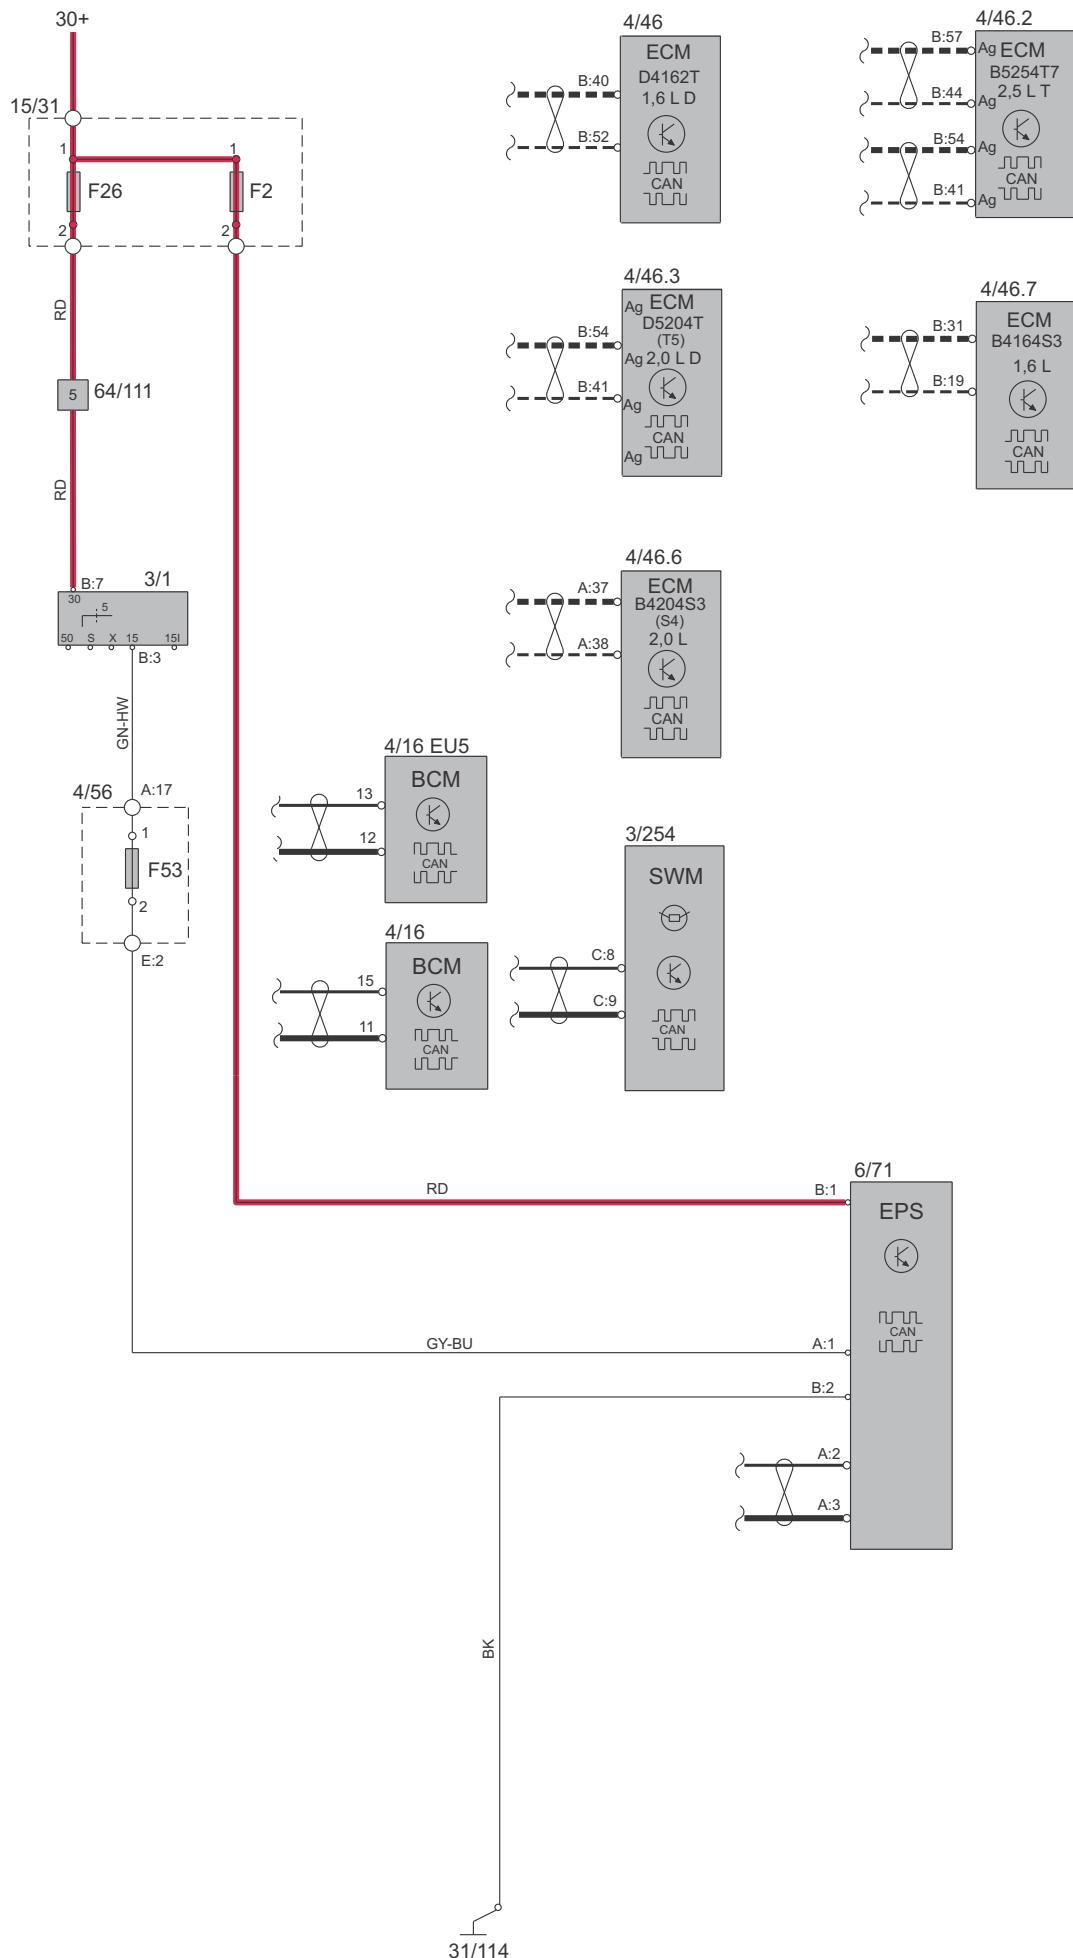

Group 83 Doors and openings


Central locking front doors C30/S40/V50

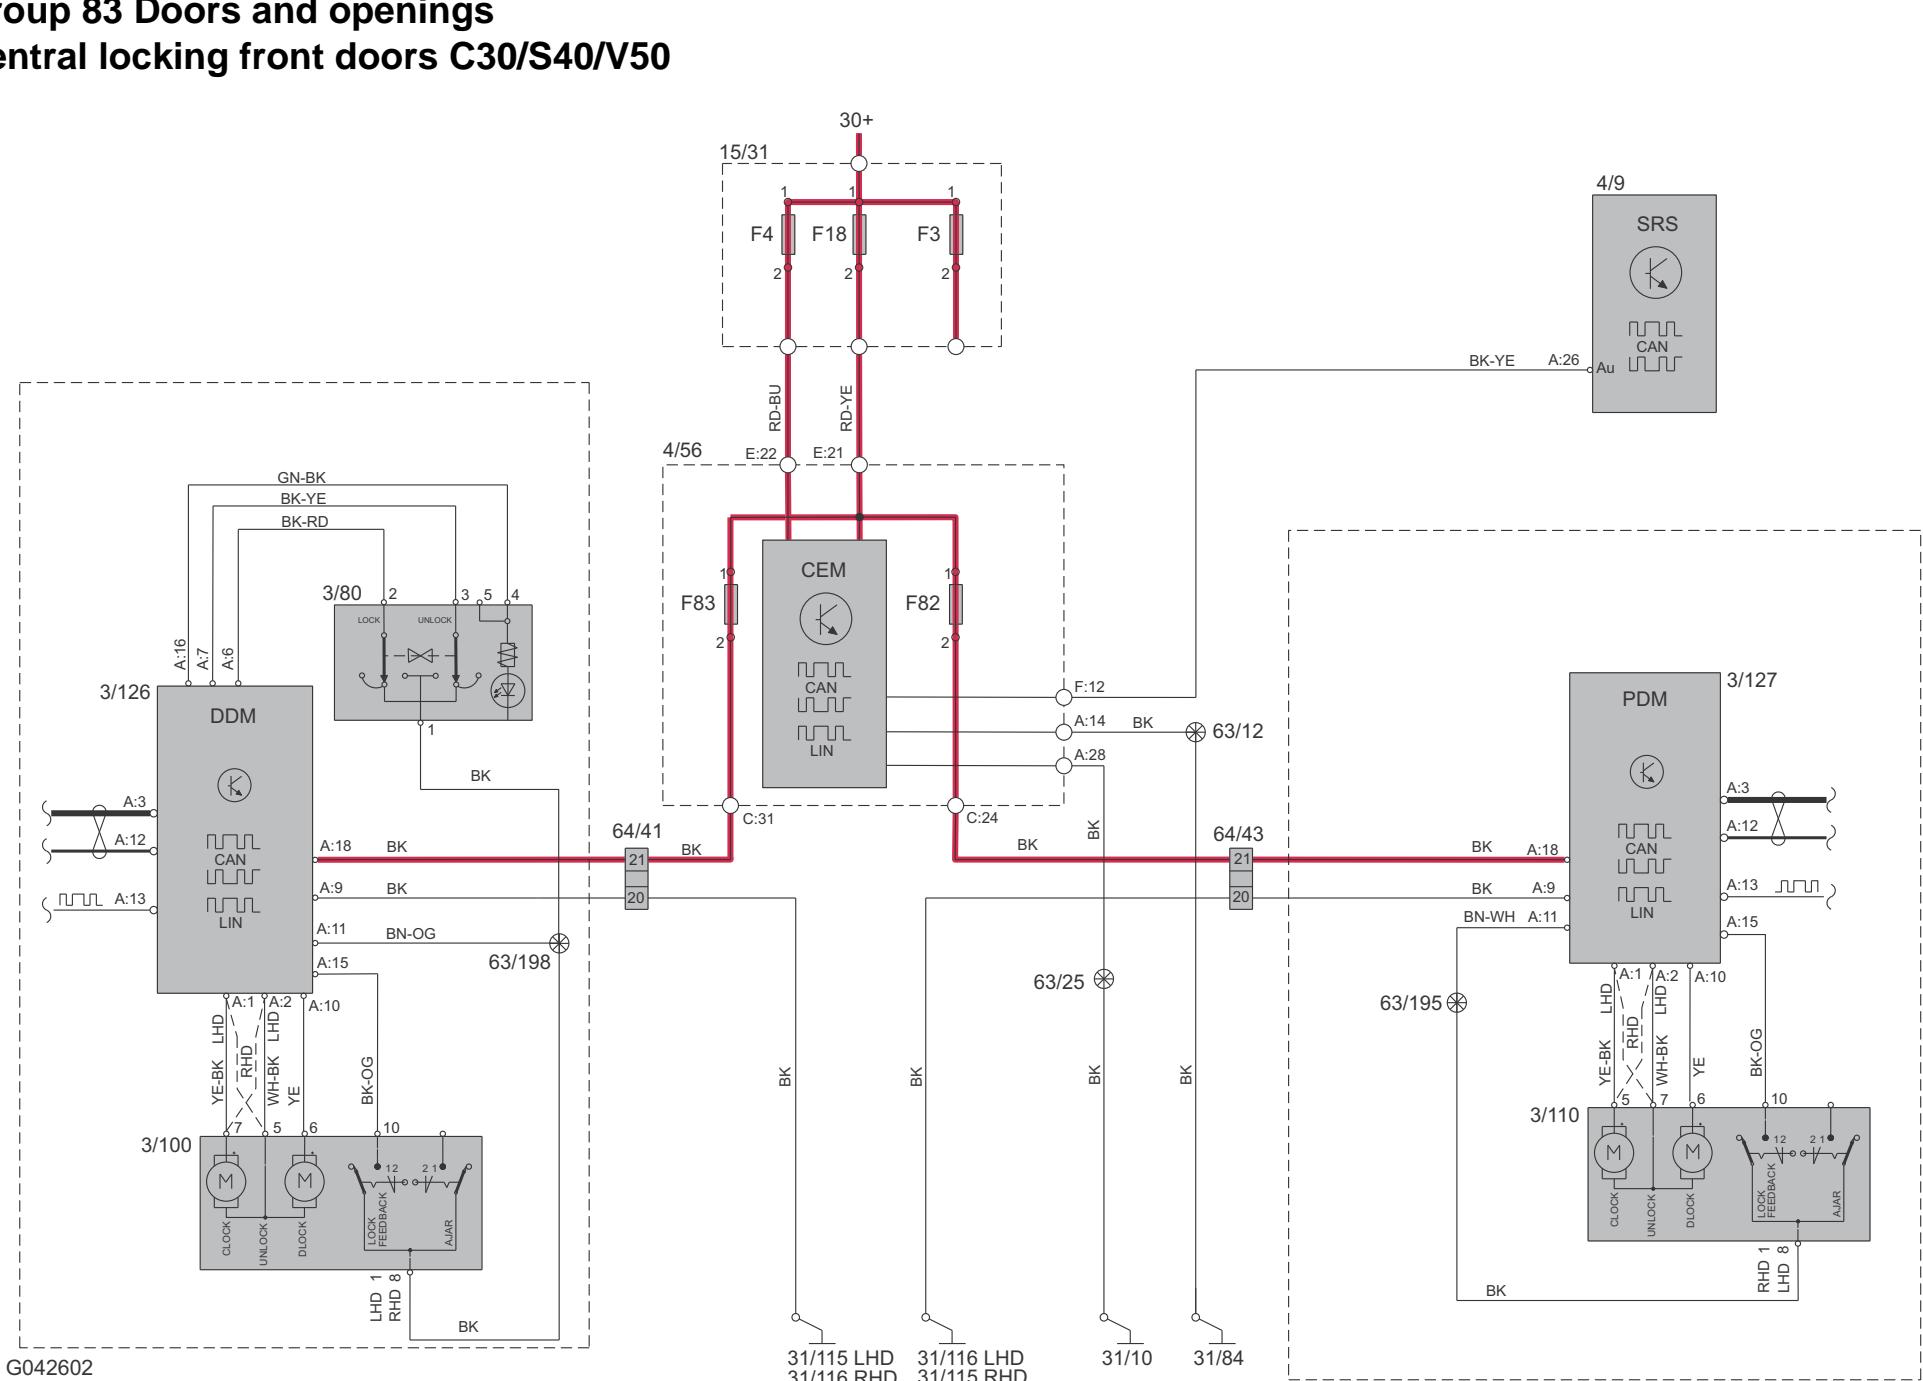

G042602




Group 83 Doors and openings

Central locking rear doors S40/V50

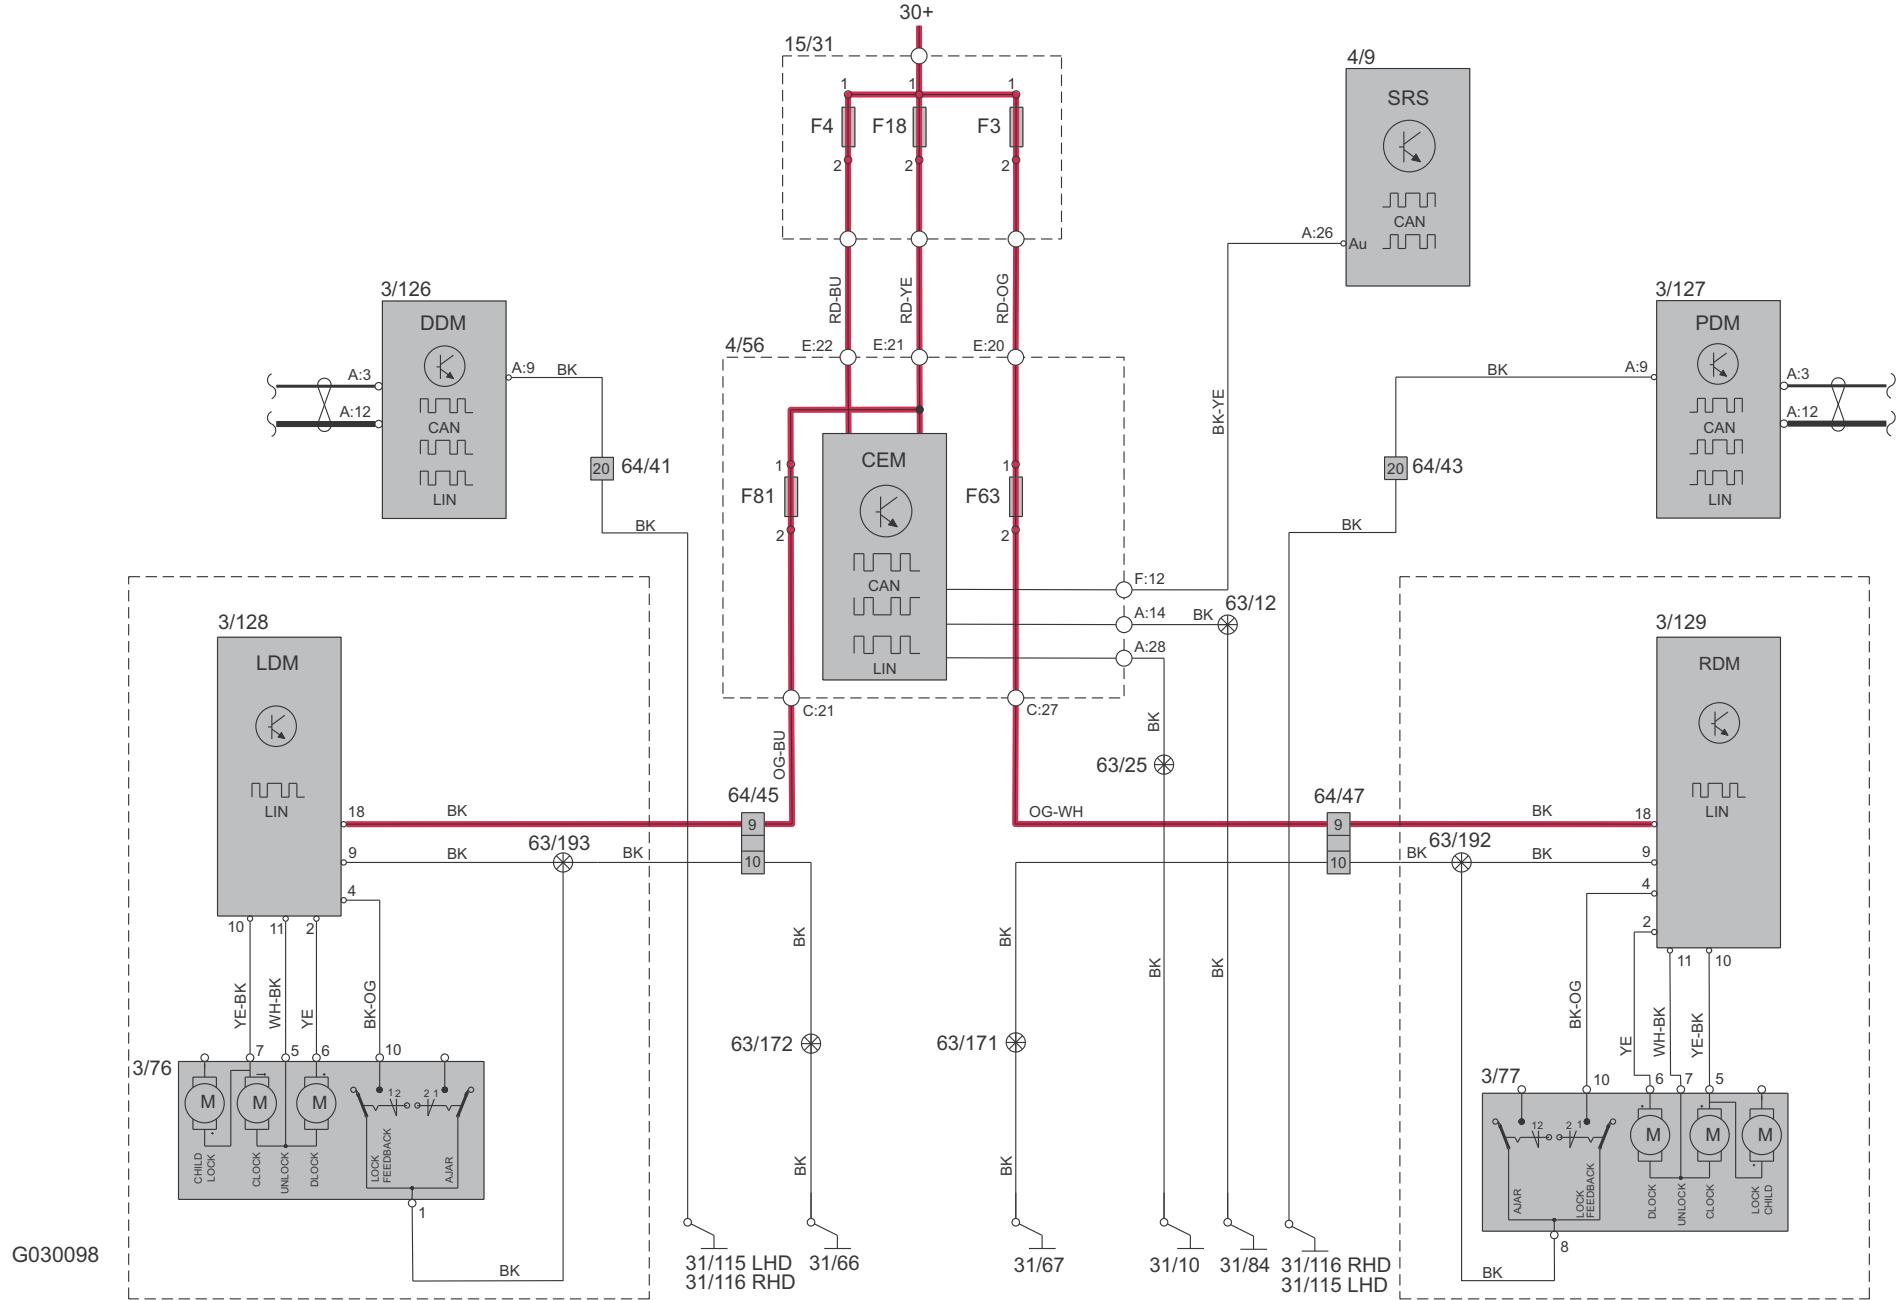

Group 83 Doors and openings


Central locking C70

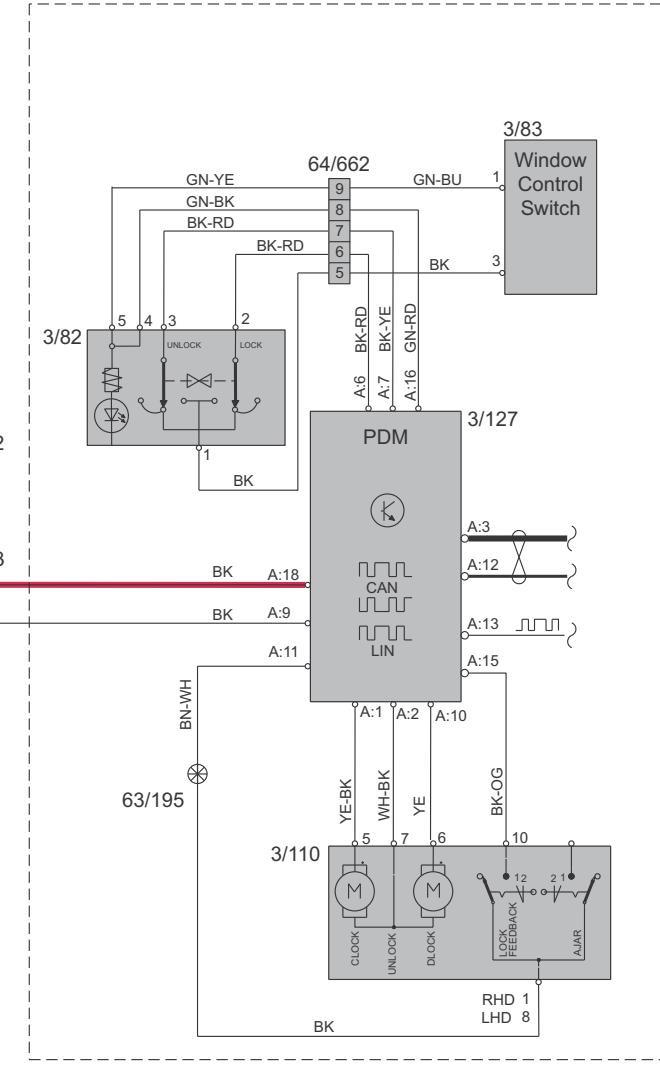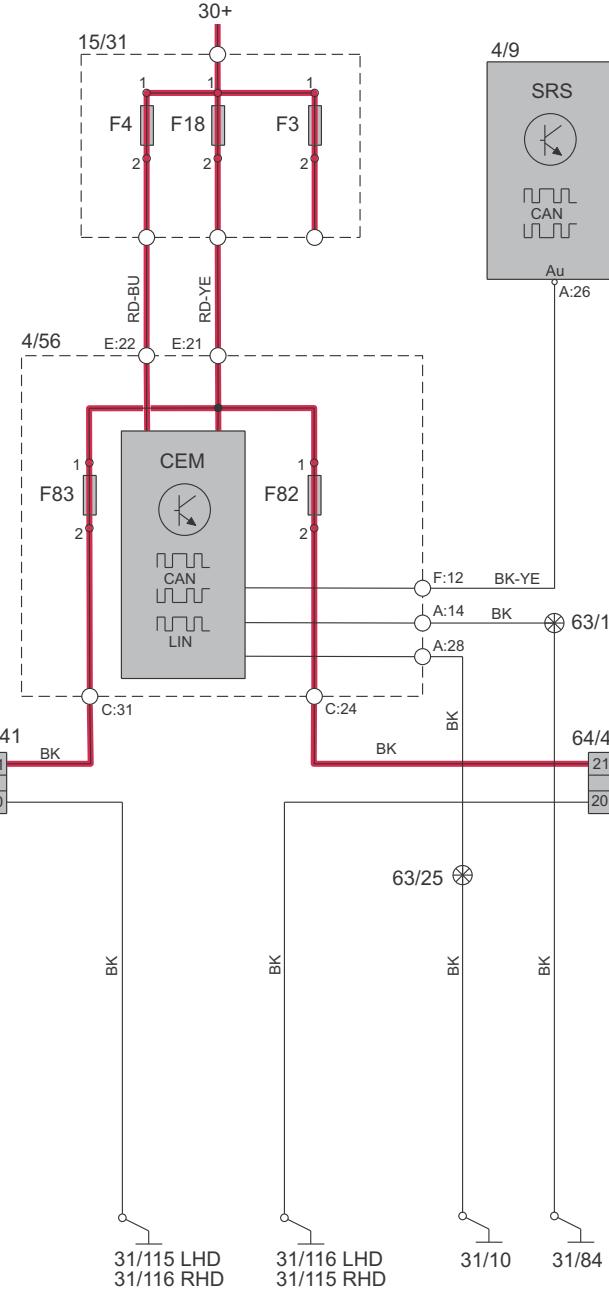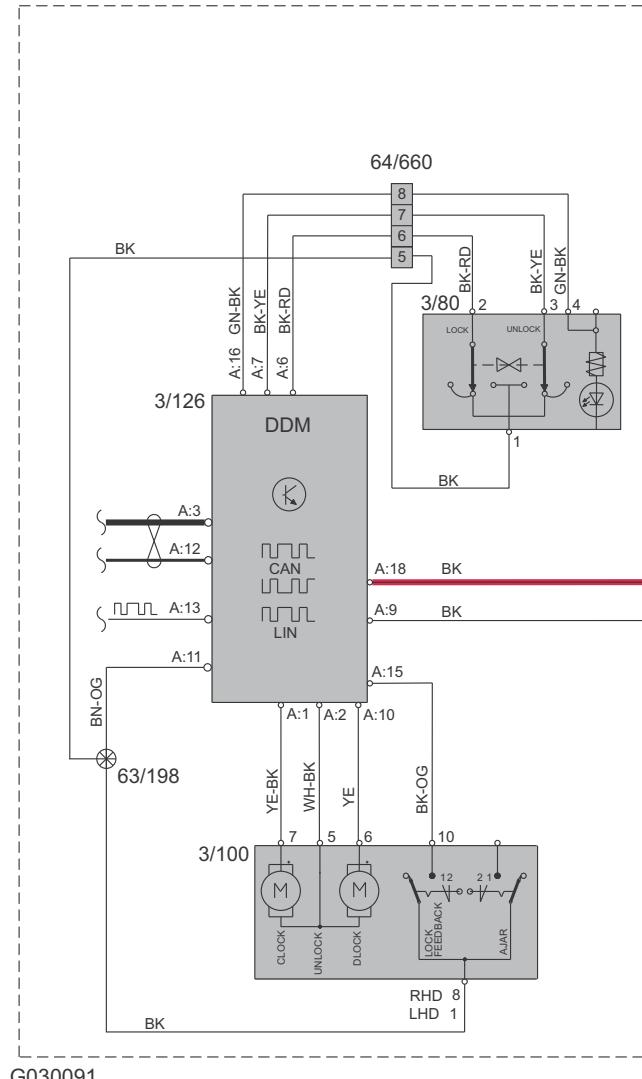

G030091


Group 83 Doors and openings

Central locking trunk lid/tailgate C30

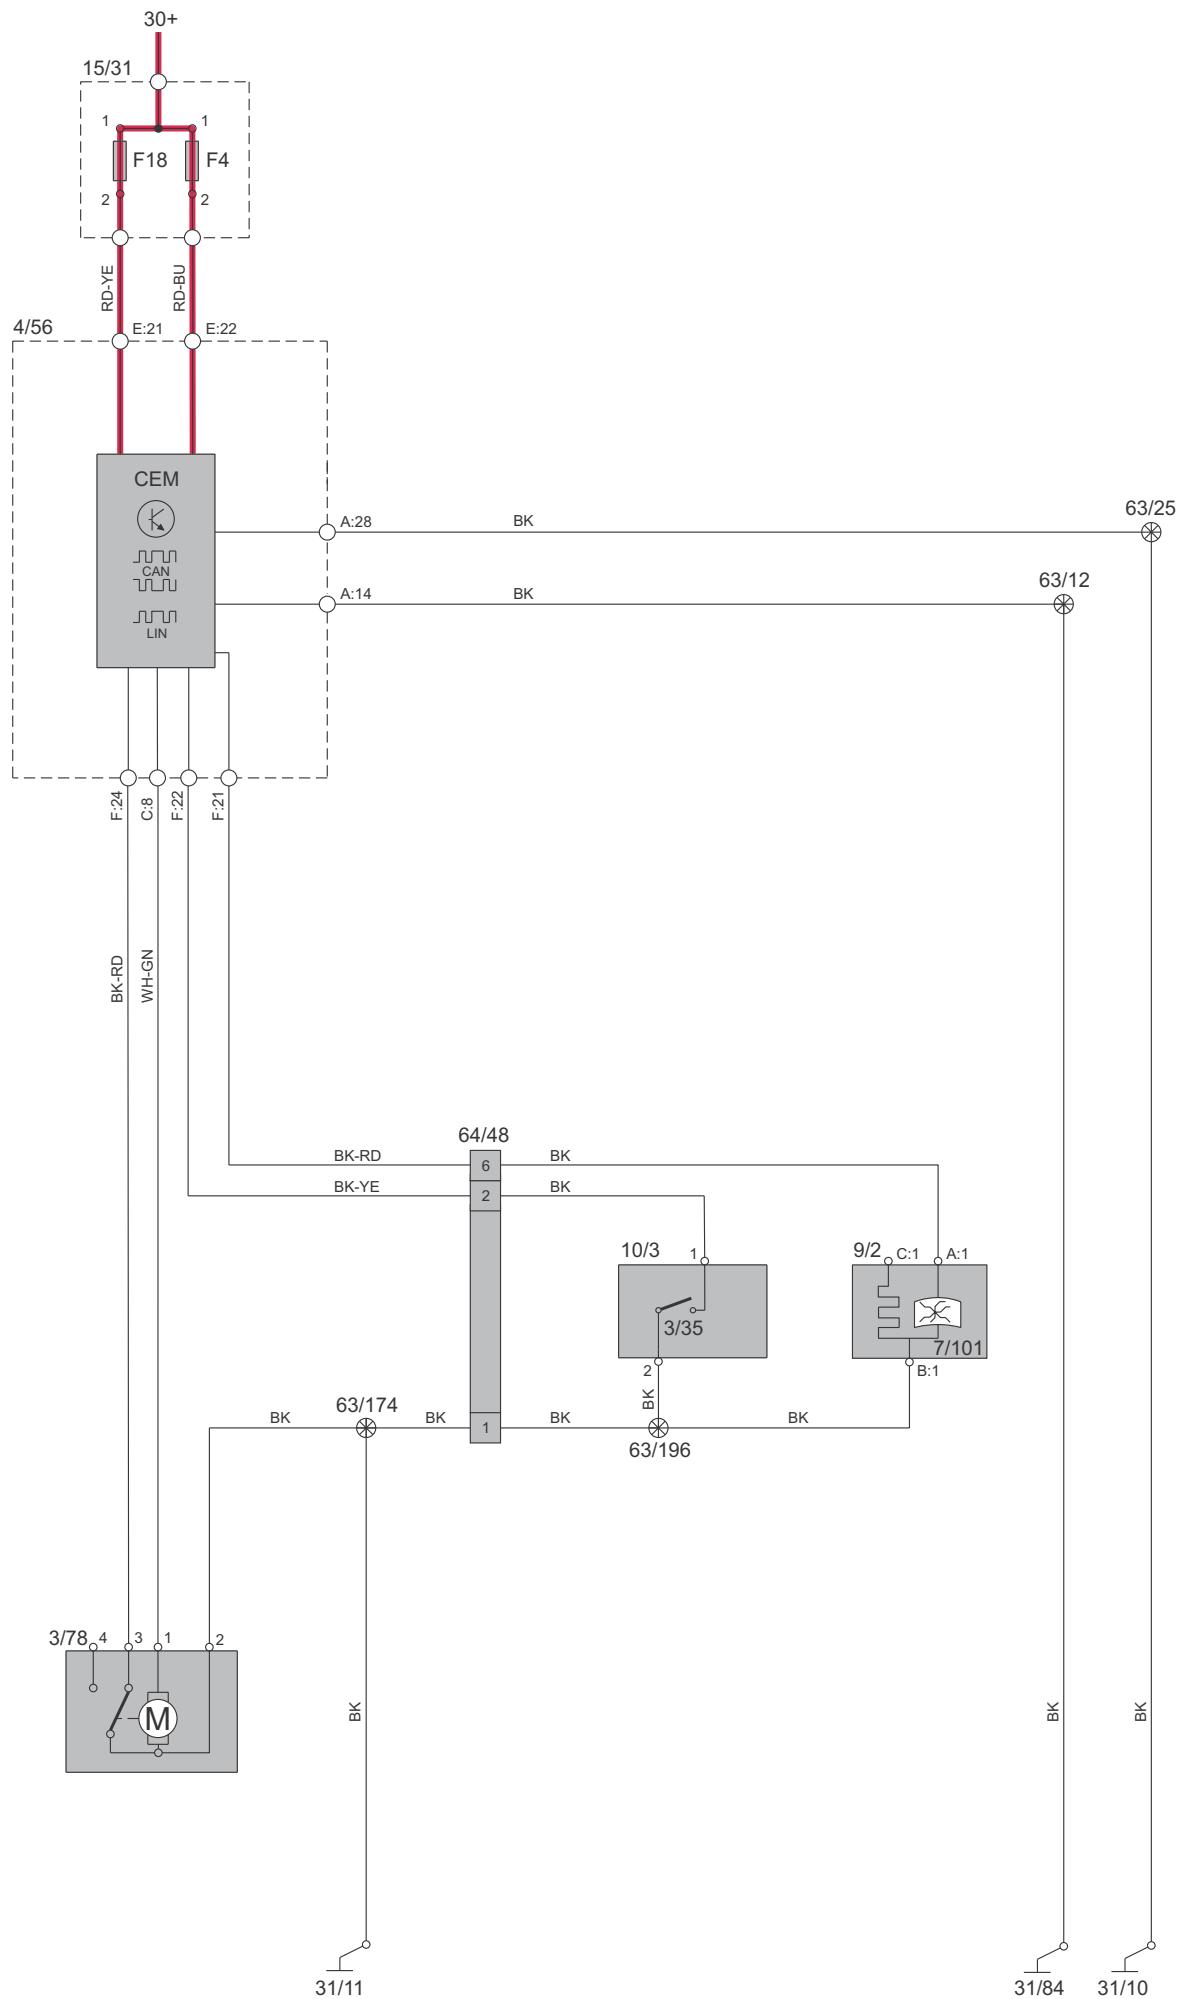

Group 83 Doors and openings


Central locking trunk lid/tailgate S40/V50

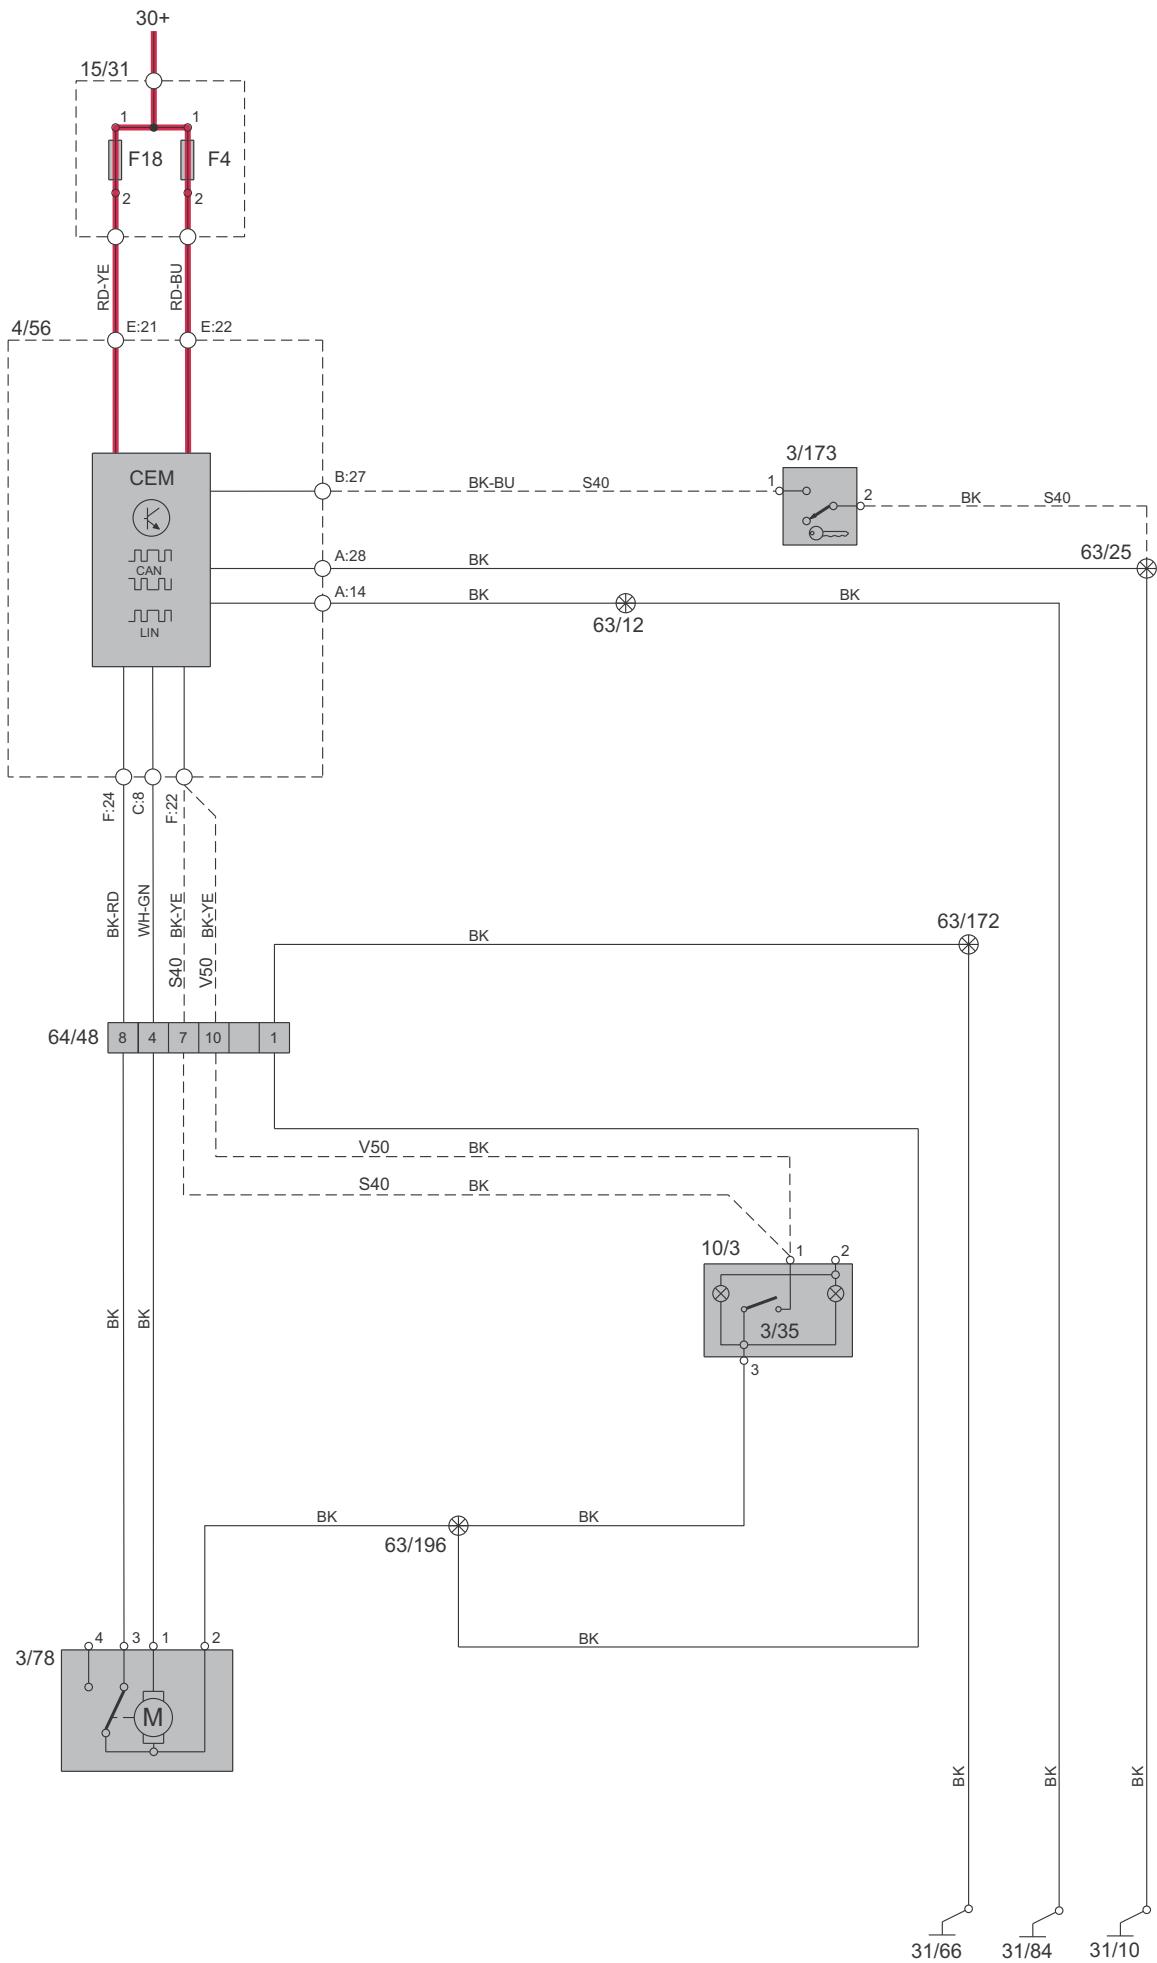

G030099


Group 83 Doors and openings

Central locking trunk lid/tailgate C70

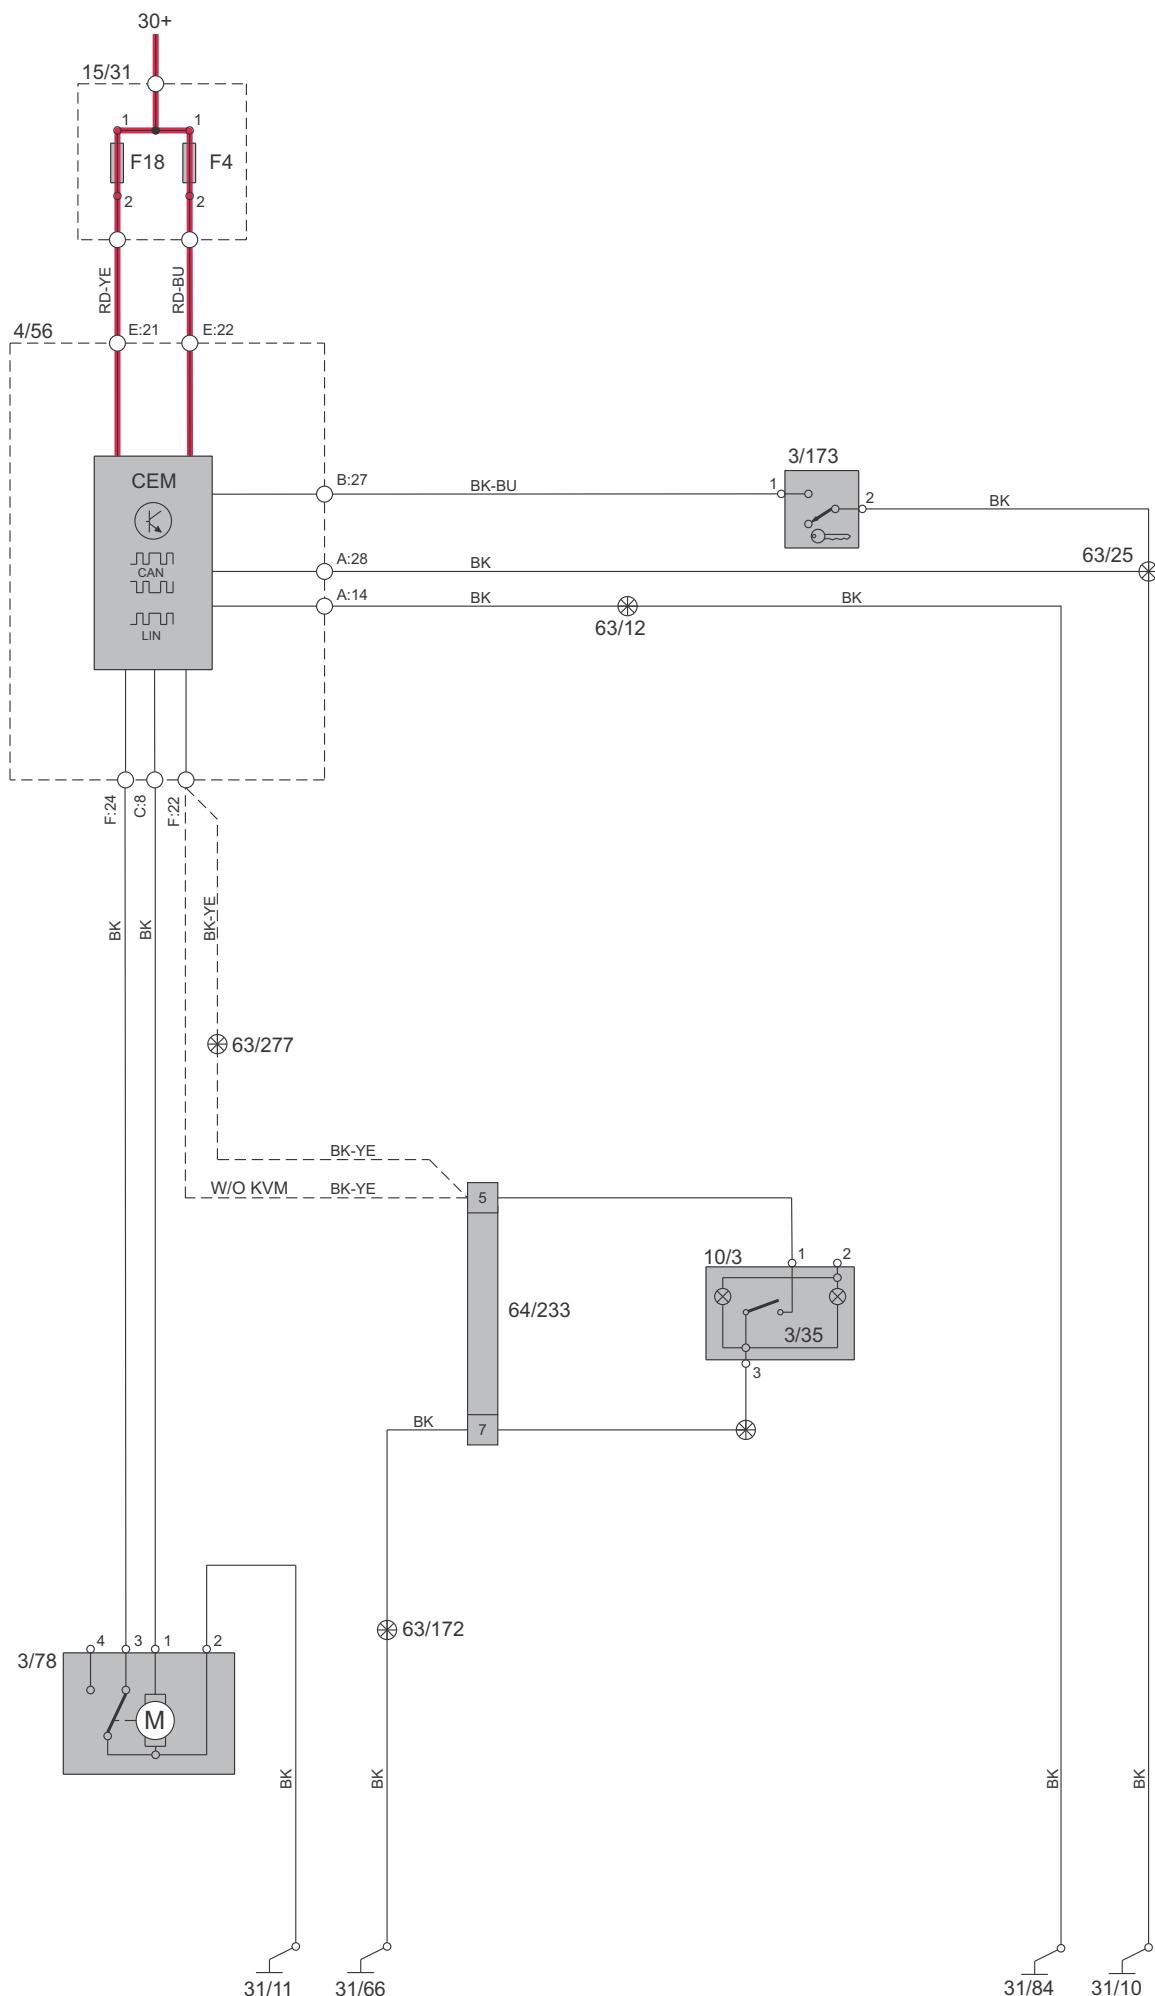


Group 83 Doors and openings

Central locking storage compartment C70

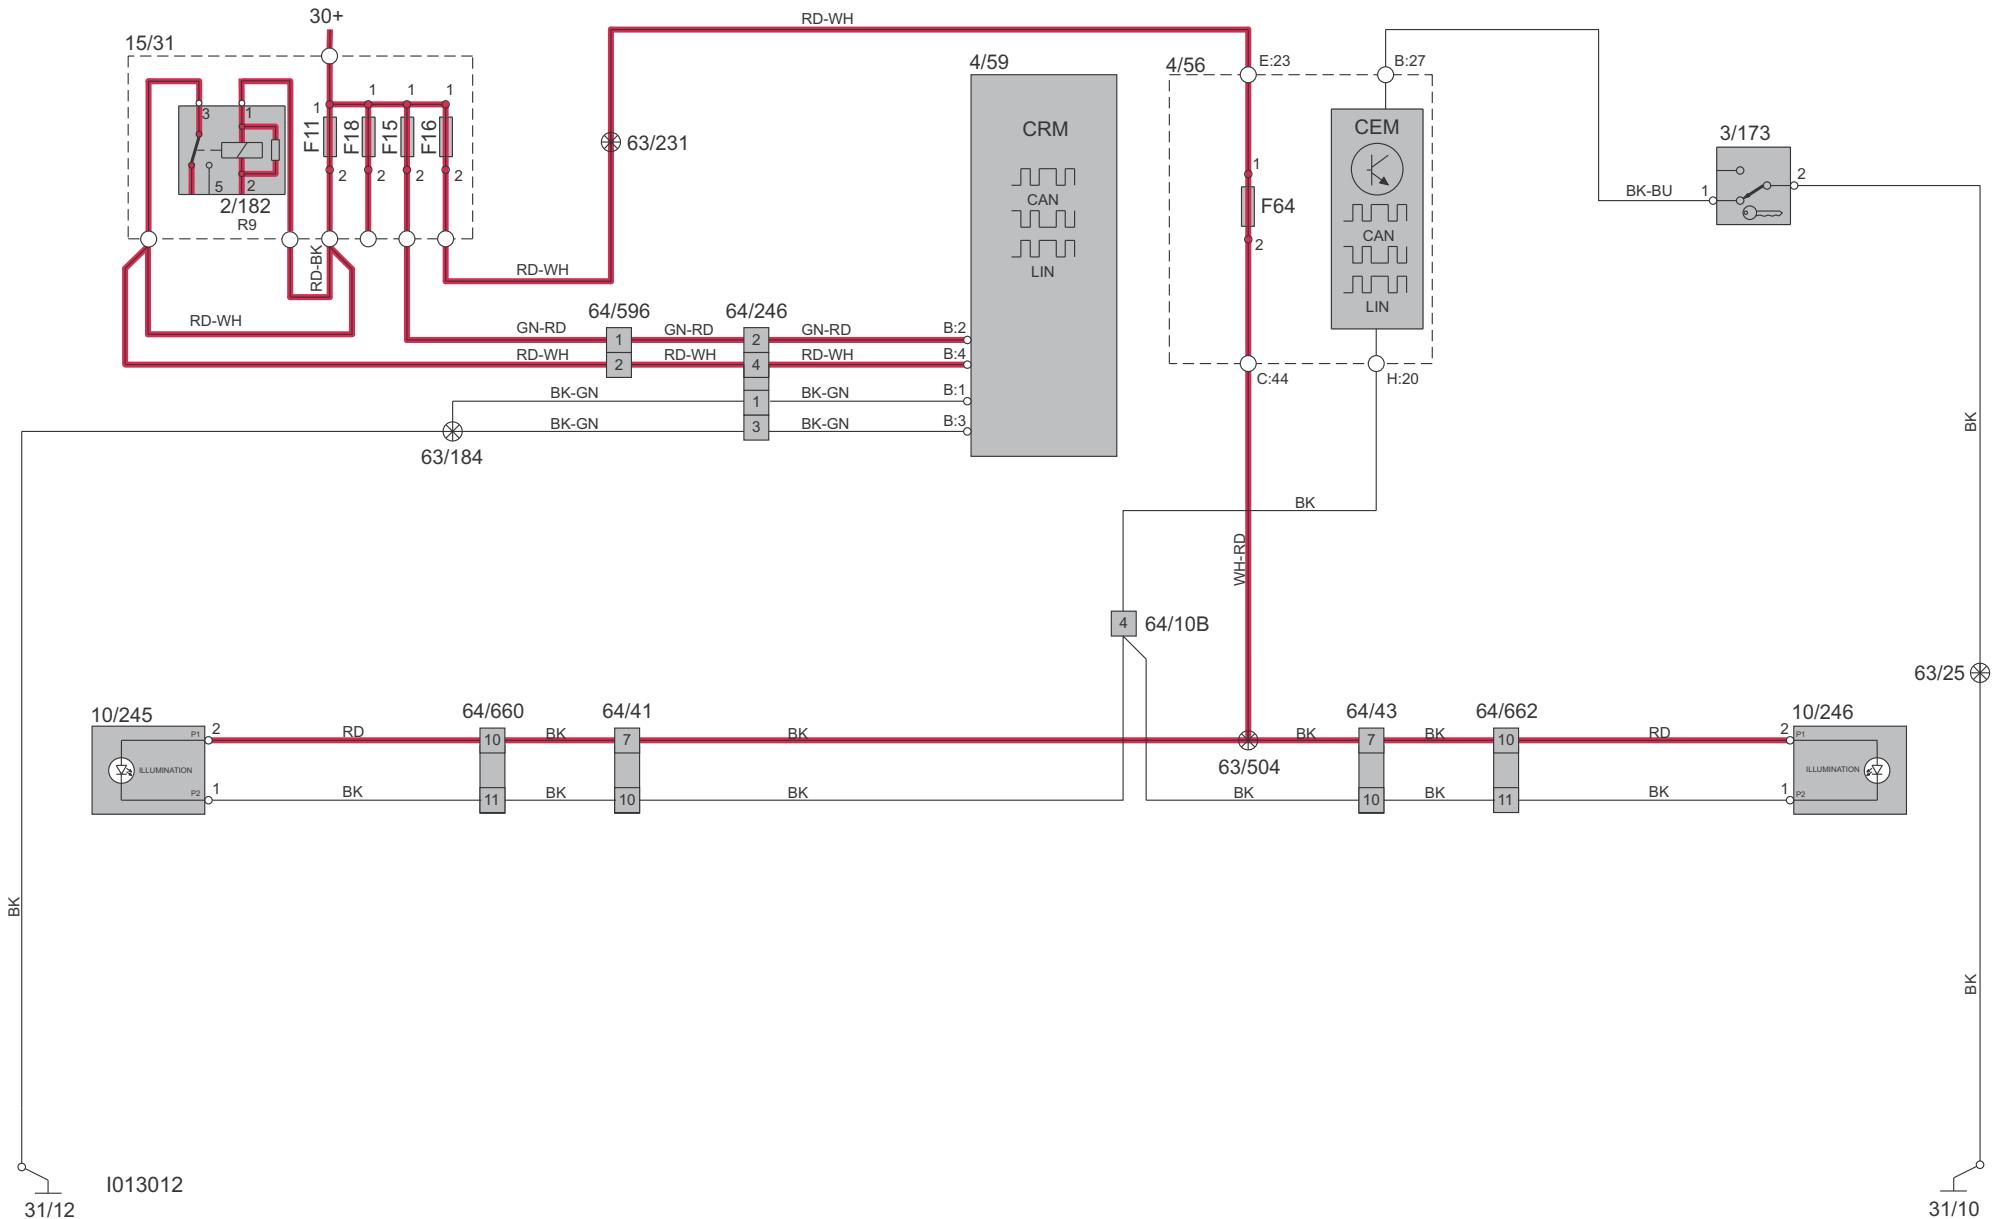


Group 83 Doors and openings

Child safety lock S40/V50

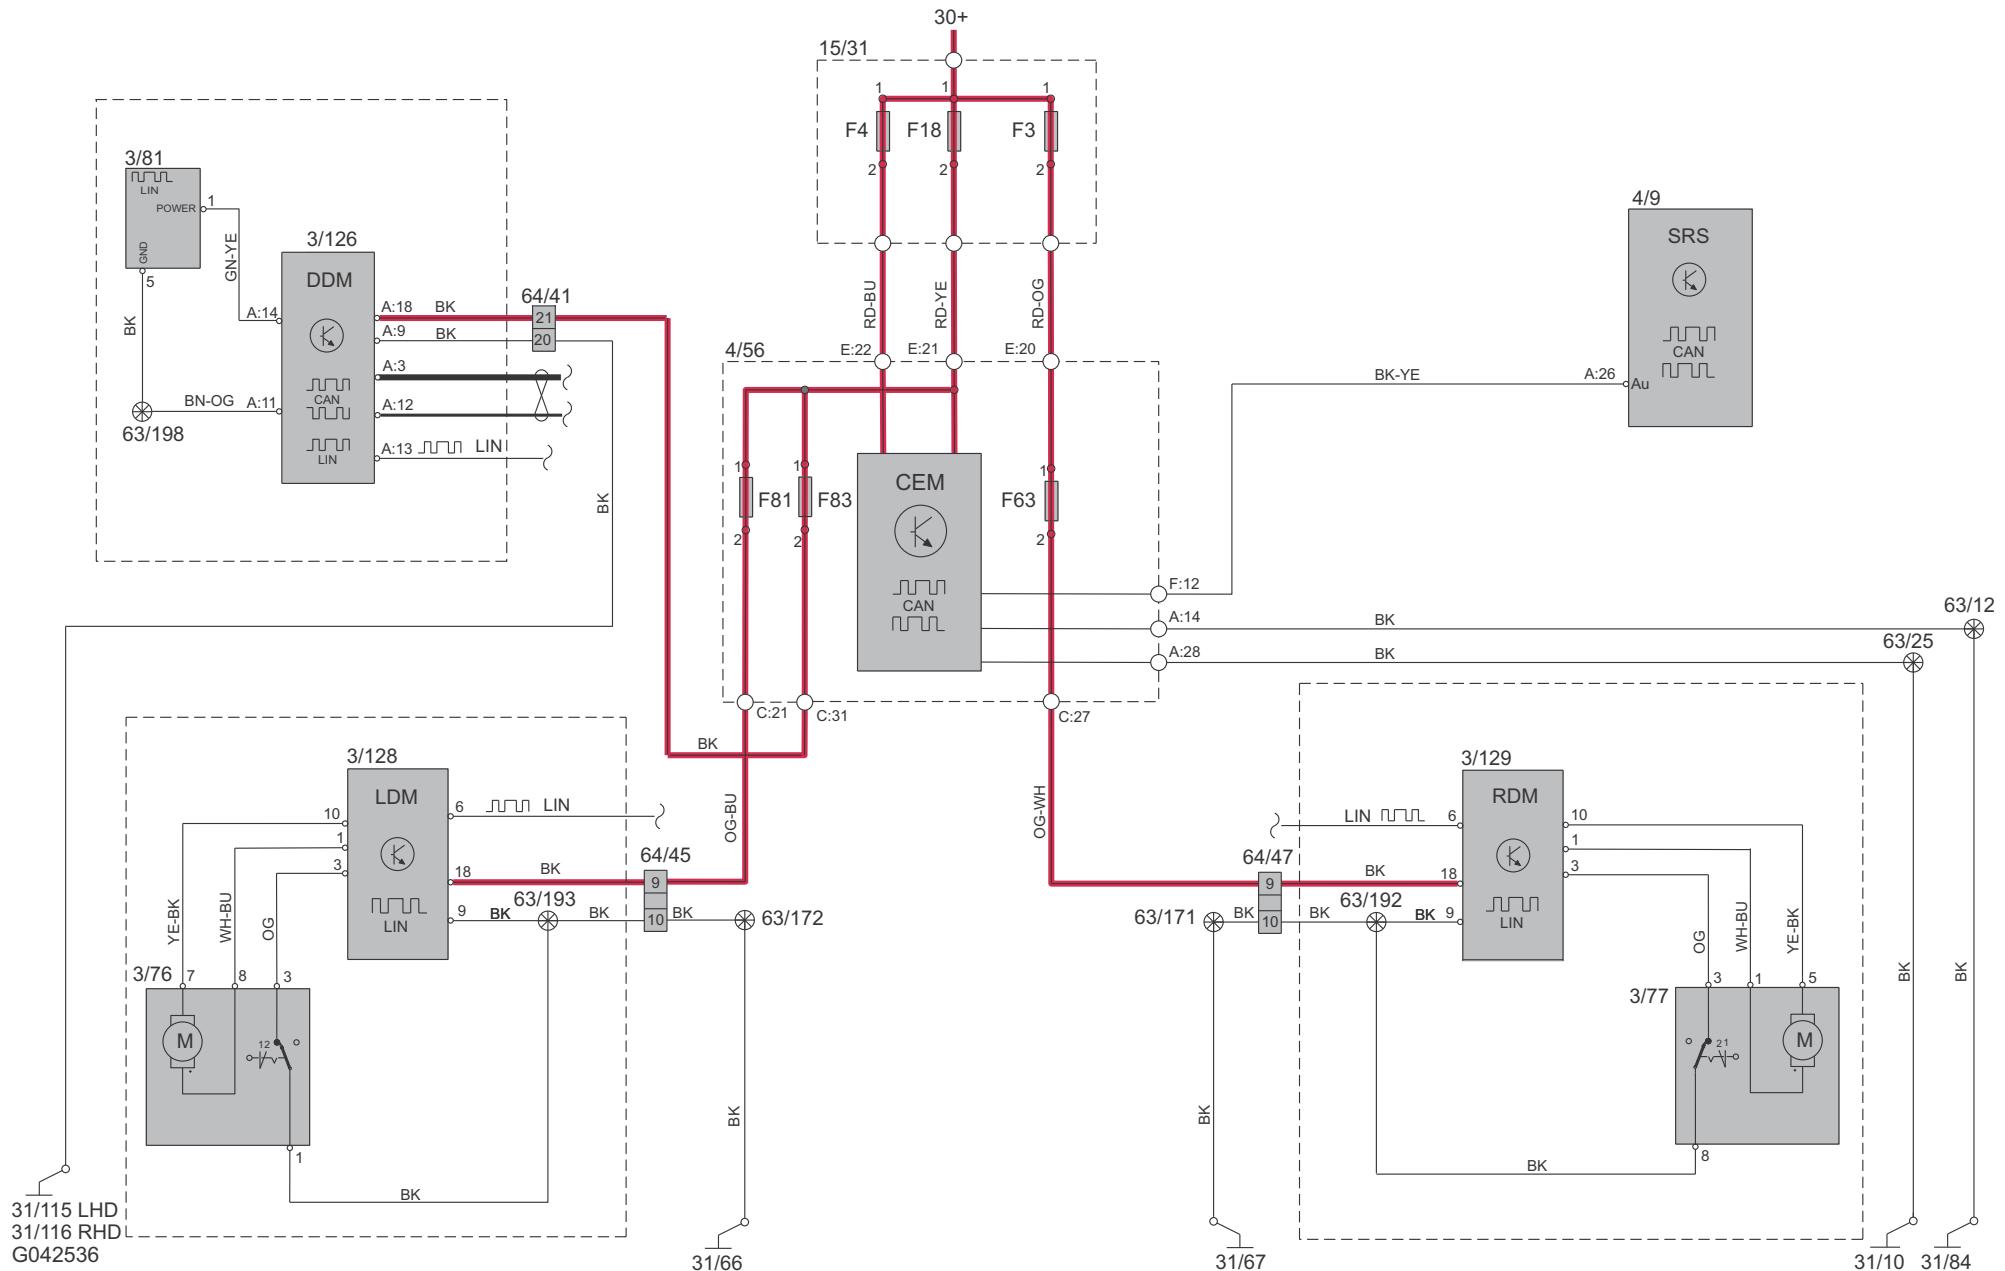

Group 83 Doors and openings


Central locking fuel filler flap

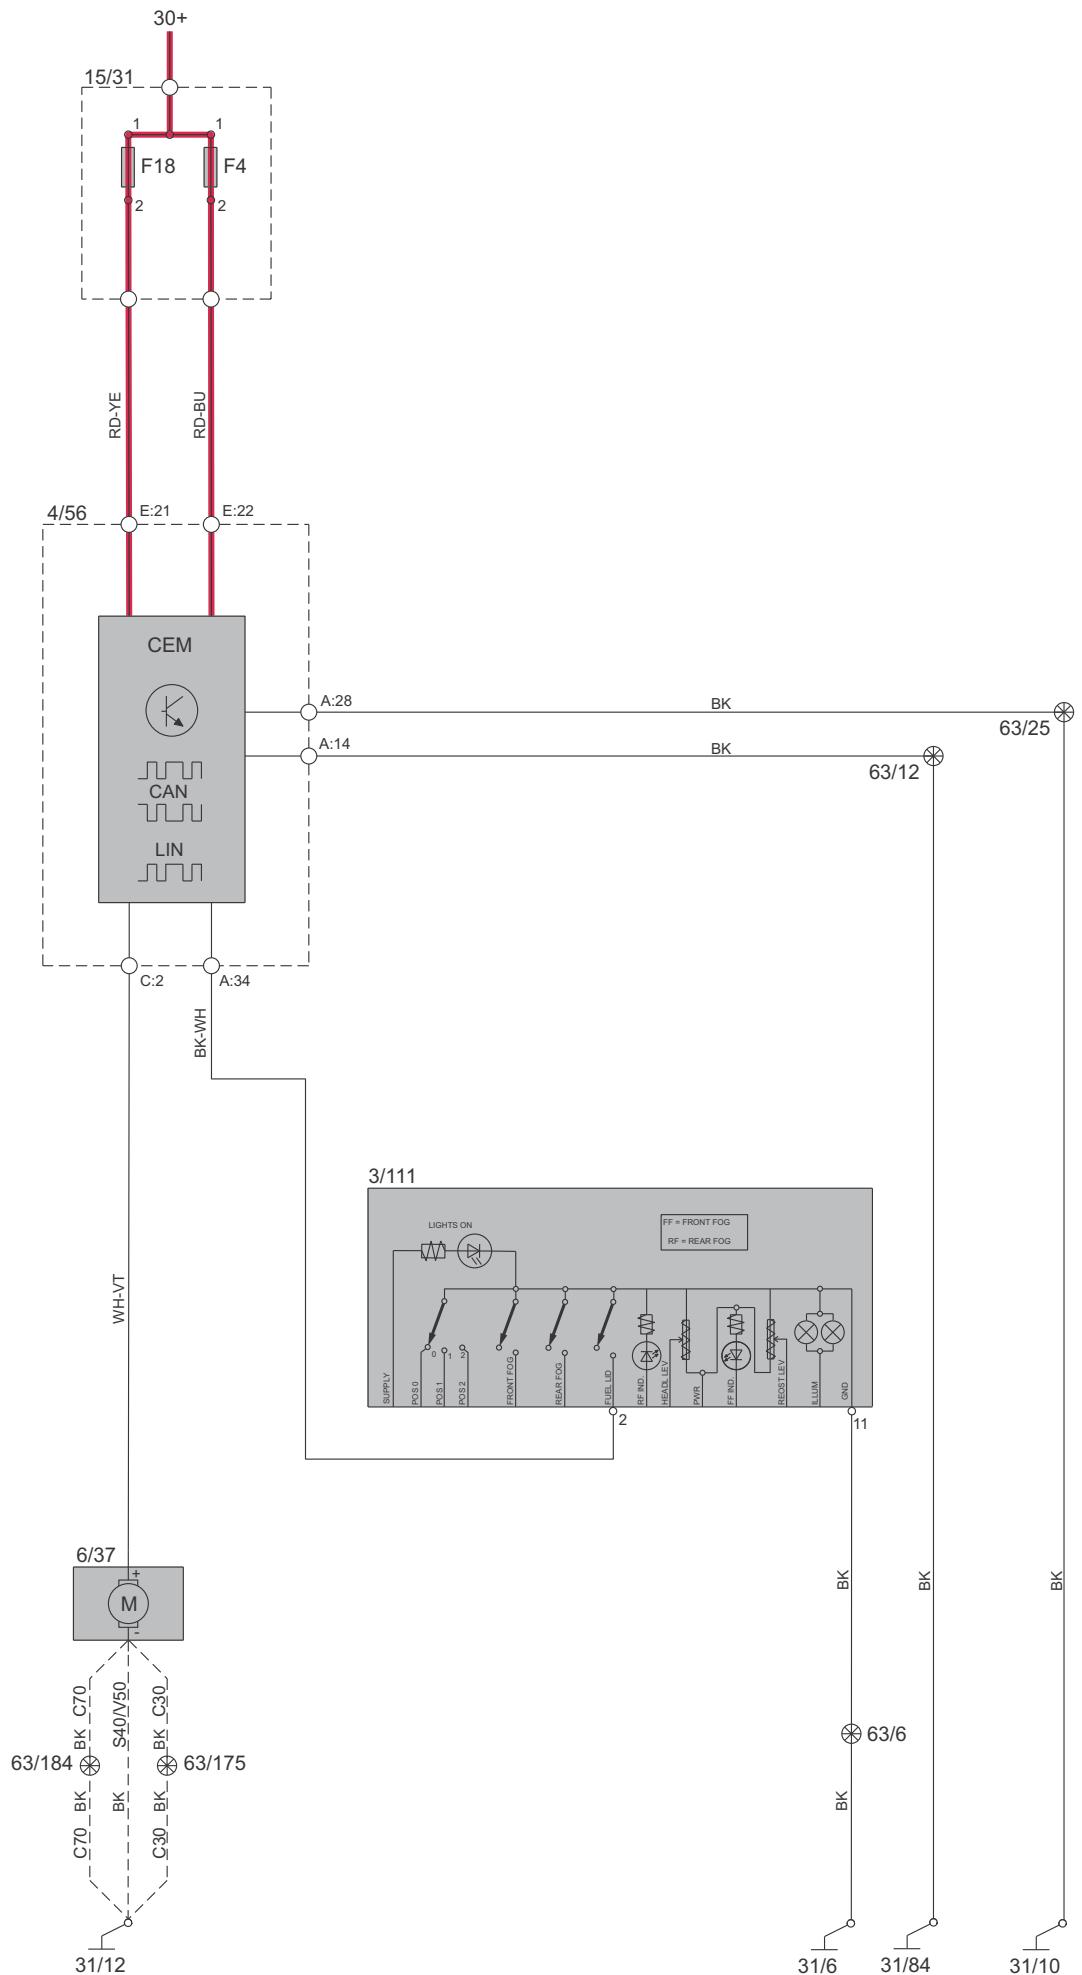

G030107

Group 83 Doors and openings


Signal receiver central locking C30/S40/V50

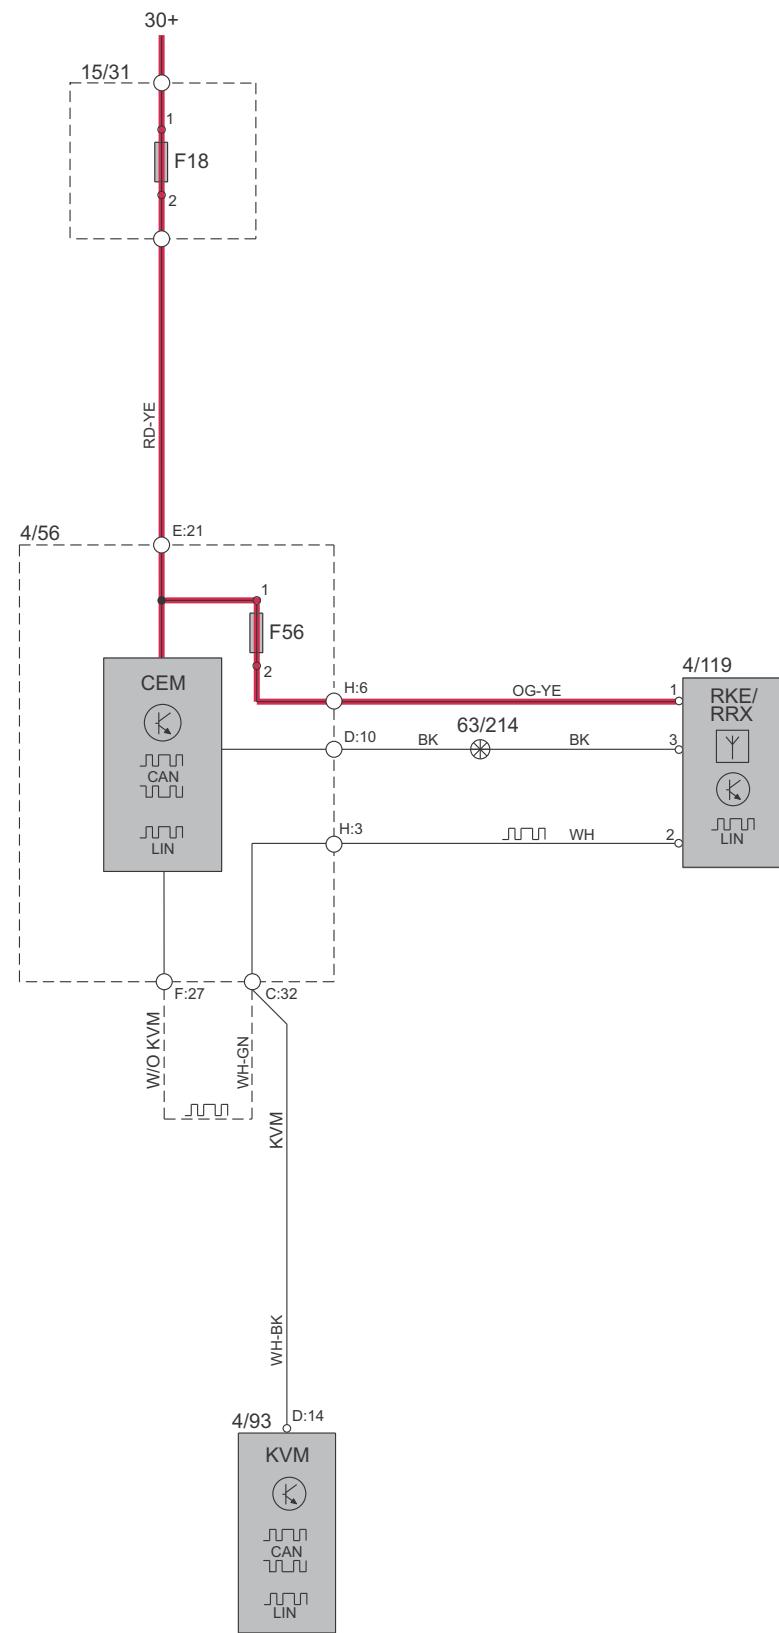

103313

Group 83 Doors and openings


Signal receiver central locking C70

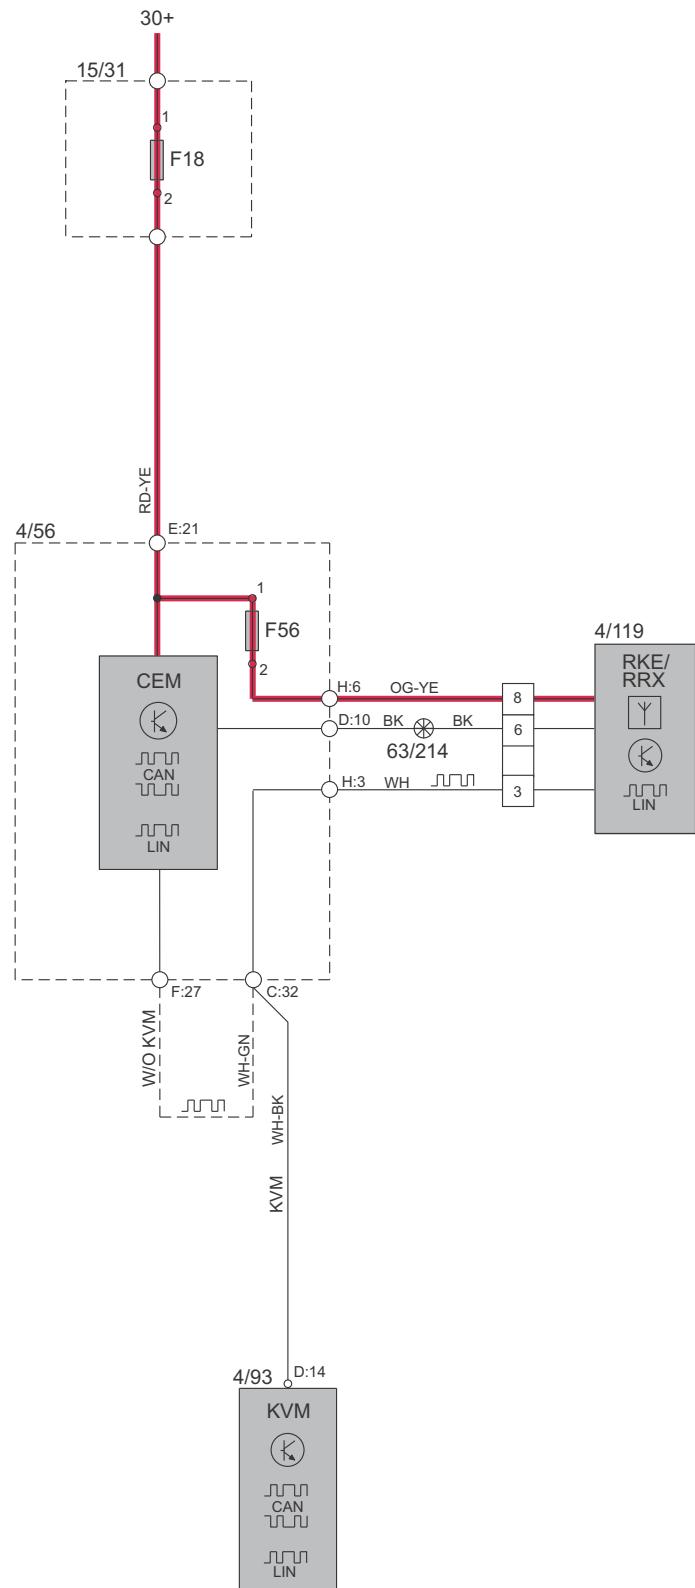

G030111


Group 83 Doors and openings

Power windows front doors C30/S40/V50

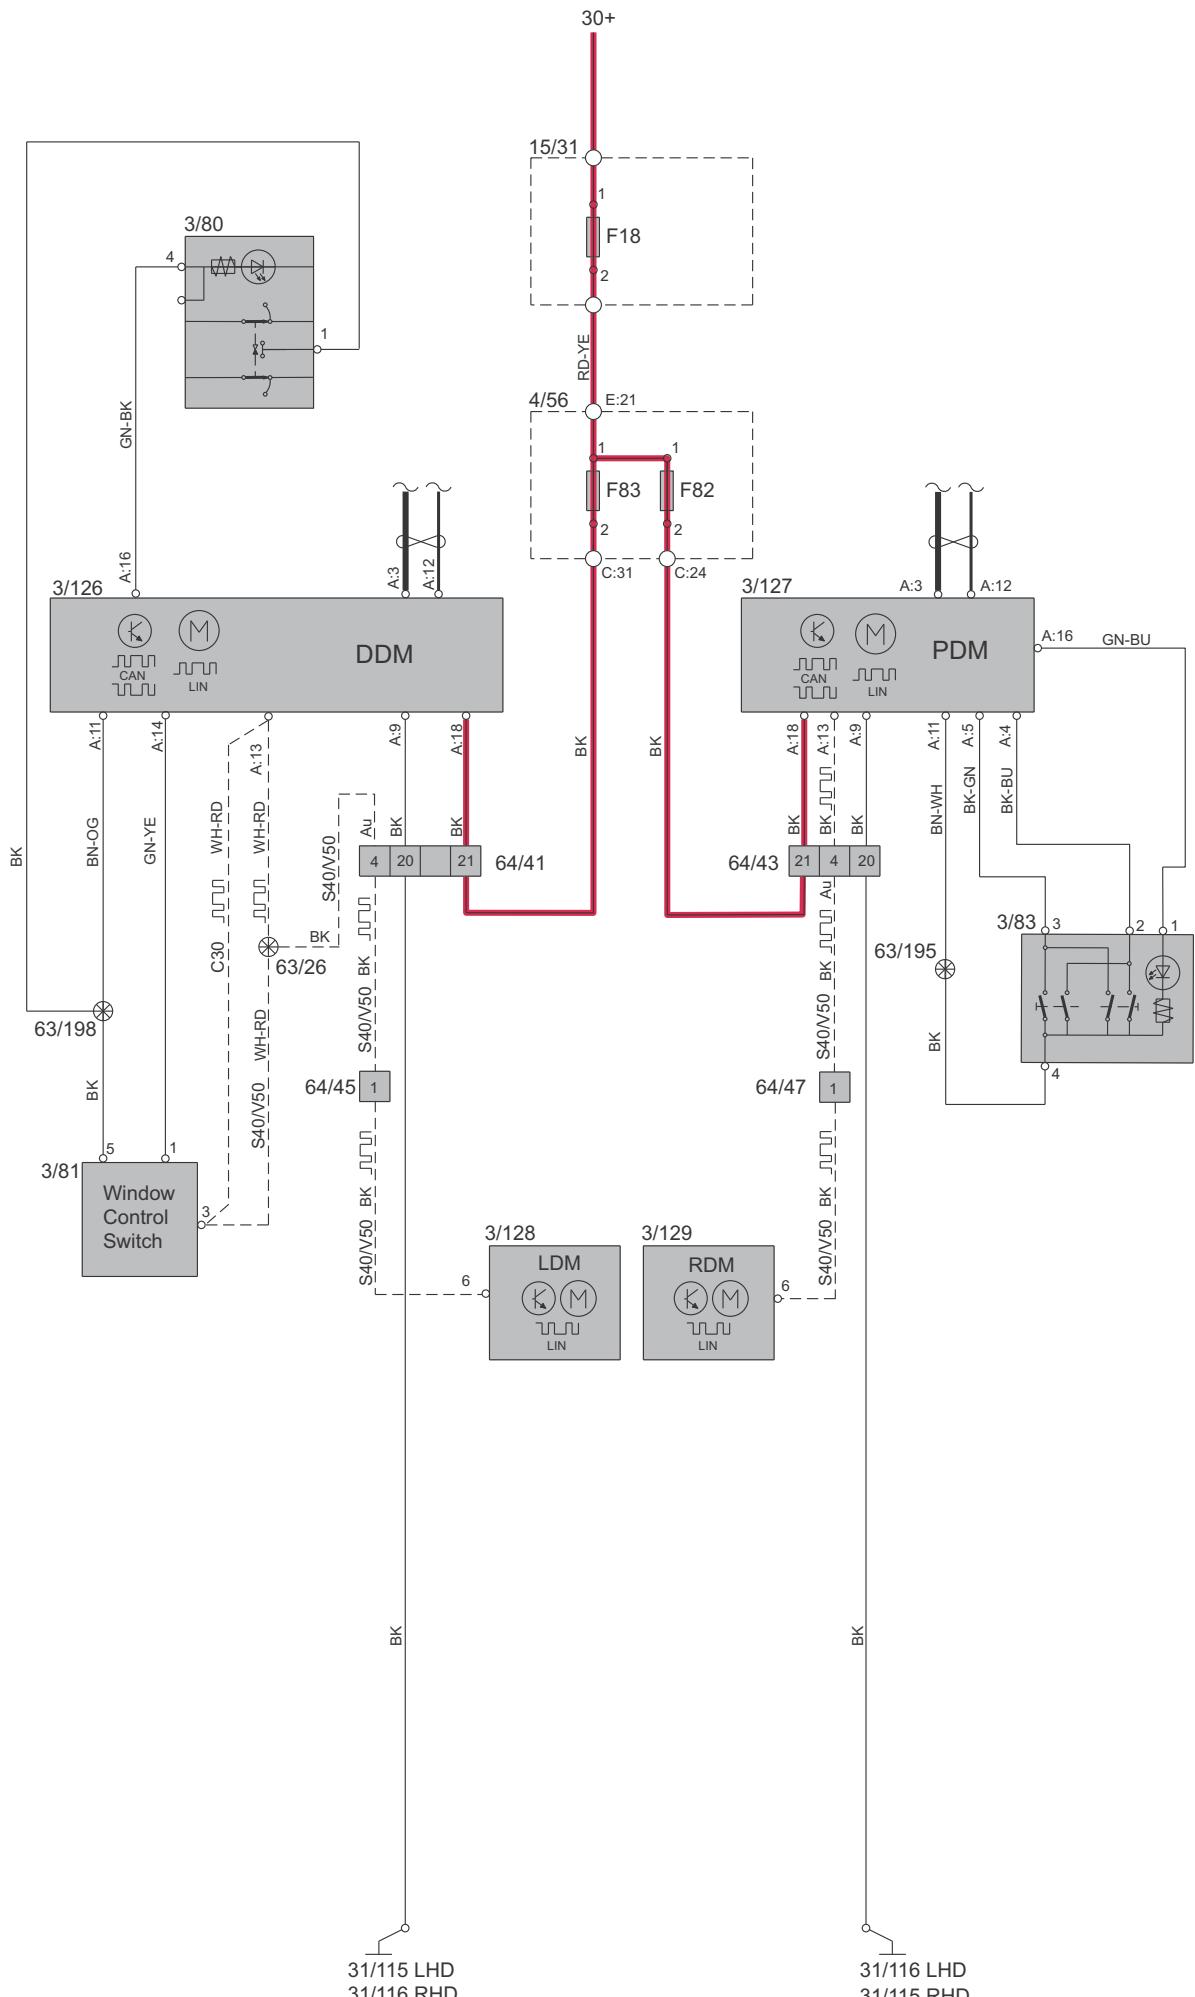

Group 83 Doors and openings


Power windows C70

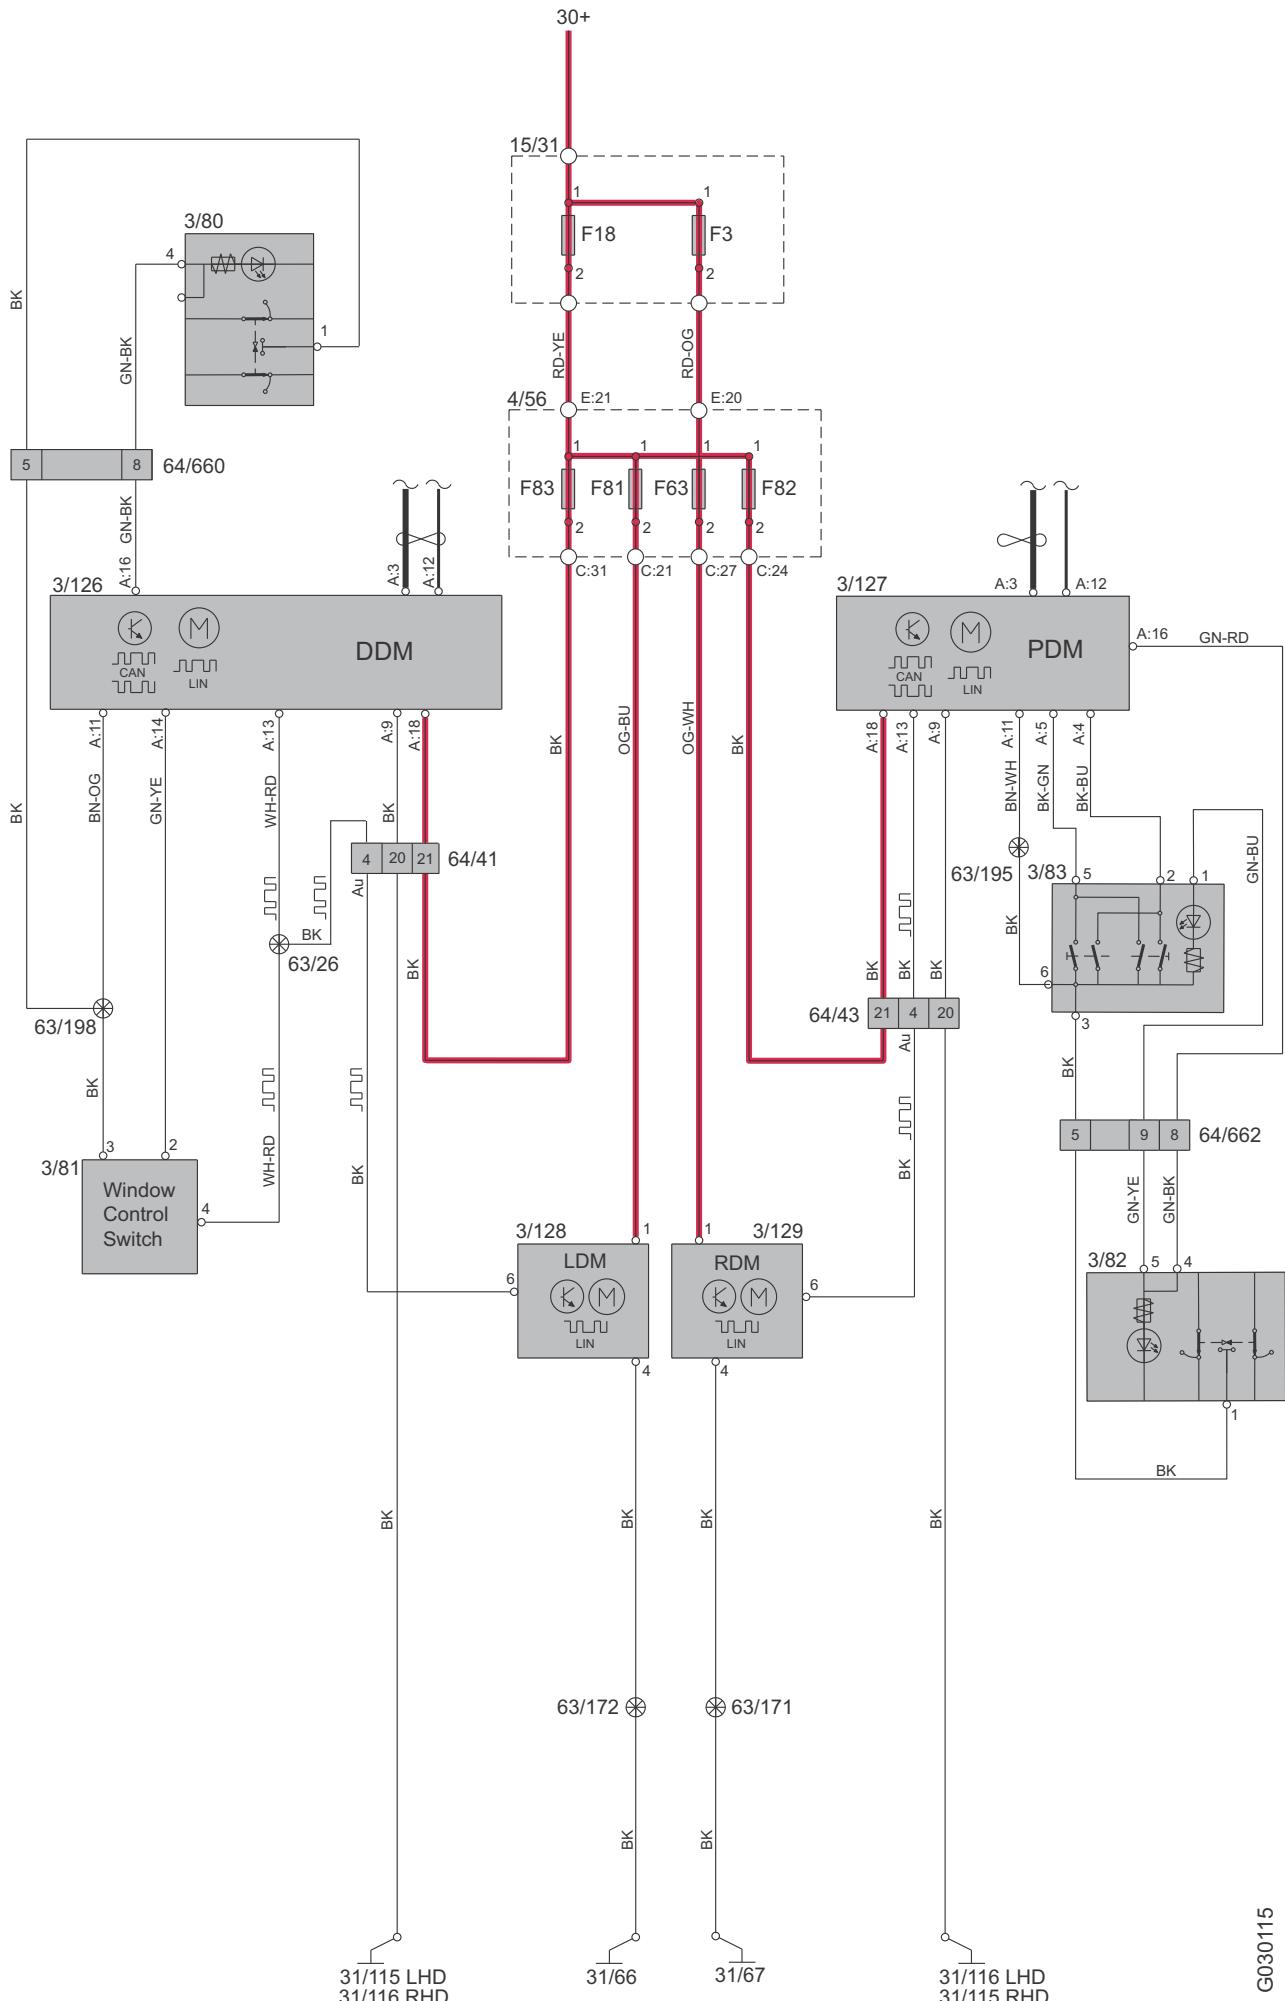

G030115

Group 83 Doors and openings


Power windows rear doors S40/V50

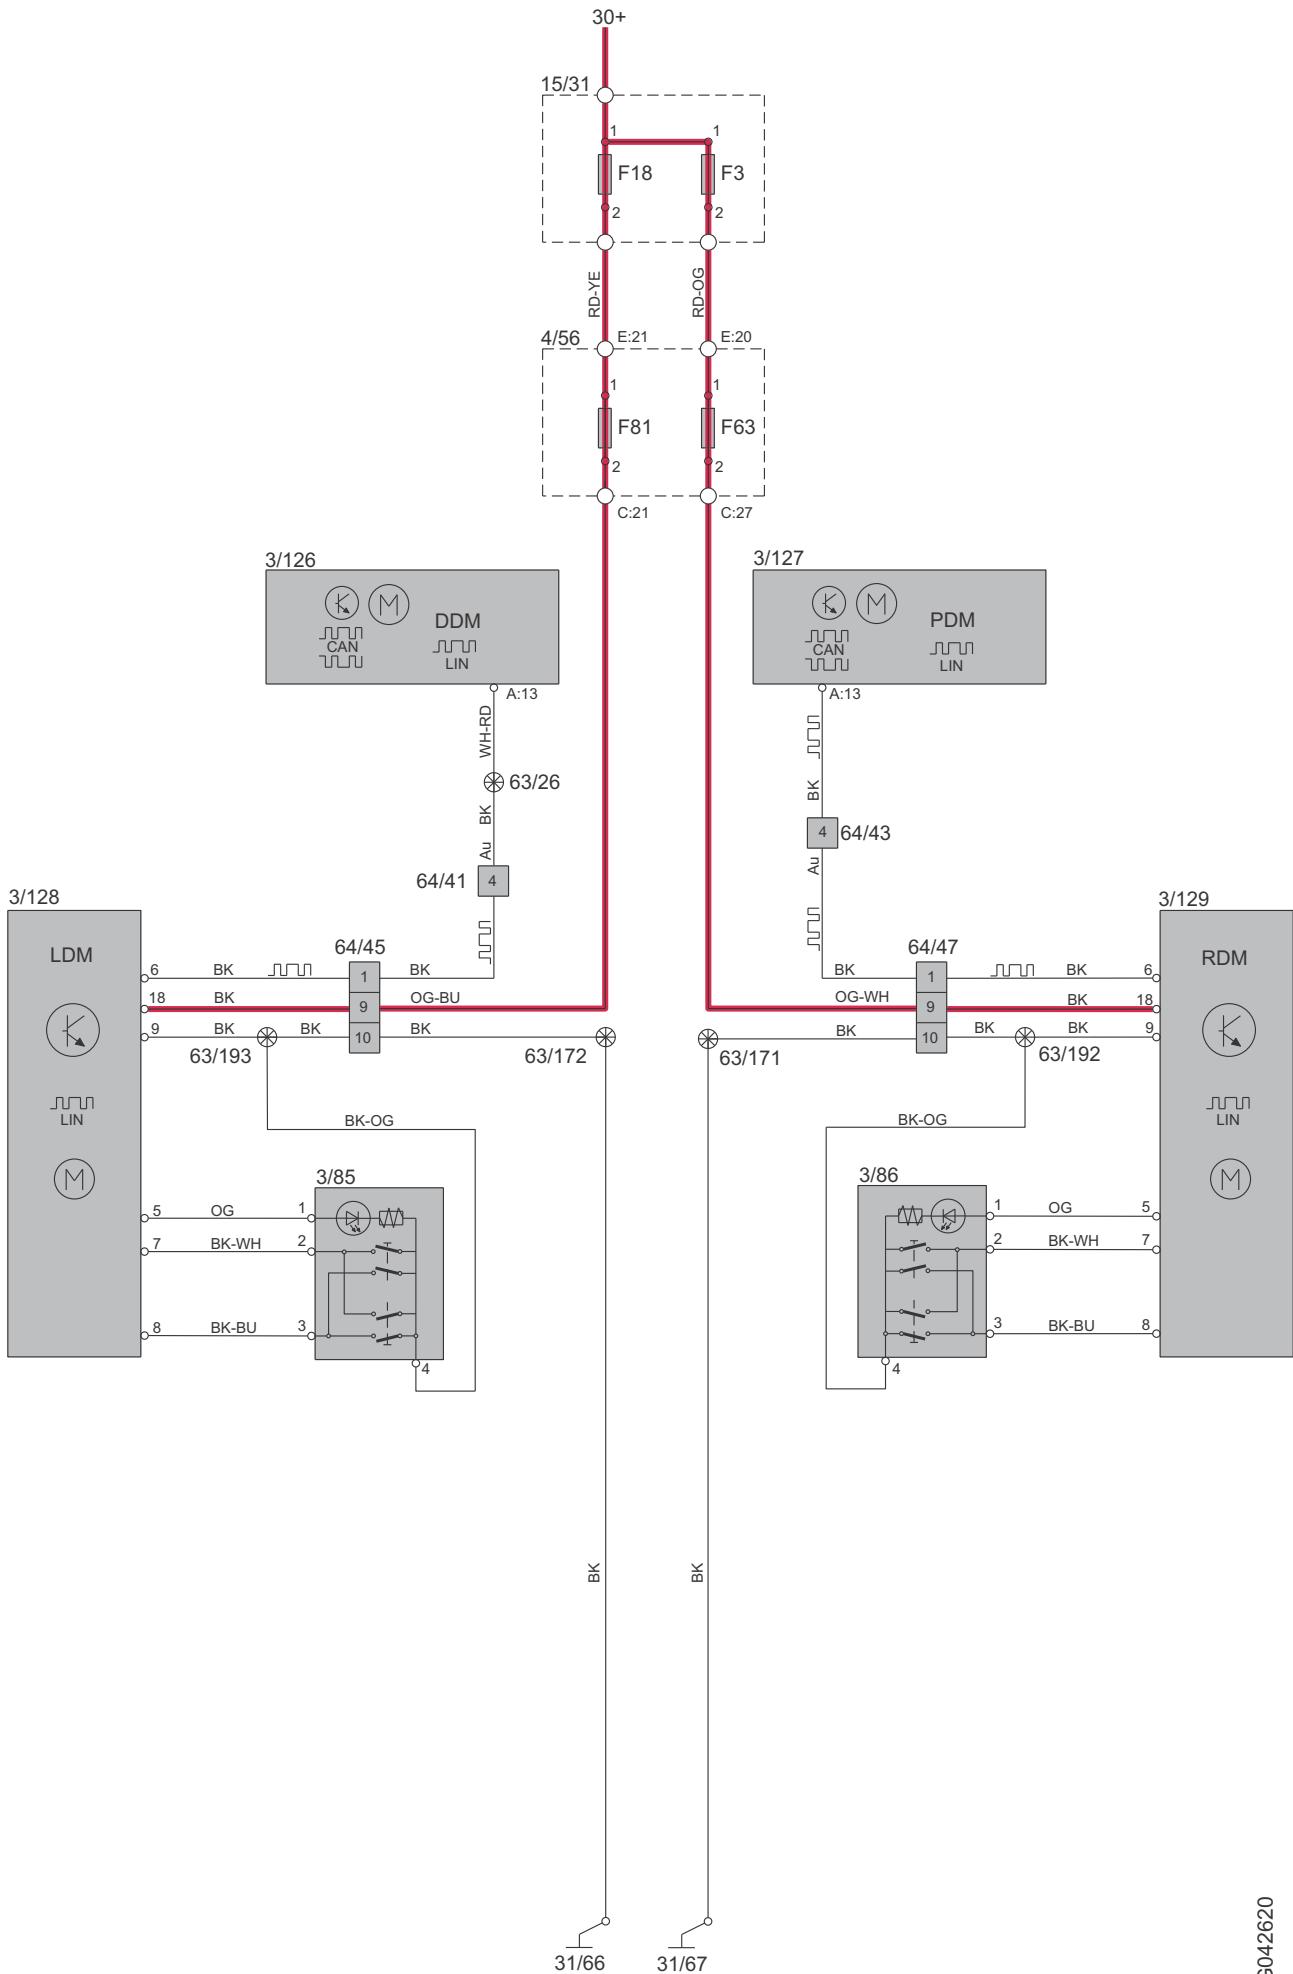

G042620

Group 83 Doors and openings


Power sunroof C30/S40/V50

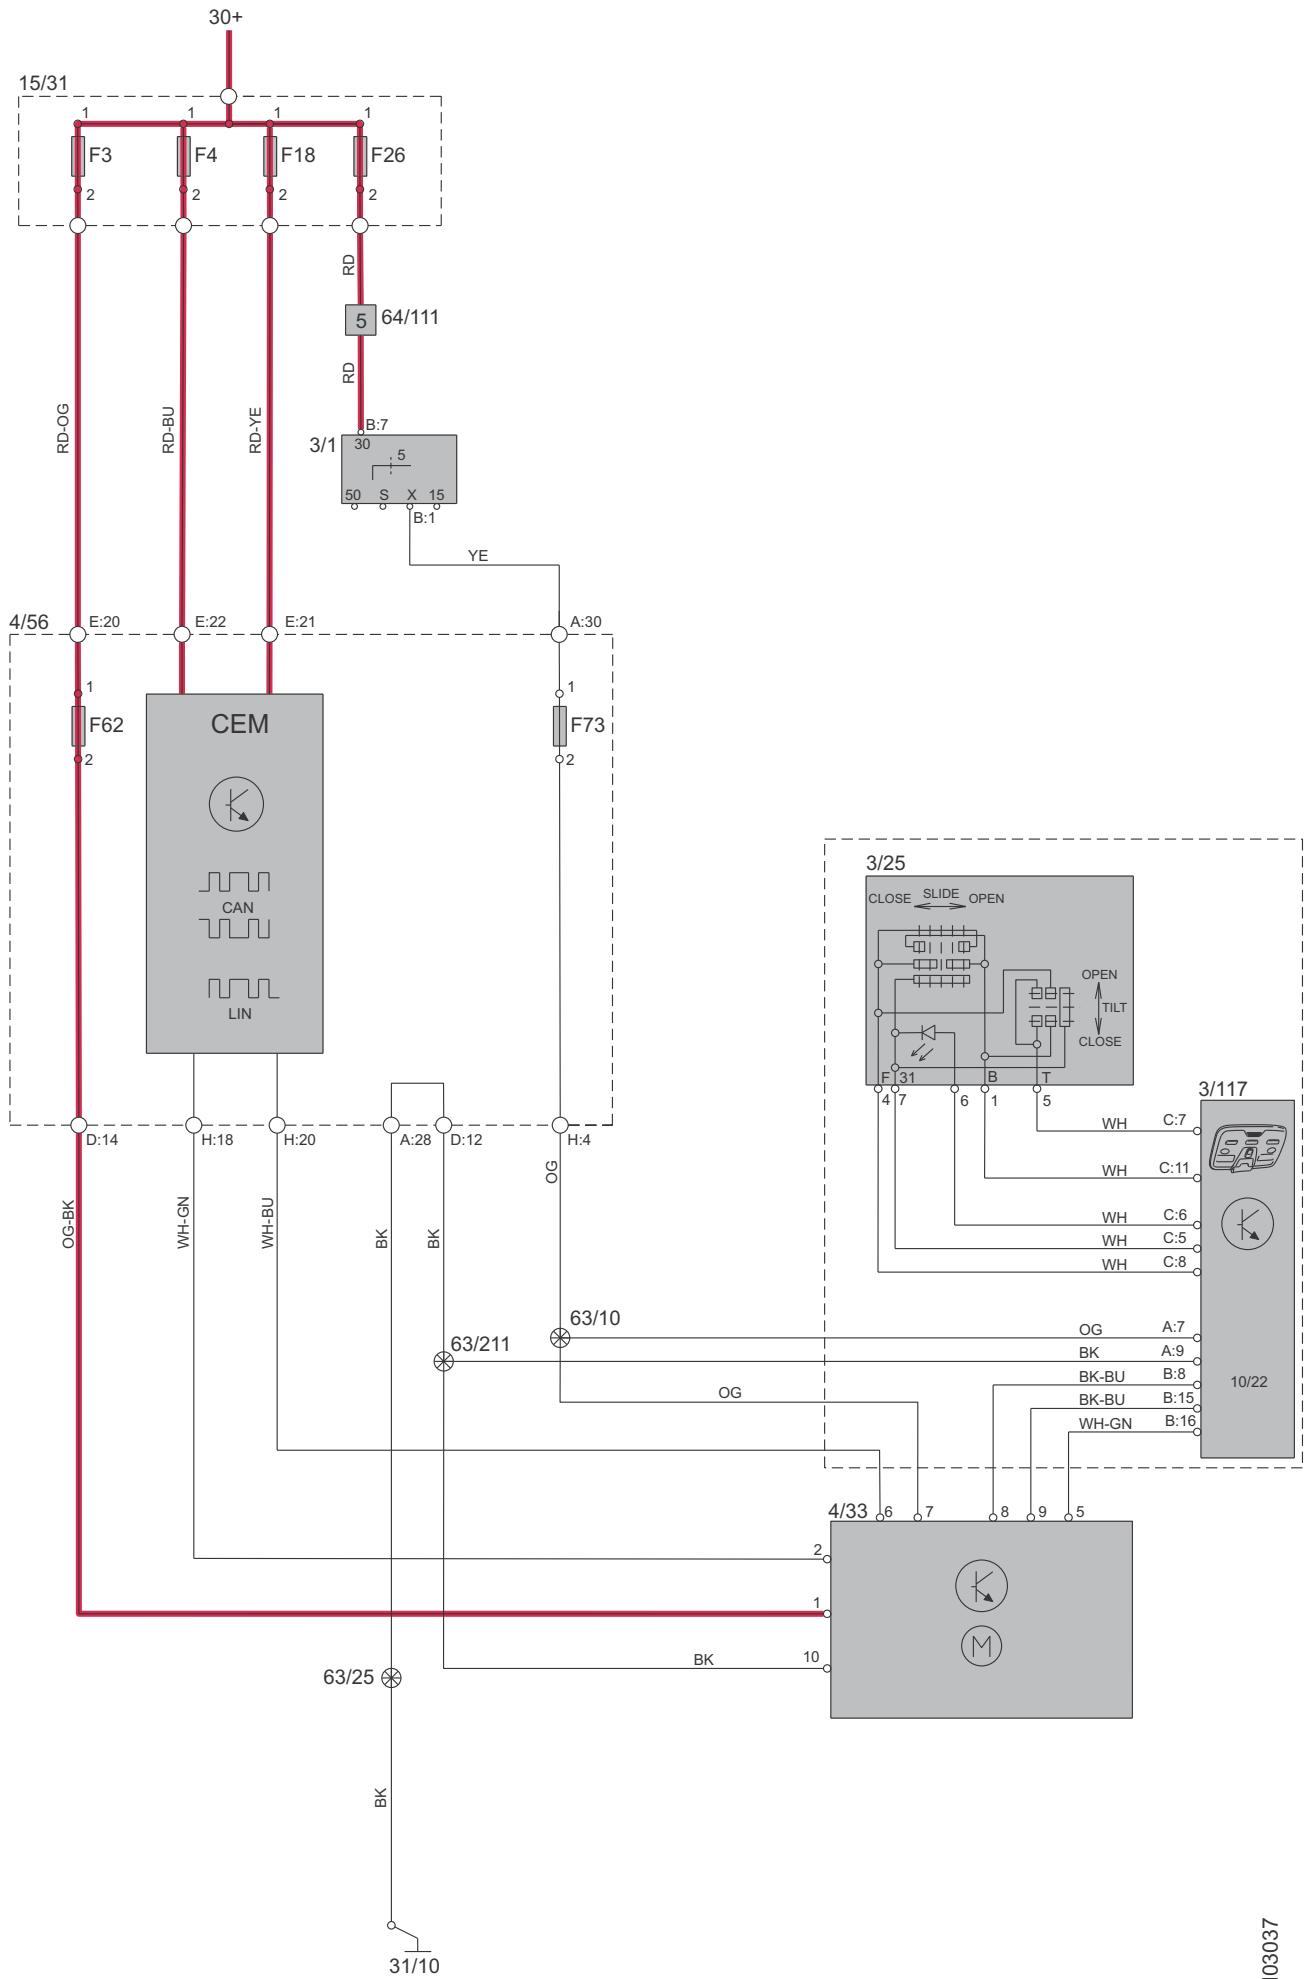

103037


Group 83 Doors and openings

Power roof C70

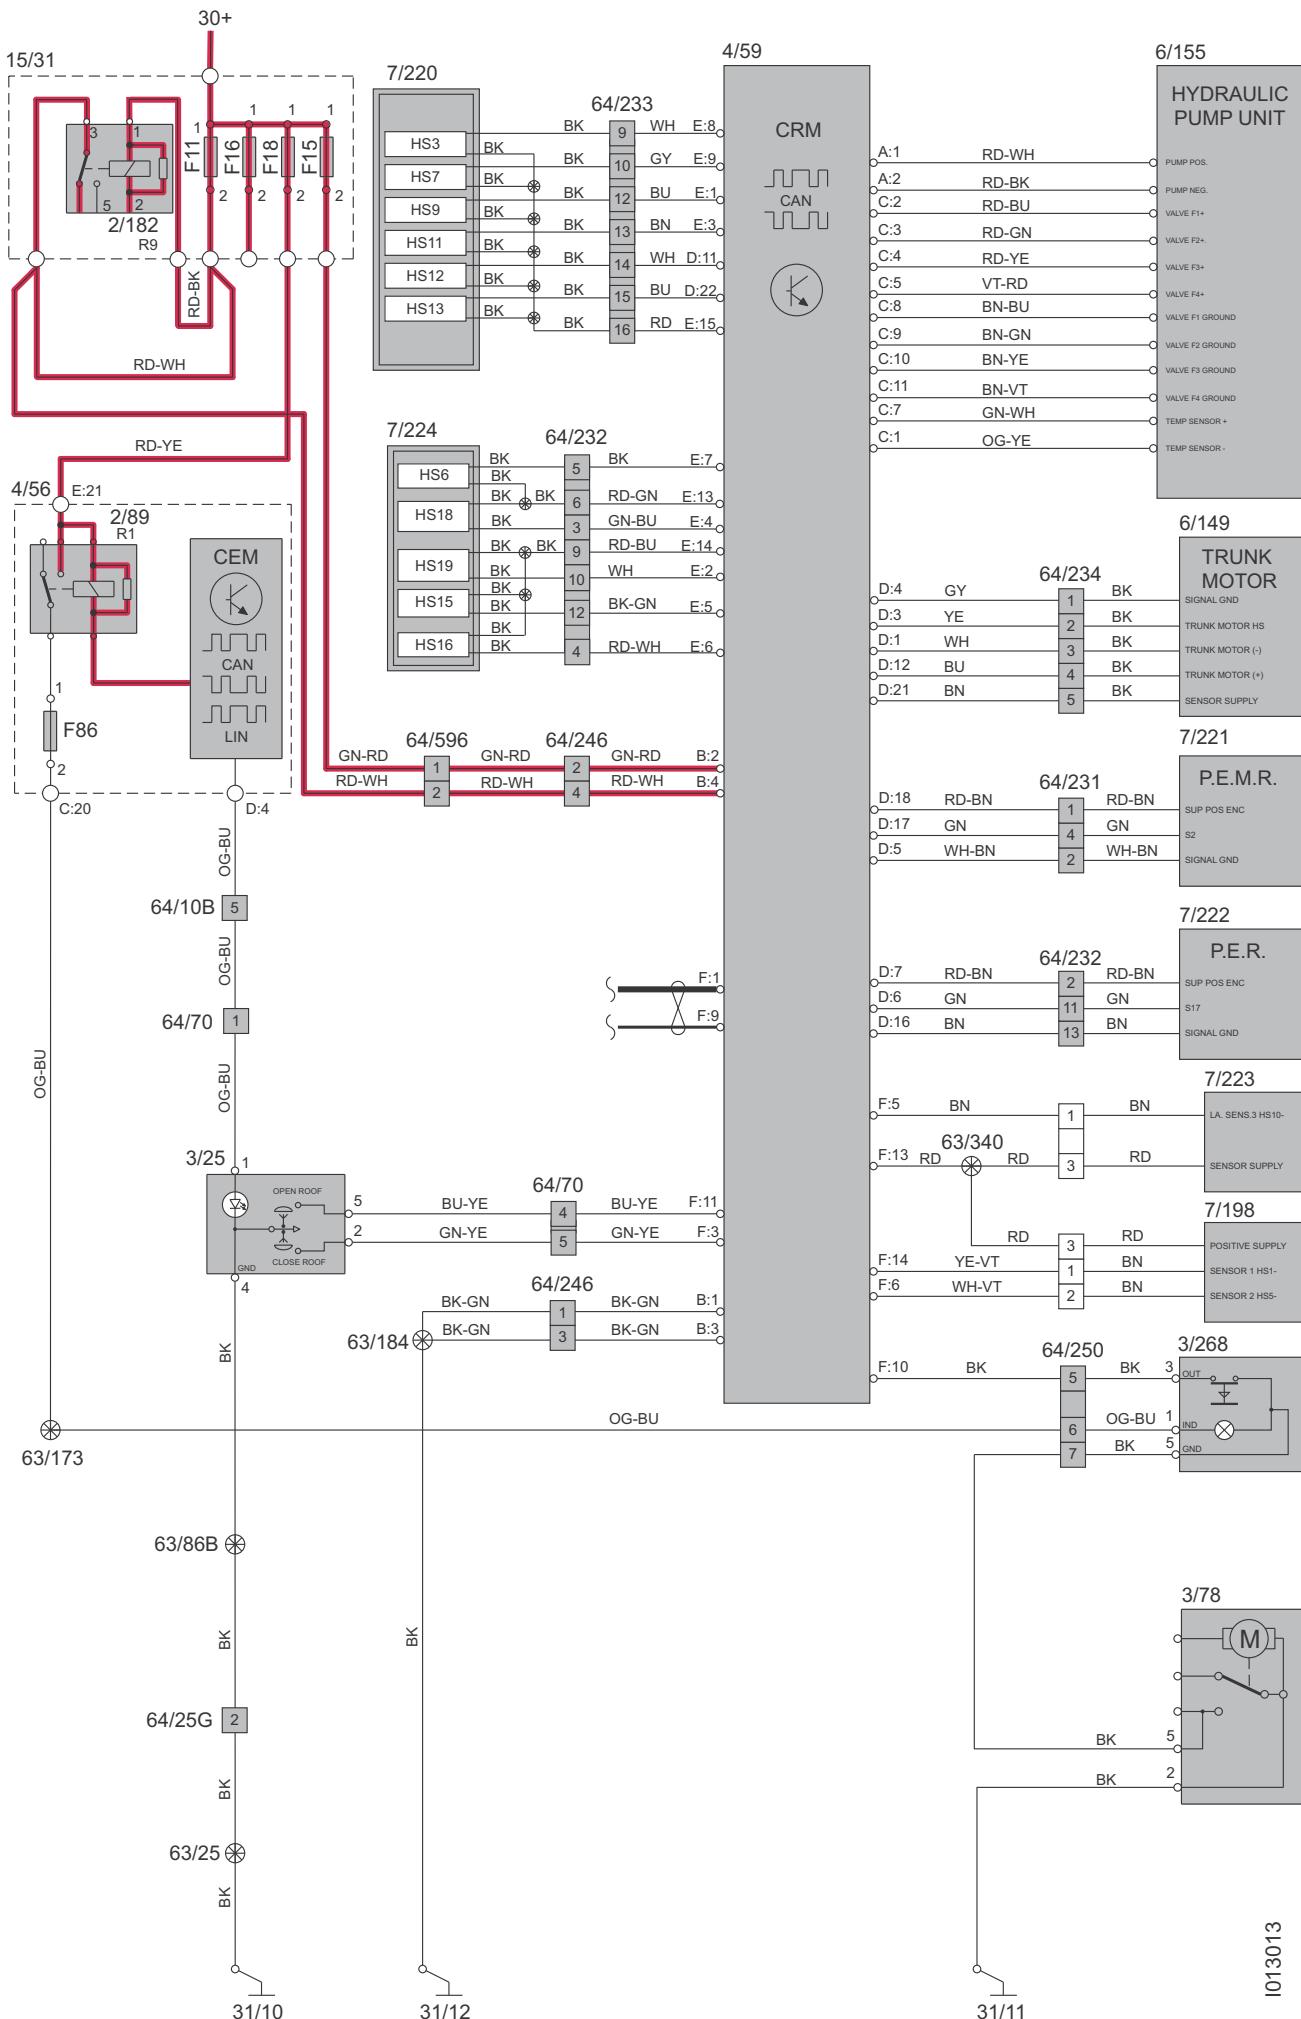


Group 84 Exterior decorative elements, etc.

Power door mirrors C30/S40/V50

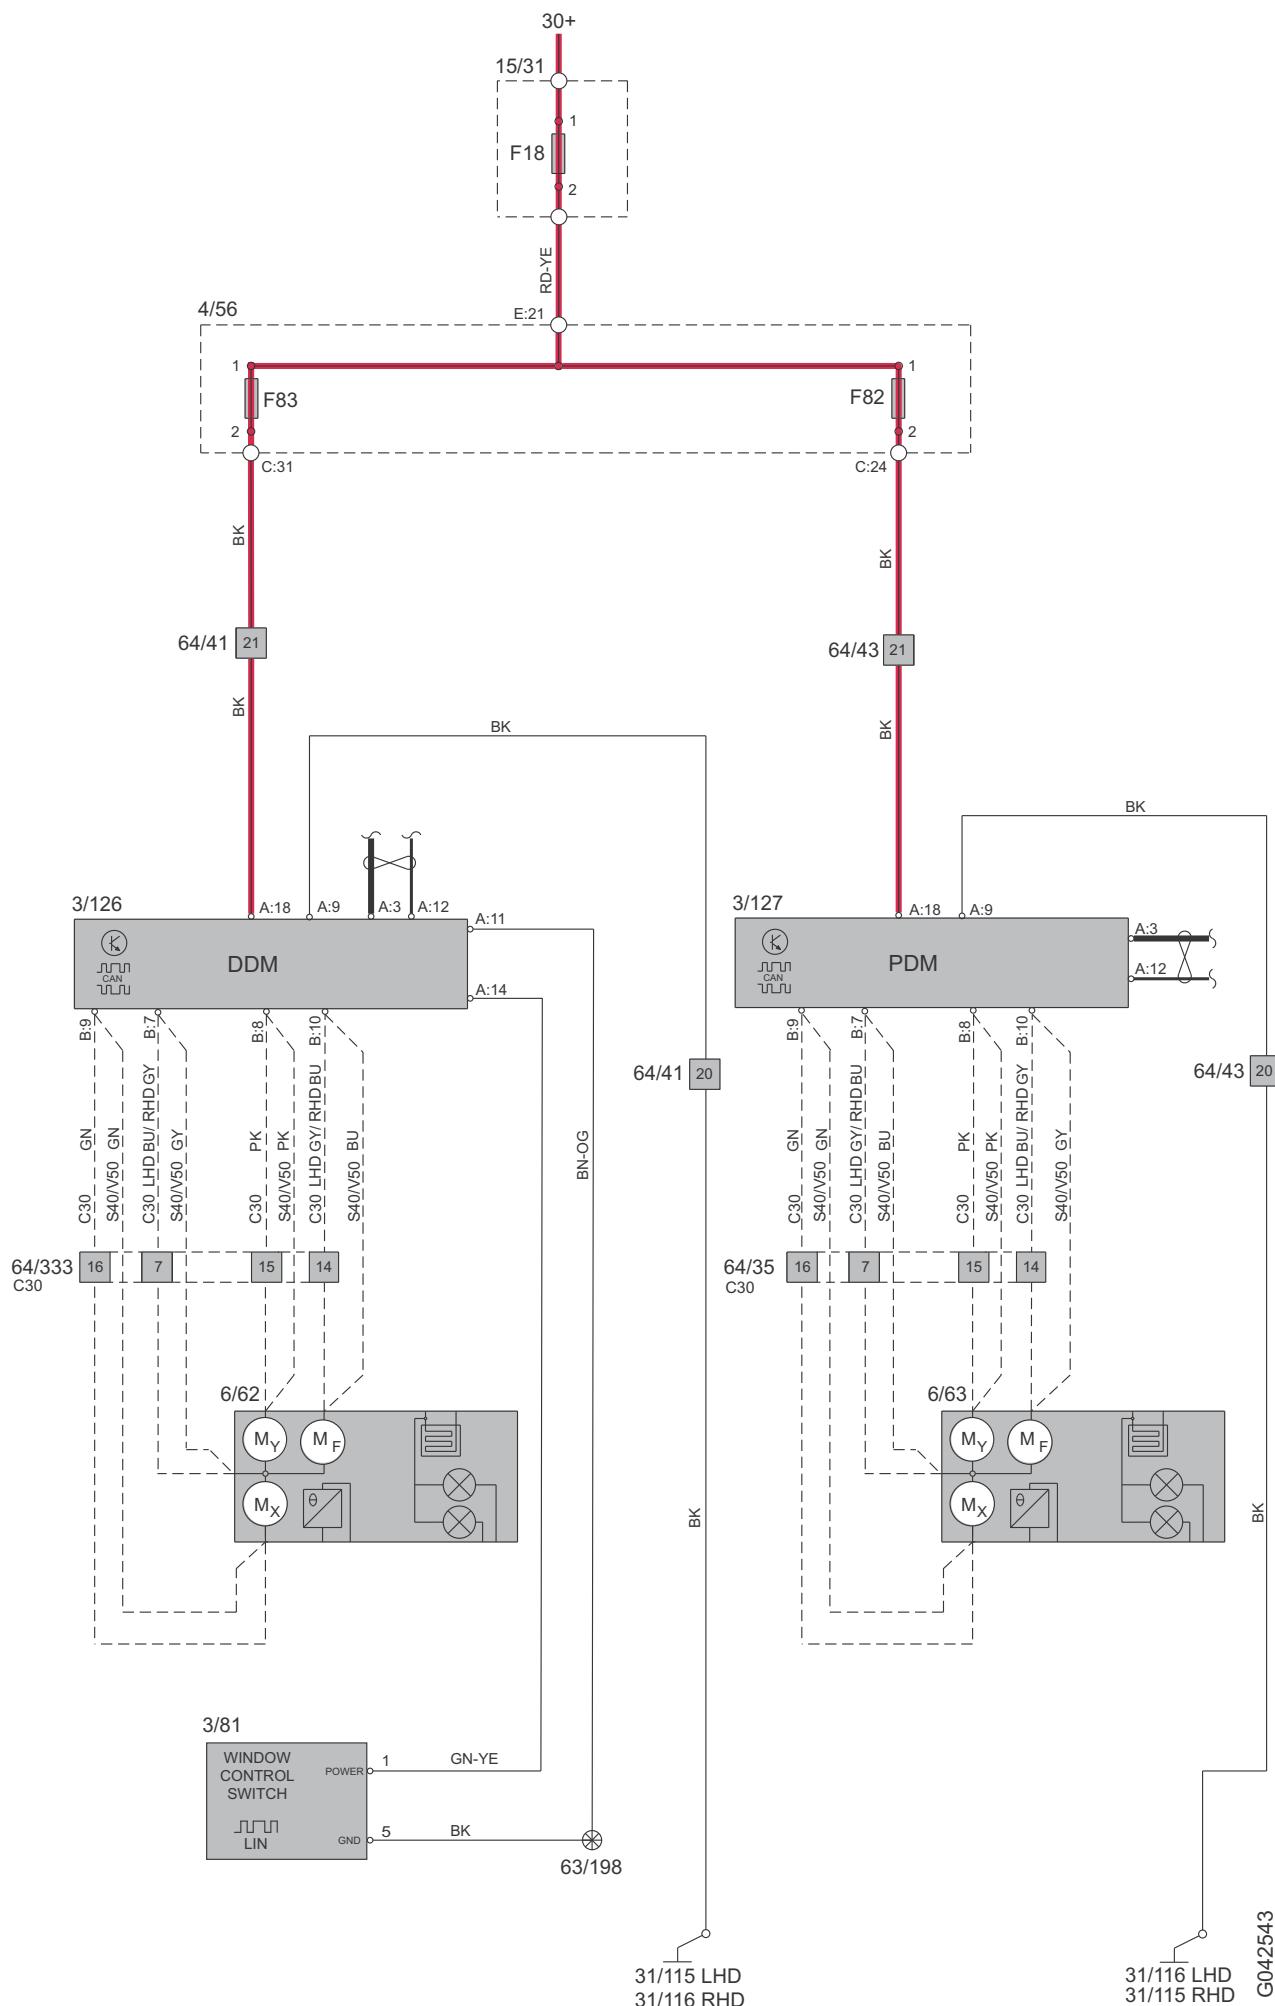


Group 84 Exterior decorative elements, etc.

Power door mirrors C70

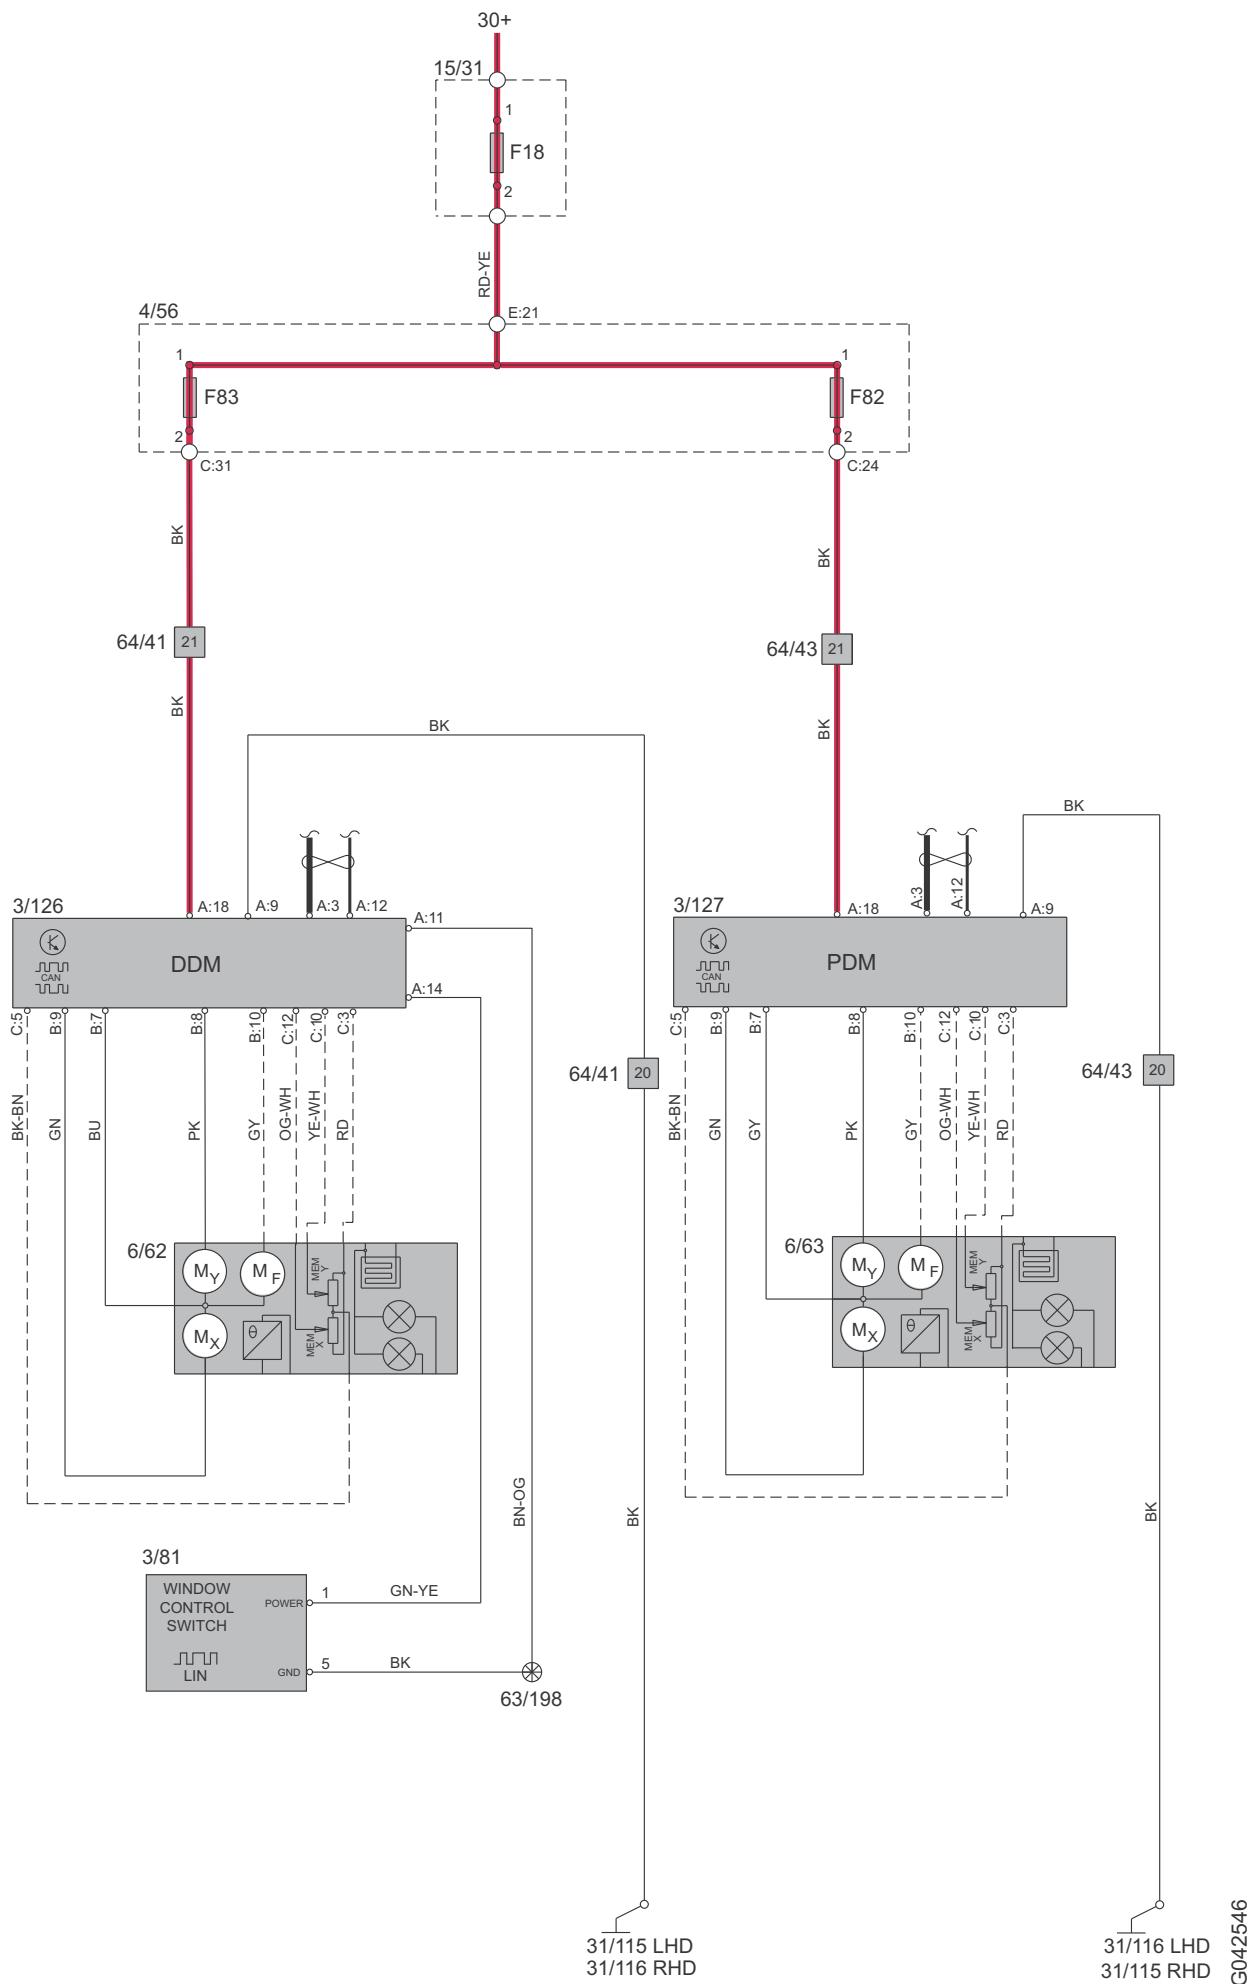

Group 84 Exterior decorative elements, etc.


Heated door mirrors

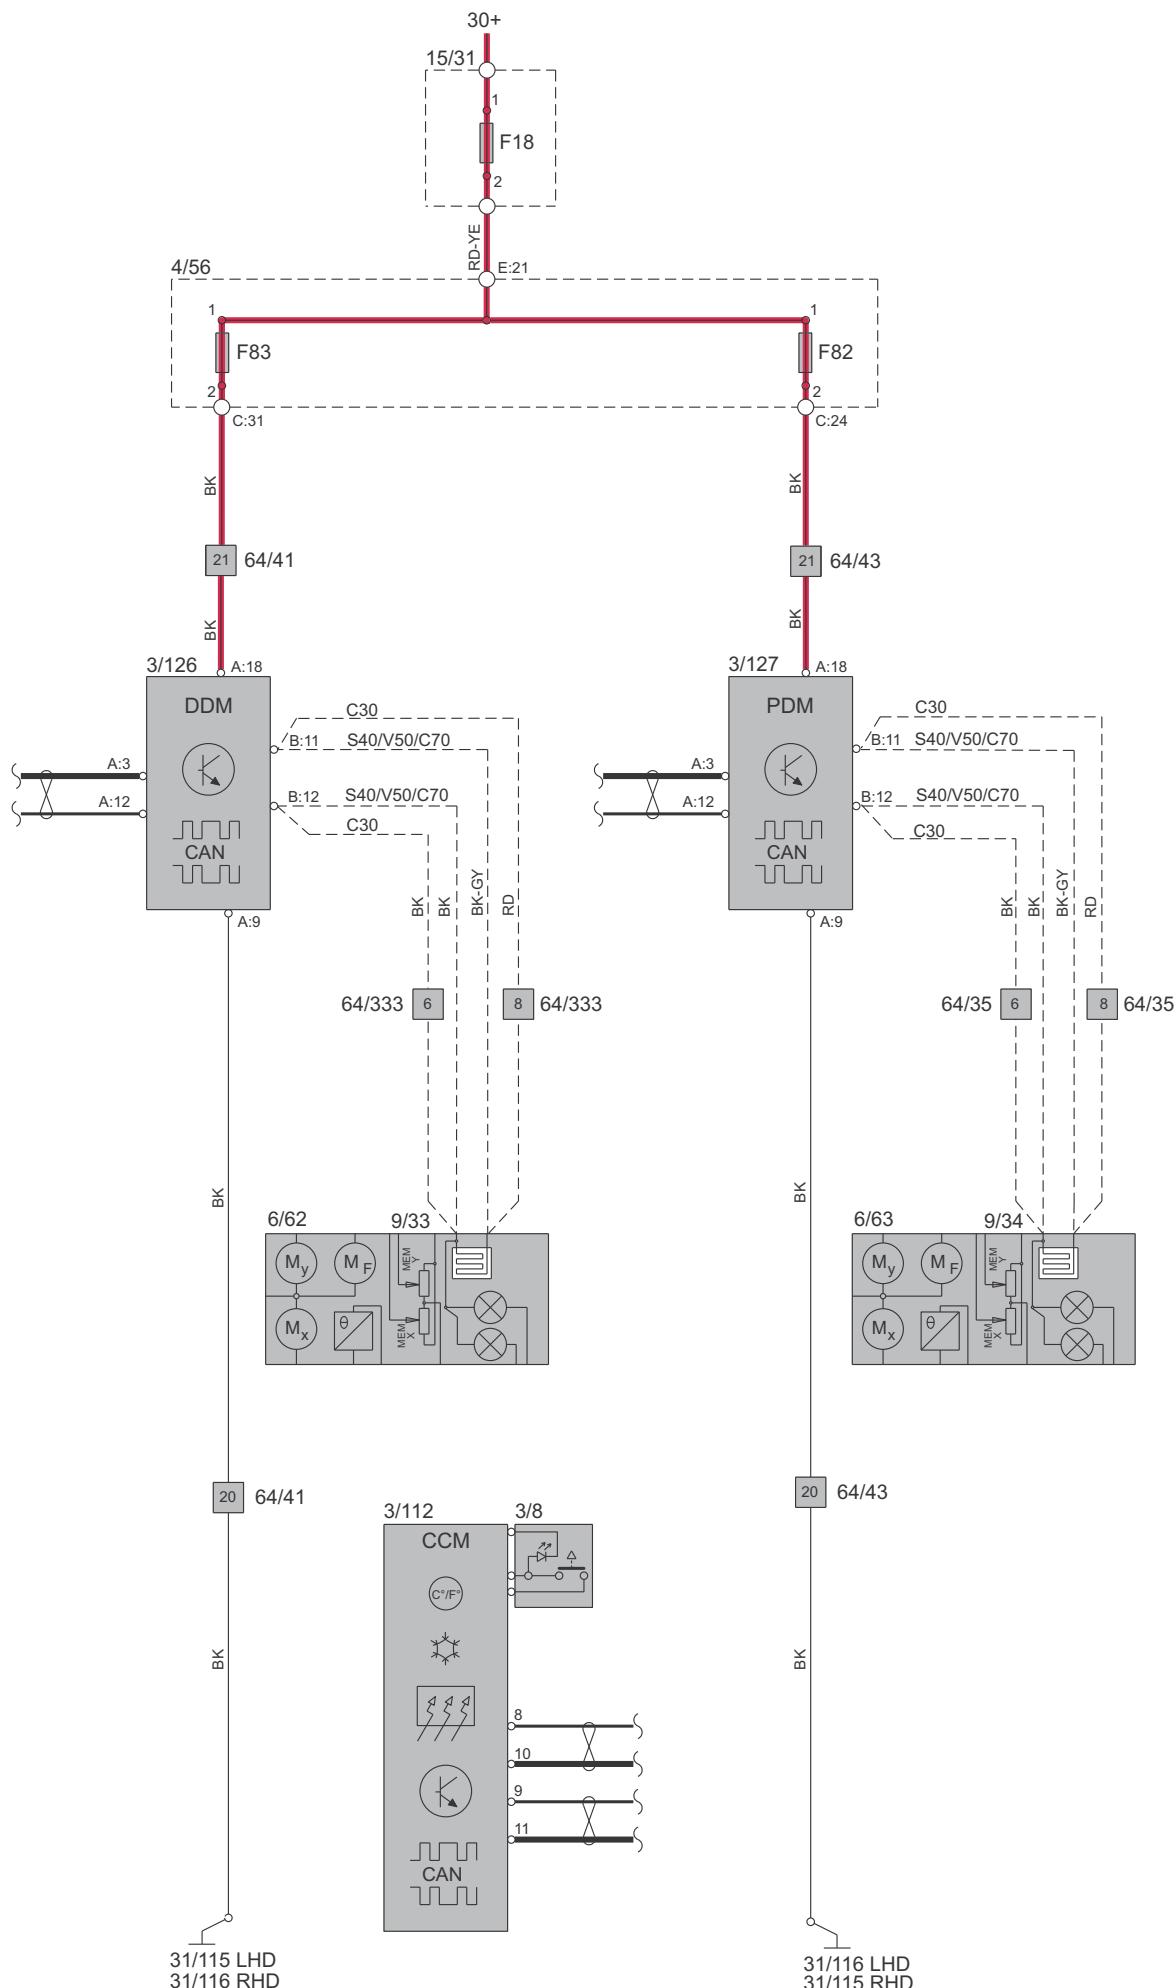

G030127

Group 84 Exterior decorative elements, etc.


Heated rear window

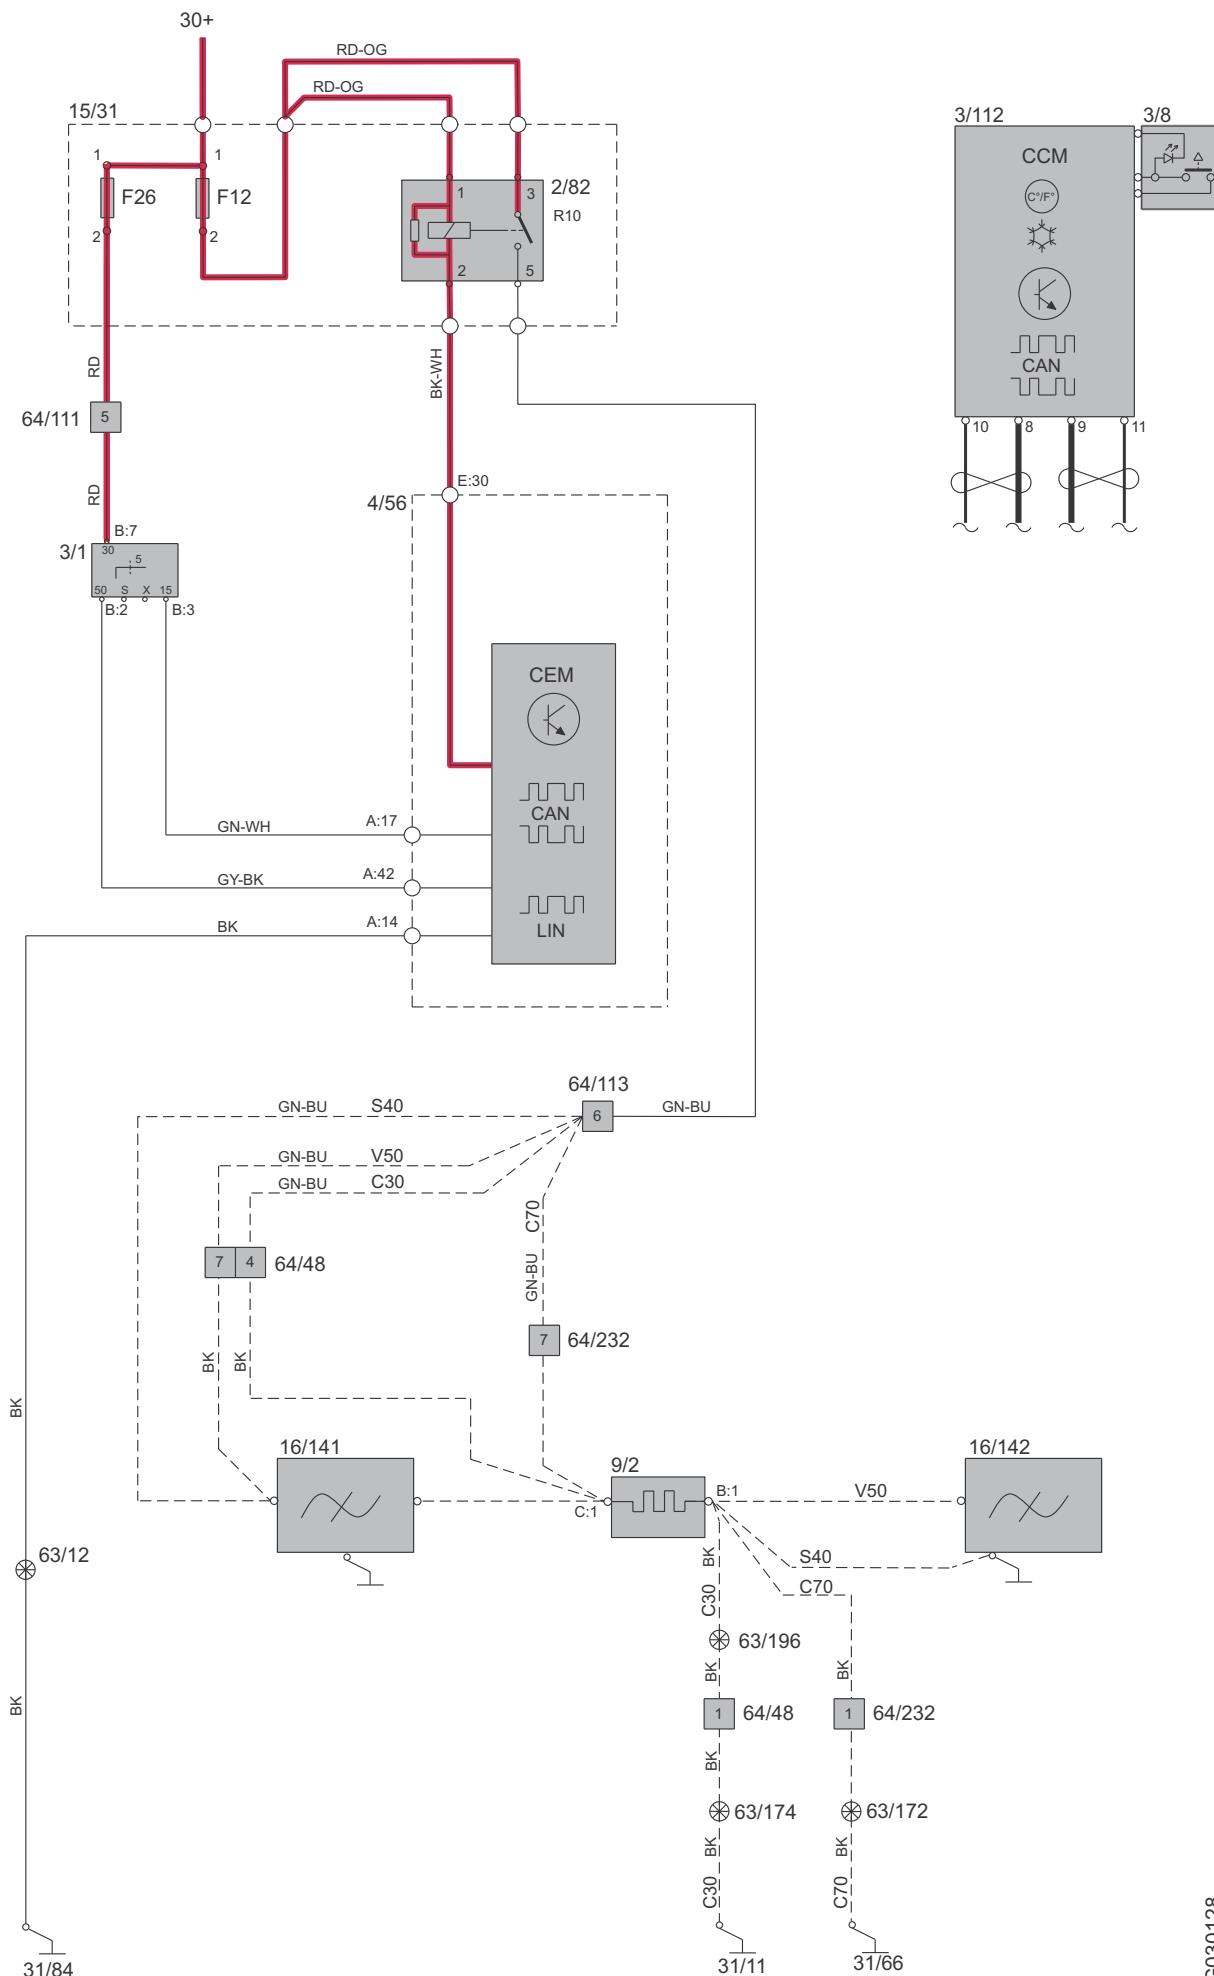

G030128

Group 84 Exterior decorative elements, etc.


Blind spot information system

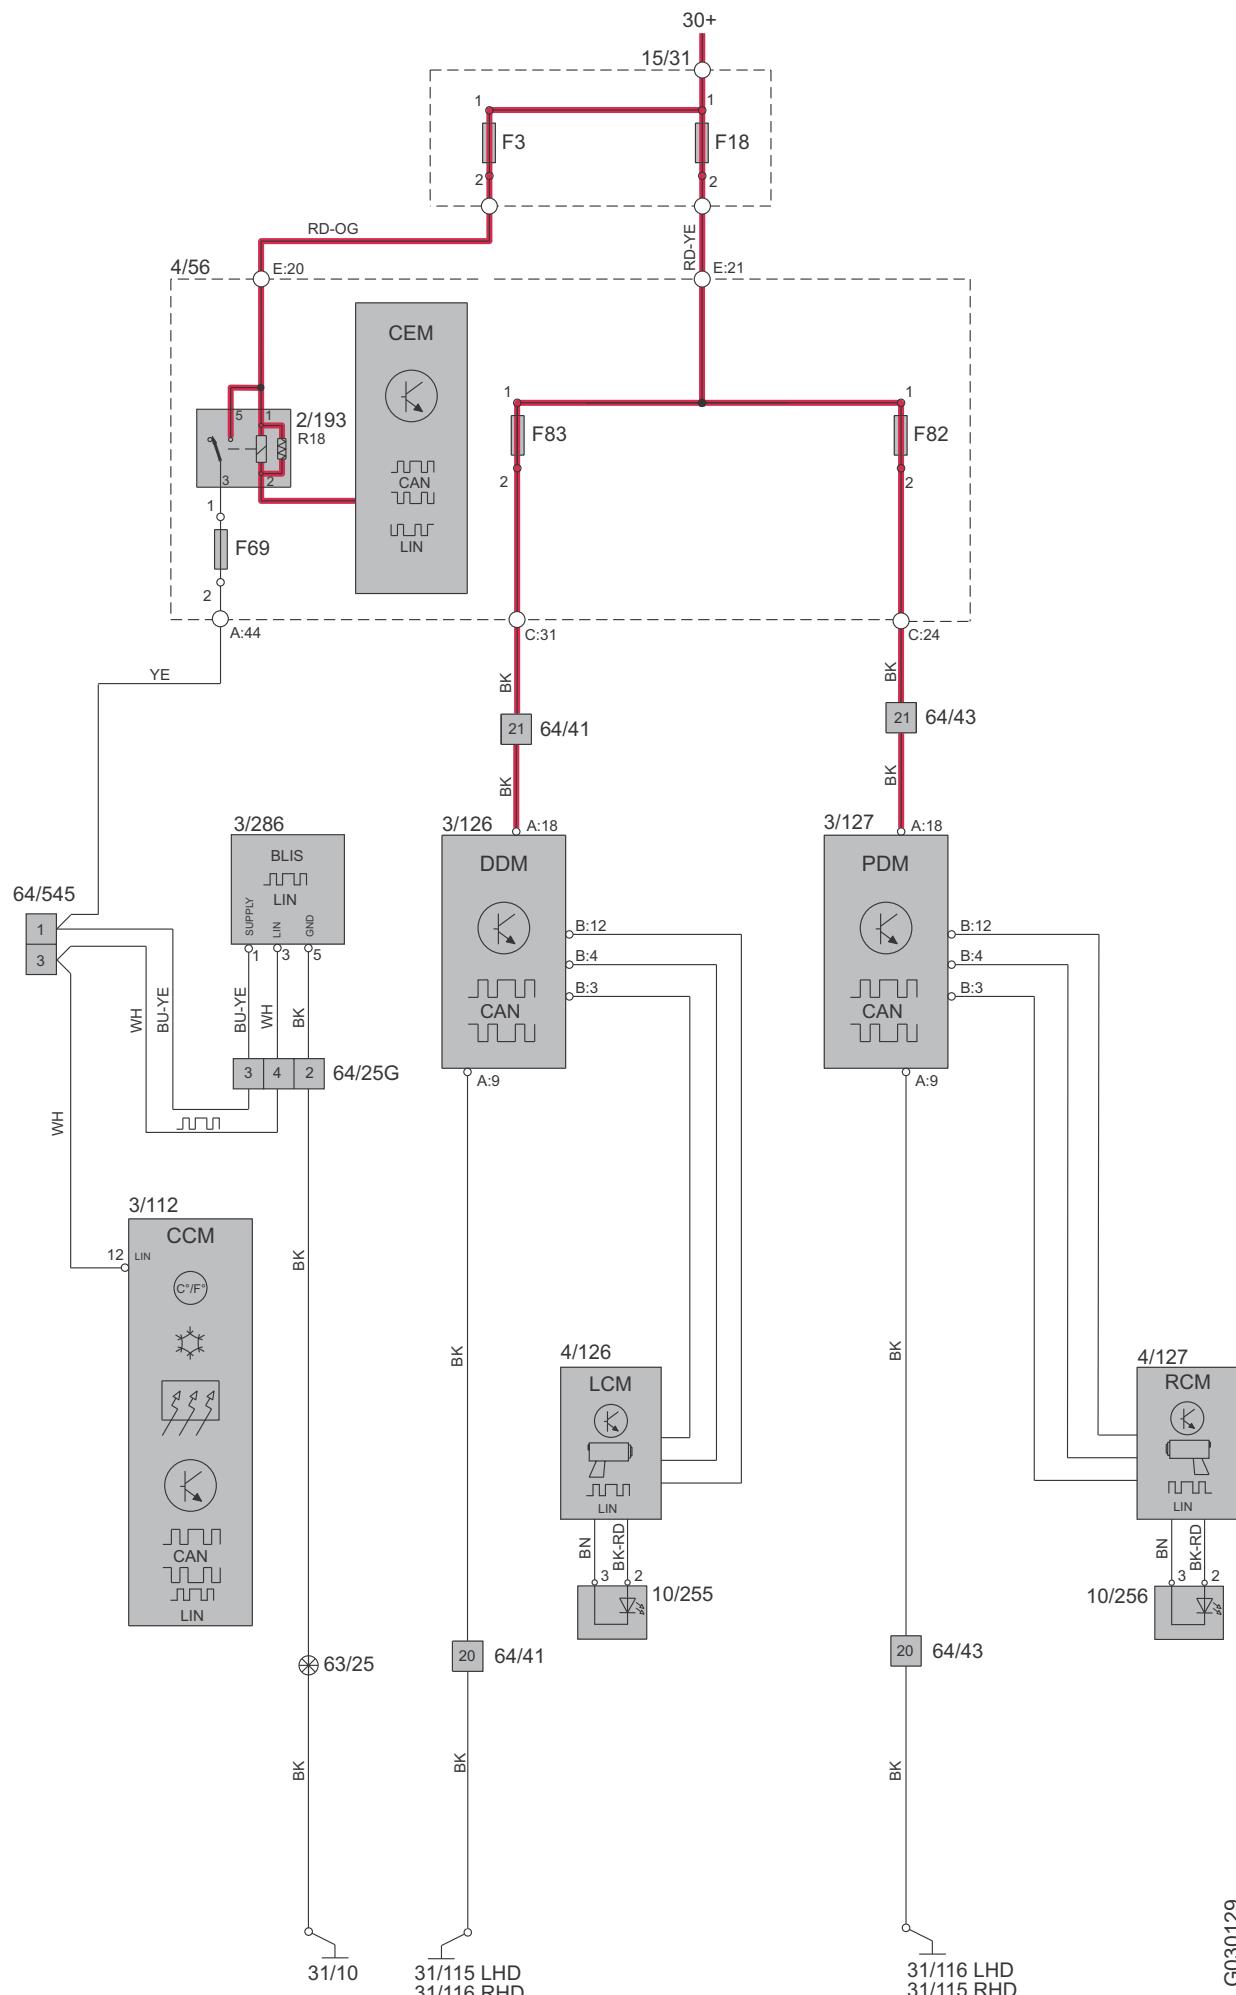

G030129


Group 85 Interior equipment

Power driver's seat with memory function LHD S40/V50

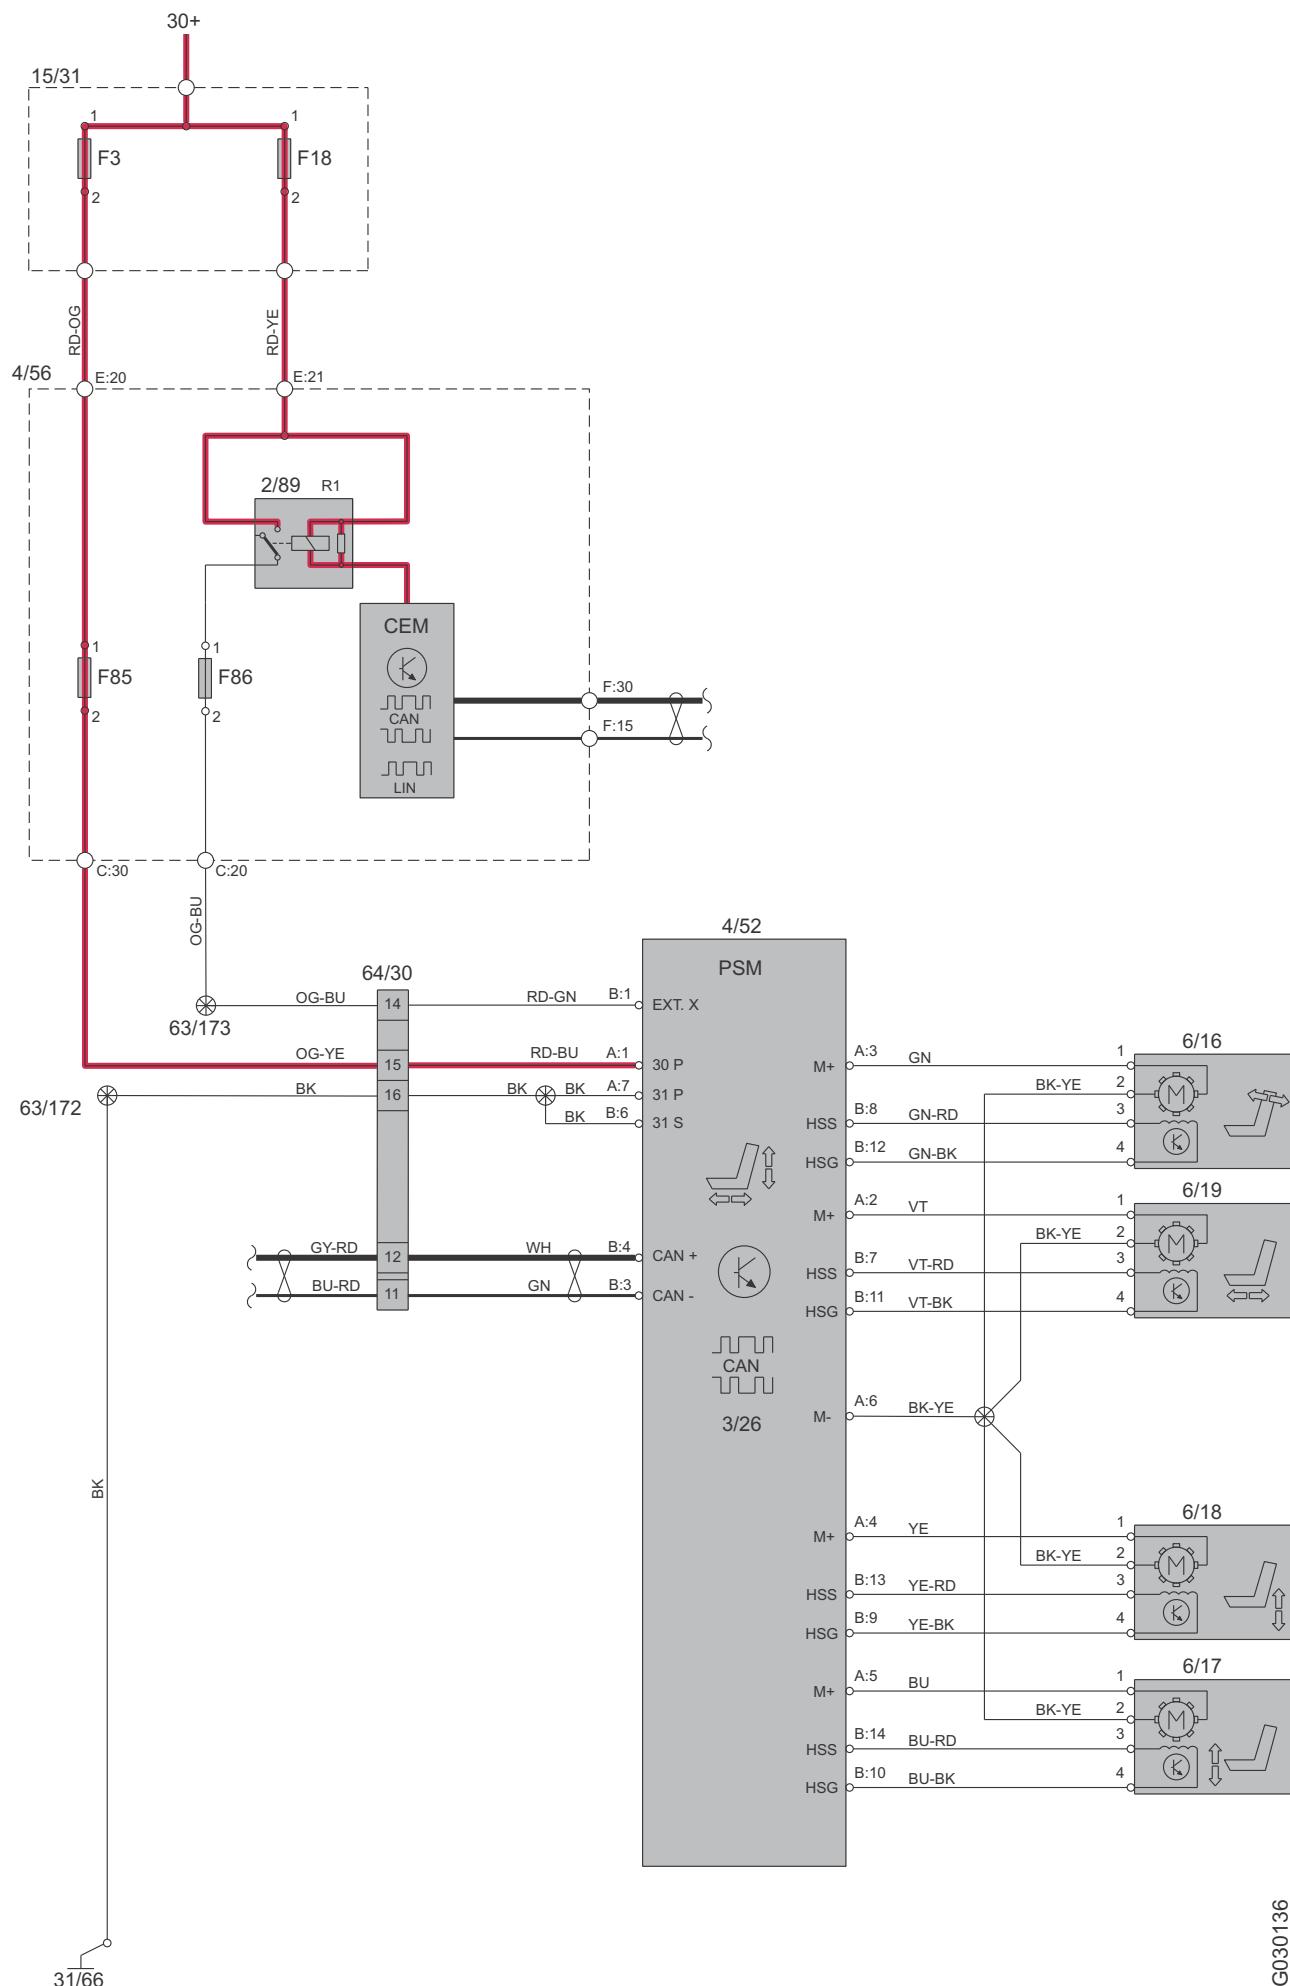


Group 85 Interior equipment

Power driver's seat with memory function RHD S40/V50

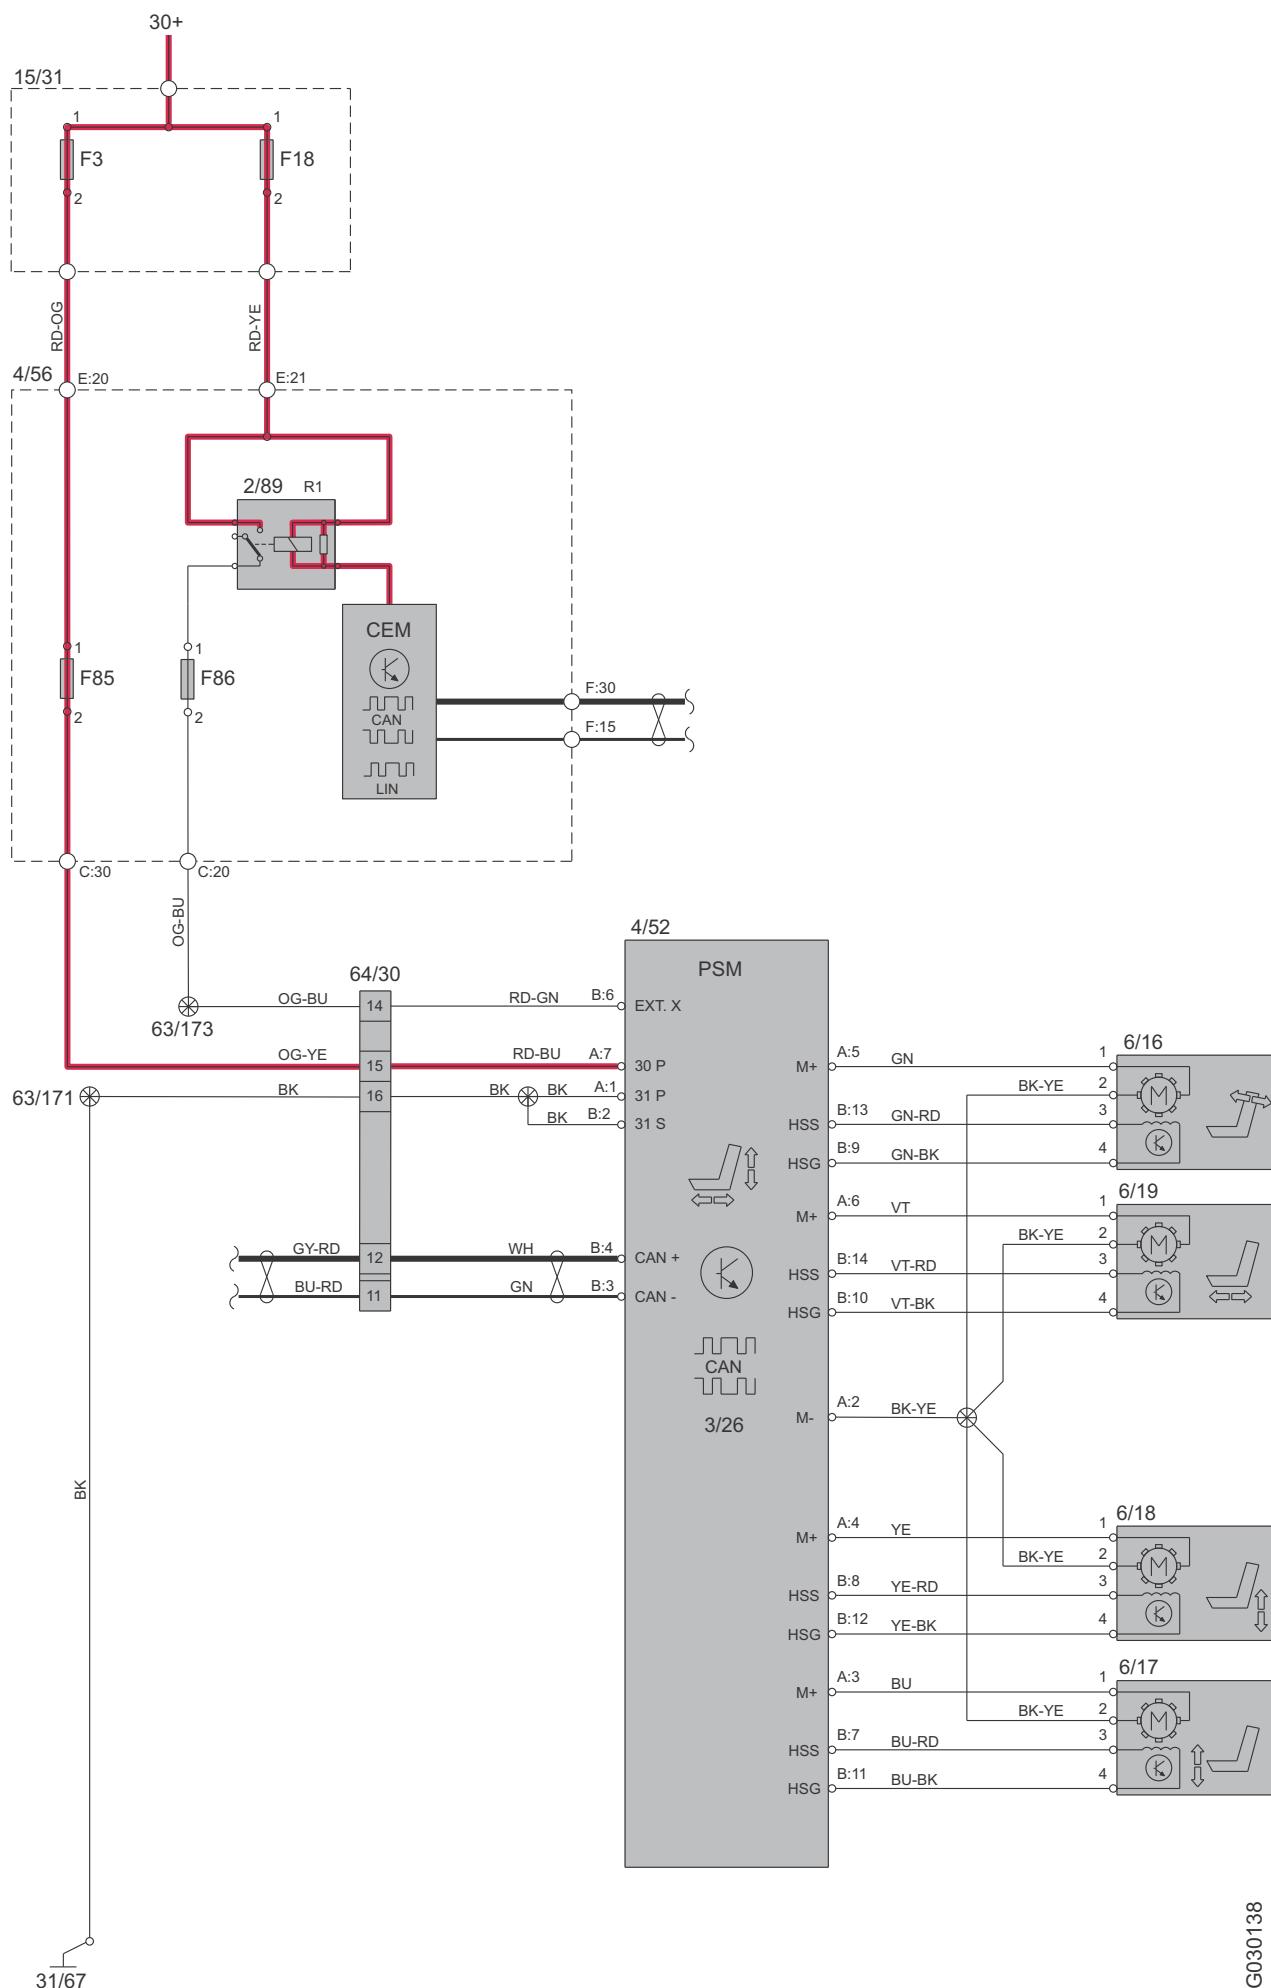


Group 85 Interior equipment

Power driver's seat with memory function LHD C30/C70

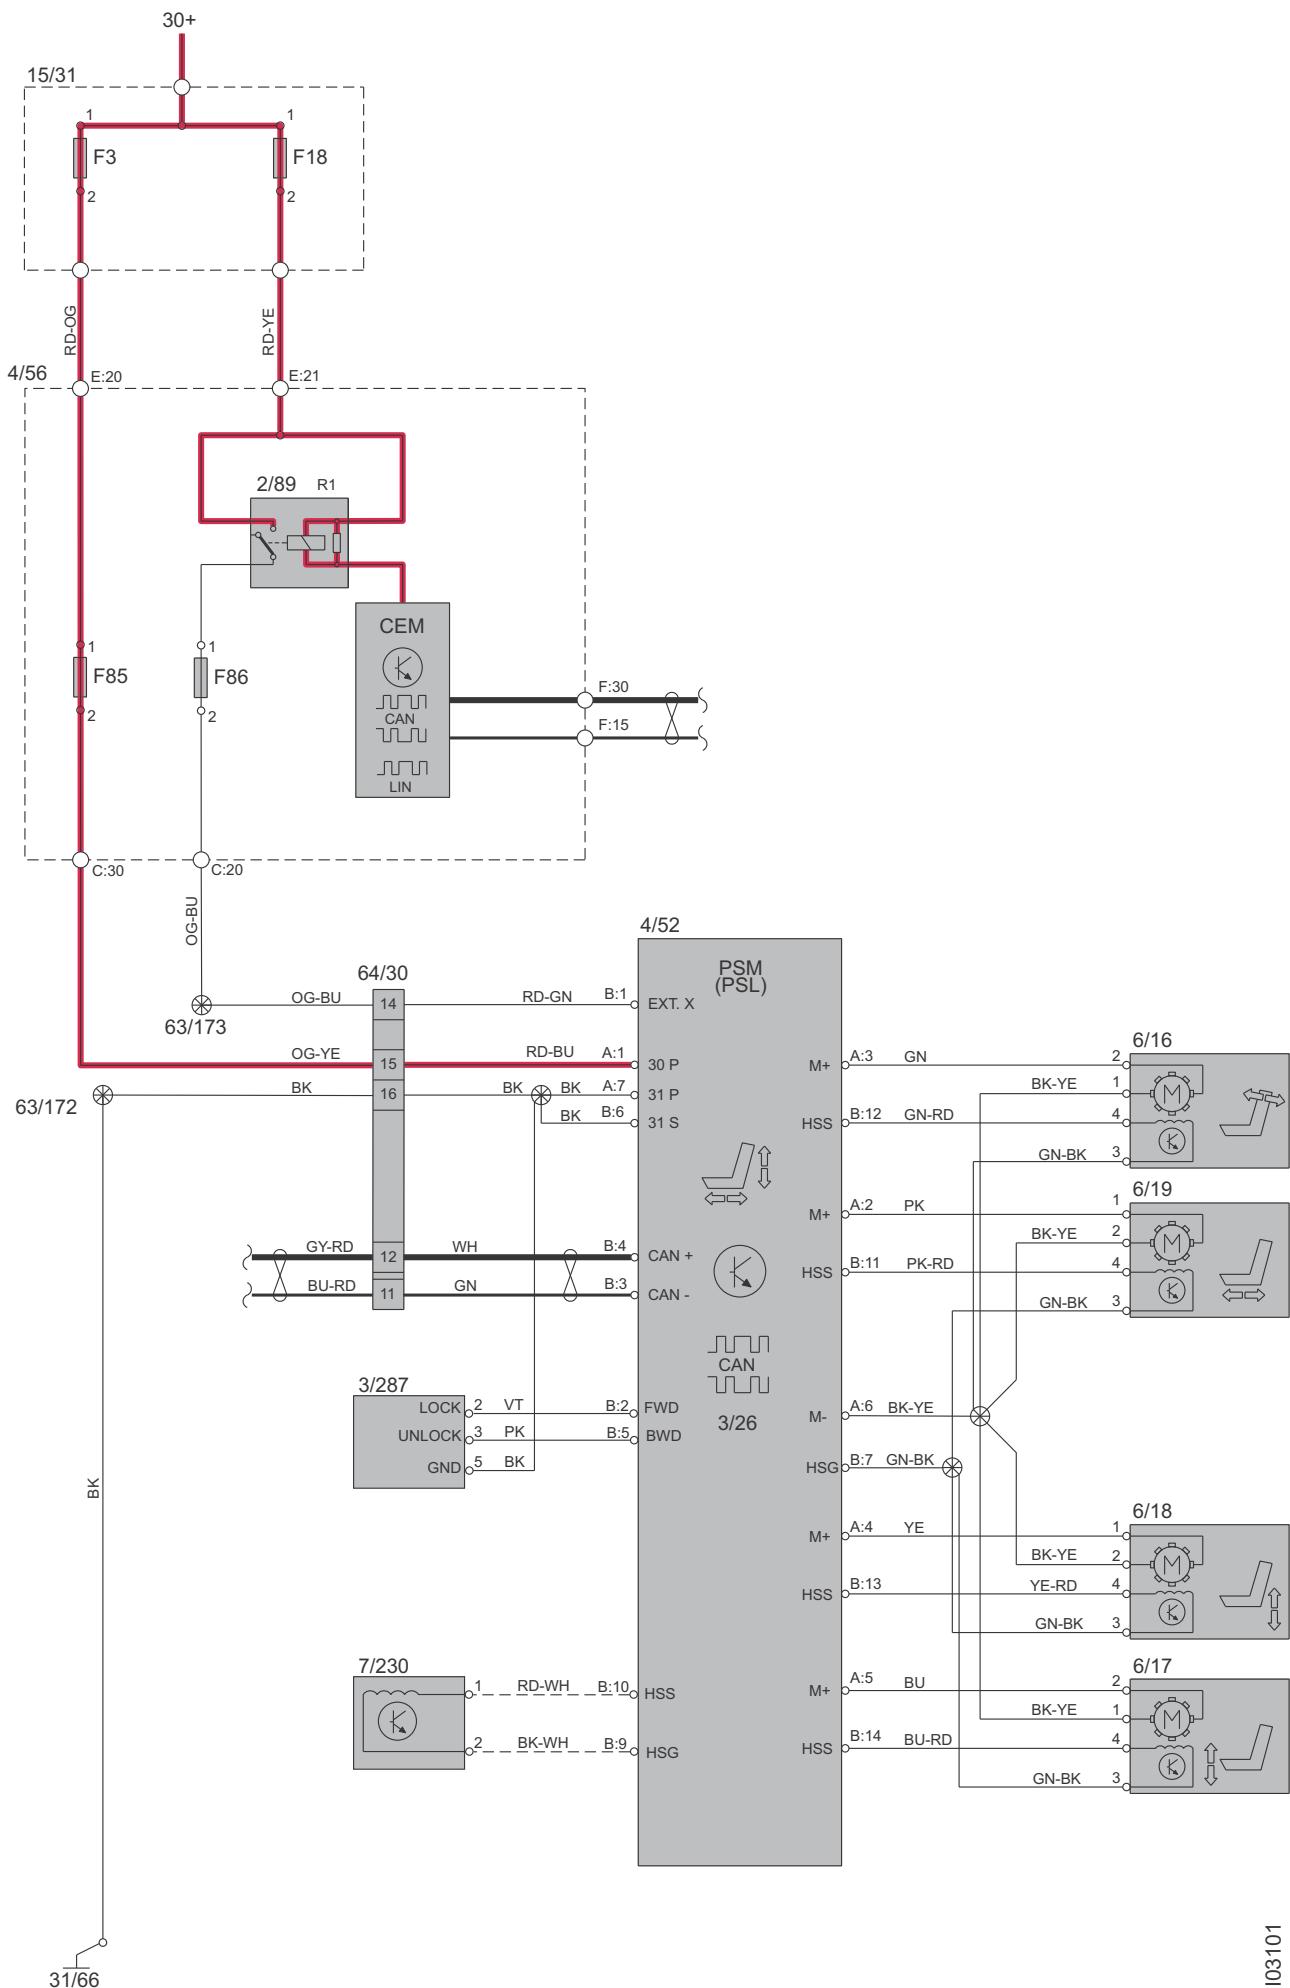


Group 85 Interior equipment

Power driver's seat with memory function, RHD C30/C70

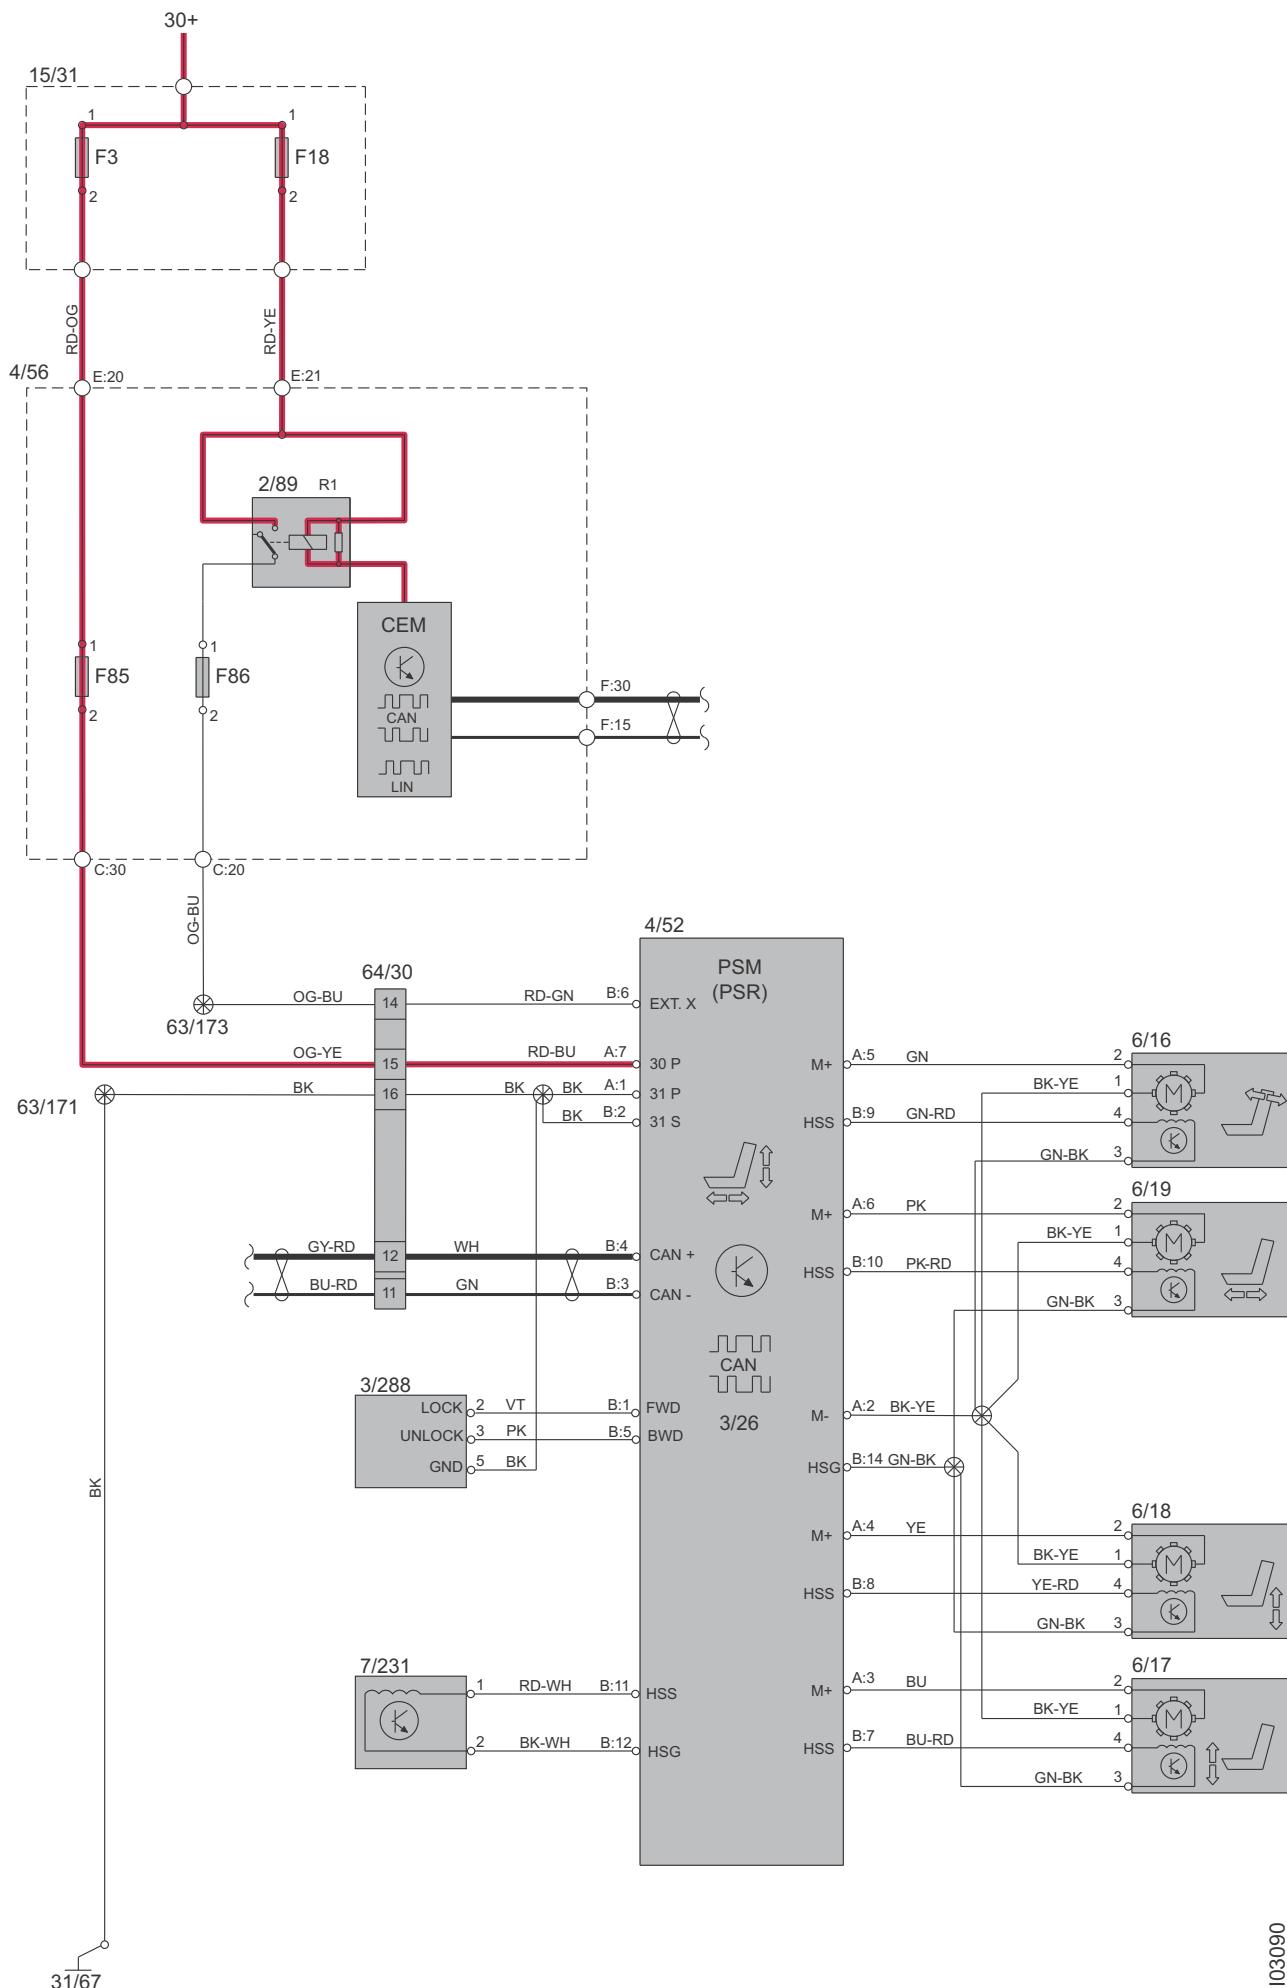


Group 85 Interior equipment

Power driver's seat LHD

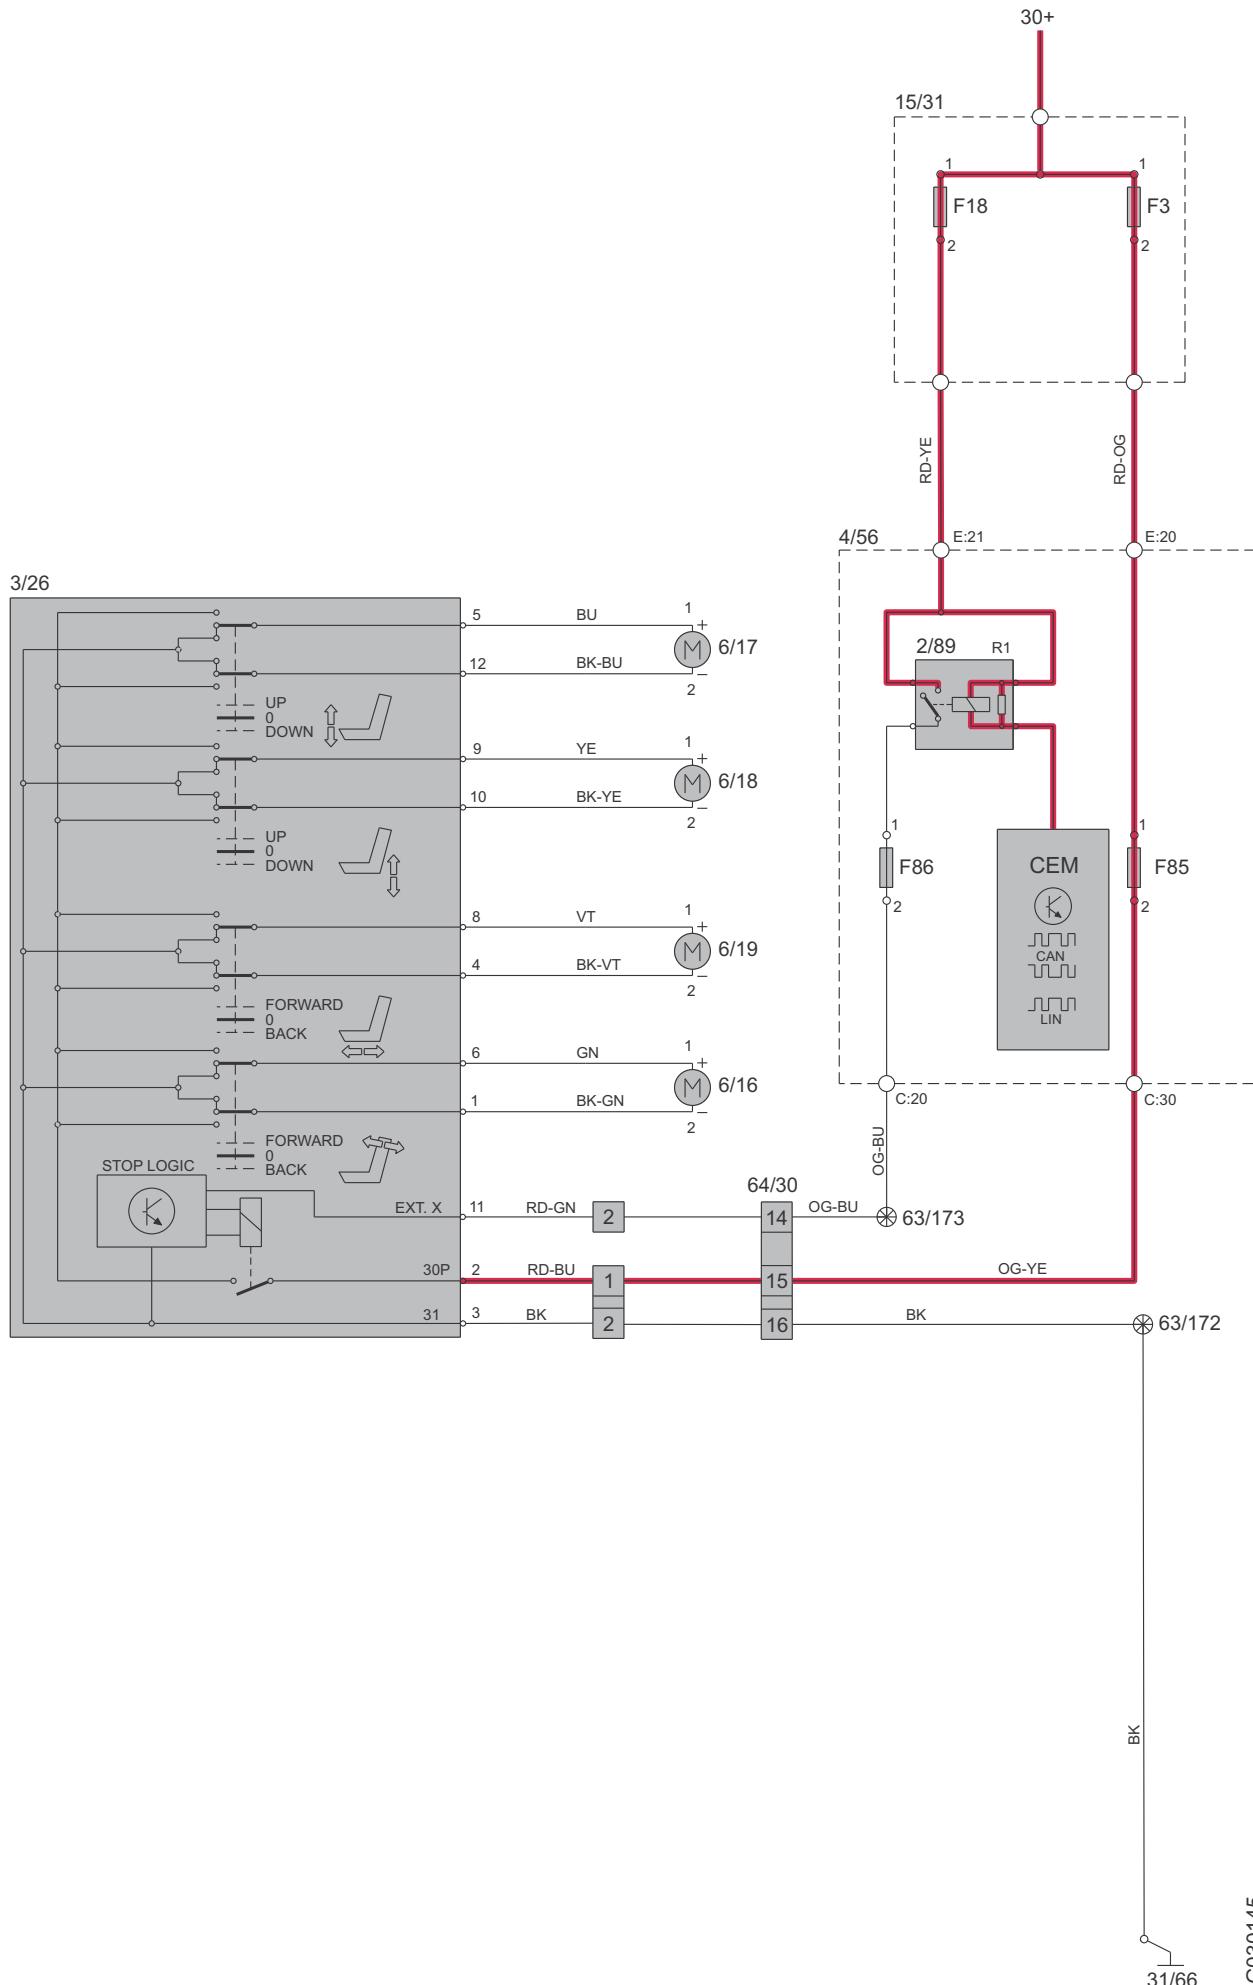


Group 85 Interior equipment

Power driver's seat RHD

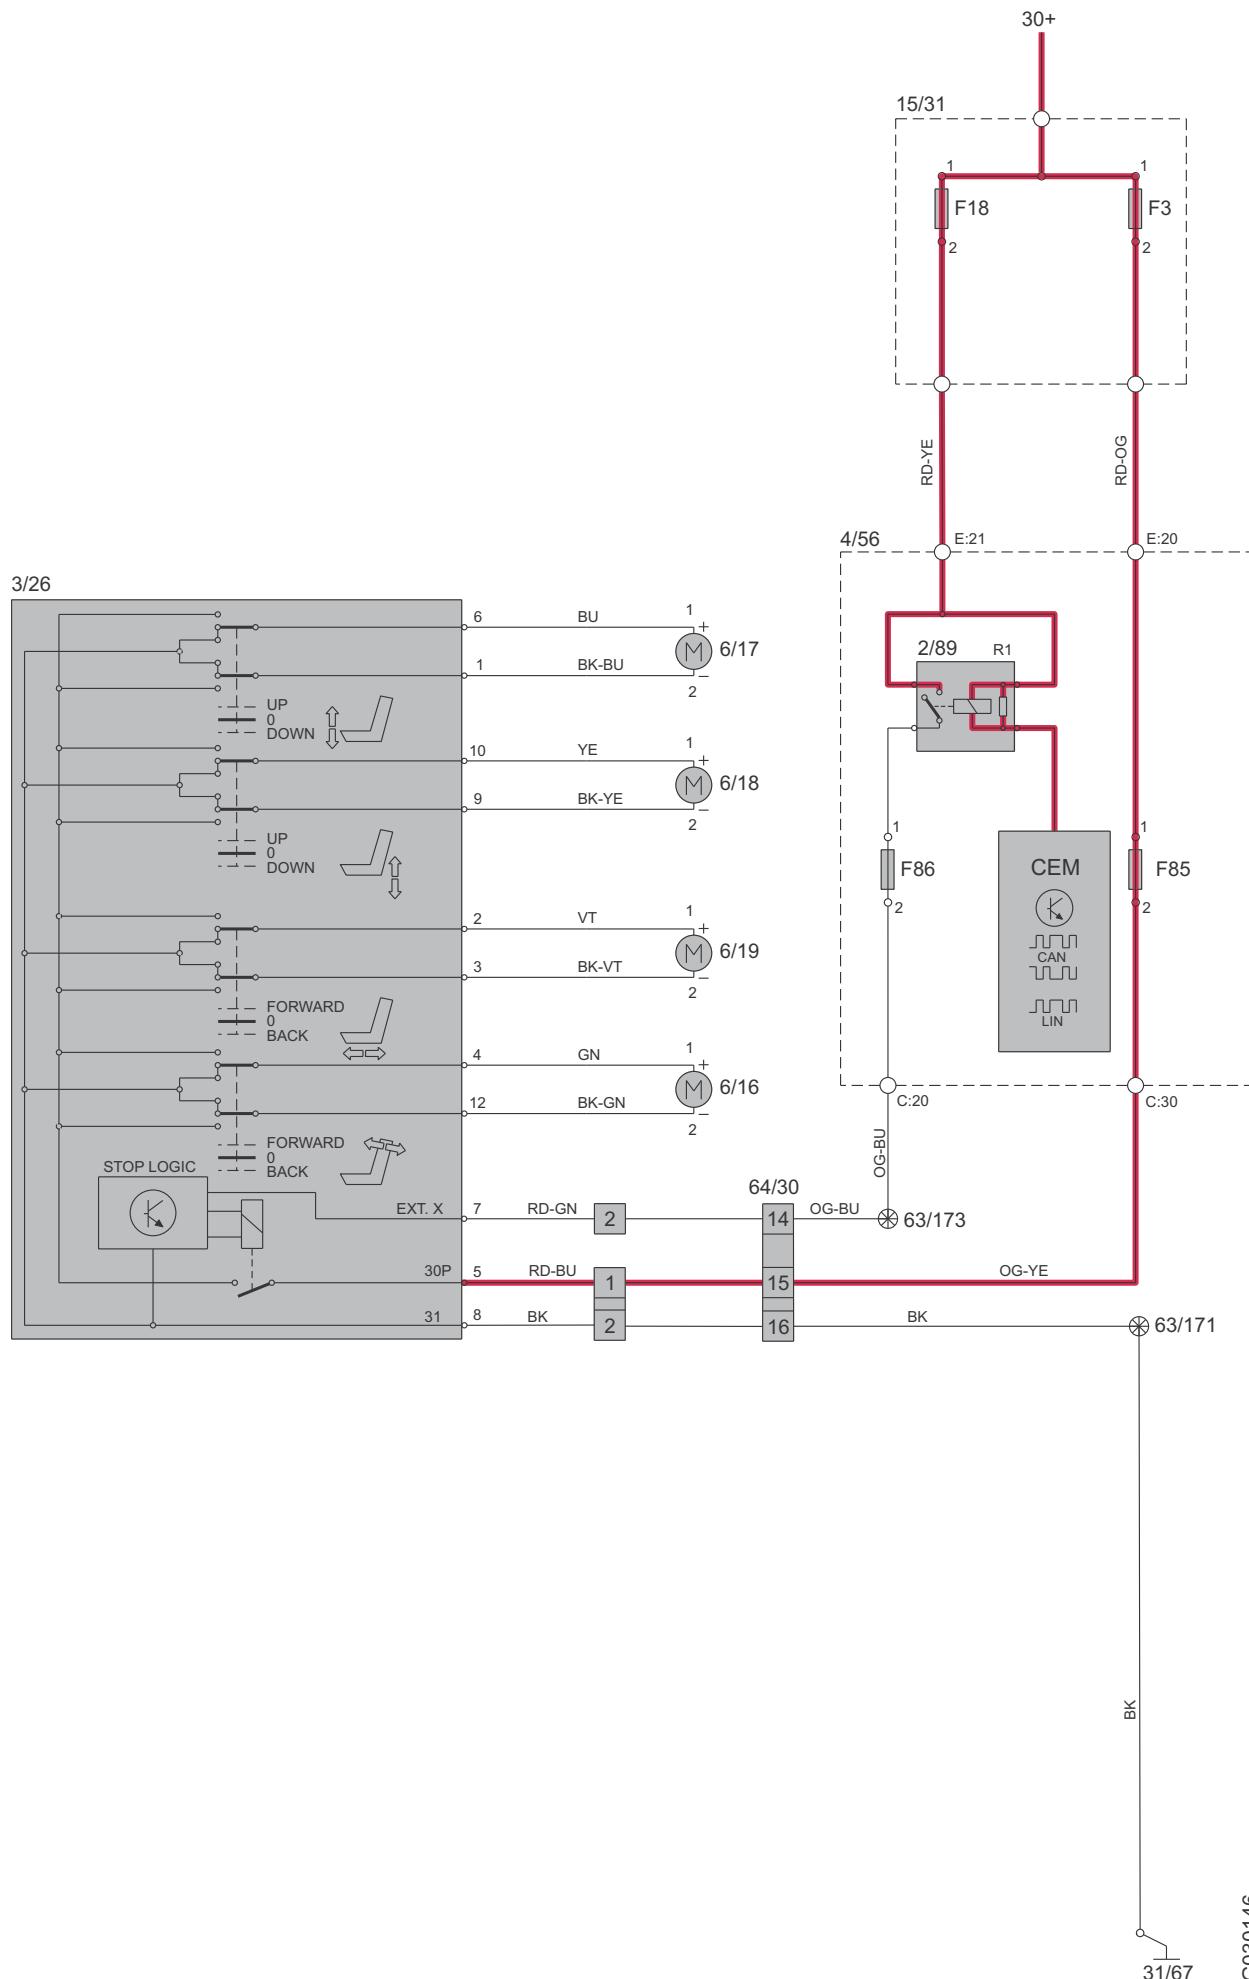


Group 85 Interior equipment

Power passenger seat LHD S40/V50

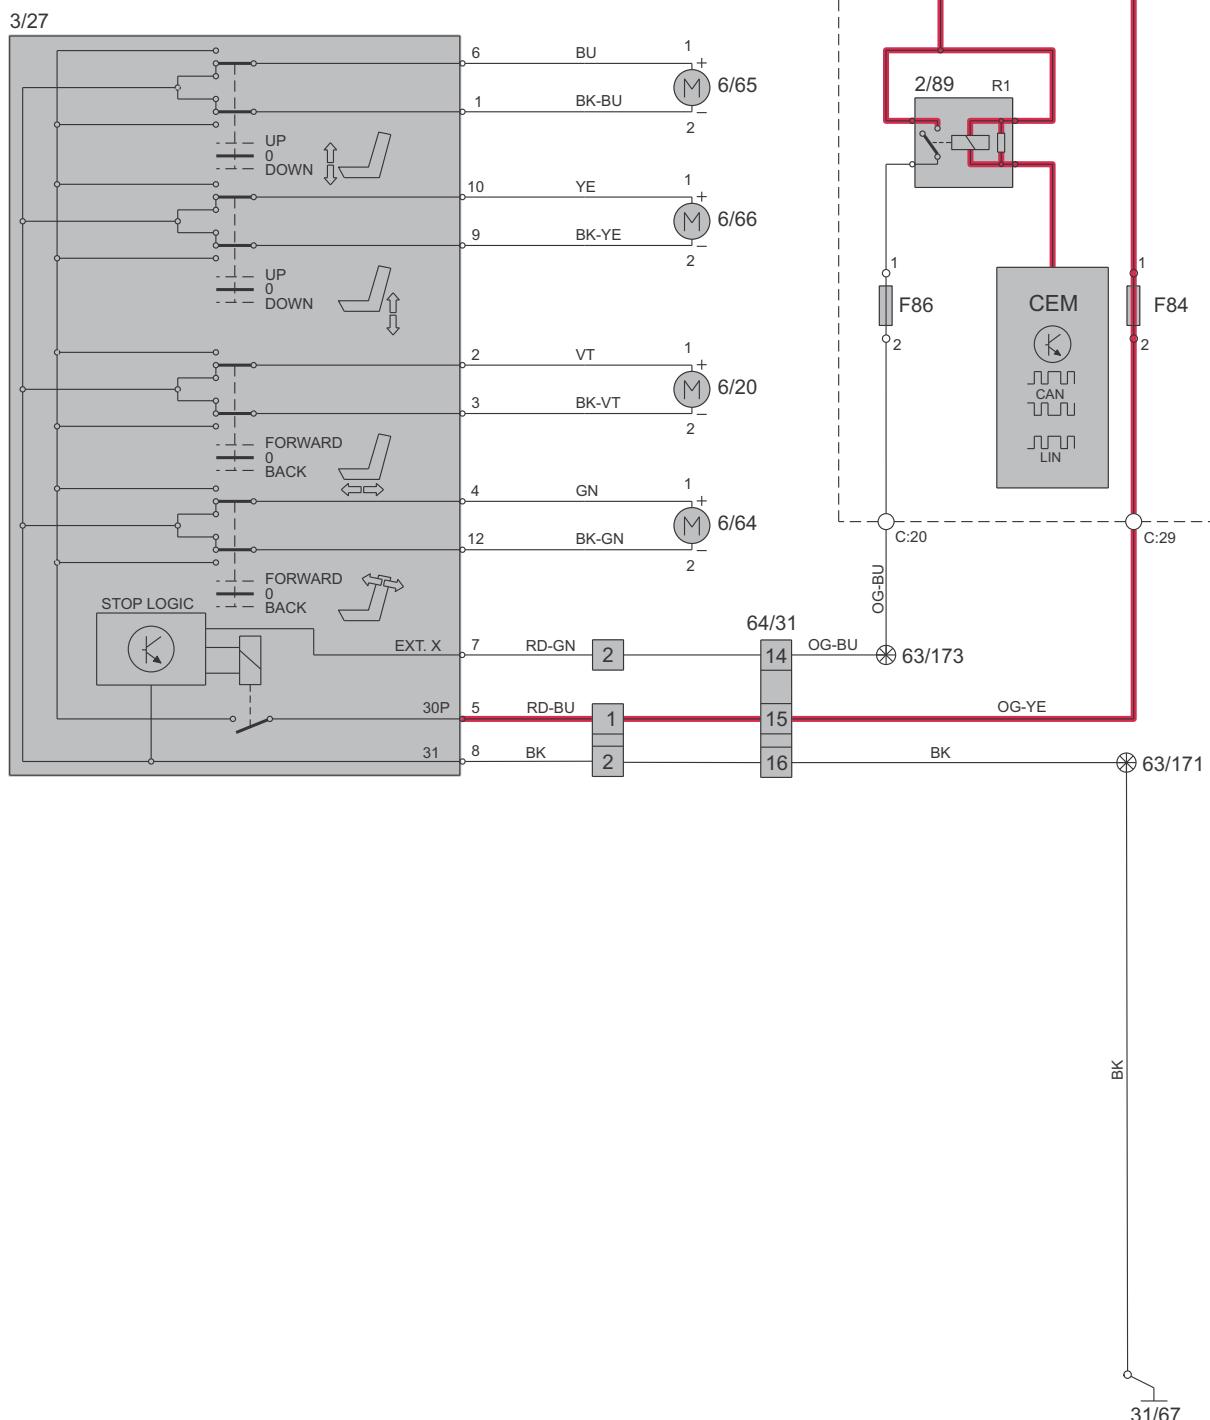


Group 85 Interior equipment

Power passenger seat RHD S40/V50

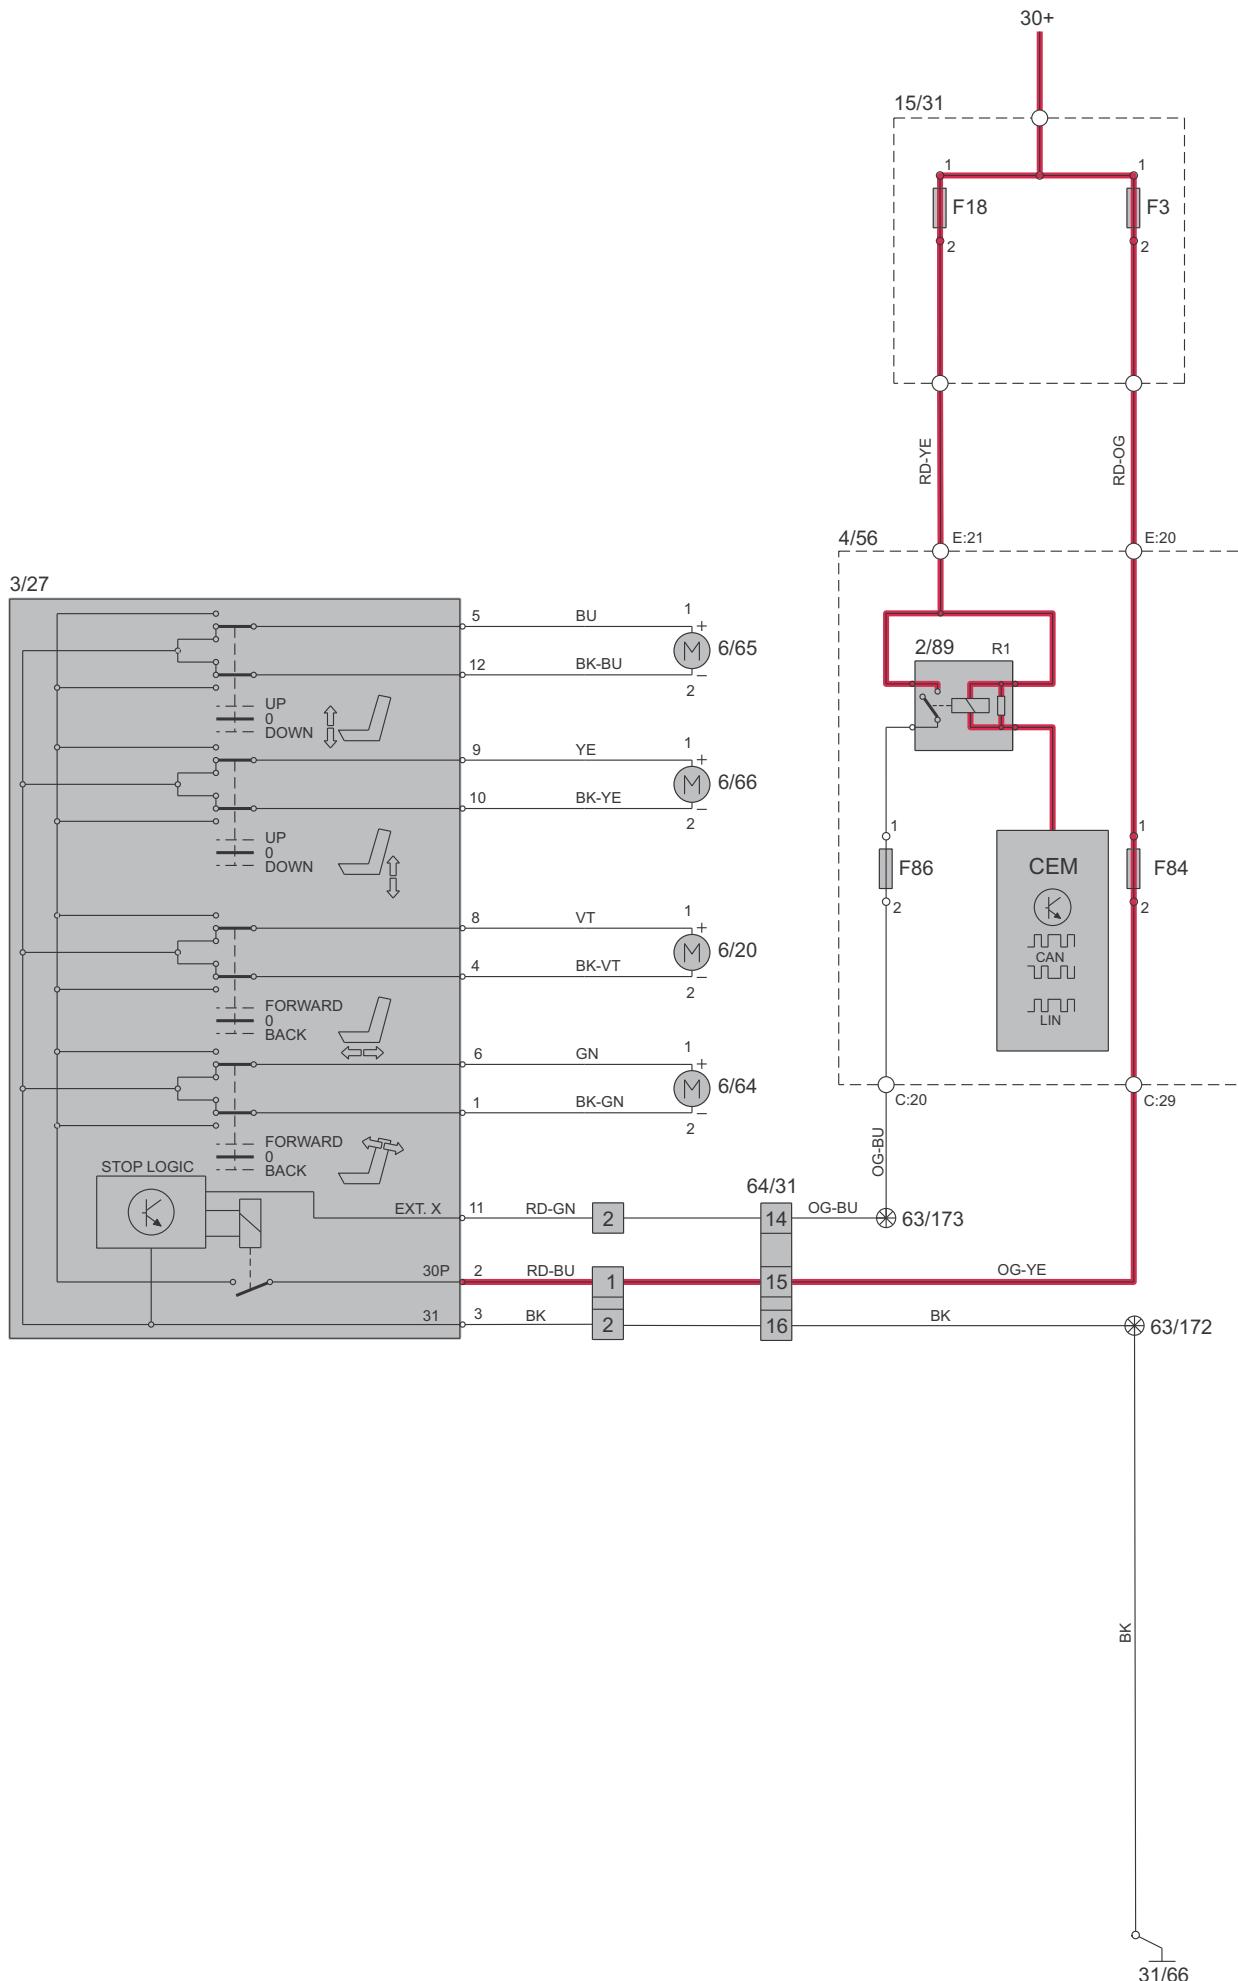


Group 85 Interior equipment Heated seats

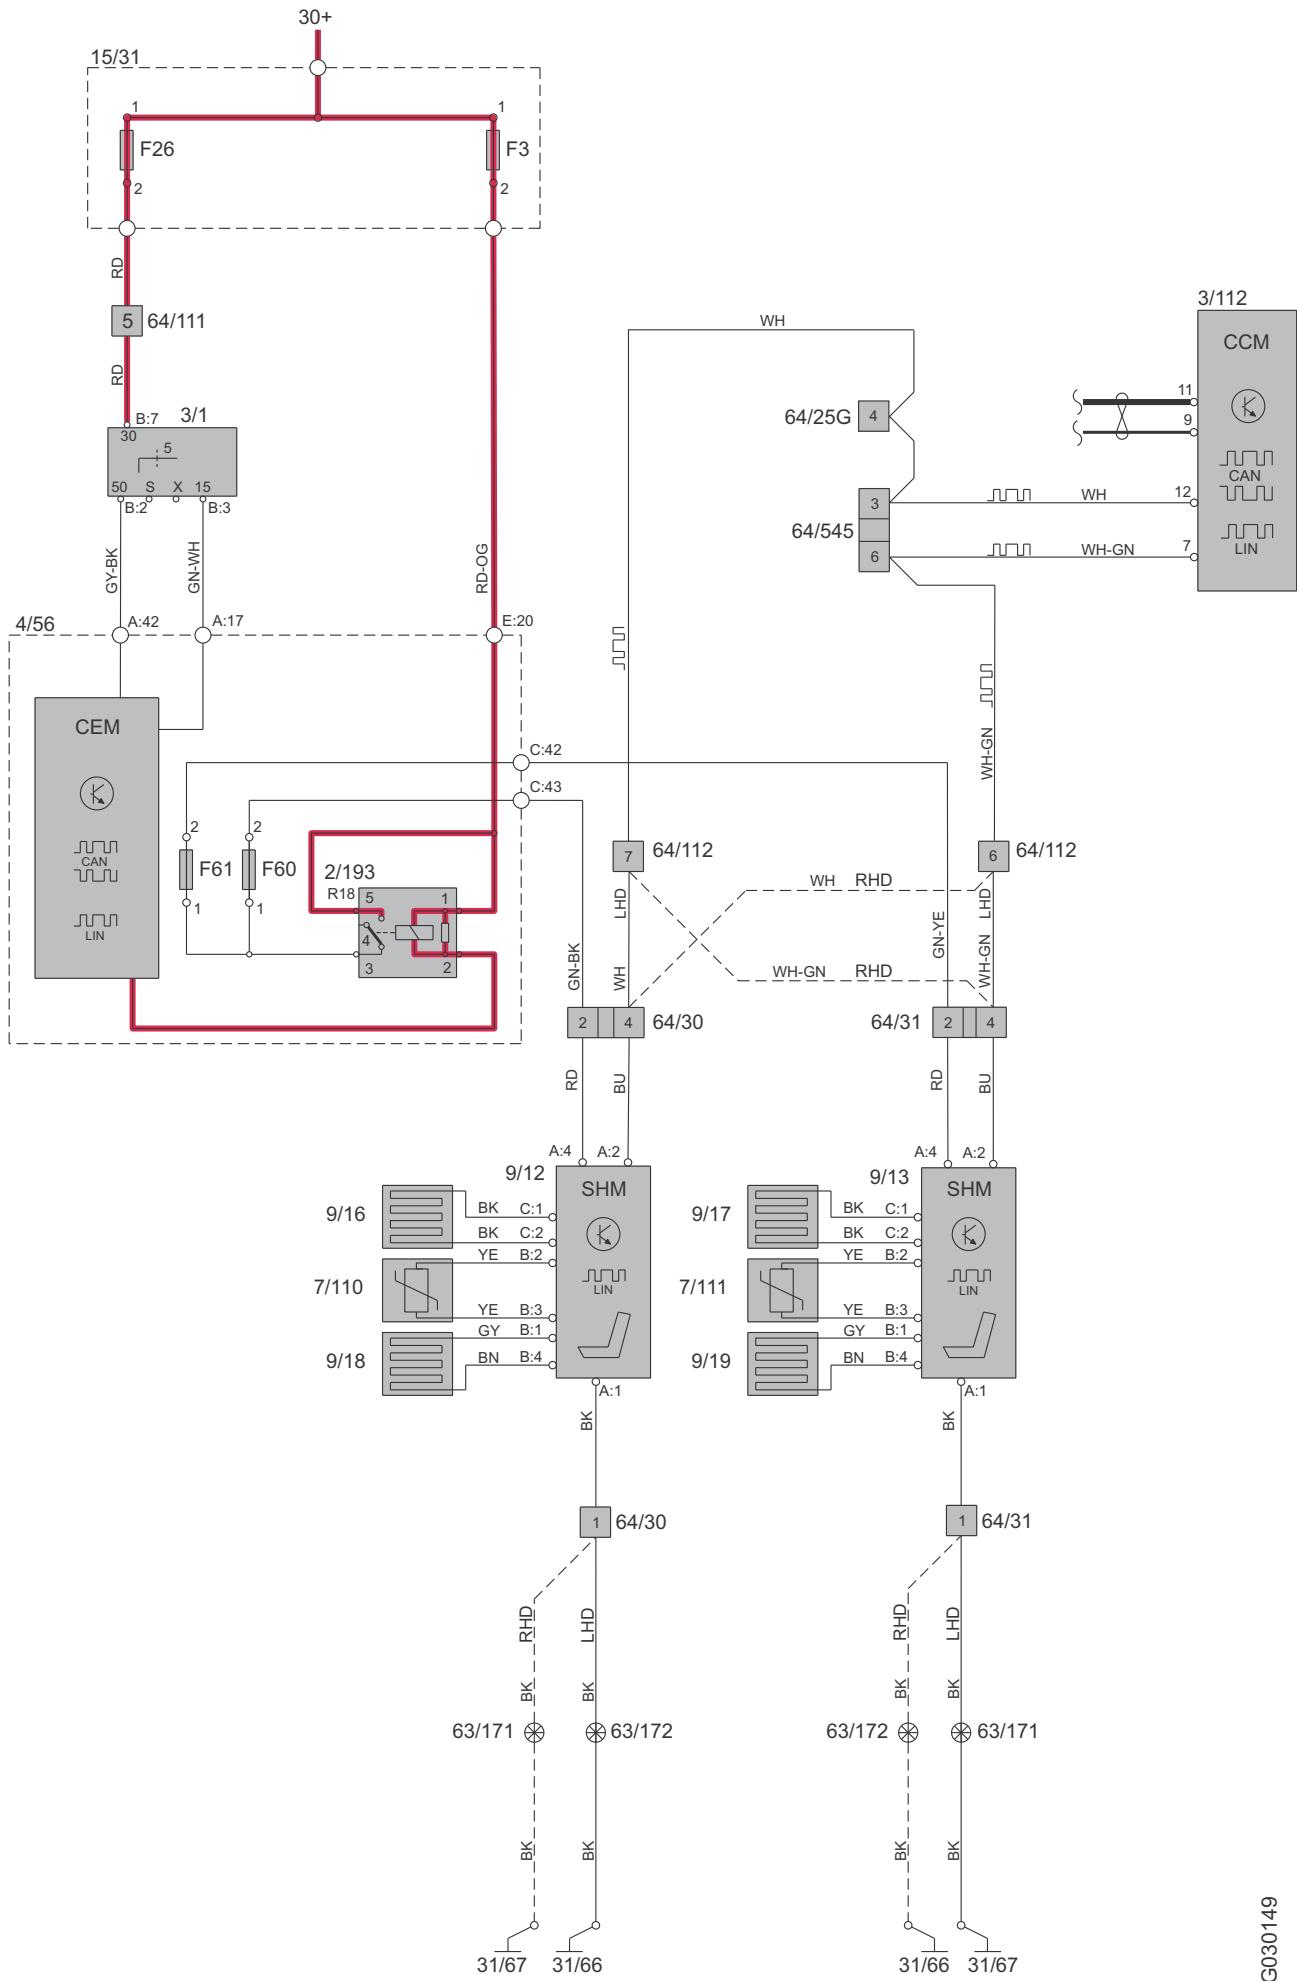


Group 87 Climate control system

Climate control system, 4-Cyl. Gasoline 1:2

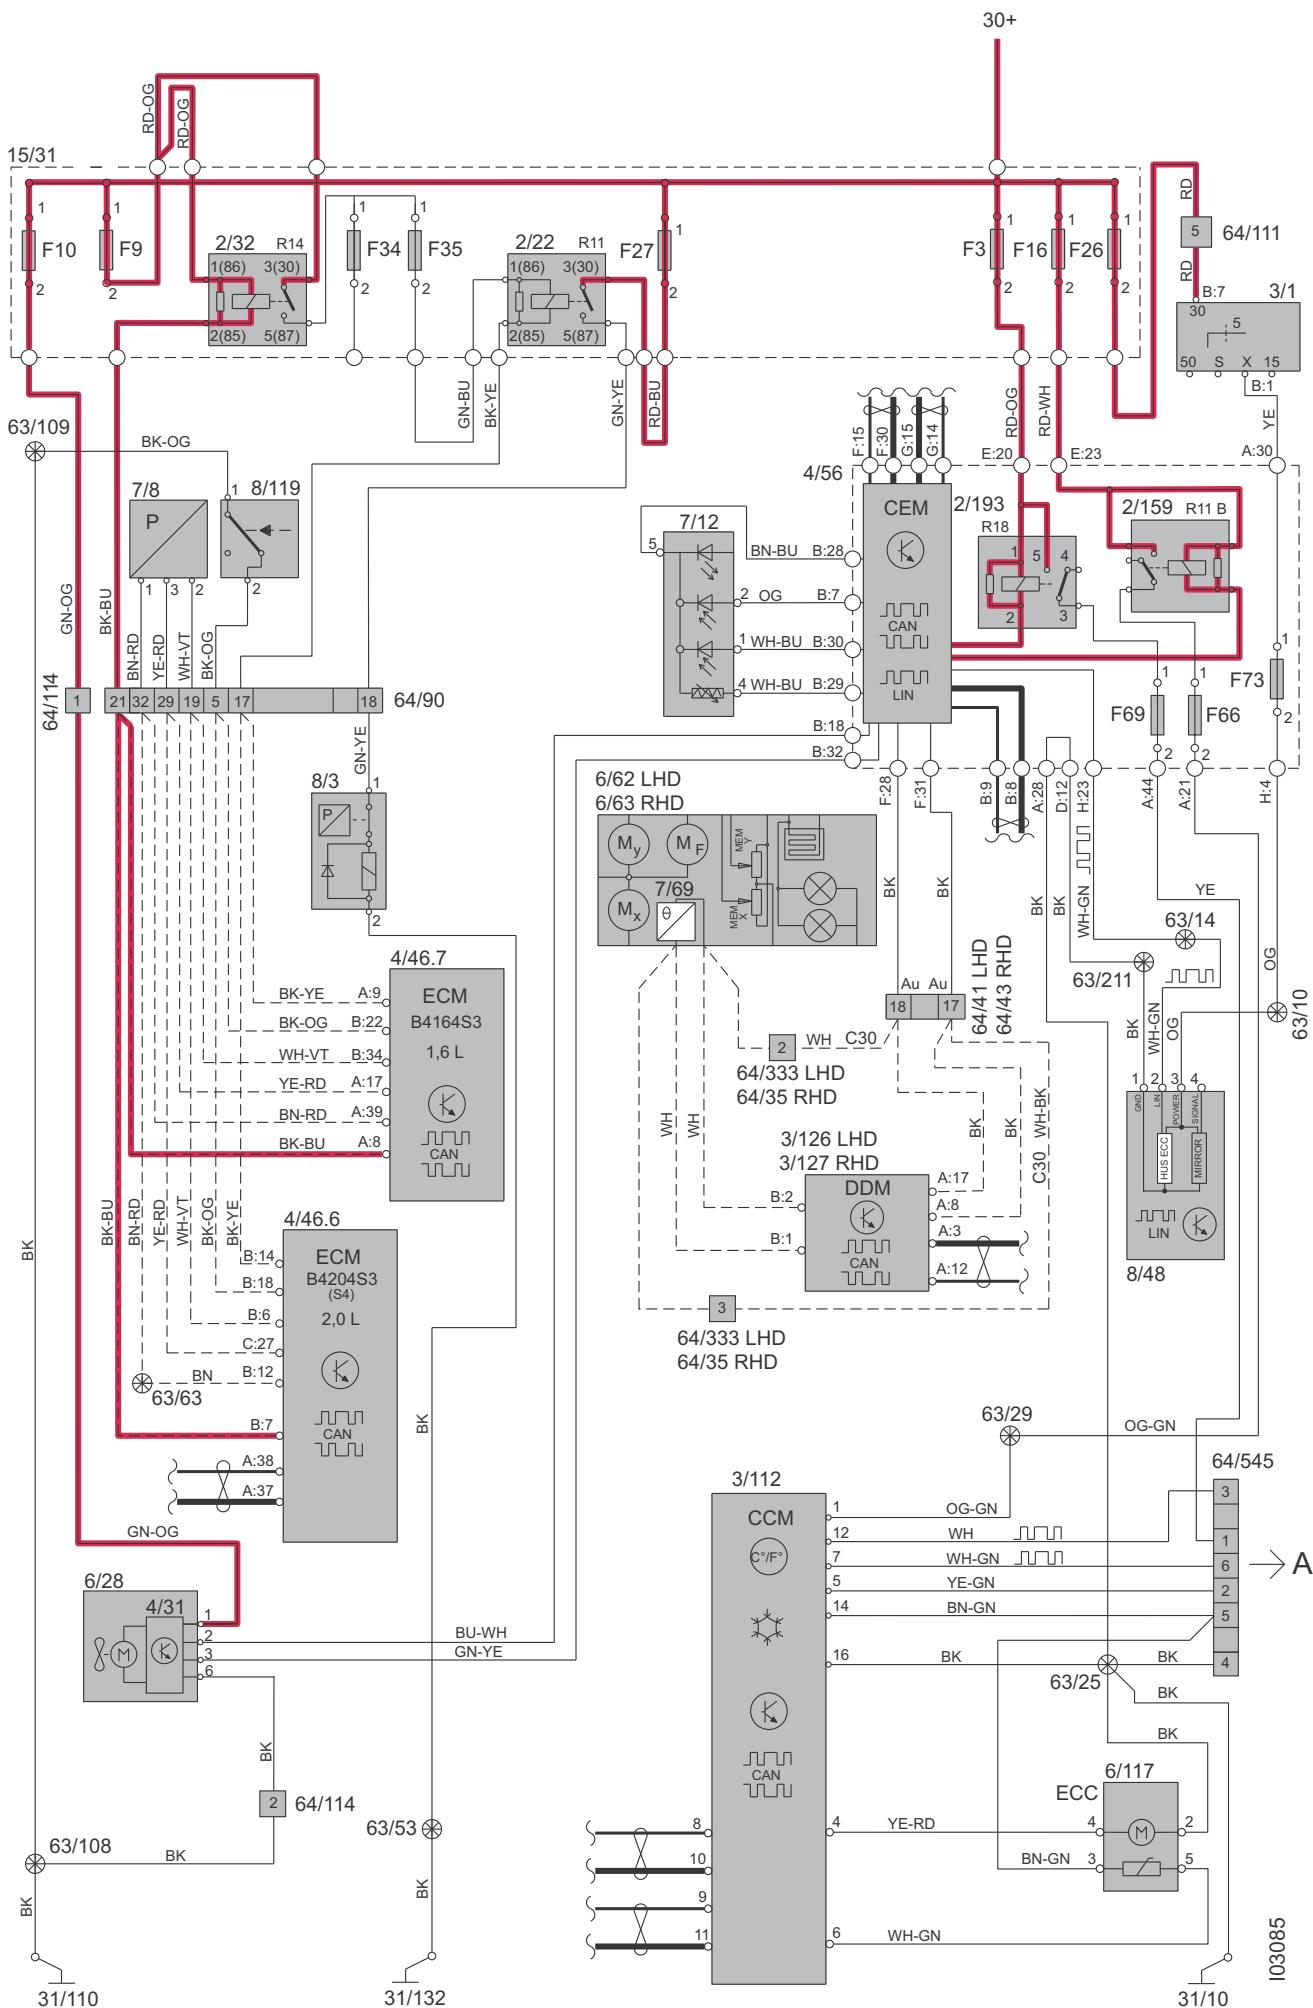


Group 87 Climate control system
Climate control system, 4-Cyl. Gasoline 2:2

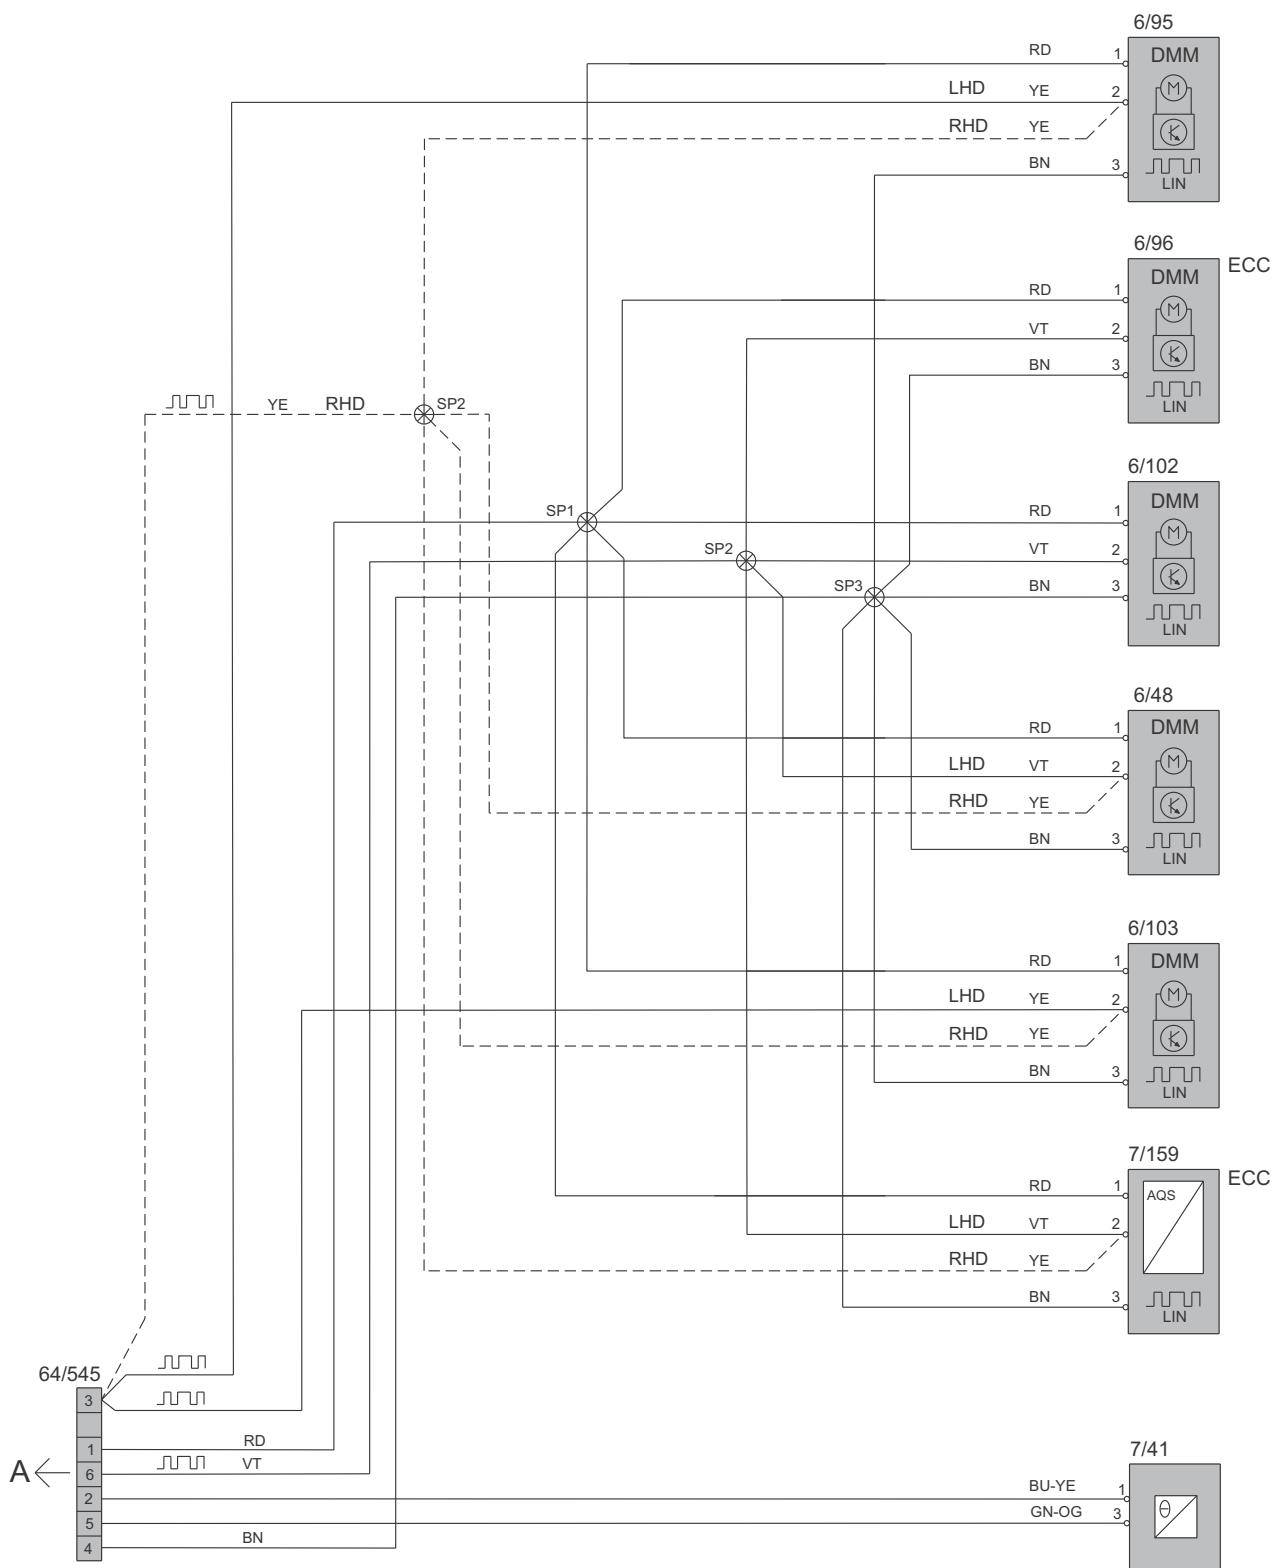


1013015

Group 87 Climate control system

Climate control system, Diesel 1.6l 1:2

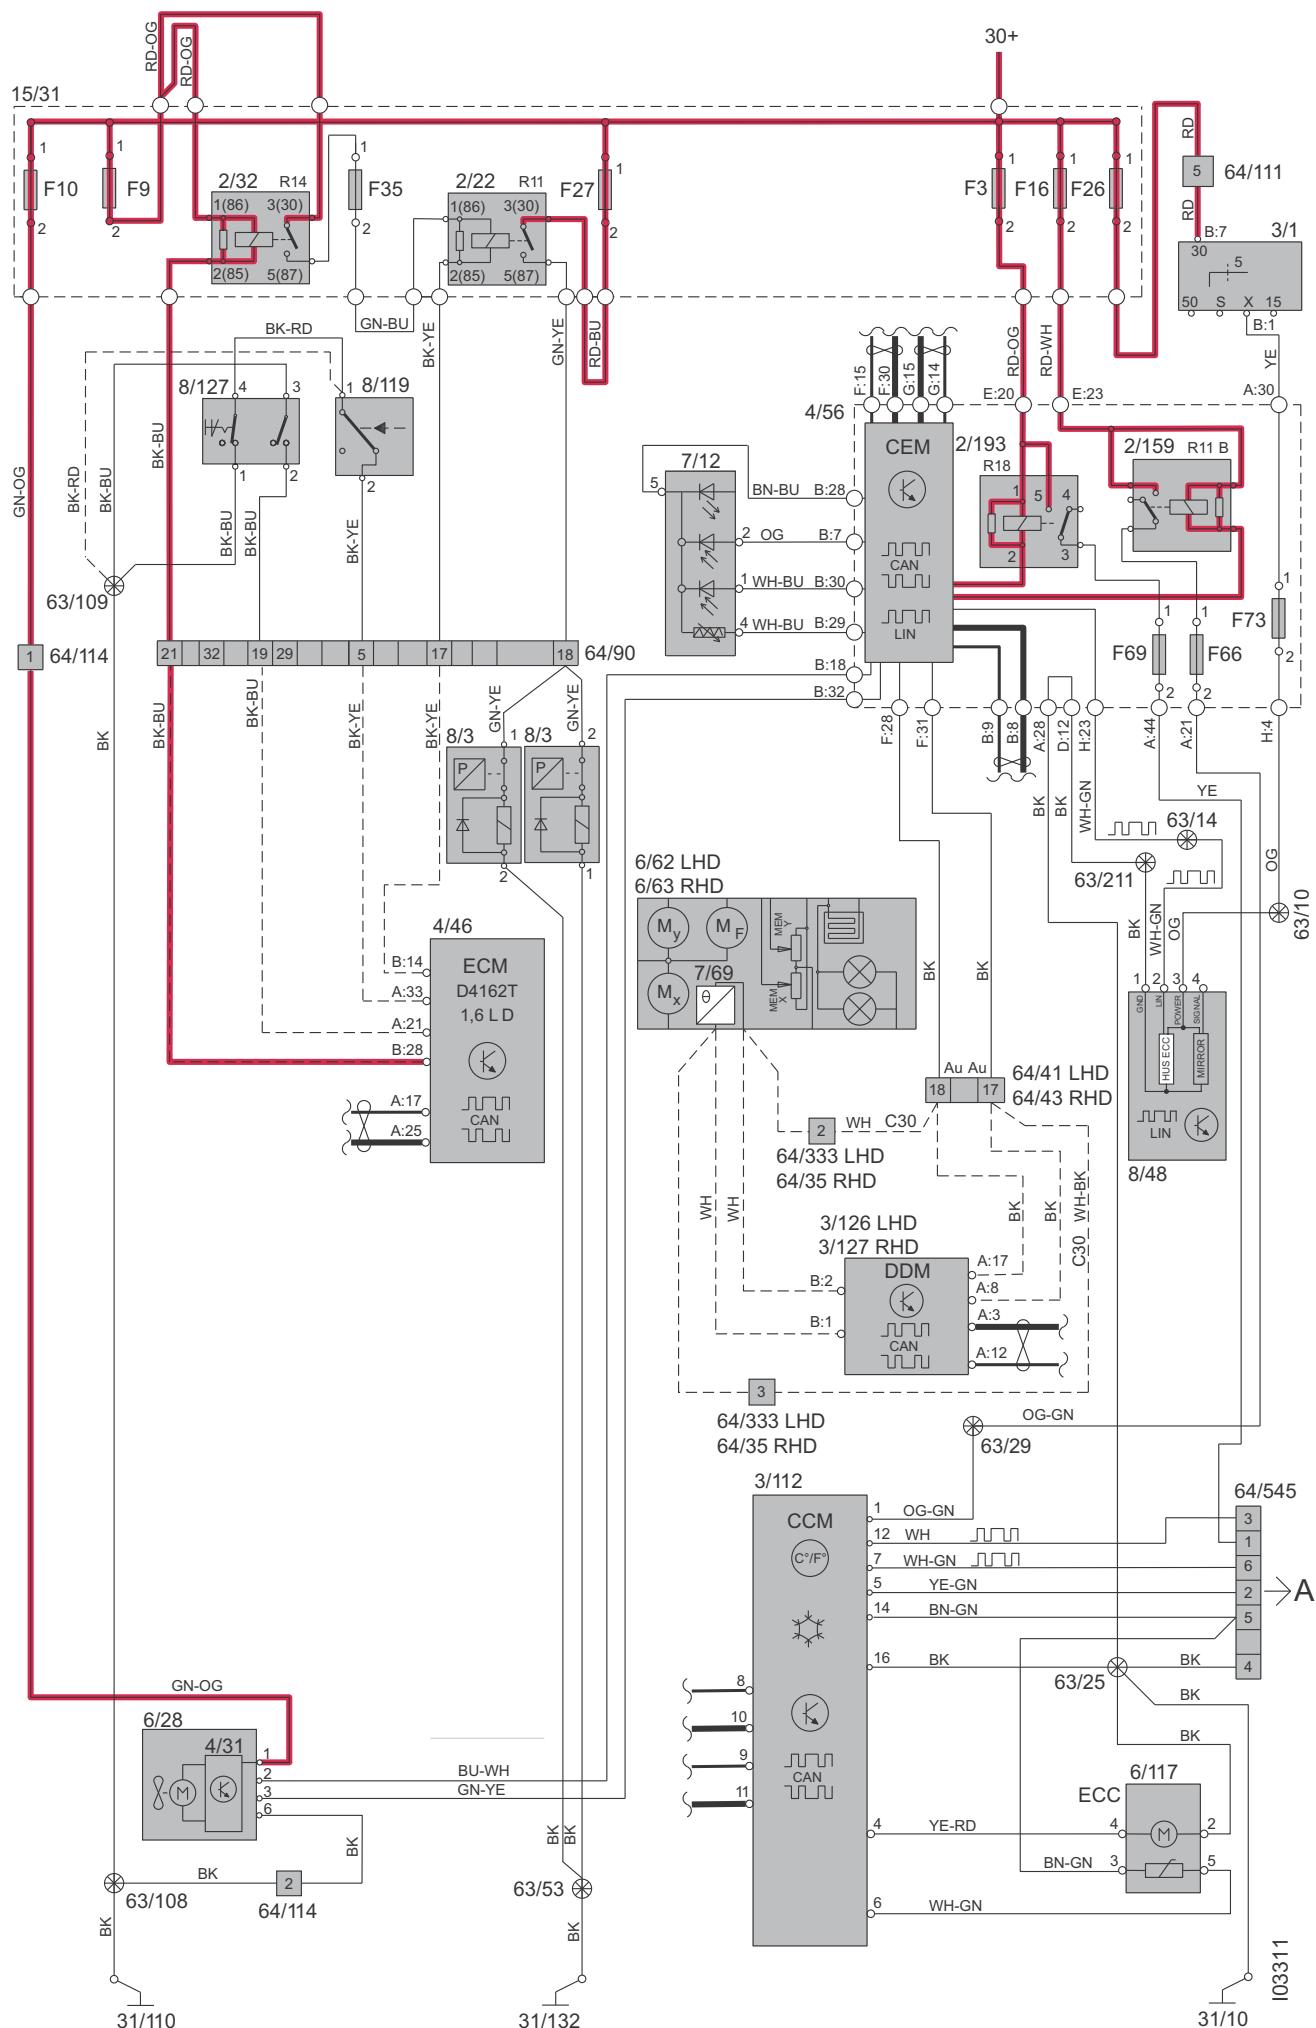


Group 87 Climate control system
Climate control system, Diesel 1.6l 2:2

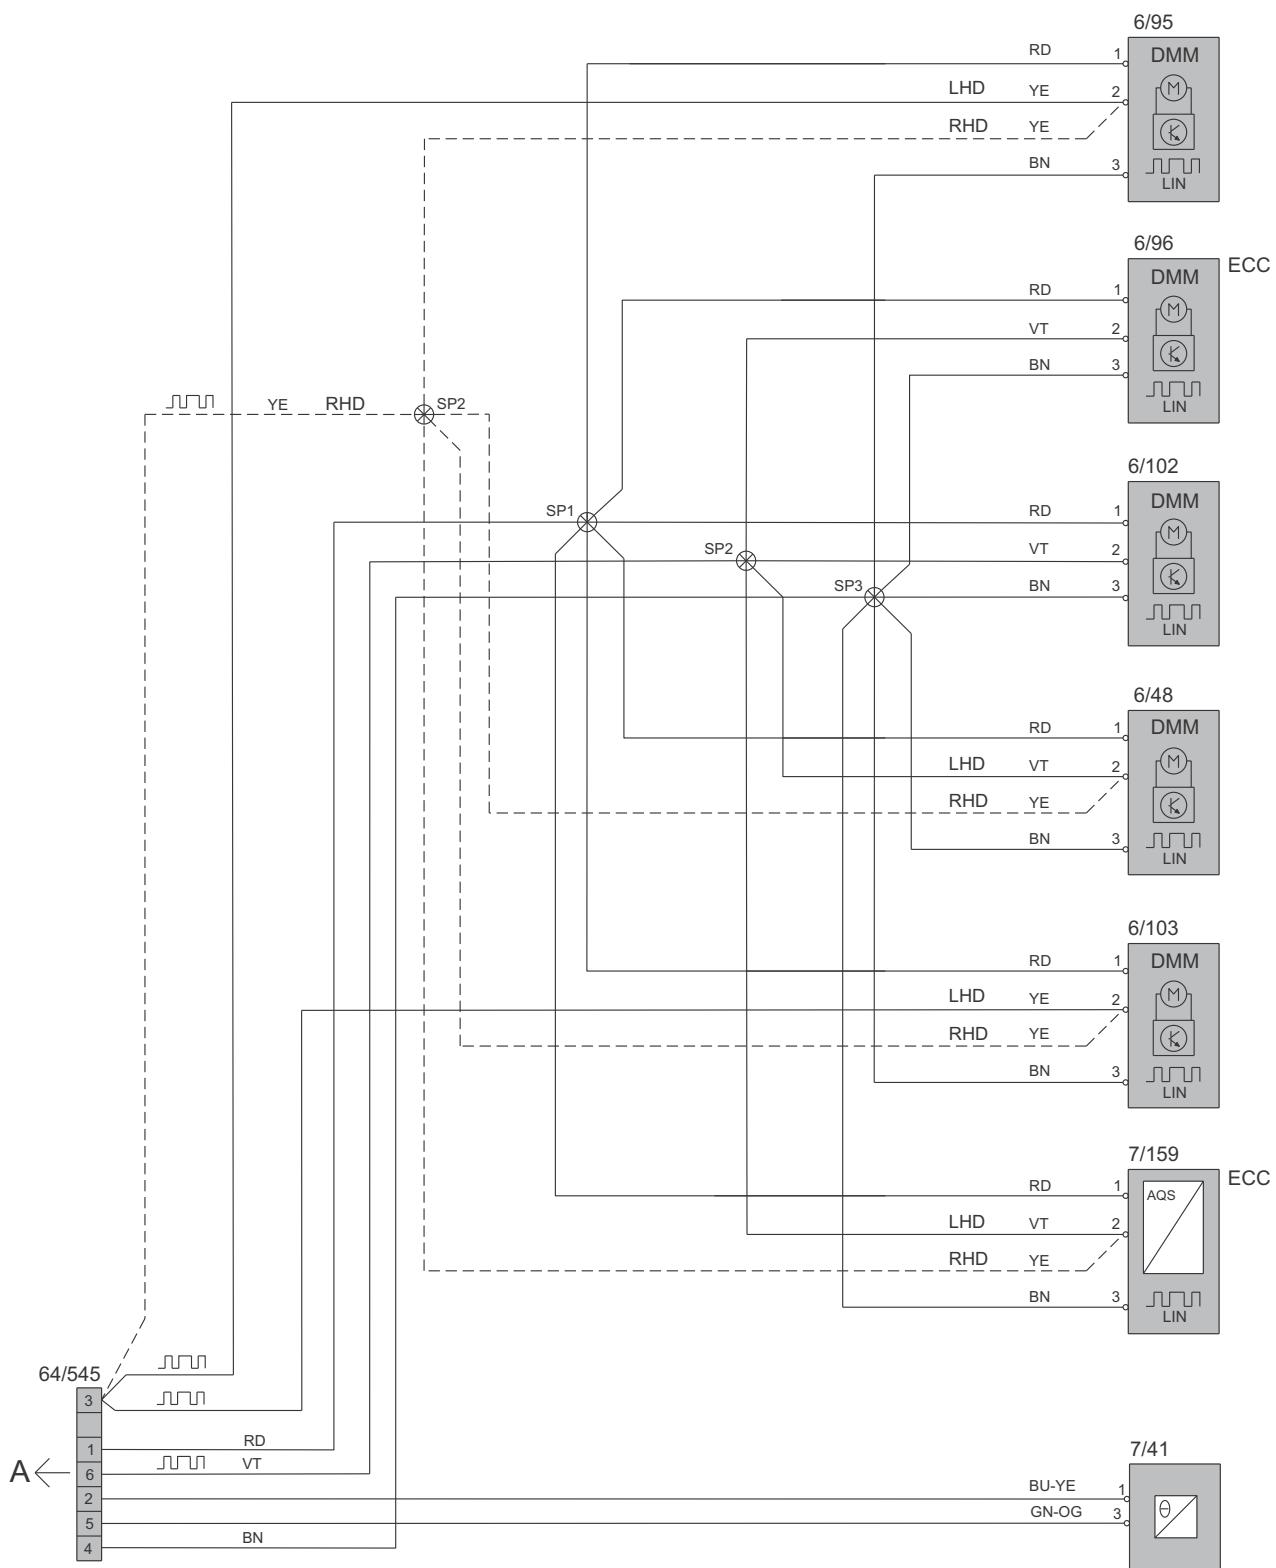


1013021

Group 87 Climate control system Climate control system, 5-Cyl. 1:2

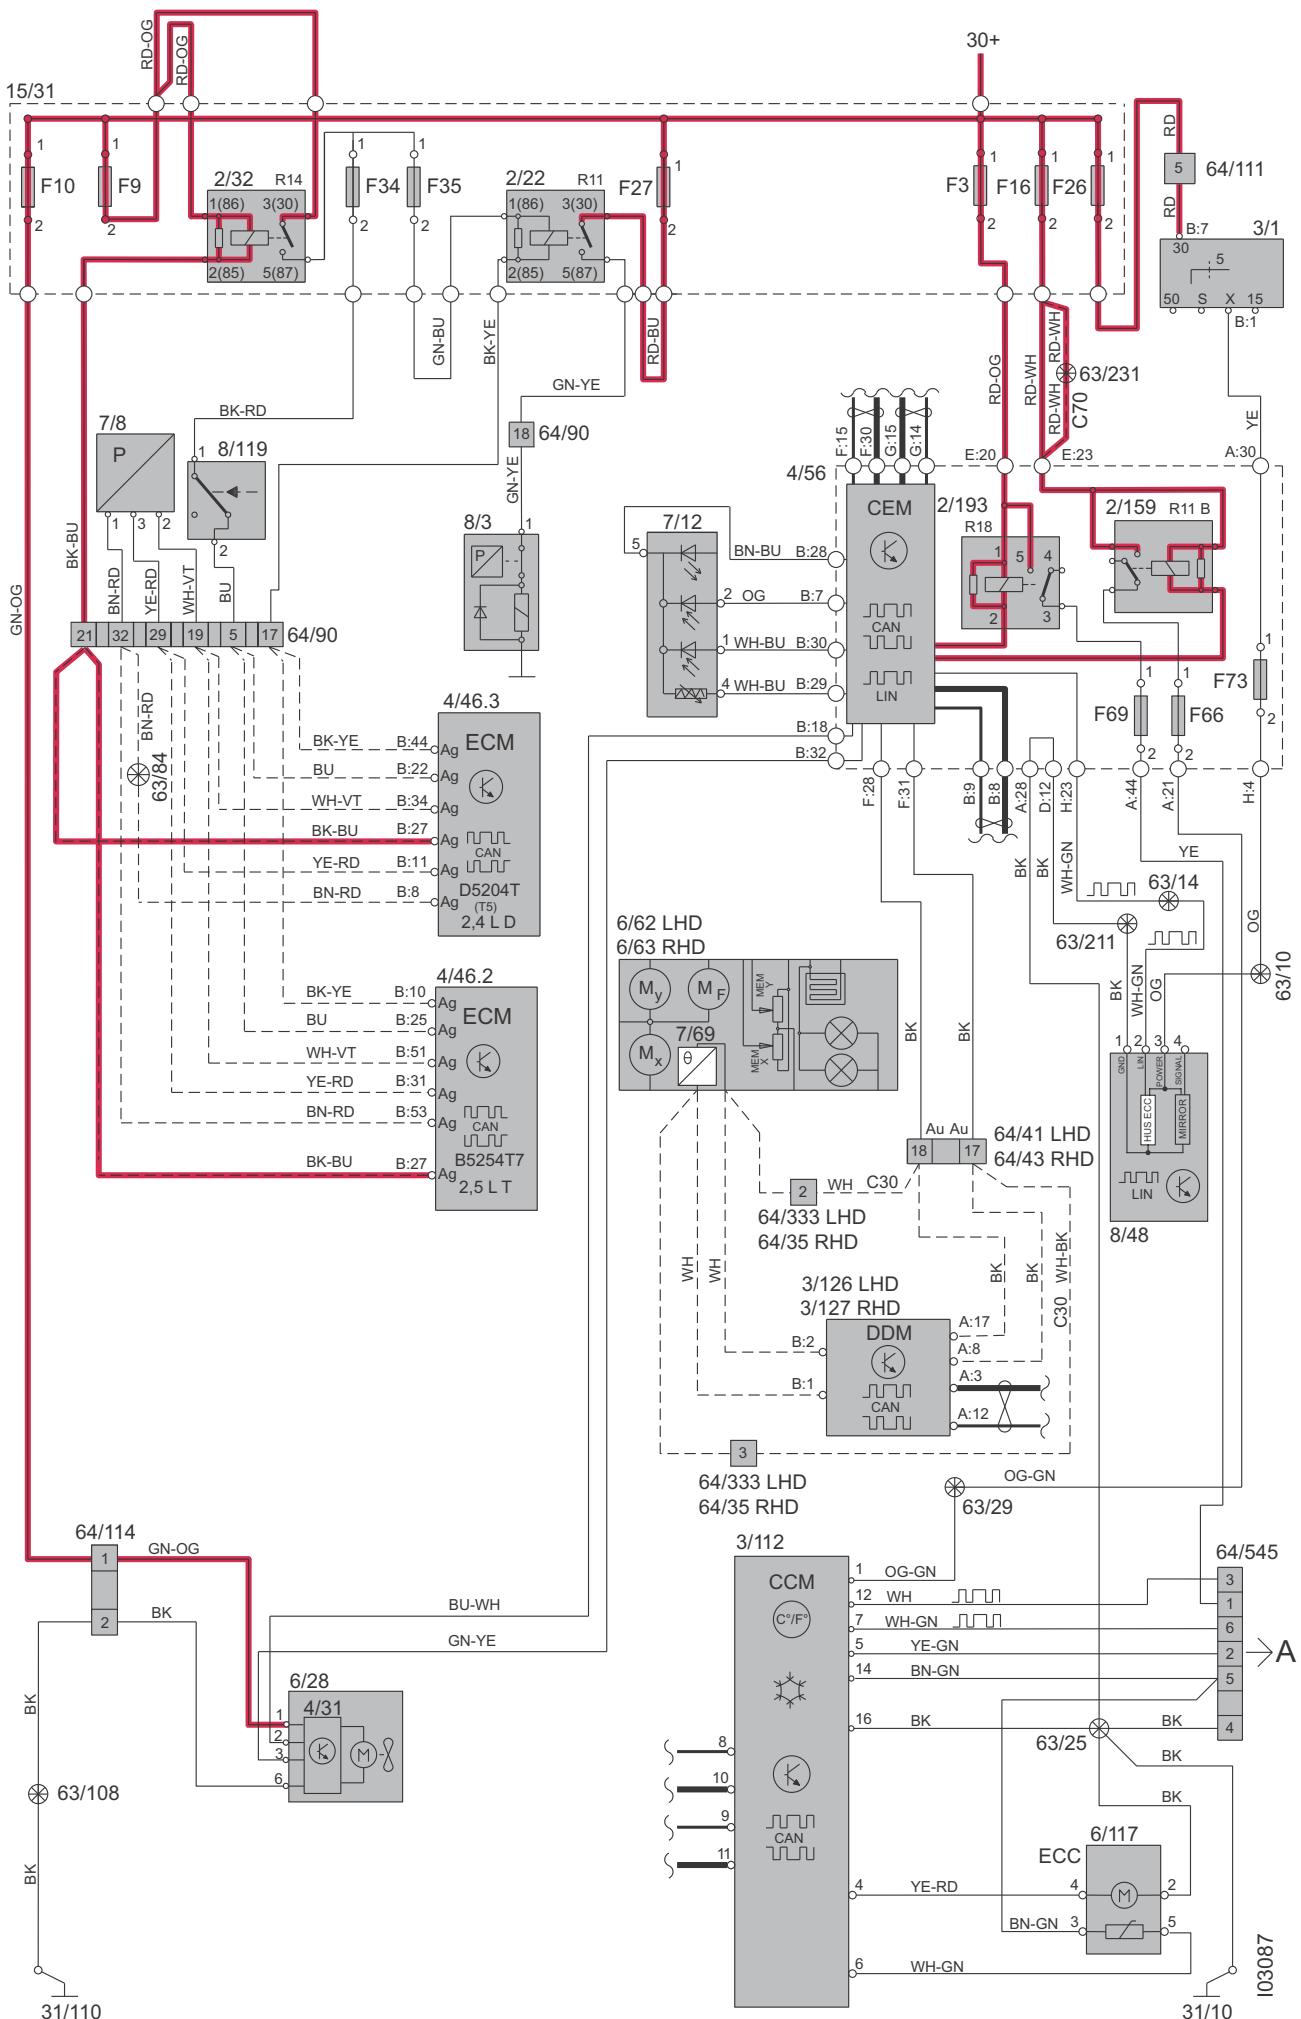

Group 87 Climate control system


Climate control system, 5-Cyl. 2:2

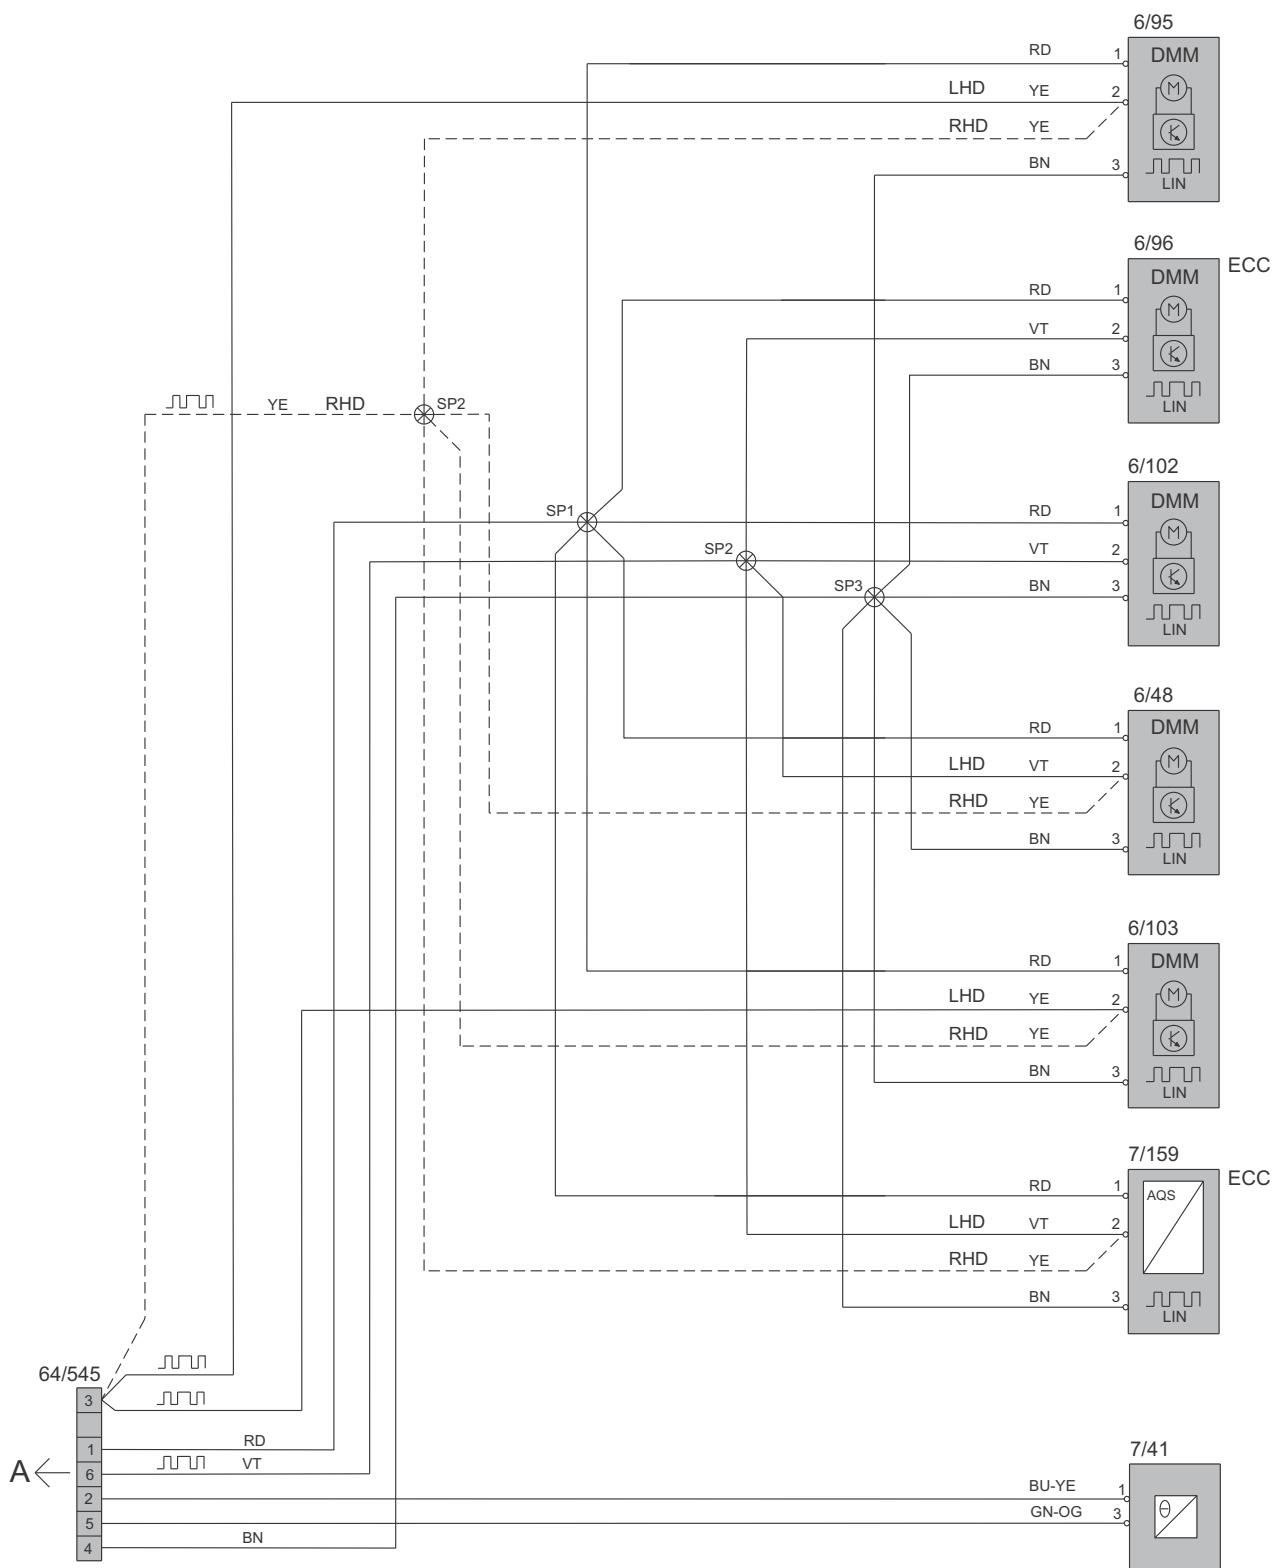

1013022

Group 87 Climate control system


Climate control system PTC-elements

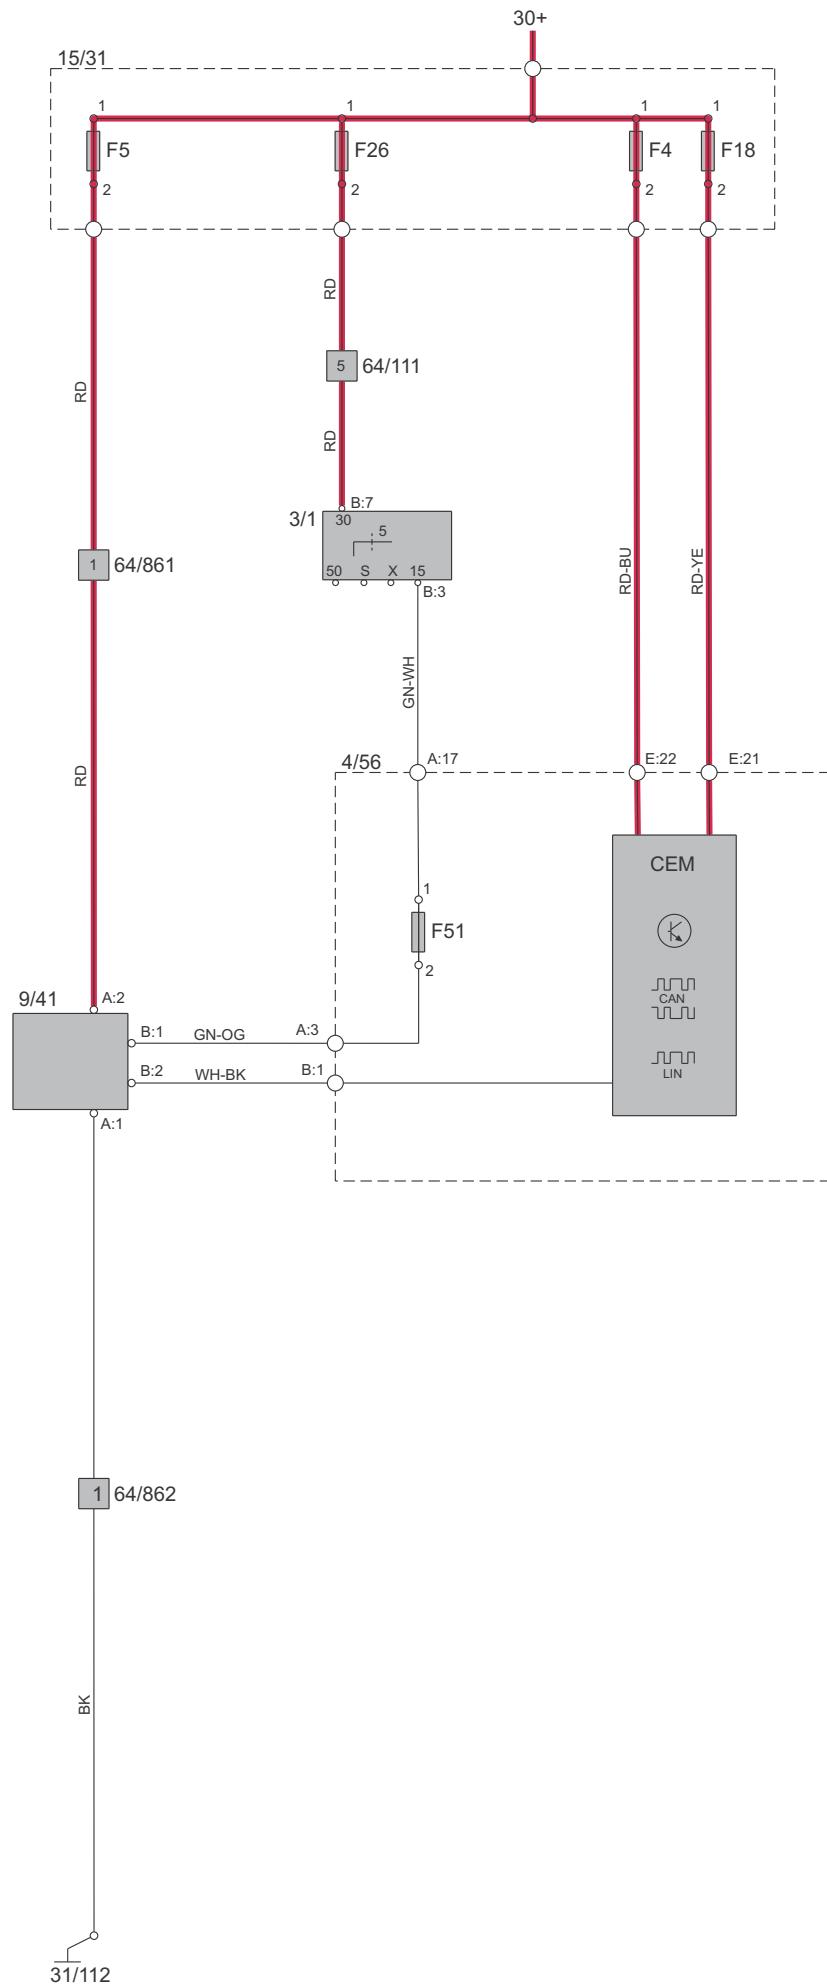


G030157

Group 87 Climate control system

Parking heater, auxiliary heater

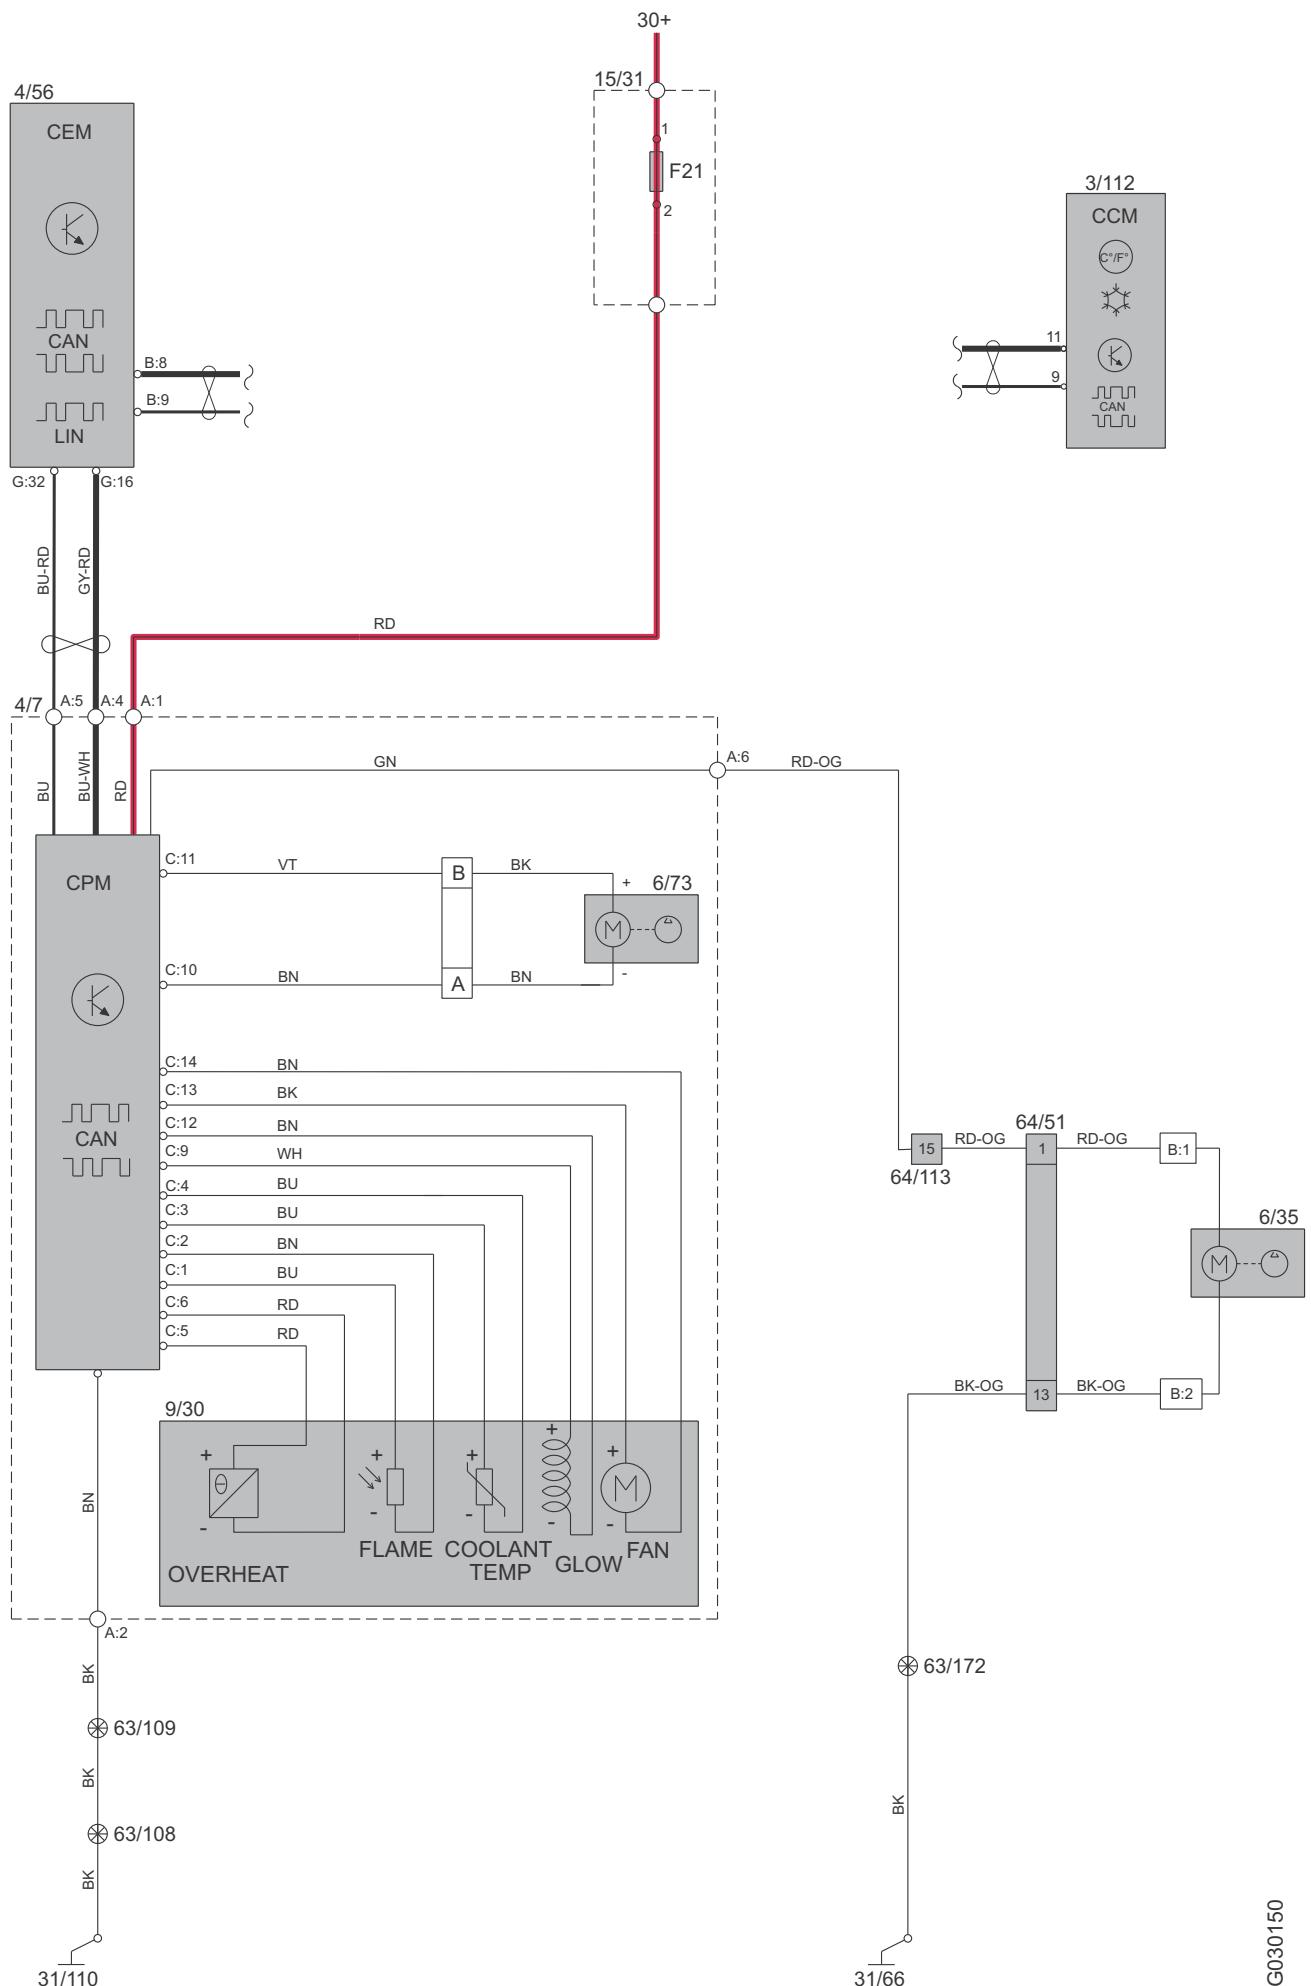


Group 87 Climate control system, Accessories Relay, electric engine heater

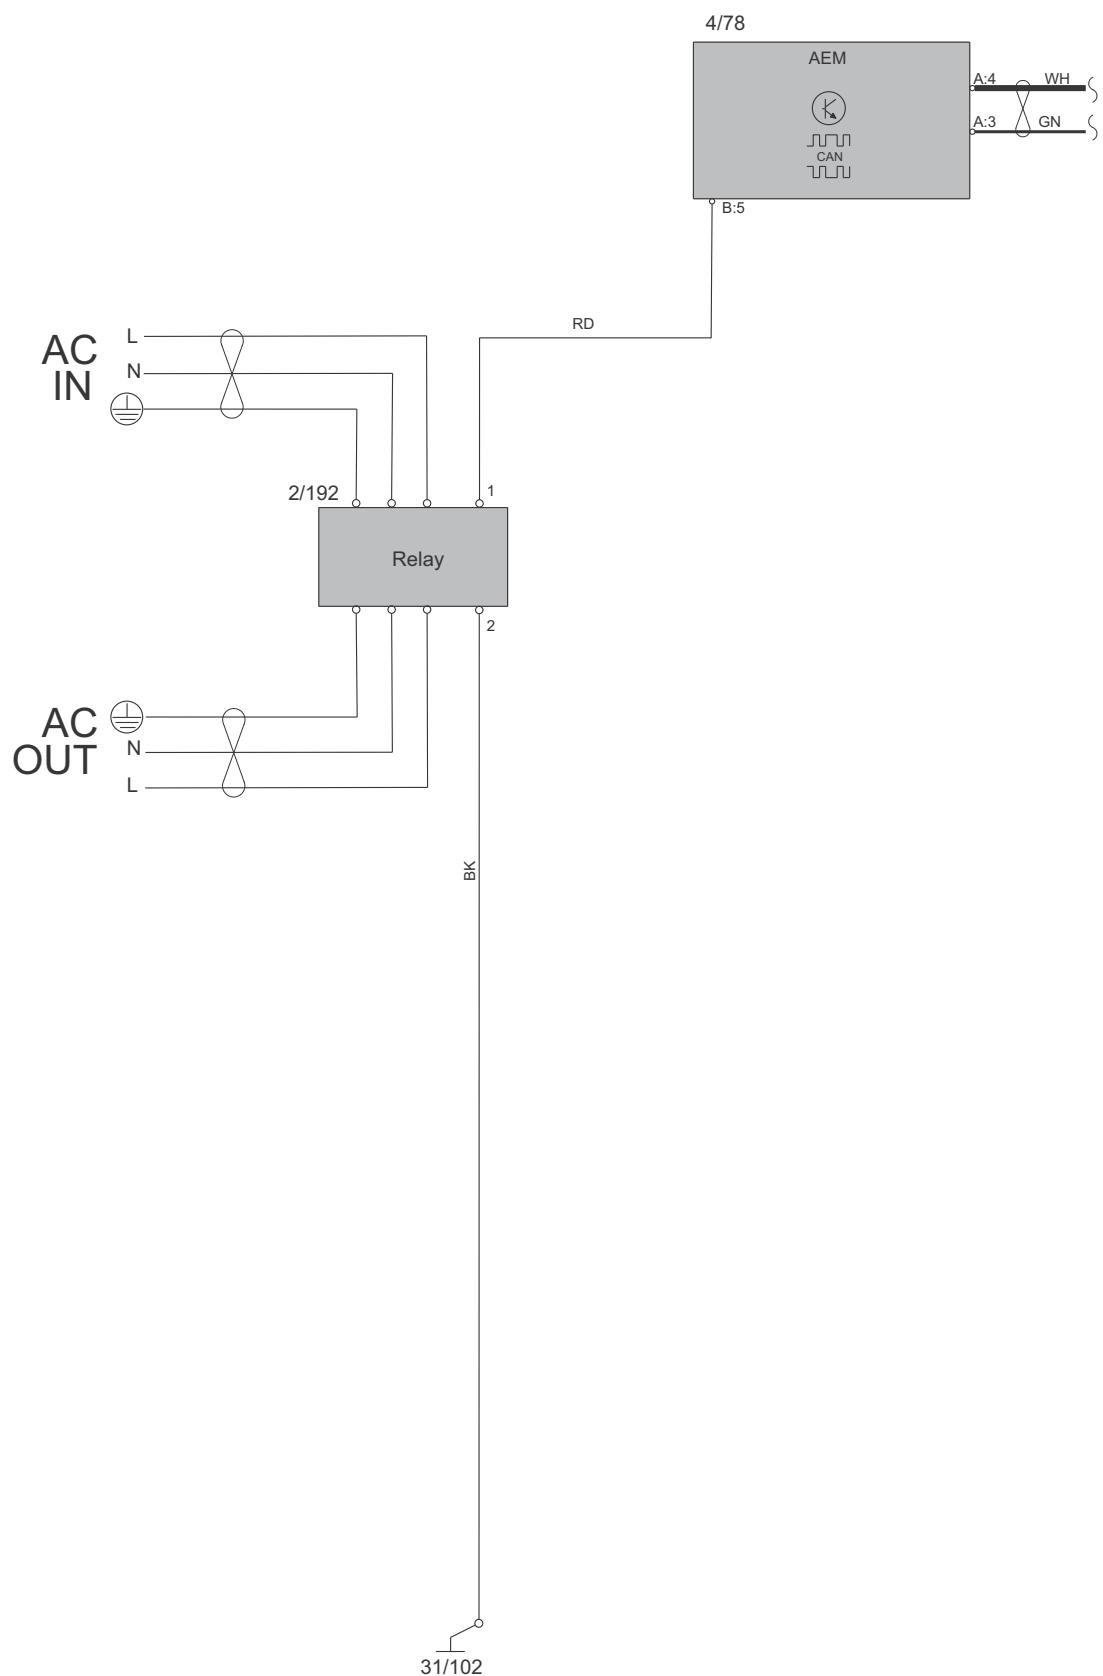

G030159


**Group 87 Climate control system
Electric engine heater Flexifuel**

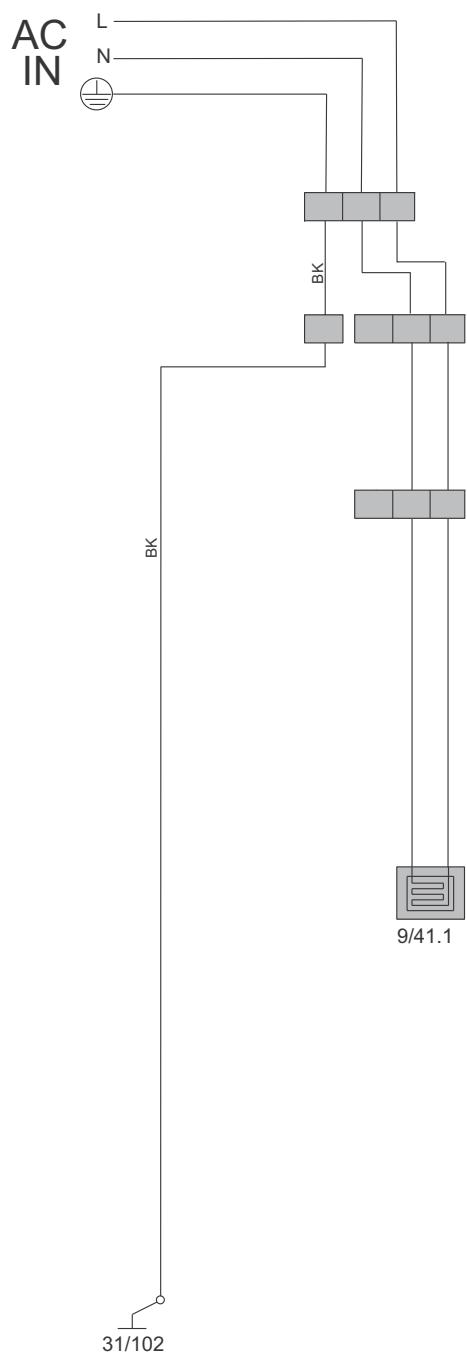

G030160


Group 88 Internal equipment

Supplemental restraint system C30/S40/V50 1:2

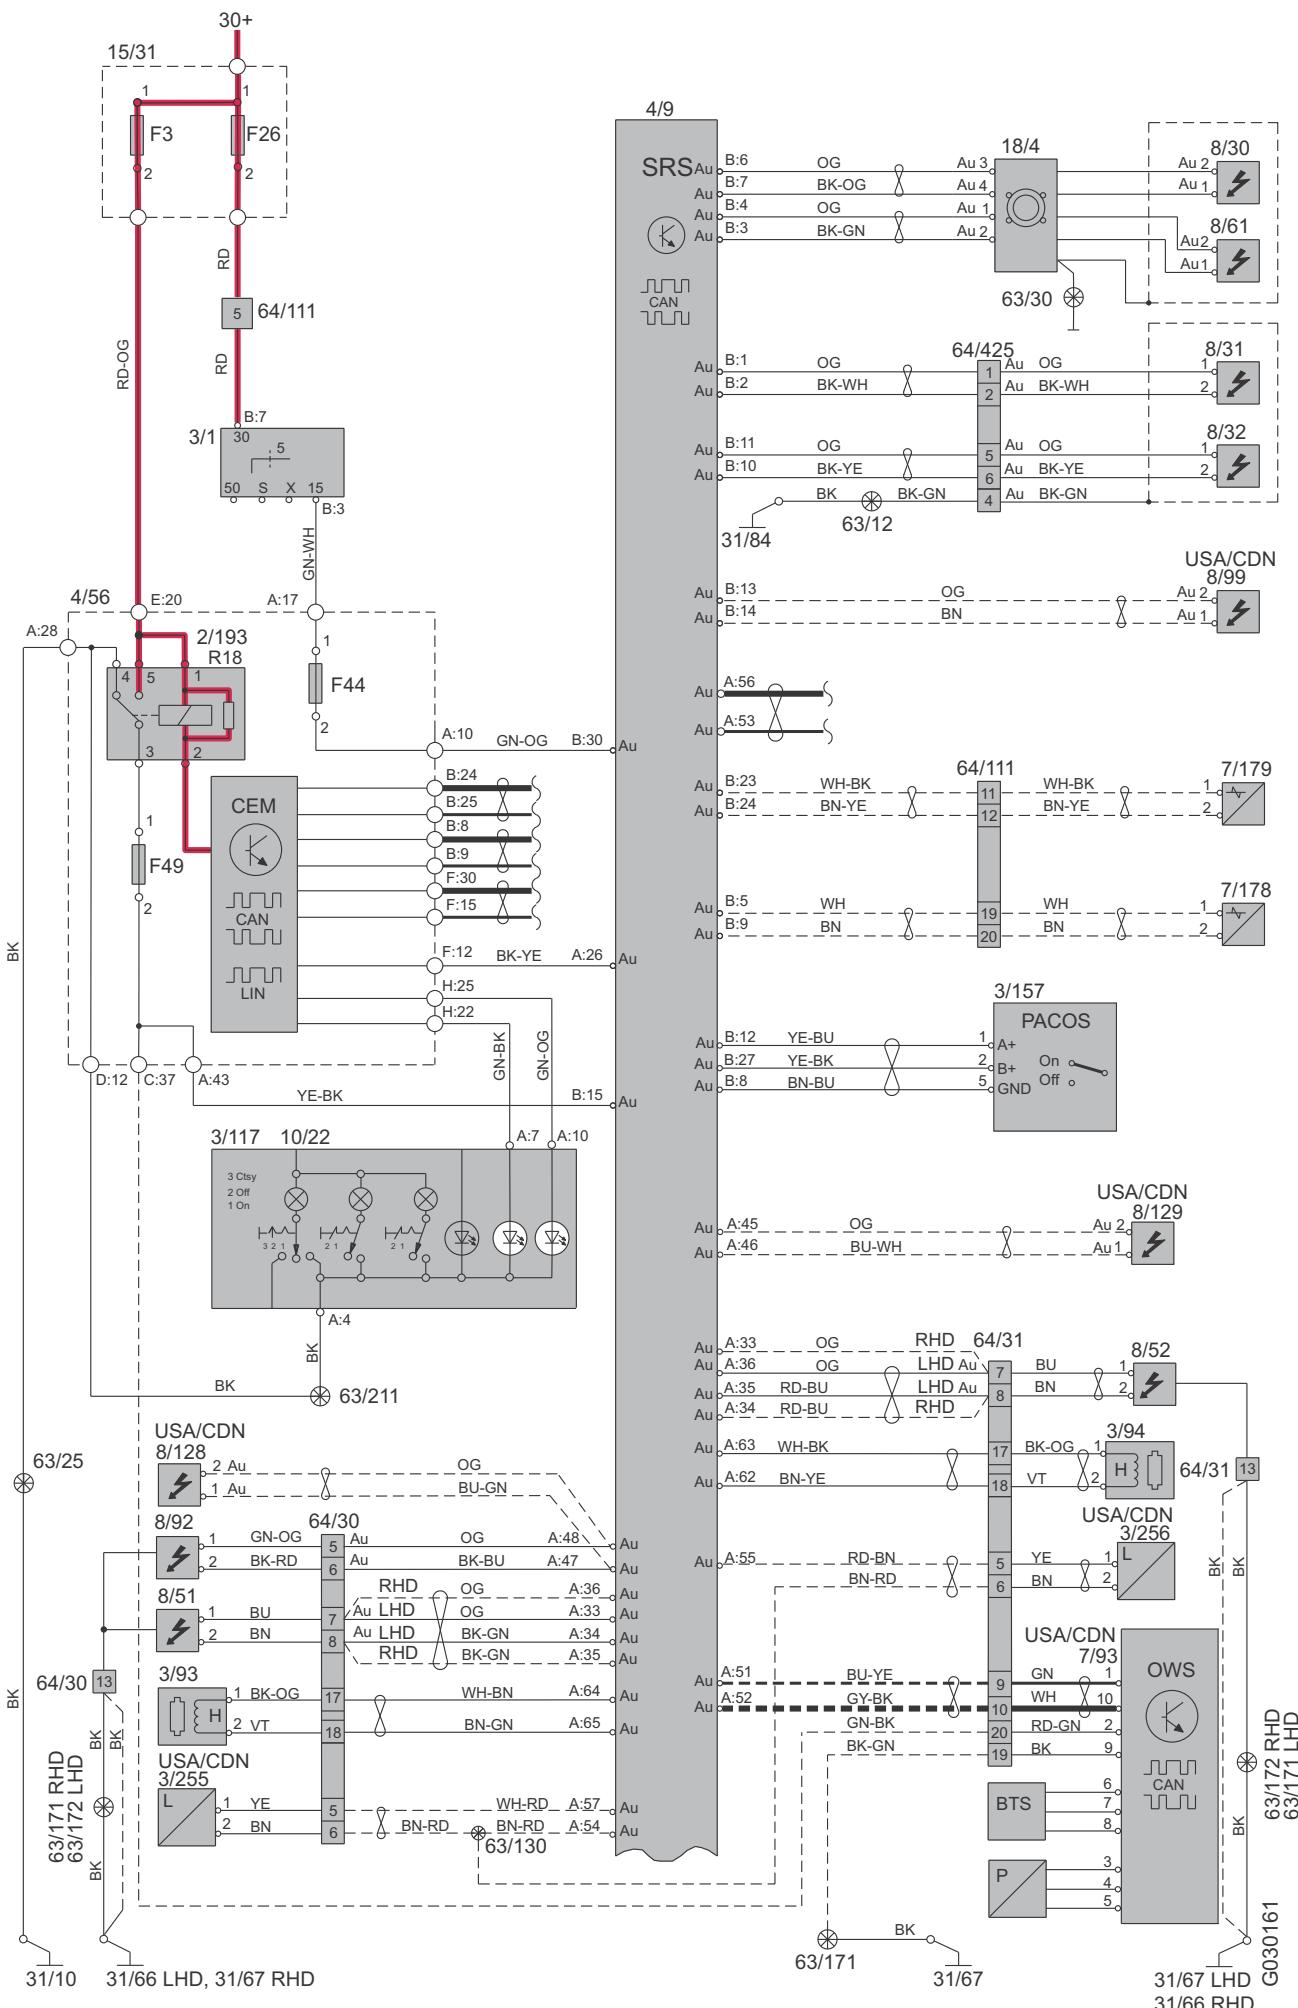


Group 88 Internal equipment

Supplemental restraint system C30/S40/V50 2:2

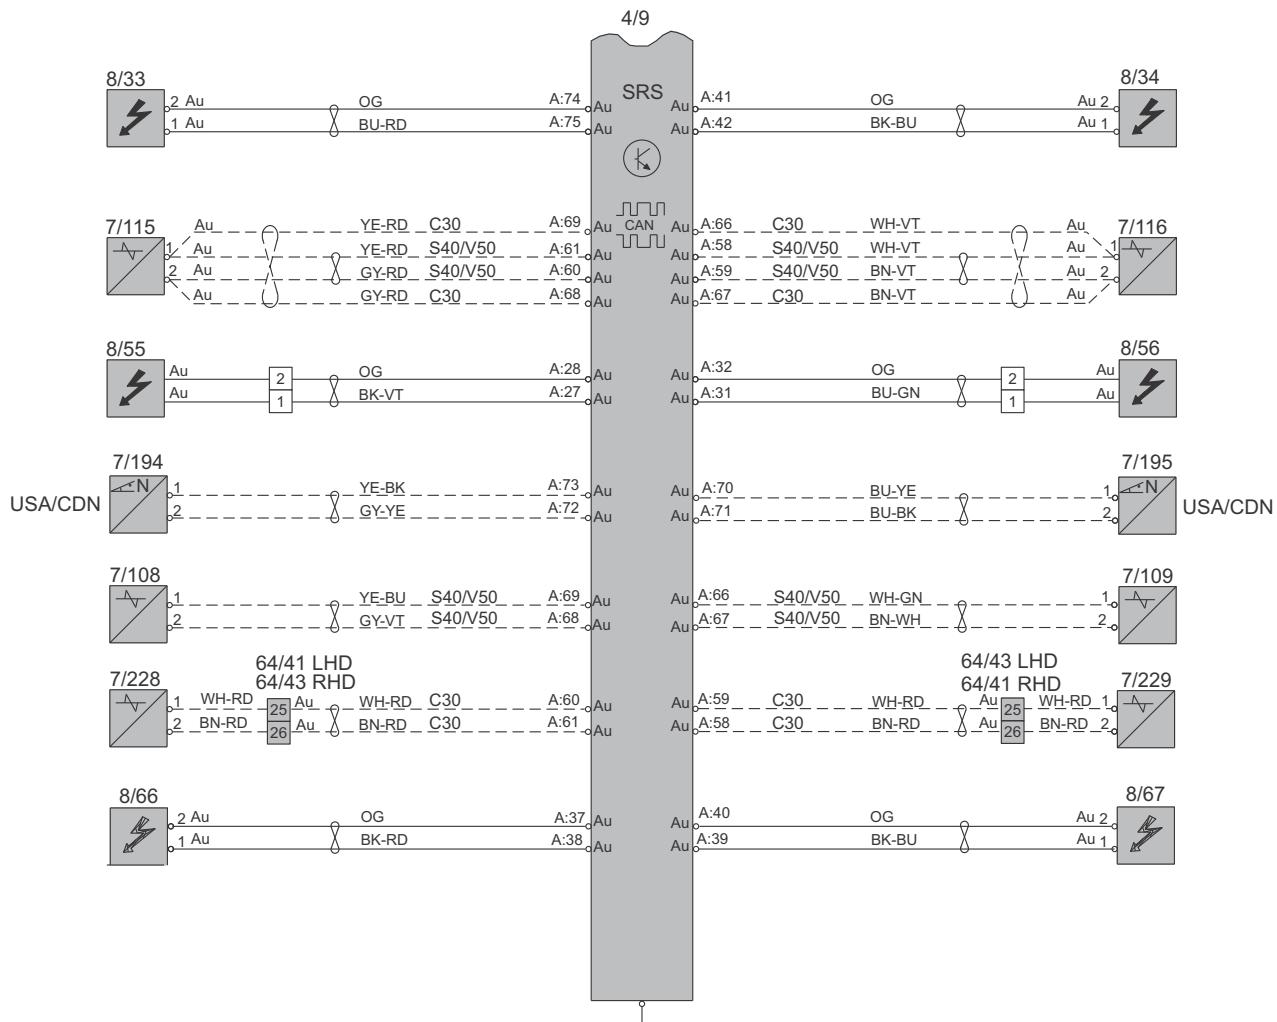


Group 88 Internal equipment

Supplemental restraint system C70 1:2

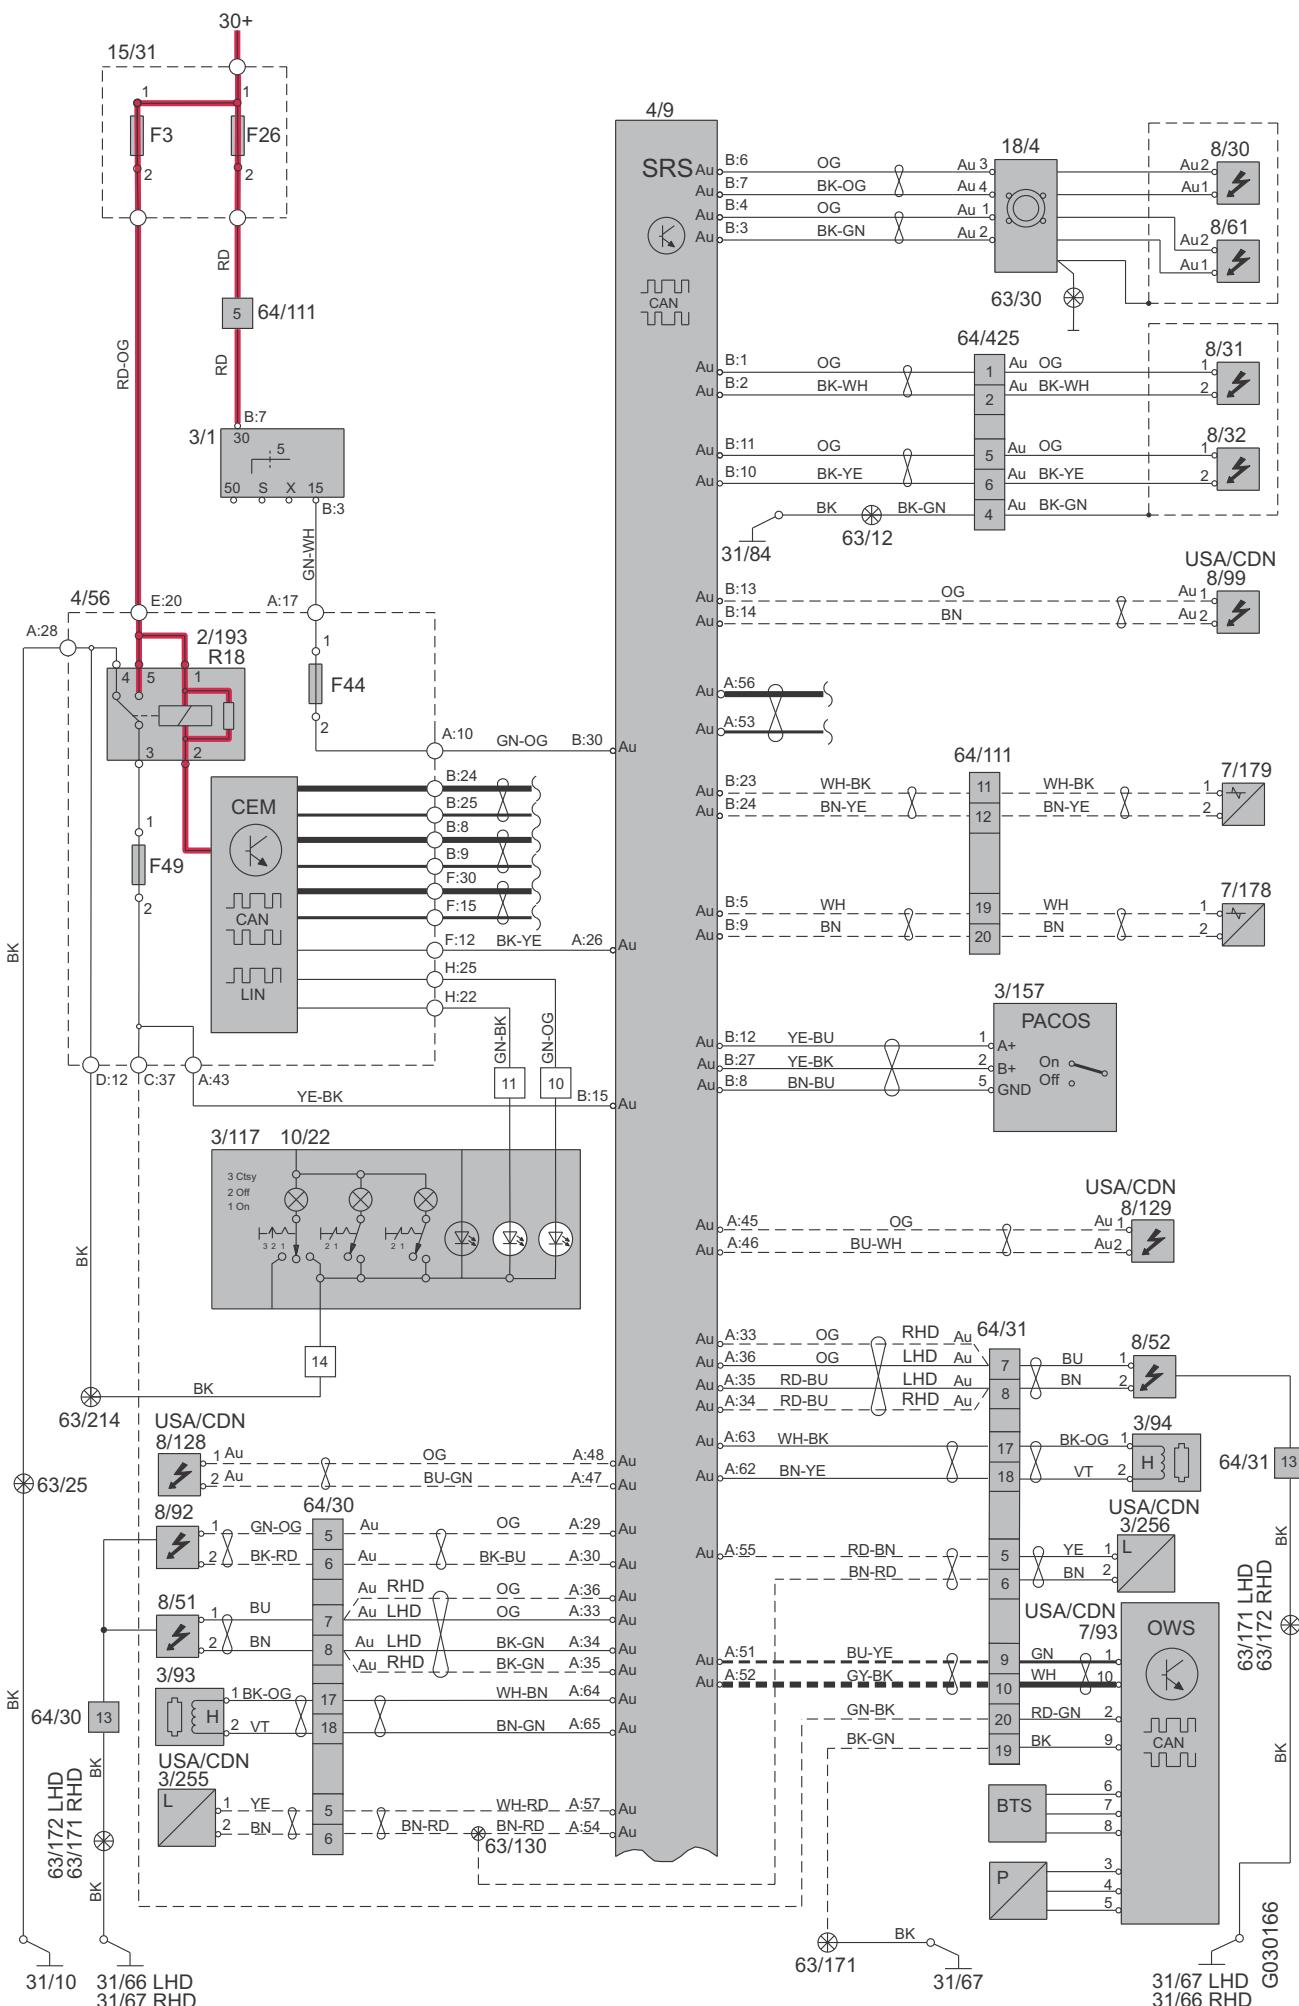


Group 88 Internal equipment

Supplemental restraint system C70 2:2

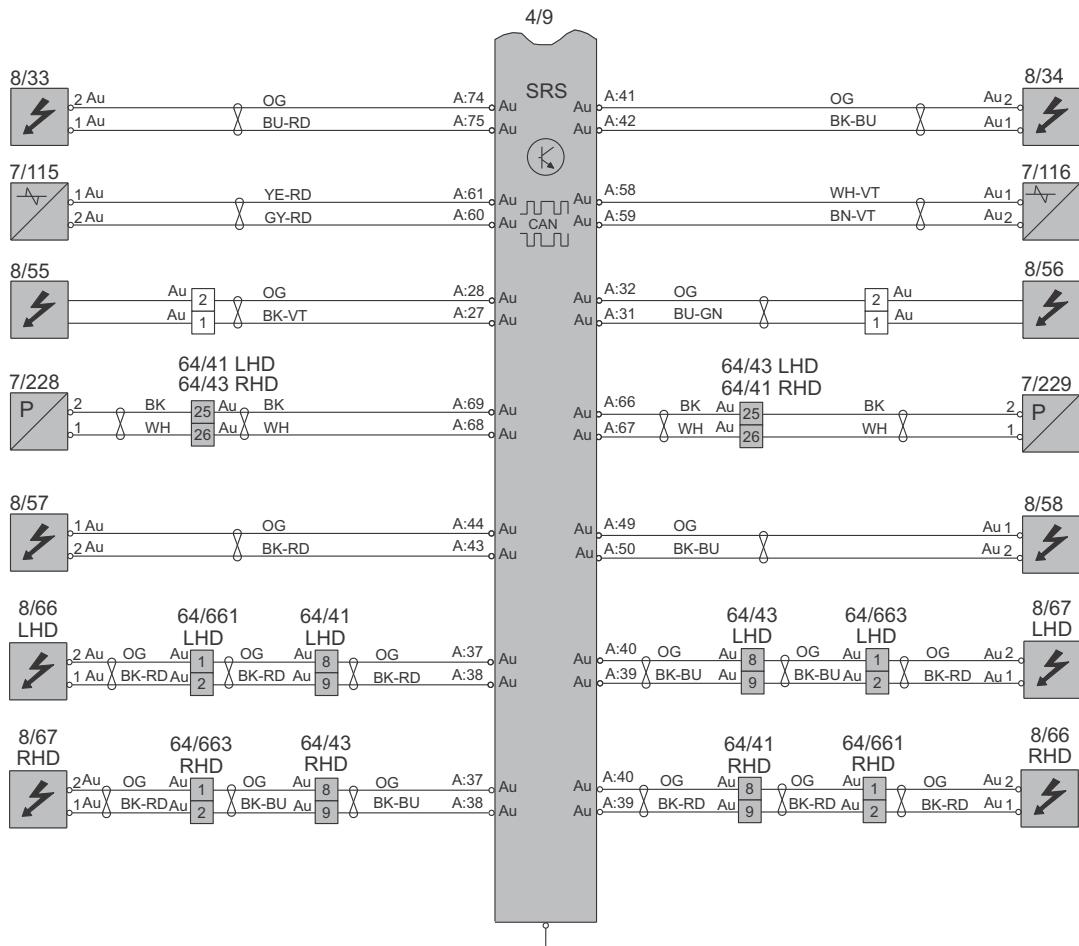


Group 88 Internal equipment

Rear-view mirror with automatic dimming

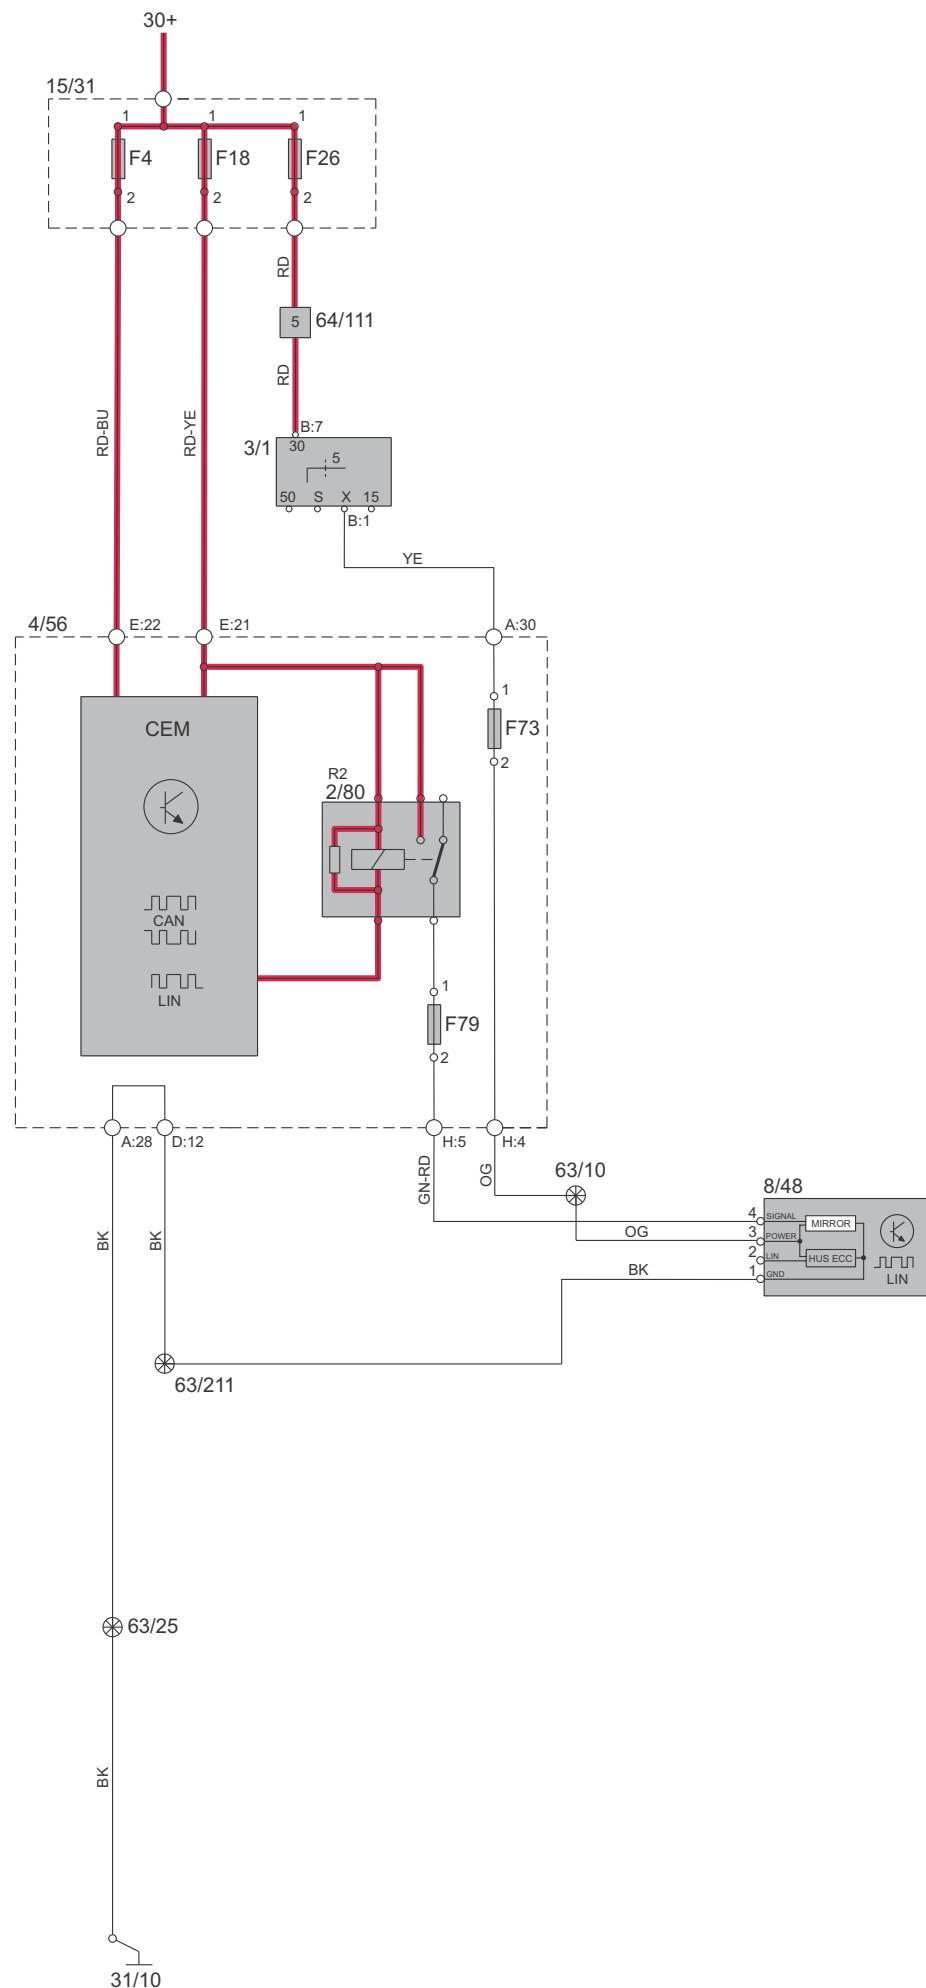

Group 88 Internal equipment

Remote control garage opening

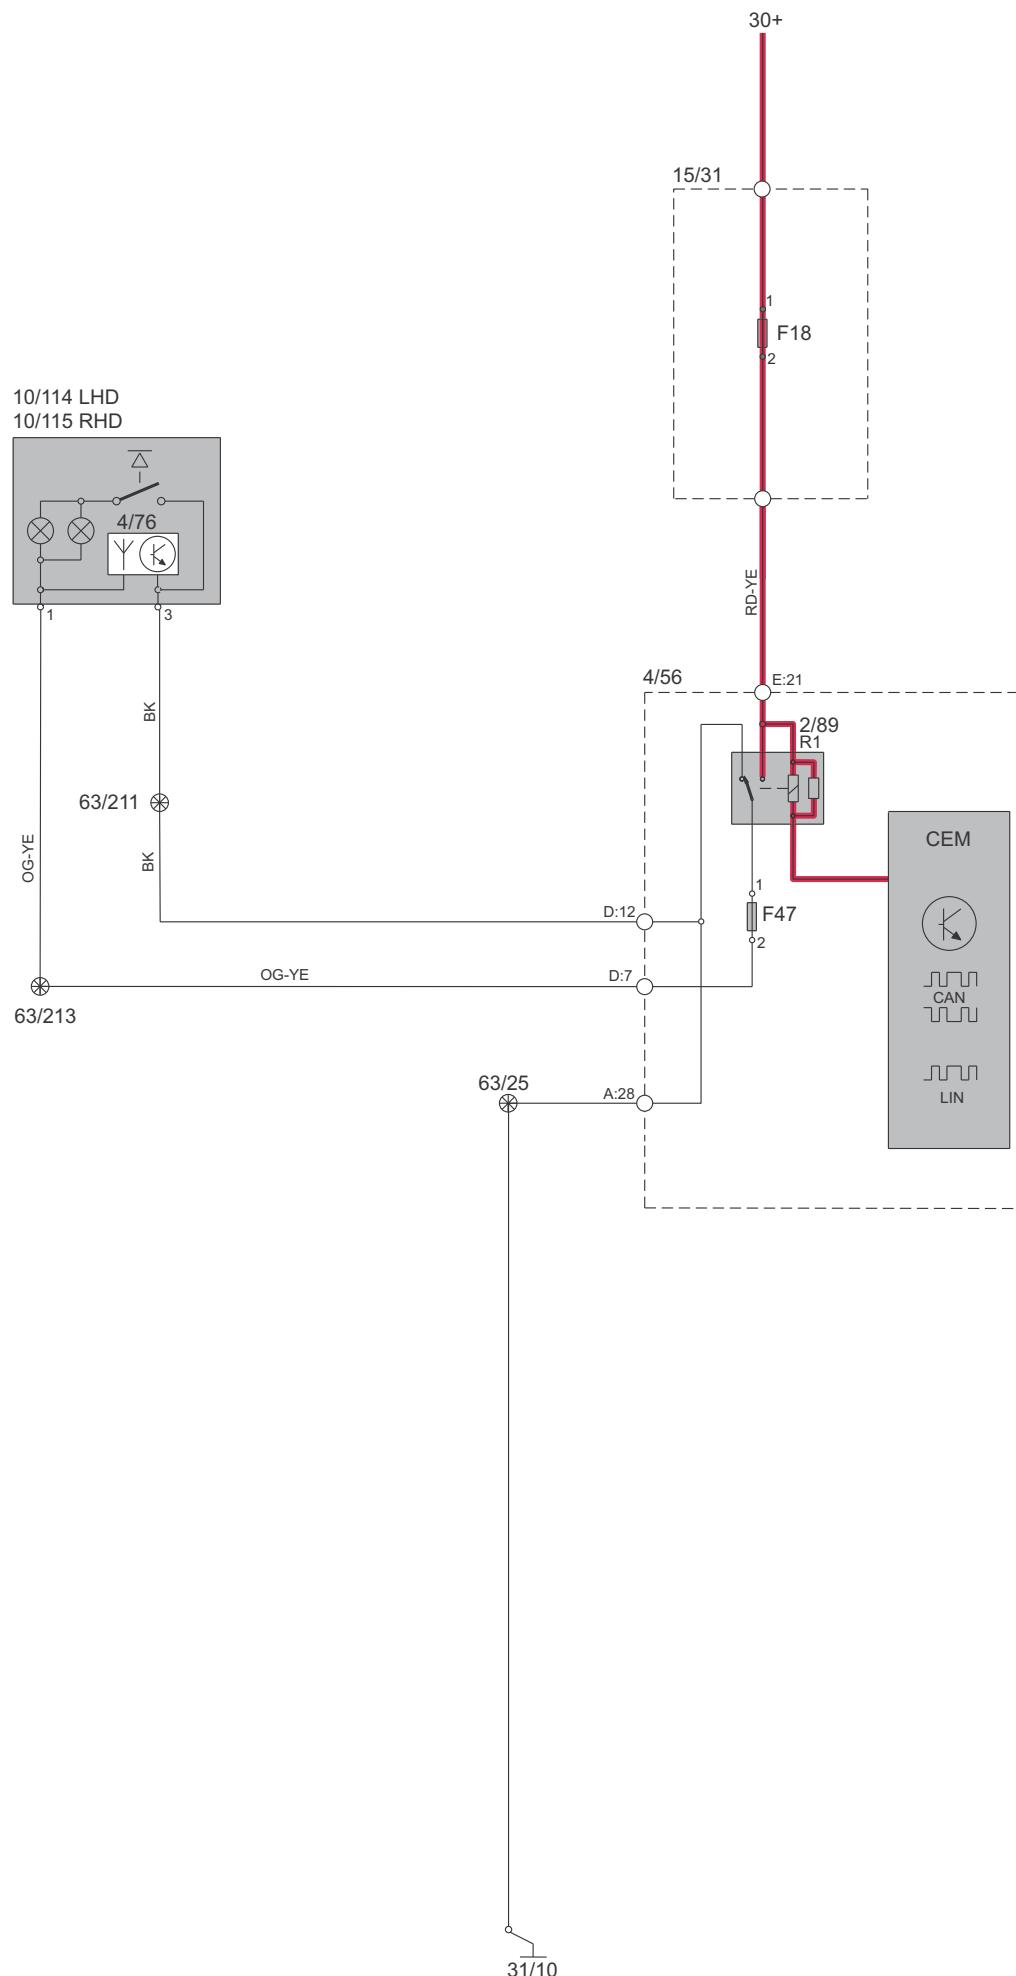

Connectors

64/10B - 64/27

64/10B C70 6-pin gray

No.	Roof harness			Floor harness		
1	4/56H:21	Central Electronic Module (CEM)	OG-YE	63/218	Branching point	OG-YE
2	4/56H:17	Central Electronic Module (CEM)	WH-RD	63/217	Branching point	WH-RD
3	3/117:9	Switch unit, ceiling light	BK-YE	63/212	Branching point	BK-YE
4	4/56H:20	Central Electronic Module (CEM)	BK	64/41:10 64/43:10	Connector Connector	BK
5	4/56D:4	Central Electronic Module (CEM)	OG-BU	64/70:1	Connector	OG-BU
6	-		-	-		

64/25G 10-pin gray

No.	Dashboard harness			Tunnel harness		
1	4/56A:23	Central Electronic Module (CEM)	GY	9/1:2	Outlet 12V front	GY
2	63/25	Branching point	BK	3/286:5 9/1:1 63/86	Switch BLIS/PAS/DRIVe Front 12 V outlet C30 Branching point C70	BK
3	64/545:1	Connector	BU-YE	3/286:1	Switch BLIS/PAS/DRIVe	BU-YE
4	64/112:7 64/545:3	Connector Connector	WH	3/286:3	Switch BLIS/PAS/DRIVe	WH
5	-			-		-
6	16/1A:8	Integrated Audio Module (IAM)	-	-		-
7	16/1A:14	Integrated Audio Module (IAM)	RD-BK	17/40:2	Auxiliary equipment input (AUX)	RD-BK
8	16/1A:7	Integrated Audio Module (IAM)	BU-GN	17/40:4	Auxiliary equipment input (AUX)	BU-GN
9	16/1A:9	Integrated Audio Module (IAM)	BU-RD	17/40:1	Auxiliary equipment input (AUX)	BU-RD
10	-			-		

64/27 5-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1D:1	Integrated Audio Module (IAM)	BK	17/42:1	USB-port	BK
2	16/1D:2	Integrated Audio Module (IAM)	VT	17/42:2	USB-port	VT
3	16/1D:3	Integrated Audio Module (IAM)	BN	17/42:3	USB-port	BN
4	16/1D:4	Integrated Audio Module (IAM)	RD	17/42:4	USB-port	RD
5	16/1D:5	Integrated Audio Module (IAM)	-	17/42:5	USB-port	-

Connectors

64/30:1-13

64/30

20-pin black

No.	Floor harness			Driver's seat harness		
1	63/172 63/171	Branching point, LHD Branching point, RHD	BK	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	4/56C:43	Central Electronic Module (CEM)	GN-BK	9/12A:4	Seat Heating Module (SHM), driver's side	RD
3	-		-	-		-
4	64/112:6 64/112:7	Connector, RHD Connector, LHD	WH	9/12A:2	Seat Heating Module (SHM), driver's side	BU
5	4/9A:29	Supplemental Restraint System Module (SRS), C70	OG	8/92:1	Lap belt tensioner, driver	GN-OG
	4/9A:48	Supplemental Restraint System Module (SRS)	WH-RD	3/255:1	Driver's seat position sensor, USA/CDN	YE
	4/9A:57	Supplemental Restraint System module (SRS), USA/CDN				
6	4/9A:30	Supplemental Restraint System Module (SRS), C70	BK-BU	8/92:2	Lap belt tensioner, driver	BK-RD
	4/9A:47	Supplemental Restraint System Module (SRS)	BN-RD	3/255:2	Driver's seat position sensor, USA/CDN	BN
	63/130	Branching point, USA/CDN				
7	4/9A:33	Supplemental restraint system module (SRS), LHD	OG	8/51:1	Igniter side airbag, driver's side	BU
	4/9A:36	Supplemental restraint system module (SRS), RHD				
8	4/9A:34	Supplemental restraint system module (SRS), LHD	BK-GN	8/51:2	Igniter side airbag, driver's side	BN
	4/9A:35	Supplemental restraint system module (SRS), RHD				
9	-		-	-		-
10	-		-	-		-
11	63/221	Branching point	BU-RD	4/52B:3	Power Seat Module (PSM)	GN
12	63/220	Branching point	GY-RD	4/52B:4	Power Seat Module (PSM)	WH
13	31/66	Ground connection, LHD	BK	8/92	Lap belt tensioner, driver	-
	31/67	Ground connection, RHD		8/51	Igniter side airbag, driver's side	
	63/171	Branching point, RHD				
	63/172	Branching point, LHD				
continues						

Connectors
64/30:14-20

64/30
20-pin black

No.	Floor harness			Driver's seat harness		
14	63/173	Branching point	OG-BU	3/26:7 3/26:11 4/52B:1 4/52B:6	Switch unit, power driver's seat, RHD Switch unit, power driver's seat, LHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD	RD-GN
15	4/56C:30	Central Electronic Module (CEM)	OG-YE	3/26:2 3/26:5 4/52A:1 4/52A:7	Switch unit, power driver's seat, LHD Switch unit, power driver's seat, RHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD	RD-BU
16	63/171 63/172	Branching point, RHD Branching point, LHD	BK	3/26:3 3/26:8 3/287:5 3/288:5 4/52A:1 4/52A:7 4/52B:2 4/52B:6	Switch unit, power driver's seat, LHD Switch unit, power driver's seat, RHD Switch, rear seat entry, left, C30/C70 Switch, rear seat entry, right, C30/C70 Power Seat Module (PSM), memory, RHD Power Seat Module (PSM), memory, LHD Power Seat Module (PSM), memory, RHD Power Seat Module (PSM), memory, LHD	BK
17	4/9A:64	Supplemental Restraint System Module (SRS)	WH-BN	3/93:1	Contact, driver's seat belt buckle	BK-OG
18	4/9A:65	Supplemental Restraint System Module (SRS)	BN-GN	3/93:2	Contact, driver's seat belt buckle	VT
19	-		-	-		-
20	-		-	-		-

Connectors

64/31:1-13

64/31

20-pin black

No.	Floor harness			Passenger seat harness		
1	63/171 63/172	Branching point, LHD Branching point, RHD	BK	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	4/56C:42	Central Electronic Module (CEM)	GN-YE	9/13A:4	Seat Heating Module (SHM), passenger side	RD
3	-		-	-		-
4	64/112:6 64/112:7	Connector, LHD Connector, RHD	WH-GN	9/13A:2	Seat Heating Module (SHM), passenger side	BU
5	4/9A:55	Supplemental Restraint System module (SRS), USA/CDN	RD-BN	3/256:1	Passenger seat position sensor, USA/CDN	YE
6	63/130	Branching point	BN-RD	3/256:2	Passenger seat position sensor, USA/CDN	BN
7	4/9A:33 4/9A:36	Supplemental restraint system module (SRS), RHD Supplemental restraint system module (SRS), LHD	OG	8/52:1	Igniter side airbag, passenger side	BU
8	4/9A:34 4/9A:35	Supplemental restraint system module (SRS), RHD Supplemental Restraint System Module (SRS, LHD)	RD-BU	8/52:2	Igniter side airbag, passenger side	BN
9	4/9A:51 4/56F:17	Supplemental Restraint System module (SRS), USA/CDN Central Electronic Module (CEM), C30/C70	BU-YE YE-RD	7/93:1 3/46:1	Occupant Weight Sensor (OWS), USA/CDN Seat contact passenger seat, C30/C70	GN WH
10	4/9A:52 4/56F:13	Supplemental Restraint System module (SRS), USA/CDN Central Electronic Module (CEM), C30/C70	GY-BK BN-RD	7/93:10 3/46:2	Occupant Weight Sensor (OWS), USA/CDN Seat contact passenger seat, C30/C70	WH
11	4/56F:17 63/221	Central Electronic Module (CEM), S40/V50 Branching point, C30/C70	YE-RD BU-RD	3/46:1 4/54B:3	Seat contact, passenger seat Power Seat Module (PSM), C30/C70	WH GN
12	4/56F:13 63/220	Central Electronic Module (CEM), S40/V50 Branching point, C30/C70	BN-RD GY-RD	3/46:2 4/54B:4	Seat contact, passenger seat Power Seat Module (PSM), C30/C70	WH
13	31/66 31/67 63/171 63/172	Ground connection, RHD Ground connection, LHD Branching point, LHD Branching point, RHD	BK	8/52	Igniter side airbag, passenger side	-
continues						

Connectors
64/31:14-20

64/31
20-pin black

No.	Floor harness			Passenger seat harness		
14	63/173	Branching point	OG-BU	3/27:7 3/27:11 4/54B:6 4/54B:1	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD Power Seat Module (PSM), C30/C70, LHD Power Seat Module (PSM), C30/C70, RHD	RD-GN
15	4/56C:29 4/56C:30	Central Electronic Module (CEM) Central Electronic Module (CEM)	OG-YE	3/27:2 3/27:5 4/54A:7 4/54A:1	Switch unit, power passenger seat, RHD Switch unit, power passenger seat, LHD Power Seat Module (PSM), C30/C70, LHD Power Seat Module (PSM), C30/C70, RHD	RD-BU
16	63/171 63/172	Branching point, LHD Branching point, RHD	BK	3/27:3 3/27:8 3/287:5 3/288:5 4/54A:1 4/54B:2 4/54A:7 4/54B:6	Switch unit, power passenger seat, RHD Switch unit, power passenger seat, LHD Switch, rear seat entry, left, C30/C70 Switch, rear seat entry, right, C30/C70 Power Seat Module (PSM), C30/C70, LHD Power Seat Module (PSM), C30/C70, LHD Power Seat Module (PSM), C30/C70, RHD Power Seat Module (PSM), C30/C70, RHD	BK
17	4/9A:63	Supplemental Restraint System Module (SRS)	WH-BK	3/94:1	Contact, passenger seat belt buckle	BK-OG
18	4/9A:62	Supplemental Restraint System Module (SRS)	BN-YE	3/94:2	Contact, passenger seat belt buckle	VT
19	63/171	Branching point	BK-GN	7/93:9	Occupant Weight Sensor (OWS)	BK
20	4/56C:37	Central Electronic Module (CEM)	GN-BK	7/93:2	Occupant Weight Sensor (OWS)	RD-GN

Connectors

64/35

64/35 C30 16-pin green

No.	Passenger door harness			Floor harness	
1	-	-	-	-	-
2	64/43:18 Connector, RHD	WH	7/69:1	Sensor outdoor temperature	-
3	64/43:17 Connector, RHD	WH-BK	7/69:2	Sensor outdoor temperature	-
4	-	-	-	-	-
5	3/127B:4 Passenger Door Module (PDM)	GN-WH	4/127	Right Camera Module (RCM)	GN-WH
6	3/127B:12 Passenger Door Module (PDM)	BK	9/34 10/149	Electrically heated rear-view mirror, passenger door Lighting, rear-view mirror passenger door	-
7	3/127B:7 Passenger Door Module (PDM), LHD 3/127B:7 Passenger Door Module (PDM), RHD	GY BU	6/63	Power passenger door mirror	-
8	3/127B:11 Passenger Door Module (PDM)	RD	9/34	Electrically heated rear-view mirror, passenger door	-
9-11	-	-	-	-	-
12	3/127B:14 Passenger Door Module (PDM)	BK-BU	10/149	Lighting, rear-view mirror passenger door	-
13	-	-	-	-	-
14	3/127B:10 Passenger Door Module (PDM), LHD 3/127B:10 Passenger Door Module (PDM), RHD	BU GY	6/63	Power passenger door mirror	-
15	3/127B:8 Passenger Door Module (PDM)	PK	6/63	Power passenger door mirror	-
16	3/127B:9 Passenger Door Module (PDM)	GN	6/63	Power passenger door mirror	-

Connectors

64/41 RHD

64/41 RHD 26-pin black

No.	Driver's door harness			Floor harness		
1	3/126A:3	Driver Door Module (DDM)	GY-RD	63/220	Branching point	GY-RD
2	3/126A:12	Driver Door Module (DDM)	BU-RD	63/221	Branching point	BU-RD
3	3/100:4	Lock unit, driver's door	BK	4/56F:19	Central Electronic Module	BK
4	63/26	Branching point, S40/V50/C70	BK	64/47:1	Connector, S40/V50/C70	BK
5	3/273:5	Left front door lock contact, C30/C70	WH	4/93A:14	Keyless Vehicle Module (KVM), C30/C70	WH
6	3/273:4	Left front door lock contact, C30/C70	BK	4/93A:23	Keyless Vehicle Module (KVM), C30/C70	BK
7	64/660:10	Connector, C70	BK	63/504	Branching point, C70	BK
8	64/661:1	Connector, C70	OG	4/9A:40	Supplemental Restraint System Module (SRS)	OG
9	64/661:2	Connector, C70	BK-RD	4/9A:39	Supplemental Restraint System Module (SRS), C70	BK-RD
10	64/660:11	Connector, C70	BK	64/10B:4	Connector, C70	BK
11	3/273:1	Lock contact, LH front door	BK	4/93E:2	Keyless Vehicle Module (KVM)	BK
12	3/273:3	Lock contact, LH front door	BK	4/93E:22	Keyless Vehicle Module (KVM)	BK
13	3/100:2	Lock unit passenger door, KVM	BK	4/93D:22	Keyless Vehicle Module (KVM)	BK
14	3/100:4	Lock unit passenger door, KVM	BK	4/93A:5	Keyless Vehicle Module (KVM)	BK
15	3/100:3	Lock unit passenger door, KVM	BK	4/93D:2	Keyless Vehicle Module (KVM)	BK
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
20	3/126A:9	Driver Door Module (DDM)	BK	31/116	Ground connection	BK
21	3/126A:18	Driver Door Module (DDM)	BK	4/56C:31	Central Electronic Module (CEM)	BK
22	16/156:2 63/40	Passenger door loudspeaker, C30/S40/V50 Branching point, C70	BK	16/105B:3 64/112:12	Audio module (AUD) Connector	BK
23	16/156:1 63/41	Passenger door loudspeaker, C30/S40/V50 Branching point, C70	WH	16/105B:11 64/112:11	Audio module (AUD) Connector	WH
24	-	-	-	-	-	-
25	7/229:1 7/229:2	Side impact sensor, right door, C30 Side impact sensor, right door, C70	WH-RD BK	4/9A:59 4/9A:66	Supplemental Restraint System Module (SRS), C30 Supplemental Restraint System Module (SRS), C70	WH-RD BK
26	7/229:2 7/229:1	Side impact sensor, right door, C30 Side impact sensor, right door, C70	BN-RD WH	4/9A:58 4/9A:67	Supplemental Restraint System Module (SRS), C30 Supplemental Restraint System Module (SRS), C70	BN-RD WH

Connectors

64/41:1-24 LHD

64/41LHD 26-pin black

No.	Driver's door harness		Floor harness		
1	3/126A:3	Driver Door Module (DDM)	GY-RD	63/220	Branching point
2	3/126A:12	Driver Door Module (DDM)	BU-RD	63/221	Branching point
3	3/100:4	Lock unit, driver's door	BK	4/56F:19	Central Electronic Module
4	63/26	Branching point, S40/V50/C70	BK	64/45:1	Connector, S40/V50/C70
5	3/273:5	Left front door lock contact, C30/C70	WH	4/93A:15	Keyless Vehicle Module (KVM), C30/C70
6	3/273:4	Left front door lock contact, C30/C70	BK	4/93A:3	Keyless Vehicle Module (KVM), C30/C70
7	64/660:10	Connector, C70	BK	63/504	Branching point, C70
8	64/661:1	Connector, C70	OG	4/9A:37	Supplemental Restraint System (SRS), C70
9	64/661:2	Connector, C70	BK-RD	4/9A:38	Supplemental Restraint System Module (SRS), C70
10	64/660:11	Connector, C70	BK	64/10B:4	Connector, C70
11	3/273:1	Lock contact, LH front door	BK	4/93E:19	Keyless Vehicle Module (KVM)
12	3/273:3	Lock contact, LH front door	BK	4/93E:21	Keyless Vehicle Module (KVM)
13	3/100:3	Lock unit passenger door, KVM	BK	4/93D:9	Keyless Vehicle Module (KVM)
14	3/100:1	Lock unit passenger door, KVM	BK	4/93B:4	Keyless Vehicle Module (KVM)
15	3/100:2	Lock unit passenger door, KVM	BK	4/93D:1	Keyless Vehicle Module (KVM)
16	-		-	-	-
17	3/126A:8	Driver door module (DDM), S40/V50/C70	BK	4/56F:31	Central Electronic Module (CEM)
	64/333:3	Connector, C30	WH-BK		
18	3/126A:17	Driver door module (DDM), S40/V50/C70	BK	4/56F:28	Central Electronic Module (CEM)
	64/333:2	Connector, C30	WH		
19	-		-	-	-
20	3/126A:9	Driver Door Module (DDM)	BK	31/115	Ground connection
21	3/126A:18	Driver Door Module (DDM)	BK	4/56C:31	Central Electronic Module (CEM)
22	16/155:2	Driver's door loudspeaker, S40/V50/C70	BK	16/105B:1	Audio module (AUD)
	63/42	Branching point, C70		64/112:10	Connector
23	16/155:1	Driver's door loudspeaker, S40/V50/C70	WH	16/105B:9	Audio module (AUD)
	63/43	Branching point, C70		64/112:9	Connector
24	-		-	-	-

continues

Connectors

64/41:25-26 LHD - 64/43:1-13 LHD

64/41 LHD

26-pin black

No.	Driver's door harness			Floor harness		
25	7/228:1	Side impact sensor, left door, C30	WH-RD BK	4/9A:60	Supplemental Restraint System Module (SRS), C30	WH-RD BK
	7/228:2	Side impact sensor, left door, C70		4/9A:69	Supplemental Restraint System Module (SRS), C70	
26	7/228:2	Side impact sensor, left door, C30	BN-RD WH	4/9A:61	Supplemental Restraint System Module (SRS), C30	BN-RD WH
	7/228:1	Side impact sensor, left door, C70		4/9A:68	Supplemental Restraint System Module (SRS), C70	

64/43 LHD

26-pin black

No.	Passenger door harness			Floor harness		
1	3/127A:3	Passenger Door Module (PDM)	GY-RD	63/232	Branching point	GY-RD
2	3/127A:12	Passenger Door Module (PDM)	BU-RD	63/233	Branching point	BU-RD
3	3/110:4	Lock unit, passenger door	BK	4/56F:18	Central Electronic Module (CEM)	BK
4	3/127A:13	Passenger Door Module (PDM)	BK	3/129:6 64/47:1	Rear Right Door Module (RDM), C70 Connector, S40/V50	BK
5	3/274:5	Right front door lock contact, C30/C70	WH	4/93A:14	Keyless Vehicle Module (KVM), C30/C70	WH
6	3/274:4	Right front door lock contact, C30/C70	BK	4/93A:23	Keyless Vehicle Module (KVM), C30/C70	BK
7	64/662:10	Connector, C70	BK	63/504	Branching point, C70	BK
8	64/663:1	Connector, C70	OG	4/9A:40	Supplemental Restraint System Module (SRS), C70	OG
9	64/663:2	Connector, C70	BK-BU	4/9A:39	Supplemental Restraint System Module (SRS), C70	BK-BU
10	64/662:11	Connector, C70	BK	64/10B:4	Connector, C70	BK
11	3/274:1	Lock contact, RH front door	BK	4/93E:2	Keyless Vehicle Module (KVM)	BK
12	3/274:3	Lock contact, RH front door	BK	4/93E:22	Keyless Vehicle Module (KVM)	BK
13	3/110:2	Lock unit, passenger door	BK	4/93D:22	Keyless Vehicle Module (KVM)	BK
continues						

Connectors

64/43:14-26 LHD - 64/43:1-4 RHD

64/43 LHD

26-pin black

No.	Passenger door harness			Floor harness		
14	3/110:4	Lock unit, passenger door	BK	4/93A:5	Keyless Vehicle Module (KVM)	BK
15	3/110:3	Lock unit, passenger door	BK	4/93D:2	Keyless Vehicle Module (KVM)	BK
16	-		-	-	-	-
17	-		-	-	-	-
18	-		-	-	-	-
19	-		-	-	-	-
20	3/127A:9	Passenger Door Module (PDM)	BK	31/116	Ground connection	BK
21	3/127A:18	Passenger Door Module (PDM)	BK	4/56C:24	Central Electronic Module (CEM)	BK
22	16/156:2 63/40	Passenger door loudspeaker, C30/S40/V50 Branching point, C70	BK	16/105B:3 64/112:12	Audio module (AUD) Connector	BK
23	16/156:1 63/41	Passenger door loudspeaker, C30/S40/V50 Branching point, C70	WH	16/105B:11 64/112:11	Audio module (AUD) Connector	WH
24	-		-	-	-	-
25	7/229:1 7/229:2	Side impact sensor, right door, C30 Side impact sensor, right door, C70	WH-RD BK	4/9A:59 4/9A:66	Supplemental Restraint System Module (SRS), C30 Supplemental Restraint System Module (SRS), C70	WH-RD BK
26	7/229:2 7/229:1	Side impact sensor, right door, C30 Side impact sensor, right door, C70	BN-RD WH	4/9A:58 4/9A:67	Supplemental Restraint System Module (SRS), C30 Supplemental Restraint System Module (SRS), C70	BN-RD WH

64/43 RHD

26-pin black

No.	Passenger door harness			Floor harness		
1	3/127A:3	Passenger Door Module (PDM)	GY-RD	63/232	Branching point	GY-RD
2	3/127A:12	Passenger Door Module (PDM)	BU-RD	63/233	Branching point	BU-RD
3	3/110:4	Lock unit, passenger door	BK	4/56F:18	Central Electronic Module (CEM)	BK
4	3/127A:13	Passenger Door Module (PDM)	BK	3/128:6 64/45:1	Rear Right Door Module (RDM), C70 Connector, S40/V50	BK

continues

Connectors

64/43:5-24 RHD

64/43 RHD 26-pin black

No.	Passenger door harness			Floor harness		
5	3/274:5	Right front door lock contact, C30/C70	WH	4/93A:15	Keyless Vehicle Module (KVM), C30/C70	WH
6	3/274:4	Right front door lock contact, C30/C70	BK	4/93A:3	Keyless Vehicle Module (KVM), C30/C70	BK
7	64/662:10	Connector, C70	BK	63/504	Branching point, C70	BK
8	64/663:1	Connector, C70	OG	4/9A:37	Supplemental Restraint System Module (SRS), C70	OG
9	64/633:2	Connector, C70	BK-BU	4/9A:38	Supplemental Restraint System Module (SRS), C70	BK-BU
10	64/662:11	Connector	BK	64/10B:4	Connector, C70	BK
11	3/274:1	Lock contact, RH front door	BK	4/93E:19	Keyless Vehicle Module (KVM)	BK
12	3/274:3	Lock contact, RH front door	BK	4/93E:21	Keyless Vehicle Module (KVM)	BK
13	3/110:3	Lock unit, passenger door	BK	4/93D:9	Keyless Vehicle Module (KVM)	BK
14	3/110:1	Lock unit, passenger door	BK	4/93B:4	Keyless Vehicle Module (KVM)	BK
15	3/110:2	Lock unit, passenger door	BK	4/93D:1	Keyless Vehicle Module (KVM)	BK
16	-		-	-		-
17	3/127A:8	Passenger door module (PDM), S40/V50/C70	BK	4/56F:31	Central Electronic Module (CEM)	BK
	64/35:3	Connector, C30	WH-BK			
18	3/127A:17	Passenger door module (PDM), S40/V50/C70	BK	4/56F:28	Central Electronic Module (CEM)	BK
	64/35:2	Connector, C30	WH			
19	-		-	-		-
20	3/127A:9	Passenger Door Module (PDM)	BK	31/115	Ground connection	BK
21	3/127A:18	Passenger Door Module (PDM)	BK	4/56C:24	Central Electronic Module (CEM)	BK
22	16/155:2	Driver's door loudspeaker, C30/S40/V50	BK	16/105B:1	Audio module (AUD)	BK
	63/42	Branching point, C70		64/112:10	Connector	
23	16/155:1	Driver's door loudspeaker, C30/S40/V50	WH	16/105B:9	Audio module (AUD)	WH
	63/43	Branching point, C70		64/112:9	Connector	
24	-		-	-		-

continues

Connectors

64/43:25-26 - 64/45

64/43 RHD

26-pin black

No.	Passenger door harness			Floor harness		
25	7/228:1	Side impact sensor, left door, C30	WH-RD	4/9A:60	Supplemental Restraint System Module (SRS), C30	WH-RD
	7/228:2	Side impact sensor, left door, C70	BK	4/9A:69	Supplemental Restraint System Module (SRS), C70	BK
26	7/228:2	Side impact sensor, left door, C30	BN-RD	4/9A:61	Supplemental Restraint System Module (SRS), C30	BN-RD
	7/228:1	Side impact sensor, left door, C70	WH	4/9A:68	Supplemental Restraint System Module (SRS), C70	WH

64/45 S40/V50

19-pin black

No.	Left rear door harness			Floor harness		
1	3/128:6	Left rear door module (LDM)	BK	64/41:4 64/43:4	Connector, LHD Connector, RHD	BK
2	3/76:4	Lock unit, rear left door	BK	4/56F:21	Central Electronic Module (CEM)	BK-OG
3-8	-	-	-	-	-	-
9	3/128:18	Left rear door module (LDM)	BK	4/56C:21	Central Electronic Module (CEM)	OG-BU
10	63/193	Branching point	BK	63/172	Branching point	BK
11	3/275:1	Lock contact, LH rear door	BK	4/93E:17	Keyless Vehicle Module (KVM)	BN-GN
12	3/275:3	Lock contact, LH rear door	BK	4/93E:4	Keyless Vehicle Module (KVM)	BN-YE
13	3/76:3	Lock unit, rear left door	BK	4/93E:15	Keyless Vehicle Module (KVM)	BN-WH
14	3/76:1	Lock unit, rear left door	BK	4/93B:2	Keyless Vehicle Module (KVM)	BN-BU
15	3/76:2	Lock unit, rear left door	BK	4/93C:2	Keyless Vehicle Module (KVM)	YE-BU
16	3/275:4	Lock contact, LH rear door	WH	4/93A:15	Keyless Vehicle Module (KVM)	WH-GN
17	3/275:5	Lock contact, LH rear door	BK	4/93A:3	Keyless Vehicle Module (KVM)	GY-OG
18	16/6:2	Left-hand rear door speaker	BK	16/105B:4 64/112:14	Audio module (AUD) Connector	GY-WH
19	16/6:1	Left-hand rear door speaker	WH	16/105B:12 64/112:13	Audio module (AUD) Connector	WH-VT

Connectors

64/47 - 64/48:1-4

64/47 S40/V50

19-pin black

No.	Right rear door harness			Floor harness		
1	3/129:6	Right rear door module (RDM)	BK	64/43:4 64/41:4	Connector, LHD Connector, RHD	BK
2	3/77:4	Lock unit, rear right door	BK	4/56F:20	Central Electronic Module (CEM)	BK-BU
3	-		-	-	-	-
4	-		-	-	-	-
5	-		-	-	-	-
6	-		-	-	-	-
7	-		-	-	-	-
8	-		-	-	-	-
9	3/129:18	Right rear door module (RDM)	BK	4/56C:27	Central Electronic Module (CEM)	OG-WH
10	63/192	Branching point	BK	63/171	Branching point	BK
11	3/276:1	Lock contact, RH rear door	BK	4/93E:5	Keyless Vehicle Module (KVM)	BN-RD
12	3/276:3	Lock contact, RH rear door	BK	4/93E:20	Keyless Vehicle Module (KVM)	BN-BU
13	3/77:2	Lock unit, rear right door	BK	4/93D:21	Keyless Vehicle Module (KVM)	BN-GN
14	3/77:4	Lock unit, rear right door	BK	4/93B:3	Keyless Vehicle Module (KVM)	BN
15	3/77:3	Lock unit, rear right door	BK	4/93C:1	Keyless Vehicle Module (KVM)	YE
16	3/276:4	Lock contact, RH rear door	WH	4/93A:14	Keyless Vehicle Module (KVM)	WH-RD
17	3/276:5	Lock contact, RH rear door	BK	4/93A:23	Keyless Vehicle Module (KVM)	GY-RD
18	16/5:2	Right-hand rear door speaker	BK	16/105B:5 64/112:16	Audio module (AUD) Connector	GY
19	16/5:1	Right-hand rear door speaker	WH	16/105B:13 64/112:15	Audio module (AUD) Connector	WH

64/48 C30/S40

8-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
1	63/196	Branching point	BK	63/172 63/174	Branching point Branching point, C30	BK
2	3/35:1	Switch, handle, trunk lid, C30	BK	4/56F:22 4/93E:18	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)	BK-YE
3	6/32:2	Rear window wiper motor, C30	BK	4/56C:33	Central Electronic Module (CEM)	GN-BU
4	3/78:1 9/2C:1	Lock unit, trunk lid/tailgate Heated rear window, C30	BK	4/56C:8 64/113:6	Central Electronic Module (CEM) Connector	WH-GN GN-BU
continues						

Connectors

64/48:5-8 C30/S40 - 64/48 V50

64/48 C30/S40

8-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
5	10/3:2	License plate lighting	OG-BK	4/56C:13	Central Electronic Module (CEM)	OG-BK
	6/32:1	Rear window wiper motor, C30	BK	4/56C:34	Central Electronic Module (CEM)	WH-RD
6	3/78:4 7/101A:1	Lock unit, trunk lid/tailgate Glass breakage sensor, C30	BK	10/24:4 4/56F:21	Cargo compartment lighting Central Electronic Module (CEM)	BK-BU BK-RD
7	3/35:1	Trunk lid/tailgate handle switch, S40	BK	4/56F:22 4/93E:18 4/56F:20	Central Electronic Module (CEM) Keyless Vehicle Module (KVM) Central Electronic Module (CEM)	BK-YE BK-OG
	3/78:3	Lock unit, trunk lid/tailgate	BK	4/56F:24	Central Electronic Module (CEM)	BK-RD

64/48 V50

14-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
1	63/196	Branching point	BK	63/172	Branching point	BK
2	10/19:1	Auxiliary brake light	OG-YE	4/56C:7	Central Electronic Module (CEM)	OG-YE
3	6/32:1	Rear window wiper motor	BK	4/56C:33	Central Electronic Module (CEM)	GN-BU
4	3/78:1	Lock unit, trunk lid/tailgate	BK	4/56C:8	Central Electronic Module (CEM)	WH-GN
5	10/3:2	License plate lighting	OG-BK	4/56C:13	Central Electronic Module (CEM)	OG-BK
6	6/32:2	Rear window wiper motor	BK	4/56C:34	Central Electronic Module (CEM)	WH-RD
7	16/141	Interference filter, rear window, left	BK	64/113:6	Connector	GN-BU
8	3/78:3	Lock unit, trunk lid/tailgate	BK	4/56F:24	Central Electronic Module (CEM)	BK-RD
9	-		-	-		-
10	3/35:1	Switch, handle, trunk lid/tailgate	BK	4/56F:22 4/93E:18	Central Electronic Module (CEM) Keyless Vehicle Module (KVM)	BK-YE
11	-		-	-		-
12	-		-	-		-
13	10/25:2	Ceiling light, cargo compartment	OG-BU	63/173	Branching point	OG-BU
14	-		-	-		-

Connectors

64/48A C30 - 64/50

64/48A C30

2-pin gray

No.	Trunk lid/tailgate harness			Floor harness		
1	10/19:2	Auxiliary brake light	WH	63/175	Branching point	BK
2	10/19:1	Auxiliary brake light	BN	4/56C:7	Central Electronic Module (CEM)	OG-YE

64/49 S40/V50/C70

2-pin gray

No.	Floor harness			Rear bumper harness		
1	4/93A:22	Keyless Vehicle Module (KVM)	WH-BK	16/132:1	Antenna, door lock, bumper	WH-BK
2	4/93A:21	Keyless Vehicle Module (KVM)	GY-BK	16/132:2	Antenna, door lock, bumper	GY-BK

64/50

12-pin black

No.	Rear axle harness			Floor harness		
1	-	-	-	-	-	-
2	-	-	-	-	-	-
3	-	-	-	-	-	-
4	-	-	-	-	-	-
5	-	-	-	-	-	-
6	-	-	-	-	-	-
7	7/120:1	Angle sensor, Bi-Xenon rear	BN	64/113:27	Connector	BN
8	7/120:4	Angle sensor, Bi-Xenon rear	WH	64/113:19	Connector	WH
9	7/120:5	Angle sensor, Bi-Xenon rear	YE	64/113:20	Connector	YE
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	-	-	-	-	-	-

Connectors

64/51

64/51

14-pin gray

No.	Fuel tank harness			Floor harness		
1	6/35B:1	Fuel pump, auxiliary heater	RD-OG	64/113:15	Connector	RD-OG
2	-		-	-		-
3	6/33:2 26/5	Fuel pump DC/AC converter, fuel tank FlexiFuel	WH-RD YE-WH	4/56F:5	Central Electronic Module (CEM)	WH-RD
4	6/33:3	Fuel pump, AWD	WH-GN	4/56F:25	Central Electronic Module (CEM)	WH-GN
5	6/33:4 26/5	Fuel pump DC/AC converter, fuel tank FlexiFuel	WH-BU BK-OG	4/56F:7	Central Electronic Module (CEM)	WH-BU
6	-		-	-		-
7	4/83:2 6/33:1 64/956:2 26/5	Fuel pump control module Fuel pump Connector, C30 DC/AC converter, fuel tank FlexiFuel	GN-WH RD	4/56C:16	Central Electronic Module (CEM)	GN-WH
8	4/83:3 6/33:5 63/33 64/956:3 26/5	Fuel Pump Module, PZEV Fuel pump, S40/V50 Branching point Connector, C30 DC/AC converter, fuel tank FlexiFuel	BK-OG BK	31/115 31/116	Ground connection, RHD Ground connection, LHD	BK-OG
9	6/67:3	Fuel leakage control pump	YE-VT	64/113:10	Connector	YE-VT
10	6/67:2	Pump, fuel leakage control	WH-VT	64/113:11	Connector	WH-VT
11	6/67:1	Pump, fuel leakage control	BK-WH	64/113:12	Connector	BK-WH
12	6/67:4	Pump, fuel leakage control	GN-BU	64/113:13	Connector	GN-BU
13	6/35B:2	Fuel pump, auxiliary heater	BK-OG	63/172	Branching point	BK-OG
14	4/83:1 64/956:1 9/38:1	Fuel pump control module Connector, C30 Heated fuel filter 5-Cyl. Diesel	WH-BK GN-RD	64/113:7	Connector	WH-BK

Connectors

64/53 - 64/80

64/53

6-pin gray

No.	Rear bumper harness			Parking assistance harness		
1	4/86C:11	Parking Assistance Module (PAM)	YE-RD	63/415	Branching point	YE-RD
2	4/86C:4	Parking Assistance Module (PAM)	WH	7/134:2	Rear parking assistance sensor	WH
3	4/86C:2	Parking Assistance Module (PAM)	WH-RD	7/133:2	Rear parking assistance sensor	WH-RD
4	4/86C:3	Parking Assistance Module (PAM)	WH-BU	7/132:2	Rear parking assistance sensor	WH-BU
5	4/86C:5	Parking Assistance Module (PAM)	WH-GN	7/131:2	Rear parking assistance sensor	WH-GN
6	4/86C:8	Parking Assistance Module (PAM)	BN-RD	63/416	Connector	BN-RD

64/70 C70

8-pin gray

No.	Tunnel harness			Floor harness		
1	3/25:1	Switch, power roof	OG-BU	64/10B:5	Connector	OG-BU
2	-		-	-		-
3	-		-	-		-
4	3/25:5	Switch, power roof	BU-YE	4/59F:11	Convertible Roof Module (CRM)	BU-YE
5	3:25:2	Switch, power roof	GN-YE	4/59F:3	Convertible Roof Module (CRM)	GN-YE
6	7/122:1	Mass movement sensor module (MMS), front	OG-YE	63/218	Branching point	OG-YE
7	7/122:3	Mass movement sensor module (MMS), front	WH-RD	63/217	Branching point	WH-RD
8	-		-	-		-

64/80 C70

8-pin gray

No.	Left rear side panel harness			Floor harness		
1	-		-	-		-
2	-		-	-		-
3	10/26:3	Reading light, rear left	RD-BK	63/173	Branching point	OG-YE
4	10/26:2	Reading light, rear left	RD-OG	63/212	Branching point	BK-YE
5	10/26:1	Reading light, rear left	BK-OG	63/172	Branching point	BK
6-8	-		-	-		-

Connectors

64/80A - 64/90:1-4

64/80A C70

8-pin gray

No.	Right rear side panel harness		Floor harness		
1	-	-	-	-	-
2	-	-	-	-	-
3	10/27:3	Reading light, rear right	RD-BK	63/212	Branching point
4	10/27:2	Reading light, rear right	RD-OG	63/171	Branching point
5	10/27:1	Reading light, rear right	BK-OG	63/173	Branching point
6-8	-	-	-	-	-

64/90

41-pin black

No.	Engine harness		Engine compartment harness			
1	4/46A:52 4/46.2B:41 4/46.3B:41 4/46.6A:38 4/46.7B:19 63/227	Engine control module (ECM), 4-Cyl. 1.6l Diesel Engine Control Module (ECM), 5-Cyl. 2.5l T Engine Control Module (ECM), 5-Cyl. 2.0l Diesel Engine Control Module (ECM), 4-Cyl. 2.0l Engine Control Module (ECM), 4-Cyl. 1.6l Branching point, 4-Cyl.	BU-RD	63/256	Branching point	BU-RD
2	4/46B:15 4/46.3A:6	Engine control module (ECM), 4-Cyl. 1.6l Diesel Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	BK-YE	4/109:7 2/14:2	Glow plug control module, 5-Cyl. Relay, glow plug system. 4-Cyl. Diesel	BN-GN BK-YE
3	4/28A:11	Transmission Control Module (TCM), 5-Cyl.	GN-YE	4/56E:3	Central electronic module (CEM), Gasoline	GN-YE
4	4/46B:27 4/46.2B:9 4/46.3B:52 4/46.6B:23 4/46.7B:30	Engine control module (ECM), 4-Cyl. 1.6l Diesel Engine Control Module (ECM), 5-Cyl. 2.5l T Engine Control Module (ECM), 5-Cyl. 2.0l Diesel Engine Control Module (ECM), 4-Cyl. 2.0l Engine Control Module (ECM), 4-Cyl. 1.6l	BK-RD	2/35:2	Relay, starter motor	BK-RD
continues						

Connectors

64/90:5-10

64/90

41-pin black

No.	Engine harness			Engine compartment harness		
5	4/46.2B:25	Engine Control Module (ECM), 5-Cyl. 2.5l T	BU BK-YE BK-OG	8/119:2	Pressure monitor, climate control system, 5-Cyl.	BU
	4/46.3B:22	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel		8/119:2	Pressure monitor, climate control system, 4-Cyl. Diesel	BK-YE
	4/46A:33	Engine control module (ECM), 4-Cyl. 1.6l Diesel		8/119:2	Pressure monitor, climate control system, 4-Cyl.	BK-OG
	4/46.6B:18	Engine Control Module (ECM), 4-Cyl. 2.0l		8/119:2	Pressure monitor, climate control system, 4-Cyl.	
	4/46.7B:22	Engine Control Module (ECM), 4-Cyl. 1.6l				
6	9/38:1	Heated fuel filter, 4-Cyl. Diesel	GN-RD RD BN	F33:2	Fuse	GN-RD
	63/86A	Branching point		64/113:14	Connector	BN
	4/46.2B:13	Engine Control Module (ECM), 5-Cyl. 2.5l T				
7	4/46C:6	Engine control module (ECM), 4-Cyl. 1.6l Diesel	WH-GN	4/56G:30	Central Electronic Module (CEM), Diesel	WH-GN
8	4/46B:22	Engine control module (ECM), 4-Cyl. 1.6l Diesel	GN-WH	4/56E:40	Central Electronic Module (CEM)	GN-WH
	4/46.2B:30	Engine Control Module (ECM), 5-Cyl. 2.5l T				
	4/46.3B:48	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel				
	4/46.6B:29	Engine Control Module (ECM), 4-Cyl. 2.0l				
	4/46.7A:40	Engine Control Module (ECM), 4-Cyl. 1.6l				
9	4/46.2B:17	Engine Control Module (ECM), 5-Cyl. 2.5l T	GN-BU	4/56 E:9	Central Electronic Module (CEM), 5-Cyl.	GN-BU
	4/46.3B:53	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel				
10	3/10:2	Contact reversing light, 5-Cyl.	GN-YE GN-WH	4/56E:14	Central Electronic Module (CEM)	GN-BU
	3/10:3	Contact reversing light, 4-Cyl. Gasoline				
	3/10:2	Contact reversing light, 4-Cyl. Diesel				
continues						

Connectors

64/90:11-15

64/90 41-pin black

No.	Engine harness			Engine compartment harness		
11	64/120:1	Connector	GY	2/35:5	Relay, starter motor	GY
12	7/15:5	Front heated oxygen sensor, 4-Cyl. 1.6l Diesel	GN-BU	F34:2	Fuse	GN-BU
	63/103	Branching point				
	63/52	Branching point, 4-Cyl. 1.6l	GN-RD			
	63/95	Branching point, 4-Cyl. 2.0l	GN-YE			
	8/111:2	High-pressure solenoid valve, Diesel 4-Cyl. 1.6l				
	63/82	Branching point, 5-Cyl. Diesel				
13	4/46.2B:15	Engine Control Module (ECM), 5-Cyl. 2.5l T	GN-YE	F54:2	Fuse	GN-YE
	4/46.7B:9	Engine Control Module (ECM), 4-Cyl. 1.6l	RD	64/111:4	Connector	RD
	9/32:1	PTC resistor crankcase ventilation, 5-Cyl. Diesel		2/42:5	Relay 5-Cyl.	
				F30:2	Fuse	
14	63/54	Branching point	GN-BU	F35:2	Fuse	GN-BU
	4/46.3:B1	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel				
	4/46.3:B3	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel				
	8/18:1	EVAP valve	GN-RD			
	8/65:2	Power steering pressure monitor	GN-WH			
	8/113:1	EGR bypass valve, 4-Cyl. 1.6l Diesel				
15	4/46A:40	Engine control module (ECM), 4-Cyl. 1.6l Diesel	GY-RD	63/255	Branching point	GY-RD
	4/46.2B:54	Engine Control Module (ECM), 5-Cyl. 2.5l T				
	4/46.3B:54	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel				
	4/46.6B:37	Engine Control Module (ECM), 4-Cyl. 2.0l				
	4/46.7B:31	Engine Control Module (ECM), 4-Cyl. 1.6l				
	63/226	Branching point				

continues

Connectors
64/90:16-21

64/90
41-pin black

No.	Engine harness			Engine compartment harness	
16	4/46.3A:34 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	WH-BU	2/14 4/109:9	Relay, glow plug system Glow plug control module, 5-Cyl.	WH-BU
17	4/46A:14 Engine control module (ECM), 4-Cyl. 1.6l Diesel 4/46.2B:10 Engine Control Module (ECM), 5-Cyl. 2.5l T 4/46.3B:44 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel 4/46.6B:14 Engine Control Module (ECM), 4-Cyl. 2.0l 4/46.7A:9 Engine Control Module (ECM), 4-Cyl. 1.6l	BK-YE	2/22:2	Relay, climate control system	BK-YE
18	8/3:1 Electromagnetic clutch, climate control system 8/3:2 Electromagnetic clutch, climate control system, 4-Cyl. Diesel	GN-YE	2/22:5	Relay, climate control system	GN-YE
19	4/46.2B:51 Engine Control Module (ECM), 5-Cyl. 2.5l T 4/46.3B:34 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel 4/16A:21 Engine Control Module (ECM), 4-Cyl. 1.6l 4/46.6B:6 Engine Control Module (ECM), 4-Cyl. 2.0l 4/46.7B:34 Engine Control Module (ECM), 4-Cyl. 1.6l	WH-VT BK-BU WH-VT	7/8:2 8/127:2	Pressure sensor, climate control system Pressure switch, climate control system, Diesel	WH-VT BK-BU
20	6/26A:3 Alternator, 4-Cyl. 4/46A:21 Engine control module (ECM), 4-Cyl. 1.6l Diesel 4/46.3B:15 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	RD YE-RD GN-YE	F31:2 7/251:3 64/111:4	Fuse, 4-Cyl. Brake vacuum sensor Connector	RD YE-RD GN-YE
21	4/46B:28 Engine control module (ECM), 4-Cyl. 1.6l Diesel 4/46.2B:27 Engine Control Module (ECM), 5-Cyl. 2.5l T 4/46.3B:27 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel 4/46.6B:7 Engine Control Module (ECM), 4-Cyl. 2.0l 4/46.7A:8 Engine Control Module (ECM), 4-Cyl. 1.6l	BK-BU	2/32:2	Main relay, engine management system	BK-BU
continues					

Connectors

64/90:22-28

64/90 41-pin black

No.	Engine harness			Engine compartment harness		
22	4/28A:13 Transmission Control Module (TCM), MPS6 4/28A:16 Transmission Control Module (TCM) 4/46S:31 Engine control module (ECM), 4-Cyl. 1.6l Diesel	RD-YE VT-WH	64/111:3 7/251:1	Connector Brake vacuum sensor	RD-YE VT-WH	
23	4/28A:1 Transmission Control Module (TCM) 4/28A:6 Transmission Control Module (TCM), MPS6 4/46.2B:16 Engine Control Module (ECM), 5-Cyl. 2.5l T	RD	F23:2	Fuse	RD	
24	4/46.2B:21 Engine Control Module (ECM), 5-Cyl. 2.5l T 20/26:1 Glow plug 7/160:3 Brake vacuum sensor 63/4 Branching point, 4-Cyl. 1.6l Diesel 64/600:1 Connector	WH-BK WH-RD YE-RD OG-BL	64/113:7 4/109:1 63/55 7/251:3 4/109:4	Connector Glow plug control module Branching point Brake vacuum sensor, 4-Cyl. 1.6l Diesel Glow plug control module, 4-Cyl.	WH-BK GN-OG YE-RD	
25	4/46.2B:23 Engine Control Module (ECM), 5-Cyl. 2.5l T 20/25:1 Glow plug, 5-Cyl. 64/600:2 Connector	BN-WH WH-RD OG-BL	64/113:12 4/109:2 4/109:3	Connector Glow plug control module, 5-Cyl. Glow plug control module, 4-Cyl.	BK-WH GN-WH OG-BL	
26	4/46.2B:45 Engine Control Module (ECM), 5-Cyl. 2.5l T 20/24:1 Glow plug, 5-Cyl. 64/600:3 Connector	WH-VT WH-RD OG-BL	64/113:11 4/109:3 4/109:2	Connector Glow plug control module, 5-Cyl. Glow plug control module, 4-Cyl.	WH-VT GN-BU OG-BL	
27	4/46.2B:46 Engine Control Module (ECM), 5-Cyl. 2.5l T 20/23:1 Glow plug, 5-Cyl. 2.4l Diesel 64/600:4 Connector	YE-VT WH-RD OG-BL	64/113:10 4/109:4 4/109:1	Connector Glow plug control module, 5-Cyl. Glow plug control module, 4-Cyl.	YE-VT GN-RD OG-BL	
28	4/46C:42 Engine control module (ECM), 4-Cyl. 1.6l Diesel 4/46.2B:26 Engine Control Module (ECM), 5-Cyl. 2.5l T 4/46.3B:47 Engine Control Module (ECM), 5-Cyl. 2.0l Diesel 4/46.6B:16 Engine Control Module (ECM), 4-Cyl. 2.0l 4/46.7A:47 Engine Control Module (ECM), 4-Cyl. 1.6l	GY	7/51:5	Accelerator pedal sensor	GY	

continues

Connectors

64/90:29-34

64/90 41-pin black

No.	Engine harness		Engine compartment harness		
29	4/46.2B:31 4/46.3B:11 4/46.6C:27 4/46.7A:17	Engine Control Module (ECM), 5-Cyl. 2.5l T Engine Control Module (ECM), 5-Cyl. 2.0l Diesel Engine Control Module (ECM), 4-Cyl. 2.0l Engine Control Module (ECM), 4-Cyl. 1.6l	YE-RD	7/8:3	Pressure sensor, climate control system
30	4/28A:1 4/28A:13	Transmission Control Module (TCM), MPS6 Transmission Control Module (TCM), 5-Cyl.	GY-OG	64/111:1	Connector
31	4/46.2B:11 4/46.3B:31	Engine Control Module (ECM), 5-Cyl. 2.5l T Auto Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	GN-BU	2/35:1	Relay, starter motor
32	4/46.2B:53 4/46.7A:39 63/63 63/84 63/53	Engine Control Module (ECM), 5-Cyl. 2.5l T Engine Control Module (ECM), 4-Cyl. 1.6l Branching point, 4-Cyl. 2.0l Branching point Branching point	BN-RD BK-WH	7/8:1 63/180	Pressure sensor, climate control system Branching point
33	4/28A:A7 4/28A:17 4/46A:43	Transmission Control Module (TCM), 5-Cyl. Transmission Control Module (TCM), MPS6, 4-Cyl. Engine control module (ECM), 4-Cyl. 1.6l Diesel	RD BU-WH	64/111:2 7/251:2	Connector Brake vacuum sensor
34	4/46.2B:8 4/46.3A:36 4/46.6B:15 4/46.7A:10	Engine Control Module (ECM), 5-Cyl. 2.5l T Engine Control Module (ECM), 5-Cyl. 2.0l Diesel Engine Control Module (ECM), 4-Cyl. 2.0l Engine Control Module (ECM), 4-Cyl. 1.6l	WH-RD	4/71:4	Cooling fan control module
continues					

Connectors

64/90:35-41

64/90 41-pin black

No.	Engine harness			Engine compartment harness		
35	4/46.3A:10	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	GN-BU	4/109:10	Glow plug control module, Diesel	YE-GN
	7/82:1	Rear heated oxygen sensor, Turbo	GN-YE	63/13	Branching point, Turbo	GN-YE
36	4/46C:28	Engine control module (ECM), 4-Cyl. 1.6l Diesel	BK-RD	4/56E:9	Central Electronic Module (CEM), 4-Cyl.1.6l Diesel	BK-RD
	4/46.6B:32	Engine Control Module (ECM), 4-Cyl. 2.0l	WH	7/160:1	Brake vacuum sensor	WH
37	4/46.2B:14	Engine Control Module (ECM), 5-Cyl. 2.5l T	GN-YE	4/56E:10	Central Electronic Module (CEM), 5-Cyl.	GN-YE
	4/46.3B:38	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	GN-BU	4/56E:10	Central Electronic Module (CEM), 4-Cyl.	GN-BU
	4/46C:46	Engine control module (ECM), 4-Cyl. 1.6l Diesel				
	4/46.6B:19	Engine Control Module (ECM), 4-Cyl. 2.0l				
	4/46.7B:21	Engine Control Module (ECM), 4-Cyl. 1.6l				
38	20/22:1	Glow plug	GN-YE	4/109:5	Glow plug control module	WH-RD
	63/63	Branching point	BK-WH	7/160:2	Brake vacuum sensor	BK-WH
39	7/15:1	Front heated oxygen sensor, 2.0l	GN-RD	F32:2	Fuse	GN-YE
	7/15:2	Front heated oxygen sensor, 1.6l	GN-YE			
	7/82:1	Rear heated oxygen sensor, 2.0l				
	7/82:2	Rear heated oxygen sensor, 1.6l				
	63/98	Branching point				
	63/45	Branching point, 4-Cyl.	GN			
	63/83	Branching point, 5-Cyl.	GN-BU			
40	7/15:3	Front heated oxygen sensor, Turbo	GN-YE	F33:2	Fuse	GN-RD
	4/46.3B:5	Engine Control Module (ECM), 5-Cyl. 2.0l Diesel	GN-OG	63/13	Branching point, 5-Cyl.	GN-YE
41	4/46.6B:36	Engine Control Module (ECM), 4-Cyl. 2.0l	GN-OG	F36:2	Fuse	GN-BU
	4/46.6B:24	Engine Control Module (ECM), 4-Cyl. 2.0l	GN-BU			
	4/46.7B:8	Engine Control Module (ECM), 4-Cyl. 1.6l				
	63/65	Branching point				
	4/46A:2	Engine Control Module (ECM), 4-Cyl. Diesel				
	7/15:4	Side impact sensor, front left	GN-YE			

Connectors

64/97 - 64/111:1-17

64/97

2-pin black

N o.	Floor harness		Dashboard harness		
1	16/105D:1 64/978:1	Audio module (AUD) Connector	OG	3/281:B2 16/108C:2	Infotainment Control Module (ICM) Multimedia Module (MMM)
2	16/105D:2 64/978:2	Audio module (AUD) Connector	OG	16/60D:1 16/147:B1	Phone Module (PHM) Bluetooth Phone Module (BPM)

64/111

27-pin gray

No.	Engine compartment harness		Dashboard harness		
1	64/90:30	Connector	GY-OG	3/156:3	Gear Selector Module (GSM)
2	64/90:33	Connector	RD	3/156:2	Gear Selector Module (GSM)
3	64/90:22	Connector	RD-YE	3/156:1	Gear Selector Module (GSM)
4	64/90:9 64/90:13 64/90:20	Connector, 4-Cyl. Diesel Connector 5-Cyl. Gasoline Connector, 5-Cyl. Diesel	GN-YE	4/56A:10	Central Electronic Module (CEM)
5	F26:2	Fuse	RD	3/1B:7	Start Control Module (SCU)
6	-	-	-	-	-
7	7/51:4	Accelerator pedal sensor	BK-YE	63/12	Branching point
8	10/1:6 10/2:6	Lamp housing, front left Lamp housing, front right	BU	3/111:10	Switch unit, lights
9	10/1:10 10/2:10	Lamp housing, front left Lamp housing, front right	BK	63/6	Branching point
10	-	-	-	-	-
11	7/179:1	Front impact sensor, left	WH-BK	4/9B:23	Supplemental Restraint System Module (SRS)
12	7/179:2	Front impact sensor, left	BN-YE	4/9B:24	Supplemental Restraint System Module (SRS)
13-17	-	-	-	-	-
continues					

Connectors

64/111:18-27 - 64/112

64/111

27-pin gray

No.	Engine compartment harness			Dashboard harness		
18	10/1:12 10/2:12	Lamp housing, front left Lamp housing, front right	OG	63/139	Branching point	OG
19	7/178:1	Front impact sensor, right	WH	4/9B:5	Supplemental Restraint System Module (SRS)	WH
20	7/178:2	Front impact sensor, right	BN	4/9B:9	Supplemental Restraint System Module (SRS)	BN
21-27	-	-	-	-	-	-

64/112

16-pin gray

No.	Floor harness			Dashboard harness		
1	16/105B:10	Audio module (AUD)	WH-RD	16/26:1	Center dashboard speaker	WH-RD
2	16/105B:2	Audio module (AUD)	GY-RD	16/26:2	Center dashboard speaker	GY-RD
3	-	-	-	-	-	-
4	4/56F:14 64/51:6	Central electronic module (CEM) W/O AWD Connector	BU-RD	3/254C:8	Steering Wheel Module (SWM)	BU-RD
5	4/56F:16 64/51:2	Central electronic module (CEM) W/O AWD Connector	GY-RD	3/254C:9	Steering Wheel Module (SWM)	GY-RD
6	64/31:4 64/30:4	Connector, LHD Connector, RHD	WH-GN WH	64/545:6	Connector, HVAC	WH-GN
7	64/30:4 64/31:4	Connector, LHD Connector, RHD	WH WH-GN	64/25G:4	Connector	WH
8	4/93D:15	Keyless Vehicle Module (KVM)	RD-GN	63/88	Branching point	RD-GN
9	16/1A:5	Integrated Audio Module (IAM)	WH-BK	64/41:23 64/43:23	Connector, LHD Connector, RHD	WH
10	16/1A:12	Integrated Audio Module (IAM)	GY-BK	64/41:22 64/43:22	Connector, LHD Connector, RHD	BK
11	16/1A:4	Integrated Audio Module (IAM)	WH-RD	64/43:23 64/41:23	Connector, LHD Connector, RHD	WH
12	16/1A:11	Integrated Audio Module (IAM)	GY-RD	64/43:22 64/41:22	Connector, LHD Connector, RHD	BK
13	16/1A:6	Integrated Audio Module (IAM)	WH-VT	16/6:1 64/45:19	Left rear loudspeaker, C30/C70 Connector, S40/V50	WH-VT
14	16/1A:13	Integrated Audio Module (IAM)	GY-WH	16/6:2 64/45:18	Left rear loudspeaker, C30/C70 Connector, S40/V50	GY-WH
15	16/1A:3	Integrated Audio Module (IAM)	WH	16/5:1 64/47:19	Right rear loudspeaker, C30/C70 Connector, S40/V50	WH
16	16/1A:10	Integrated Audio Module (IAM)	GY	16/5:2 64/47:18	Right rear loudspeaker, C30/C70 Connector, S40/V50	GY

Connectors

64/113:1-20

64/113 29-pin black

No.	Floor harness			Engine compartment harness		
1	64/816:1	Connector	WH	4/16:36	Brake Control Module (BCM)	WH
2	64/816:2	Connector	BN	4/16:37	Brake Control Module (BCM)	BN
3	64/817:1	Connector	YE-GN	4/16:43	Brake Control Module (BCM)	YE-GN
	64/817:1	Connector, C70	WH			
4	64/817:2	Connector	WH-GN	4/16:42	Brake Control Module (BCM)	WH-GN
	64/817:2	Connector, C70	BN			
5	-		-	-		-
6	16/141	Interference filter, rear window, left, S40	GN-BU	2/82:5	Relay, heated rear window	GN-BU
	64/48:4	Connector, C30				
	64/48:7	Connector, V50				
	64/232:7	Connector, C70				
7	64/51:14	Connector	WH-BK	2/142:5	Relay pre-heater fuel filter, 5-Cyl. Diesel	WH-BK
				64/90:24	Connector 5-Cyl. Gasoline	
8	7/164:5	Body Sensor Cluster Stability Sensor (BSC)	BN-RD	4/16:5	Brake Control Module (BCM)	BN-RD
9	7/164:3	Body Sensor Cluster Stability Sensor (BSC)	YE-RD	4/16:7	Brake Control Module (BCM)	YE-RD
10	64/51:9	Connector	YE-VT	64/90:27	Connector	YE-VT
11	64/51:10	Connector	WH-VT	64/90:26	Connector	WH-VT
12	64/51:11	Connector	BK-WH	64/90:25	Connector	BK-WH
13	64/51:12	Connector	GN-BU	2/22:1	Relay, climate control system	GN-BU
14	4/93E:3	Keyless Vehicle Module (KVM)	WH-RD	3/271:1	Contact, immobilizer, clutch pedal	WH-RD
	64/90:35	Connector	BN	64/90:6	Connector	BN
15	64/51:1	Connector	RD-OG	4/7A:6	Combustion Preheater Module (CPM)	RD-OG
16	-		-	-		-
17	7/164:2	Body Sensor Cluster Stability Sensor (BSC)	GY	4/16:29	Brake Control Module (BCM)	GY
18	7/164:1	Body Sensor Cluster Stability Sensor (BSC)	BU	4/16:25	Brake Control Module (BCM)	BU
19	64/50:8	Connector	WH	4/114E:3	Headlamp Control Module (HCM), S40/V50	WH
20	64/50:9	Connector	YE	4/114D:3	Headlamp Control Module (HCM), S40/V50	YE
				7/121:5	Angle sensor, Bi-Xenon front	

continues

Connectors

64/113:21-29 - 64/191

64/113

29-pin black

No.	Floor harness	Engine compartment harness		
21	-	-	-	-
22	-	-	-	-
23	-	-	-	-
24	4/110C:2 Trailer Module (TRM)	RD	F14:2 Fuse	RD
25	-	-	-	-
26	-	-	-	-
27	64/50:7 Connector	BN	4/114D:2 Headlamp Control Module (HCM), S40/V50 7/121:1 Angle sensor, Bi-Xenon front	BN
28	-	-	-	-
29	-	-	-	-

64/114

2-pin gray

No.	Dashboard harness	Engine compartment harness		
1	4/31:1 Fan Control Module	GN-OG	F10:2 Fuse	GN-OG
2	4/31:6 Fan Control Module	BK	63/108 Branching point	BK

64/120

1-pin black

No.	Engine harness	Starter motor harness		
1	64/90:11 Connector	GY	6/25:A1 Starter motor	GY

64/191

2-pin white

No.	Dashboard harness	Floor harness		
1	16/60C:1 Phone Module (PHM)	BK	16/47:1 Antenna GSM/GPS/RDAR	BK
1S	16/60C:1S Phone Module (PHM)	-	16/47:1S Antenna GSM/GPS/RDAR	-
2	16/60E:1 Phone Module (PHM) 16/108:1 Multimedia Module (MMM)	BK	64/34:1 Connector	BK
2S	16/60E:1S Phone Module (PHM) 16/108:1S Multimedia Module (MMM)	-	64/34:1S Connector	-

Connectors

64/231 C70 - 64/232

64/231 C70

5-pin green

No.	Floor harness			Harness position sensor		
1	4/59D:18	Convertible Roof Module (CRM)	RD-BN	7/221	Position sensor, rear roof section	RD-BN
2	4/59D:5	Convertible Roof Module (CRM)	WH-BN	7/221	Position sensor, rear roof section	WH-BN
3	-		-	-		-
4	4/59D:17	Convertible Roof Module (CRM)	GN	7/221	Position sensor, rear roof section	GN
5	-		-	-		-

64/232 C70

14-pin gray

No.	Floor harness			Roof harness addition		
1	63/172	Branching point	-	9/2B:1	Heated rear window	BK
2	4/59D:7	Convertible Roof Module (CRM)	RD-BN	7/222	Position sensor, front roof section	RD-BN
3	4/59D:4	Convertible Roof Module (CRM)	GN-BU	7/224	Hall sensor roof	BK
4	4/59E:6	Convertible Roof Module (CRM)	RD-WH	7/224	Hall sensor roof	BK
5	4/59E:7	Convertible Roof Module (CRM)	BK	7/224	Hall sensor roof	BK
6	4/59E:13	Convertible Roof Module (CRM)	RD-GN	7/224	Hall sensor roof	BK
7	64/113:6	Connector	GN-BU	9/2C:1§	Heated rear window	-
8	-		-	-		-
9	4/59E:14	Convertible Roof Module (CRM)	RD-BU	7/224	Hall sensor roof	BK
10	4/59E:2	Convertible Roof Module (CRM)	WH	7/224	Hall sensor roof	BK
11	4/59D:6	Convertible Roof Module (CRM)	GN	7/222	Position sensor, front roof section	GN
12	4/59E:5	Convertible Roof Module (CRM)	BK-GN	7/224	Hall sensor roof	BK
13	4/59D:16	Convertible Roof Module (CRM)	BN	7/222	Position sensor, front roof section	BN
14	-		-	-		-

Connectors

64/233 - 64/245

64/233 C70

16-pin green

No.	Floor harness		Tailgate harness addition		
1	-	-	-	-	-
2	-	-	-	-	-
3	4/56C:7	Central Electronic Module (CEM)	OG-YE	10/19:1	Auxiliary brake light
4	-	-	-	-	-
5	4/56F:22 63/277	Central electronic module (CEM), not 4/93 KVM Branching point	BK-YE	10/3:1	License plate lighting
6	4/56C:13	Central Electronic Module (CEM)	OG-BK	10/3:2	License plate lighting
7	63/172	Branching point	BK	10/3:3 10/19:5	License plate lighting Auxiliary brake light
8	-	-	-	-	-
9	4/59E:8	Convertible Roof Module (CRM)	WH	7/220	Hall sensor cargo compartment
10	4/59E:9	Convertible Roof Module (CRM)	GY	7/220	Hall sensor cargo compartment
11	-	-	-	-	-
12	4/59E:1	Convertible Roof Module (CRM)	BU	7/220	Hall sensor cargo compartment
13	4/59E:3	Convertible Roof Module (CRM)	BN	7/220	Hall sensor cargo compartment
14	4/59D:11	Convertible Roof Module (CRM)	WH	7/220	Hall sensor cargo compartment
15	4/59D:22	Convertible Roof Module (CRM)	BU	7/220	Hall sensor cargo compartment
16	4/59E:15	Convertible Roof Module (CRM)	RD	7/220	Hall sensor cargo compartment

64/234 C70

6-pin gray

No.	Floor harness		Harness electric catch motor		
1	4/59D:4	Convertible Roof Module (CRM)	GY	6/149	Electric catch motor
2	4/59D:3	Convertible Roof Module (CRM)	YE	6/149	Electric catch motor
3	4/59D:1	Convertible Roof Module (CRM)	WH	6/149	Electric catch motor
4	4/59D:12	Convertible Roof Module (CRM)	BU	6/149	Electric catch motor
5	4/59D:21	Convertible Roof Module (CRM)	BN	6/149	Electric catch motor
6	-	-	-	-	-

64/245 C70

3-pin green

No.	Floor harness		Control of CRM	
1	63/228	Branching point	GY-RD	Low speed CAN high data signal
2	-	-	-	-
3	63/229	Branching point	BU-RD	Low speed CAN low data signal

Connectors

64/246 C70 - 64/322

64/246 C70

4-pin gray

No.	Floor harness		Floor harness		
1	63/184	Branching point	BK-GN	4/59B:1	Convertible Roof Module (CRM)
2	64/596:1	Connector	GN-RD	4/59B:2	Convertible Roof Module (CRM)
3	63/184	Branching point	BK-GN	4/59B:3	Convertible Roof Module (CRM)
4	64/596:2	Connector	RD-WH	4/59B:4	Convertible Roof Module (CRM)

64/250 C70

8-pin gray

No.	Trunk lid/tailgate harness		Floor harness		
1	10/24:2	Cargo compartment lighting	BK	63/173	Branching point
2	10/24:4	Cargo compartment lighting	BK	3/78:4	Lock unit, trunk lid/tailgate
3	17/19:2 17X/19:2	12V outlet, cargo compartment Connector	OG	4/56C:22	Central Electronic Module (CEM)
4	17/19:1 17X/19:1	12V outlet, cargo compartment Connector	BK	31/11	Ground connection
5	3/268:3	Load assistance switch	BK	4/59F:10	Convertible Roof Module (CRM)
6	3/268:1	Load assistance switch	OG-BU	63/173	Branching point
7	3/268:5	Load assistance switch	BK	3/78:5	Lock unit, trunk lid/tailgate
8	-	-	-	-	-

64/322

5-pin green

No.	Floor harness		Accessory Harness		
1	63/228	Branching point	GY-RD	63/421	Branching point
2	63/229	Branching point	BU-RD	63/422	Branching point
3	10/17A:2 10/17A:3 63/28	Lamp housing, rear right, C70 Lamp housing, rear right, S40/V50 Branching point, C30	OG-BK	4/110B:3	Trailer Module (TRM)
4	31/12 63/175	Ground connection, S40/V50/C70 Branching point, C30	BK	63/420	Branching point
5	4/56C:39	Central Electronic Module (CEM)	RD	4/86A:1	Parking Assistance Module (PAM)

Connectors

64/333 C30 - 64/425

64/333 C30

16-pin green

No.	Driver's door harness			Floor harness		
1	-	-	-	-	-	-
2	64/41:18 Connector, LHD	WH	7/69:1	Sensor outdoor temperature	-	-
3	64/41:17 Connector, LHD	WH-BK	7/69:2	Sensor outdoor temperature	-	-
4	-	-	-	-	-	-
5	3/126B:4 Driver Door Module (DDM)	GN-WH	4/126	Left Camera Module (LCM)	GN-WH	-
6	3/126B:12 Driver Door Module (DDM)	BK	9/33 10/148	Electrically heated rear-view mirror, driver's door Lighting, rear-view mirror driver's door	-	-
7	3/126B:7 Driver Door Module (DDM), LHD 3/126B:7 Driver Door Module (DDM), RHD	BU GY	6/62	Power rear-view mirror driver's door	-	-
8	3/126B:11 Driver Door Module (DDM)	RD	9/33	Electrically heated rear-view mirror, driver's door	-	-
9-11	-	-	-	-	-	-
12	3/126B:14 Driver Door Module (DDM)	BN-OG	10/148	Lighting, rear-view mirror driver's door	-	-
13	-	-	-	-	-	-
14	3/126B:10 Driver Door Module (DDM), LHD 3/126B:10 Driver Door Module (DDM), RHD	GY BU	6/62	Power rear-view mirror driver's door	-	-
15	3/126B:8 Driver Door Module (DDM)	PK	6/62	Power rear-view mirror driver's door	-	-
16	3/126B:9 Driver Door Module (DDM)	GN	6/62	Power rear-view mirror driver's door	-	-

64/425

6-pin yellow

No.	Dashboard harness			SRS Passenger side harness		
1	4/9B:1 Supplemental Restraint System Module (SRS)	OG	8/31:1	Airbag igniter, passenger side	OG	-
2	4/9B:2 Supplemental Restraint System Module (SRS)	BK-WH	8/31:2	Airbag igniter, passenger side	BK-WH	-
3	-	-	-	-	-	-
4	63/12 Branching point	BK-GN	8/31:4 8/32:4	Airbag igniter, passenger side Igniter, airbag stage 2, passenger side	BK-GN	-
5	4/9B:11 Supplemental Restraint System Module (SRS)	OG	8/32:1	Igniter, airbag stage 2, passenger side	OG	-
6	4/9B:10 Supplemental Restraint System Module (SRS)	BK-YE	8/32:2	Igniter, airbag stage 2, passenger side	BK-YE	-

Connectors

64/545

64/545 6-pin light gray

No.	Dashboard harness			Climate control system harness		
1	4/56A:44 Central Electronic Module (CEM) 64/25G:3 Connector	YE BU-YE	6/48:1 6/95:1 6/96:1 6/102:1 6/103:1 7/159:1	Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), temperature, left side Damper Motor Module (DMM), temperature, right side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	RD	
2	3/112:5 Climate Control Module (CCM)	YE-GN	7/41:1	Temperature sensor evaporator	BU-YE	
3	3/112:12 64/25G:4 Climate Control Module (CCM) Connector	WH	6/48:2 6/95:2 6/103:2 7/159:2	Damper Motor Module (DMM), recirculation, RHD Damper Motor Module (DMM), temperature, left side, LHD Damper Motor Module (DMM), floor/ventilation, LHD Air quality sensor (AQS), RHD	YE	
4	63/25 Branching point	BK	6/48:3 6/95:3 6/96:3 6/102:3 6/103:3 7/159:3	Damper Motor Module (DMM), recirculation Damper Motor Module (DMM), temperature, left side Damper Motor Module (DMM), temperature, right side Damper Motor Module (DMM), defroster Damper Motor Module (DMM), floor/ventilation Air Quality Sensor (AQS)	BN	
5	3/112:14 6/117:3 Climate Control Module (CCM) Interior temperature sensor	BN-GN	7/41:3	Temperature sensor evaporator	GN-OG	
6	3/112:7 64/112:6 Climate Control Module (CCM) Connector	WH-GN	6/48:2 6/96:2 6/102:2 7/159:2	Damper Motor Module (DMM), recirculation, LHD Damper Motor Module (DMM), temperature, right side Damper Motor Module (DMM), defroster Air quality sensor (AQS), LHD	VT	

Connectors

64/596 C70 - 64/661 C70

64/596 C70

4-pin gray

No.	Engine harness		Floor harness		
1	F15:2	Fuse	GN-RD	64/246:2	Connector
2	2/182:3	Relay, headlight washer motor	RD-WH	64/246:4	Connector
3	F22:2	Fuse	OG-GN	16/79A:1	Subwoofer Module (SUB)
4	-		-	-	-

64/600

4-pin black

No.	Engine harness		Glow plug harness		
1	63/126	Branching point	GN-OG	20/22:1	Glow plug
2	63/126	Branching point	GN-OG	20/23:1	Glow plug
3	63/126	Branching point	GN-OG	20/24:1	Glow plug
4	63/126	Branching point	GN-OG	20/25:1	Glow plug

64/660 C70

12-pin gray

No.	Driver's door harness, supplement		Driver's door harness		
1	16/4:1	Speaker, driver's door	WH-BU	16/151:6	Distribution filter, front left door
2	16/4:2	Speaker, driver's door	GY-BU	16/151:5	Distribution filter, front left door
3	-		-	-	-
4	-		-	-	-
5	3/80:1	Switch, central locking system, driver's door	BK	63/198	Branching point
6	3/80:2	Switch, central locking system, driver's door	BK-RD	3/126A:6	Driver Door Module (DDM)
7	3/80:3	Switch, central locking system, driver's door	BK-YE	3/126A:7	Driver Door Module (DDM)
8	3/80:4	Switch, central locking system, driver's door	GN-BK	3/126A:16	Driver Door Module (DDM)
9	-		-	-	-
10	10/245:2	Lock indicator, left door	RD	64/41:7	Connector
11	10/245:1	Lock indicator, left door	BK	64/41:10	Connector
12	-		-	-	-

64/661 C70

2-pin yellow/green

No.	Driver's door harness		Driver's door harness, supplement		
1	64/41:8	Connector	OG	8/66:2	Igniter, left inflatable curtain
2	64/41:9	Connector	BK-RD	8/66:1	Igniter, left inflatable curtain

Connectors

64/662 C70 - 64/707 C70

64/662 C70

12-pin gray

No.	Passenger door harness, supplement		Passenger door harness		
1	16/3:1	Speaker, passenger door	WH-BU	16/152:6	Distribution filter, front right door
2	16/3:2	Speaker, passenger door	GY-BU	16/152:5	Distribution filter, front right door
3	-		-	-	-
4	-		-	-	-
5	3/82:1	Switch, central locking system, passenger door	BK	3/83:3	Switch, passenger door power window
6	3/82:2	Switch, central locking system, passenger door	BK-RD	3/127A:6	Passenger Door Module (PDM)
7	3/82:3	Switch, central locking system, passenger door	BK-RD	3/127A:7	Passenger Door Module (PDM)
8	3/82:4	Switch, central locking system, passenger door	GN-BK	3/127A:16	Passenger Door Module (PDM)
9	3/82:5	Switch, central locking system, passenger door	GN-YE	3/83:1	Switch, passenger door power window
10	10/246:2	Lock indicator, right door	RD	64/43:7	Connector
11	10/246:1	Lock indicator, right door	BK	64/43:10	Connector
12	-		-	-	-

64/663 C70

2-pin yellow/green

No.	Passenger door harness		Passenger door harness, supplement		
1	64/43:8	Connector)	OG	8/67:2	Igniter, right inflatable curtain
2	64/43:9	Connector	BK-BU	8/67:1	Igniter, right inflatable curtain

64/707 C70

6-pin gray, option A

No.	Passenger door harness		-		
1	63/41	Branching point	WH	64/707:4	Connector
2	63/40	Branching point	BK	64/707:3	Connector
3	16/156:2	Speaker, passenger door	GY	64/707:2	Connector
4	16/156:1	Speaker, passenger door	WH	64/707:1	Connector
5	64/662:2	Connector	GY-BU	-	-
6	64/662:1	Connector	WH-BU	-	-

Connectors

64/707 C70 - 64/791 C30

64/707 C70

6-pin gray, option B

No.	Passenger door harness			-		
1	63/41	Branching point	WH	16/152:1	Distribution filter, front right door	-
2	63/40	Branching point	BK	16/152:2	Distribution filter, front right door	-
3	16/156:2	Speaker, passenger door	GY	16/152:3	Distribution filter, front right door	-
4	16/156:1	Speaker, passenger door	WH	16/152:4	Distribution filter, front right door	-
5	64/662:2	Connector	GY-BU	16/152:5	Distribution filter, front right door	-
6	64/662:1	Connector	WH-BU	16/152:6	Distribution filter, front right door	-

64/708 C70

6-pin gray, option A

No.	Driver's door harness			-		
1	63/43	Branching point	WH	64/708:4	Connector	WH
2	63/42	Branching point	BK	64/708:3	Connector	GY
3	16/155:2	Speaker, driver's door	GY	64/708:2	Connector	GY
4	16/155:1	Speaker, driver's door	WH	64/708:1	Connector	WH
5	-	-	-	-	-	-
6	-	-	-	-	-	-

64/708 C70

6-pin gray, option B

No.	Driver's door harness			-		
1	63/43	Branching point	WH	16/151:1	Distribution filter, front left door	-
2	63/42	Branching point	BK	16/151:2	Distribution filter, front left door	-
3	16/155:2	Speaker, driver's door	GY	16/151:3	Distribution filter, front left door	-
4	16/155:1	Speaker, driver's door	WH	16/151:4	Distribution filter, front left door	-
5	64/660:2	Connector	GY-BU	16/151:5	Distribution filter, front left door	-
6	64/660:1	Connector	WH-BU	16/151:6	Distribution filter, front left door	-

64/791 C30

2-pin black

No.	Floor harness		License plate lighting harness		
1	4/56C:13	Central Electronic Module (CEM)	OG-BK	63/11	Branching point
2	63/174	Branching point	BK	63/11G	Branching point

Connectors

64/816 - 64/956 C30

64/816

2-pin black

No.	Floor harness		Rear left, ABS harness		
1	64/113:1	Connector	WH	7/56:1	Sensor ABS, rear left
2	64/113:2	Connector	BN	7/56:2	Sensor ABS, rear left

64/817

2-pin black

No.	Floor harness		Rear right, ABS harness		
1	64/113:3	Connector, C70	WH	7/57:1	Right-hand rear ABS sensor
	64/113:3	Connector	YE-GN		WH
2	64/113:4	Connector, C70	BN	7/57:2	Right-hand rear ABS sensor
	64/113:4	Connector	WH-GN		BN

64/861

1-pin black

No.	PTC element harness, Climate control system		Engine compartment harness		
1	9/41A:2	PTC-element	RD	F5:2	Fuse
					RD

64/862

1-pin white

No.	PTC element harness, Climate control system		Engine compartment harness		
1	9/41A:1	PTC-element	-	31/112	Ground connection
					BK

64/956 C30

5-pin black

No.	Floor harness		-		
1	4/83:1	Fuel pump control module	WH-BK	64/51:14	Connector
2	4/83:2	Fuel pump control module	GN-WH	64/51:7	Connector
3	4/83:3	Fuel pump control module	BK-OG	63/33 64/51:8	Branching point Connector
4	4/83:4	Fuel pump control module	GN-OG	6/33:1	Fuel pump
5	4/83:5	Fuel pump control module	BK-RD	6/33:5	Fuel pump
					BK-RD

Connectors

64/1300 - 64/1400

64/1300 6-pin

No.	Front, parking assistance harness		Engine compartment harness		
1	63/615	Branching point	BU	64/1400:1	Connector
2	7/207:2	Front parking assistance sensor	GN	64/1400:2	Connector
3	7/206:2	Front parking assistance sensor	VT	64/1400:3	Connector
4	7/205:2	Front parking assistance sensor	YE	64/1400:4	Connector
5	7/204:2	Front parking assistance sensor	WH	64/1400:5	Connector
6	63/616	Branching point	BK	64/1400:6	Connector


64/1400 6-pin gray

No.	Parking assistance harness, passenger compartment		Parking assistance harness, engine compartment		
1	4/86B:2	Parking Assistance Module (PAM)	BU	64/1300:1	Connector
2	4/86B:8	Parking Assistance Module (PAM)	GN	64/1300:2	Connector
3	4/86B:7	Parking Assistance Module (PAM)	VT	64/1300:3	Connector
4	4/86B:6	Parking Assistance Module (PAM)	YE	64/1300:4	Connector
5	4/86B:5	Parking Assistance Module (PAM)	WH	64/1300:5	Connector
6	4/86B:1	Parking Assistance Module (PAM)	BK	64/1300:6	Connector


Branching points

63/5 - 63/25


63/5

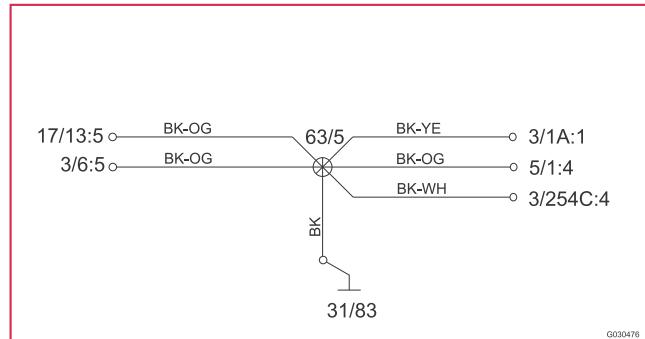


63/12

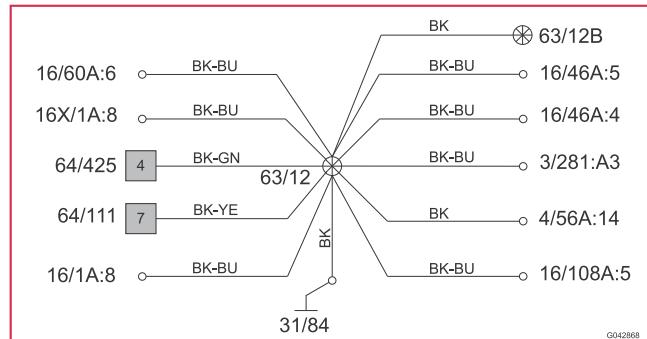


63/6

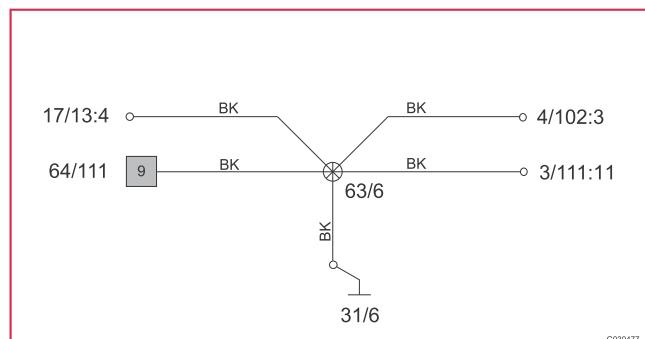


63/12B

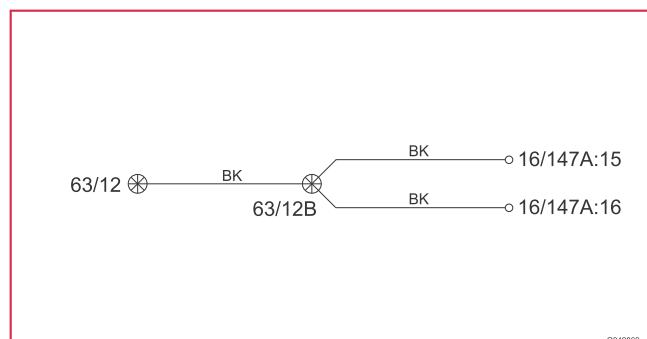


63/10

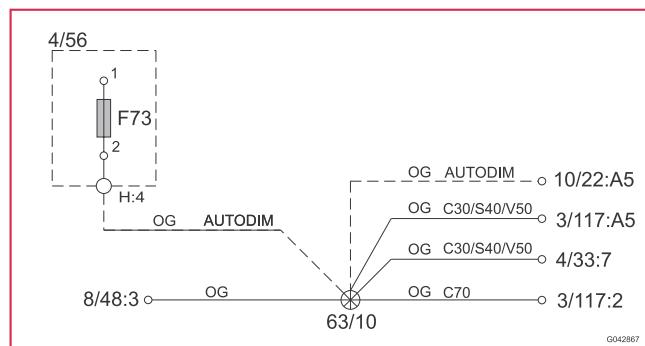


63/13 5-Cyl.

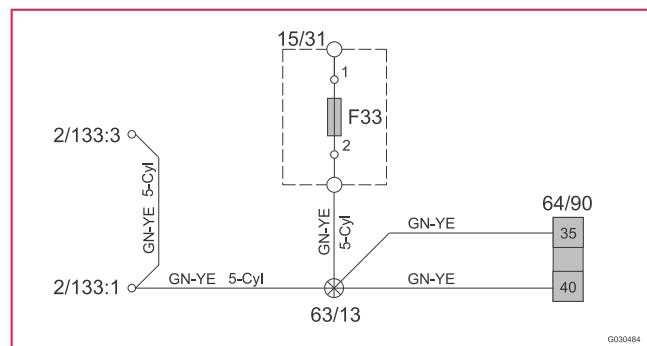


63/11 C30

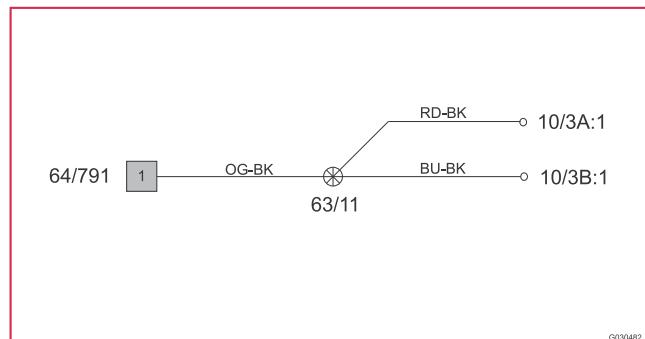


63/14

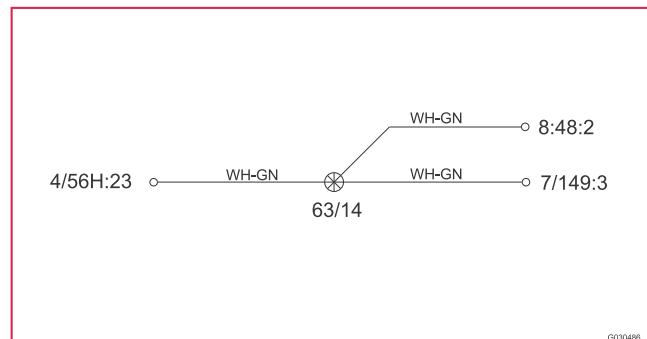

63/11G C30

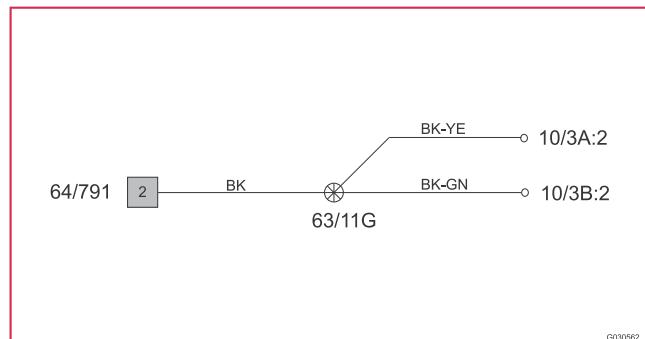


63/25

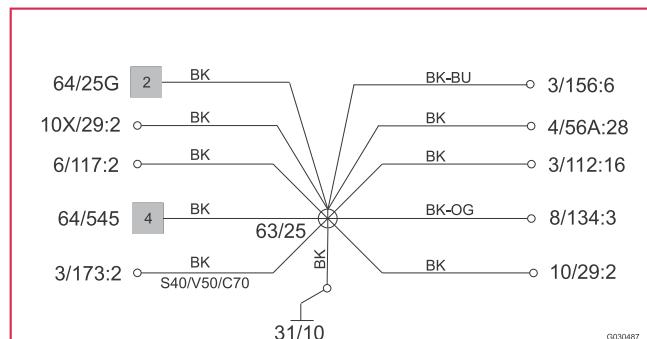


Branching points

63/26 - 63/52


63/26 S40/V50/C70

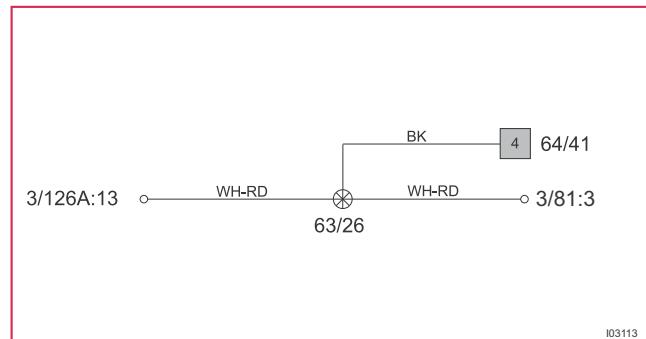


63/33 5-Cyl.

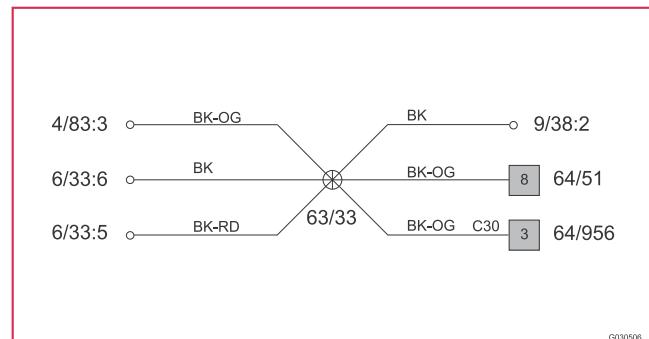


63/27

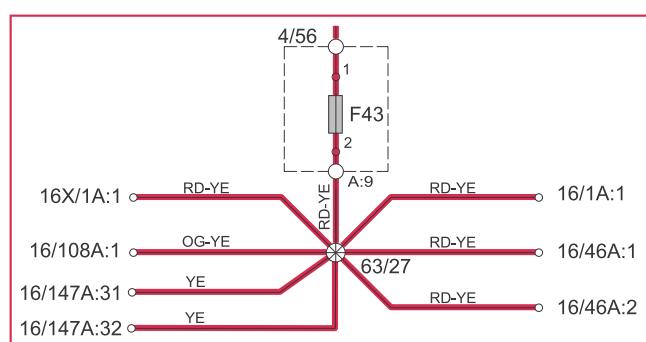


63/40 C70

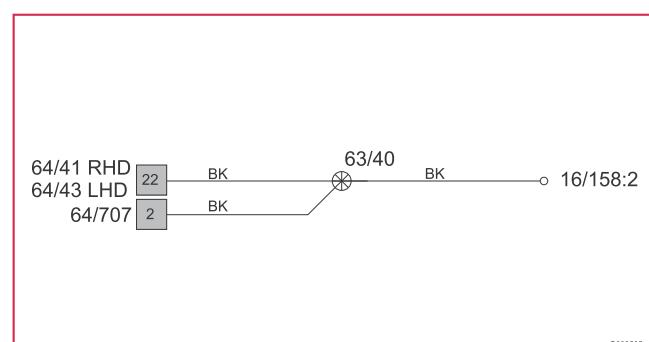


63/28 C30

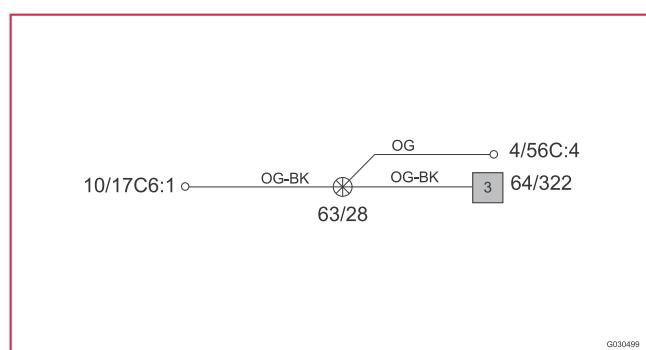


63/41

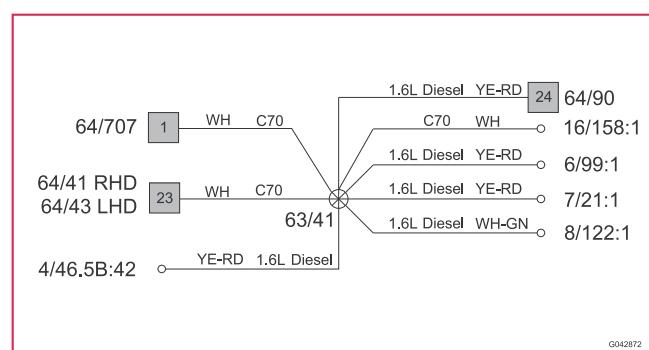


63/29

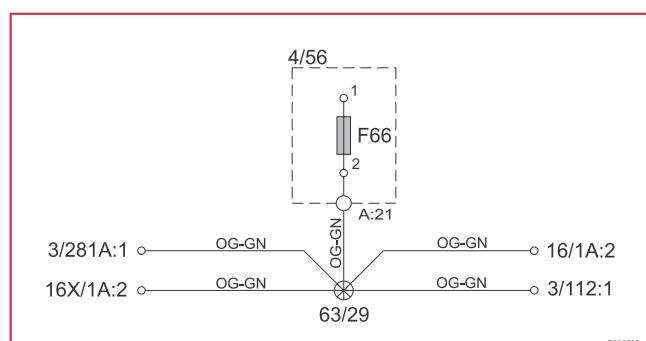


63/42

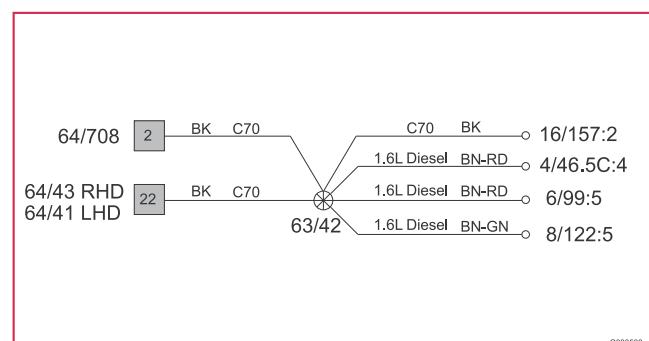

63/30

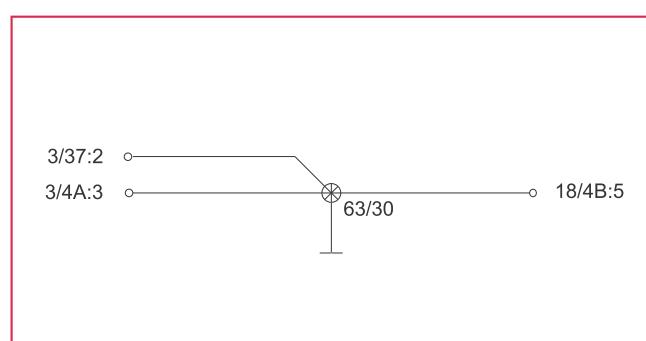


63/52 4-Cyl. 1.6l

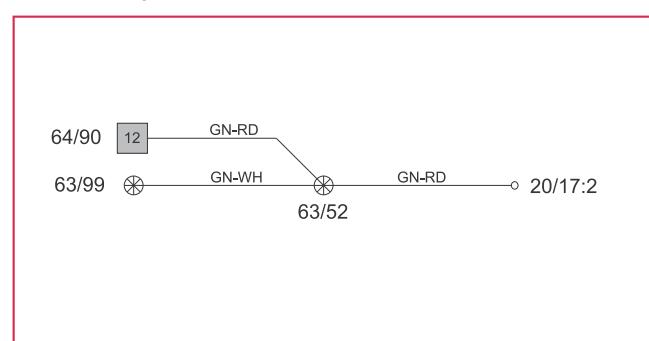


Branching points

63/53 - 63/74


63/53 4-Cyl.

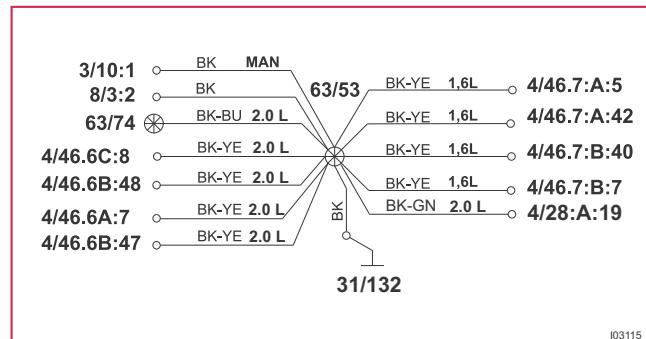


63/54 4-Cyl. Diesel

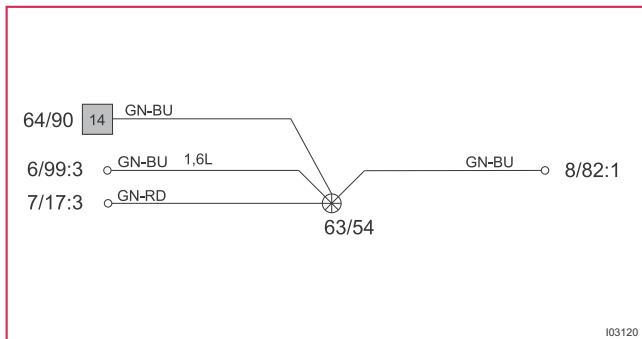


63/53 4-Cyl. Diesel

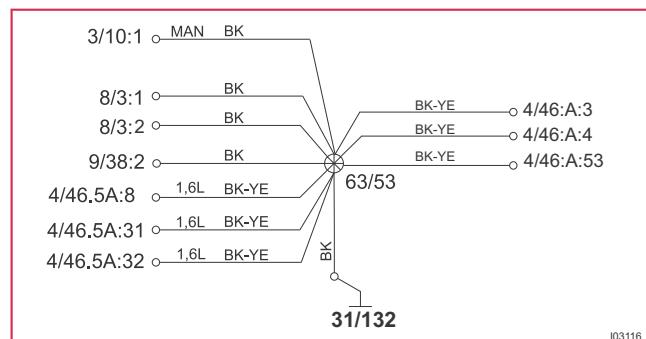


63/55

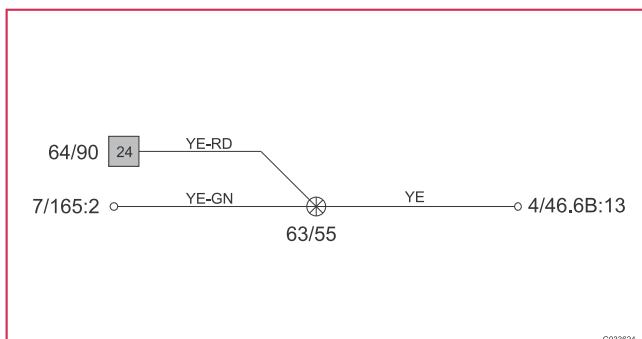


63/53 5-Cyl.

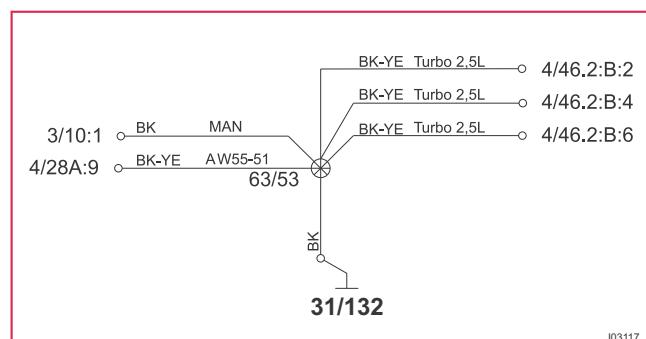


63/63 4-Cyl.

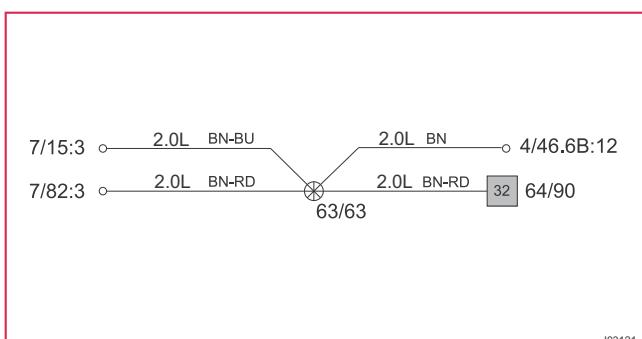


63/53 5-Cyl. Diesel

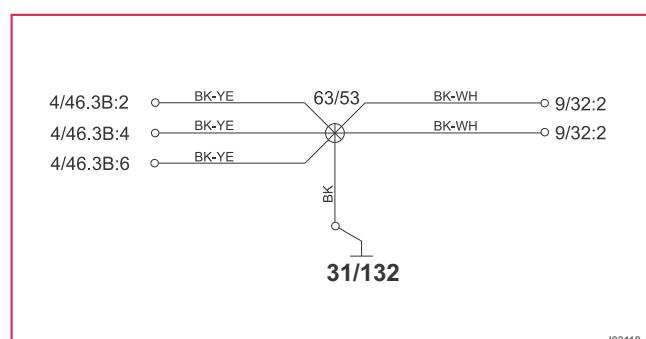


63/67

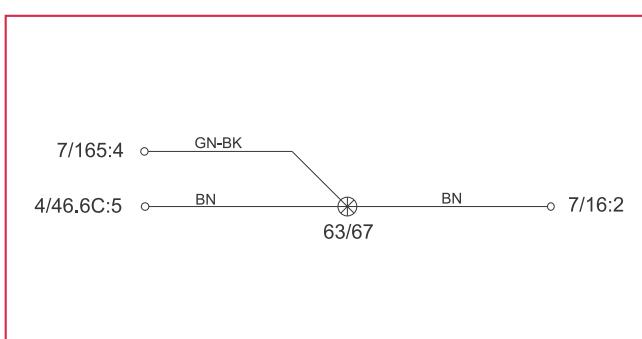

63/54 Gasoline

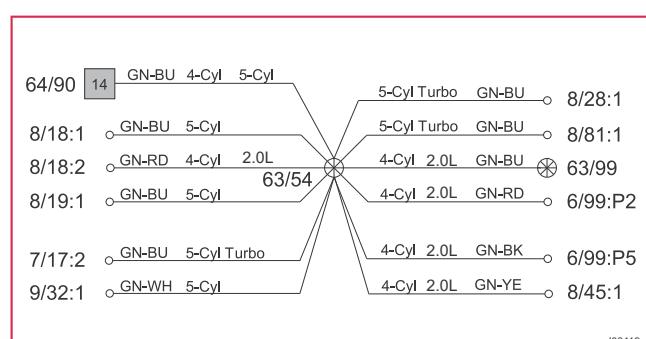


63/74 4-Cyl. Gasoline

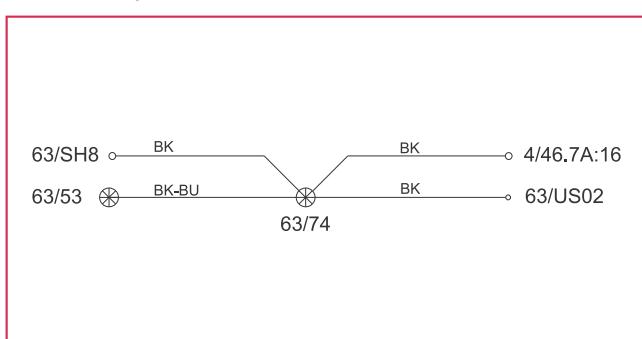


Branching points

63/82 - 63/98


63/82 5-Cyl. Diesel

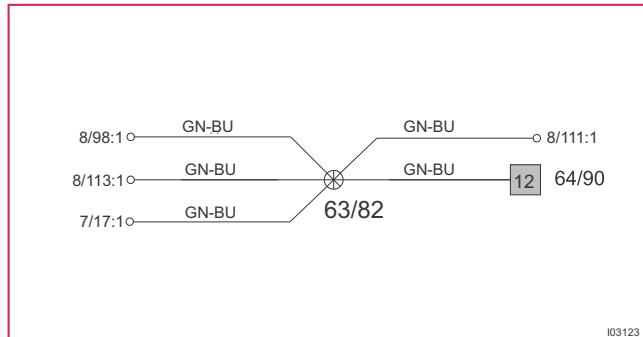


63/91 G

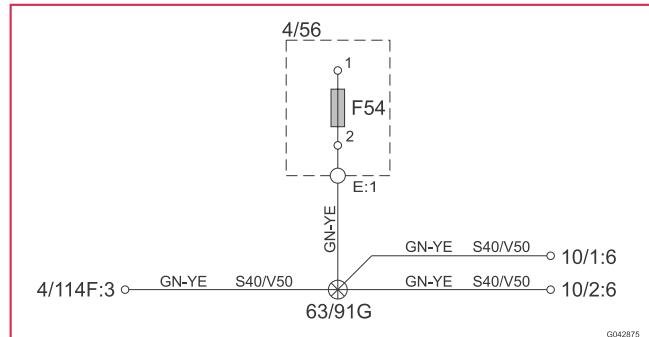


63/83 5-Cyl. Diesel

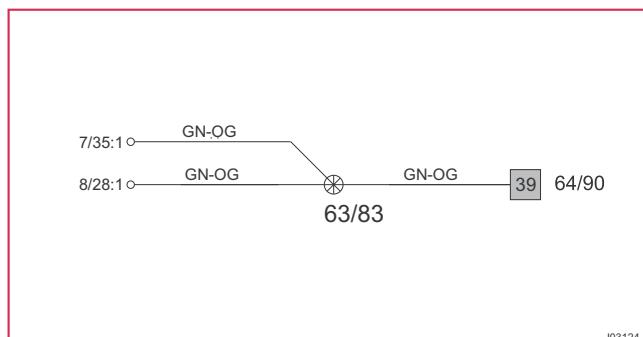


63/92 C30/C70

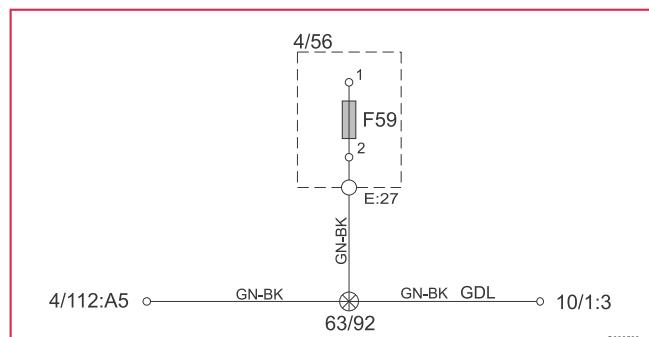


63/84 5-Cyl. Diesel

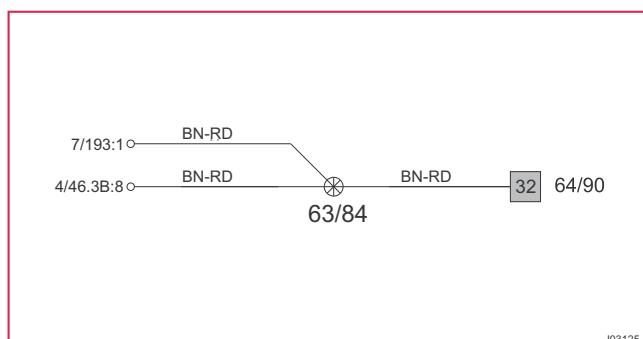


63/93 C30/C70

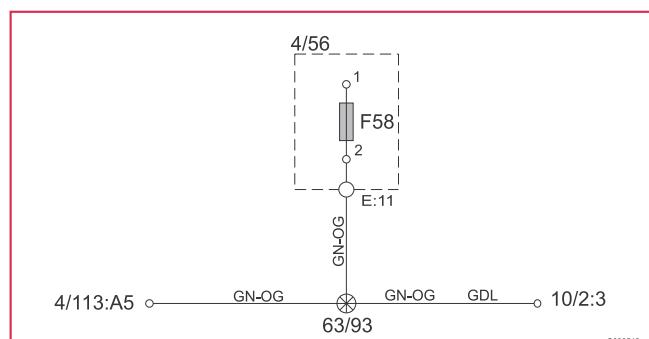


63/86B C70

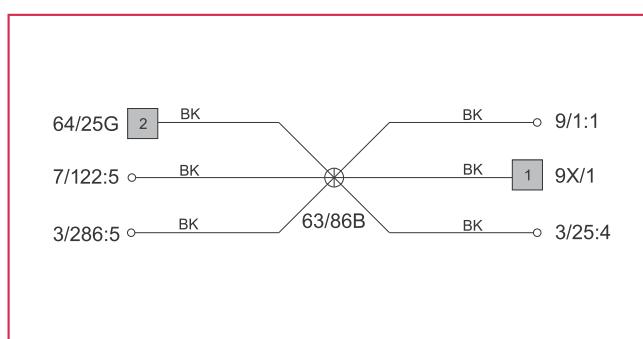


63/95 4-Cyl. 2.0L

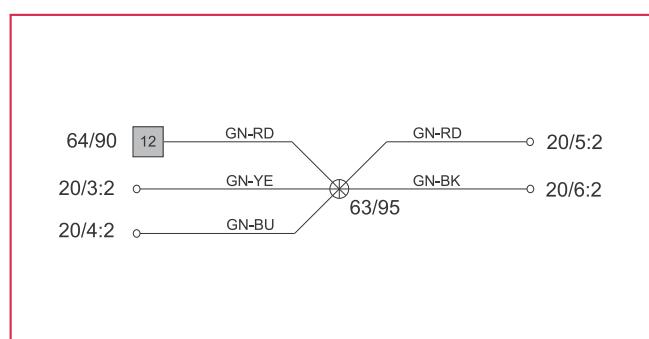

63/88

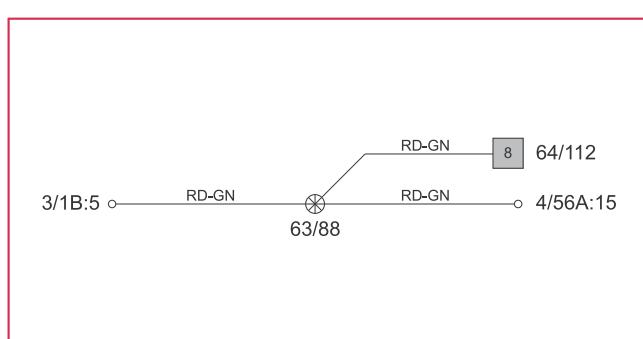


63/98 5-Cyl.

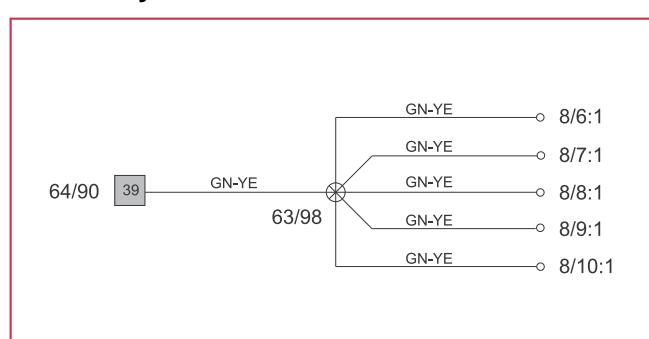


Branching points

63/99 - 63/135


63/99 4-Cyl. Gasoline

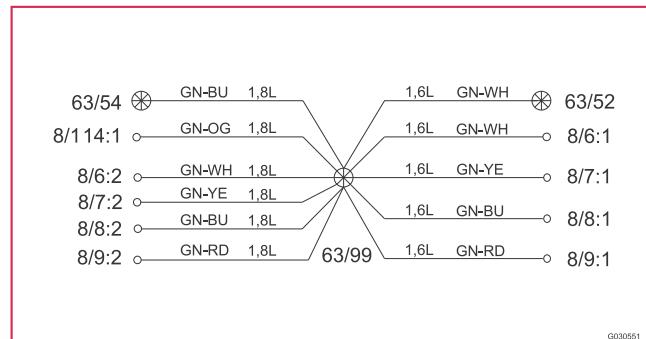


63/121 C30/C70

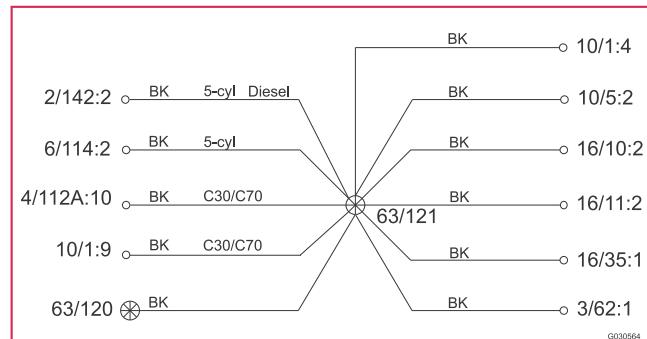


63/103 5-Cyl.

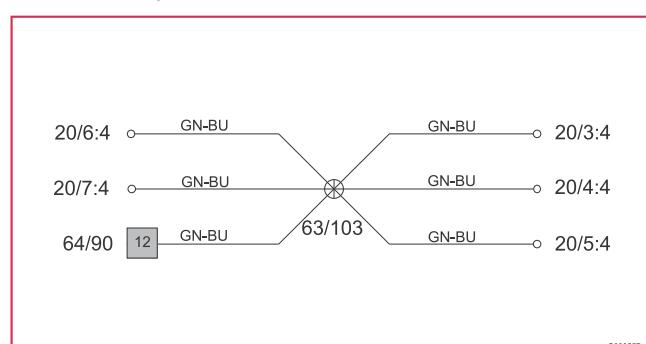


63/121 S40/V50

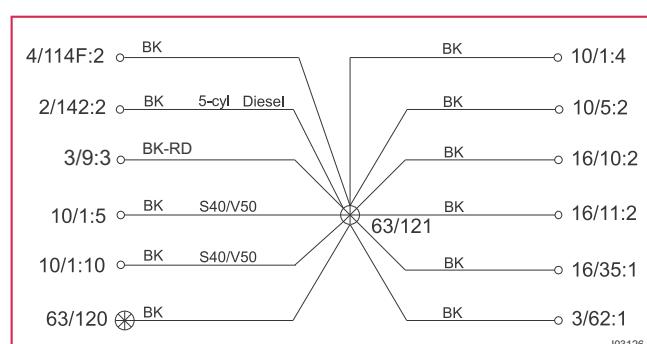


63/108

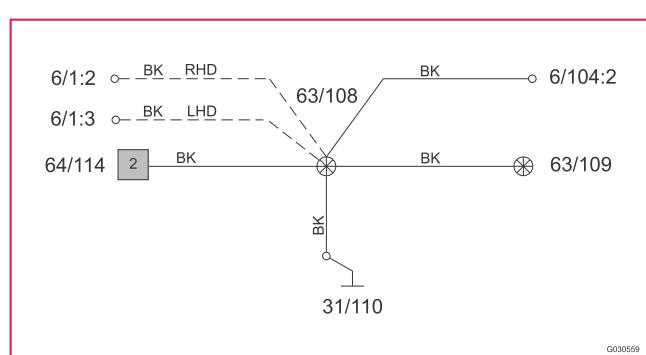


63/126 4-Cyl.

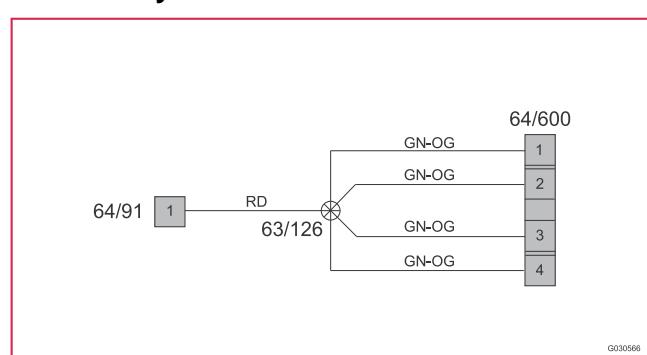


63/109

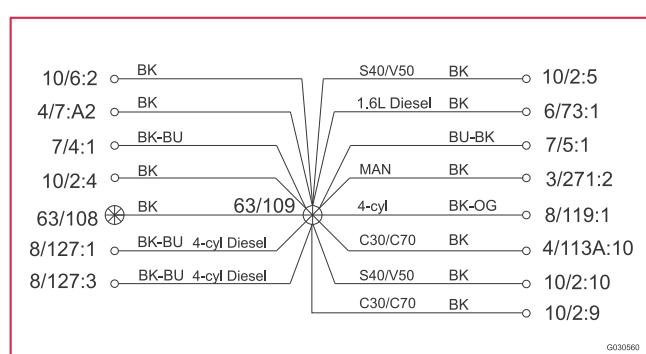


63/130

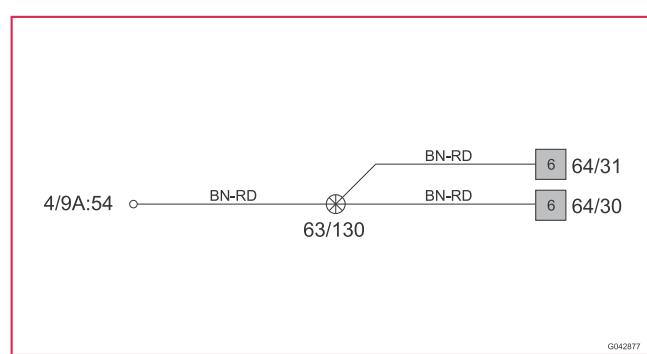

63/120

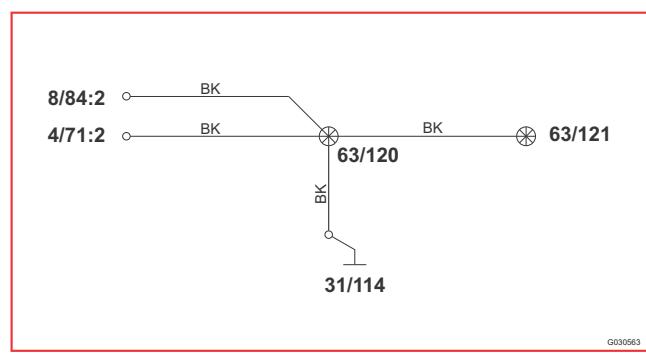


63/135 C30

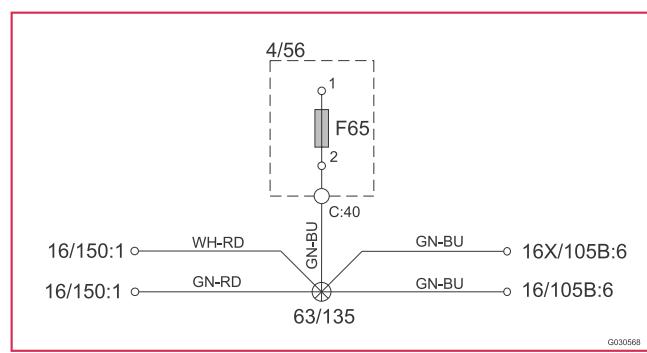


Branching points

63/135 - 63/180


63/135 C70

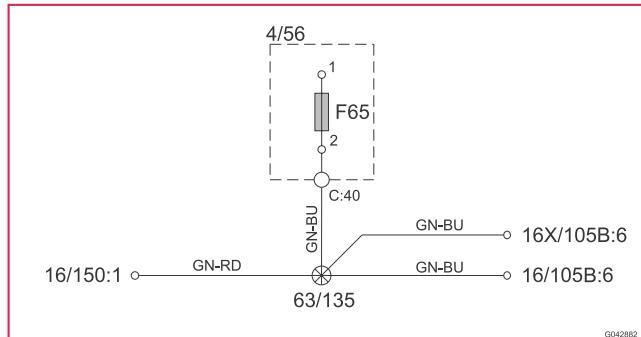


63/172 C70

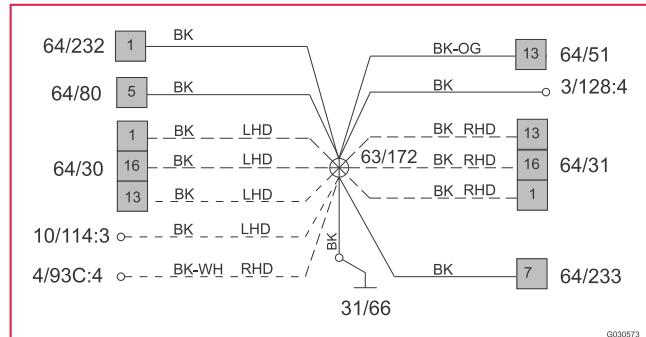


63/139 C30/S40/V50

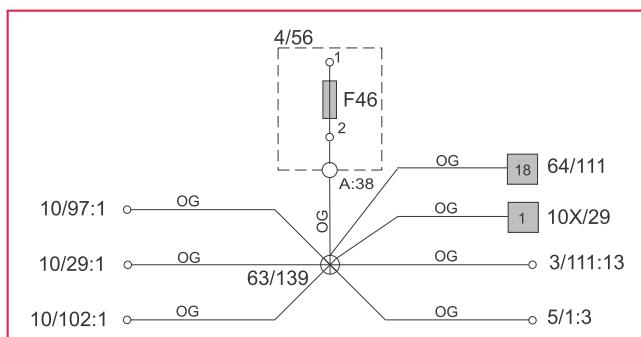


63/173

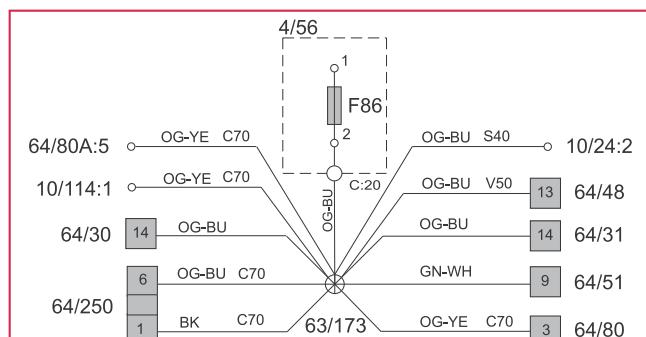


63/150

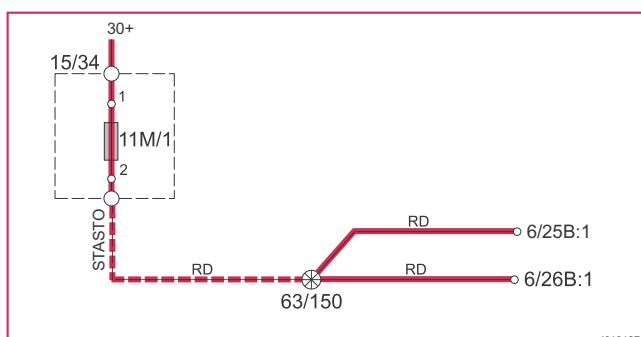


63/174 C30

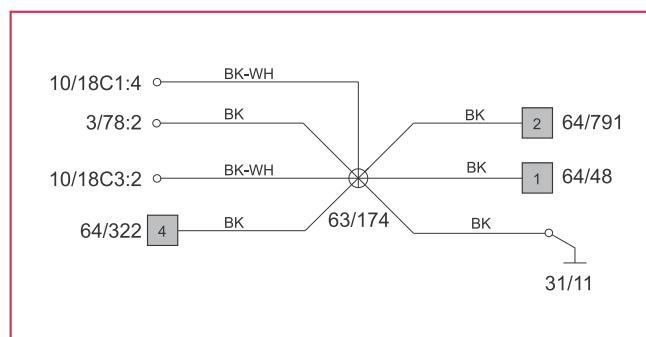


63/171

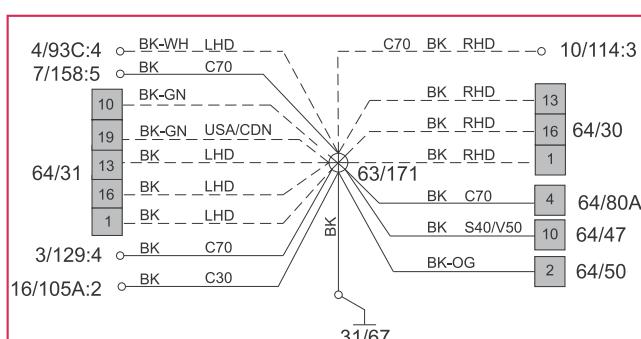


63/175 C30

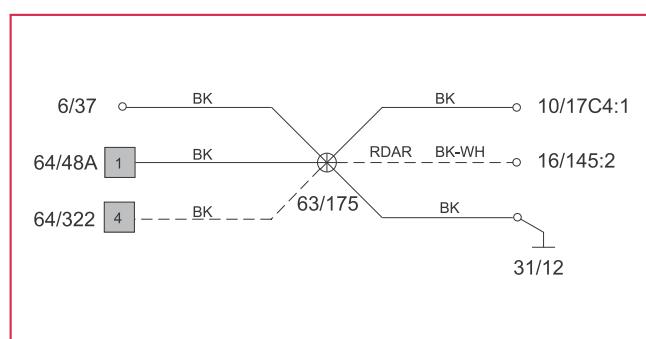

63/172 S40/V50

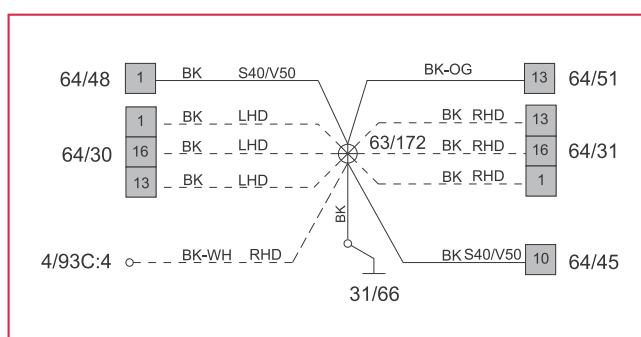


63/180

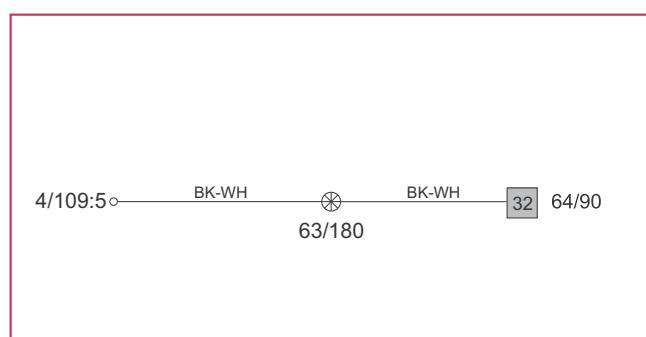


Branching points

63/184 - 63/213


63/184 C70

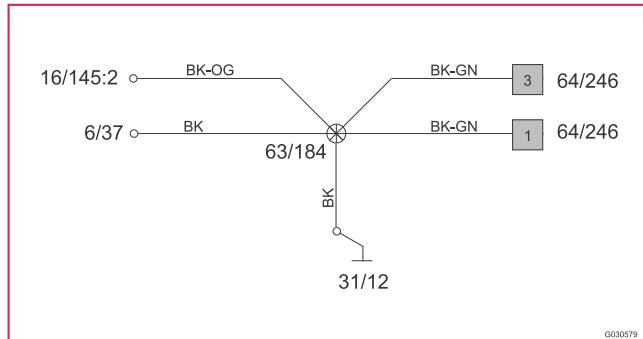


63/198

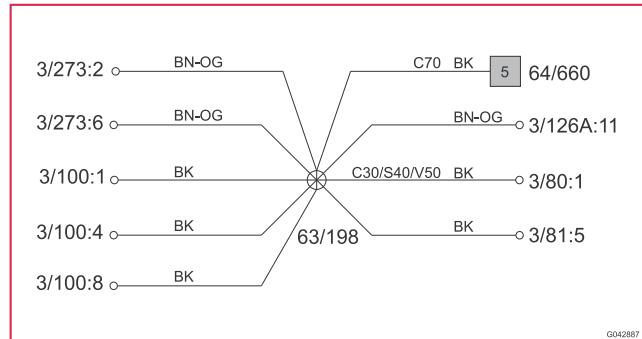


63/192 S40/V50

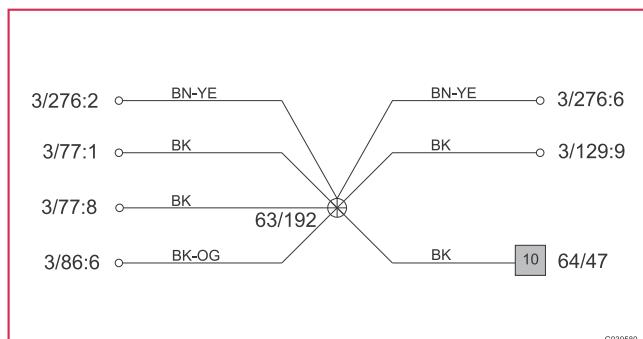


63/199 S40/V50

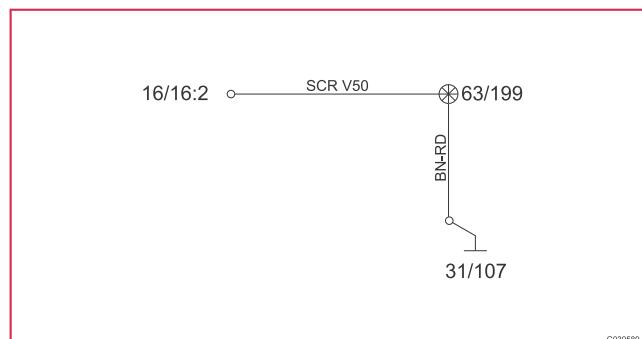


63/193 C30/S40/V50

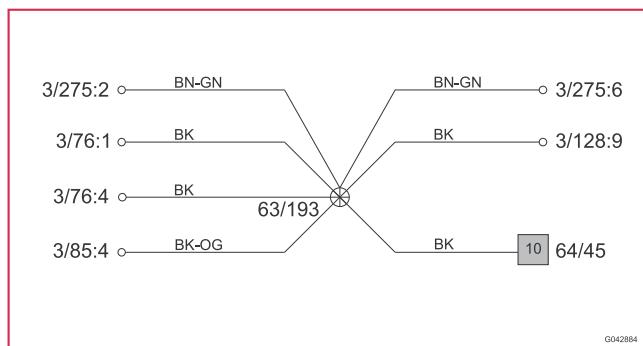


63/211

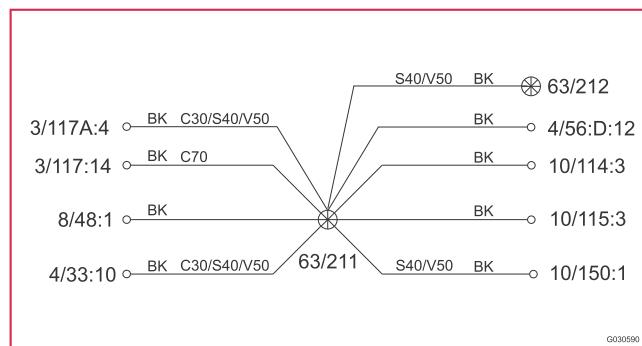


63/195

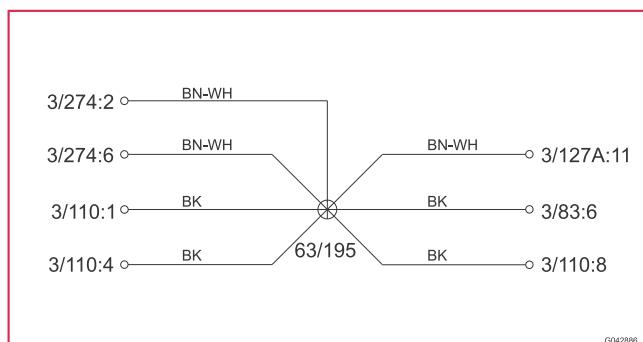


63/212

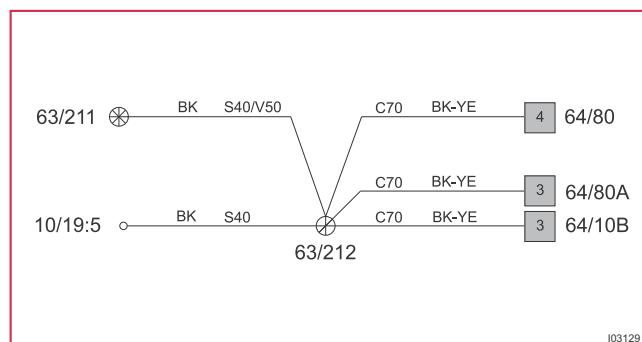

63/196 C30/S40/V50

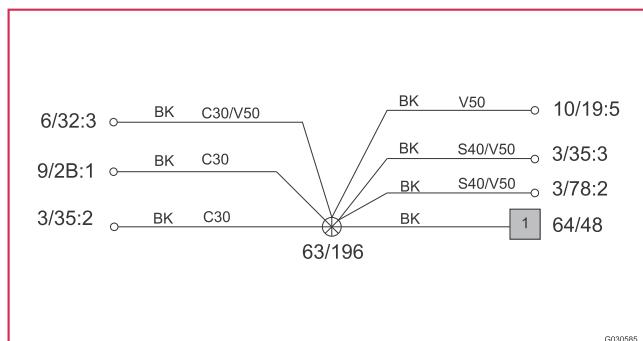


63/213

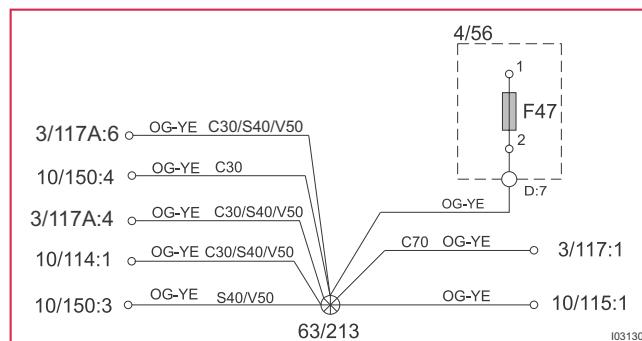


Branching points

63/214 - 63/223


63/214 C30/S40/V50

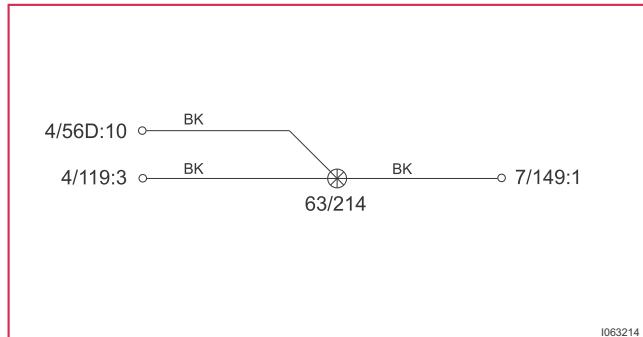


63/218 C70

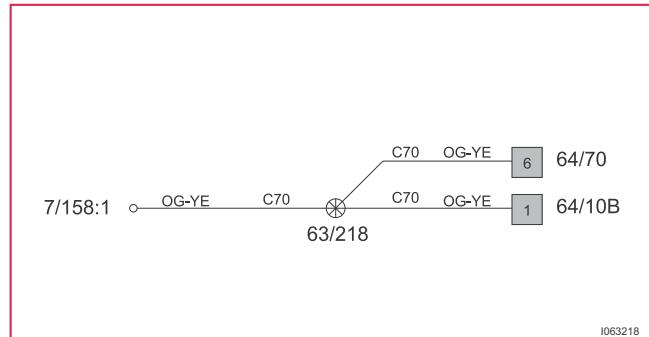


63/214 C70

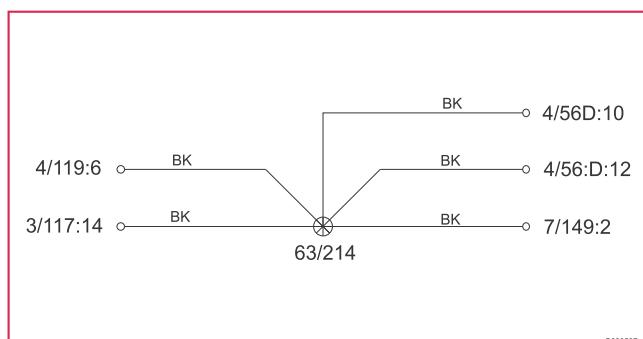


63/220

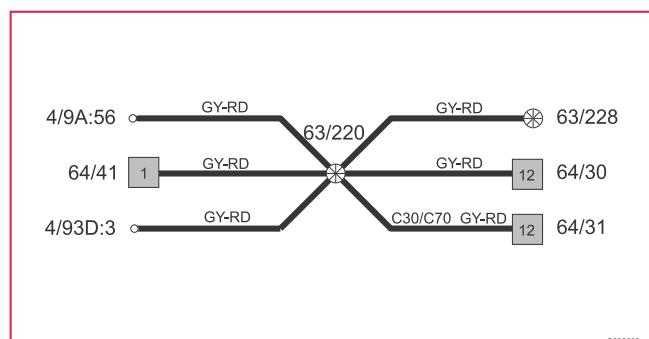


63/215

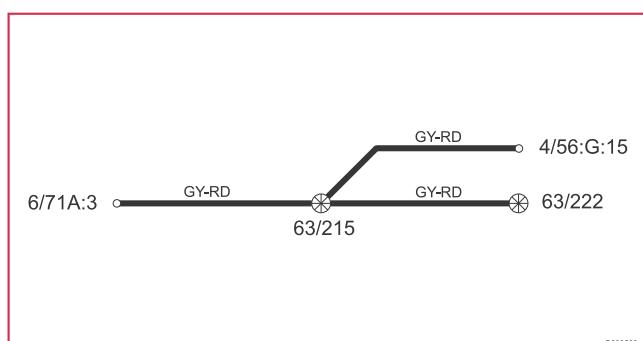


63/221

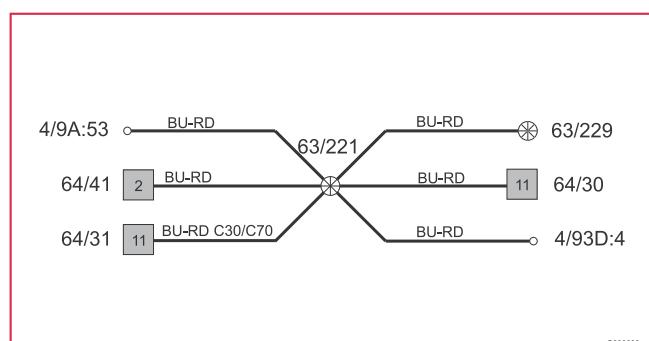


63/216

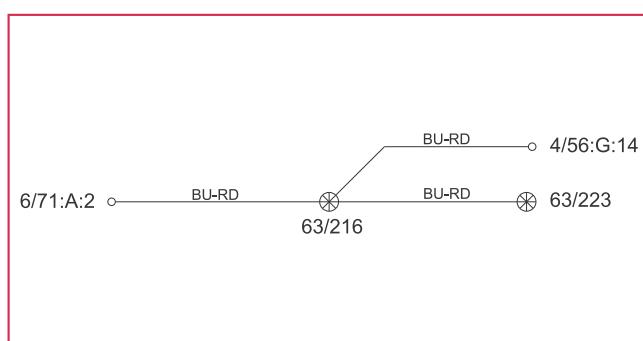


63/222

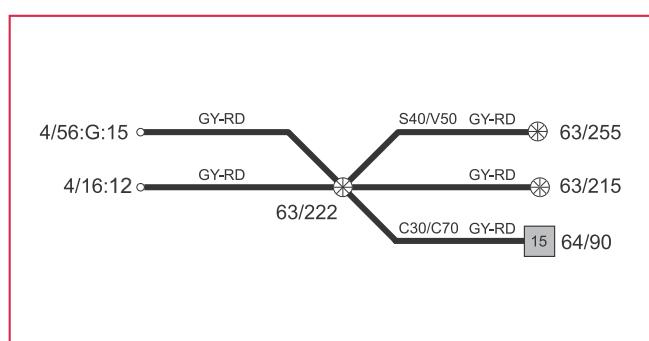

63/217 C70

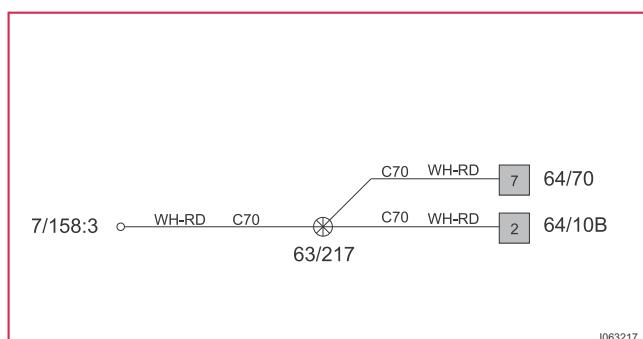


63/223

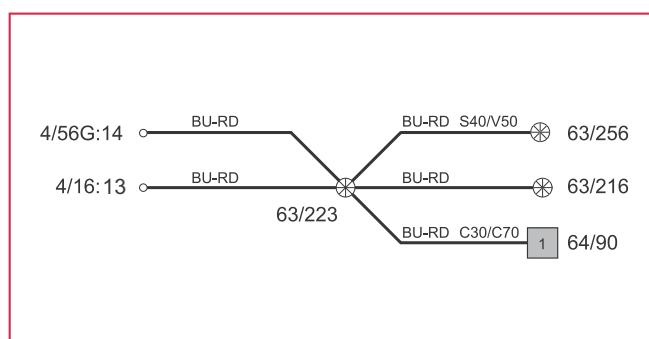


Branching points

63/226 - 63/255


63/226

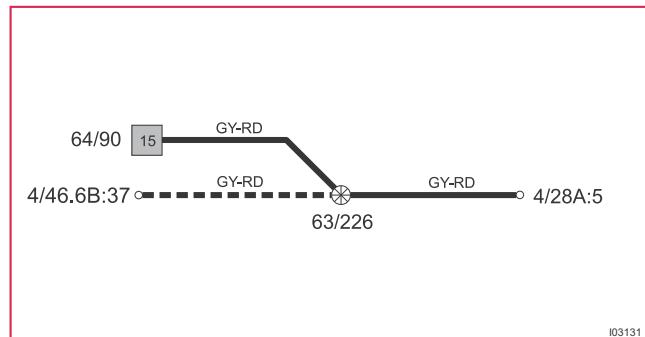


63/232

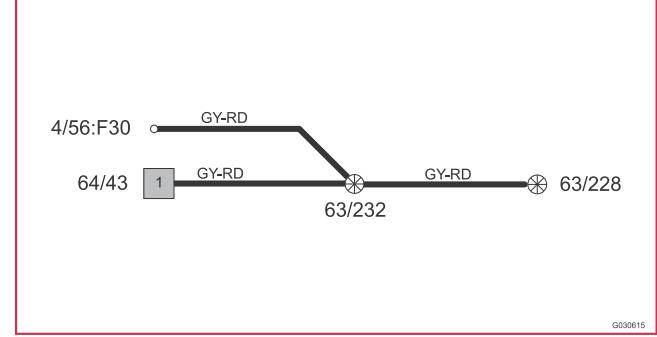


63/227

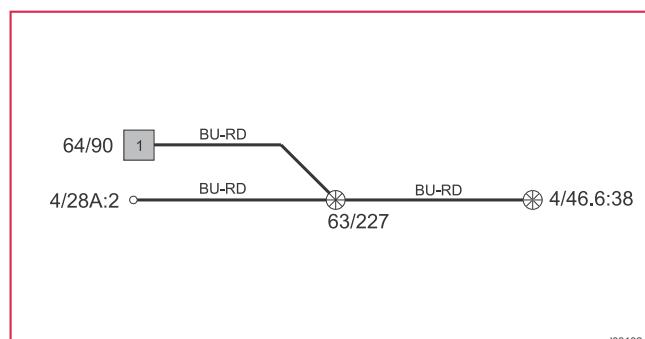


63/233

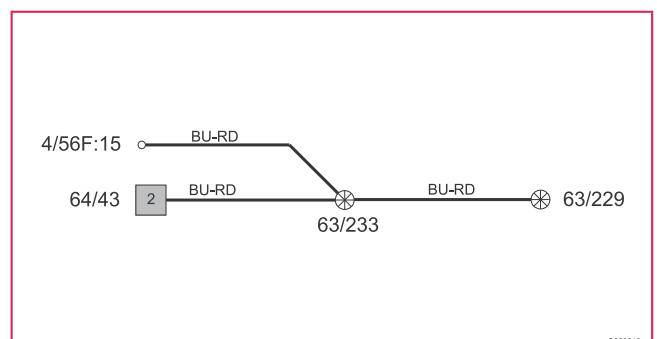


63/228

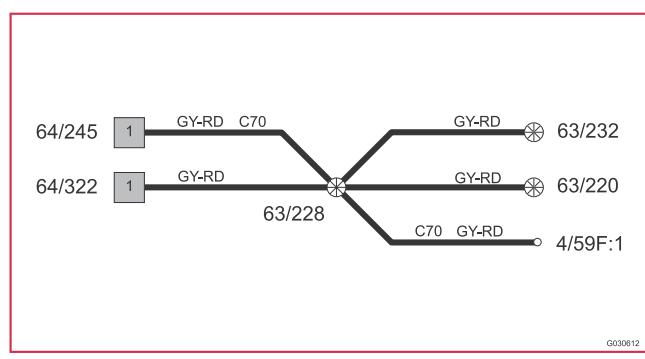


63/234

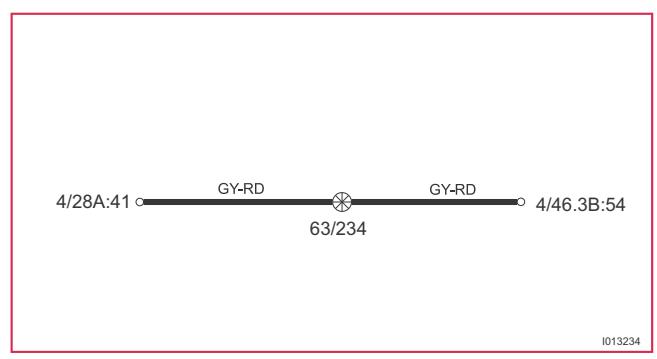


63/229

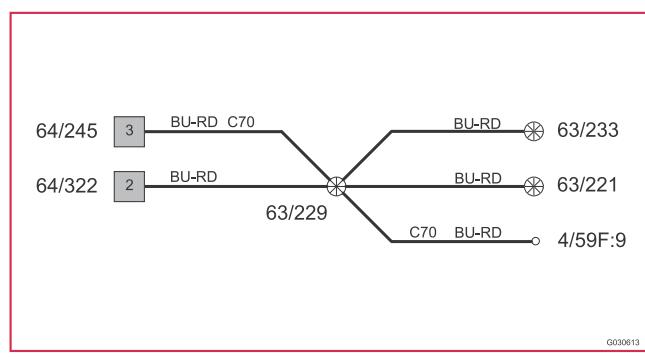


63/235

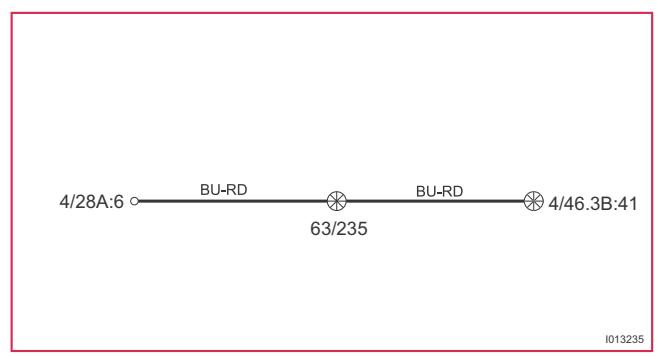

63/231 C70

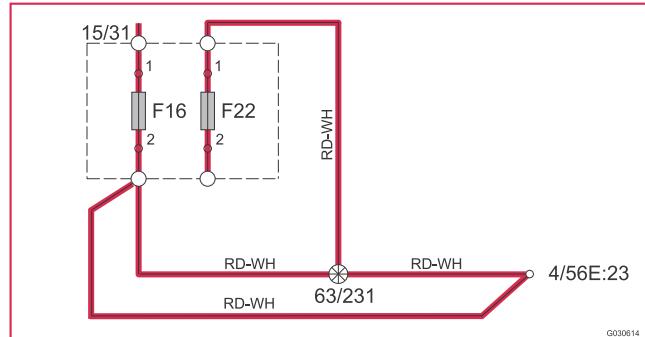


63/255

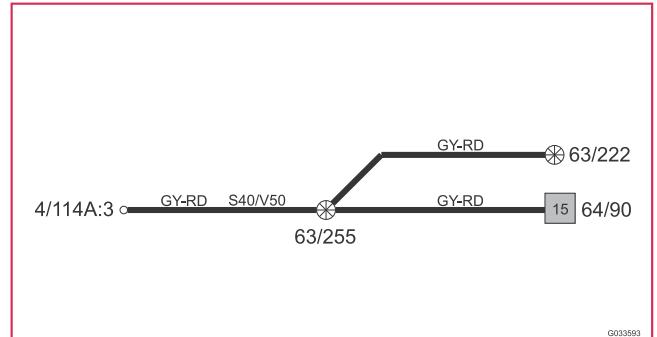


Branching points

63/256 - 63/328


63/256

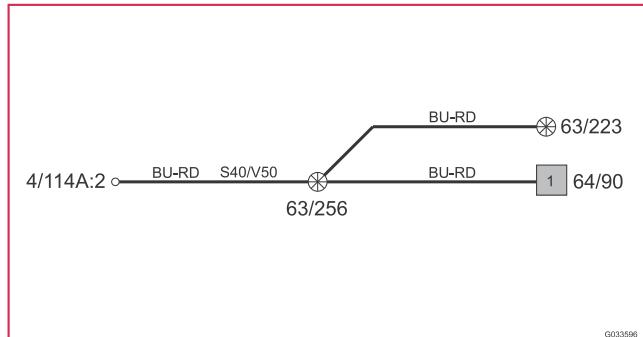


63/324 S40/V50

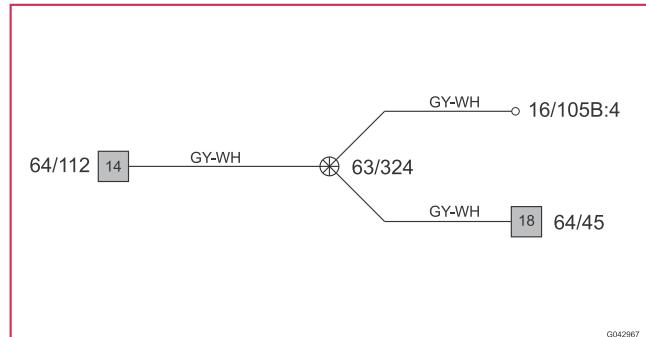


63/277 C70

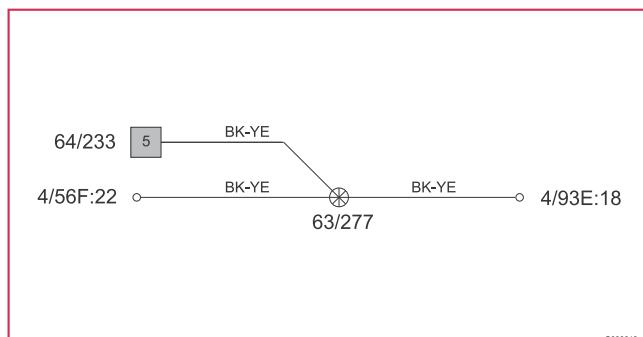


63/325 S40/V50

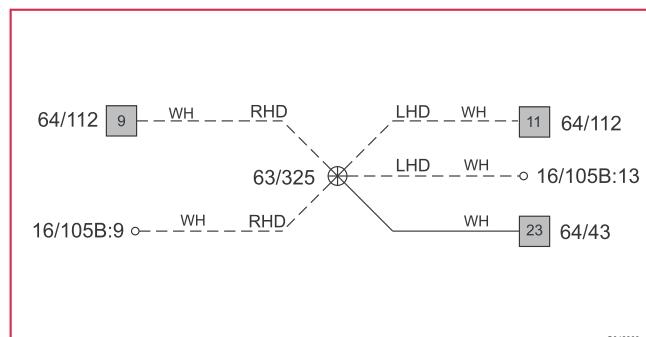


63/321 S40/V50

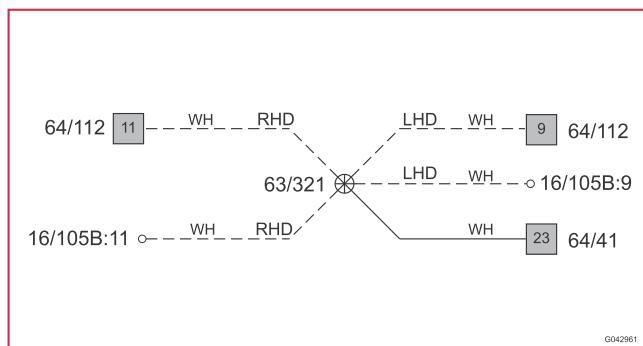


63/326 S40/V50

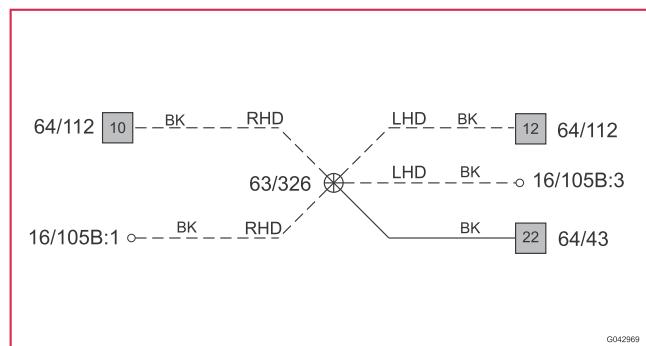


63/322 S40/V50

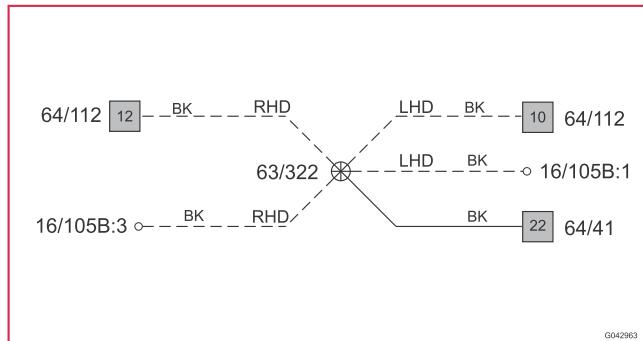


63/327 S40/V50

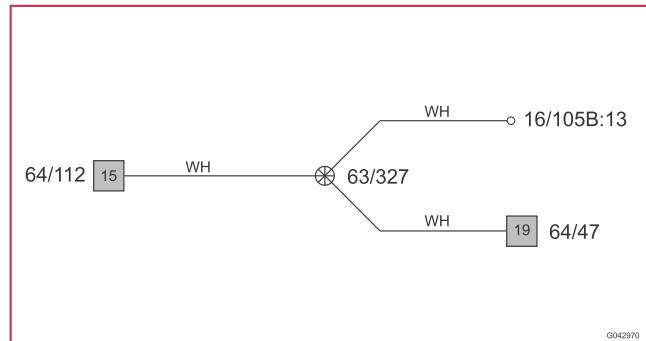

63/323 S40/V50

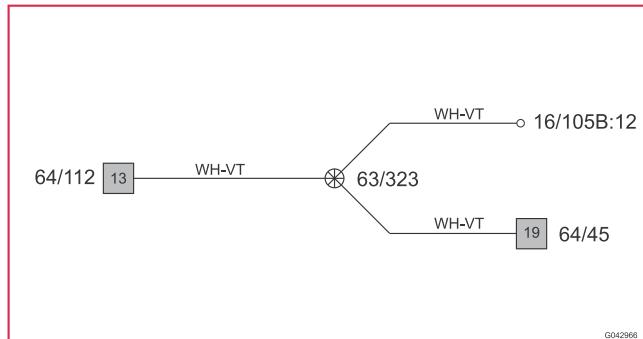


63/328 S40/V50

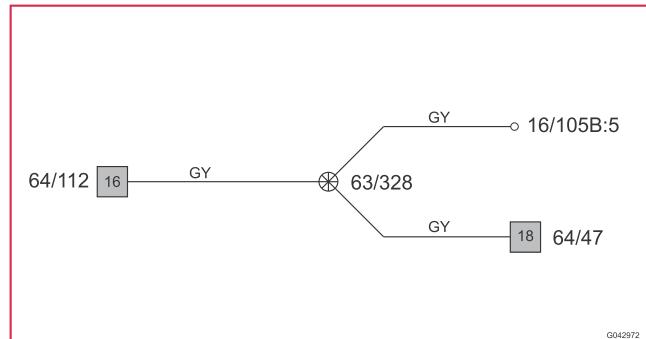


Branching points

63/339 - 63/616


63/339

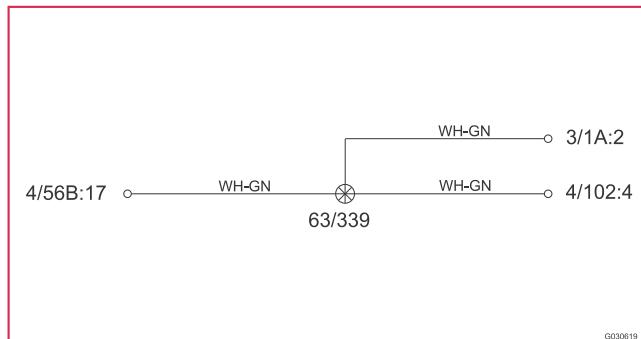


63/421

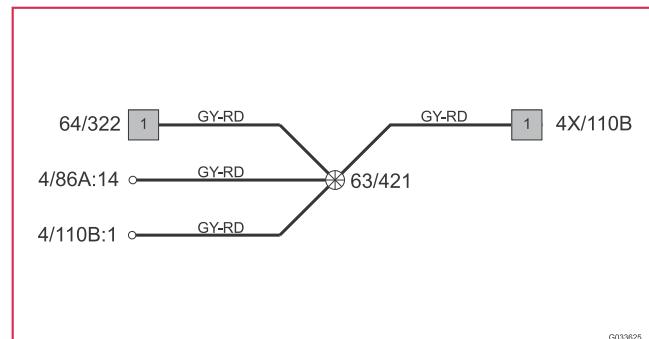


63/340 C70

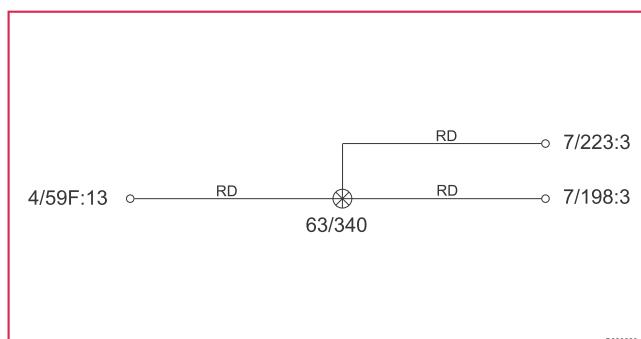


63/422

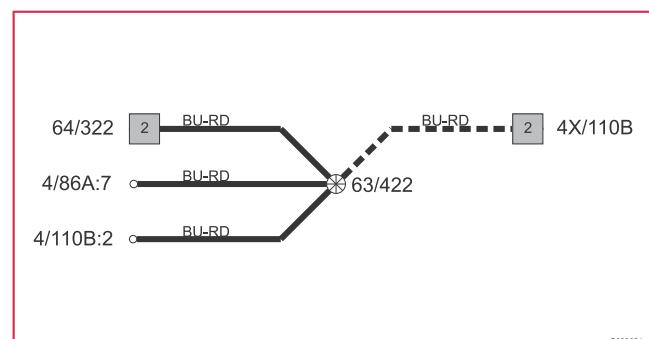


63/415

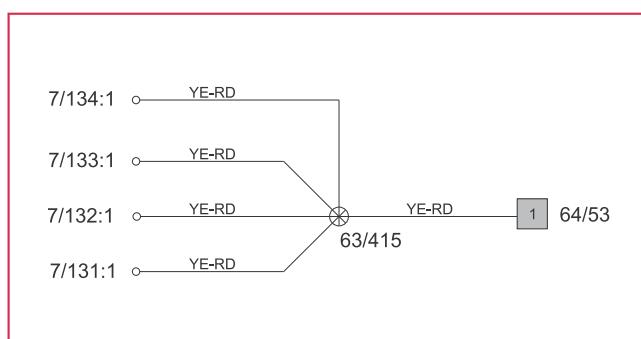


63/504 C70

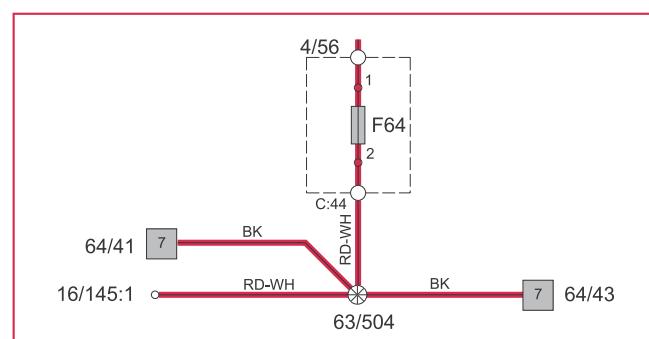


63/416

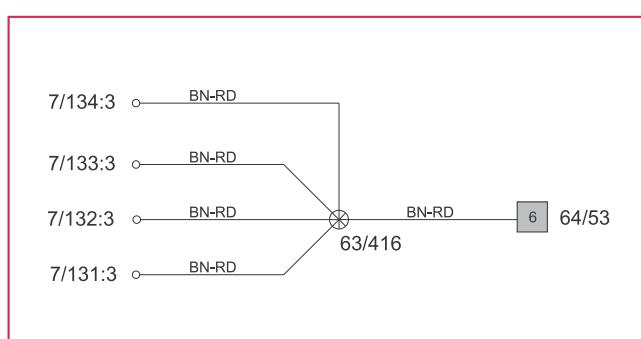


63/615

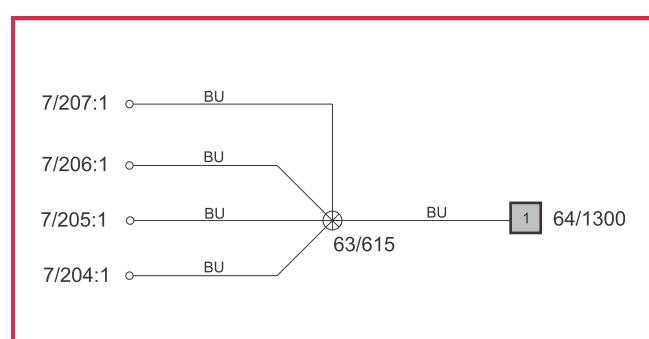

63/420

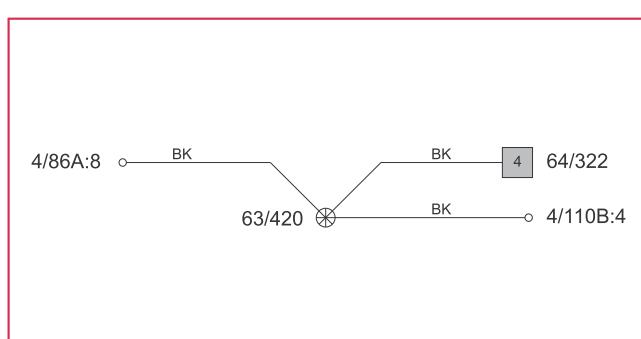


63/616

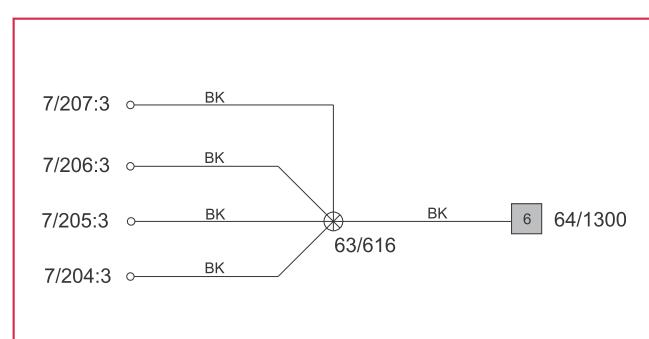


Branching points 63/1000 - 63/US02


63/1000 S40/V50

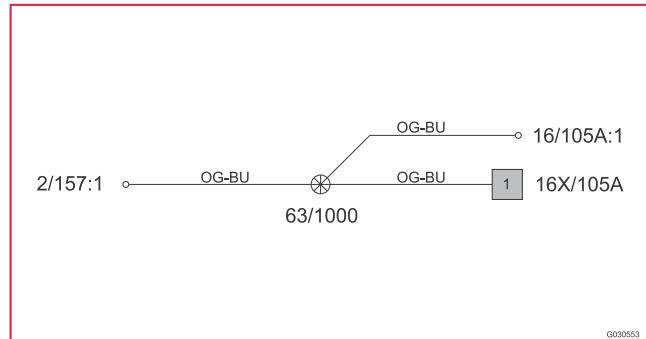


63/1001 S40/V50

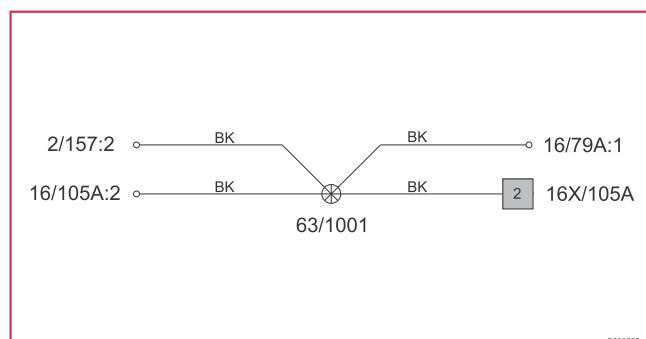

63/SH8

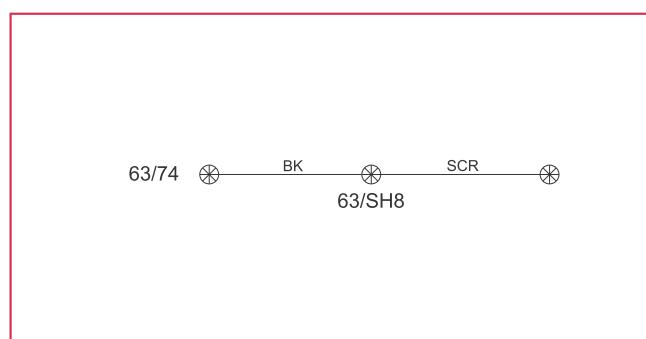


63/US02

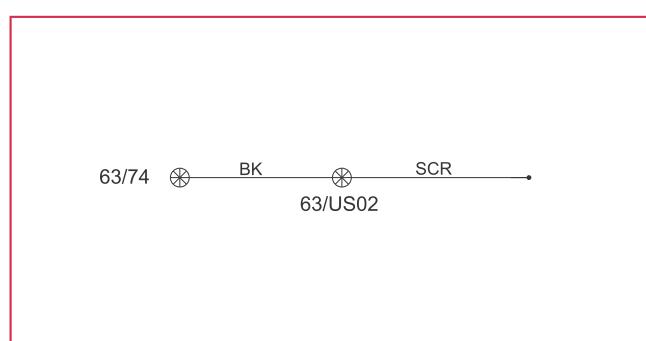


Cable harness routing in vehicle Engine harness, gasoline 4-Cyl.1.6l




Cable harness routing in vehicle Engine harness, gasoline 4-Cyl.2.0l

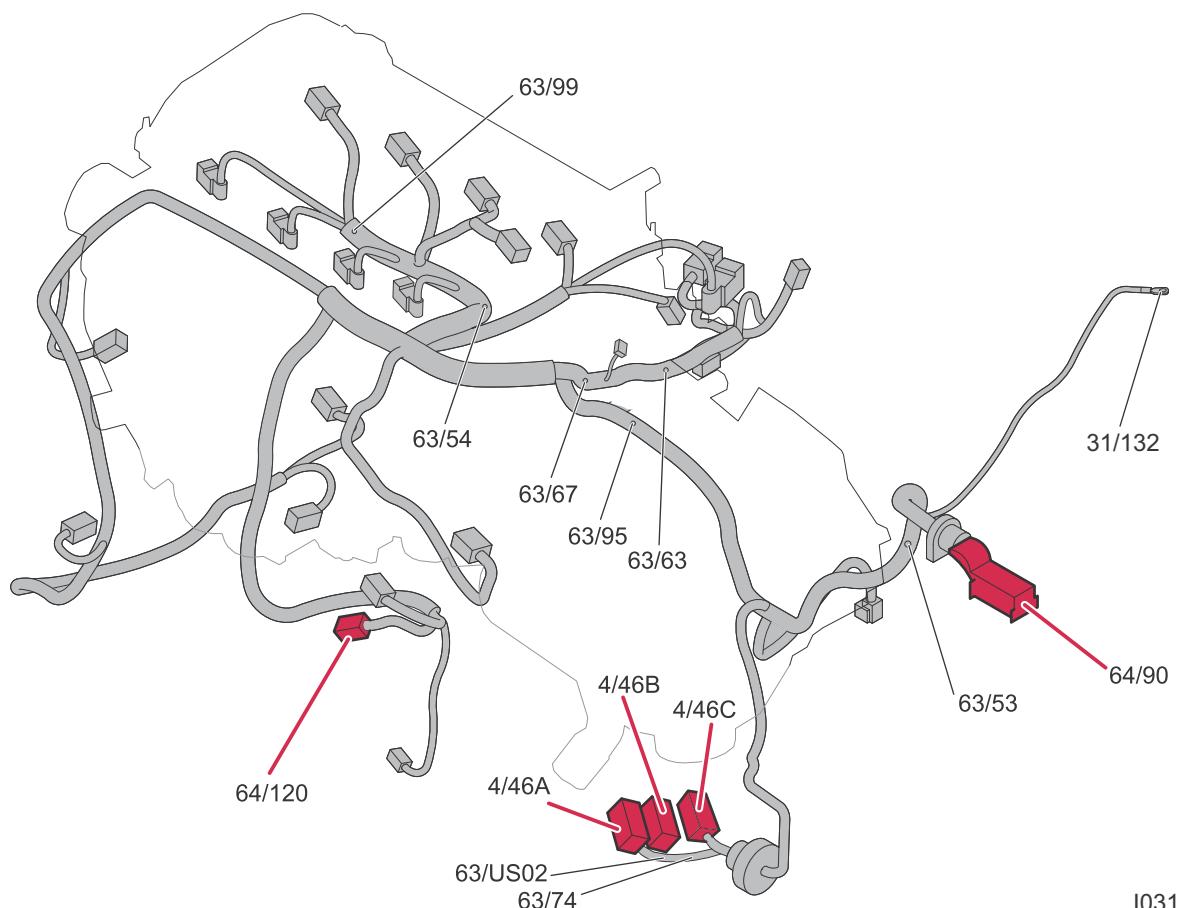

Cable harness routing in vehicle Engine harness, gasoline 5-Cyl. Turbo

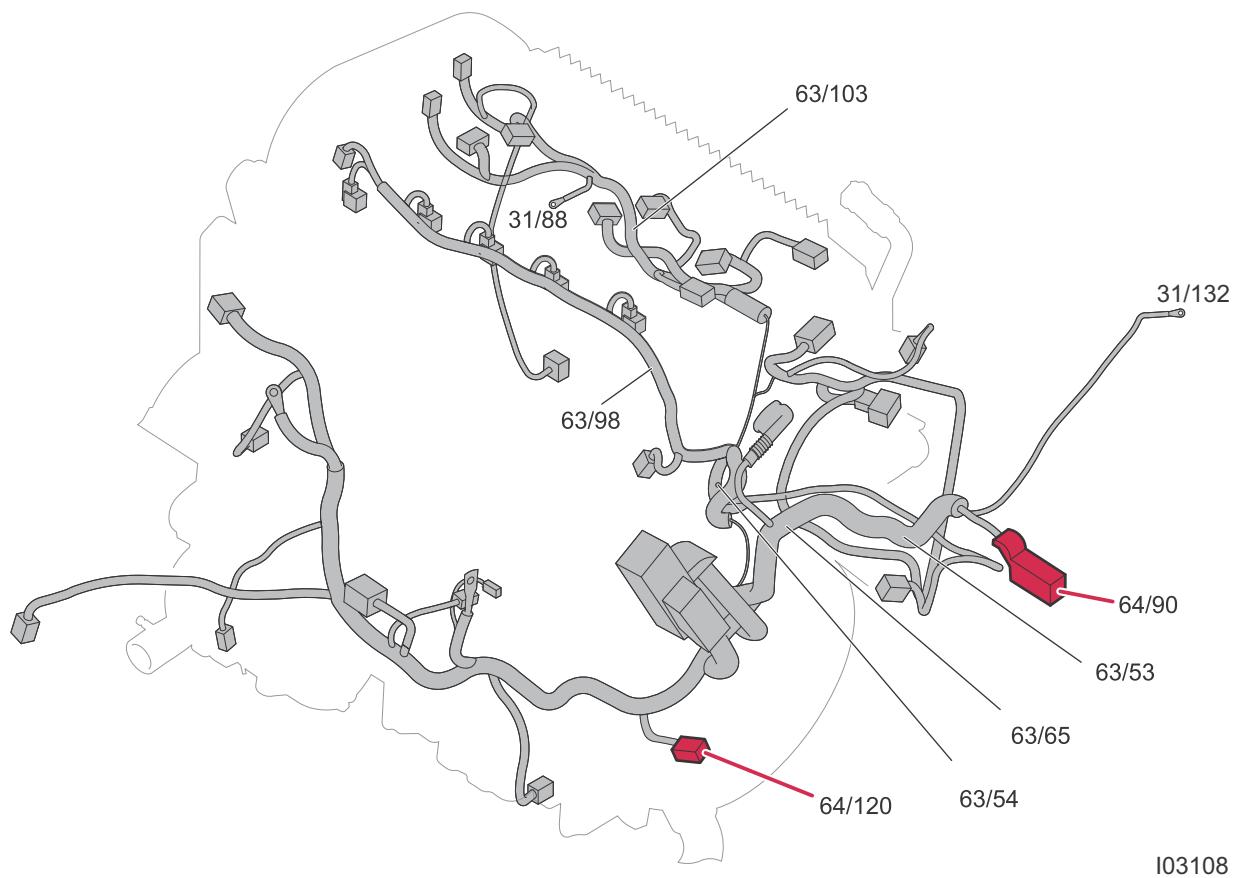


Cable harness routing in vehicle Engine harness, Diesel 1.6l

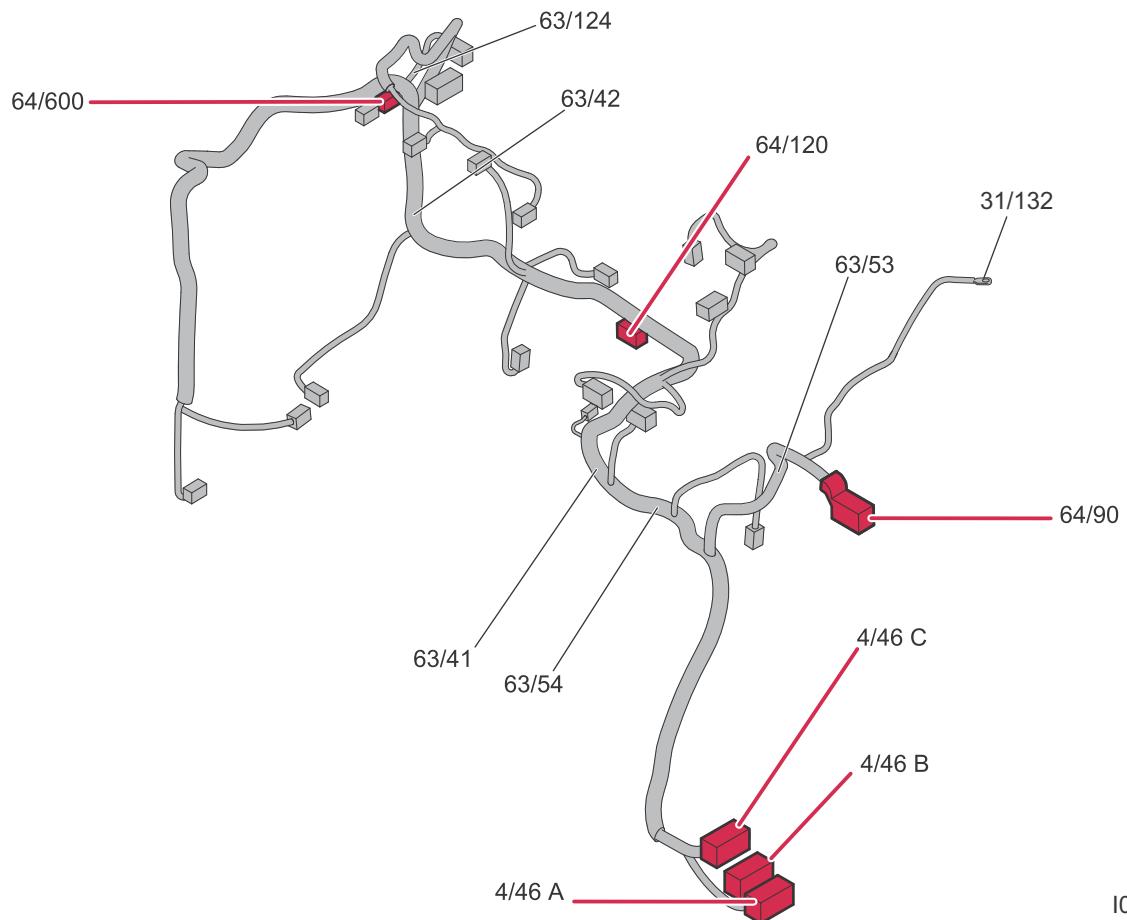


Cable harness routing in vehicle

Harness engine, Diesel 2.0l

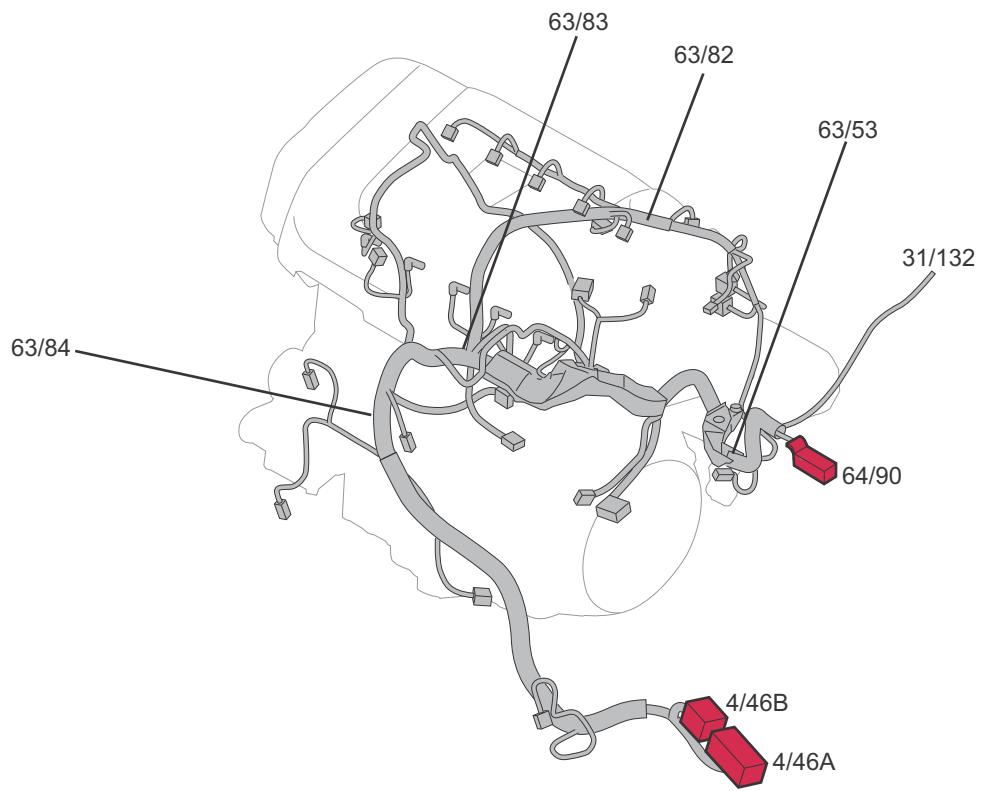


I03105

Cable harness routing in vehicle Engine compartment harness, 4-Cyl.

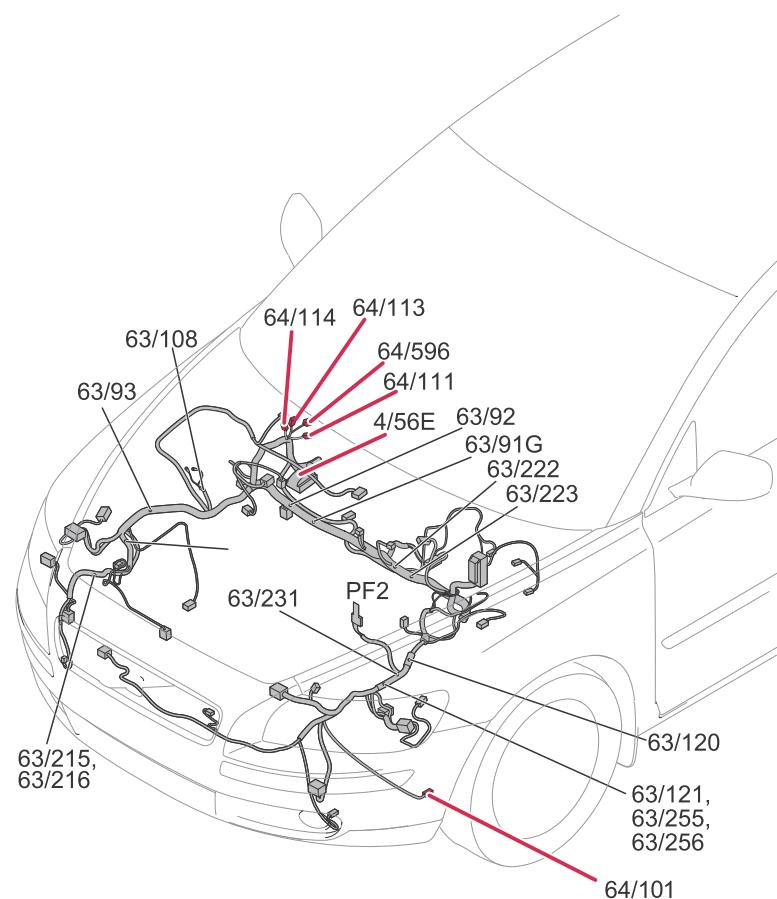


G033387

Cable harness routing in vehicle Engine compartment harness, 5-Cyl.

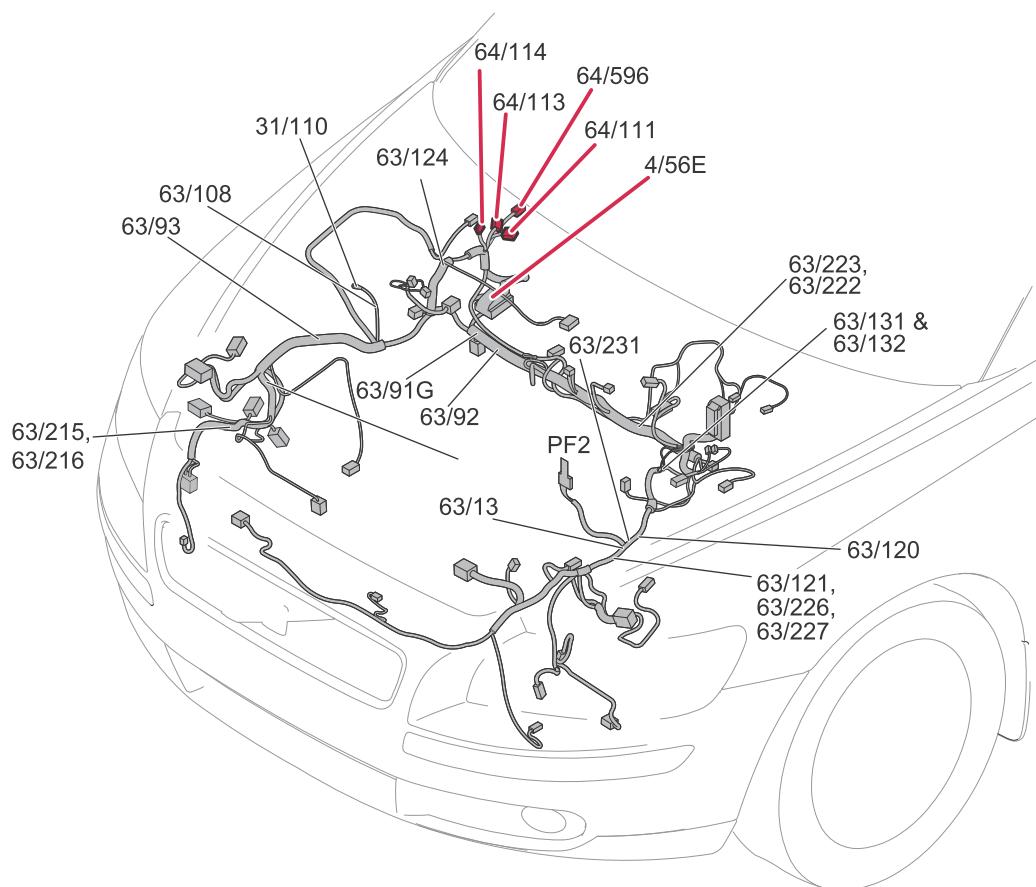


G033388

Cable harness routing in vehicle Harness dashboard, LHD

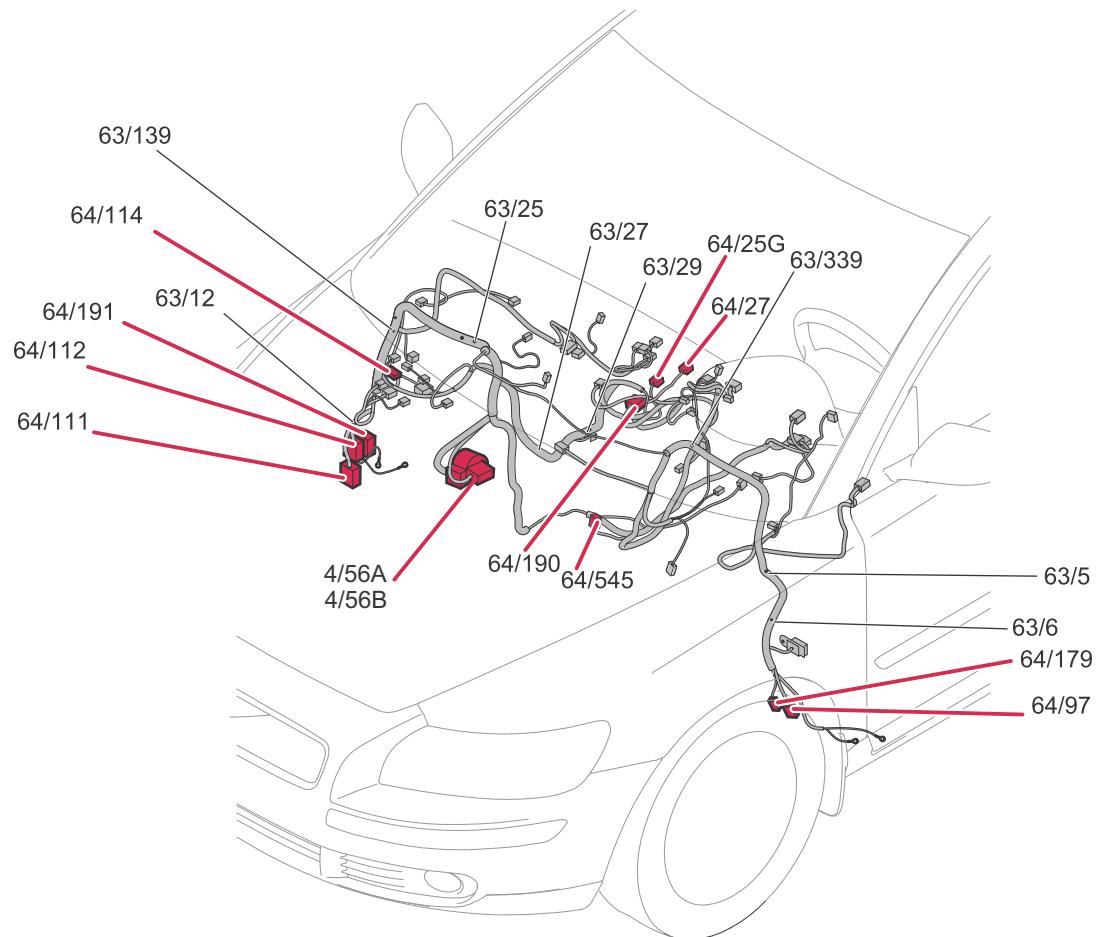

I03110


Cable harness routing in vehicle Harness Dashboard, RHD

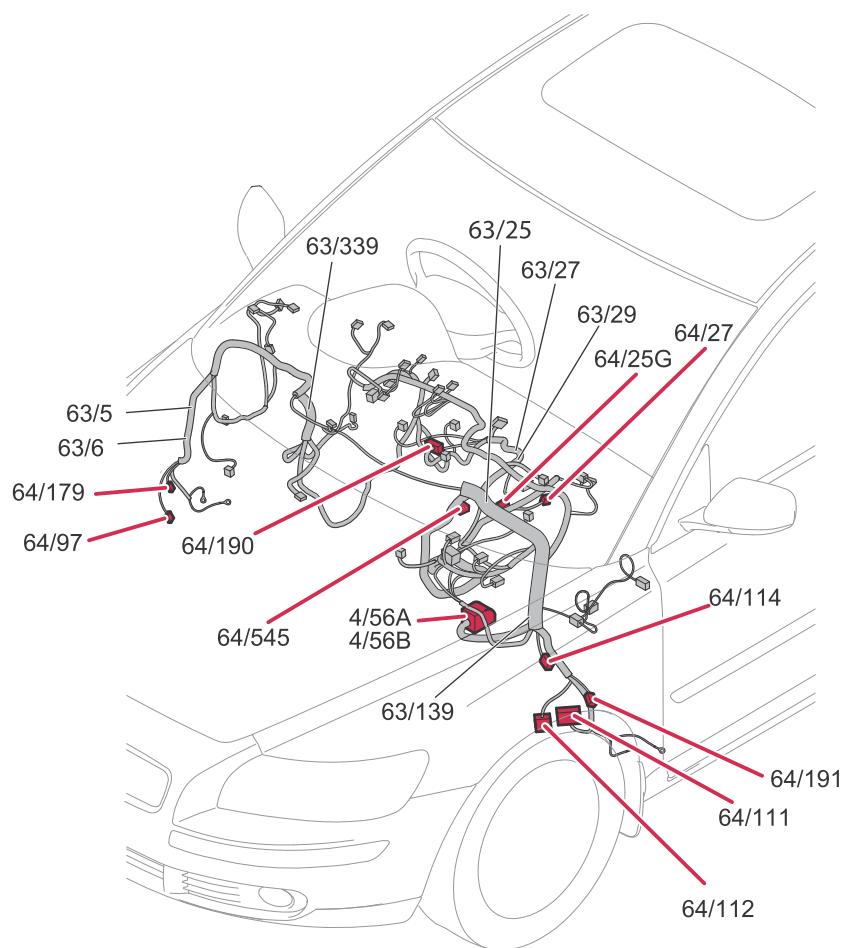

G033366

Cable harness routing in vehicle


Floor harness, C30 LHD

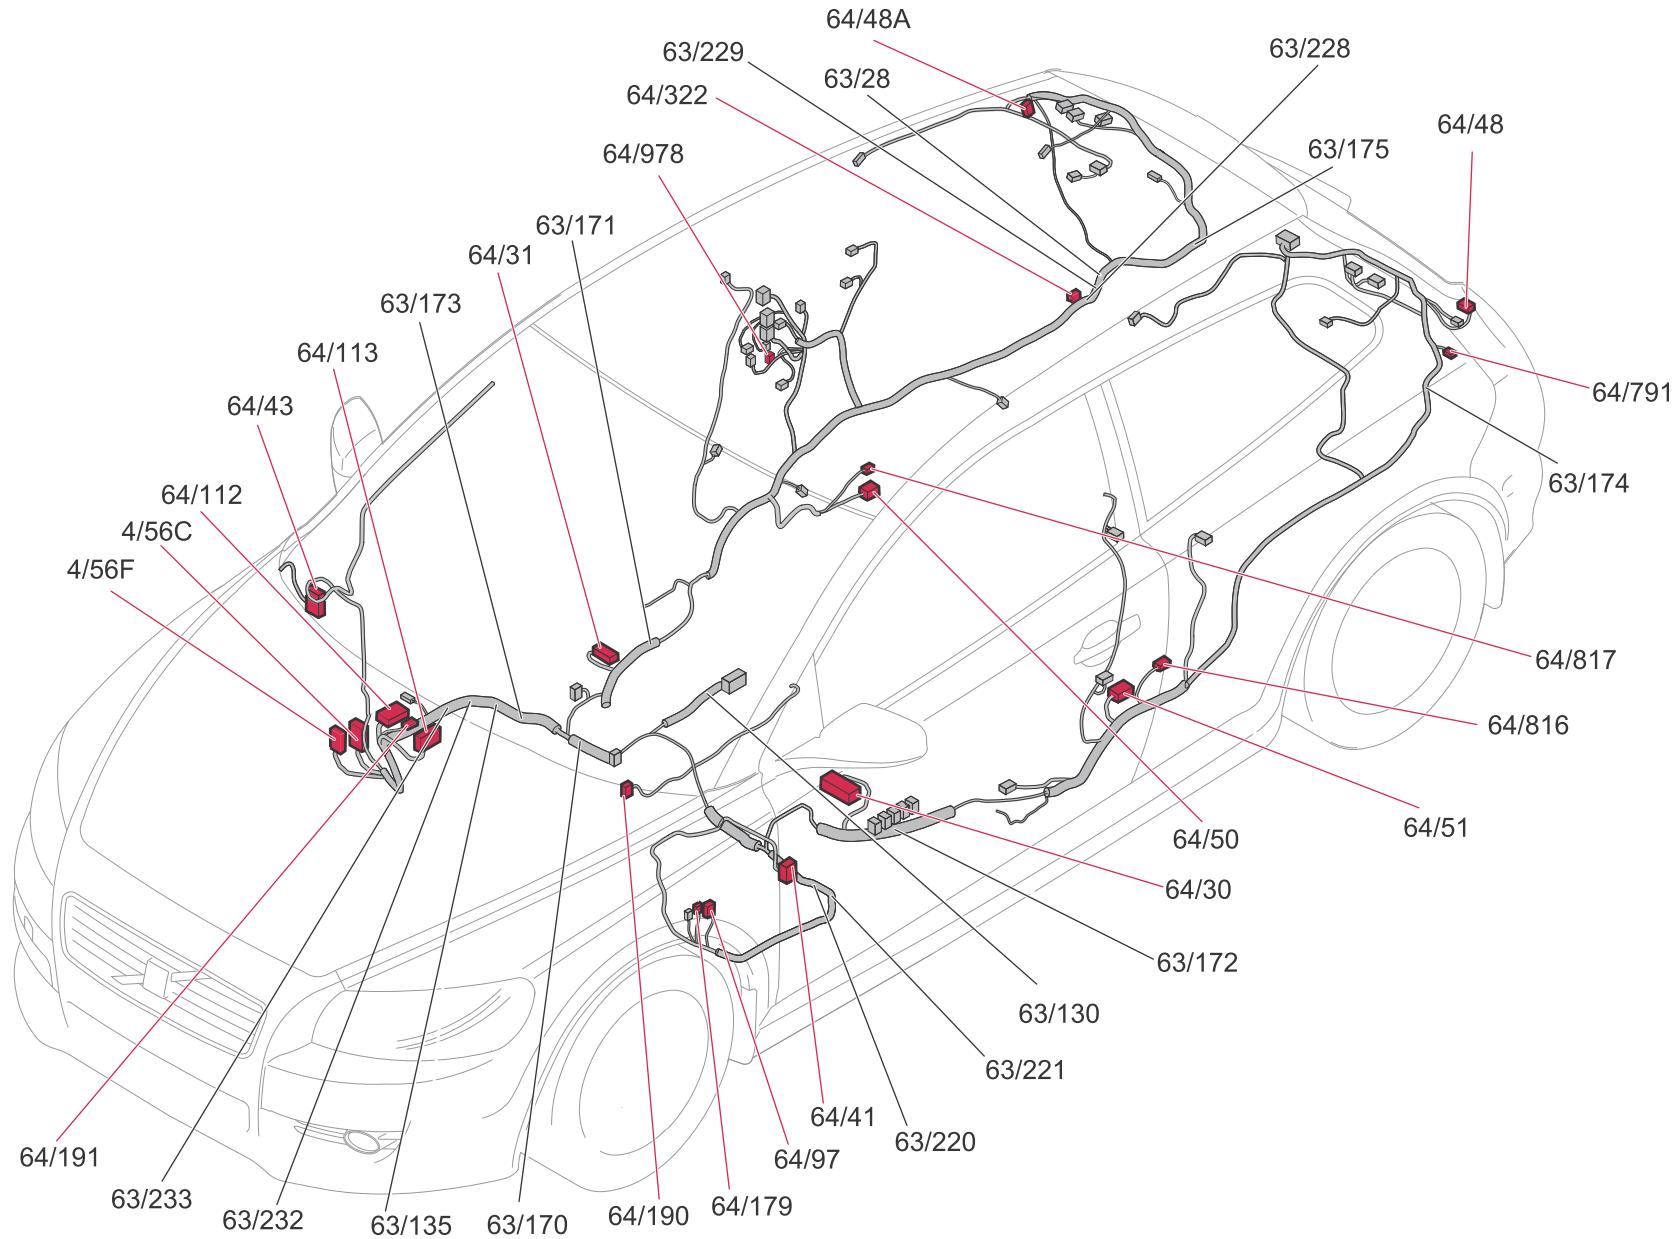

G017208

Cable harness routing in vehicle


Floor harness, C30 RHD

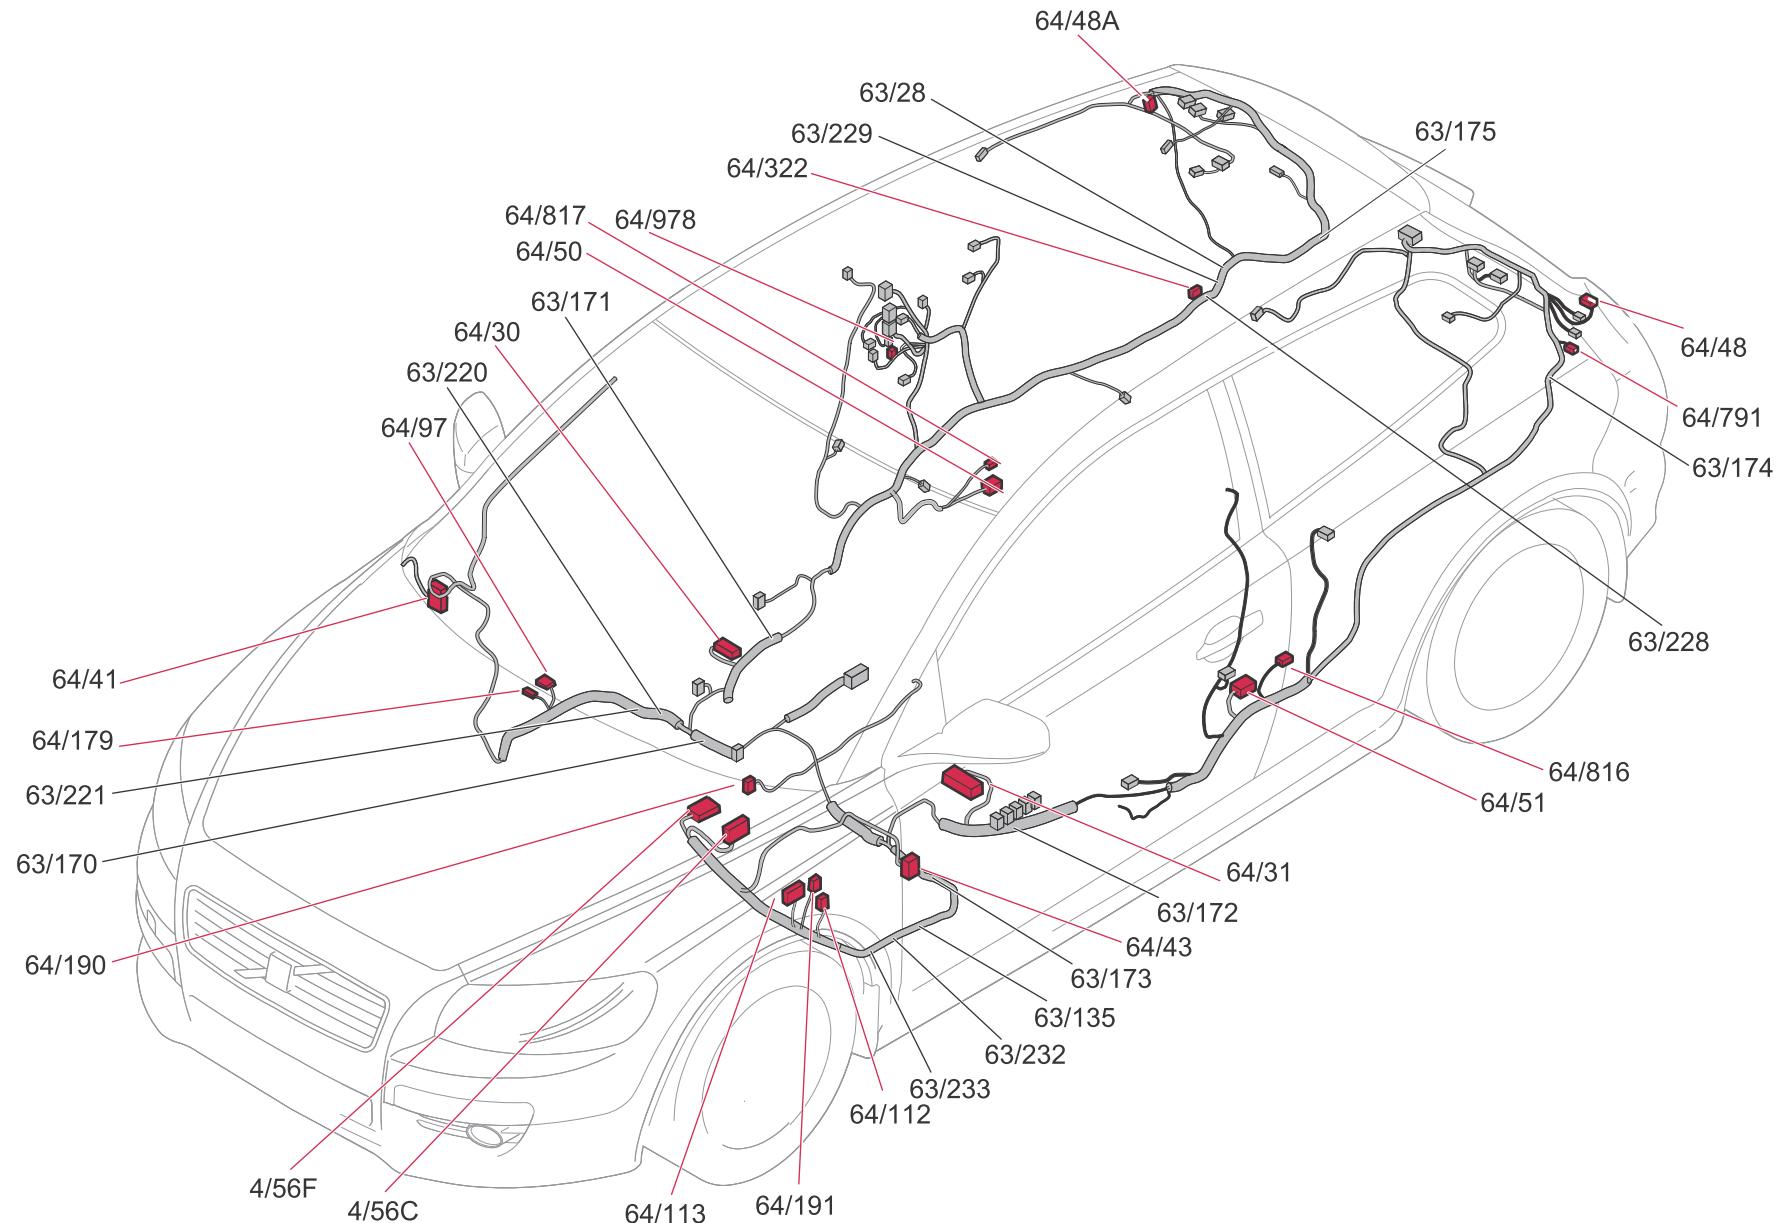

G017209

Cable harness routing in vehicle


Floor harness, S40 LHD

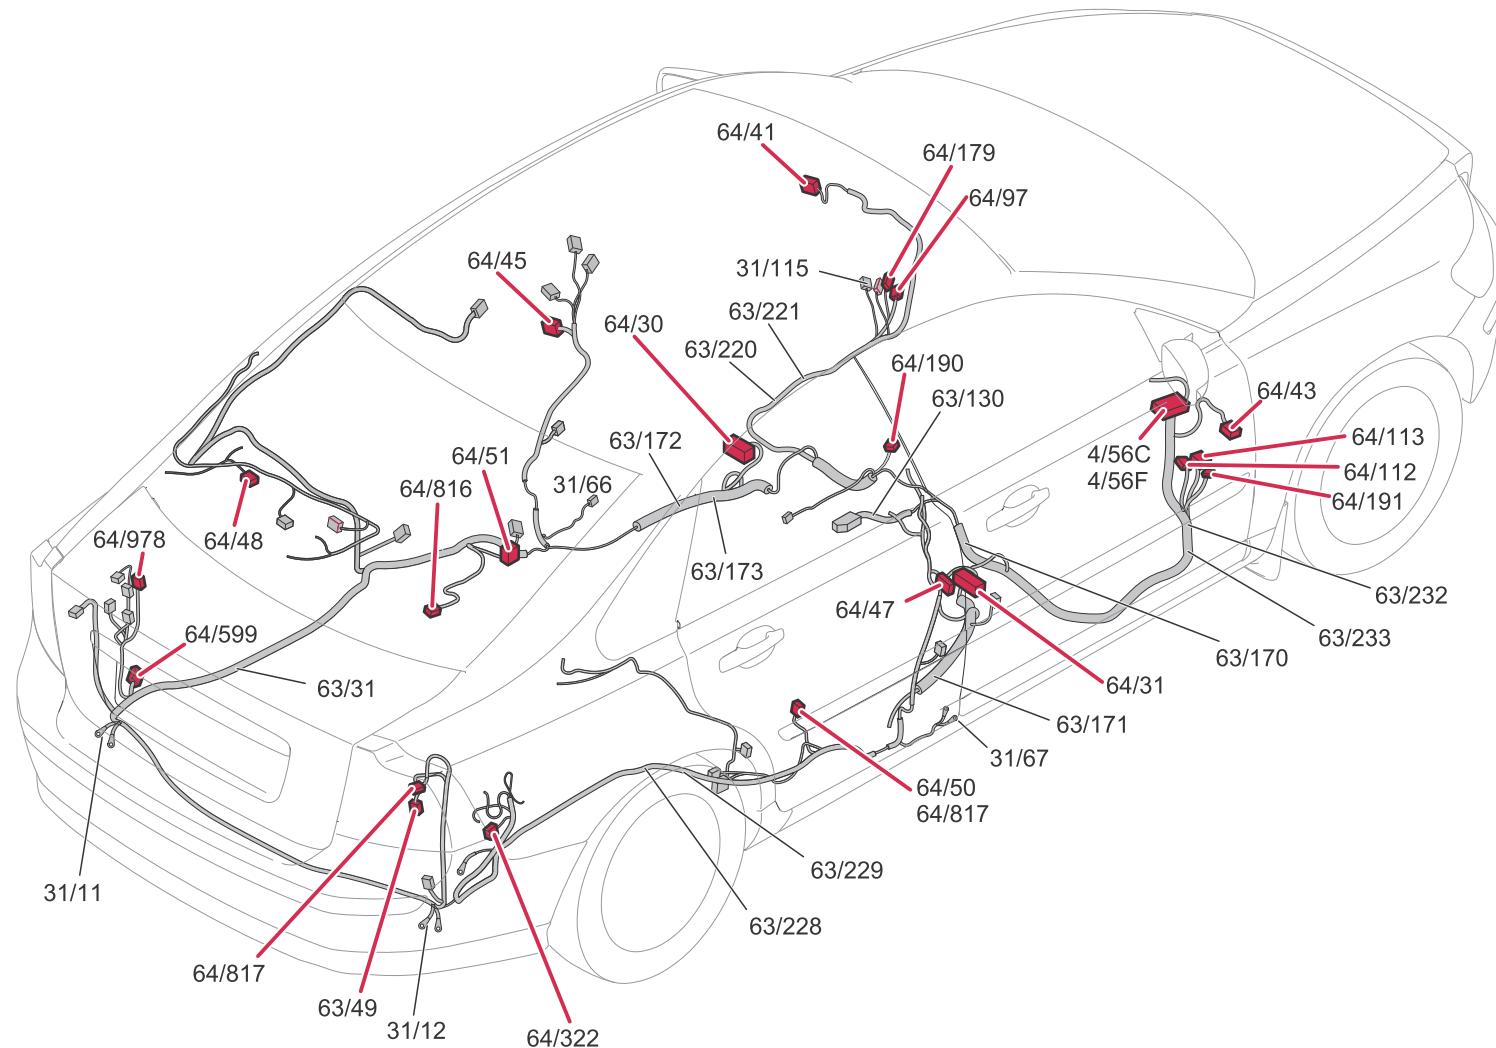

G033354

Cable harness routing in vehicle


Floor harness, S40 RHD

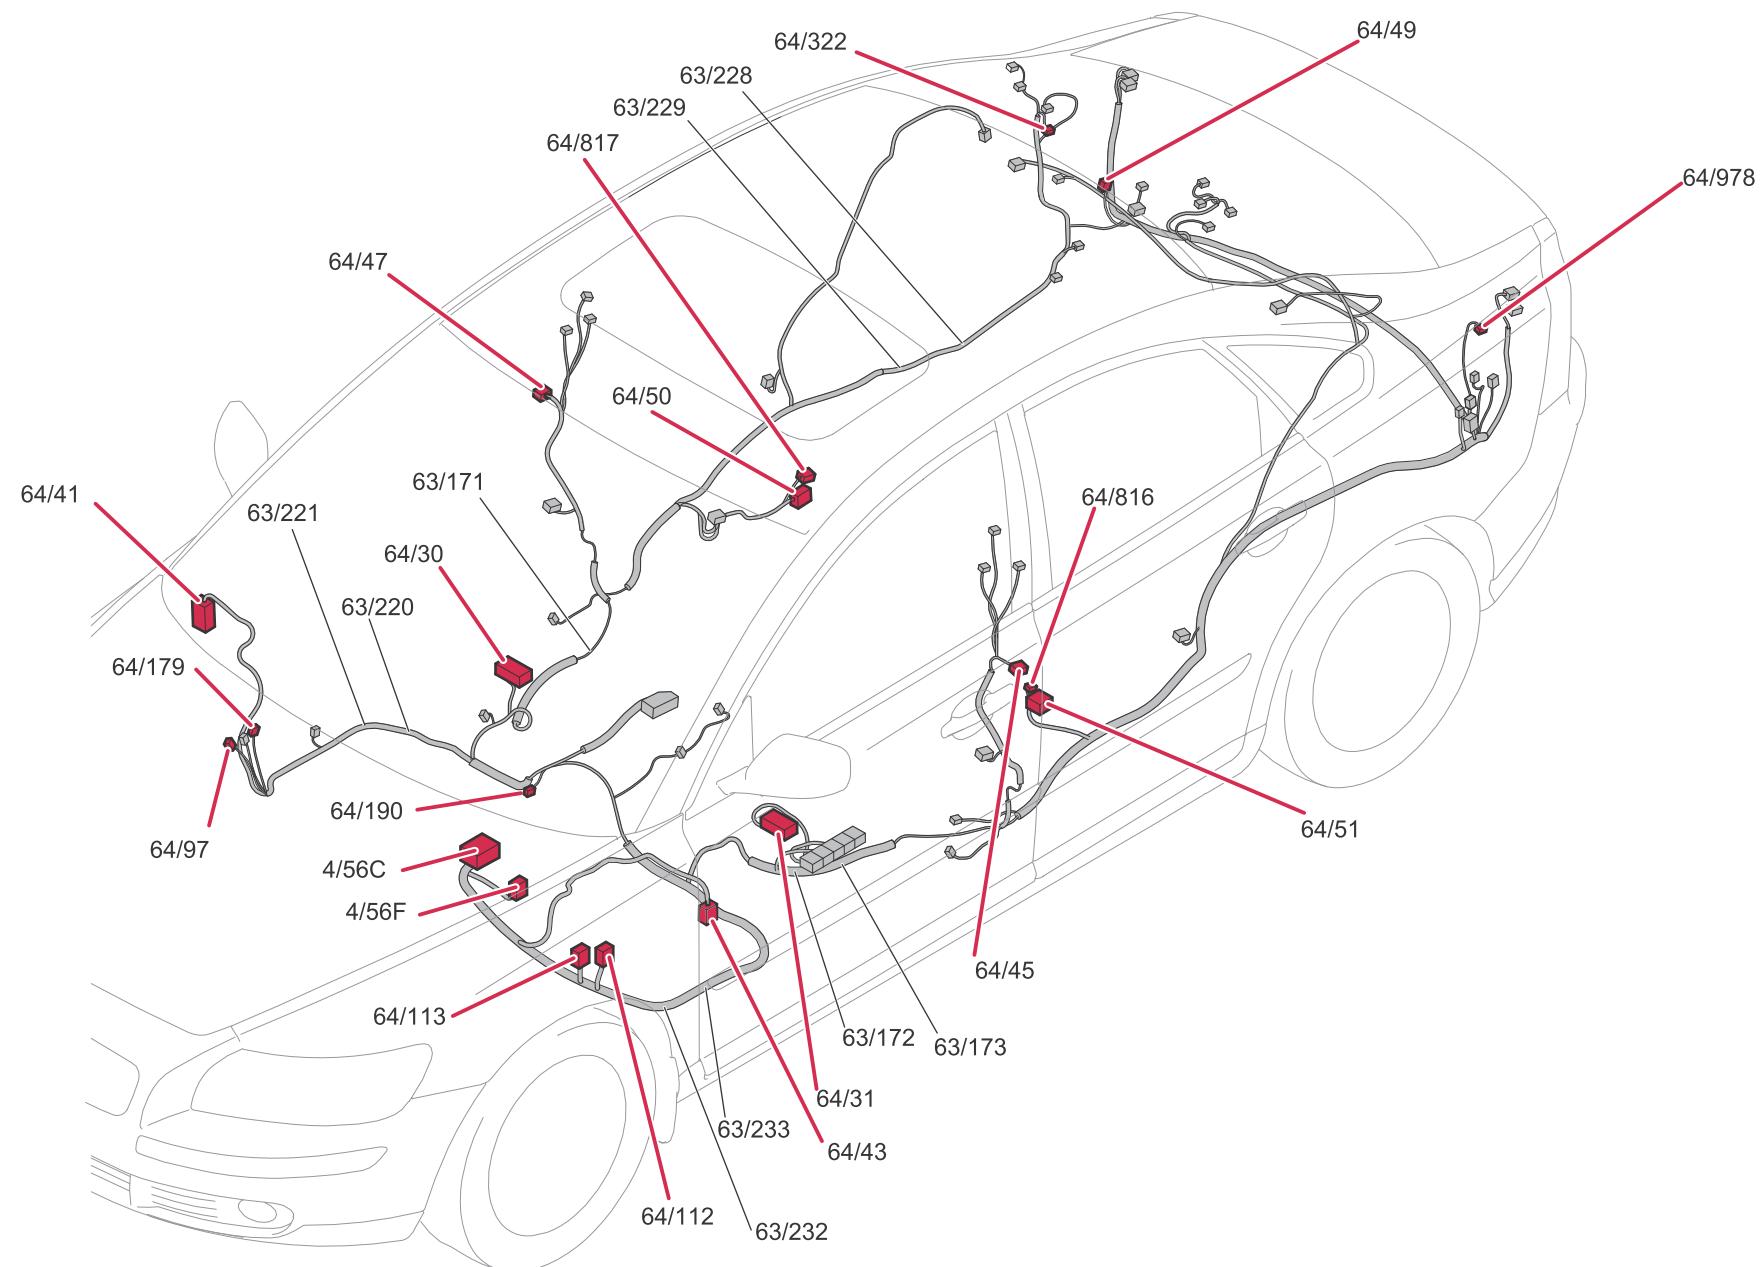

G033355

Cable harness routing in vehicle


Floor harness, V50 LHD

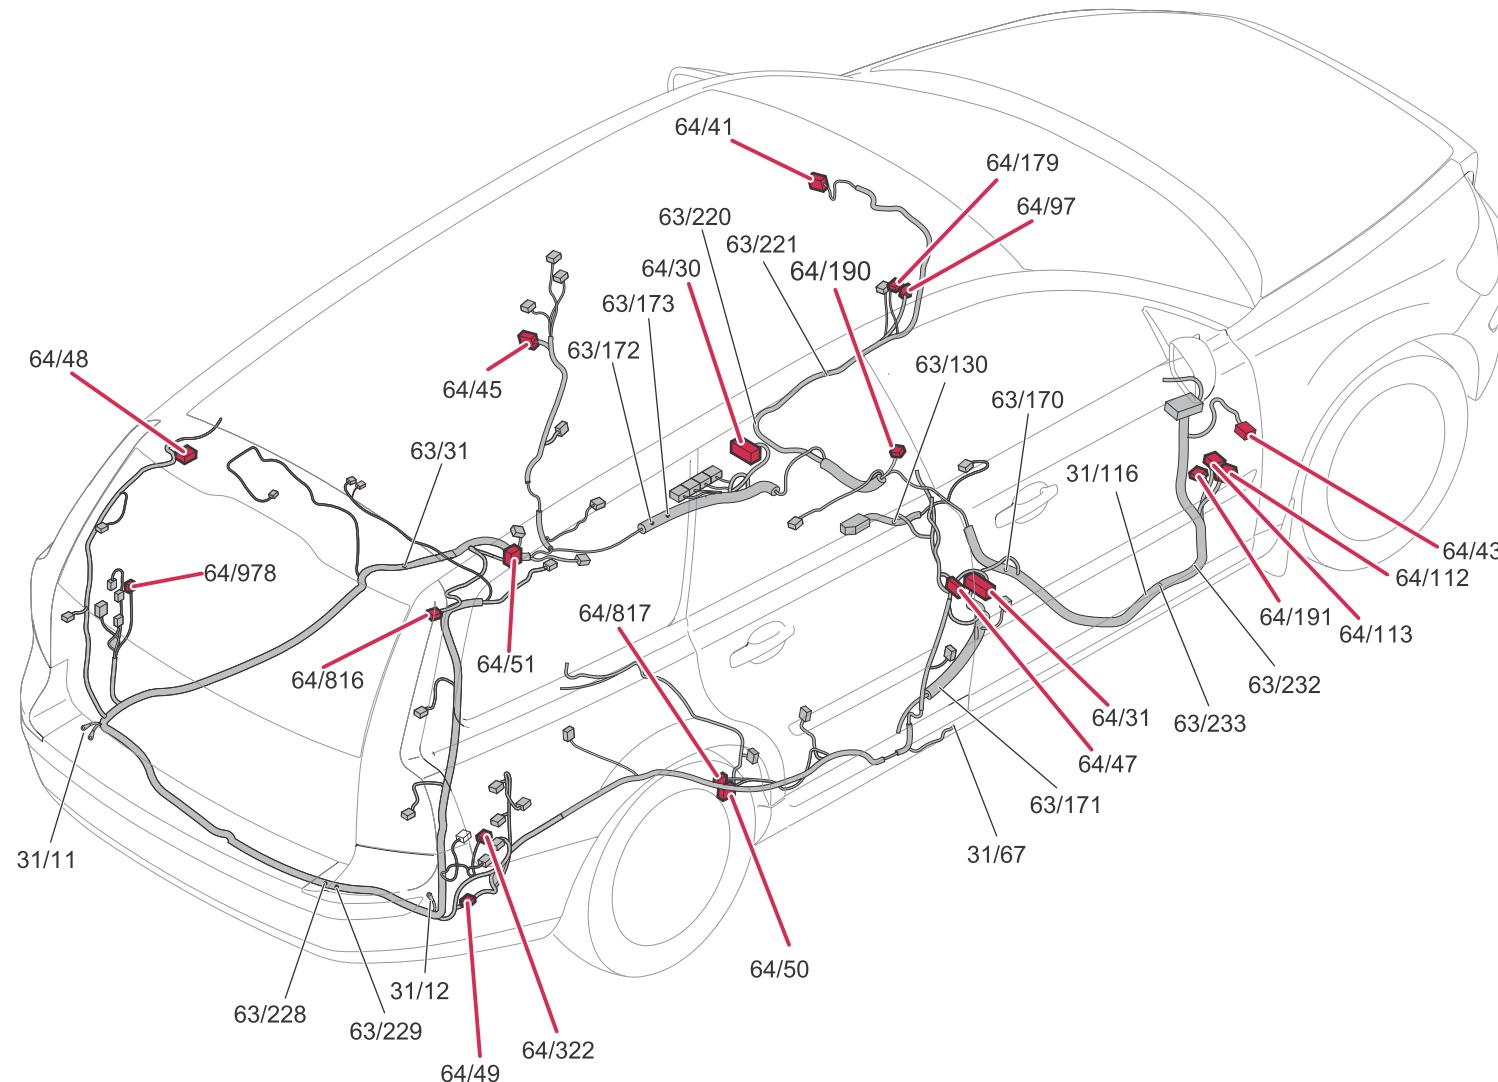

G033363

Cable harness routing in vehicle


Floor harness, V50 RHD

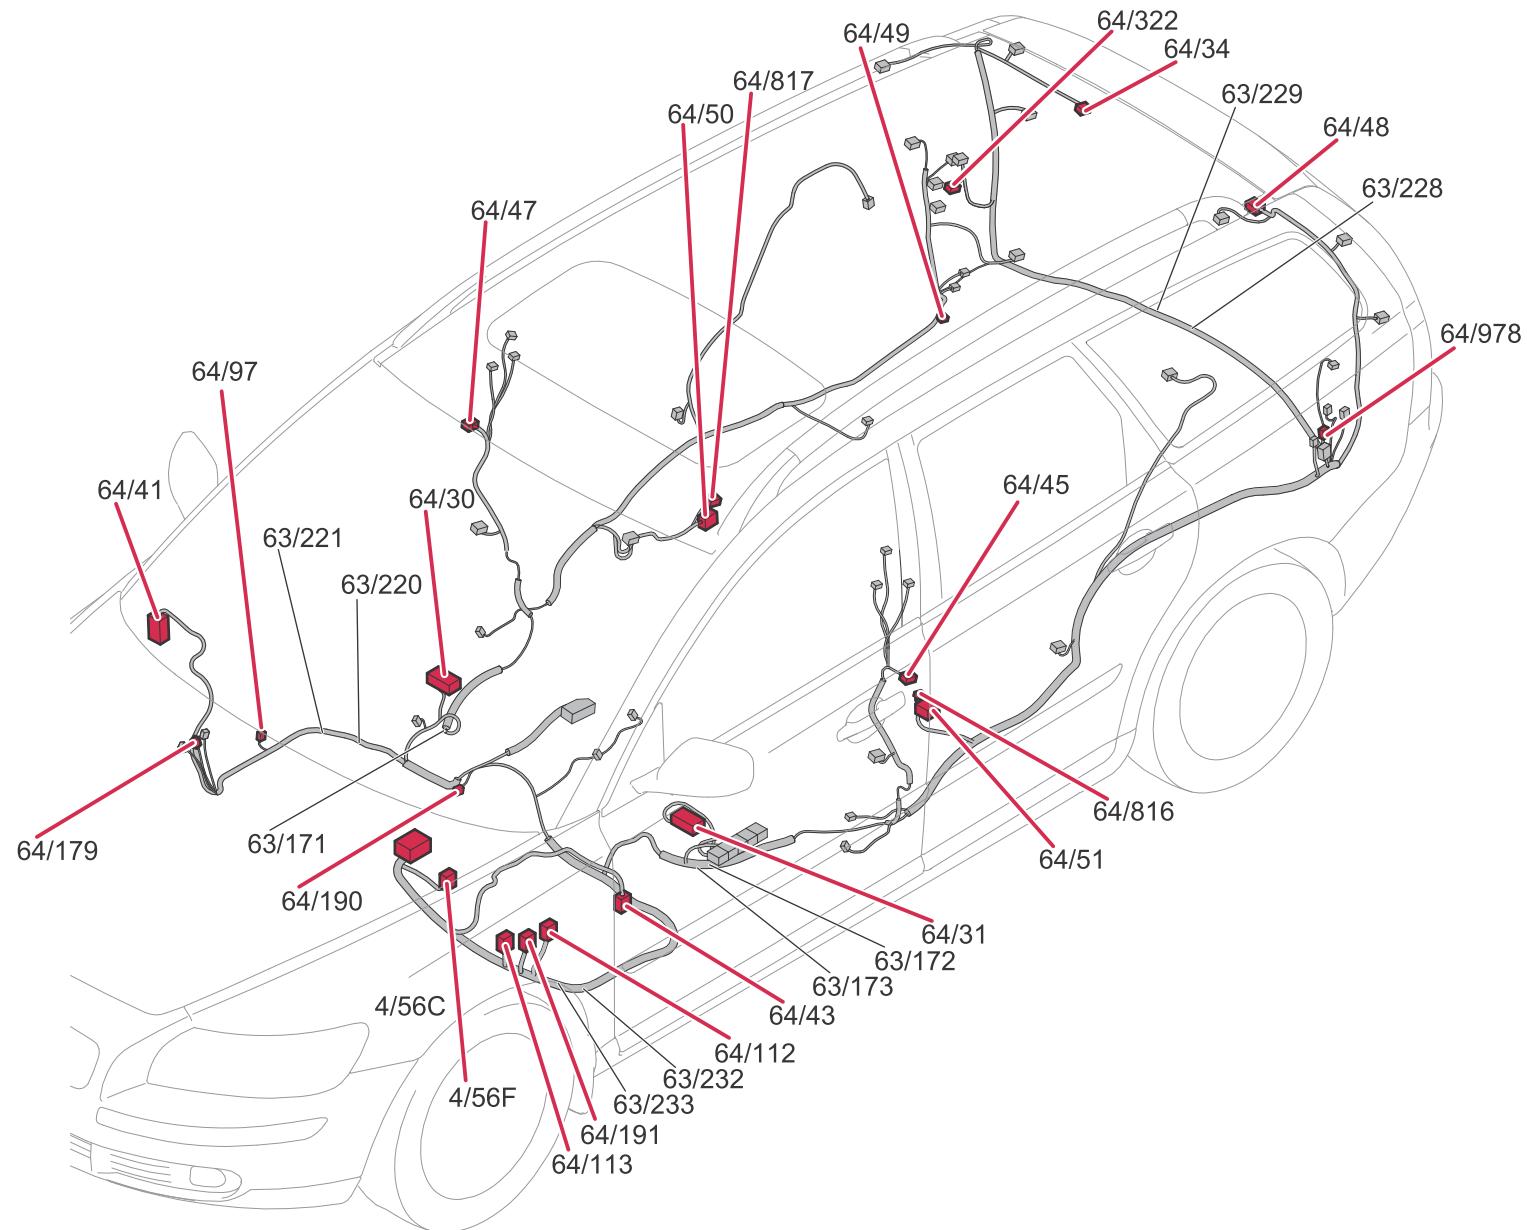

G033364

Cable harness routing in vehicle


Floor harness, C70 LHD

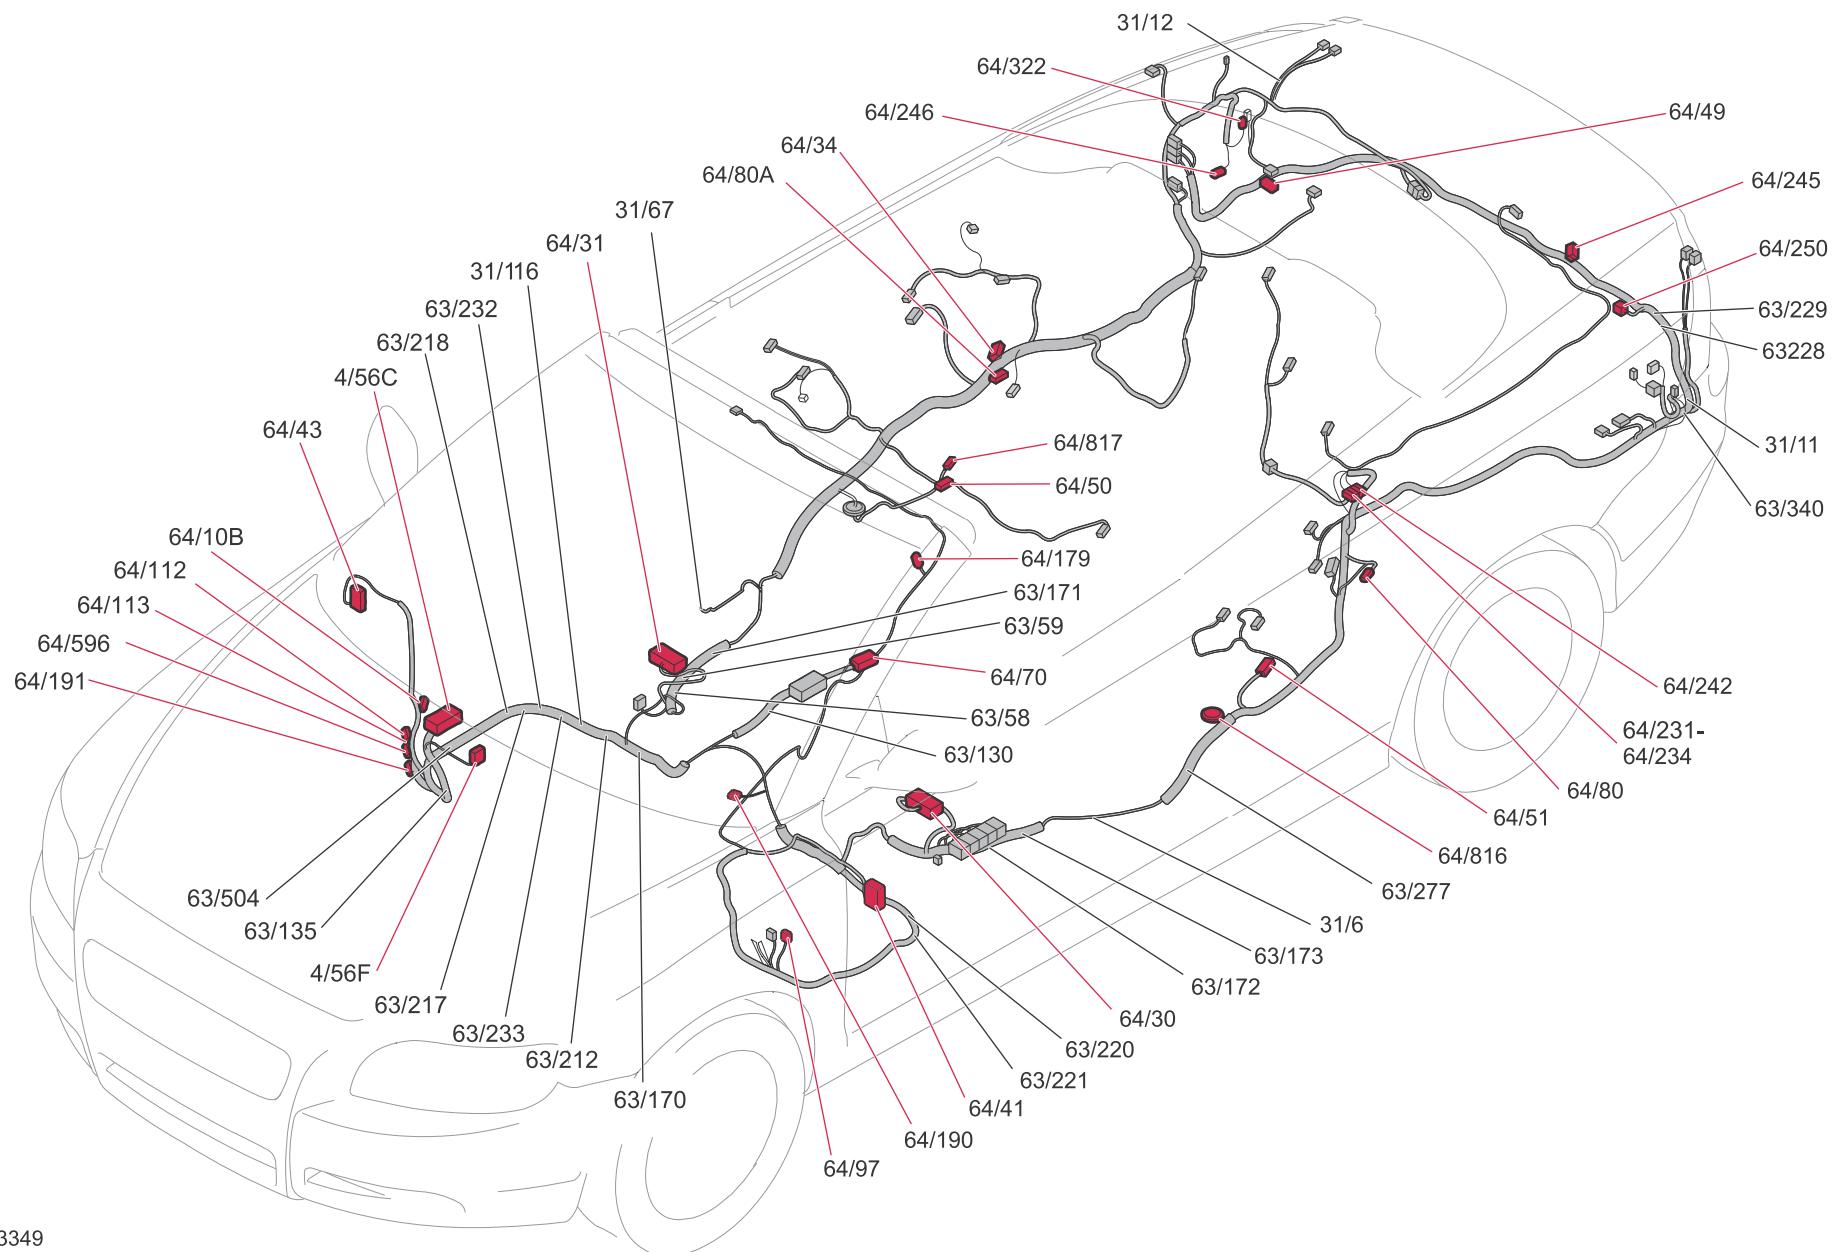

G033349


Cable harness routing in vehicle

Floor harness, C70 RHD

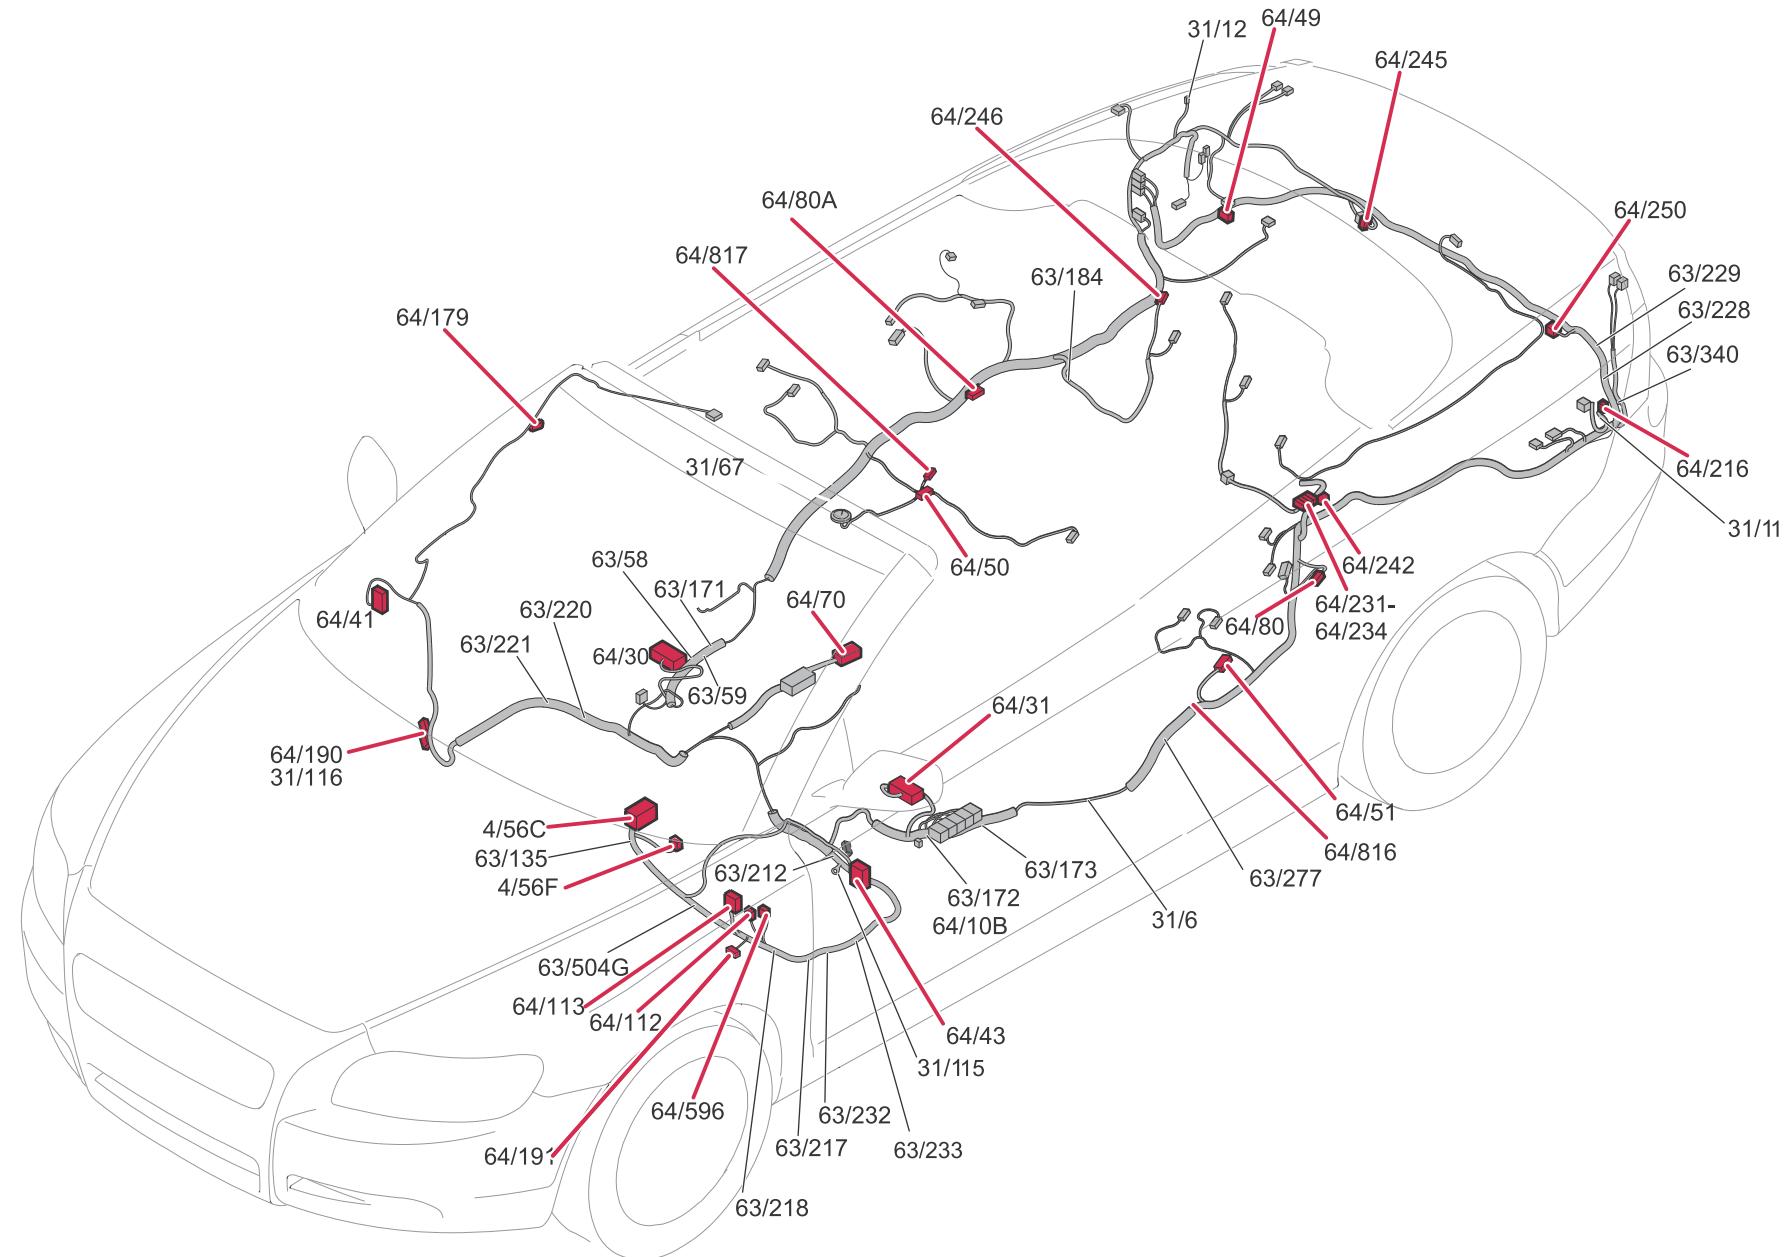


G033353

Cable harness routing in vehicle Roof harness, C30

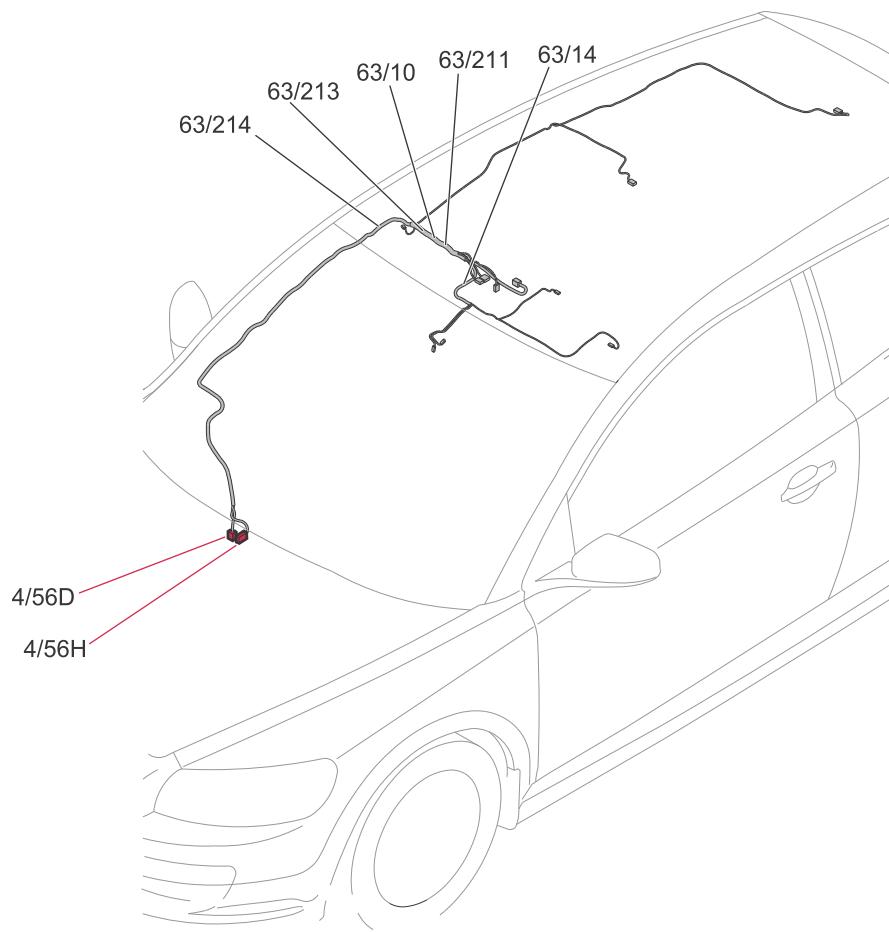


G017207

Cable harness routing in vehicle Roof harness, S40

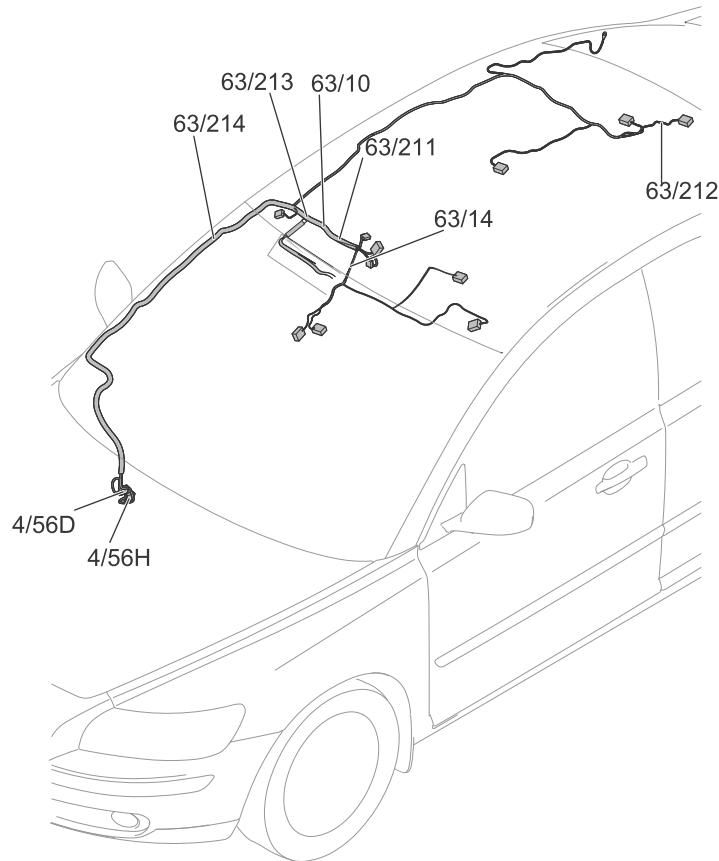


G033344

Cable harness routing in vehicle Roof harness, V50

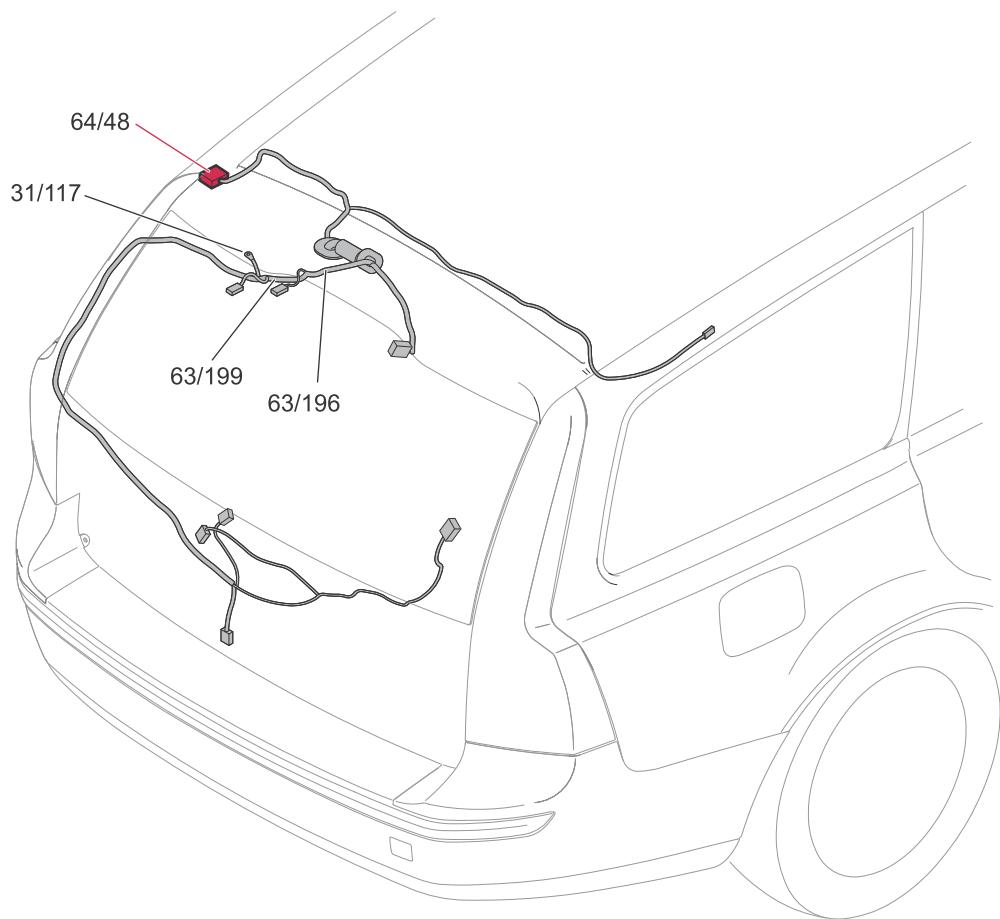


G033345

Cable harness routing in vehicle Roof harness, C70

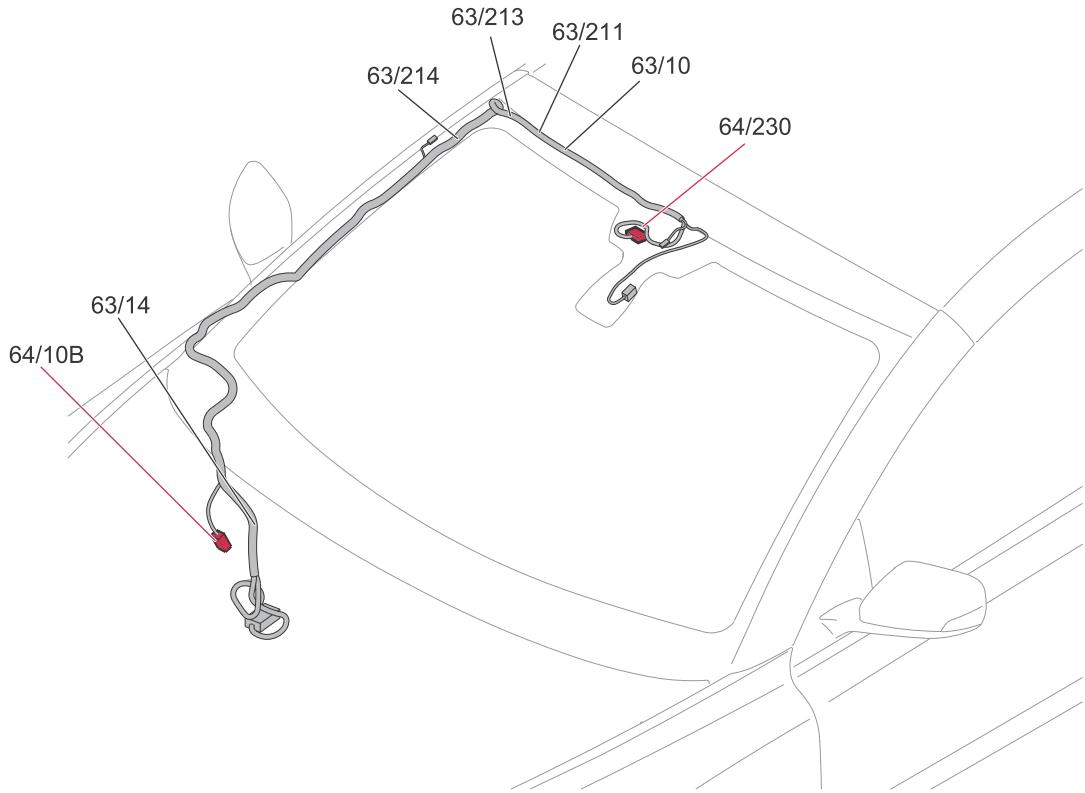


G025229

Cable harness routing in vehicle Tunnel harness, C30/S40/V50

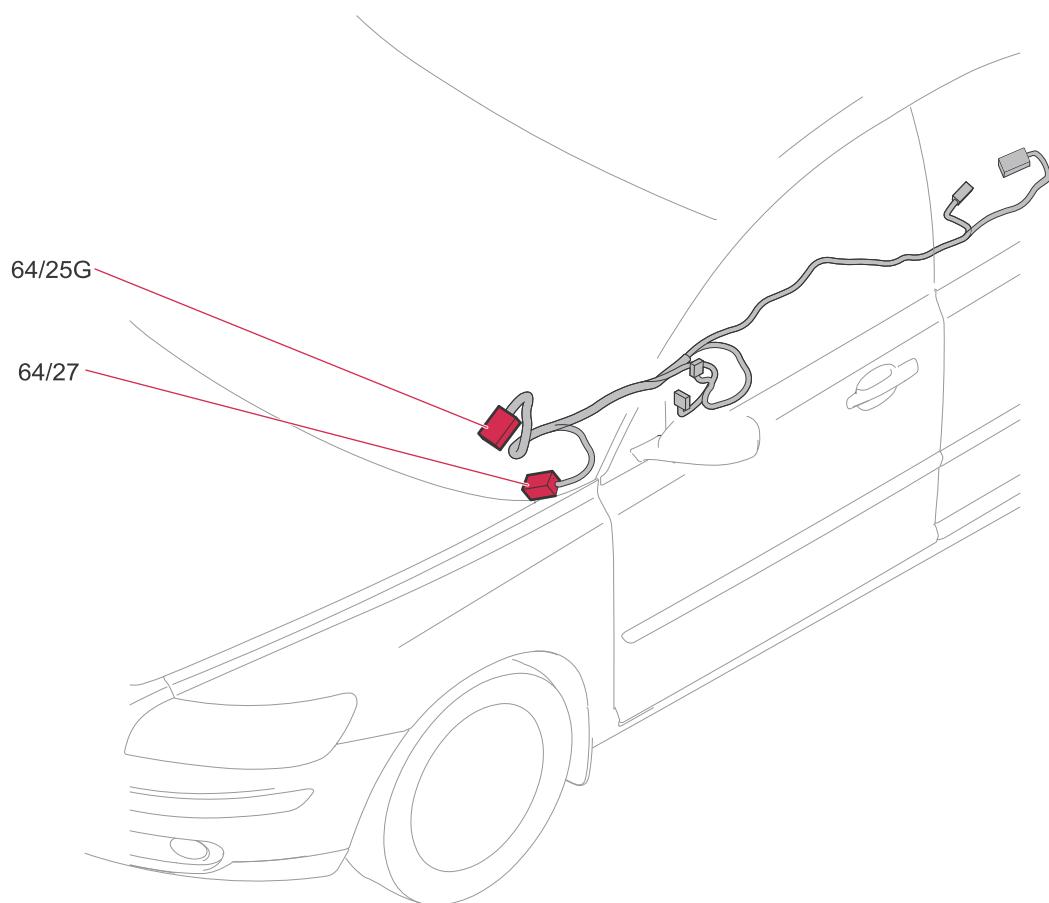


G034646

Cable harness routing in vehicle Tunnel harness, C70

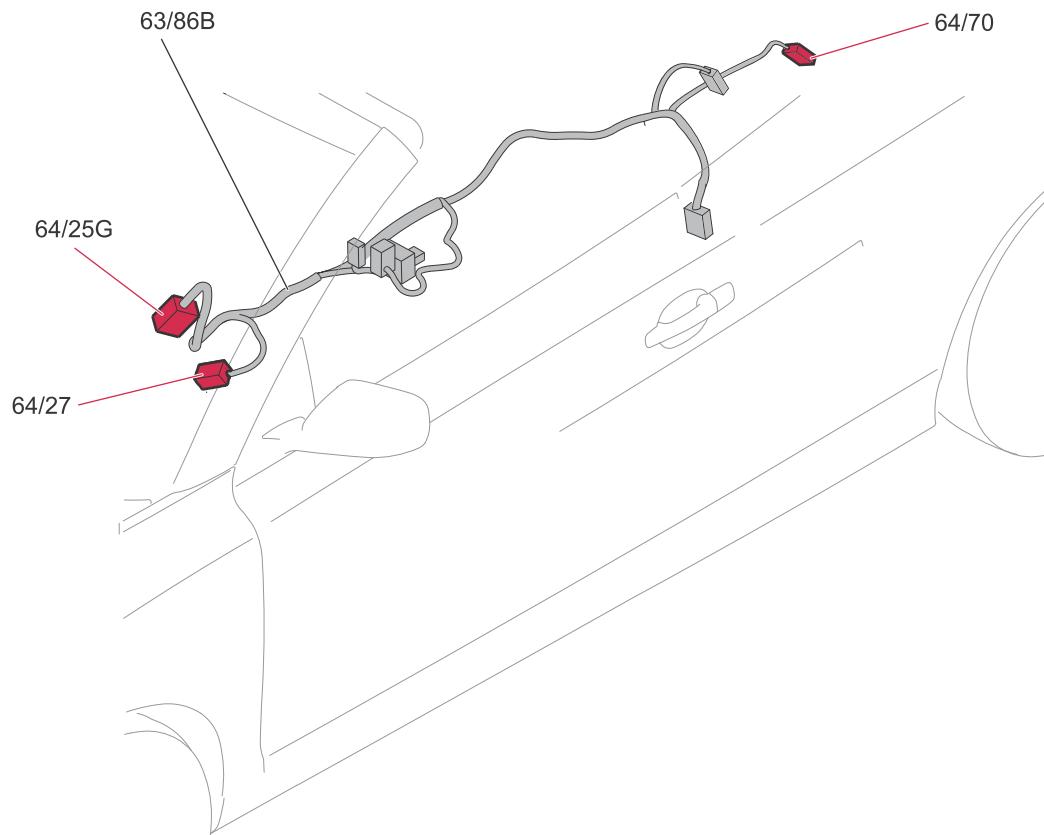


G034647

Cable harness routing in vehicle Driver's door harness, C30

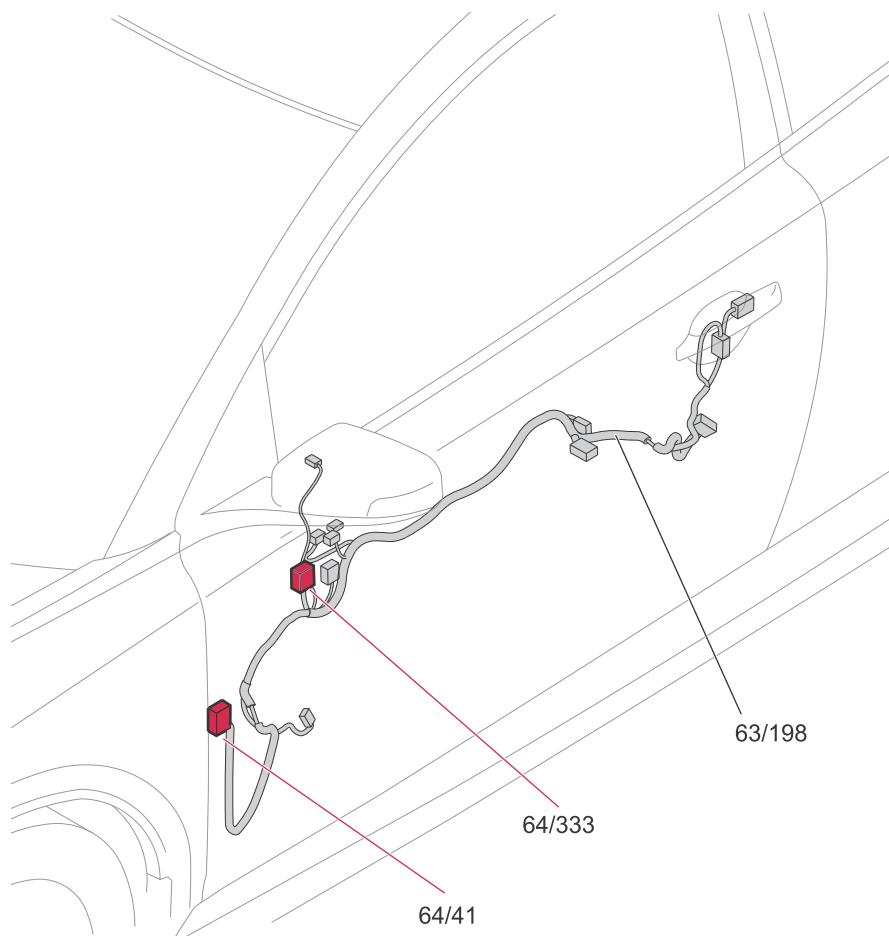


G017210

Cable harness routing in vehicle Passenger door harness, C30

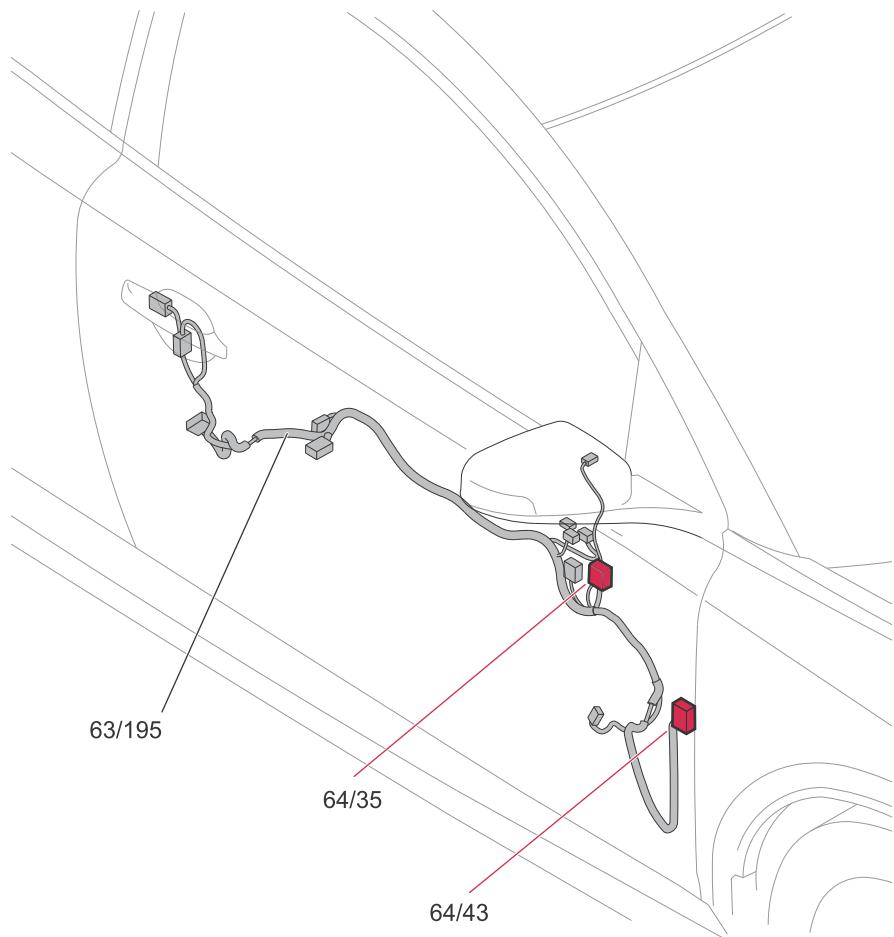


G017672

Cable harness routing in vehicle Driver's door harness, S40/V50

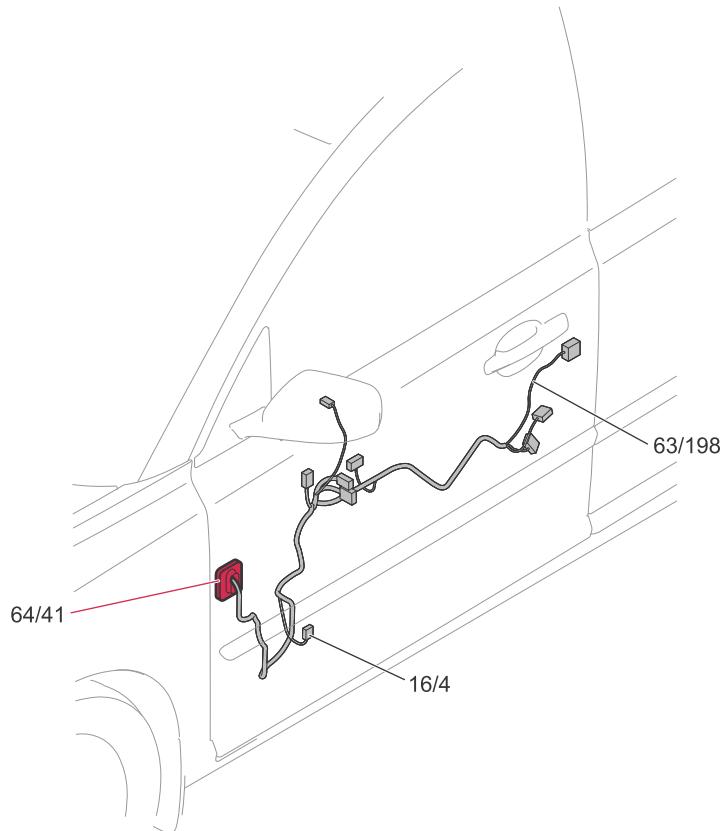


G033347

Cable harness routing in vehicle Passenger door harness, S40/V50

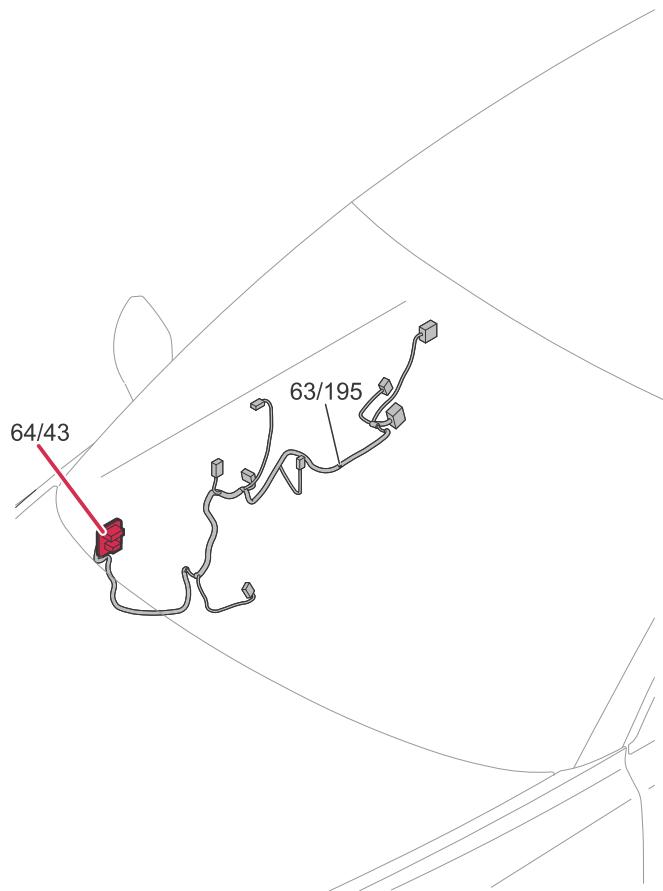

G033420

Cable harness routing in vehicle Driver's door harness, C70

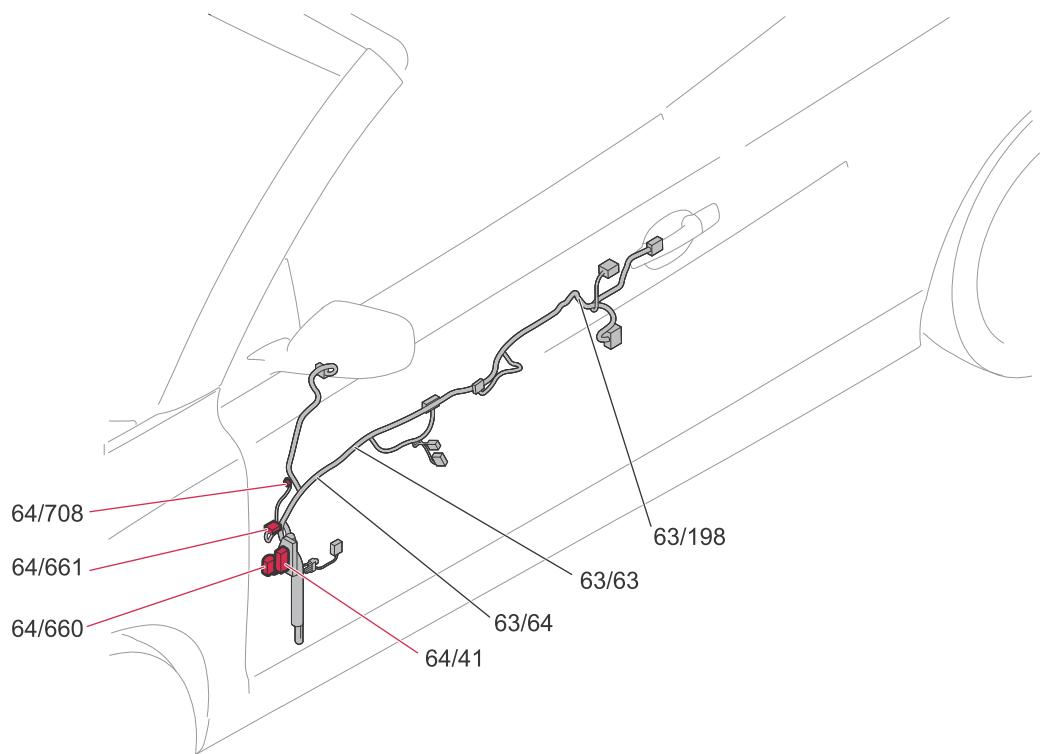


G033346

Cable harness routing in vehicle Driver's door harness supplement, C70




G033348

Cable harness routing in vehicle Passenger door harness, C70

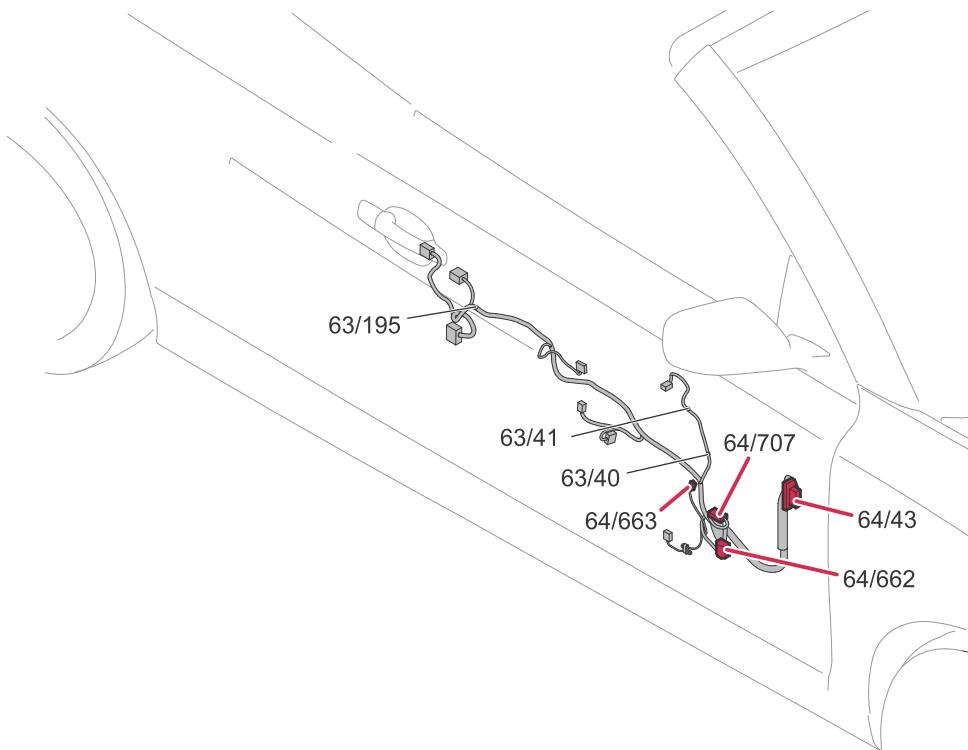


G033419

Cable harness routing in vehicle Passenger door harness supplement, C70

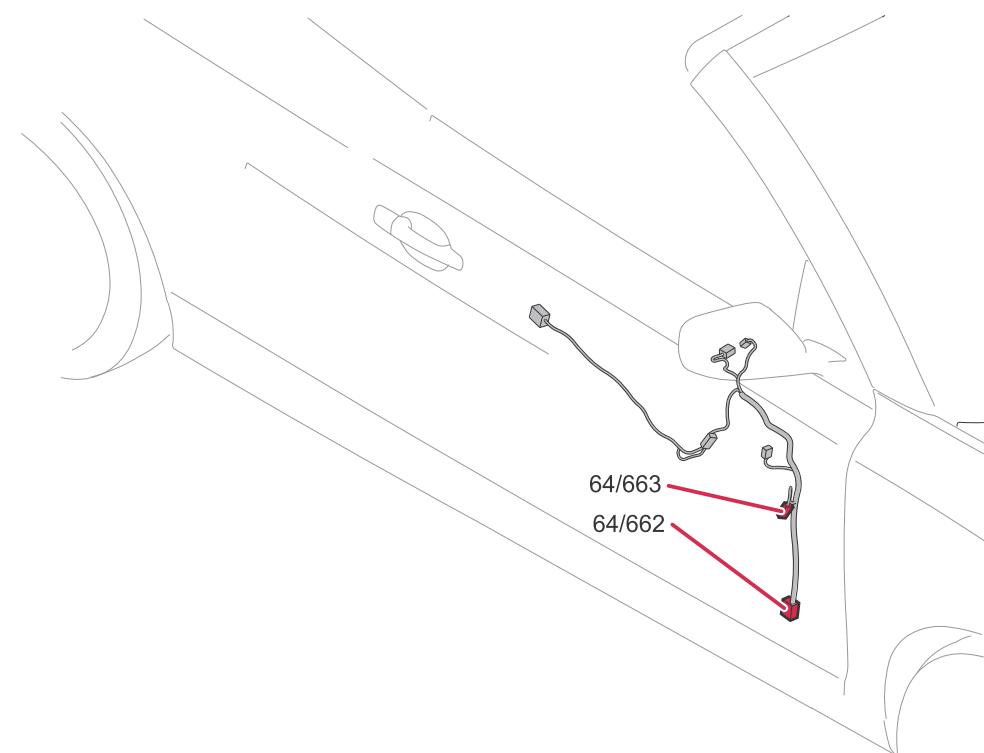


G033417

**Cable harness routing in vehicle
Harness rear door, right S40/V50**

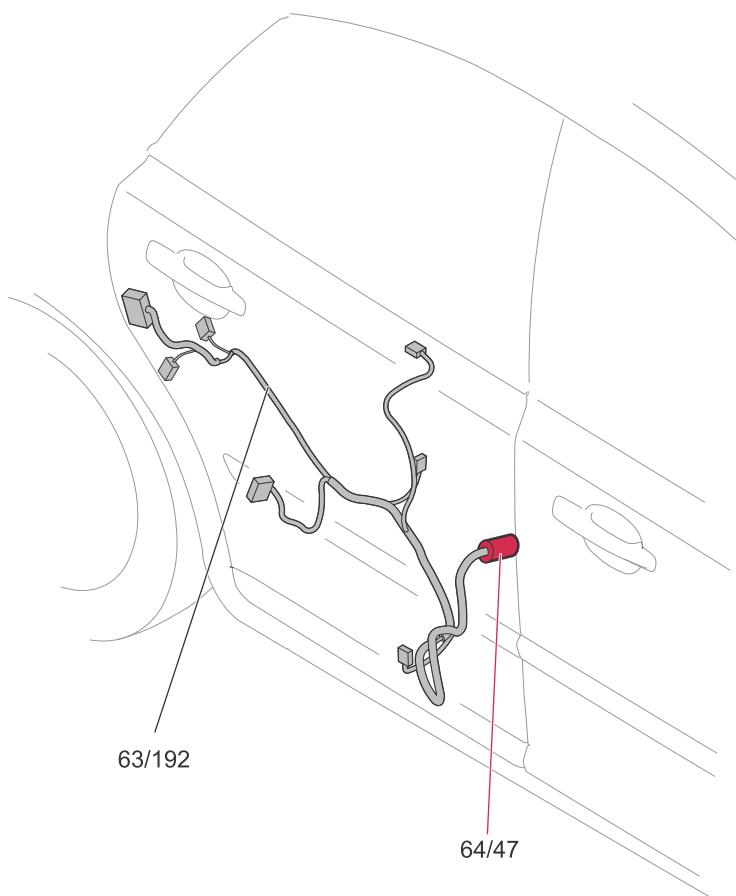


G033337

**Cable harness routing in vehicle
Harness rear door, left S40/V50**

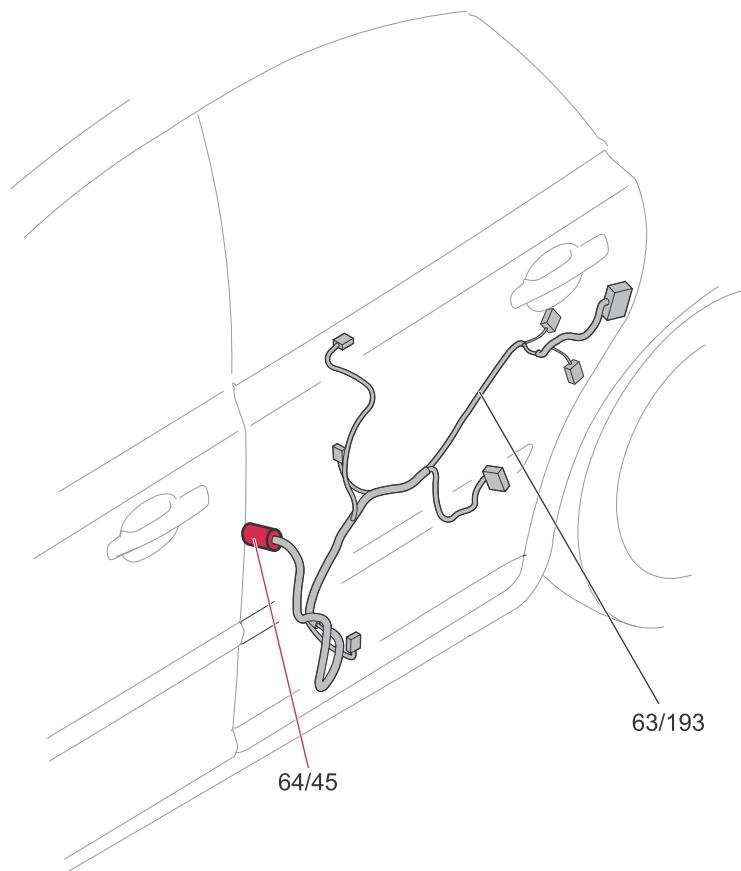


G033338

**Cable harness routing in vehicle
Rear side panel harness, left C70**

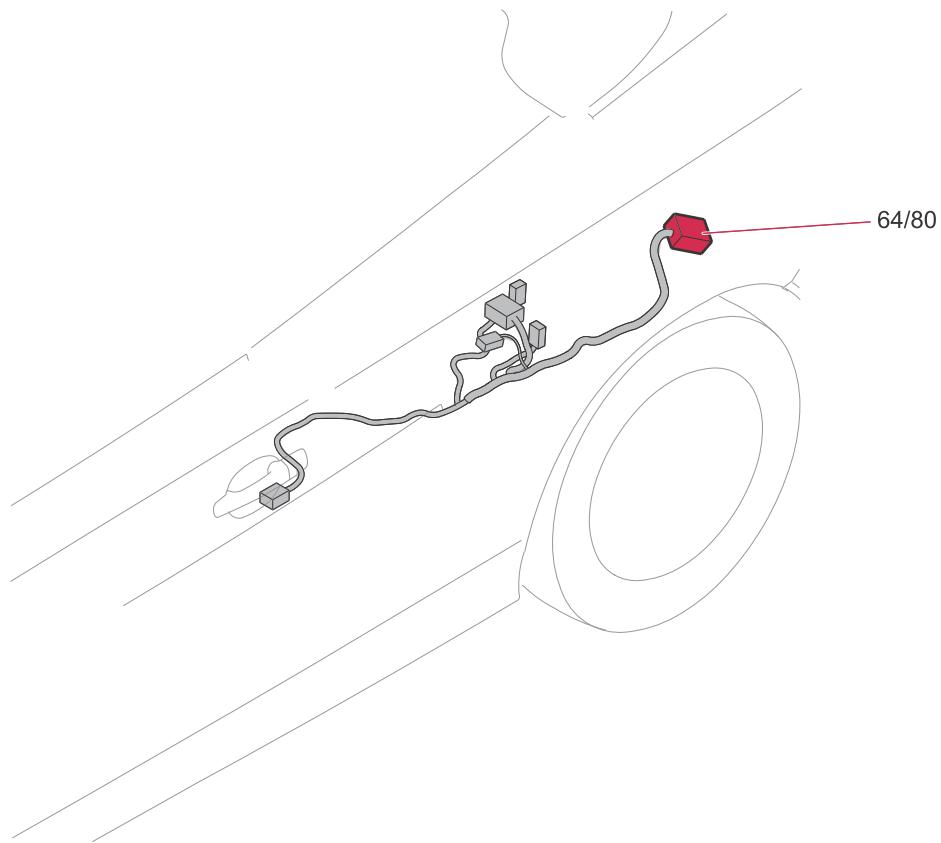


G033343

**Cable harness routing in vehicle
Rear side panel harness, right C70**

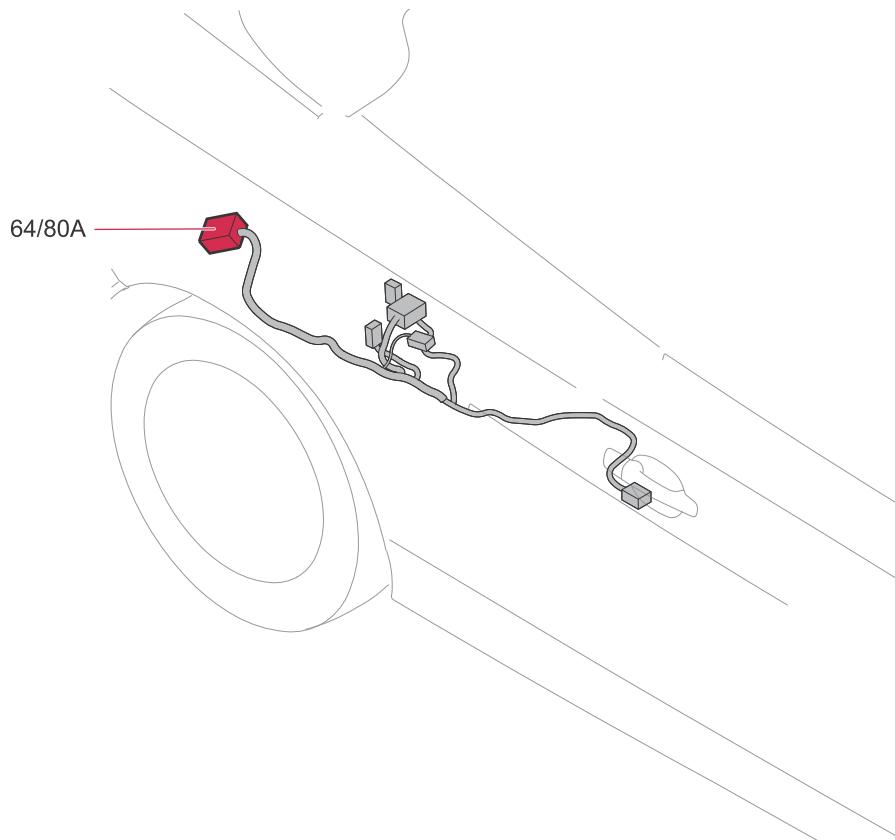


G033342

Cable harness routing in vehicle Trunk lid/tailgate harness, C30

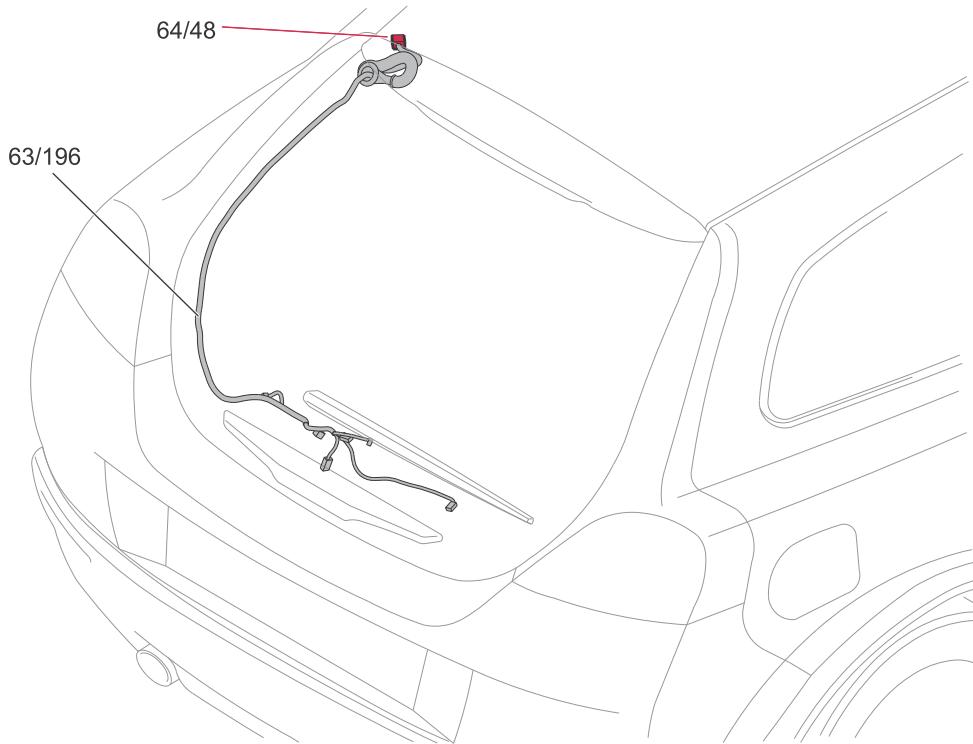


G017211

Cable harness routing in vehicle Trunk lid/tailgate harness, S40

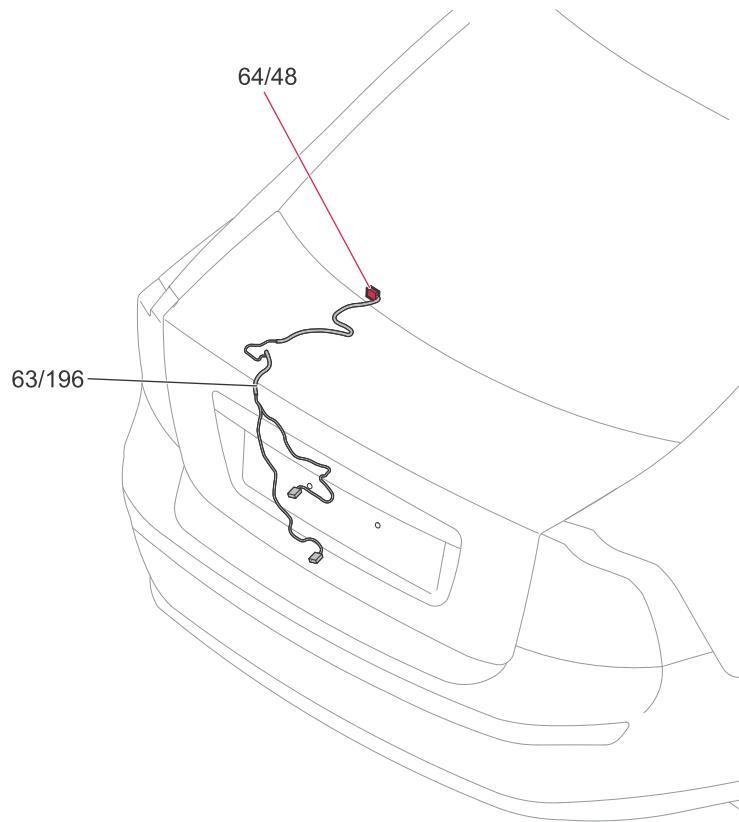


G033340

Cable harness routing in vehicle Trunk lid/tailgate harness, V50

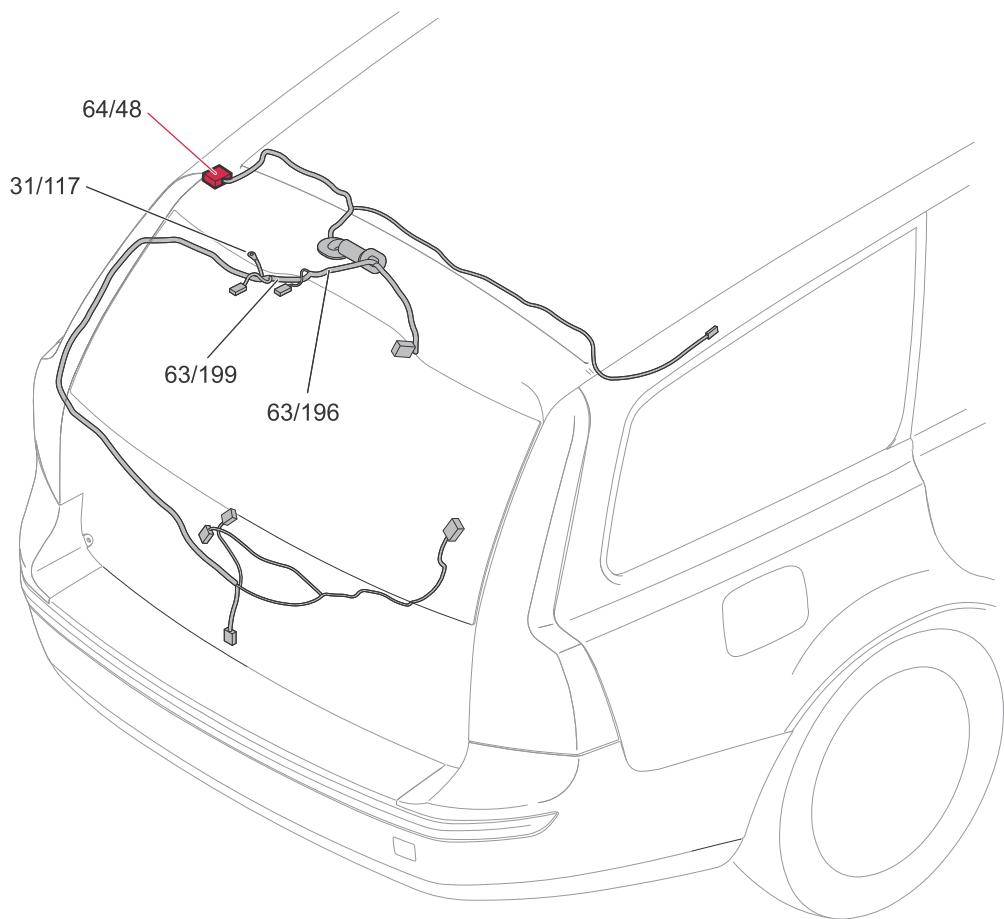

G033341

Cable harness routing in vehicle Trunk lid/tailgate harness, C70

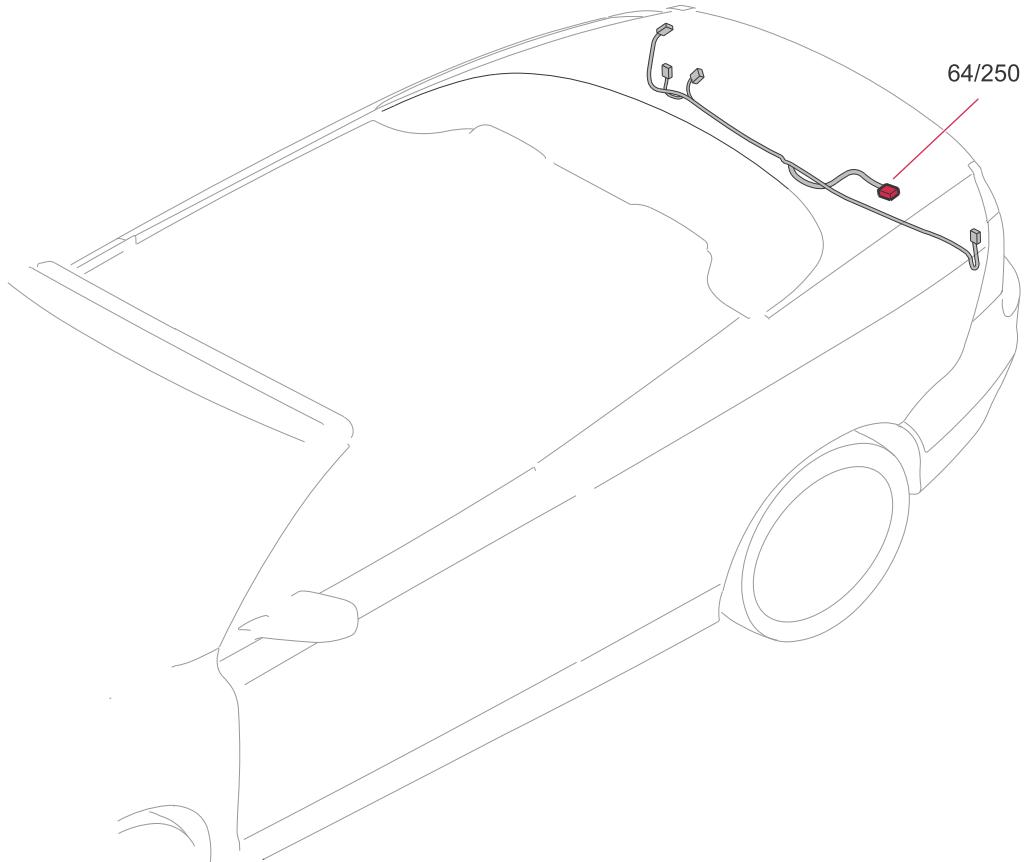


G033339

Component illustrations


1/1 - 2/35

1/1 Battery

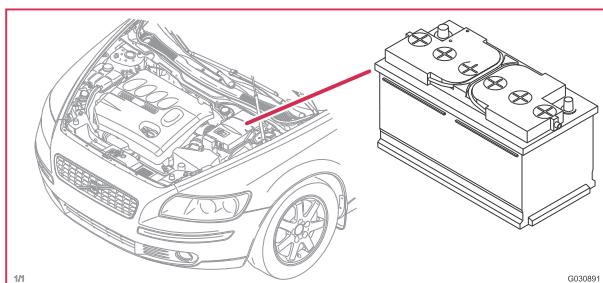

G030891


2/22 Relay, climate control system

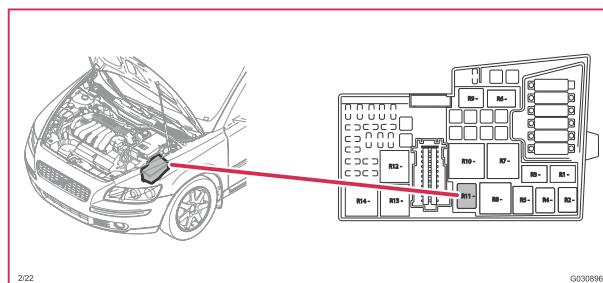

2/22


G030896

1/3 Secondary battery

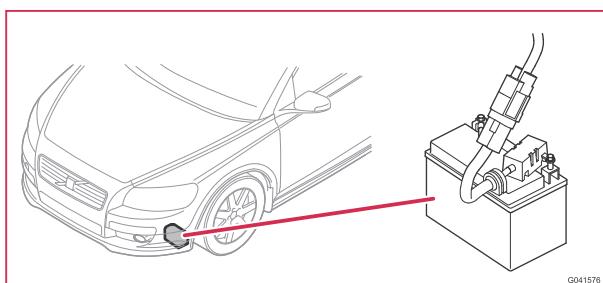

G041576


2/23 Relay, fuel pump

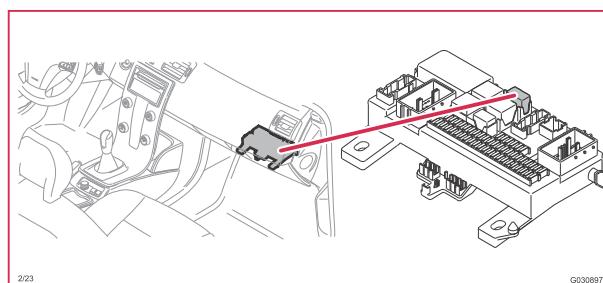

2/23


G030897

2/14 Relay, glow plug system

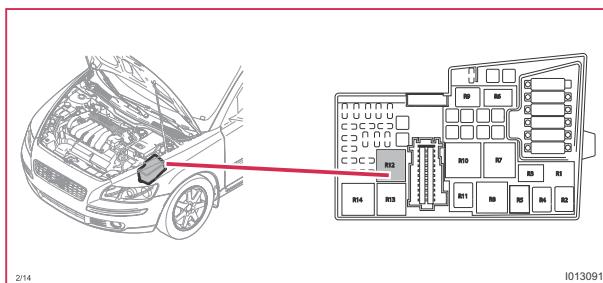

I013091


2/32 Main relay, engine management system

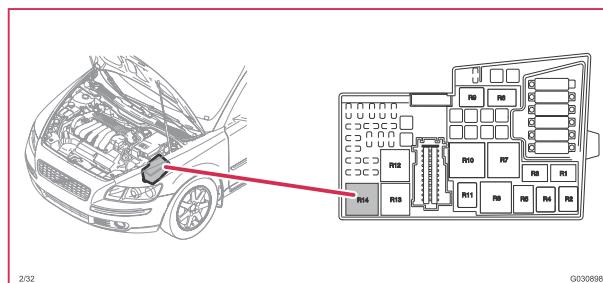

2/32


G030898

2/16 Relay, rear window wiper

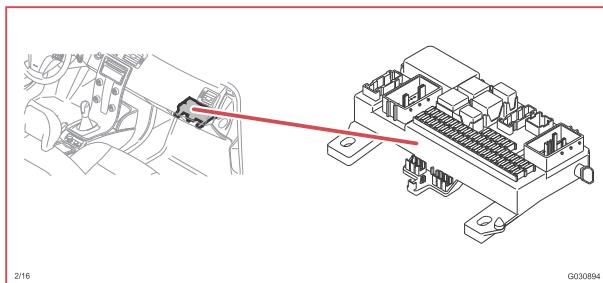

G030894


2/34 Relay, front fog lights

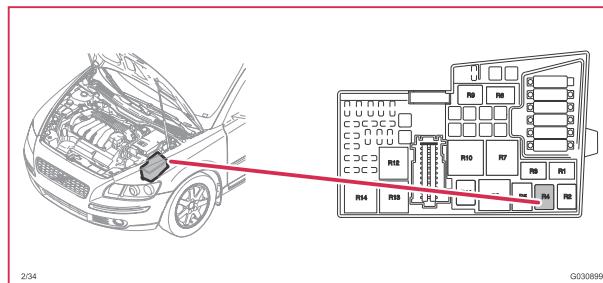

2/34


G030899

2/17 Relay, horn

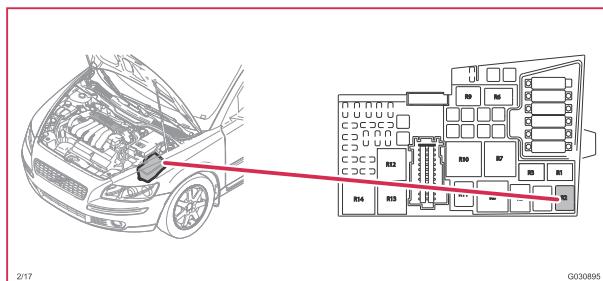

G030895

2/35 Relay, starter motor

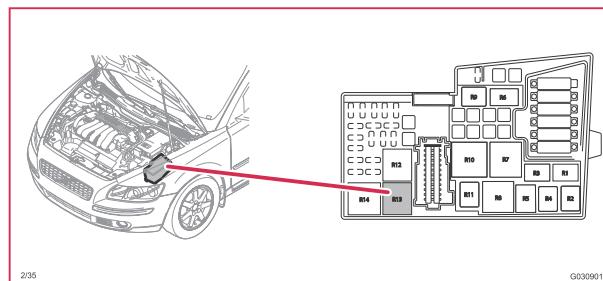


2/35

G030901


Component illustrations

2/63 - 2/142


2/63 Relay, high beam

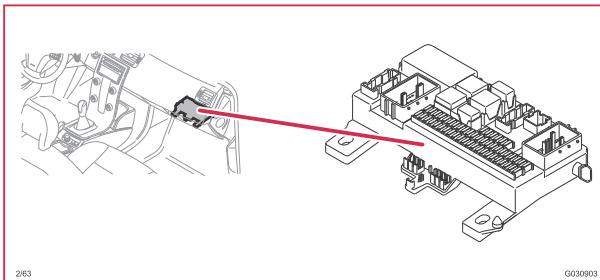


2/89 Relay, interior lighting

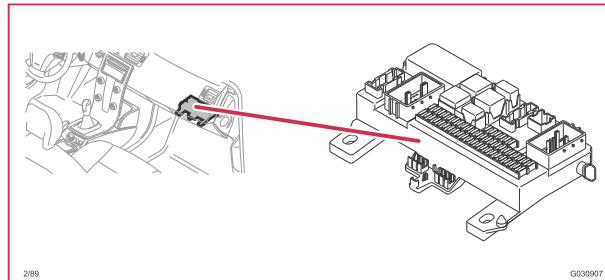


2/64 Relay, auxiliary lights (accessory)

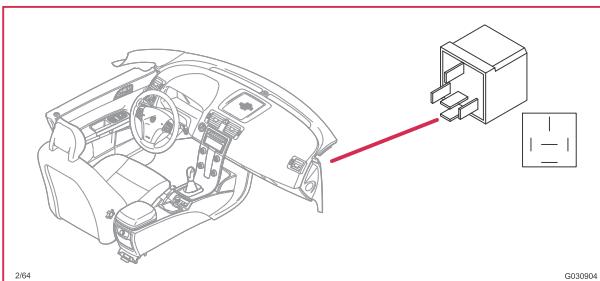


2/92 Relay, windshield washer motor

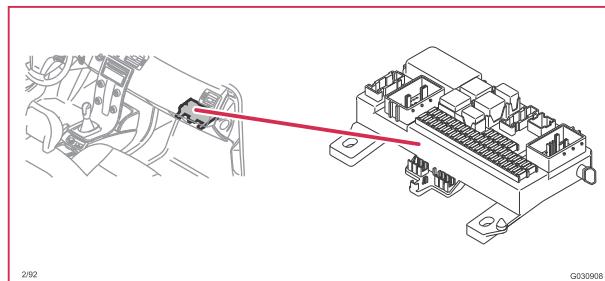


2/71 Relay cellular phone handsfree

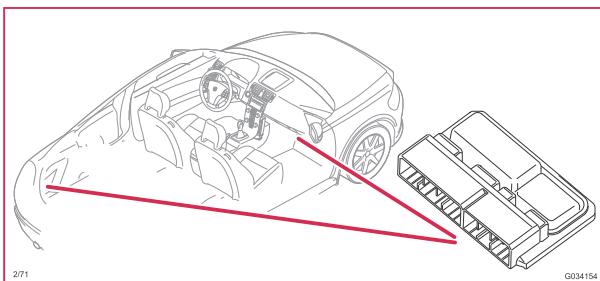


2/93 Relay, rear window washer motor

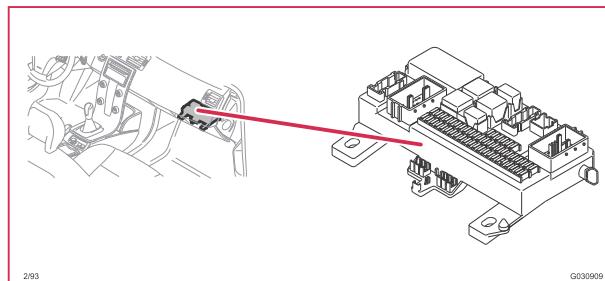


2/80 Relay, reversing lights

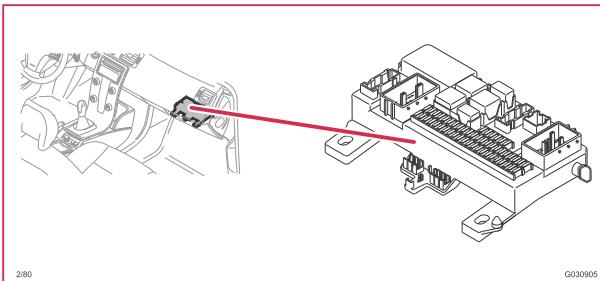


2/133 Relay vacuum pump

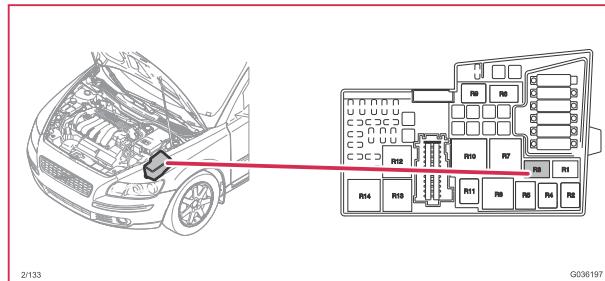

2/82 Relay, heated rear window

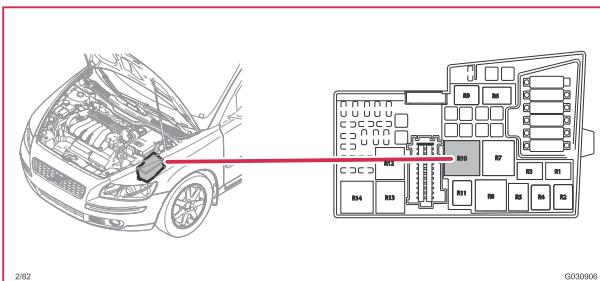


2/142 Relay pre-heater fuel filter

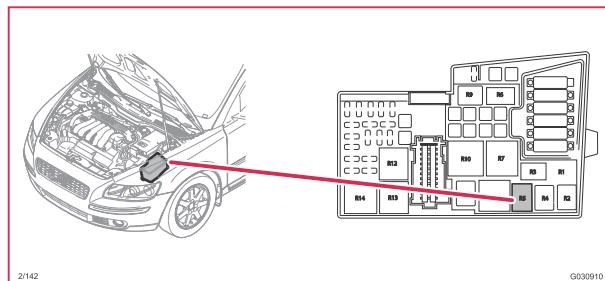


Component illustrations

2/159 - 3/1


2/159 Relay, infotainment

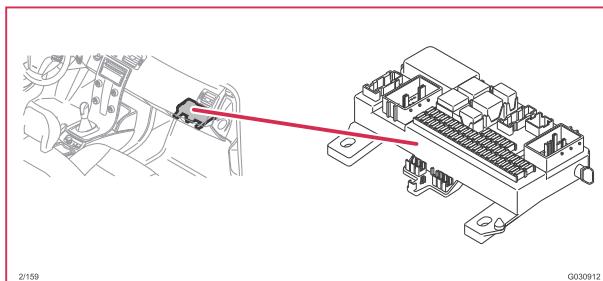


2/239 Relay coolant pump

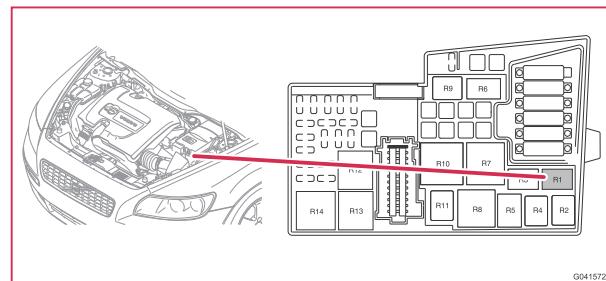


2/182 Relay, headlight washer motor

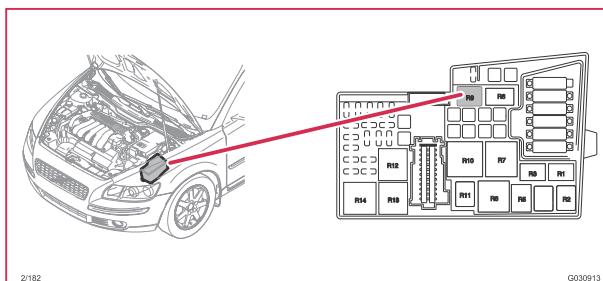


2/242 Relay isolator battery

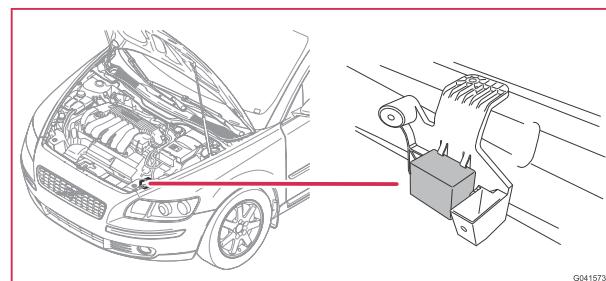


2/192 Relay, electric engine heater, 4-Cyl.

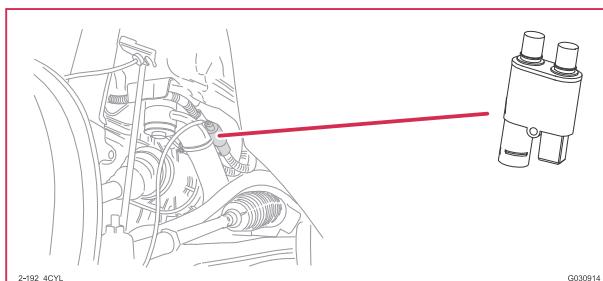


2/243 Relay isolator secondary battery

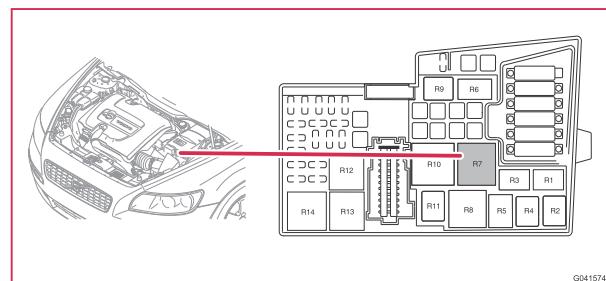


2/192 Relay, electric engine heater, 5-Cyl.

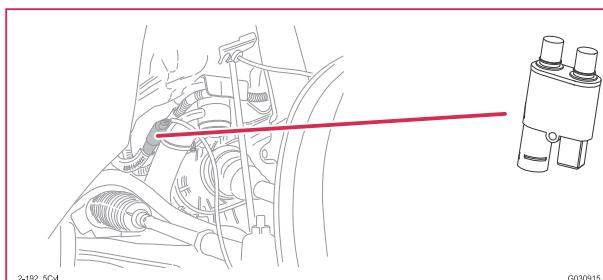


2/247 Relay autostart

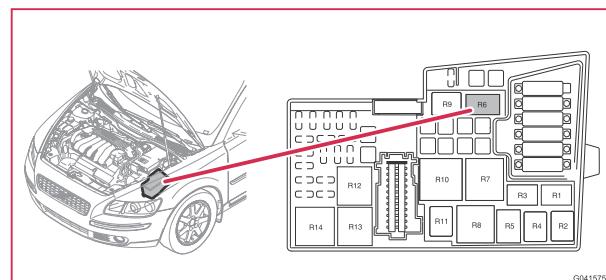

2/193 Relay, comfort functions

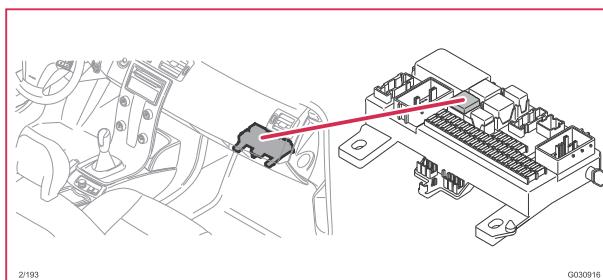


3/1 Ignition switch

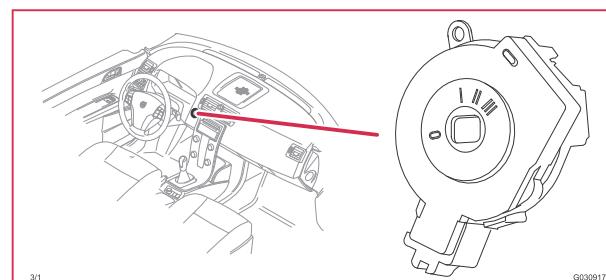


Component illustrations

3/4 - 3/35


3/4 Switch unit, cruise control (SWS)

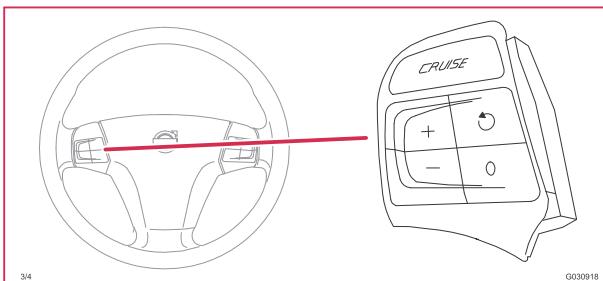


3/25 Power sunroof switch

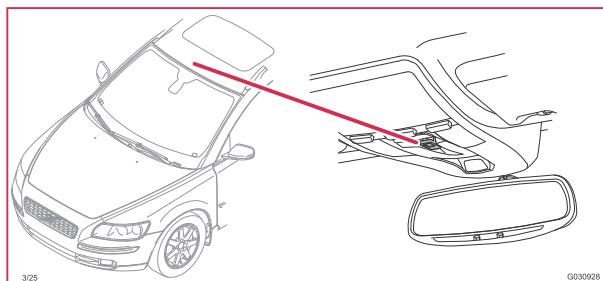


3/6 Switch, hazard warning flashers

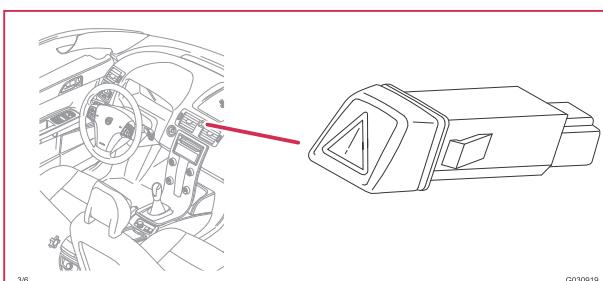


3/25 Switch, power roof, C70

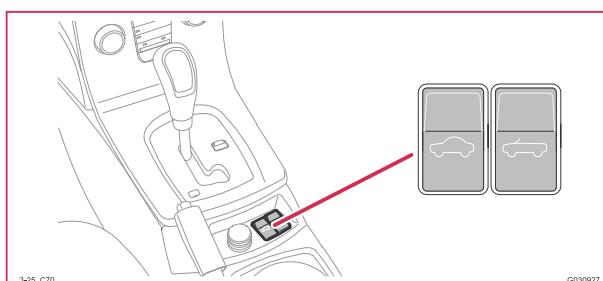


3/8 Switch, heated rear window/rearview mirrors

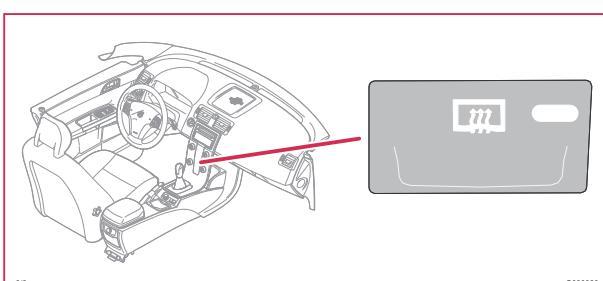


3/26 Switch unit, power driver's seat

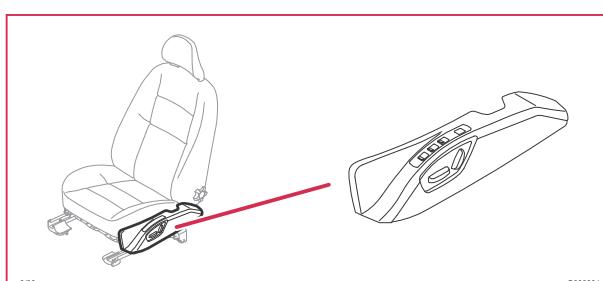


3/9 Contact brake light

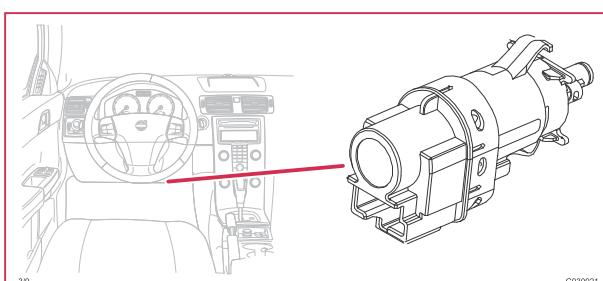


3/27 Switch unit, power passenger seat

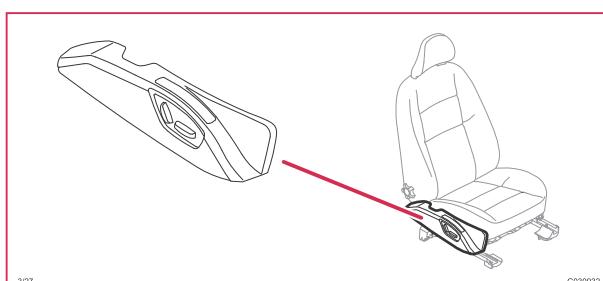

3/10 Reversing light contact

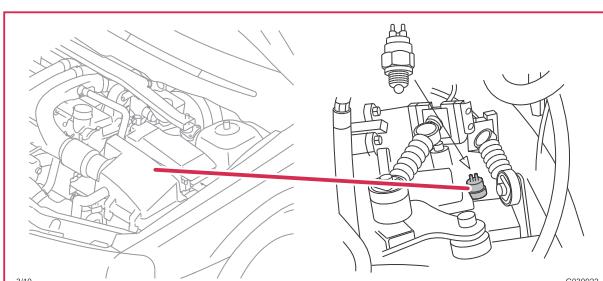


3/35 Switch, handle, trunk lid, C30

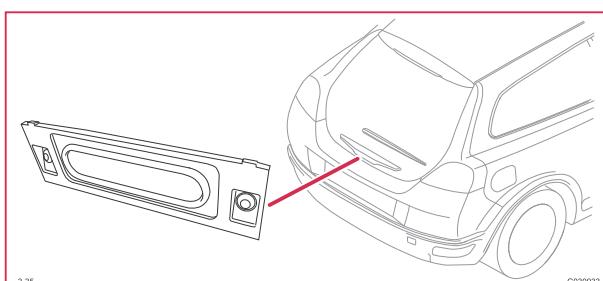


Component illustrations

3/35 - 3/78


3/35 Switch, handle, trunk lid/tailgate, S40/V50

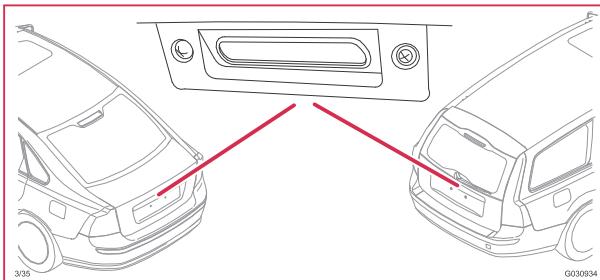


3/60 Switch, auxiliary lights

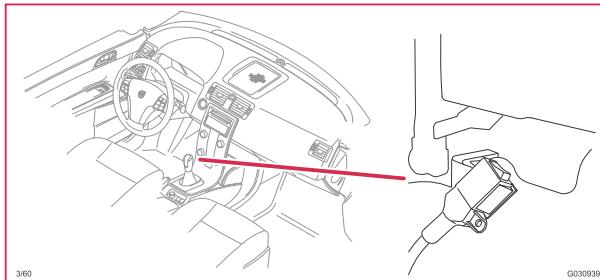


3/37 Contact horn

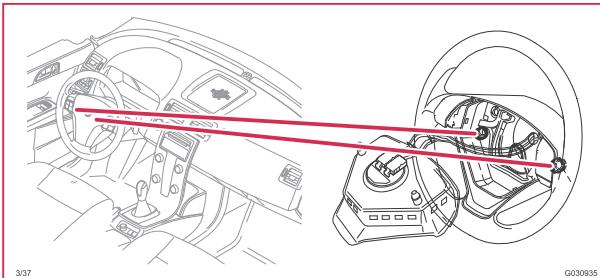


3/62 Hood alarm contact

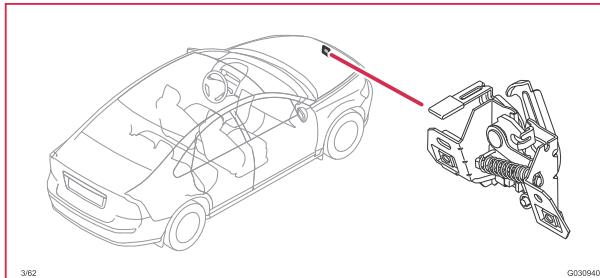


3/39 Clutch pedal contact

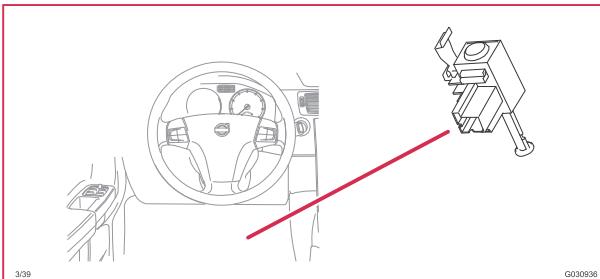


3/76 Lock unit, rear left door

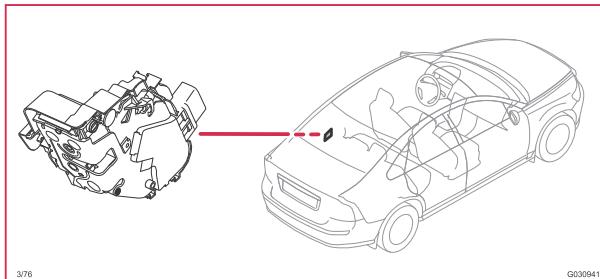


3/46 Seat contact, passenger seat

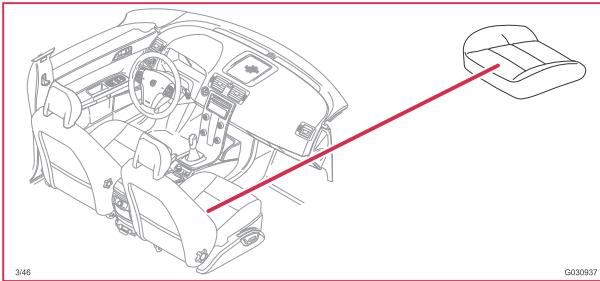


3/77 Lock unit, rear right door

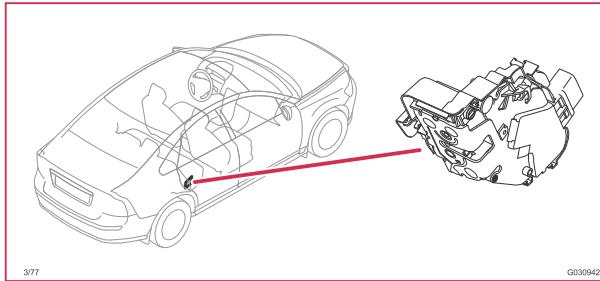

3/47 Parking brake contact

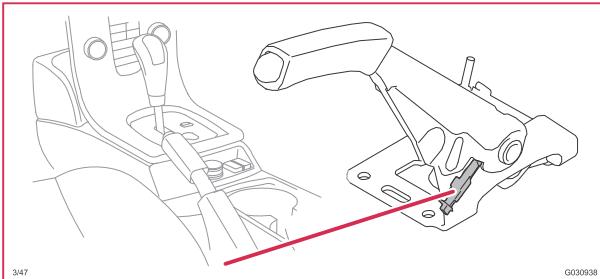


3/78 Lock unit trunk lid/tailgate, C30

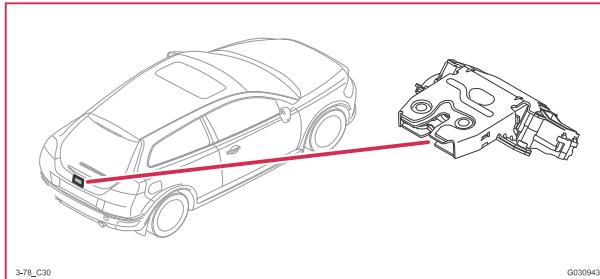

Component illustrations

3/78 - 3/100


3/78 Lock unit trunk lid/tailgate, S40

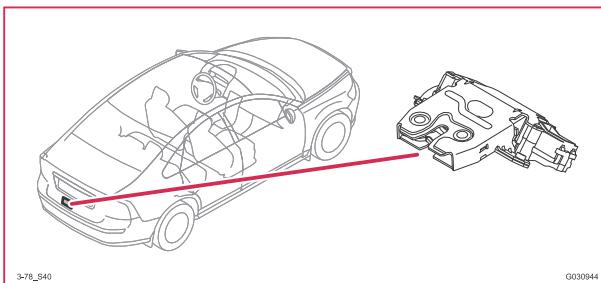

3-78_S40

G030944


3/85 Power window switch, rear left door

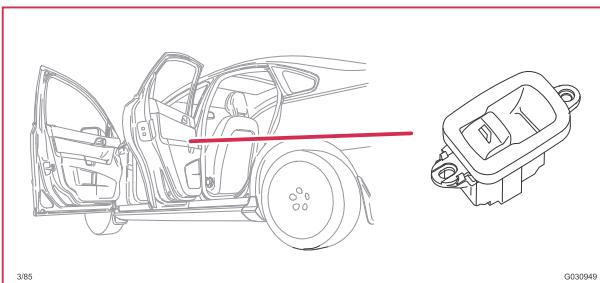

3-85

G030949


3/80 Switch, central locking system, driver's door

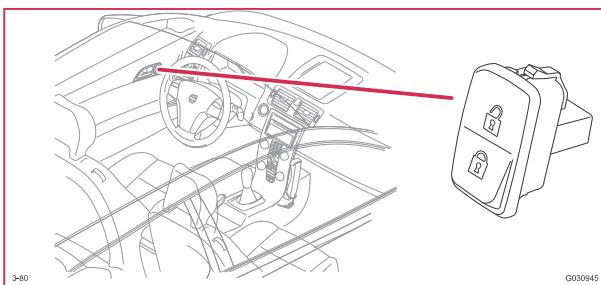

3-80

G030945


3/86 Power window switch, right rear door

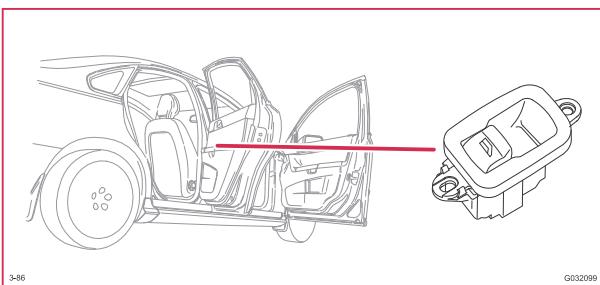

3-86

G032099


3/81 Power window switches, driver's door

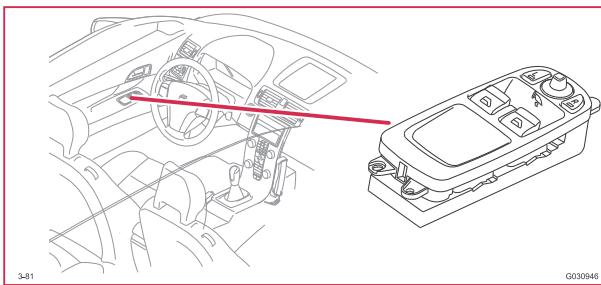

3-81

G030946


3/93 Contact, driver's seat belt buckle

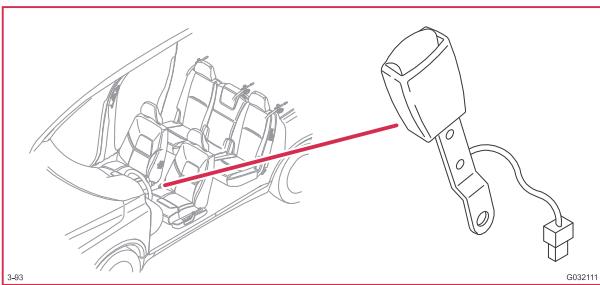

3-93

G032111


3/82 Switch, central locking system, passenger door

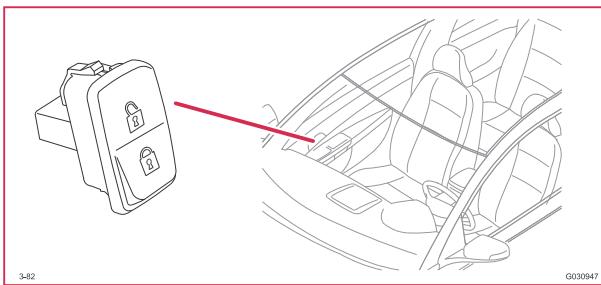

3-82

G030947


3/94 Contact, passenger seat belt buckle

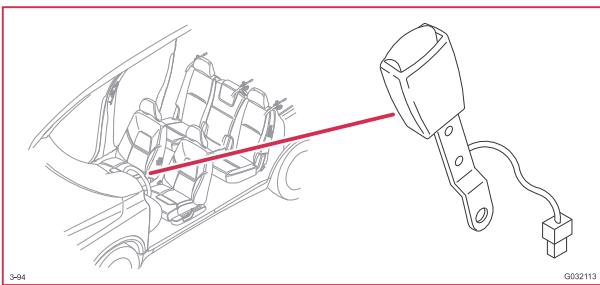

3-94

G032113


3/83 Switch, passenger door power window

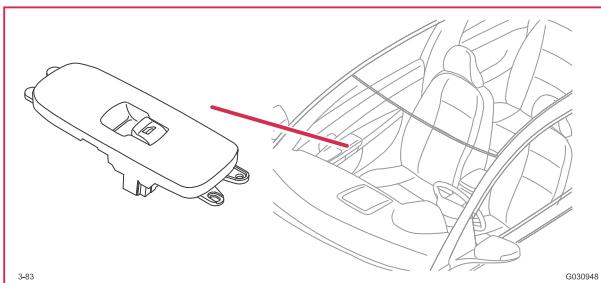

3-83

G030948

3/100 Lock unit, driver's door

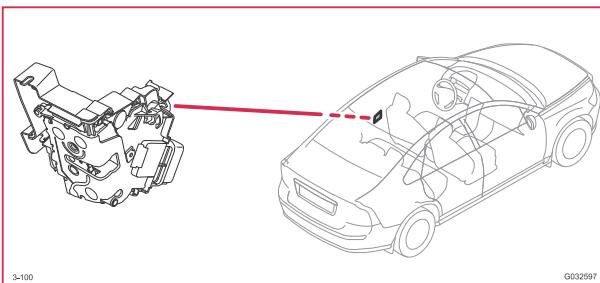


3-100

G032597


Component illustrations

3/110 - 3/157


3/110 Lock unit, passenger door

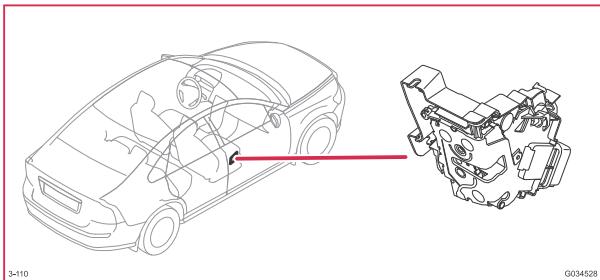


3/127 Passenger Door Module (PDM)

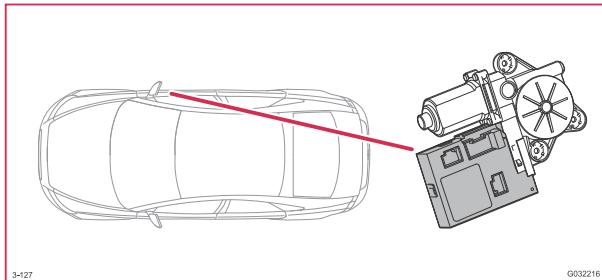


3/111 Light Switch Module (LSM)

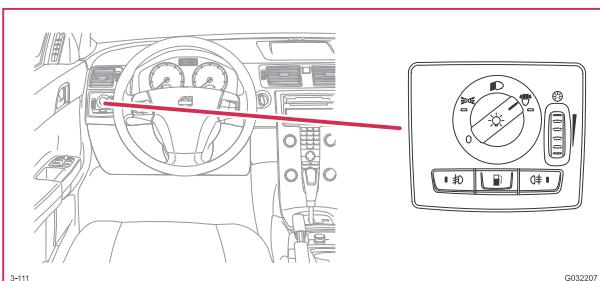


3/128 Left rear door module (LDM)

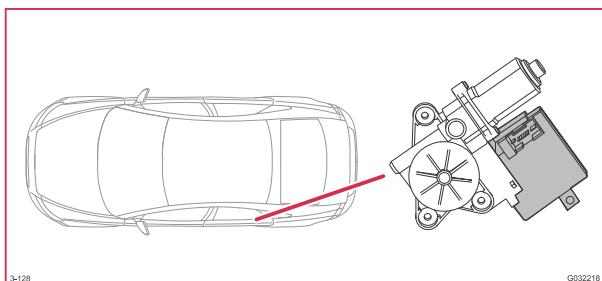


3/112 Climate Control Module (CCM)

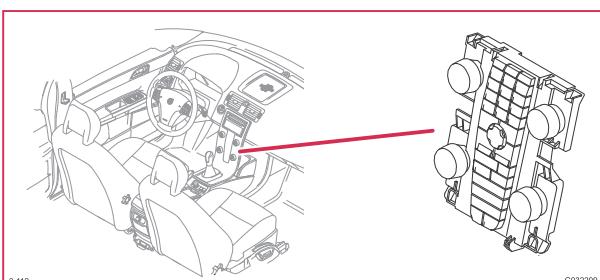


3/129 Right rear door module (RDM)

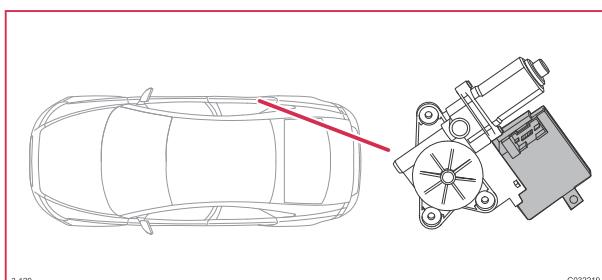


3/117 Switch unit, ceiling light

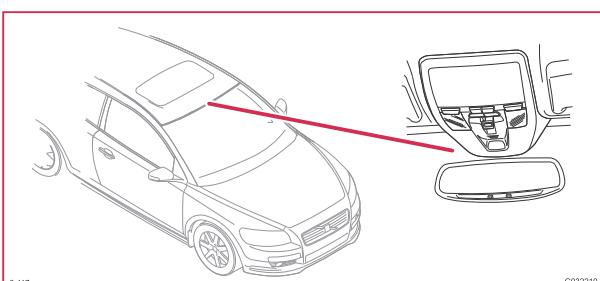


3/156 Gear Selector Module (GSM)

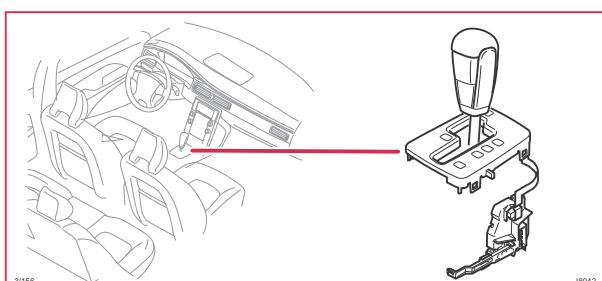

3/126 Driver Door Module (DDM)

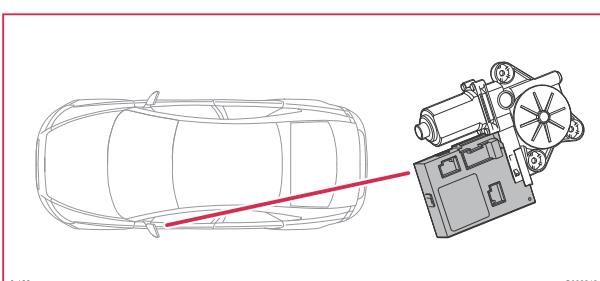


3/157 Switch, passenger side airbag

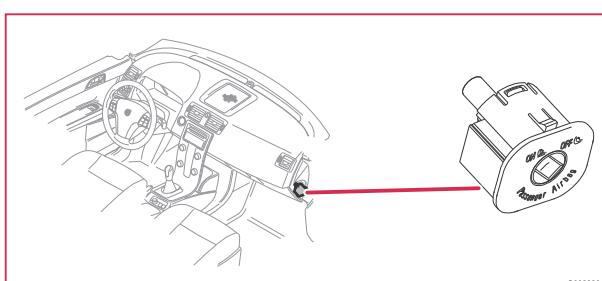


Component illustrations

3/173 - 3/271


3/173 Switch, trunk lid/tailgate private lock

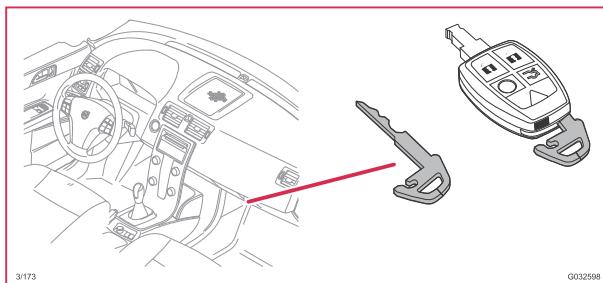


3/255 Position sensor, driver's seat

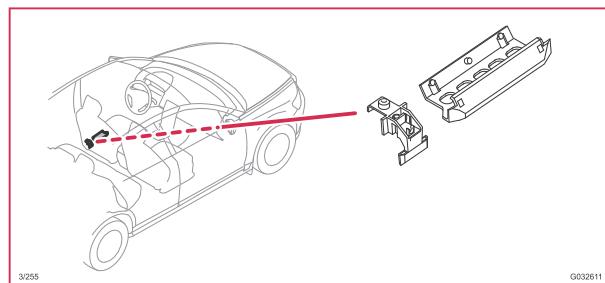


3/217 Contact, LH rear belt buckle

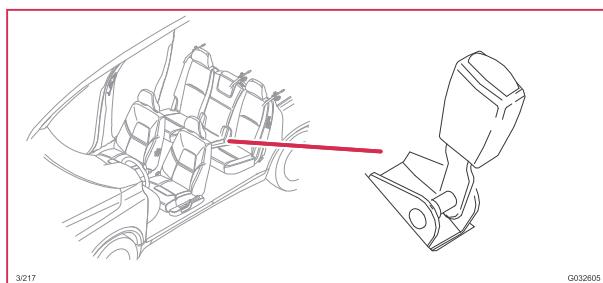


3/256 Position sensor, passenger seat

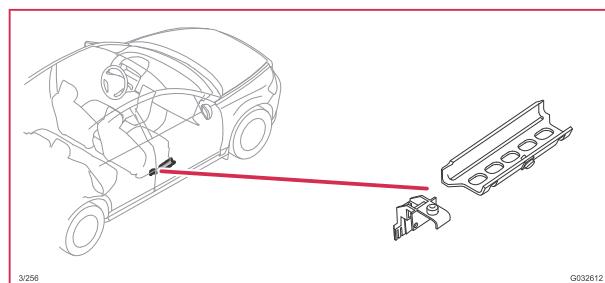


3/218 Contact, center rear belt buckle

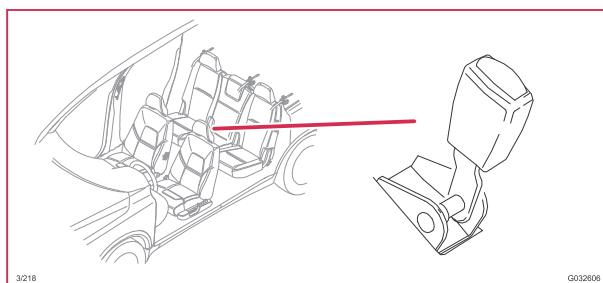


3/267 Switch unit, telematics

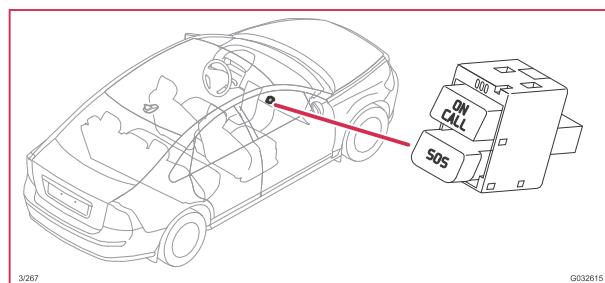


3/219 Contact, RH rear belt buckle

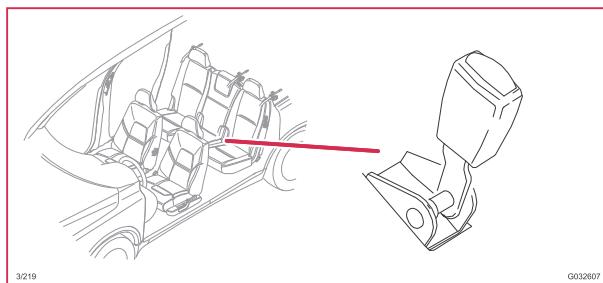


3/268 Load assistance switch

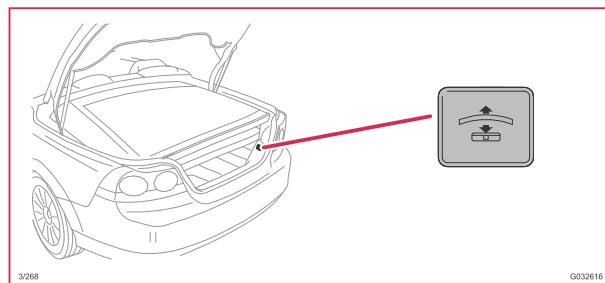

3/254 Steering Wheel Module (SWM)

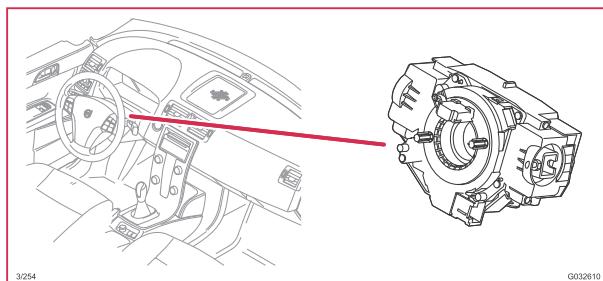


3/271 Contact, immobilizer, clutch pedal

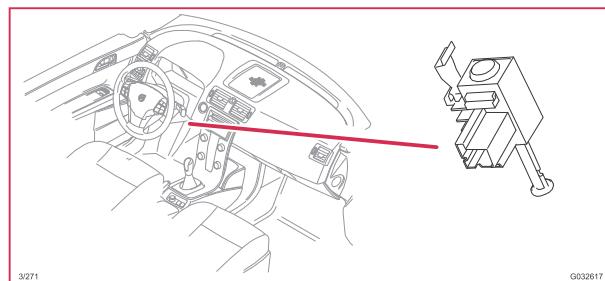


Component illustrations

3/273 - 3/288


3/273 Lock contact, LH front door

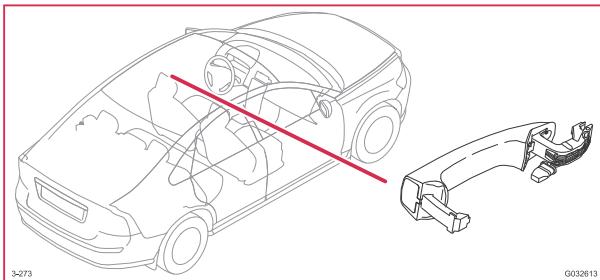


3/274 Lock contact, RH front door

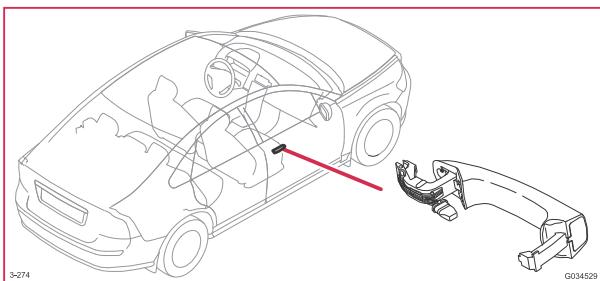


3/275 Lock contact, LH rear door

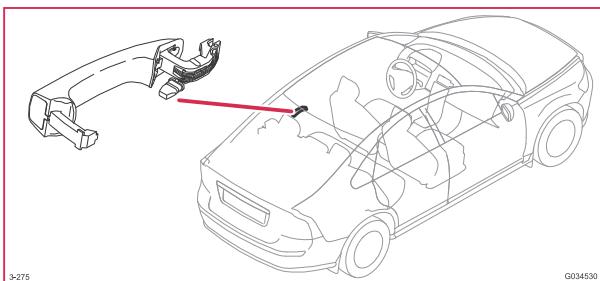


3/276 Lock contact, RH rear door

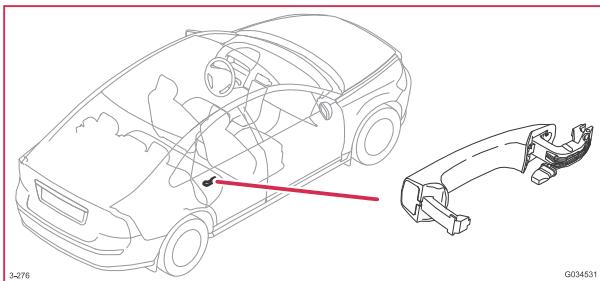


3/281 Infotainment Control Module (ICM)

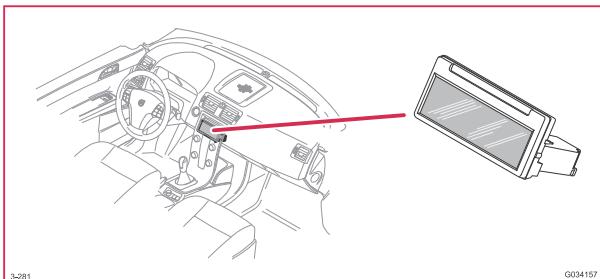


3/286 Switch BLIS/PAS/DRIVE, C30/S40/V50

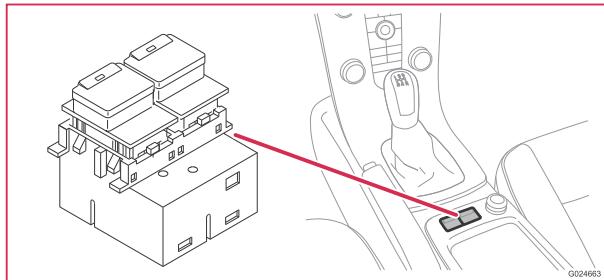


3/286 Switch BLIS/PAS/DRIVE, C70

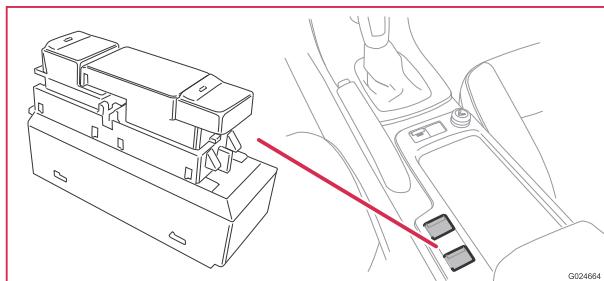


3/287 Switch, rear seat entry, left C30

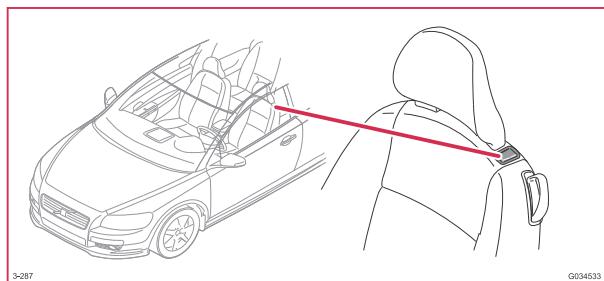

3/287 Switch, rear seat entry, left C70

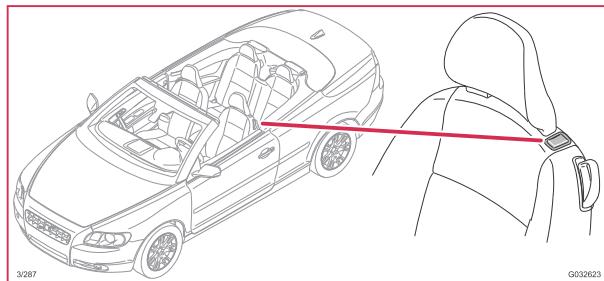


3/288 Switch, rear seat entry, right C30

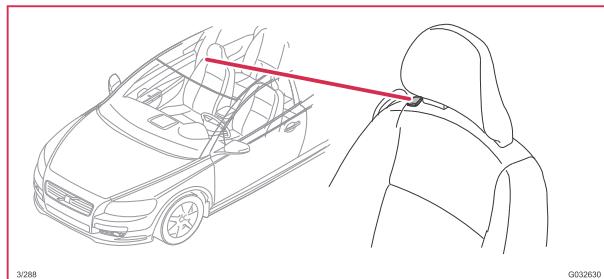

Component illustrations


3/288 - 4/46.2

3/288 Switch, rear seat entry, right C70

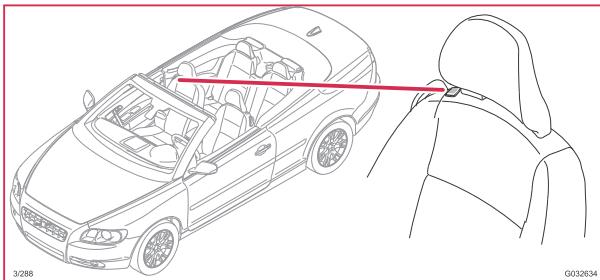


G032634

3/293 Handsfree control panel cellular phone

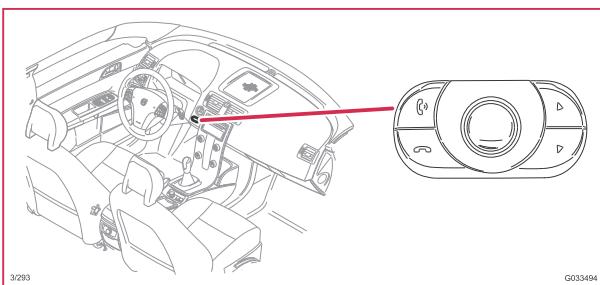


G033494

4/7 Combustion Preheater Module (CPM)

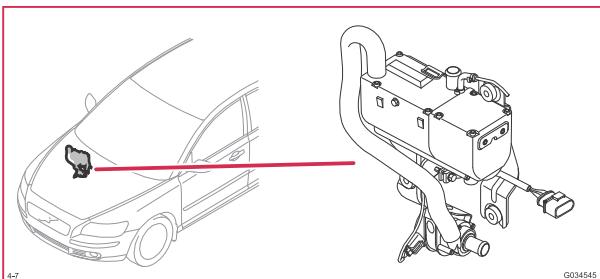


G034545

4/9 Supplemental Restraint System Module (SRS)

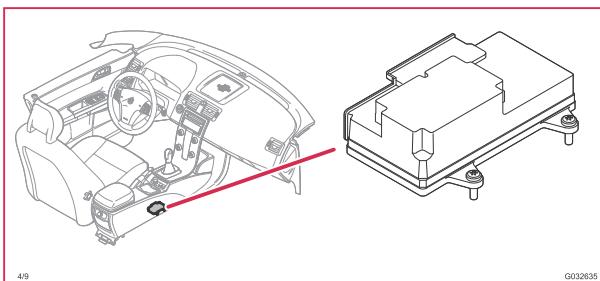


G032635

4/16 Brake Control Module (BCM)

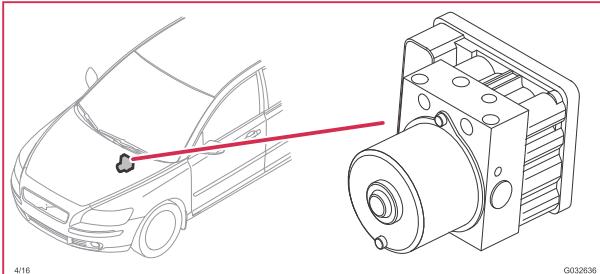

G032636

4/28 Transmission Control Module (TCM)

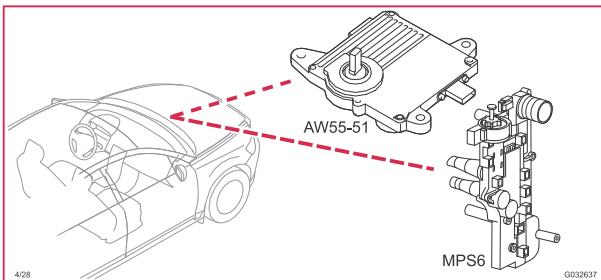


4/28

AW55-51

MPS6

G032637


4/31 Passenger compartment fan control module

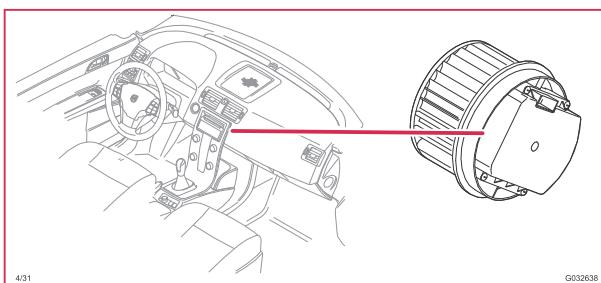

4/31

G032638


4/33 Sunroof control module

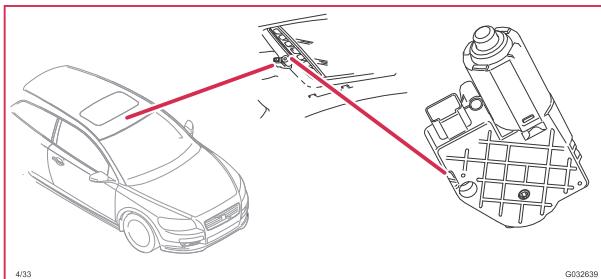

4/33

G032639


4/46 Engine Control Module (ECM), 4-Cyl. 1.6l D

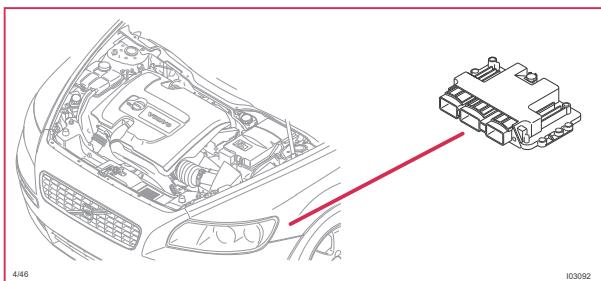

4/46

I03092

4/46.2 Engine Control Module (ECM), 5-Cyl. Turbo

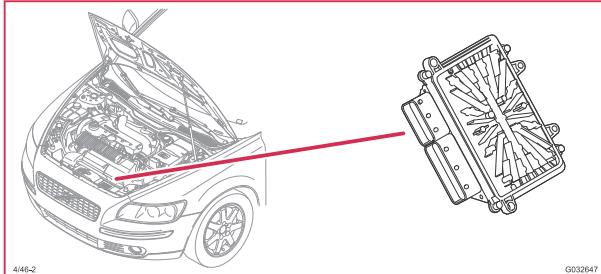


4/46-2

G032647


Component illustrations

4/46.3 - 4/71


4/46.3 Engine Control Module (ECM), 5-Cyl.
2.0l D

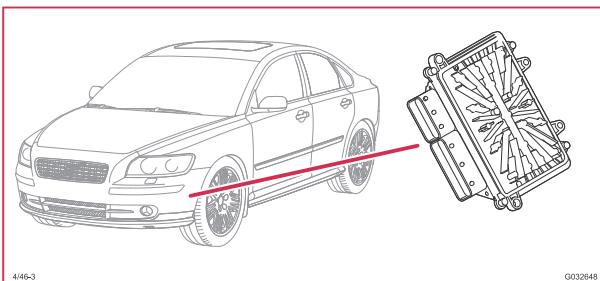


4/46.5 Engine Control Module (ECM), 4-Cyl.
1.6l D

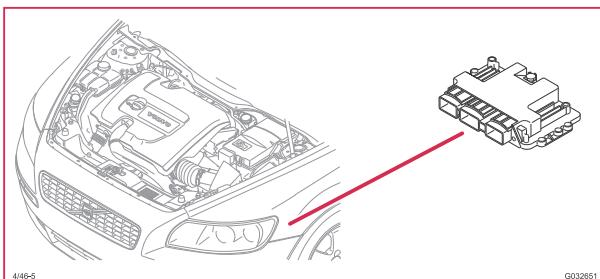


4/46.6 Engine Control Module (ECM), 4-Cyl.
2.0l

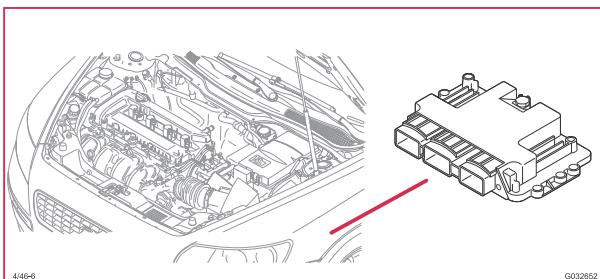


4/46.7 Engine Control Module (ECM), 4-Cyl.
1.6l

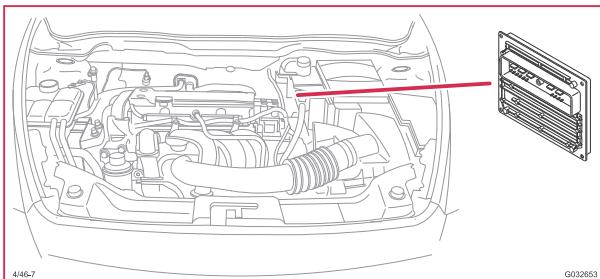


4/50 Electronic throttle module

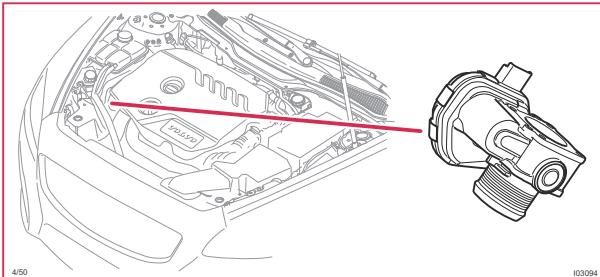


4/52 Power Seat Module (PSM)

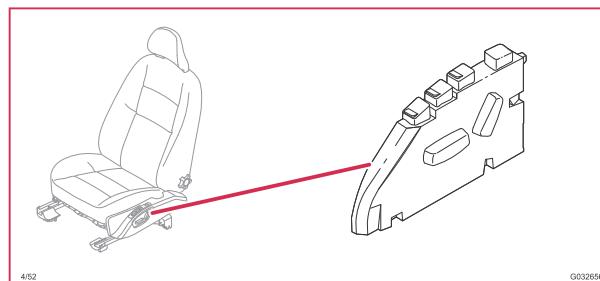


4/56 Central Electronic Module (CEM)

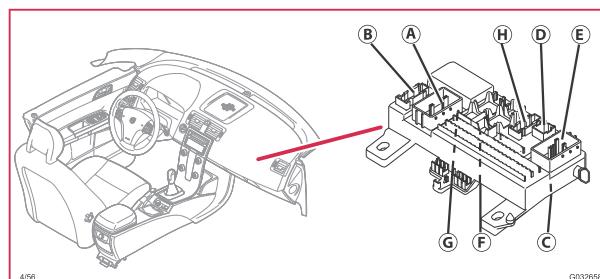


4/56 A-H Central Electronic Module (CEM)

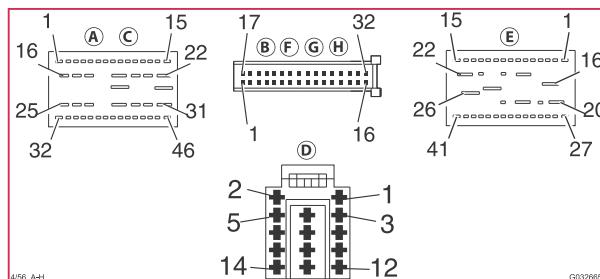

4/59 Convertible Roof Module (CRM)

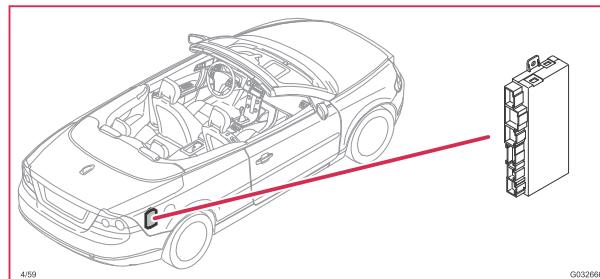


4/71 Cooling fan control module

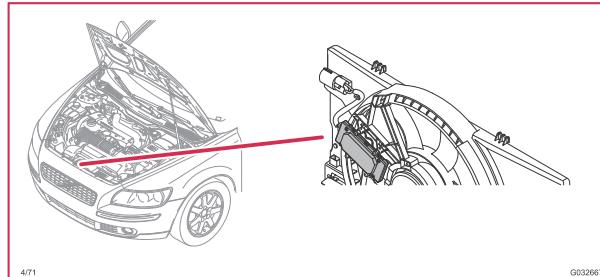


Component illustrations

4/76 - 4/119


4/76 Remote control unit for garage door opener

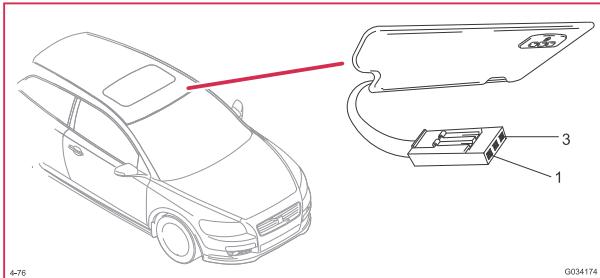


4/78 Accessory electronic module (AEM)

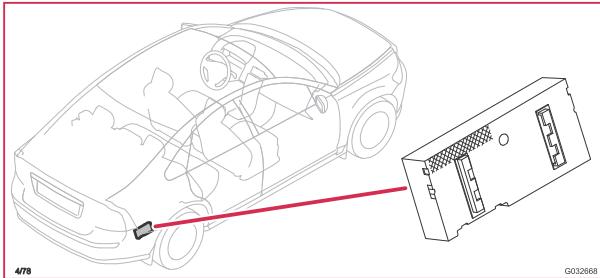


4/83 Fuel pump control module

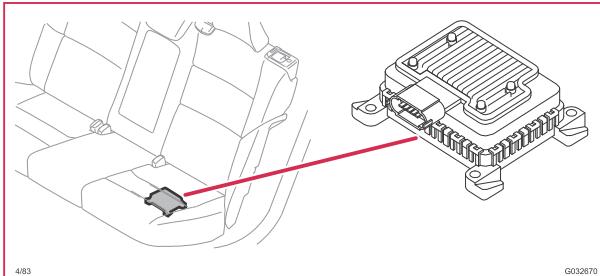


4/86 Parking Assistance Module (PAM)

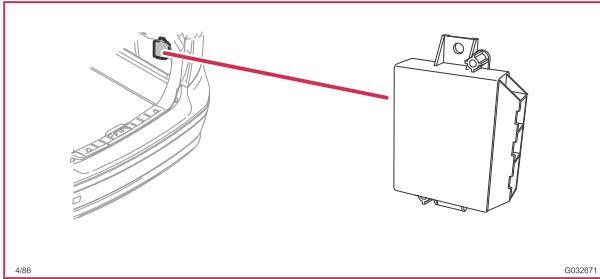


4/93 Keyless Vehicle Module (KVM)

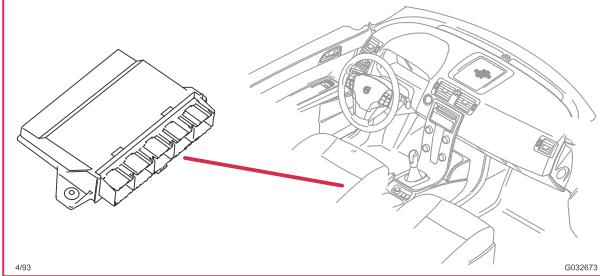


4/102 Steering Column Lock Module (SCL)

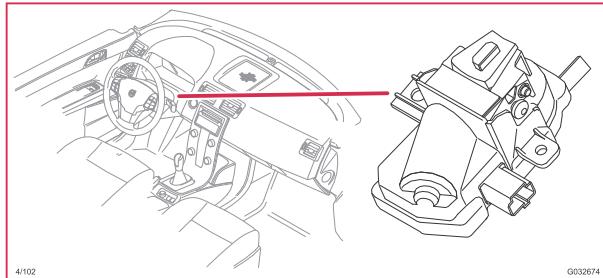


4/109 Glow plug control module

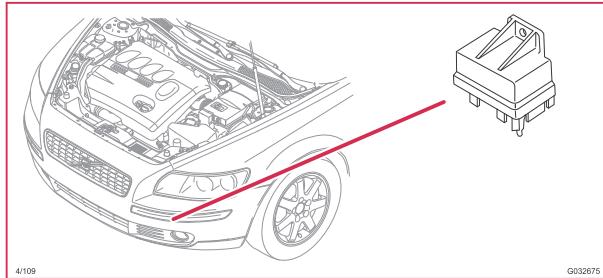


4/110 Trailer Module (TRM)

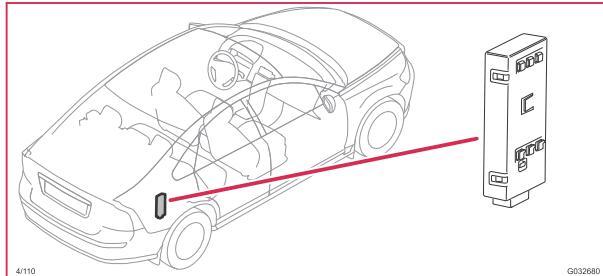

4/114 Headlamp Control Module (HCM)

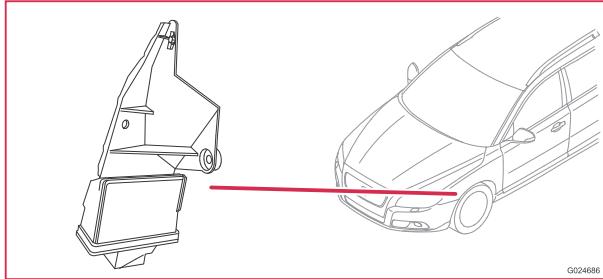


4/119 Remote Receiver Module (RRX)

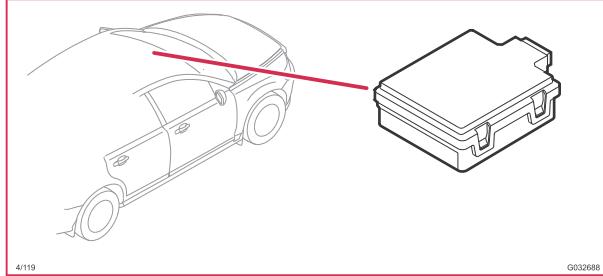


Component illustrations

4/119 - 6/18


4/119 Remote Keyless Entry (RKE)

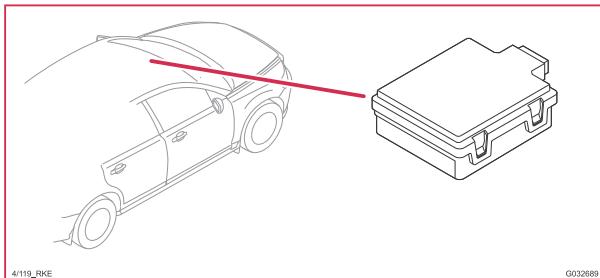


6/1 Wiper Motor Module (WMM)

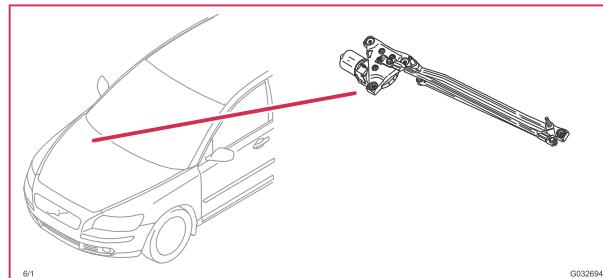


4/124 Accessory USB unit (AUU)

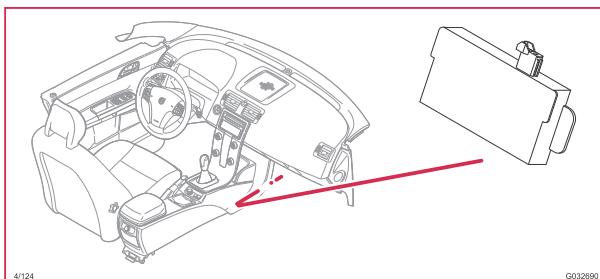


6/2 Washer pump

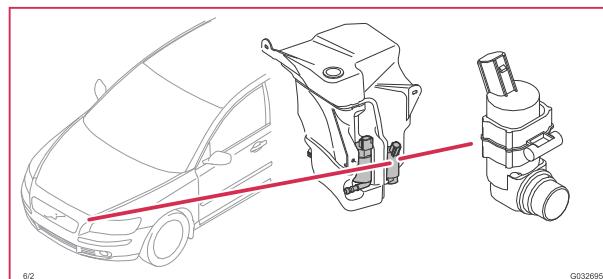


4/126 Left Camera Module (LCM)

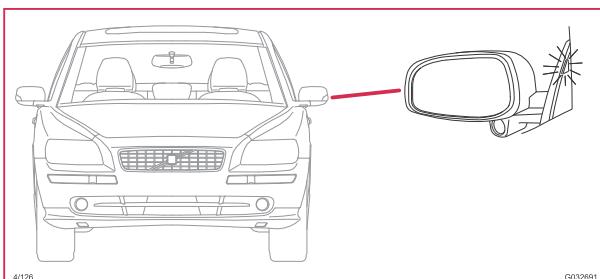


6/16 Driver seat motor, backrest angle

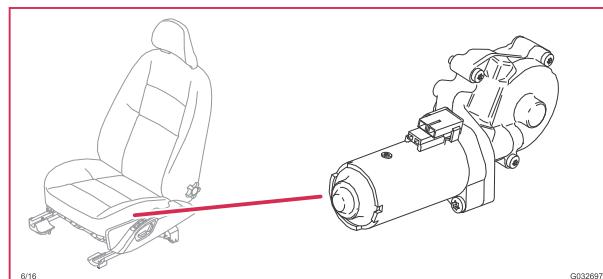


4/127 Right Camera Module (RCM)

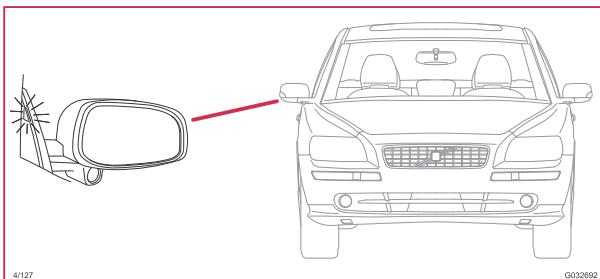


6/17 Driver seat motor, up/down front edge

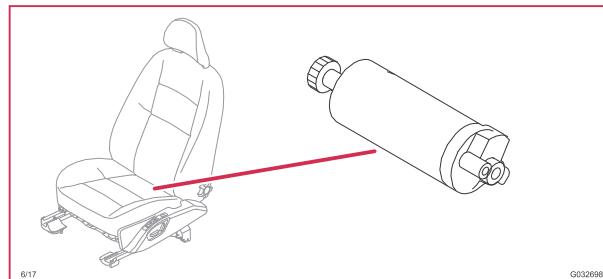

5/1 Driver Information Module (DIM)

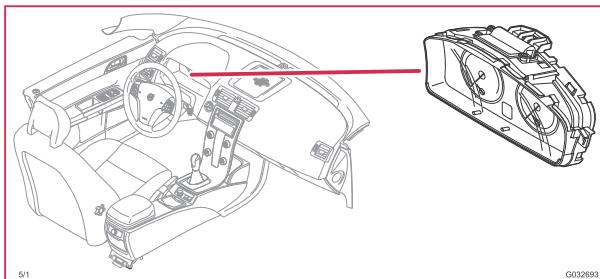


6/18 Driver seat motor, up/down rear edge

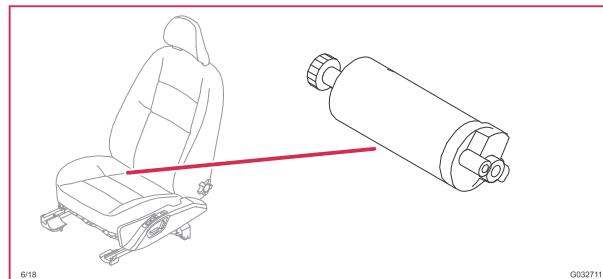


Component illustrations

6/19 - 6/37


6/19 Driver seat motor, forward/backward

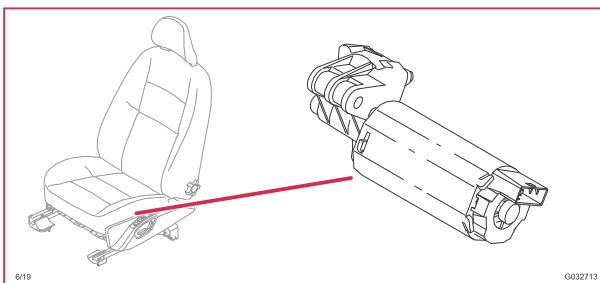


6/20 Passenger seat motor, forward/backward

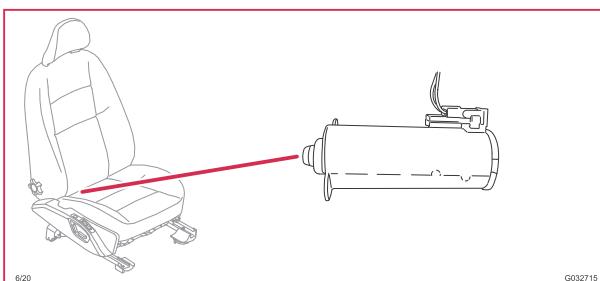


6/25 Starter motor

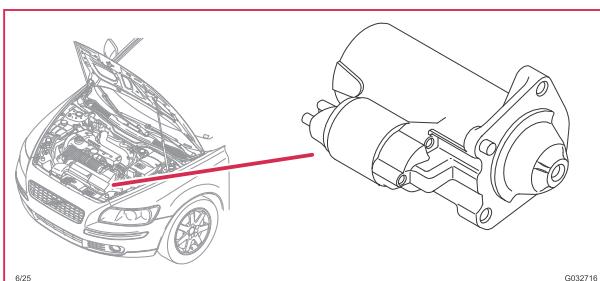


6/26 Alternator

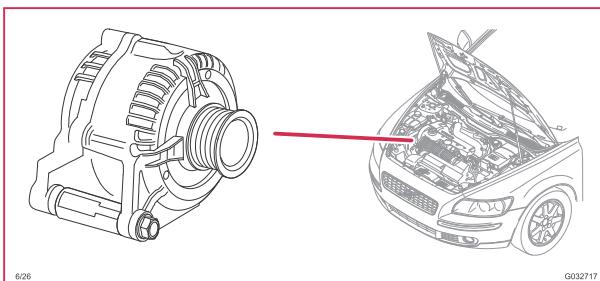


6/28 Motor, passenger compartment fan

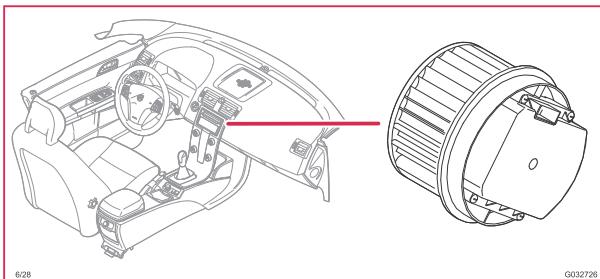


6/29 Motor, electric cooling fan

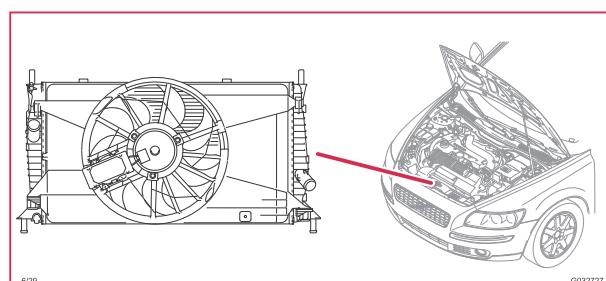


6/32 Rear window wiper motor

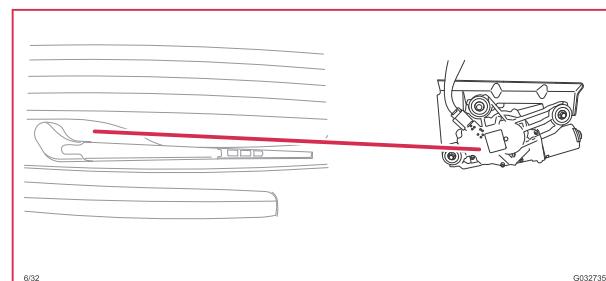


6/33 Fuel pump

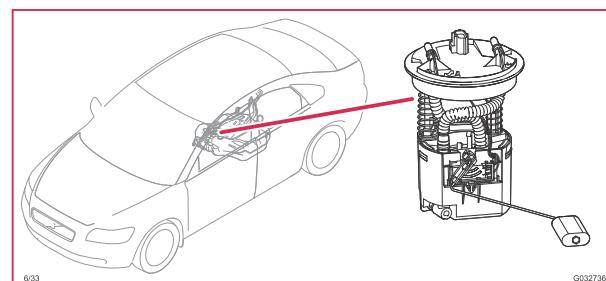

6/35 Fuel pump, auxiliary heater

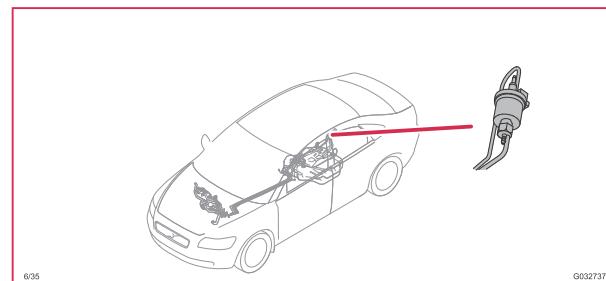


6/37 Lock motor, fuel filler cover

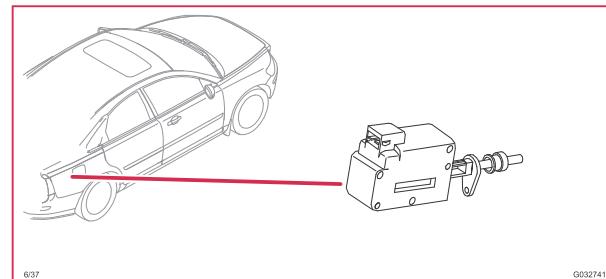


Component illustrations

6/38 - 6/71


6/38 Left-hand headlight level adjustment motor

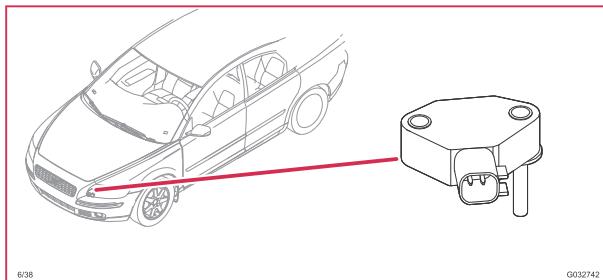


6/39 Right-hand headlight level adjustment motor

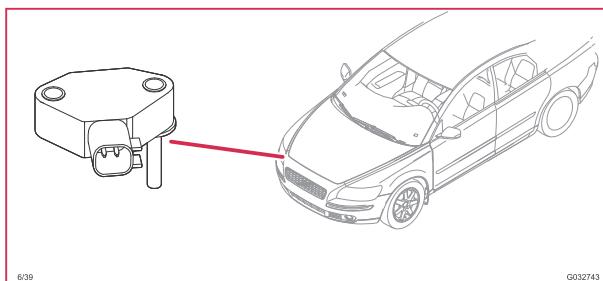


6/48 Damper Motor Module (DMM), recirculation

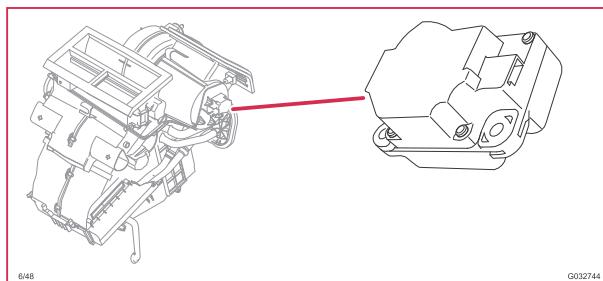


6/62 Power rear-view mirror driver's door

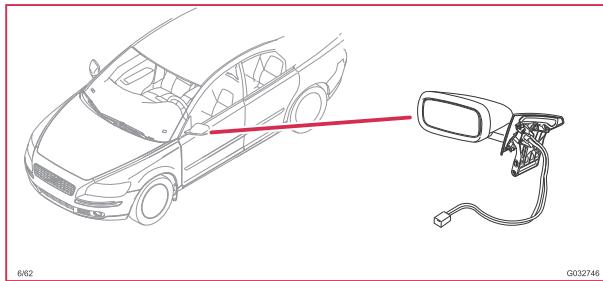


6/63 Power passenger door mirror

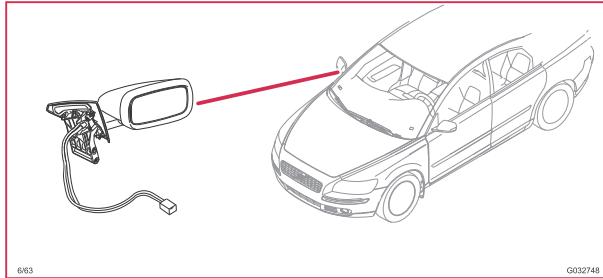


6/64 Passenger seat motor, backrest angle

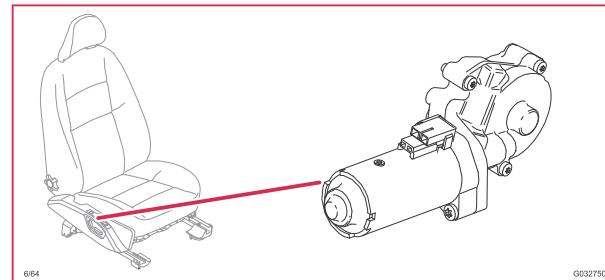


6/65 Passenger seat motor, up/down front edge

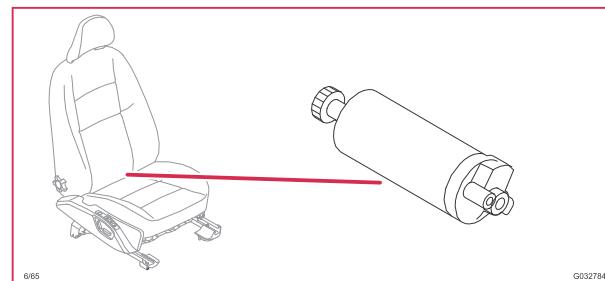


6/66 Passenger seat motor, up/down rear edge

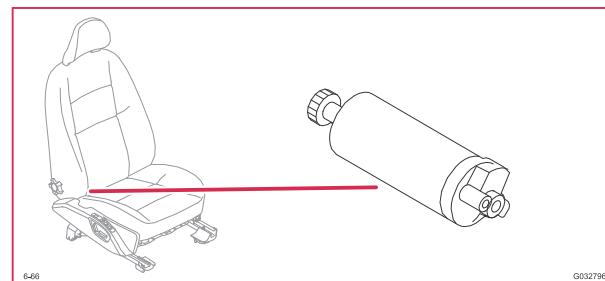

6/67 Pump, fuel leakage control

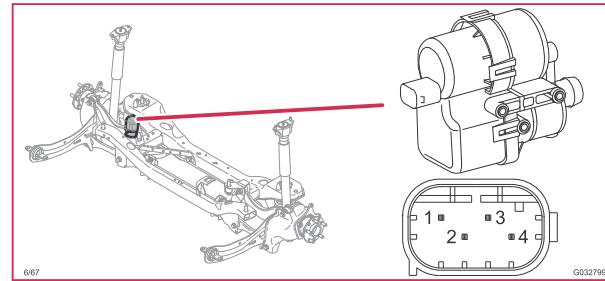


6/71 Electrical power steering module (EPS)

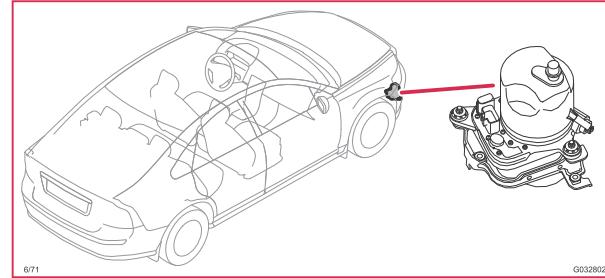


Component illustrations

6/73 - 6/120


6/73 Coolant pump, auxiliary heater

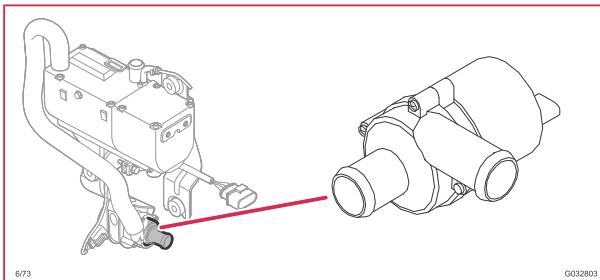


6/95 Damper Motor Module (DMM), temperature, left side

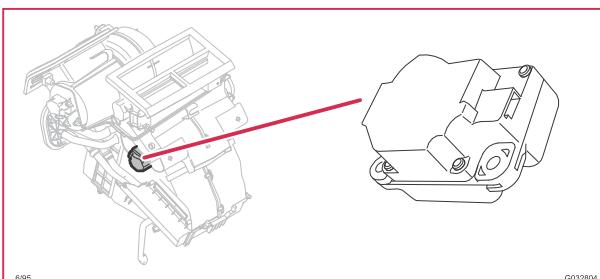


6/96 Damper Motor Module (DMM), temperature, right side

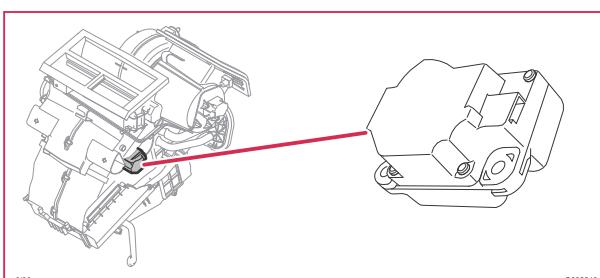


6/102 Damper Motor Module (DMM), defroster

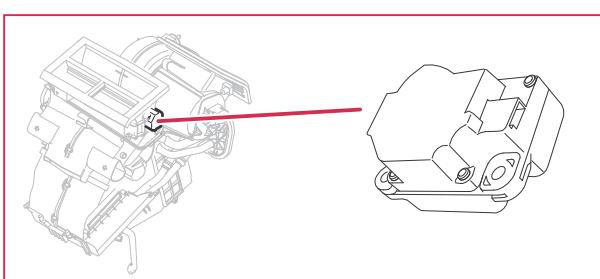


6/103 Damper Motor Module (DMM), floor/ventilation

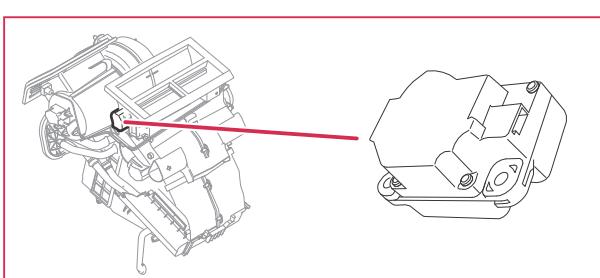


6/104 High pressure headlight washer motor

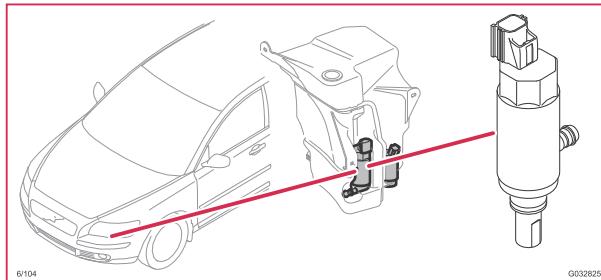


6/114 Vacuum pump

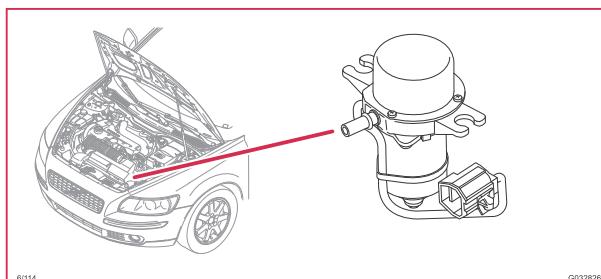


6/117 Interior temperature sensor

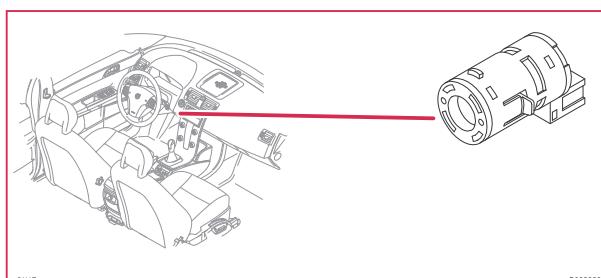

6/118 Regulator motor, swirl throttle

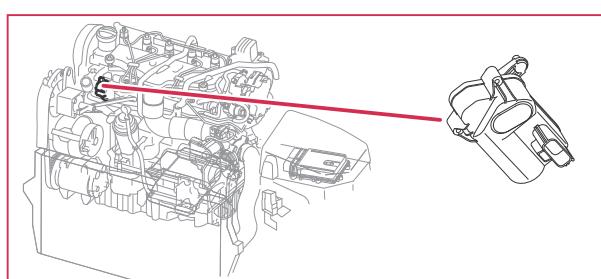


6/120 Engine throttle body

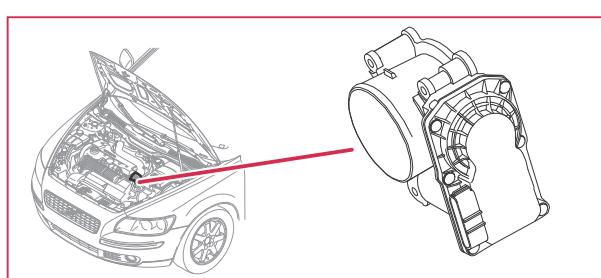


Component illustrations

6/143 - 7/15


6/143 Regulator motor, Turbo

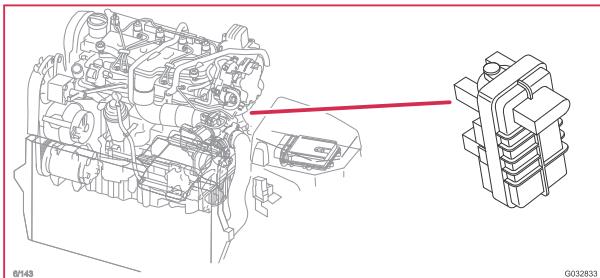


7/6 Oil pressure monitor, 4-Cyl.

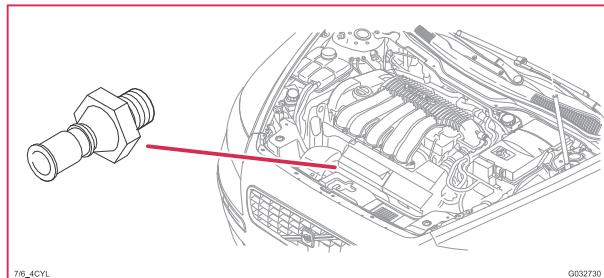


6/149 Electric catch motor

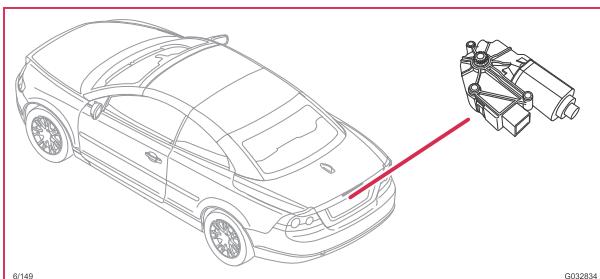


7/6 Oil pressure monitor, Turbo

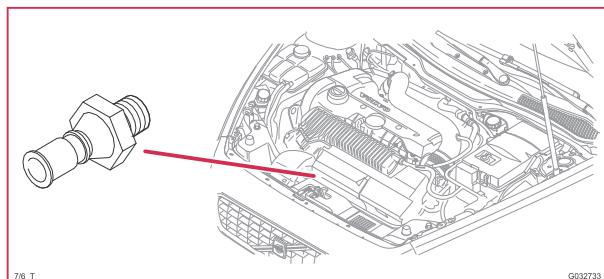


6/155 Pump unit, roof operation

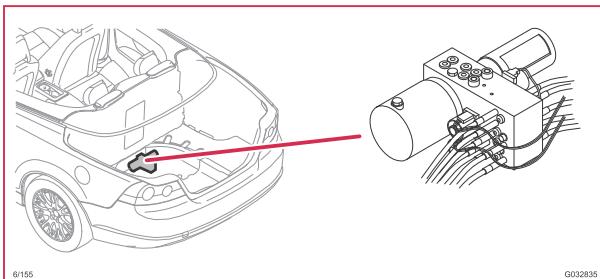


7/8 Pressure sensor, climate control system

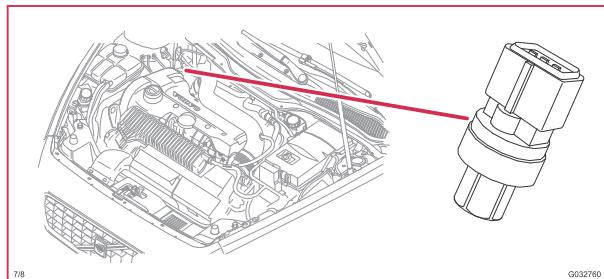


7/4 Brake fluid level sensor

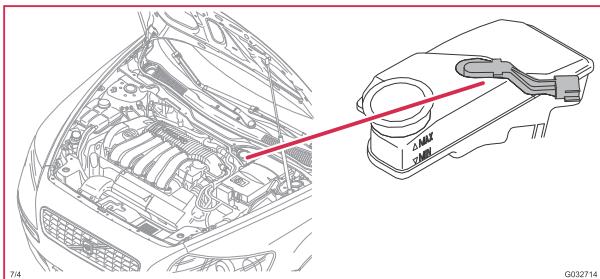


7/12 Solar sensor, twilight sensor and indicator alarm

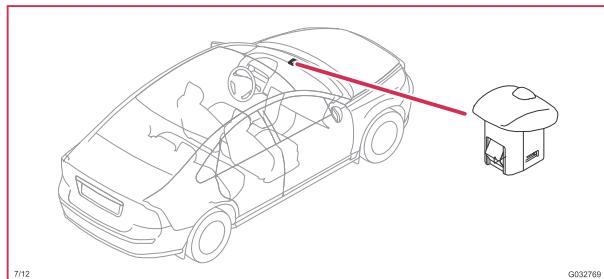

7/5 Washer fluid level sensor

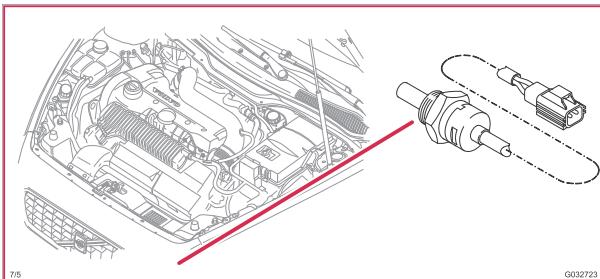


7/15 Heated oxygen sensor, front

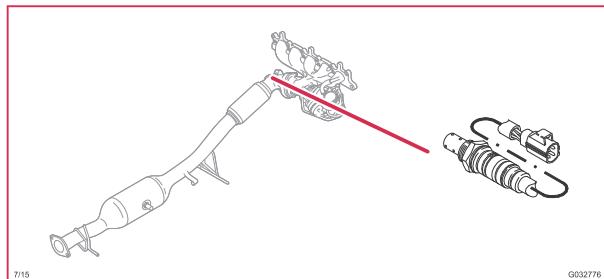


Component illustrations

7/16 - 7/35


7/16 Sensor, coolant temperature

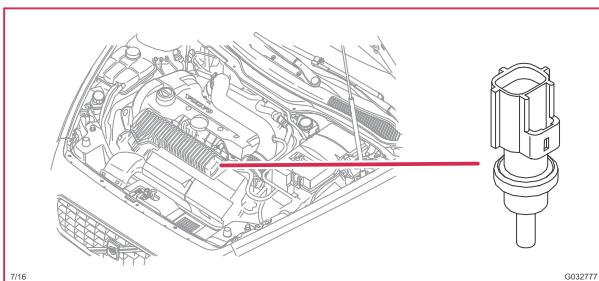


7/25 Impulse sensor, Turbo

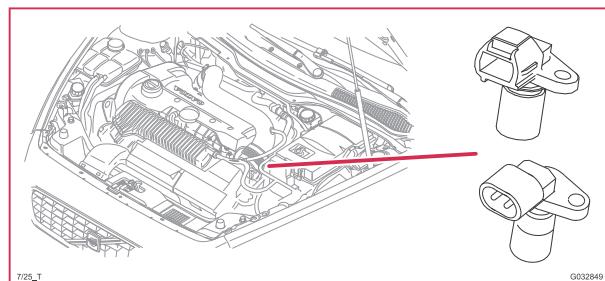


7/17 Mass air flow sensor (MAF), Turbo

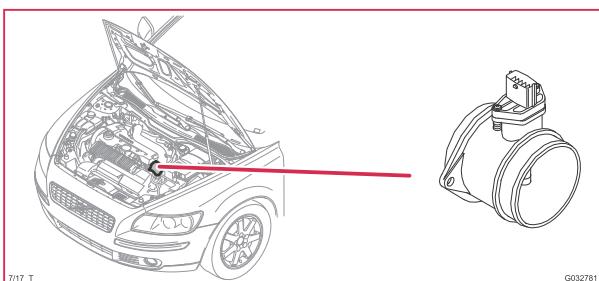


7/25 Impulse sensor, Diesel

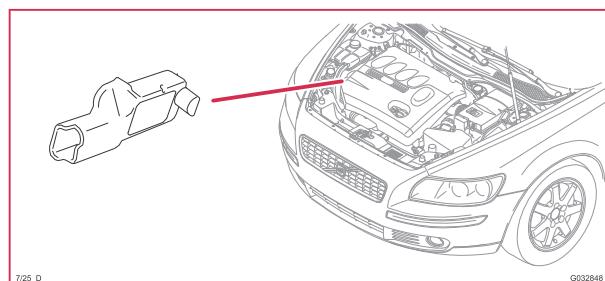


7/24 Front knock sensor, 4-Cyl.

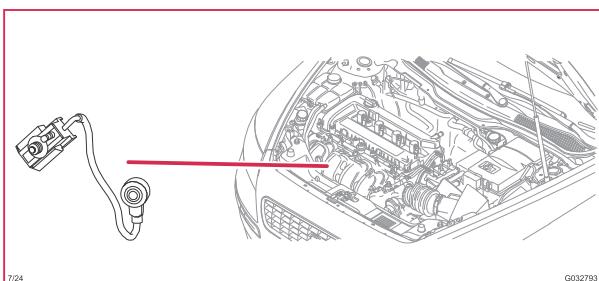


7/31 Sensor ABS, front left

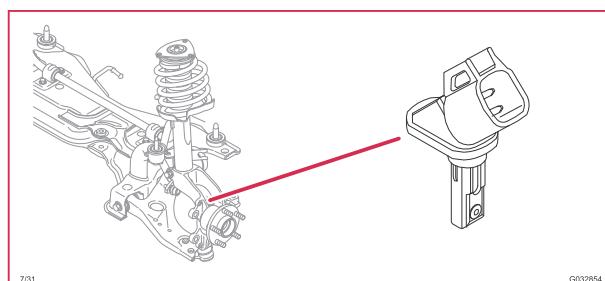


7/24 Front knock sensor, Turbo

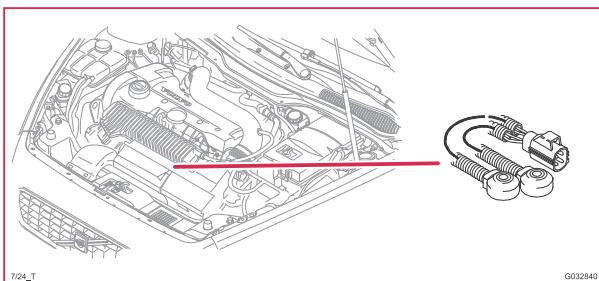


7/32 Sensor ABS, front right

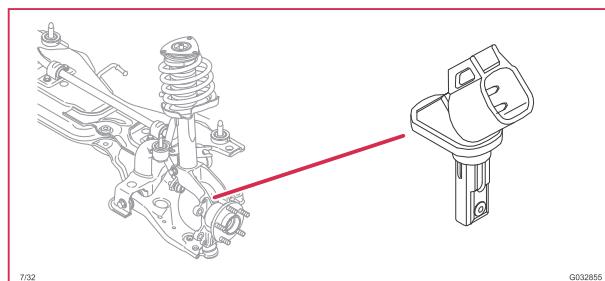

7/25 Impulse sensor, 4-Cyl.

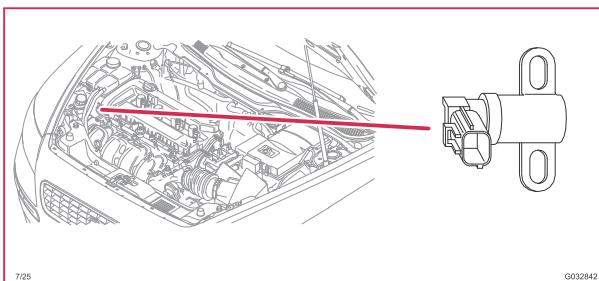


7/35 Oil level sensor

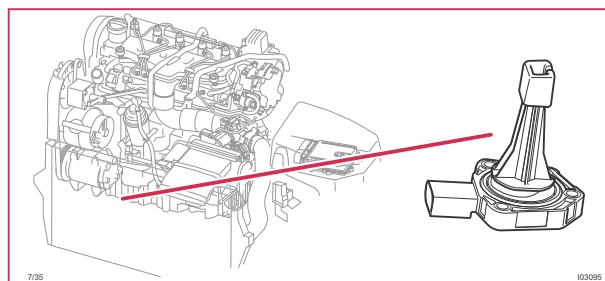


Component illustrations

7/41 - 7/93


7/41 Temperature sensor evaporator

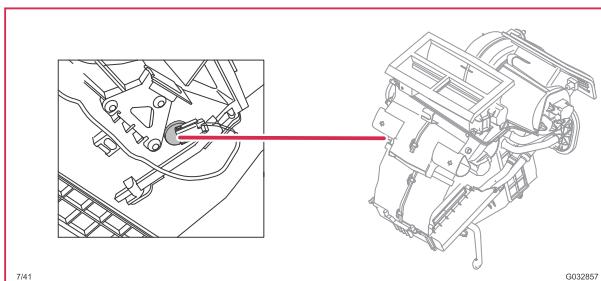


7/62 Output speed sensor

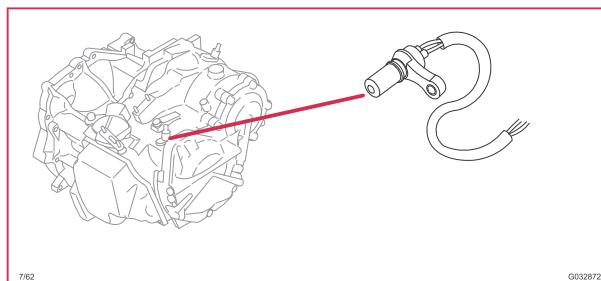


7/51 Accelerator pedal sensor

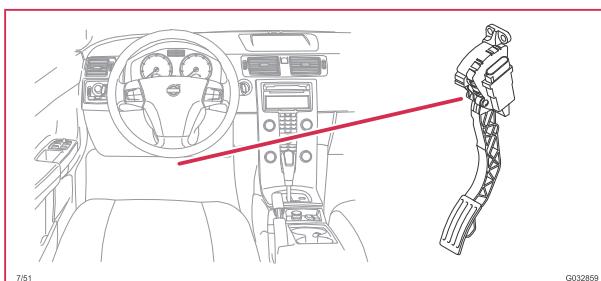


7/69 Sensor outdoor temperature

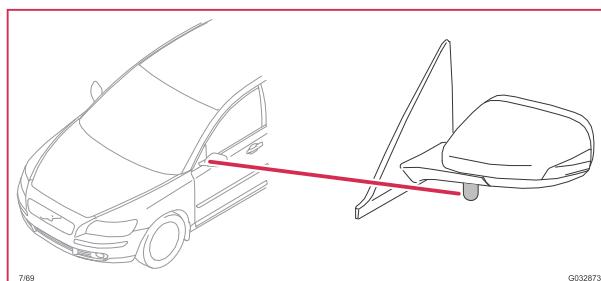


7/56 Sensor ABS, rear left

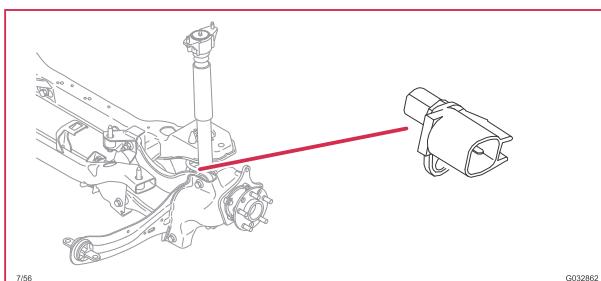


7/74 Fluid temperature sensor, automatic transmission

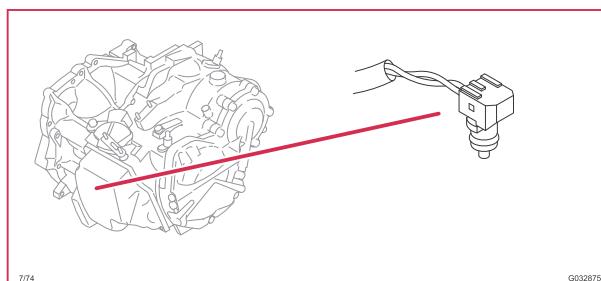


7/57 Right-hand rear ABS sensor

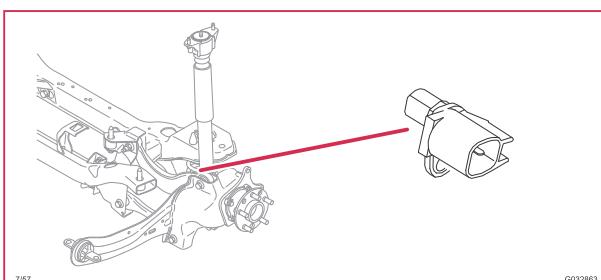


7/82 Heated oxygen sensor, rear

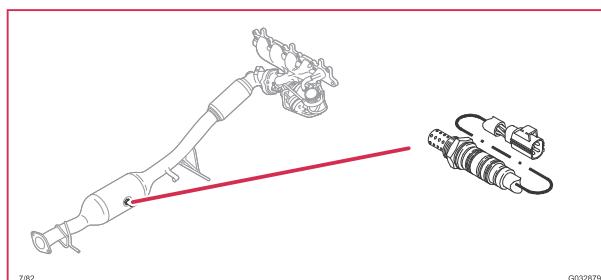

7/61 Input speed sensor

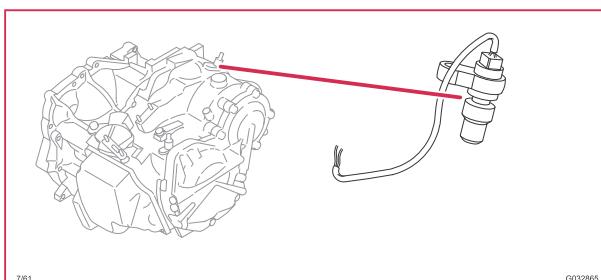


7/93 Occupant Weight Sensor (OWS)

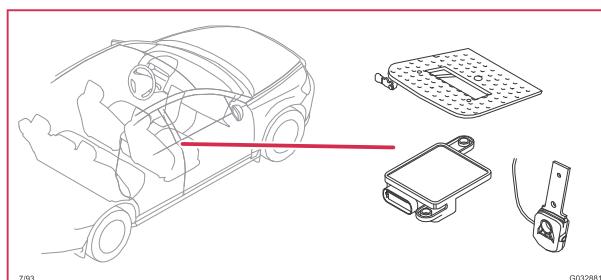


Component illustrations

7/100 - 7/121


7/100 Level sensor, alarm

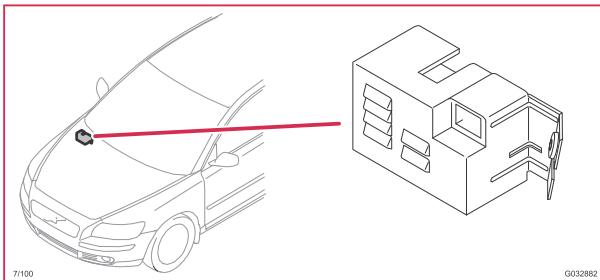


7/101 Glass-break sensor

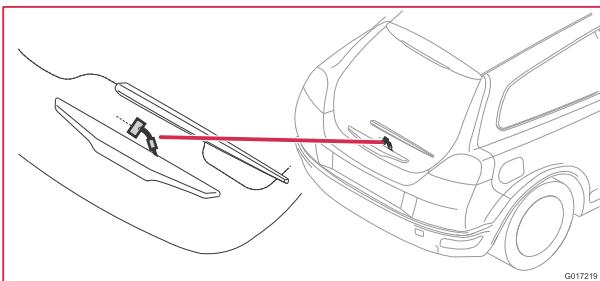


7/108 Left-hand rear side impact sensor

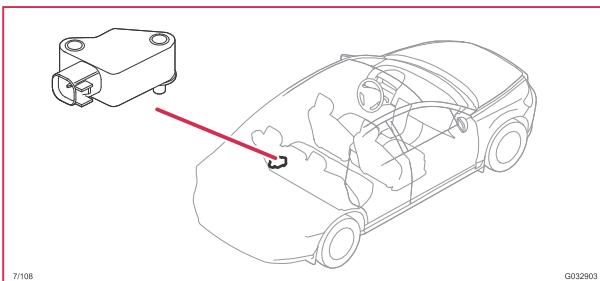


7/109 Right-hand rear side impact sensor

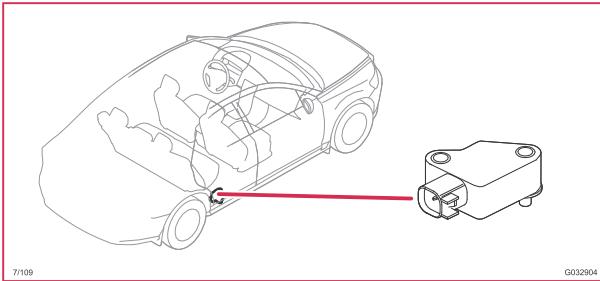


7/110 Temperature sensor, driver's seat

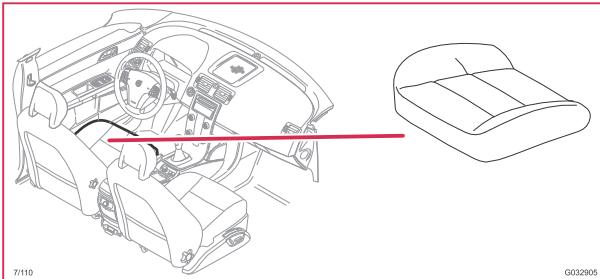


7/111 Temperature sensor, passenger seat

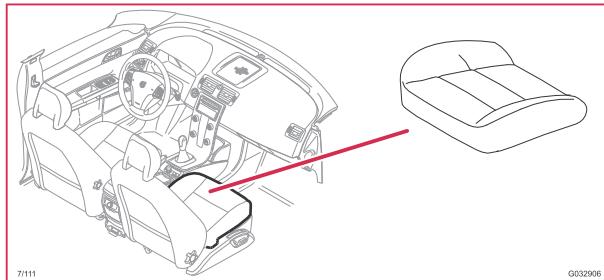


7/115 Side impact sensor, left B-post

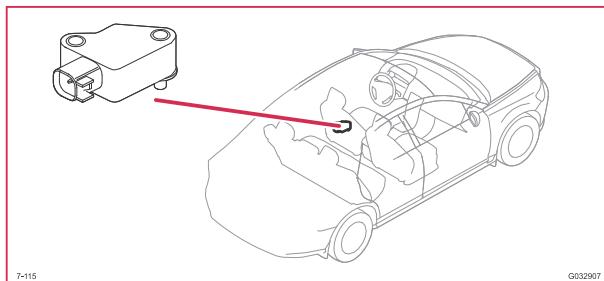


7/116 Side impact sensor, right B-post

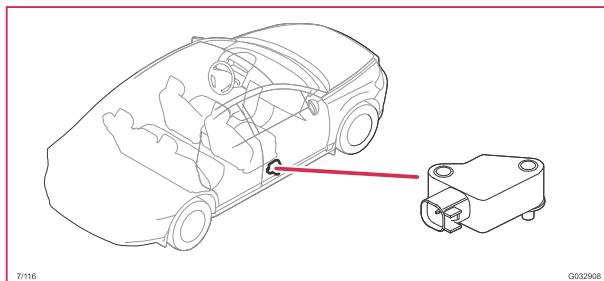

7/120 Angle sensor, Bi-Xenon rear

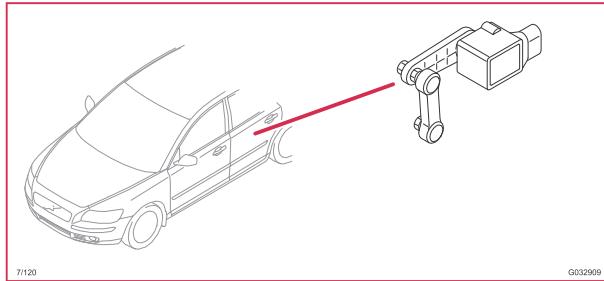


7/121 Angle sensor, Bi-Xenon front

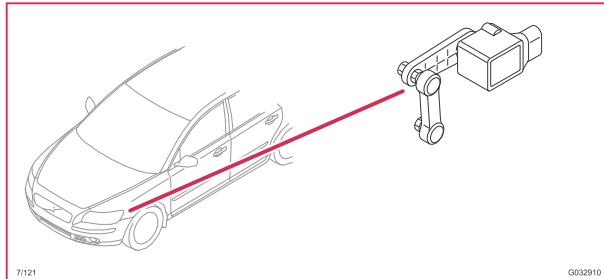


Component illustrations

7/122 - 7/158


7/122 Mass Movement Sensor module (MMS), front C70

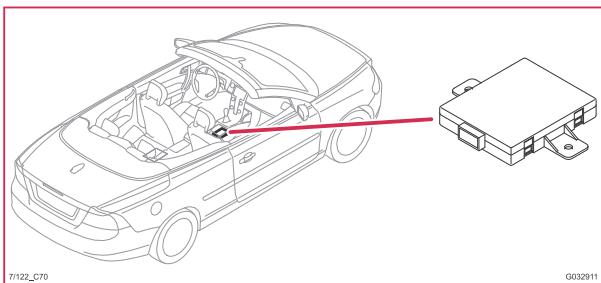


7/143 Sensor fuel level, pump side

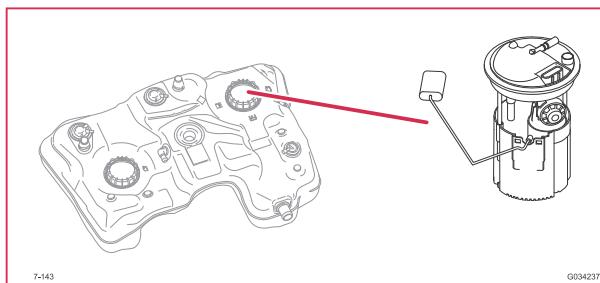


7/123 Clutch pedal sensor

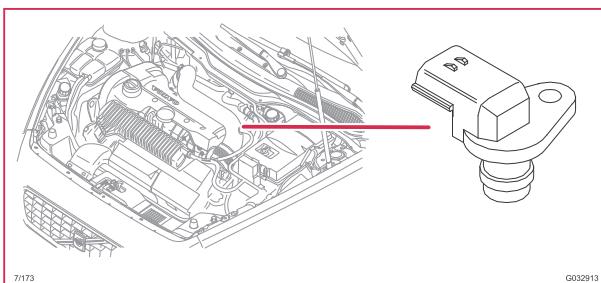


7/149 Rain Sensor Module (RSM)

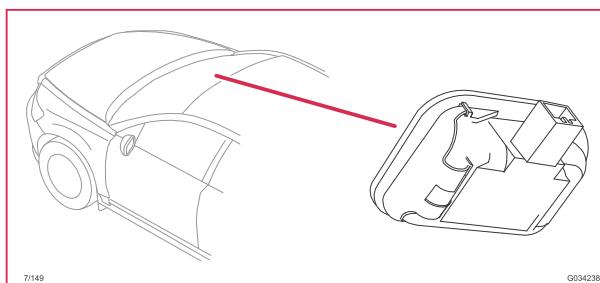


7/124 Sensor brake pedal

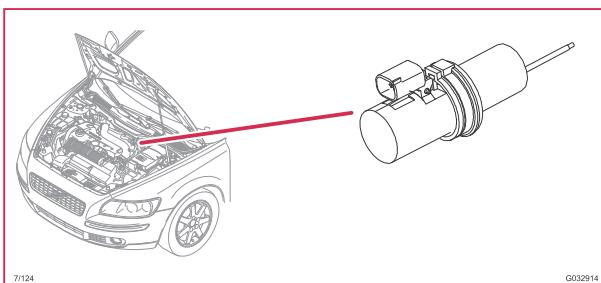


7/154 Sensor fuel temperature

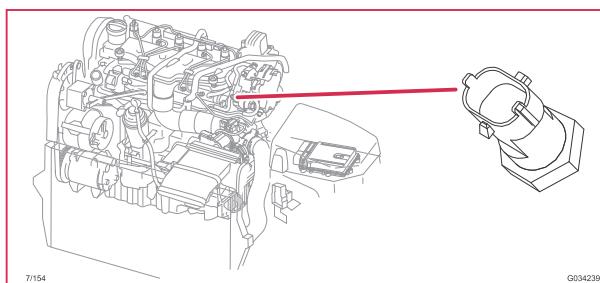

7/130 Fuel level sensor, ejector side

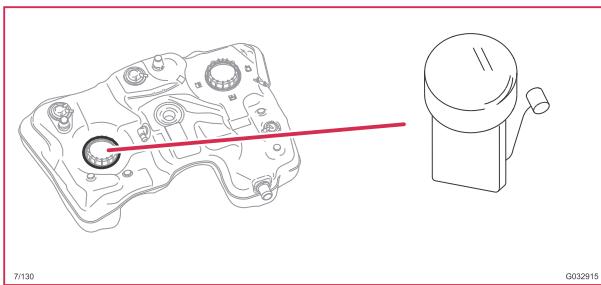


7/156 Pressure and temperature sensor fuel, Turbo

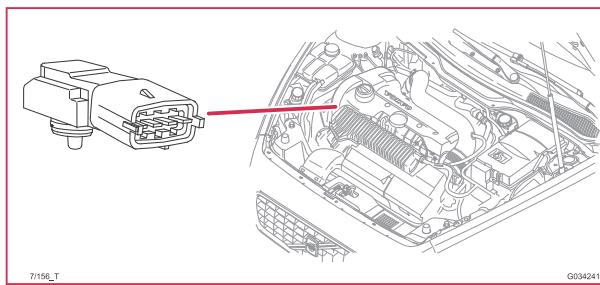


7/131-

7/134 Rear parking assistance sensor

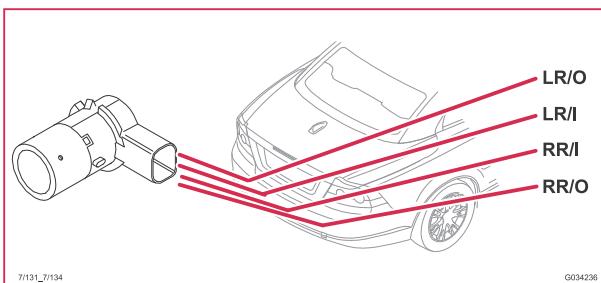


7/158 Rear mass movement sensor, C70

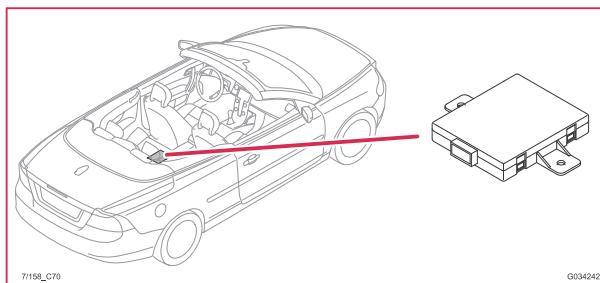


Component illustrations

7/159 - 7/173


7/159 Air Quality Sensor (AQS)

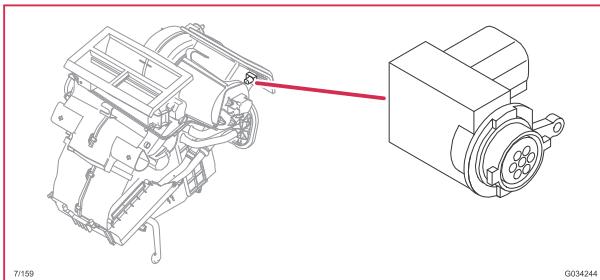


7/160 Brake vacuum sensor

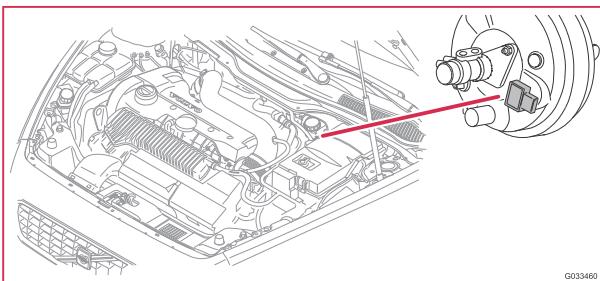


7/162 Pressure sensor, fuel line

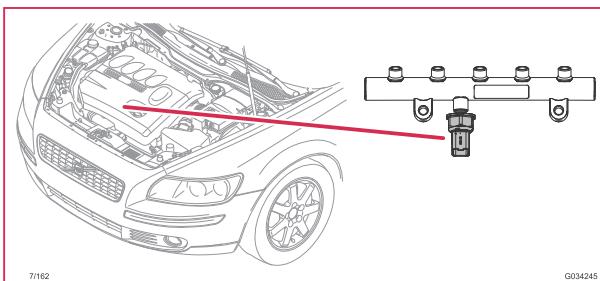


7/163 Camshaft position sensor 2

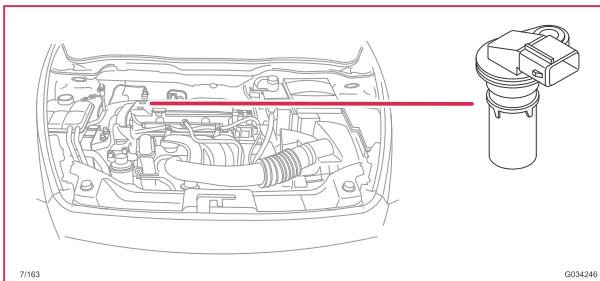


7/164 Body Sensor Cluster Stability Sensor (BSC)

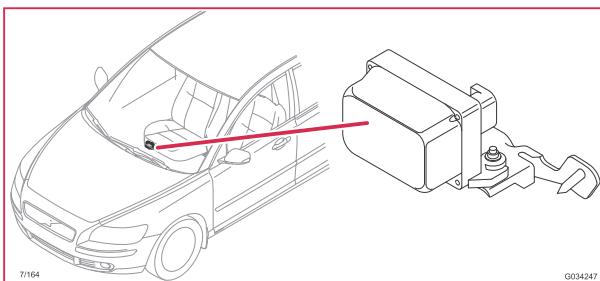


7/165 Pressure and temperature sensor, intake manifold

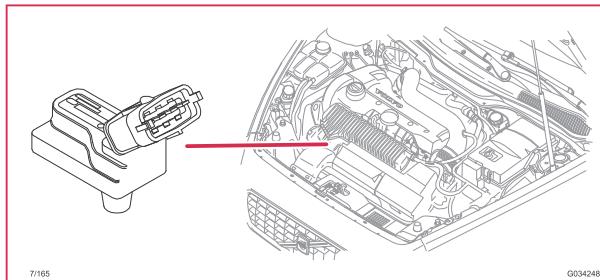


7/166 Oil level sensor

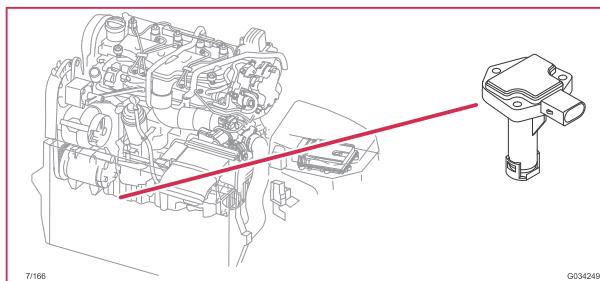


7/172 Position sensor camshaft, intake side, 5-Cyl.

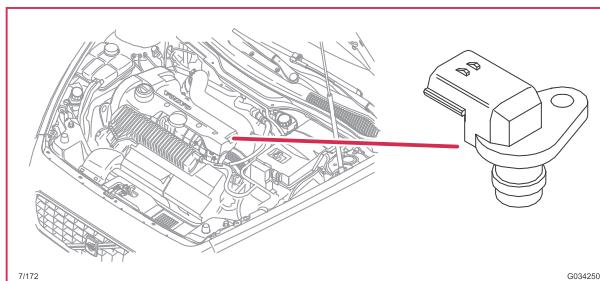

7/172 Position sensor camshaft, intake side, 4-Cyl. Diesel

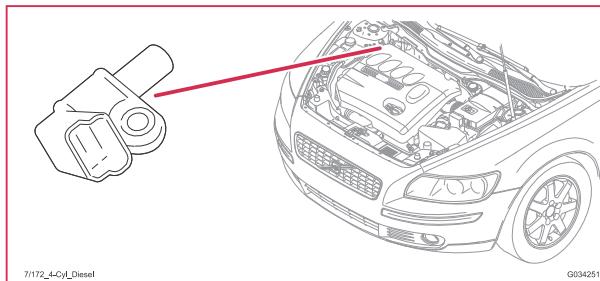


7/173 Camshaft position sensor, exhaust side, 5-Cyl.

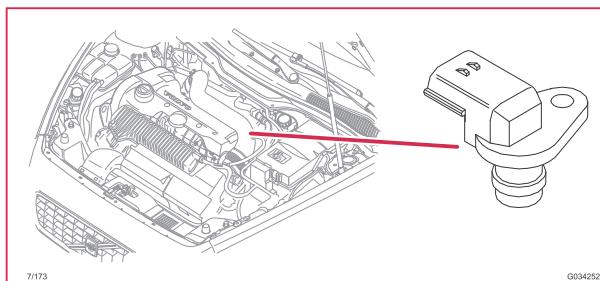


Component illustrations

7/173 - 7/195


7/173 Position sensor camshaft, outlet side, 5-Cyl. Diesel

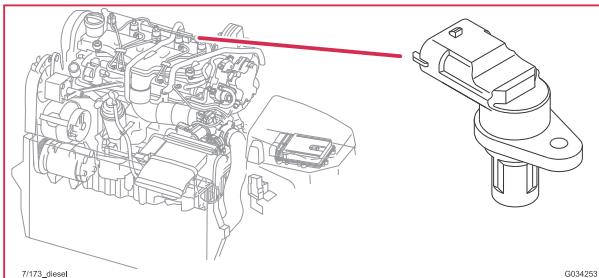


7/190 Temperature sensor, catalytic converter

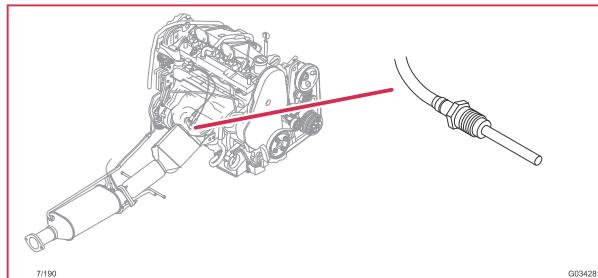


7/174 Differential pressure sensor, particle filter

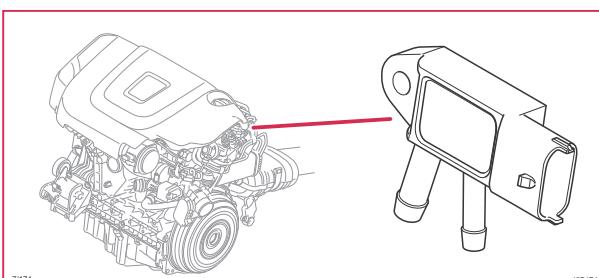


7/191 Temperature sensor, particle filter

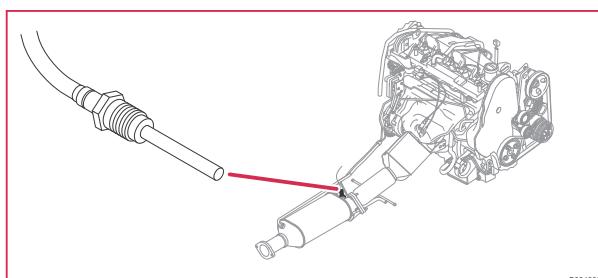


7/178 Front impact sensor, right

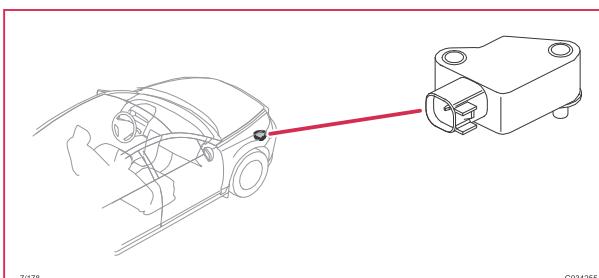


7/193 Position sensor turbo

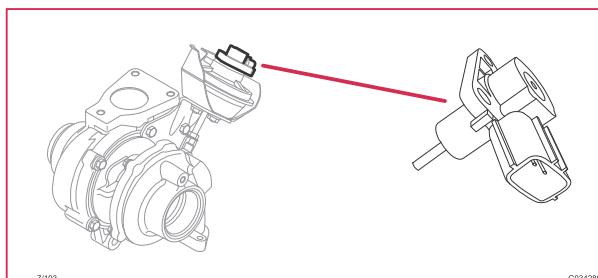


7/179 Front impact sensor, left

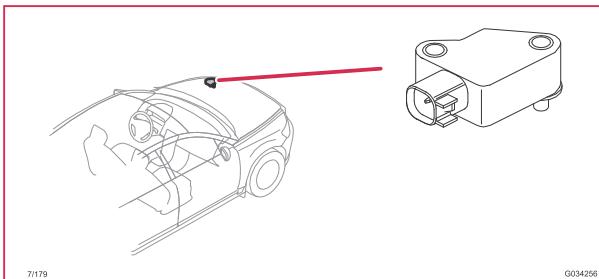


7/194 Belt retractor sensor, driver

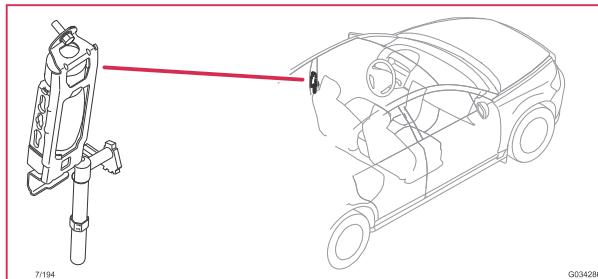

7/182 Remote control IR sensor, RTI

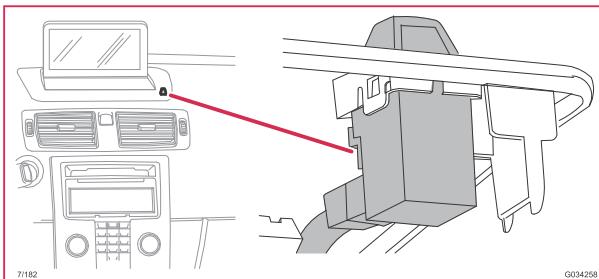


7/195 Belt retractor sensor, passenger

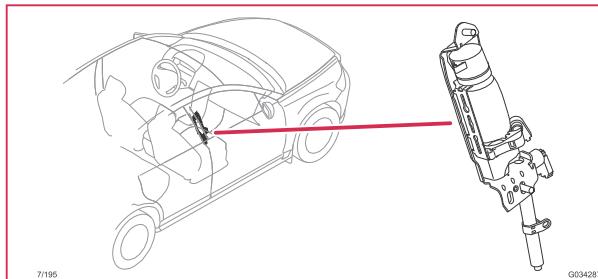


Component illustrations

7/198 - 7/228


7/198 Detector, windshield frame

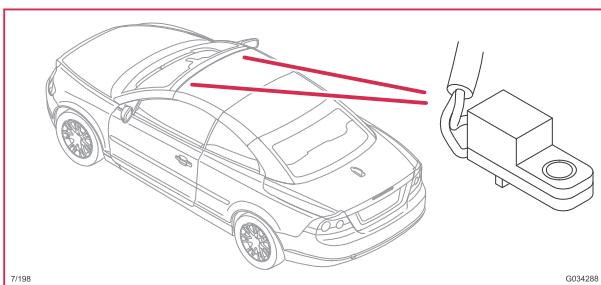

7/199 Ultrasonic sensor (IMS)

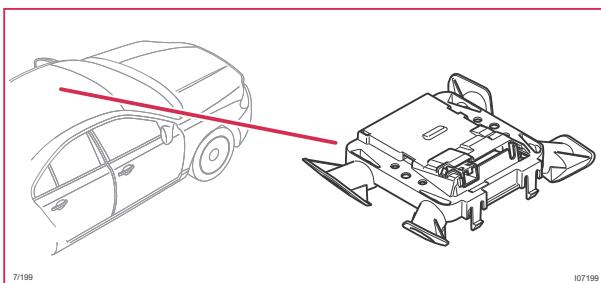


7/202 EGR bypass position sensor

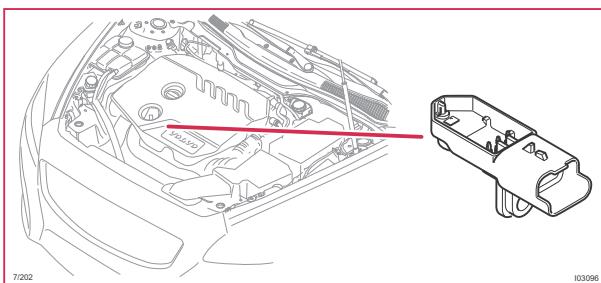


7/204-


7/207 Front parking assistance sensor

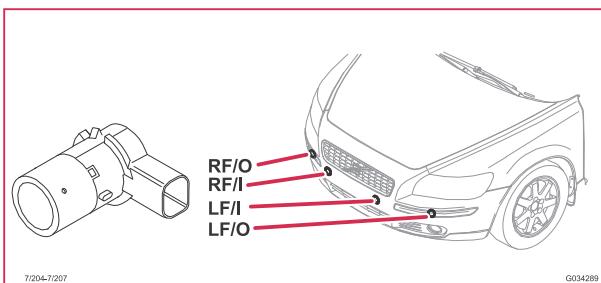


7/220 Hall sensor cargo compartment

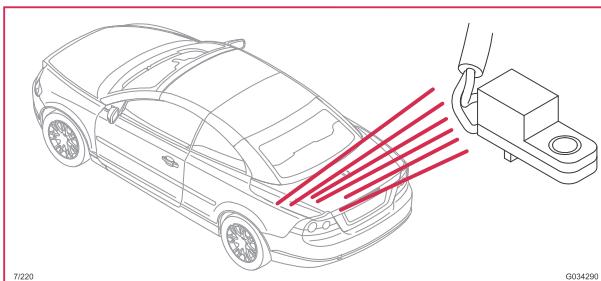


7/221 Position sensor, rear roof section

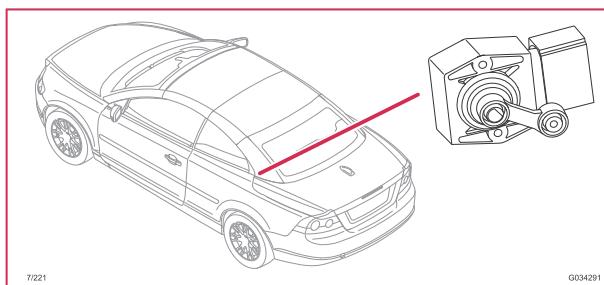


7/222 Position sensor, front roof section

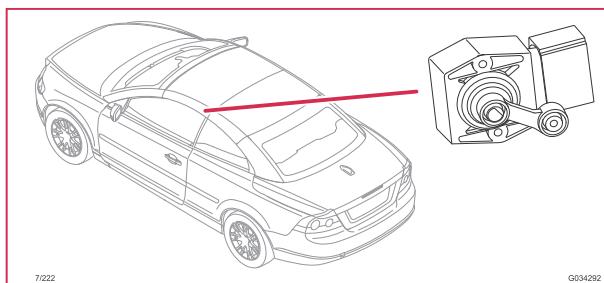


7/223 Detector, cargo compartment

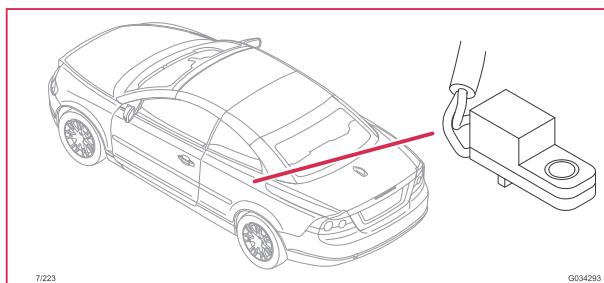

7/224 Hall sensor roof

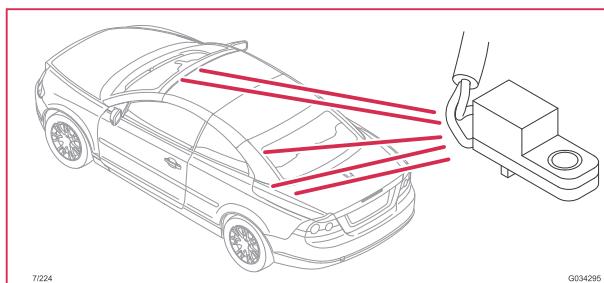


7/228 Side impact sensor, left door, C30/C70

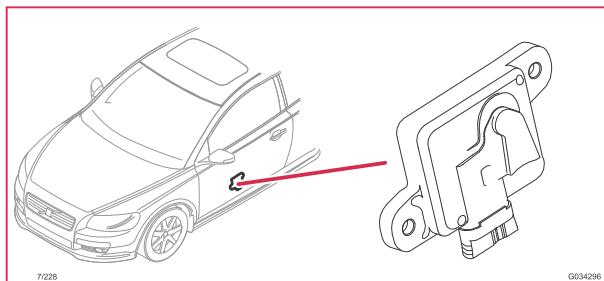


Component illustrations

7/229 - 8/18


7/229 Side impact sensor, right door, C30/C70

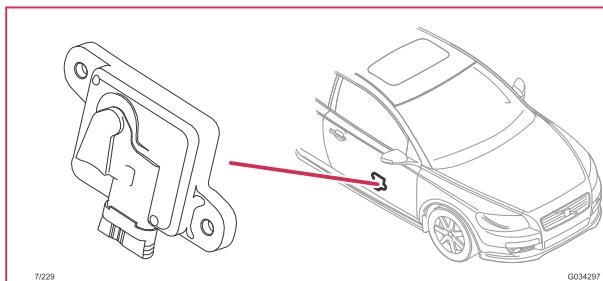


7/230 Sensor, folding of backrest

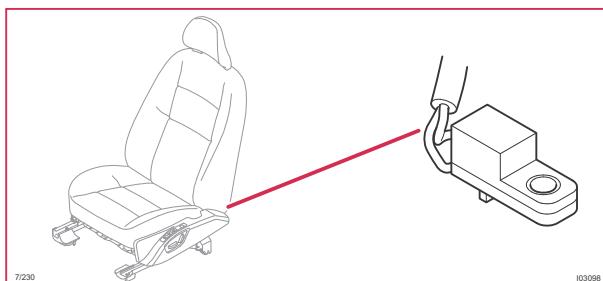


7/231 Sensor, folding of backrest

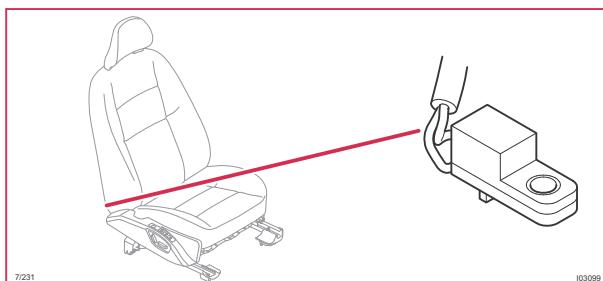


7/238 Alcolock sensor

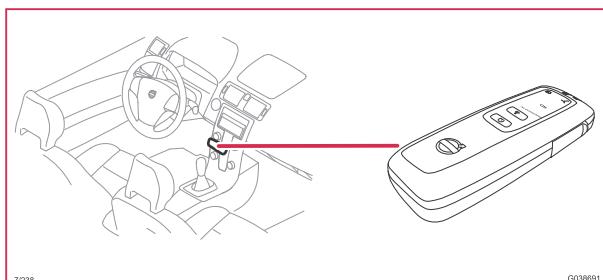


7/240 Sensor battery monitoring

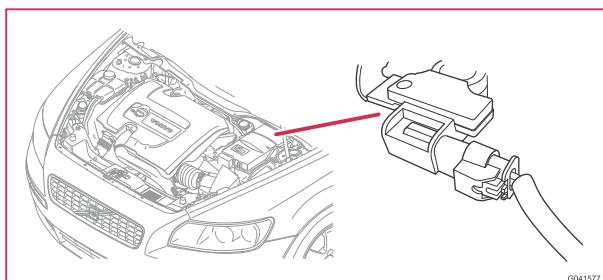


7/243 Gear position sensor neutral position

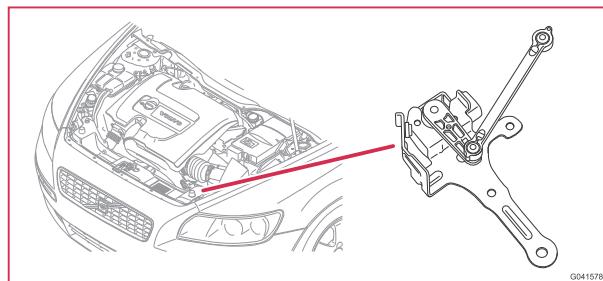


7/251 Brake vacuum sensor

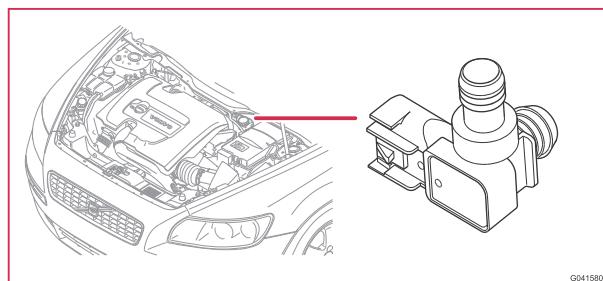


8/3 Electromagnetic clutch, climate control system

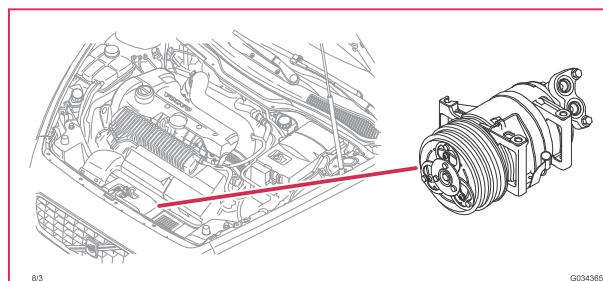

8/6-10 Injection valves

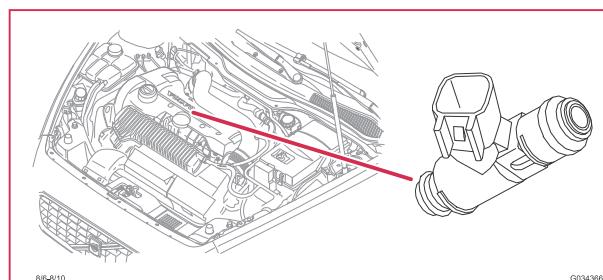


8/18 EVAP valve

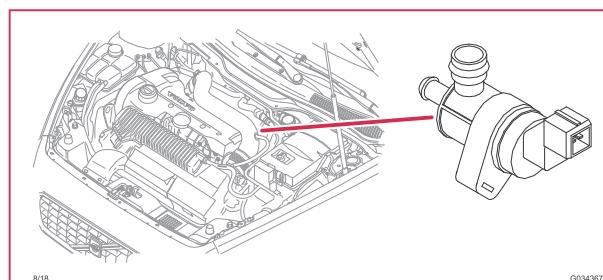


Component illustrations

8/19 - 8/38


8/19 Solenoid, variable valve timing, intake

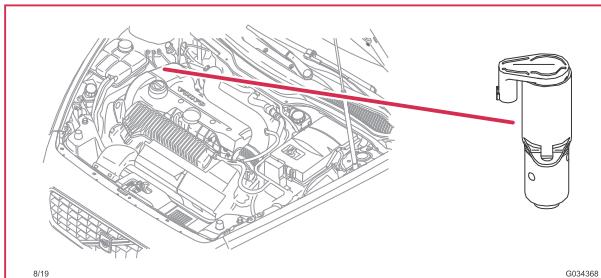


8/28 Turbo control valve

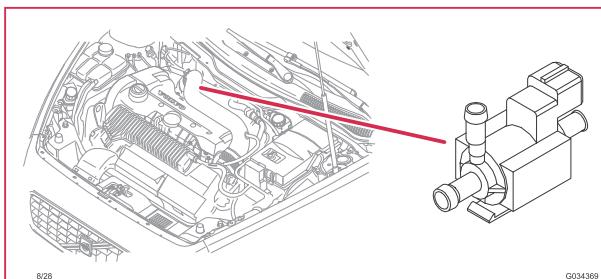


8/30 Airbag igniter, driver's side

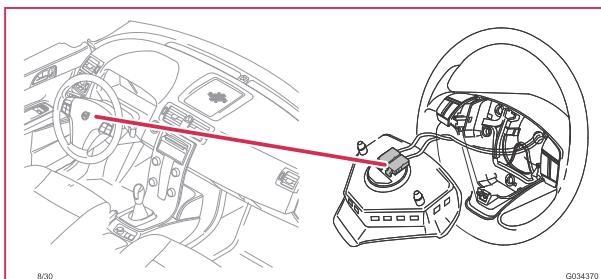


8/31 Airbag igniter, passenger side

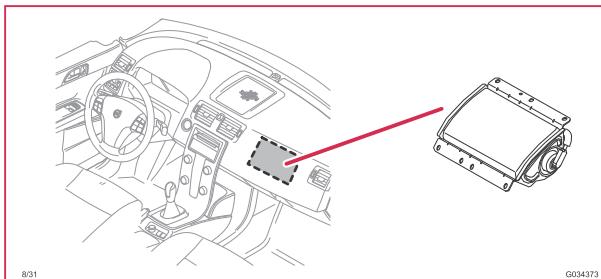


8/32 Igniter, airbag stage 2, passenger side

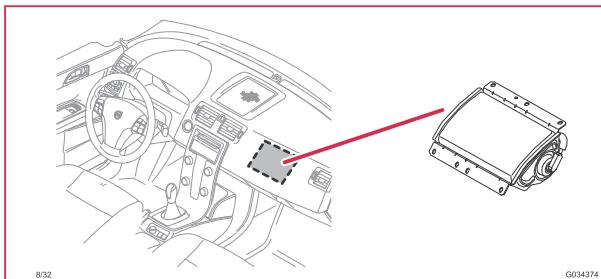


8/33 Igniter, belt tensioner, driver's side

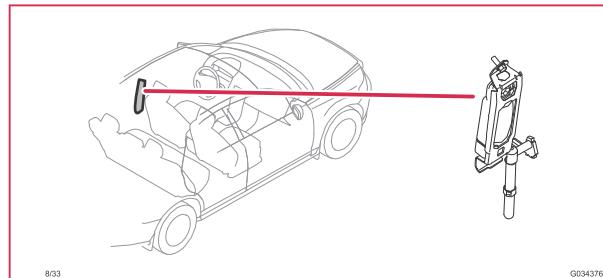


8/34 Igniter, belt tensioner, passenger side

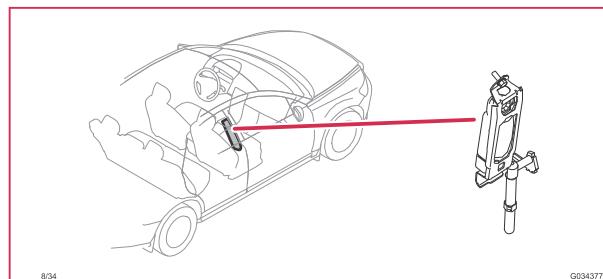


8/36 Solenoid shift lock

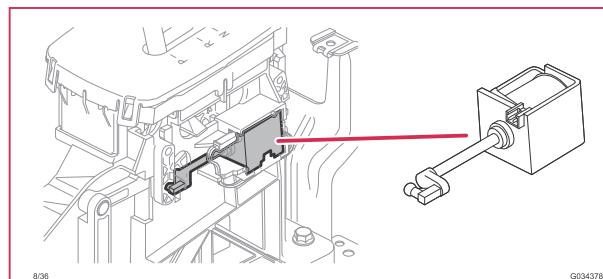

8/37 Automatic transmission

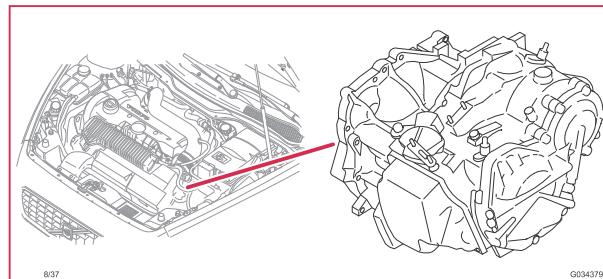


8/38 Shift solenoid 1

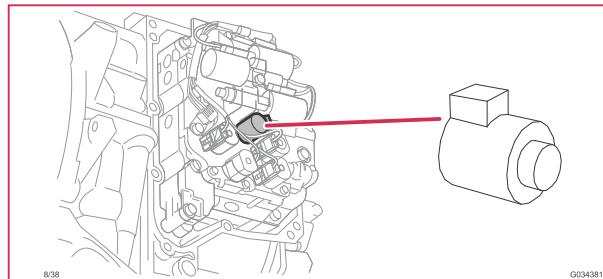

Component illustrations

8/39 - 8/57


8/39 Shift solenoid 2

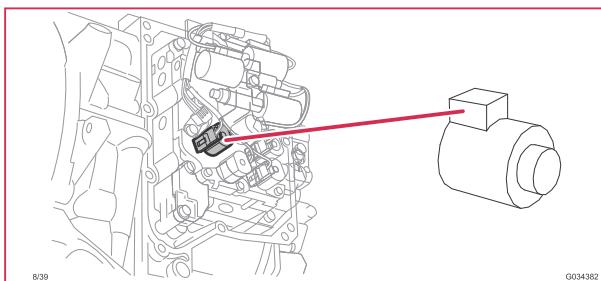

8/39

G034382


8/51 Igniter side airbag, driver's side

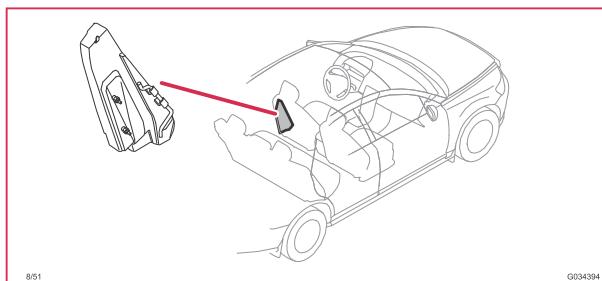

8/51

G034394


8/40 Lock-up solenoid

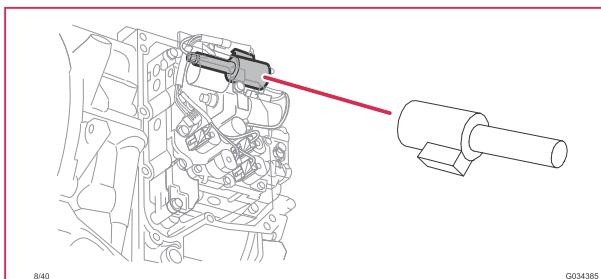

8/40

G034385


8/52 Igniter side airbag, passenger side

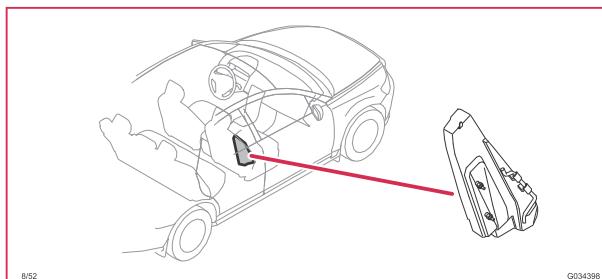

8/52

G034395


8/41 Pressure solenoid

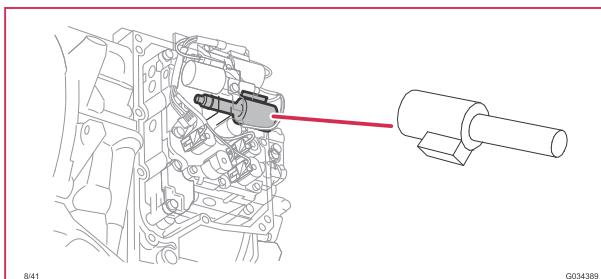

8/41

G034389


8/55 Igniter, rear left belt tensioner

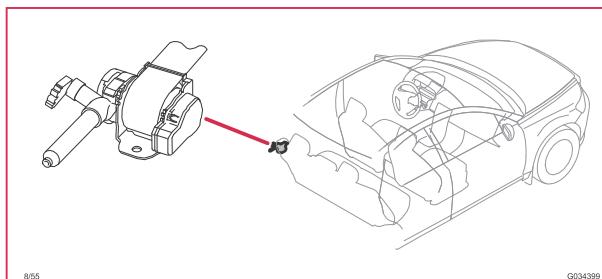

8/55

G034399


8/45 Solenoid, variable valve timing, intake

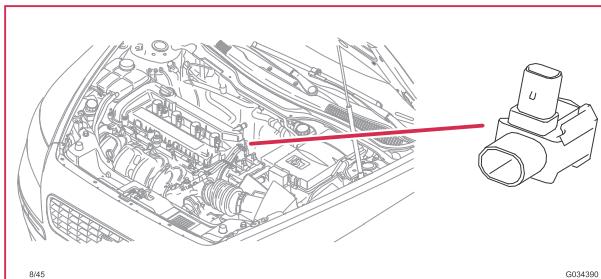

8/45

G034390


8/56 Igniter, rear right belt tensioner

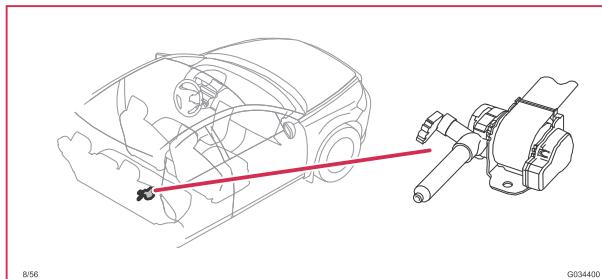

8/56

G034400


8/48 Auto-dimming rearview mirror

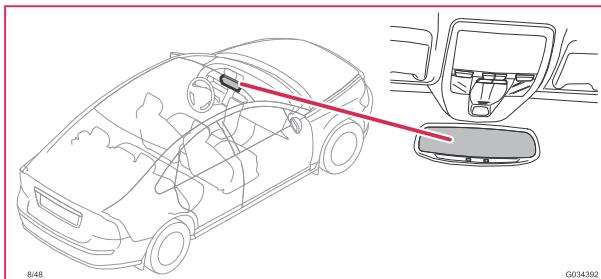

8/48

G034392

8/57 Igniter, left anti-roll bar

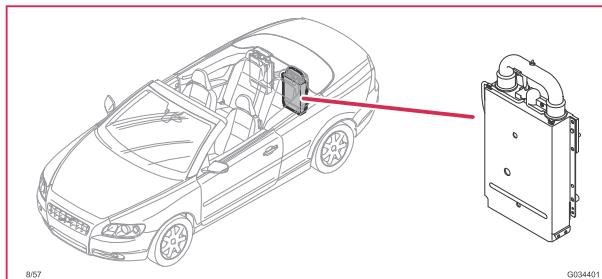


8/57

G034401

Component illustrations

8/58 - 8/74


8/58 Igniter, right anti-roll bar

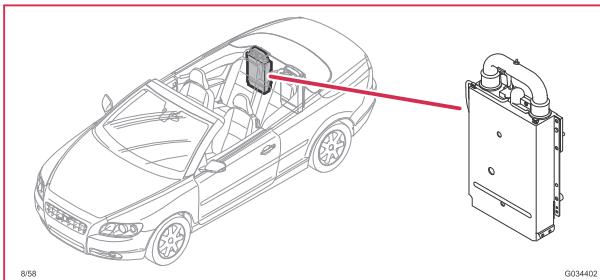

8/58

G034402


8/67 Igniter, right inflatable curtain, C70

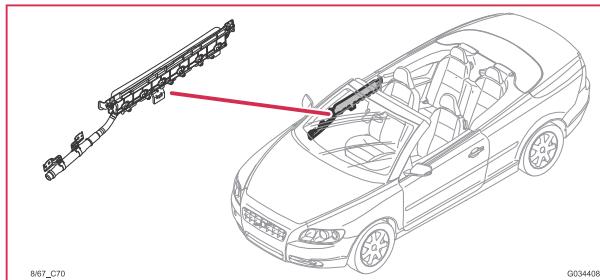

8/67_C70

G034408


8/61 Driver's side airbag igniter, stage 2

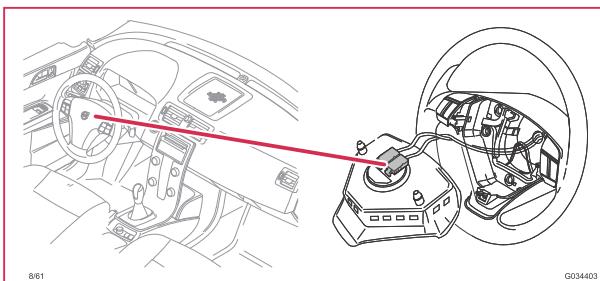

8/61

G034403


8/71 Throttle solenoid

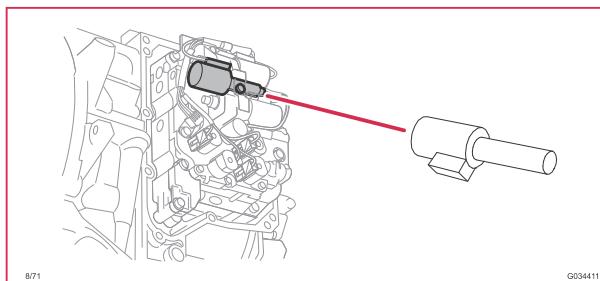

8/71

G034411


8/66 Igniter, left inflatable curtain, S40/V50

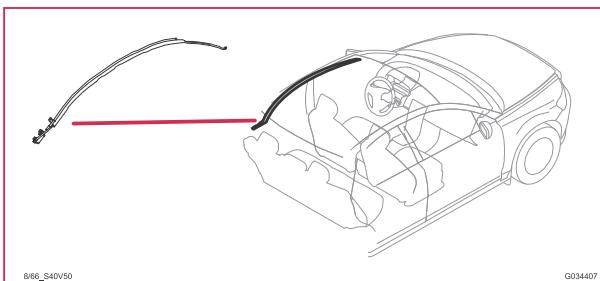

8/66_S40V50

G034407


8/72 Shift solenoid 3

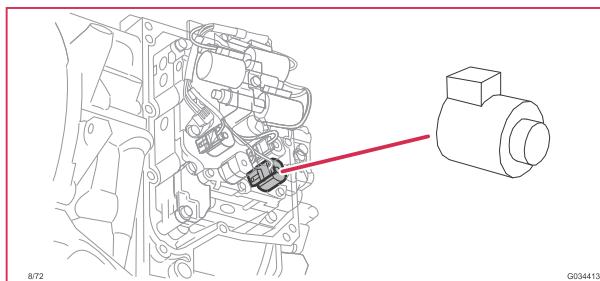

8/72

G034413


8/66 Igniter, left inflatable curtain, C70

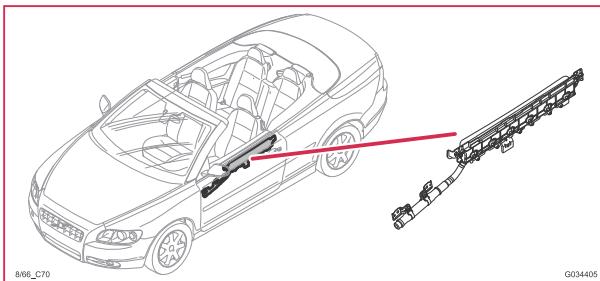

8/66_C70

G034405


8/73 Shift solenoid 4

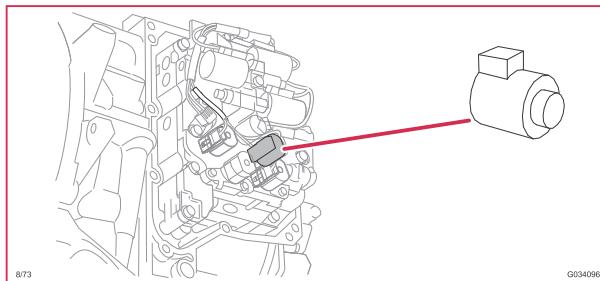

8/73

G034096


8/67 Igniter, right inflatable curtain, S40/V50

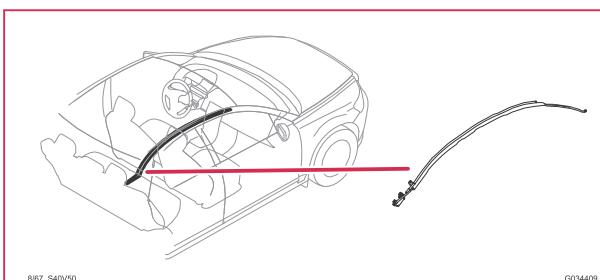

8/67_S40V50

G034409

8/74 Shift solenoid 5

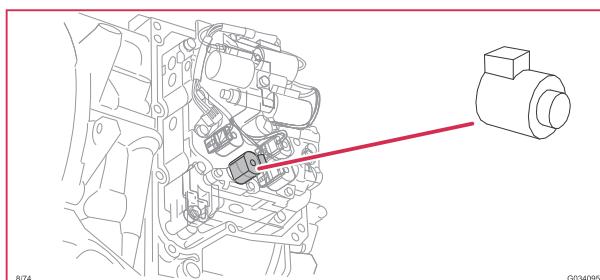


8/74

G034095


Component illustrations

8/81 - 8/120


8/81 Solenoid, variable valve timing, exhaust

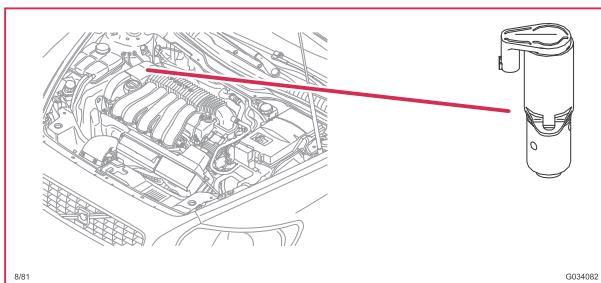


8/111 Control valve fuel flow

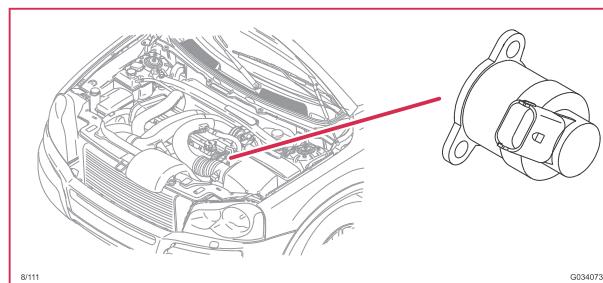


8/84 Switch, vacuum pump

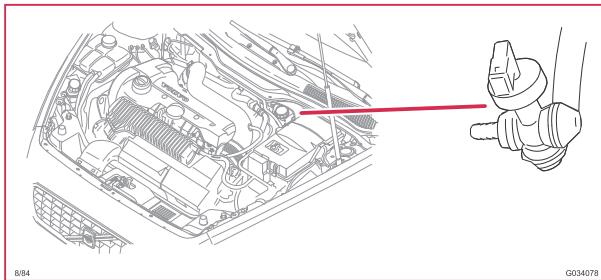


8/113 EGR bypass valve

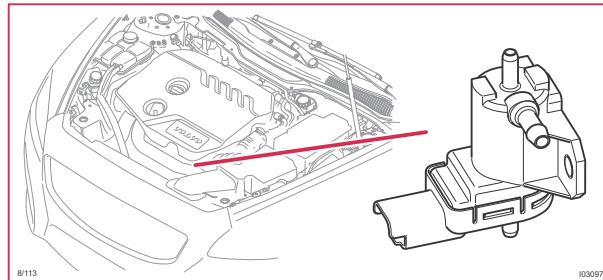


8/92 Lap belt tensioner, driver

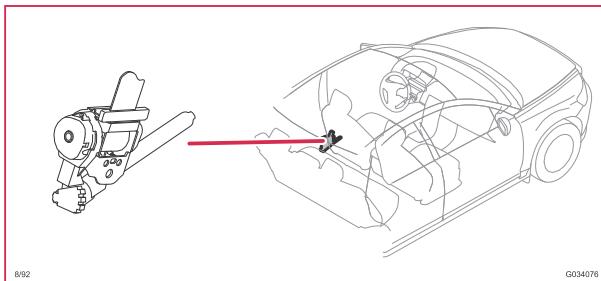


8/114 Valve mixing air/fuel

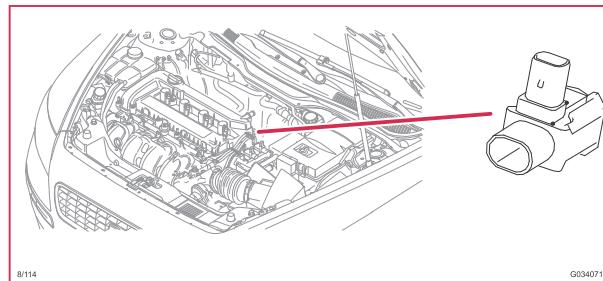


8/98 Control valve fuel pressure

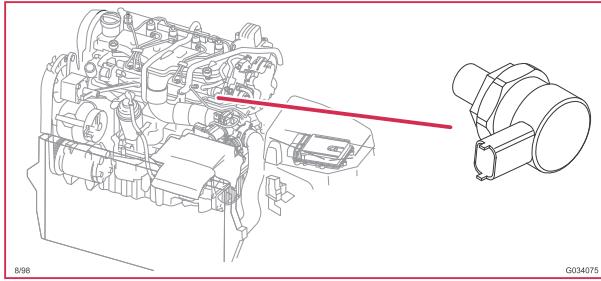


8/119 Pressure monitor, climate control system

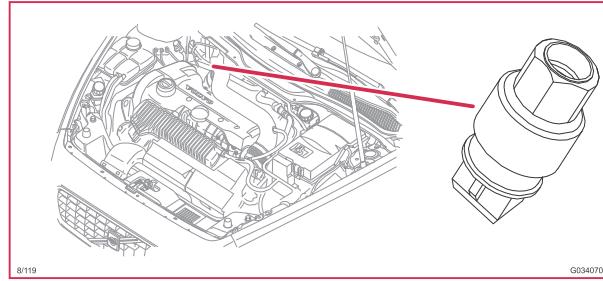

8/99 Steering column igniter

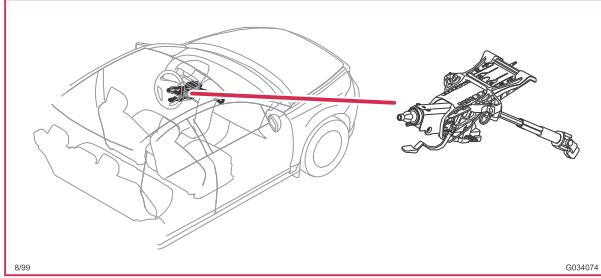


8/120 EGR valve, 4 Cyl.

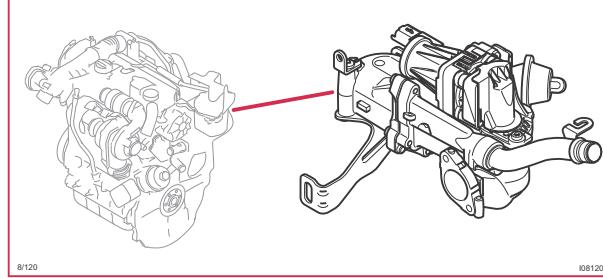


Component illustrations

8/120 - 9/16


8/120 EGR valve, 5 Cyl.

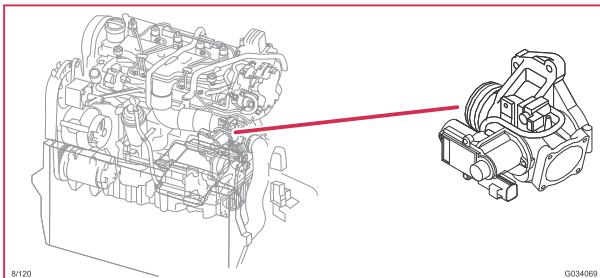


8/127 Pressure switch, climate control system

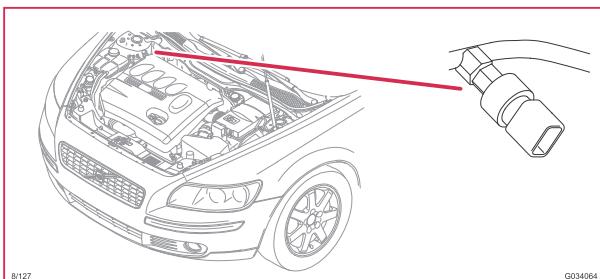


8/128 Driver's belt force limiter

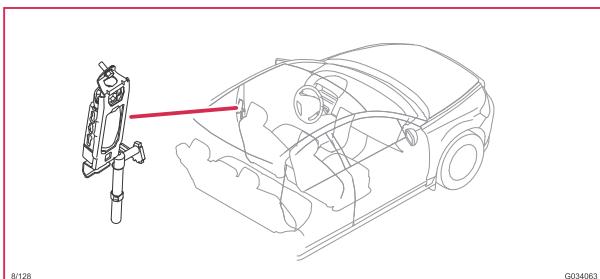


8/129 Passenger belt force limiter

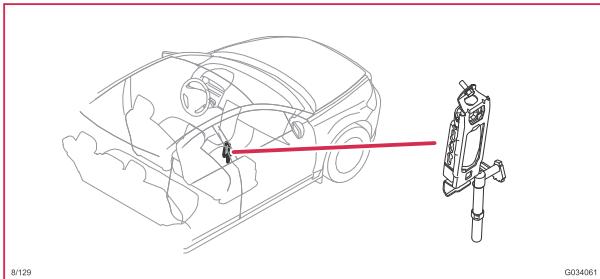


8/134 Solenoid, reverse interlock, manual

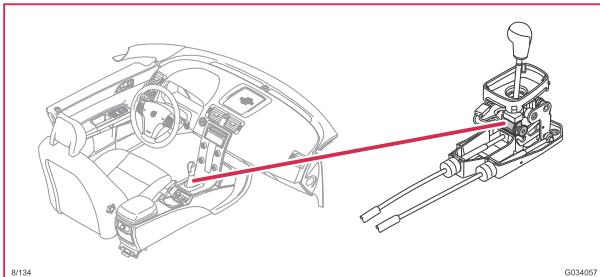


9/1 Front 12V outlet

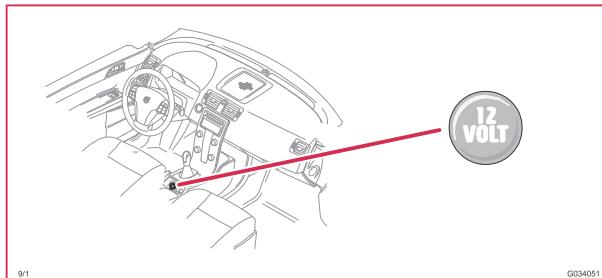


9/2 Heated rear window

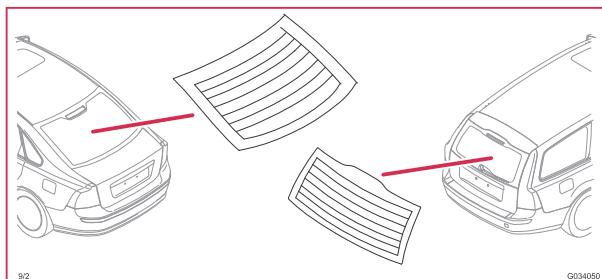


9/12 Seat Heating Module (SHM), driver's side

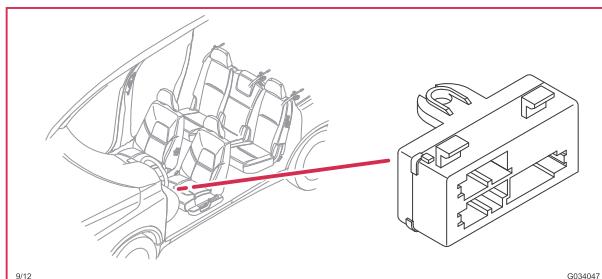

9/13 Seat Heating Module (SHM), passenger side

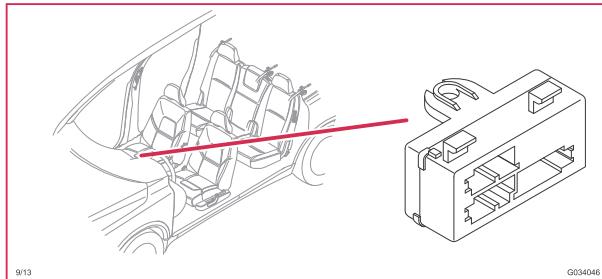


9/16 Heating element, driver's seat backrest

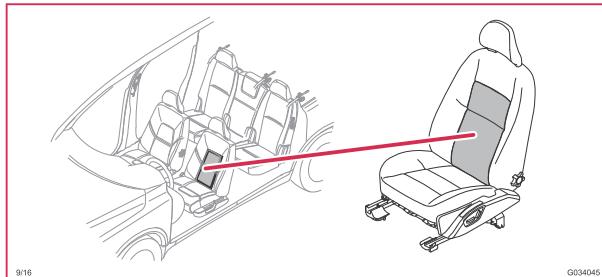


Component illustrations

9/17 - 9/41


9/17 Heating element, passenger seat backrest

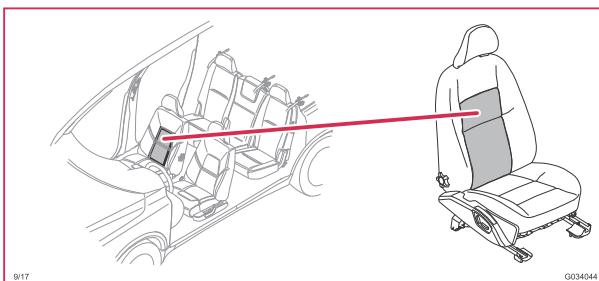


9/18 Heating element, driver's seat cushion

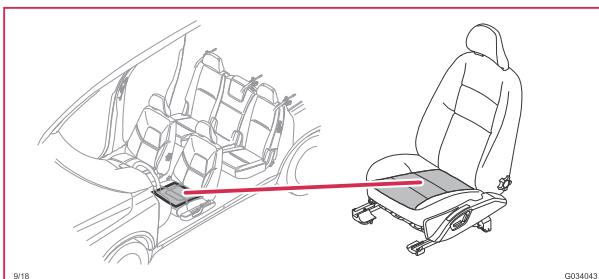


9/19 Heating element, passenger seat cushion

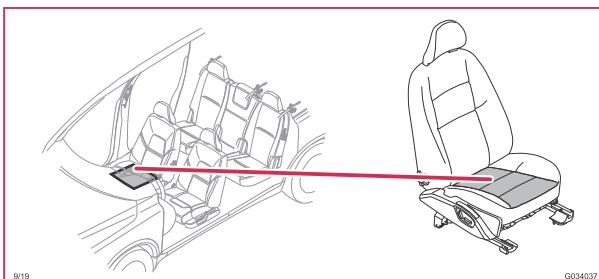


9/25 Rear 12V outlet

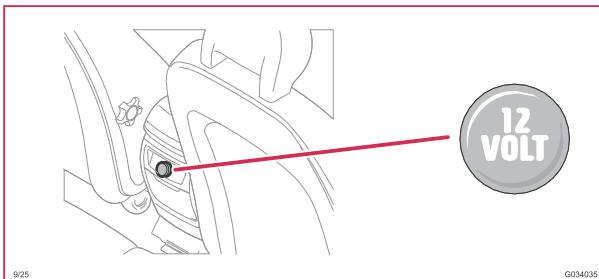


9/30 Auxiliary heater

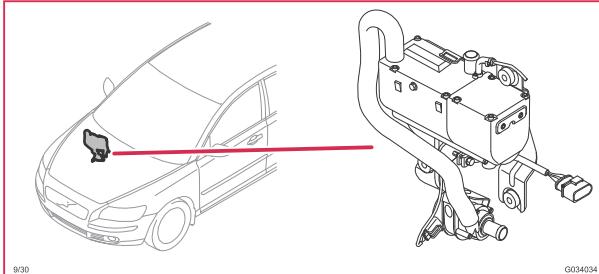


9/32 PTC resistor, crankcase ventilation

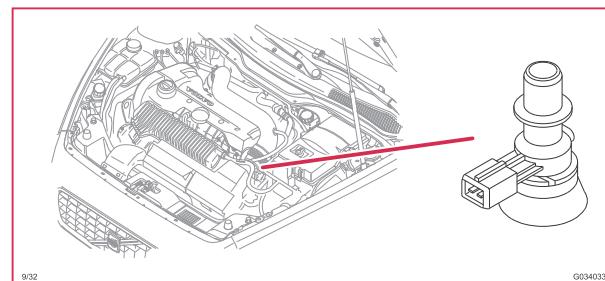


9/33 Electrically heated rear-view mirror, driver's door

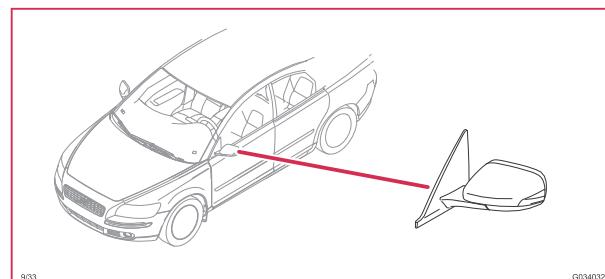


9/34 Electrically heated rear-view mirror, passenger door

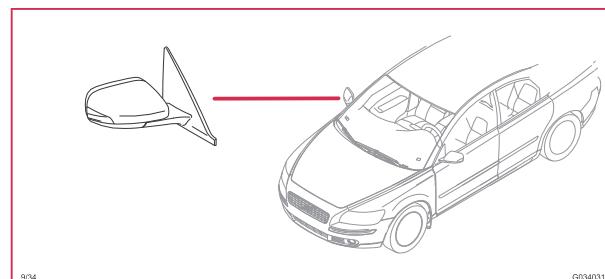

9/38 Electrically heated fuel filter

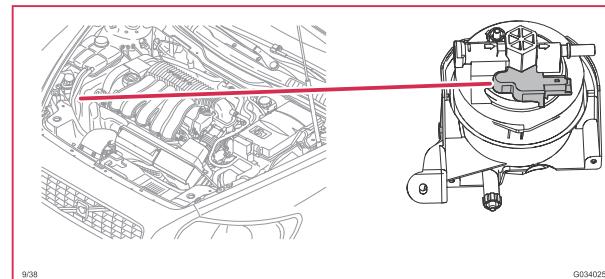


9/41 PTC-element

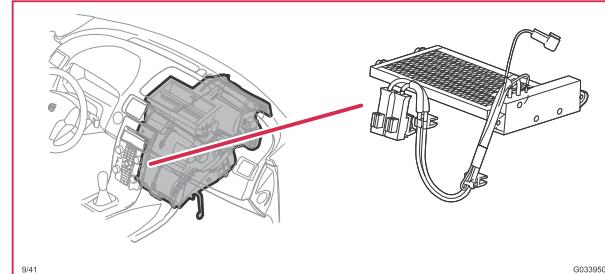


Component illustrations

9/41.1 - 10/14


9/41.1 Electric engine heater

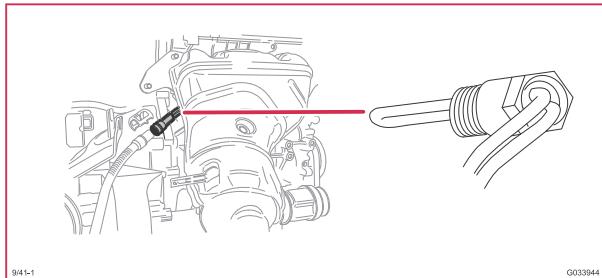


10/1 Lamp housing, front left

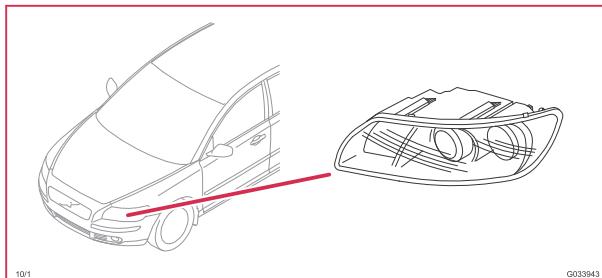


10/2 Lamp housing, front right

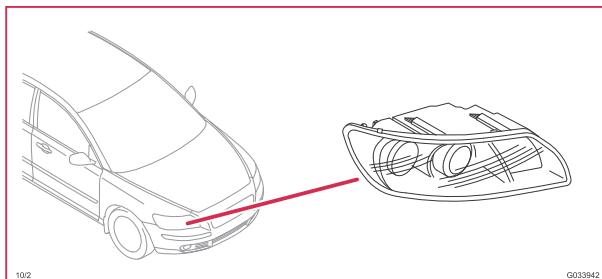


10/3 License plate lighting

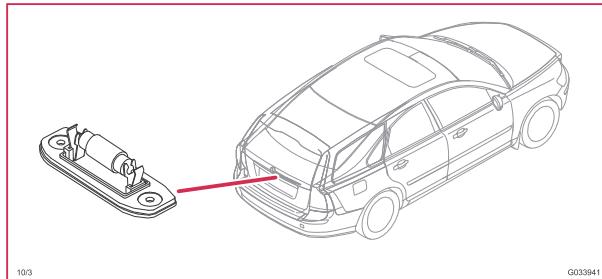


10/5 Fog light, front left

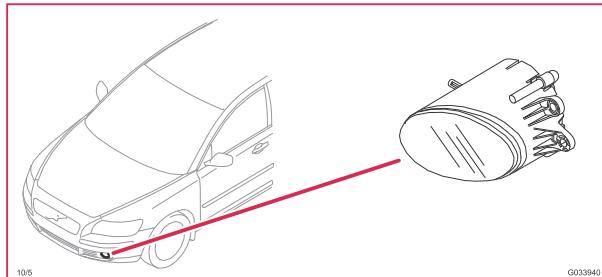


10/6 Fog light, front right

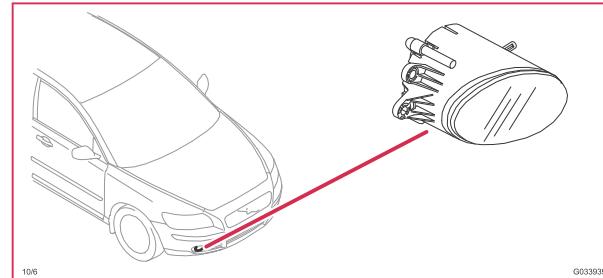


10/11 Front left running/parking light

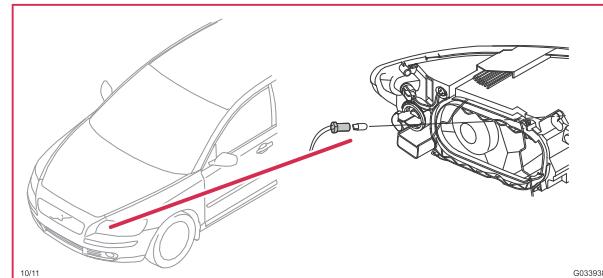


10/12 Front right running/parking light

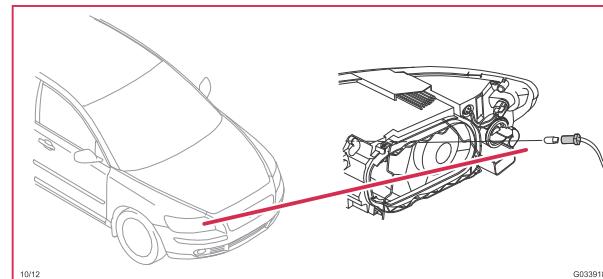

10/13 Front left direction indicator

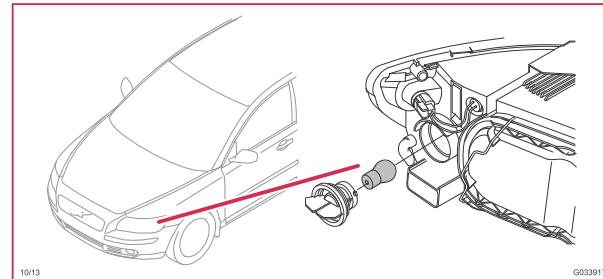


10/14 Front right direction indicator

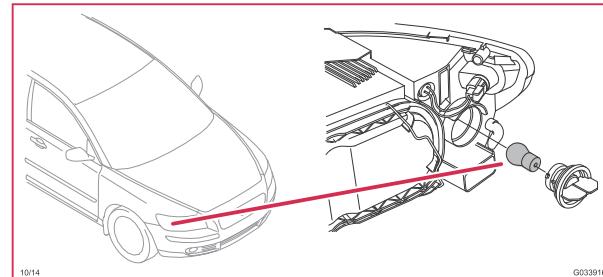


Component illustrations

10/14 - 10/19


10/14 Direction indicator, rear-view mirror
driver's door

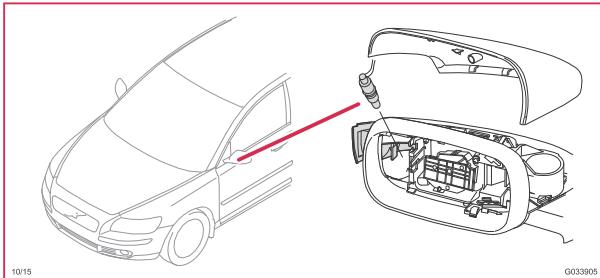


10/16 Direction indicator, passenger door
mirror

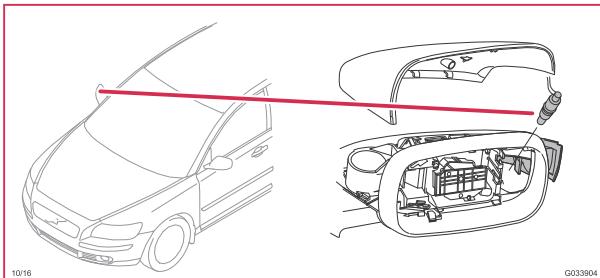


10/17 Lamp housing, rear right, C30

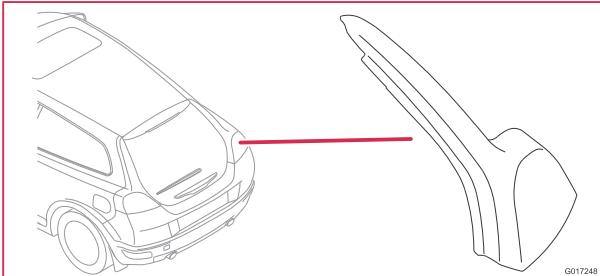


10/17 Lamp housing, rear right, S40/V50

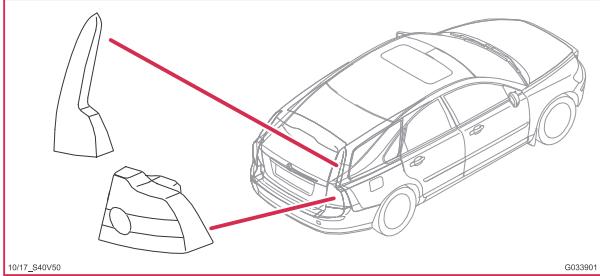


10/17 Lamp housing, rear right, C70

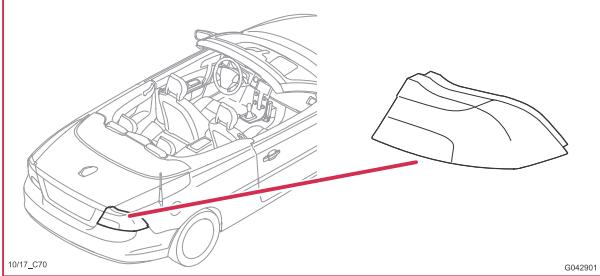


10/18 Lamp housing, rear left, C30

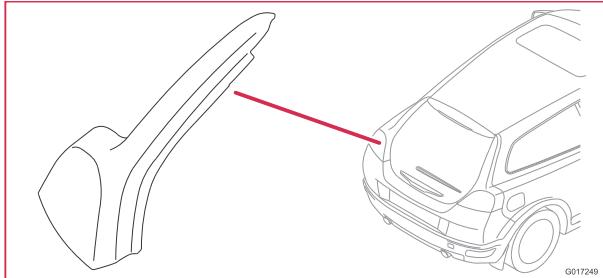


10/18 Lamp housing, rear left, S40/V50

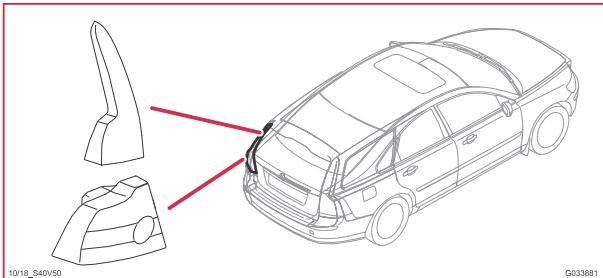


10/18 Lamp housing, rear left, C70

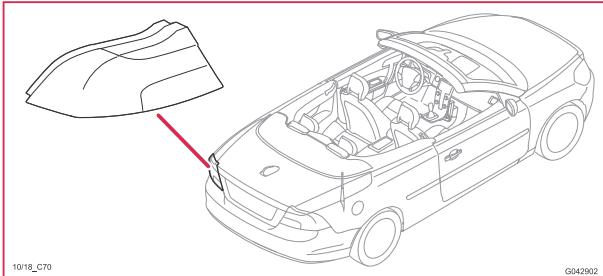

10/19 Auxiliary brake lights, C30

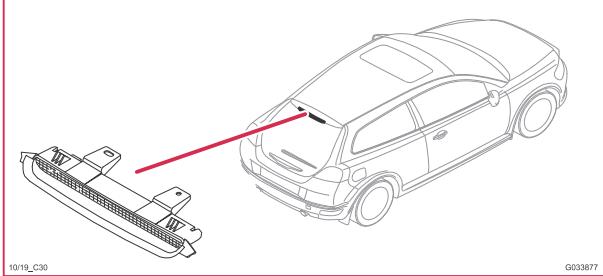


10/19 Auxiliary brake light, S40/V50

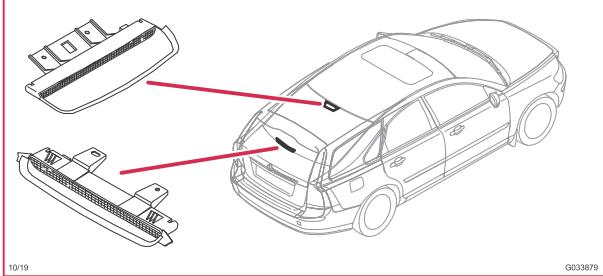

Component illustrations

10/19 - 10/43


10/19 Auxiliary brake lights, C70

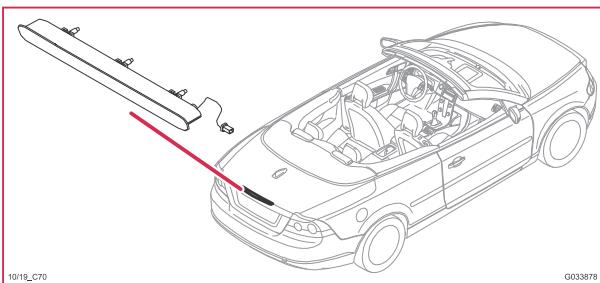

10/19_C70

G033878


10/25 Cargo compartment lighting

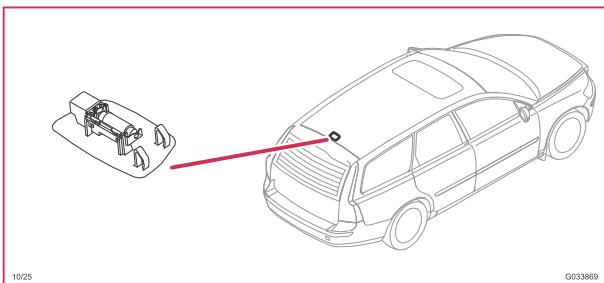

10/25

G033869


10/22 Ceiling light

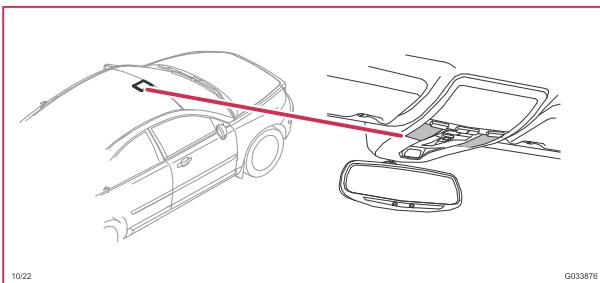

10/22

G033878


10/26 Reading light, rear left

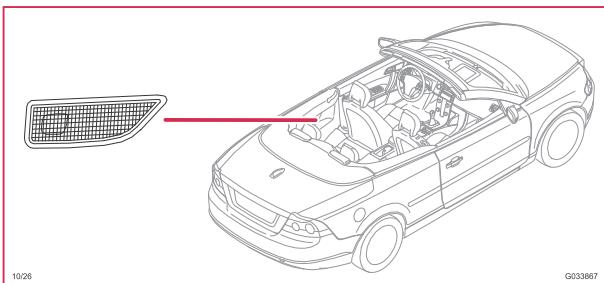

10/26

G033867


10/24 Cargo compartment lighting, C30

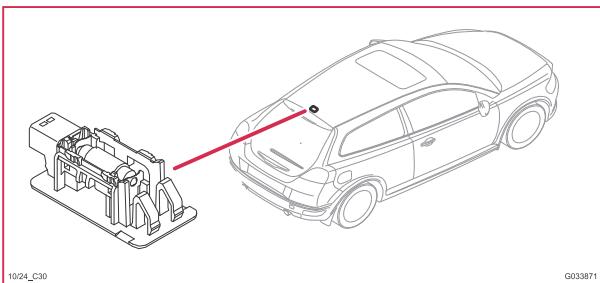

10/24_C30

G033871


10/27 Reading light, rear right

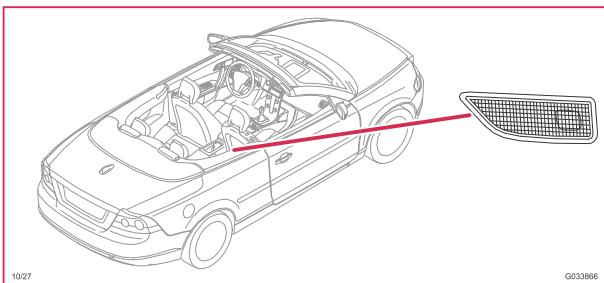

10/27

G033866


10/24 Cargo compartment lighting, S40

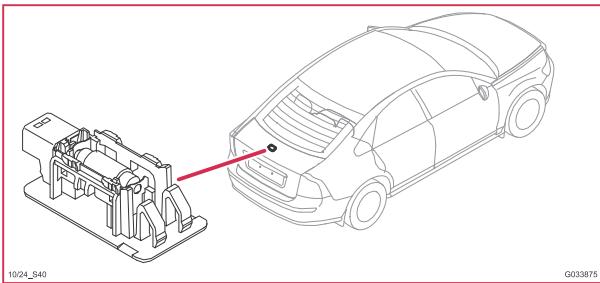

10/24_S40

G033873


10/29 Glove compartment lighting

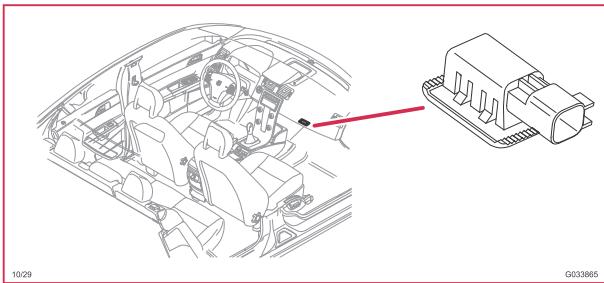

10/29

G033865


10/24 Cargo compartment lighting, C70

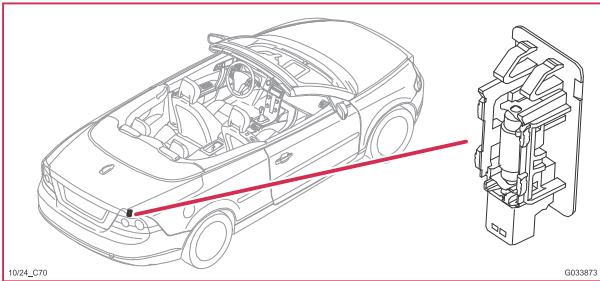

10/24_C70

G033873

10/43 Right brake light, C30

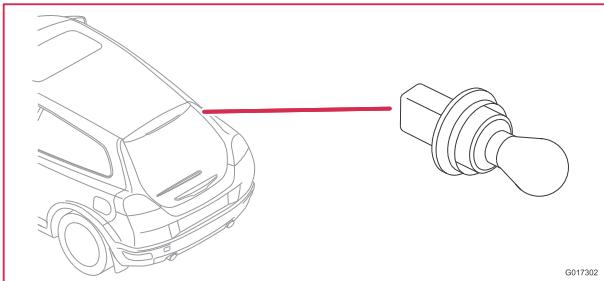


G017302


Component illustrations

10/43 - 10/46


10/43 Right brake light, S40/V50

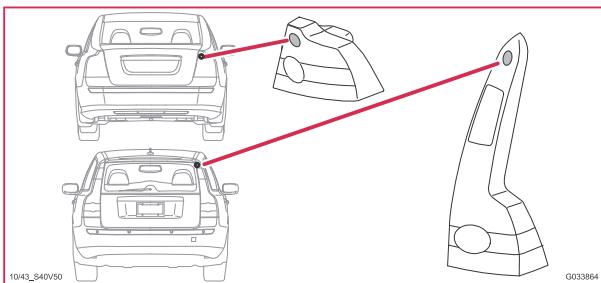


10/45 Right tail light 2, C30

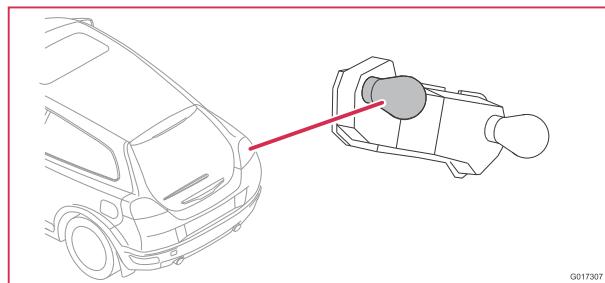


10/43 Right brake light, C70

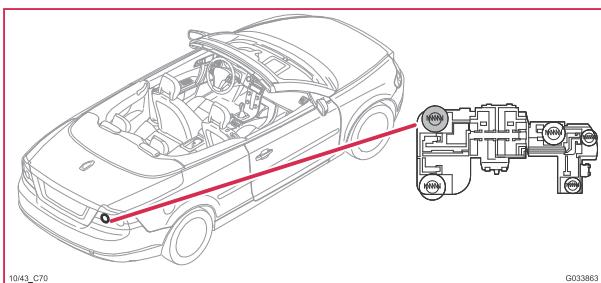


10/45 Right tail light 2, S40/V50

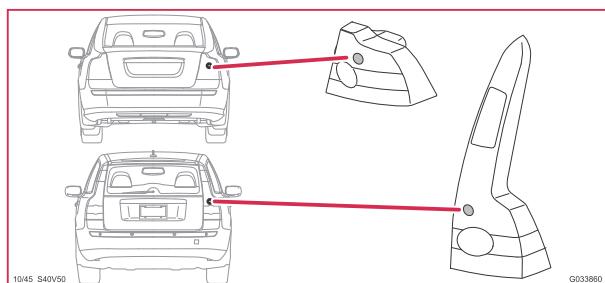


10/44 Right tail light 1, C30

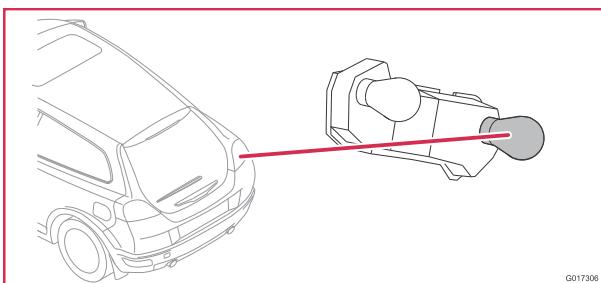


10/45 Right tail light 2, C70

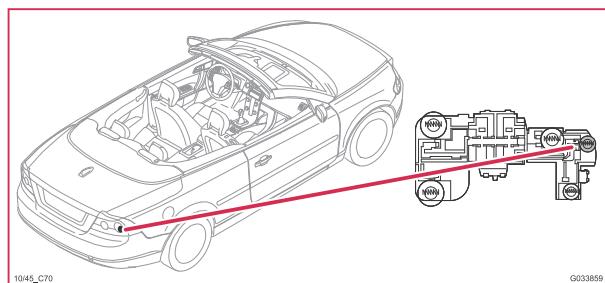


10/44 Right tail light 1, S40/V50

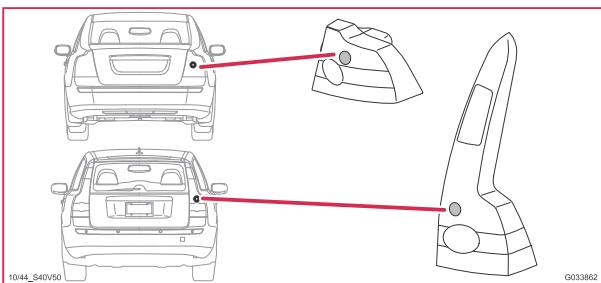


10/46 Right rear fog light, C30

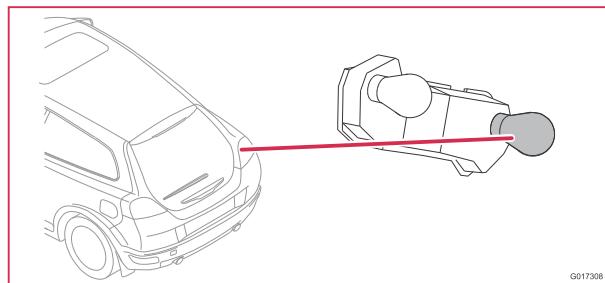

10/44 Right tail light 1, C70

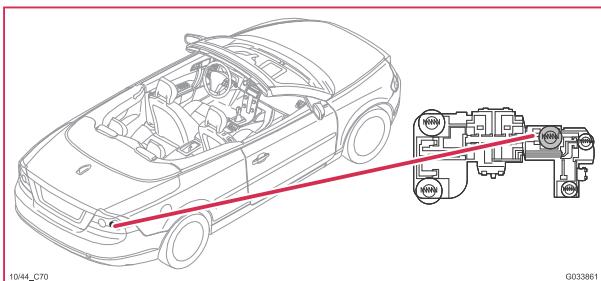


10/46 Right rear fog light, S40/V50

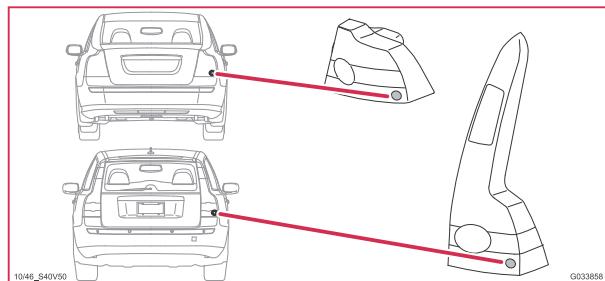


Component illustrations

10/46 - 10/50


10/46 Right rear fog light, C70

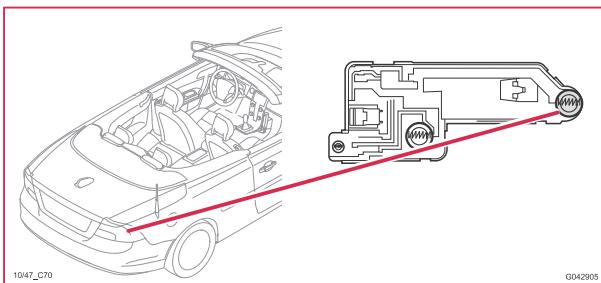


10/48 Right reversing light, S40/V50

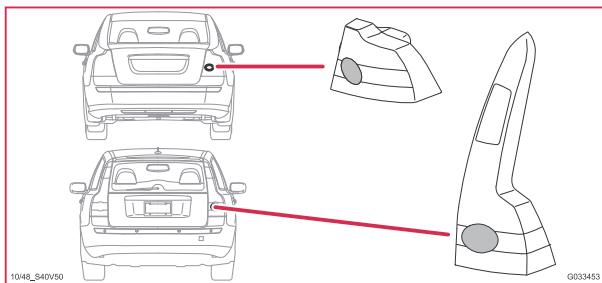


10/47 Right rear direction indicator, C30

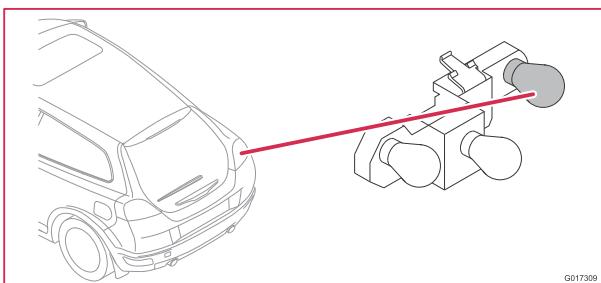


10/48 Right reversing light, C70

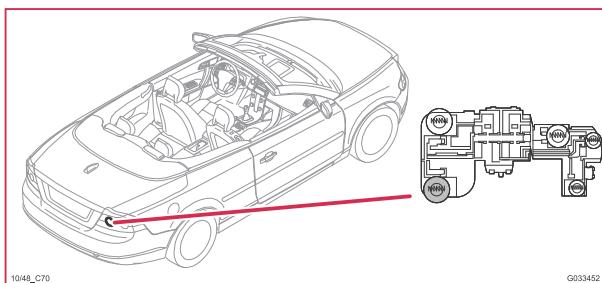


10/47 Right rear direction indicator, S40/V50

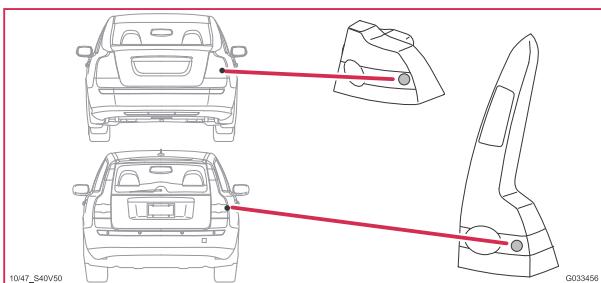


10/50 Left brake light, C30

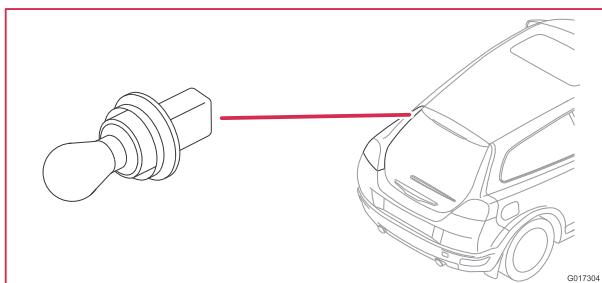


10/47 Right rear direction indicator, C70

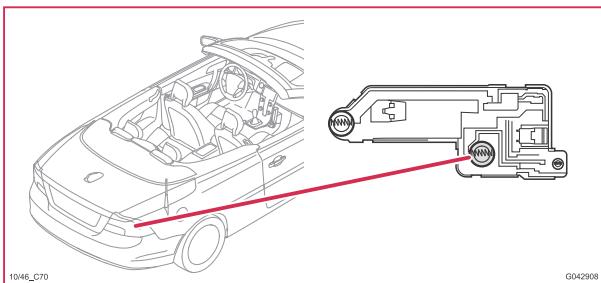


10/50 Left brake light, S40/V50

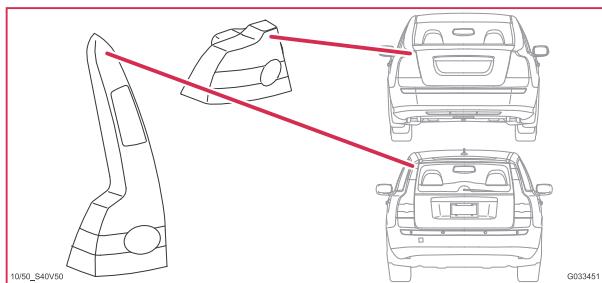

10/48 Right reversing light, C30

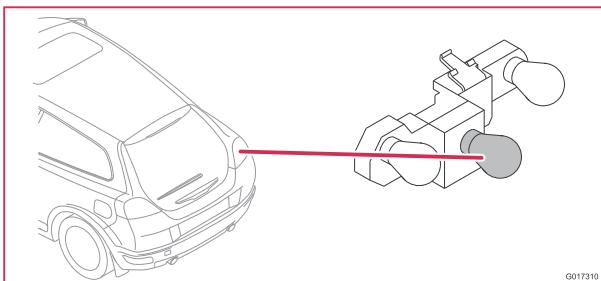


10/50 Left brake light, C70

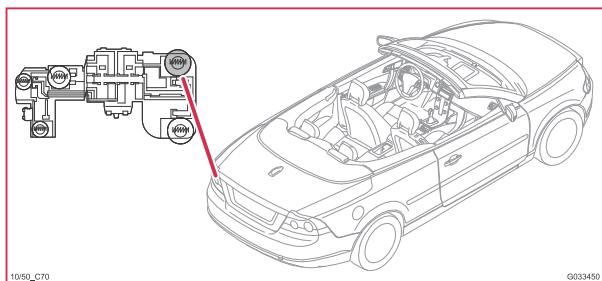


Component illustrations

10/51 - 10/54


10/51 Left tail light 1, C30

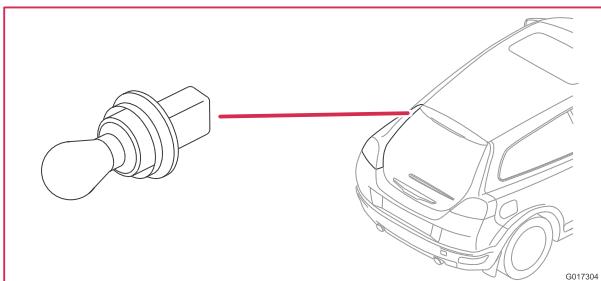


10/52 Left tail light 2, C70

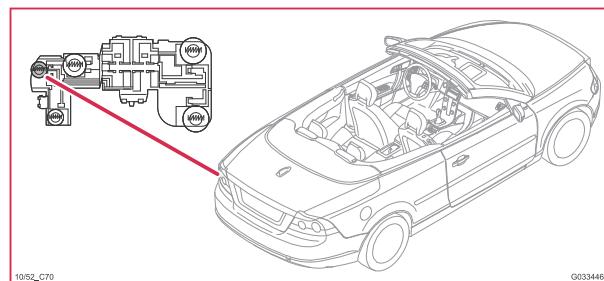


10/51 Left tail light 1, S40/V50

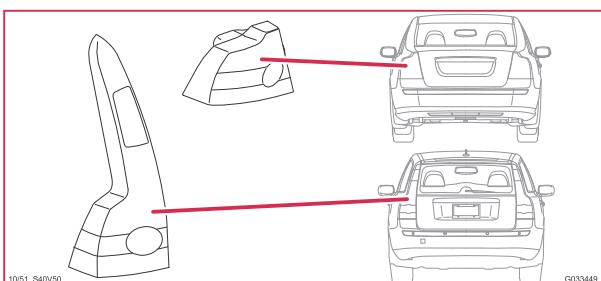


10/53 Rear left fog light, C30

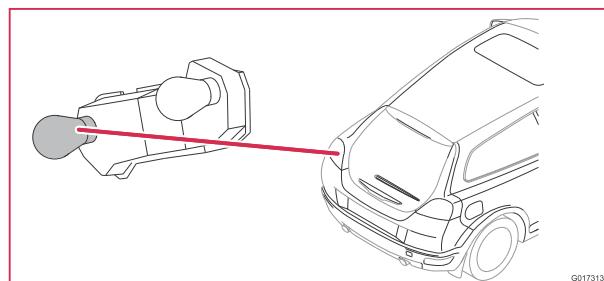


10/51 Left tail light 1, C70

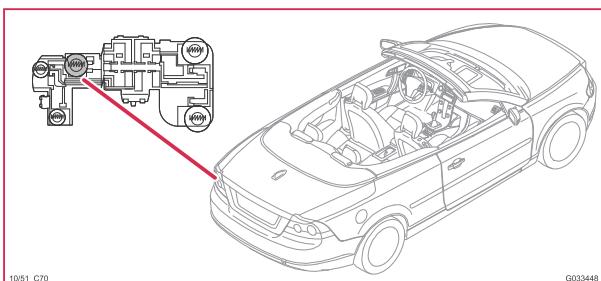


10/53 Rear left fog light, S40/V50

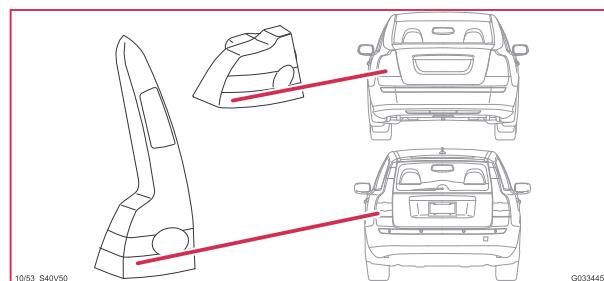


10/52 Left tail light 2, C30

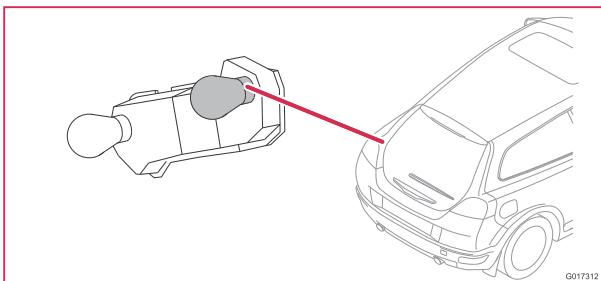


10/53 Rear left fog light, C70

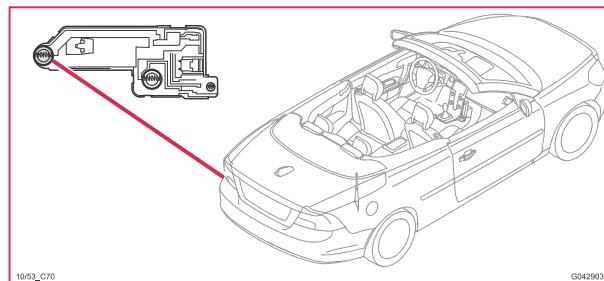

10/52 Left tail light 2, S40/V50

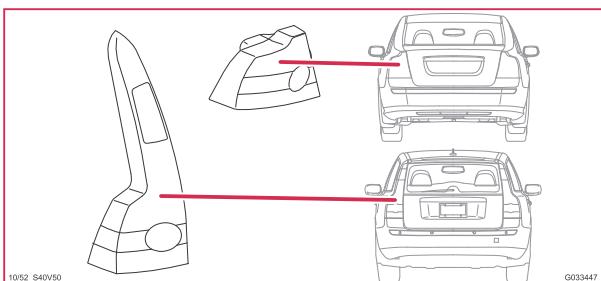


10/54 Rear left direction indicator, C30

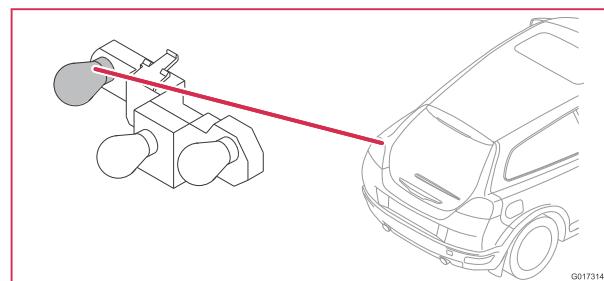


Component illustrations

10/54 - 10/69


10/54 Rear left direction indicator, S40/V50

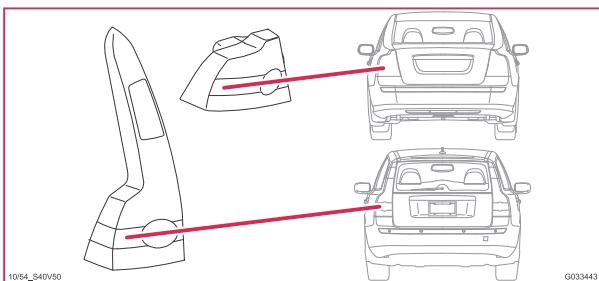


10/64 Right-hand high beam

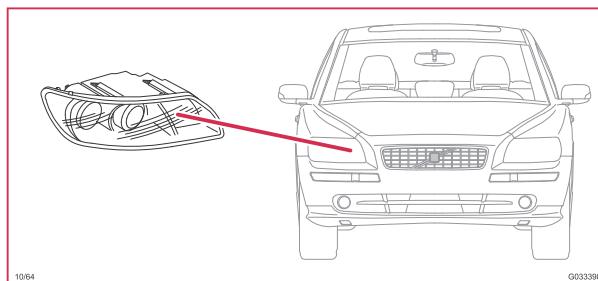


10/54 Rear left direction indicator, C70

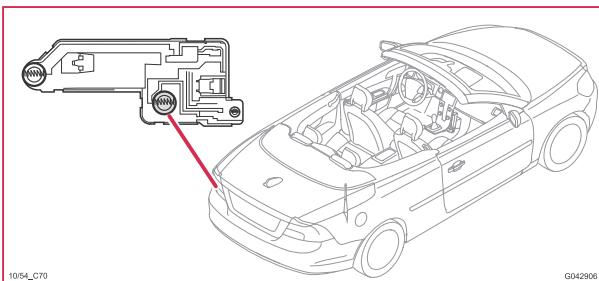


10/65 Auxiliary light, front right

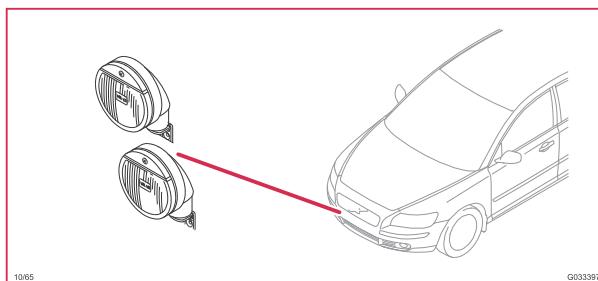


10/55 Left reversing light, C30

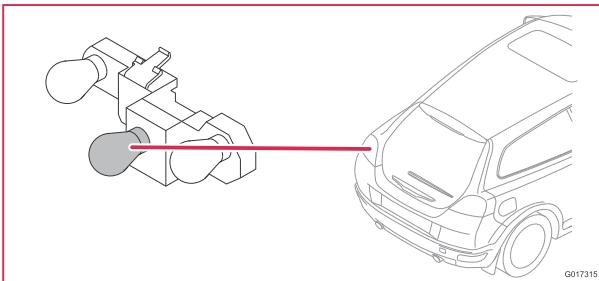


10/66 Right-hand low beam

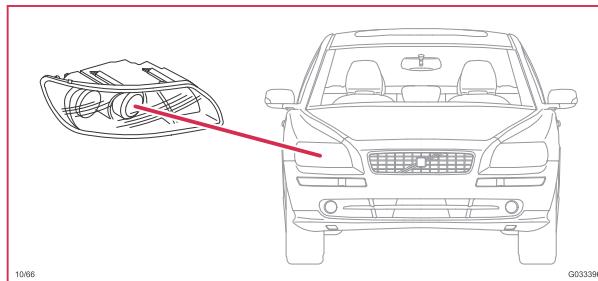


10/55 Left reversing light, S40/V50

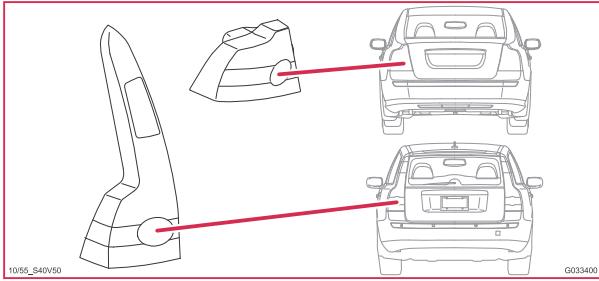


10/68 Left-hand high beam

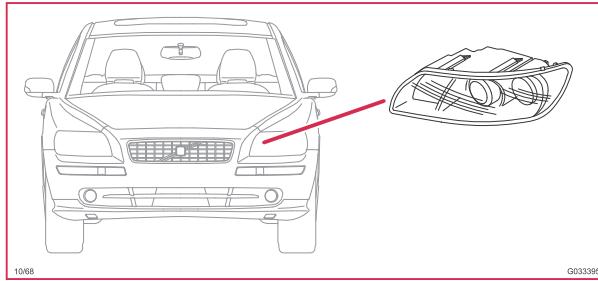

10/55 Left reversing light, C70

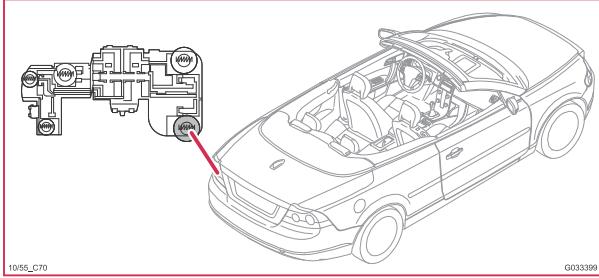


10/69 Auxiliary light, front left

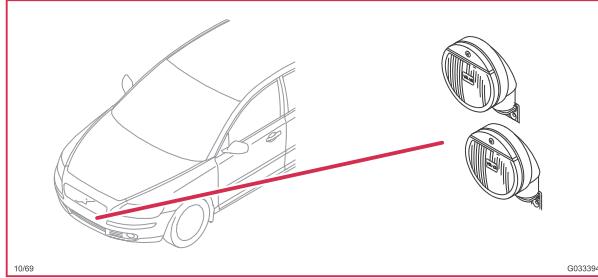


Component illustrations

10/70 - 10/245


10/70 Left-hand low beam

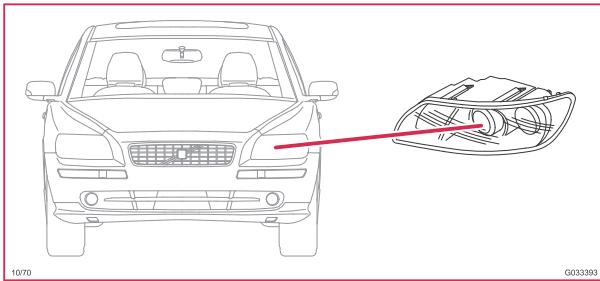


10/97 Courtesy lighting, left

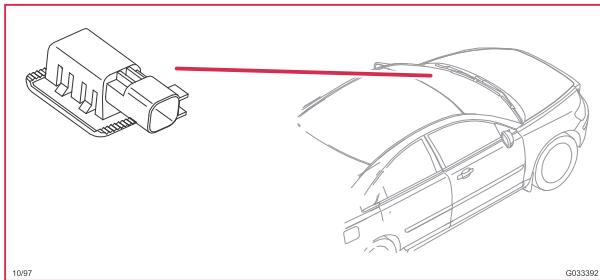


10/102 Courtesy lighting, right

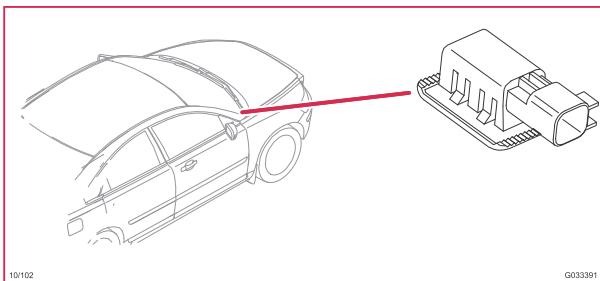


10/114 Left-hand vanity mirror lighting

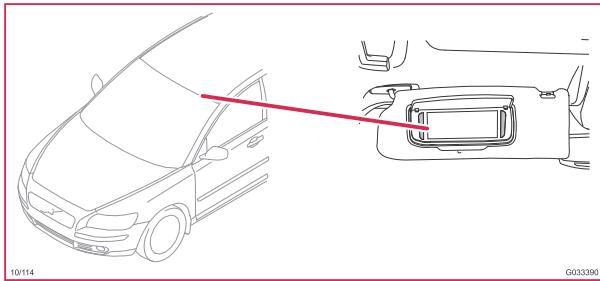


10/115 Right-hand vanity mirror lighting

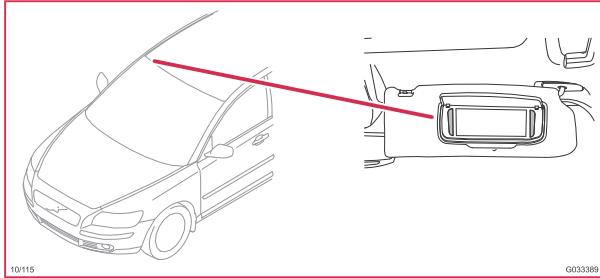


10/148 Lighting, rear-view mirror driver's door

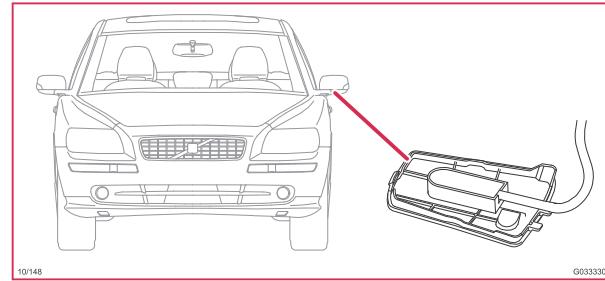


10/149 Lighting, rear-view mirror passenger door

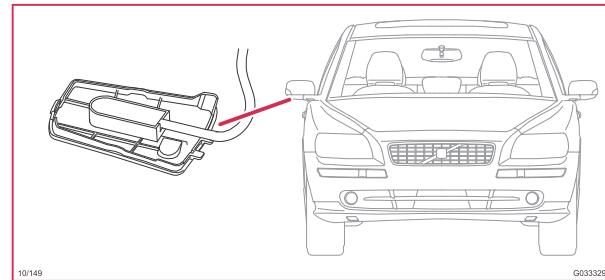


10/150 Rear reading light, C30

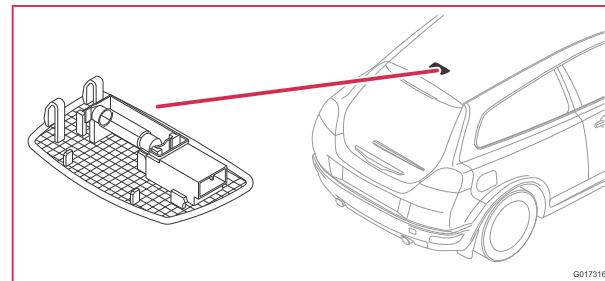

10/150 Rear reading light, S40/V50

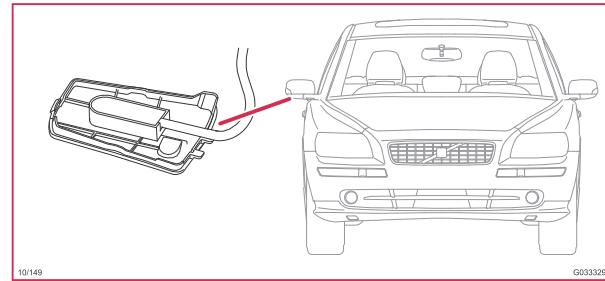


10/245 Lock indicator, left door

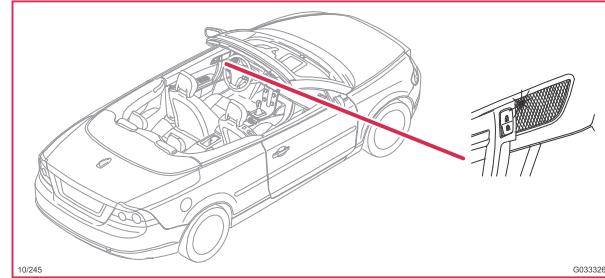


Component illustrations

10/246 - 16/5


10/246 Lock indicator, right door

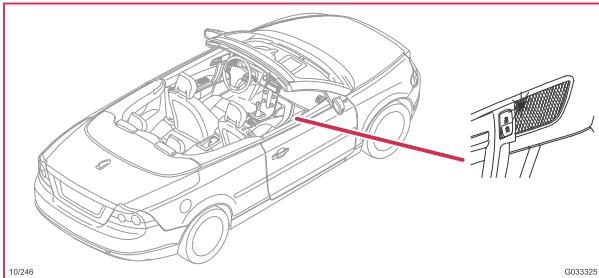


15/37 Fuse holder midi

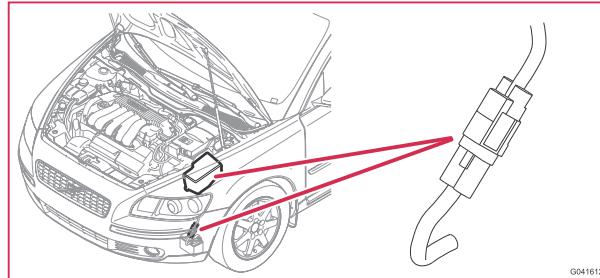


10/255 Warning lights BLIS left

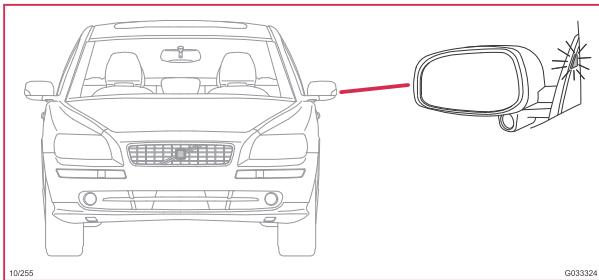


16/1 Integrated Audio Module (IAM)

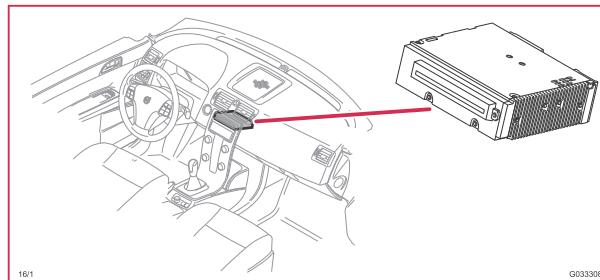


10/256 Warning lights BLIS right

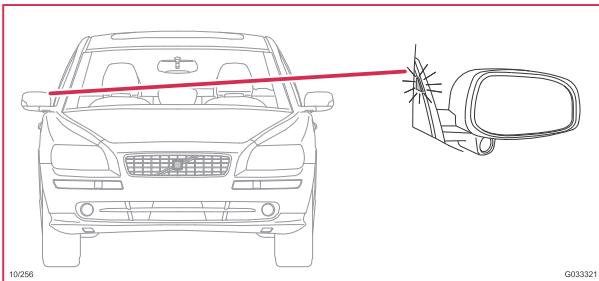


16/3 Right-hand front door speaker

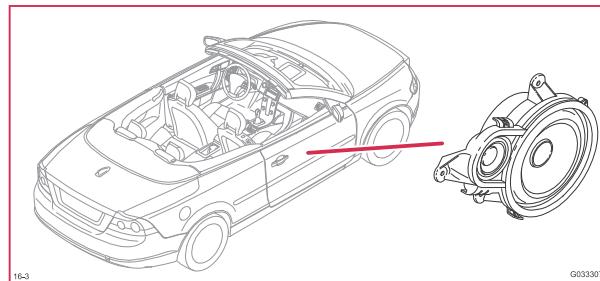


15/31 Distribution box in engine compartment

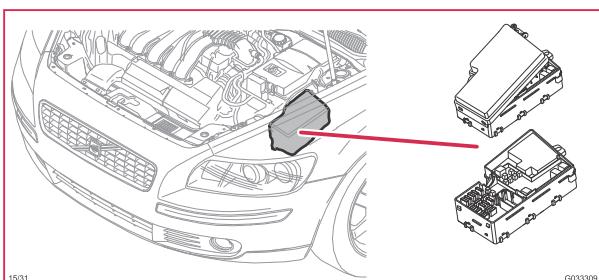


16/4 Left-hand front door speaker

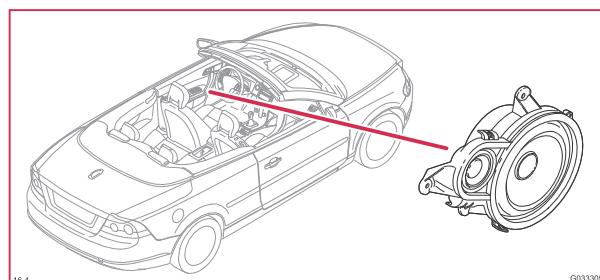

15/34 Main fuse box battery

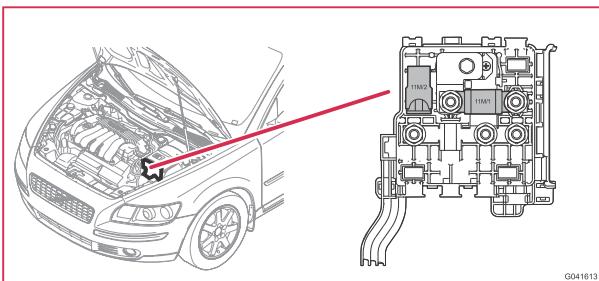


16/5 Right-hand rear door speaker

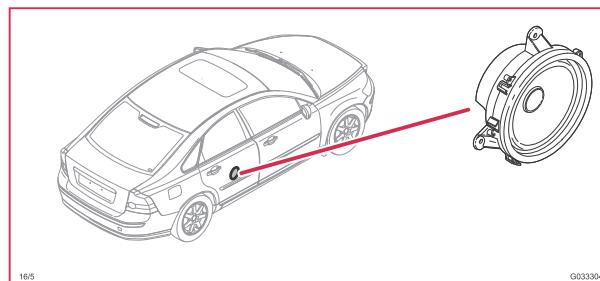

Component illustrations


16/6 - 16/46

16/6 Left-hand rear door speaker

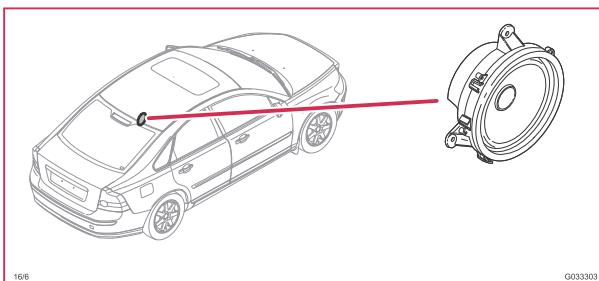


G033303

16/16 Window antenna amplifier, right, C30

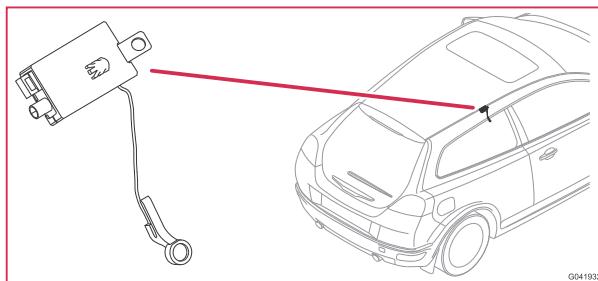


G041932

16/9 Window antenna

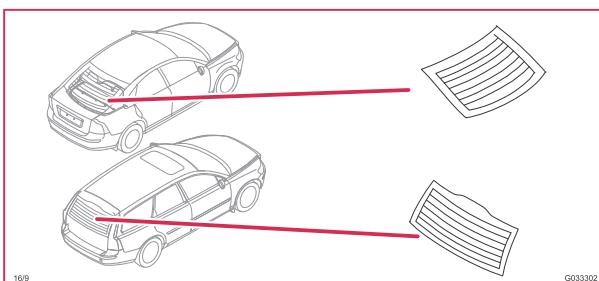


G033302

16/26 Center dashboard speaker

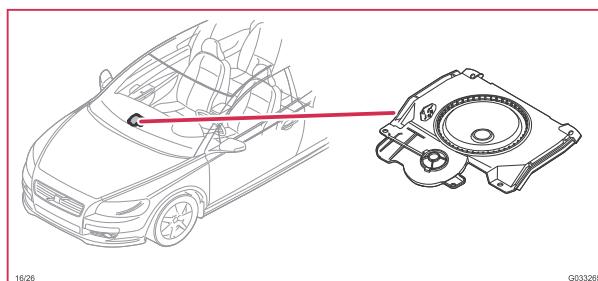


G033285

16/10 Horn 1

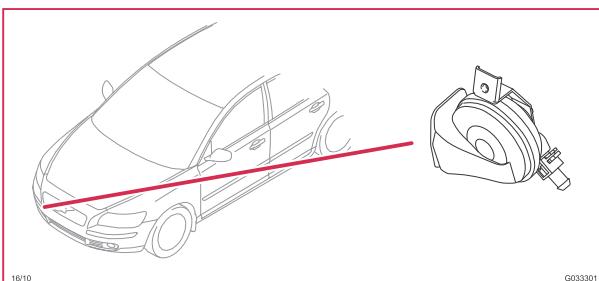


G033301

16/35 Siren Control Module (SCM)

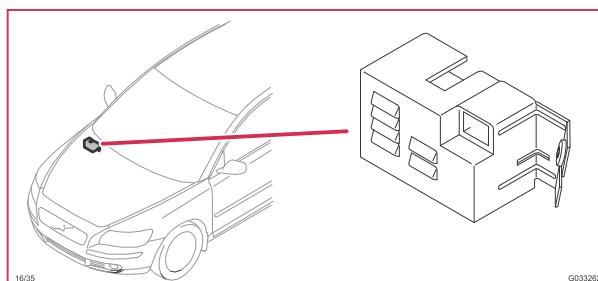

G033282

16/11 Horn 2

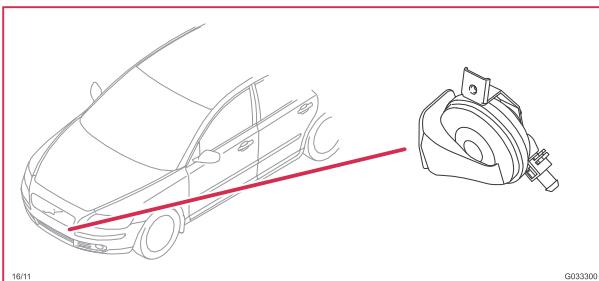


G033300

16/45 Portable navigation system




G024115

16/16 Amplifier window antenna, S40/V50

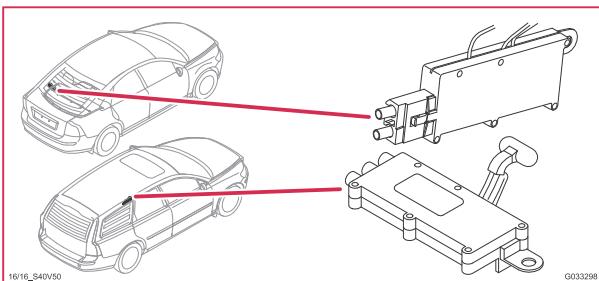

G033298

16/46 RTI Display

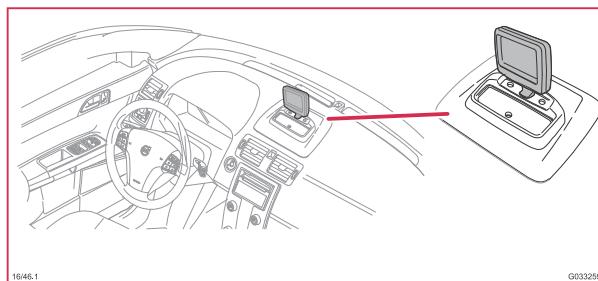


G033299

Component illustrations

16/47 - 16/108


16/47 Antenna GSM/GPS/RDAR, C30/S40/V50

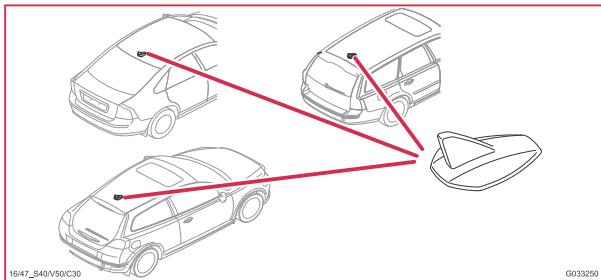

16/47_S40/V50/C30

G033250


16/68 TMC and FM subantenna, bumper

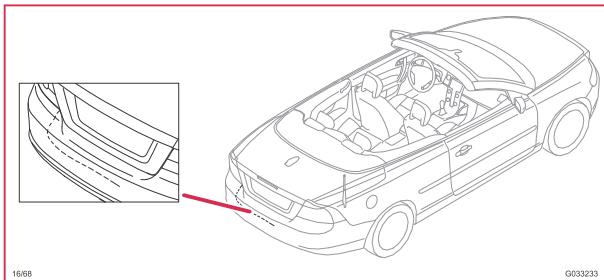

16/68

G033233


16/47 GSM/GPS/RDAR antenna, C70

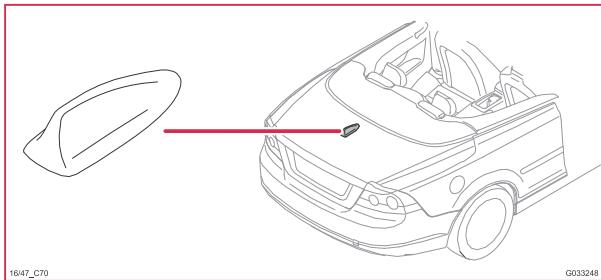

16/47_C70

G033248


16/79 Subwoofer Module (SUB)

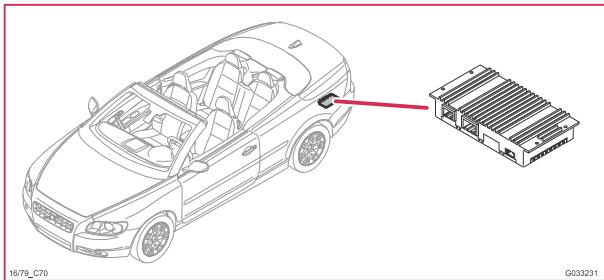

16/79_C70

G033231


16/50 Left-hand rear window antenna

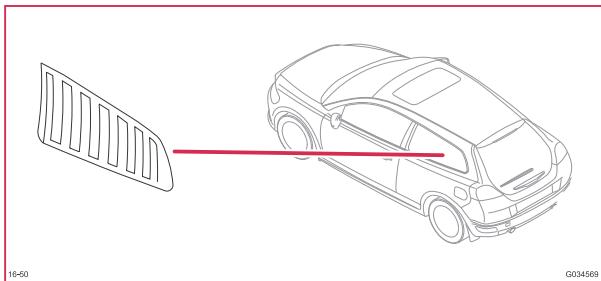

16/50

G034569


16/98 Microphone

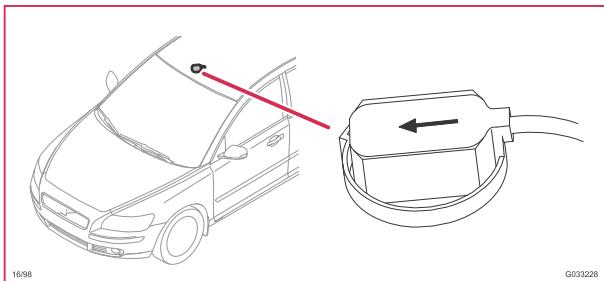

16/98

G033228


16/60 Phone Module (PHM)

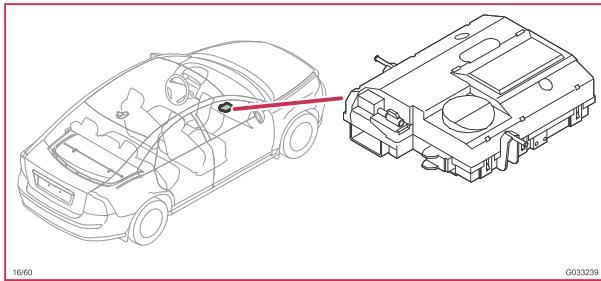

16/60

G033239


16/105 Audio module (AUD)

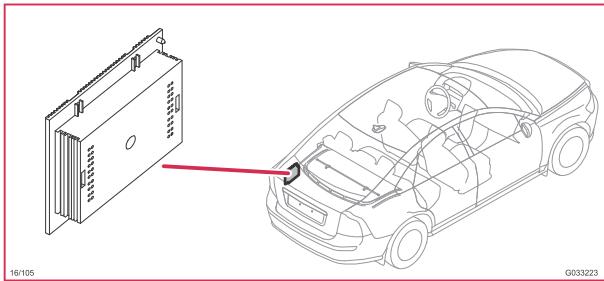

16/105

G033223


16/67 Antenna amplifier, bumper

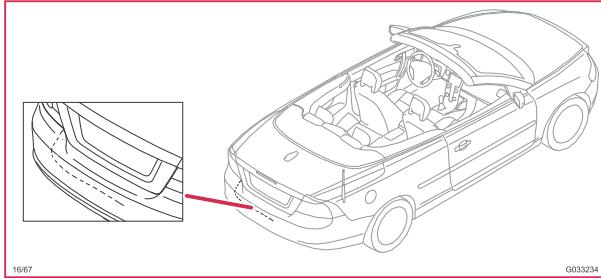

16/67

G033234

16/108 Multimedia Module (MMM)

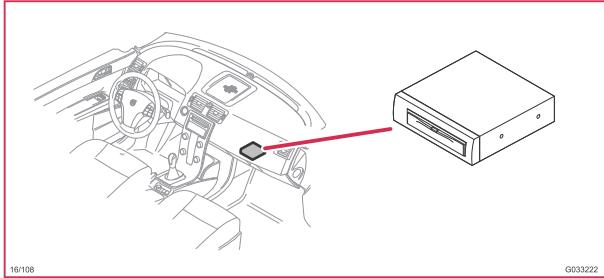


16/108

G033222


Component illustrations

16/127 - 16/141


16/127 Microphone, mobile phone hands-free

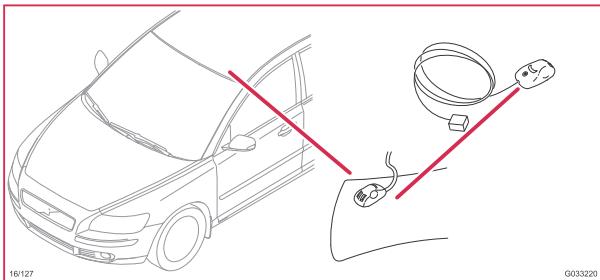


16/132 Antenna, door lock, bumper

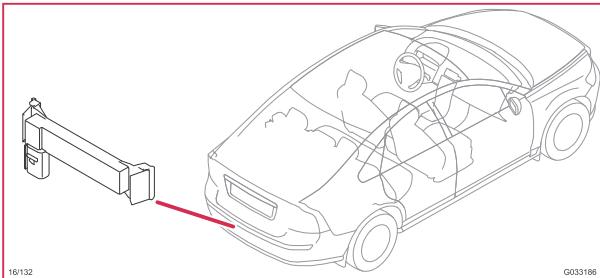


16/133 Antenna door lock cabin 1 rear

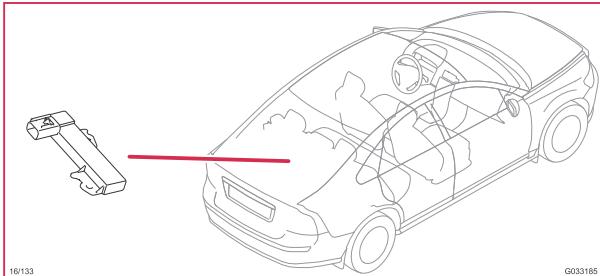


16/134 Antenna, door lock, passenger compartment 2

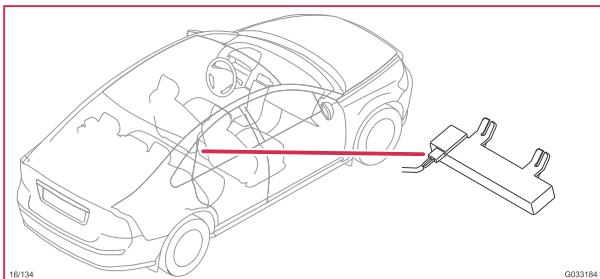


16/135 Antenna, door lock, passenger compartment 3

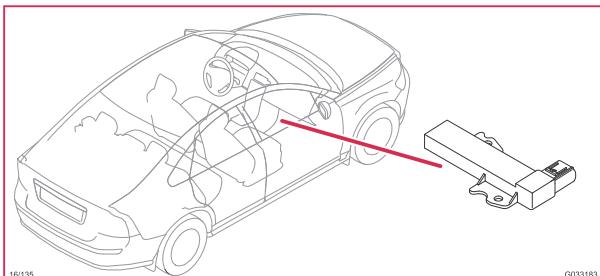


16/136 LH rear door tweeter

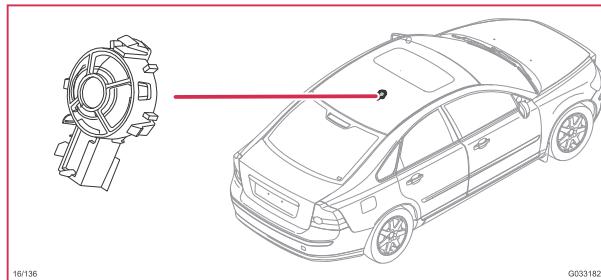


16/137 RH rear door tweeter

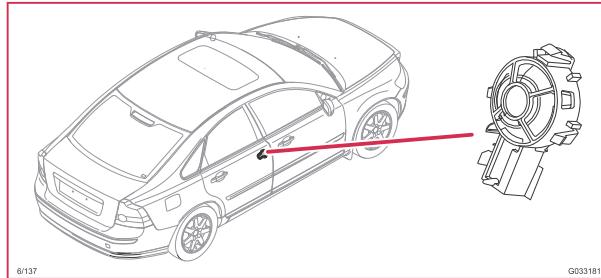


16/138 Rear window antenna, right C30/V50

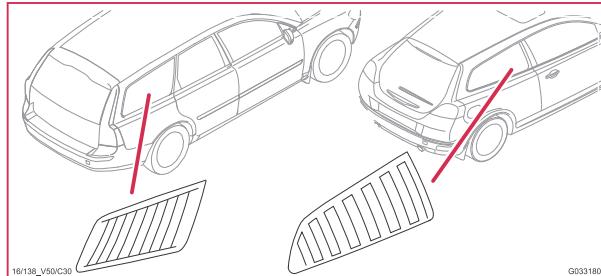

16/140 SIM card reader

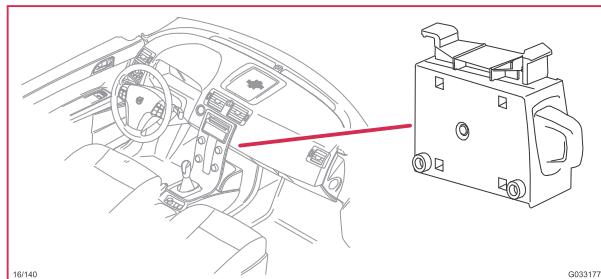


16/141 Interference filter, rear window, left

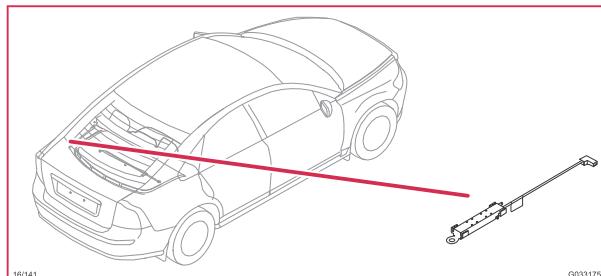


Component illustrations

16/142 - 16/157


16/142 Interference filter, rear window, right

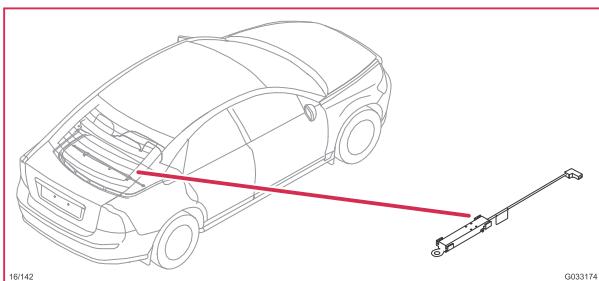


16/145 Remote Digital Audio Receiver (RDAR)

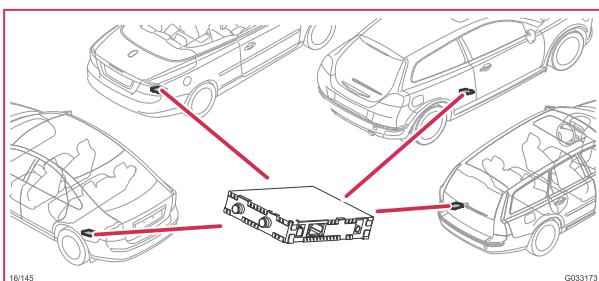


16/147 Bluetooth Phone Module (BPM)

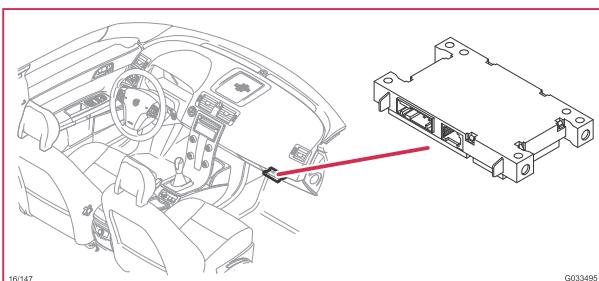


16/150 Window antenna amplifier, C30

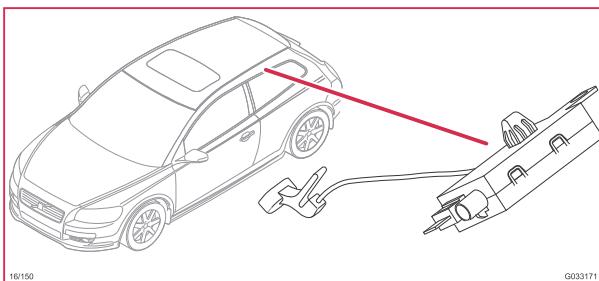


16/150 AM/FM antenna and amplifier, right rear fender, C70

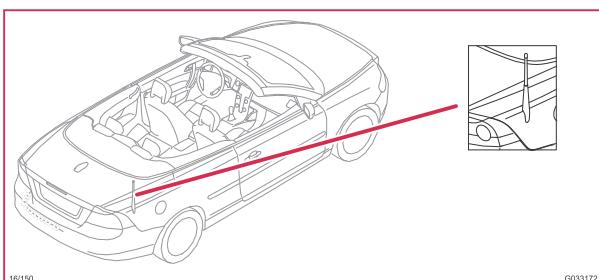


16/151 Distribution filter, front left door

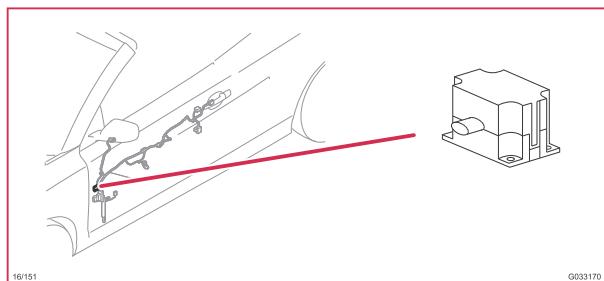


16/152 Distribution filter, front right door

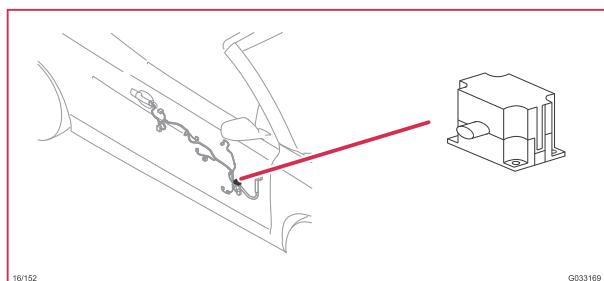


16/155 Speaker, driver's door

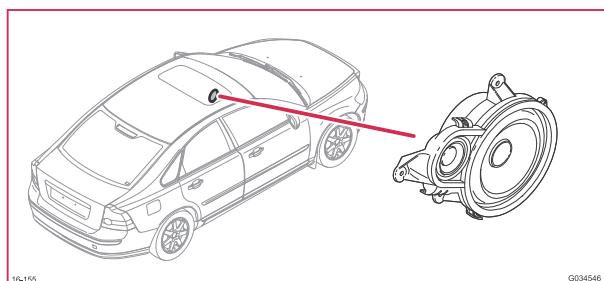

16/156 Speaker, passenger door

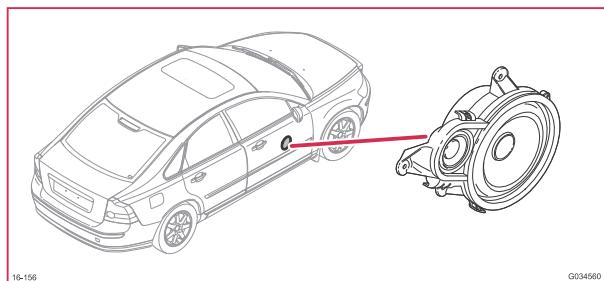


16/157 Treble speaker, driver's door

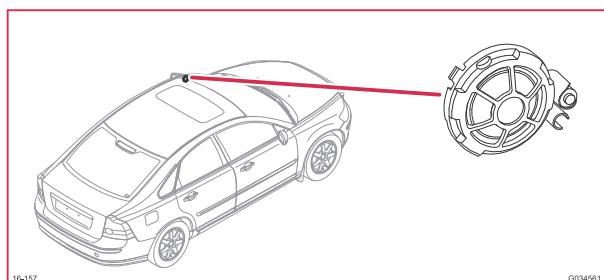


Component illustrations

16/158 - 18/4


16/158 Treble speaker, passenger door

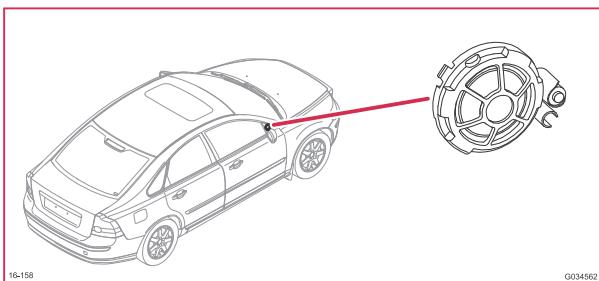


16/159 Control module, cellular phone handsfree

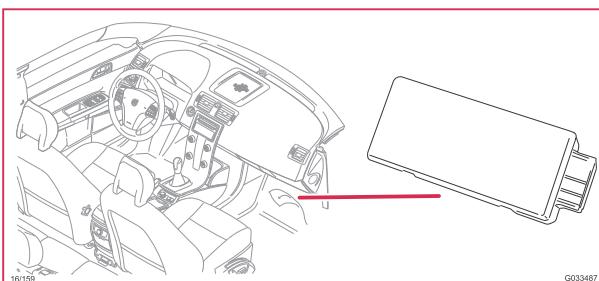


17/13 Data link connector

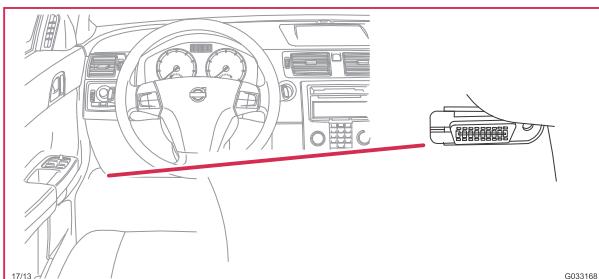


17/19 12V outlet, cargo compartment

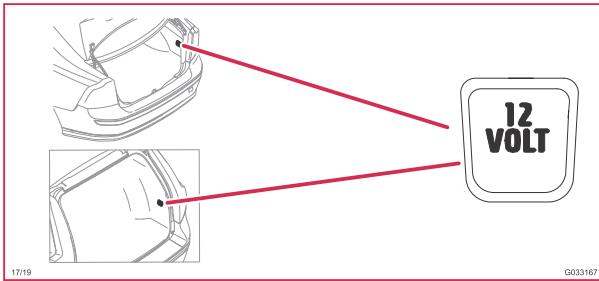


17/37 4-pin outlet, tow hitch cable harness

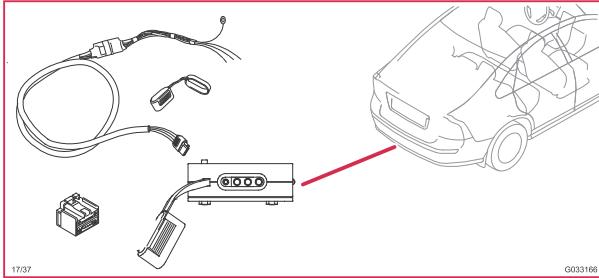


17/38 7-pin outlet, tow hitch cable harness

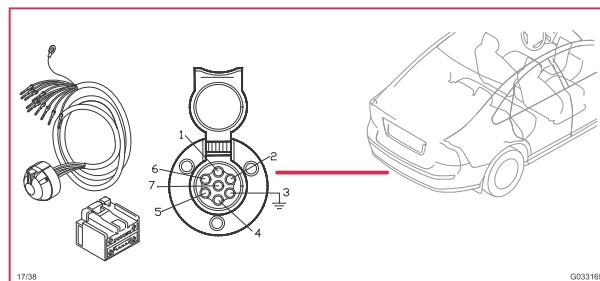


17/39 13-pin outlet, tow hitch cable harness

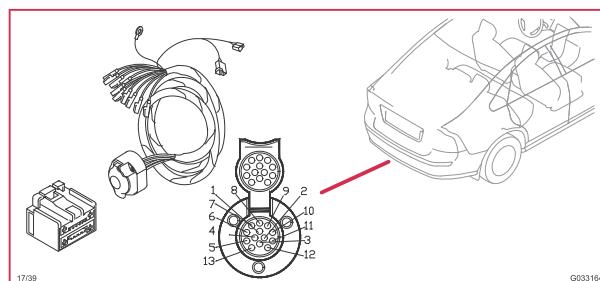


17/40 Auxiliary equipment input (AUX)

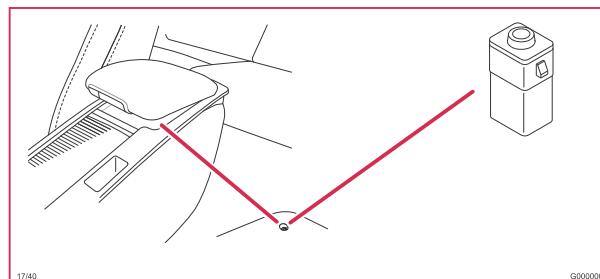

17/42 USB-port

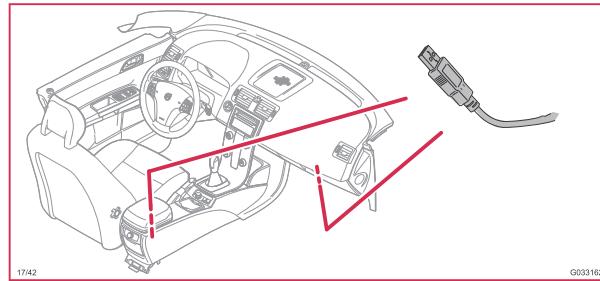


18/4 Contact reel

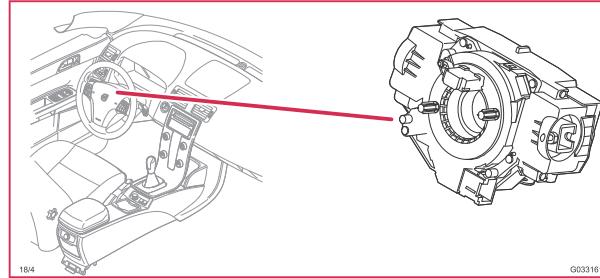


Component illustrations

20/3-7 - 31/12


20/3-7 Spark plug and ignition coil

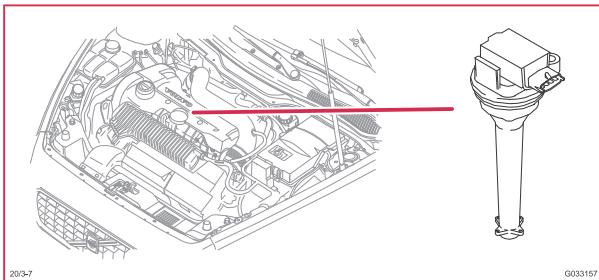


20/17 Transformer, ignition coils

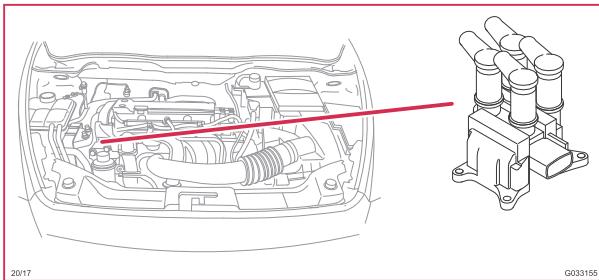


20/22-26 Glow plug

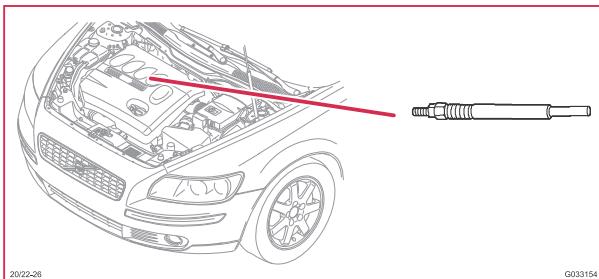


26/5 DC/AC converter, fuel tank

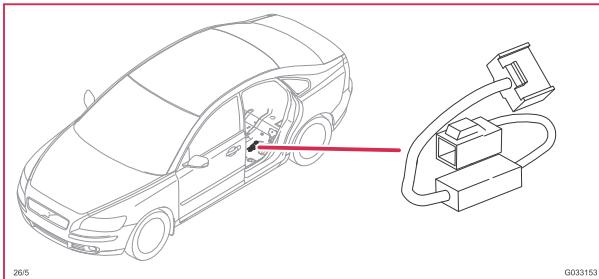


31/3 Ground connection, left MacPherson strut tower

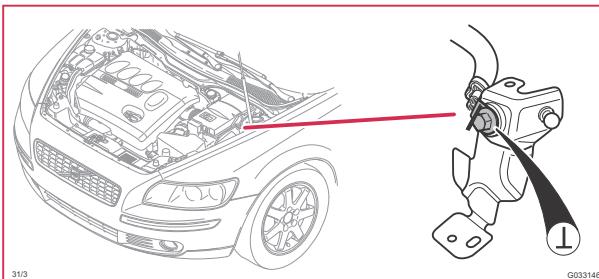


31/4 Ground connection, engine

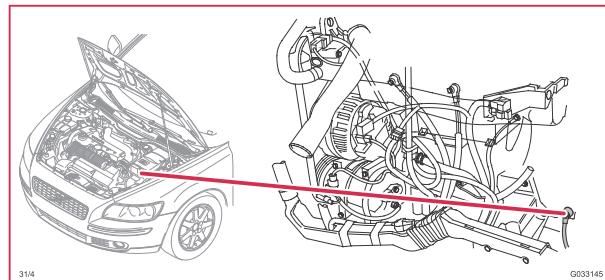


31/6 Ground connection, A-post, driver's side

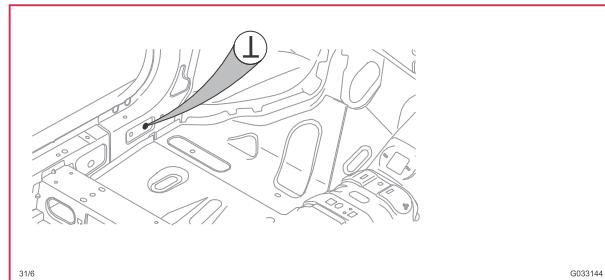


31/10 Ground connection, A-post, passenger side

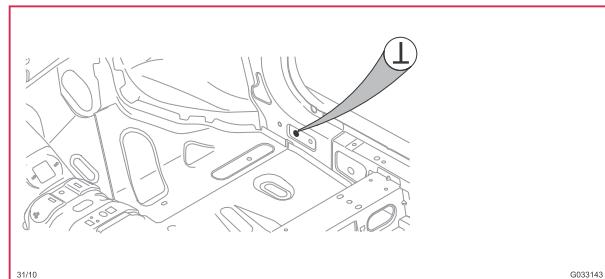

31/11 Ground connection, rear left side

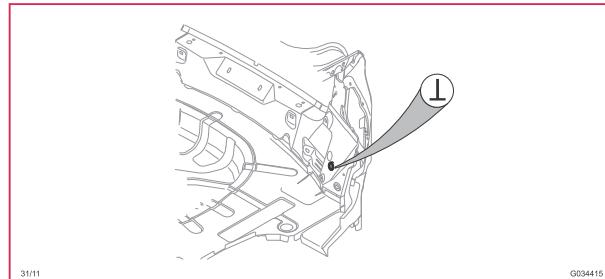


31/12 Ground connection, rear right side

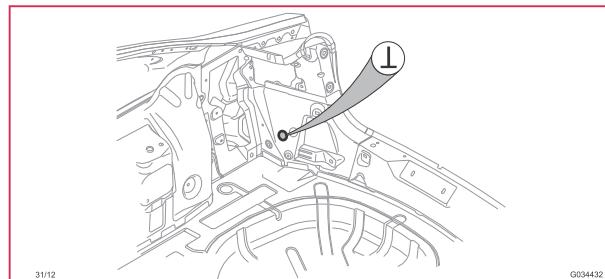


Component illustrations

31/66 - 31/110


31/66 Ground connection, Front seat riser, left side

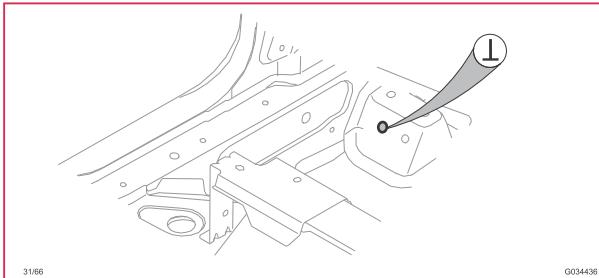


31/67 Ground connection, front right seat riser

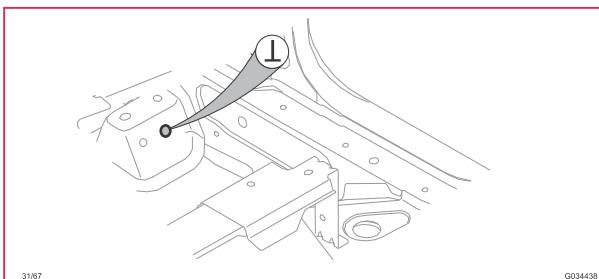


31/80 Ground connection, Left wheel housing

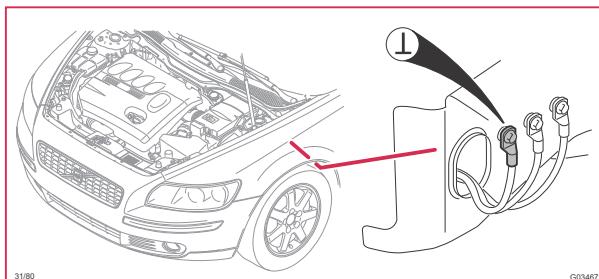


31/83 Ground connection, A-post, driver's side

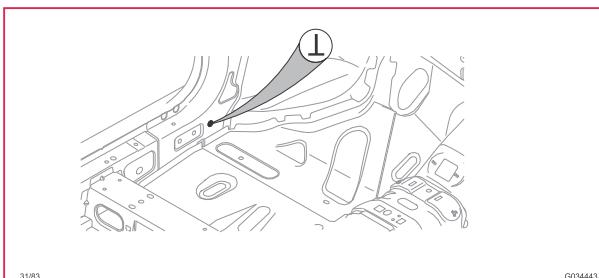


31/84 Ground connection, A-post, passenger side

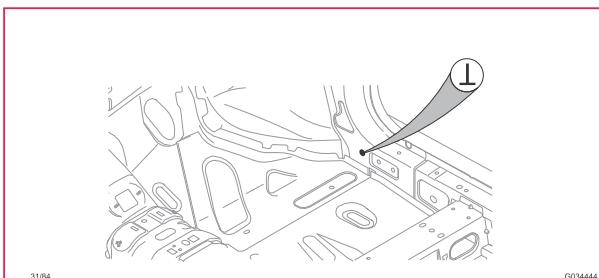


31/88 Ground connection, engine

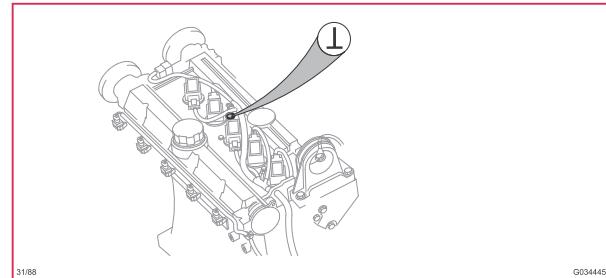


31/89 Ground connection, engine

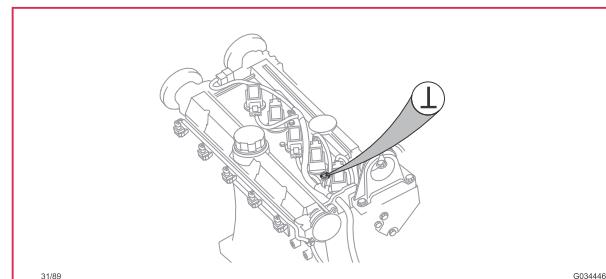


31/102 Ground connection, front member, 4-Cyl.

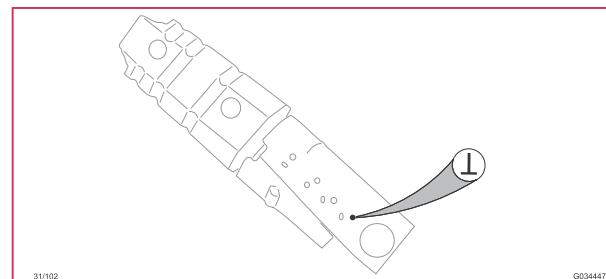

31/107 Ground connection, tailgate (V50)

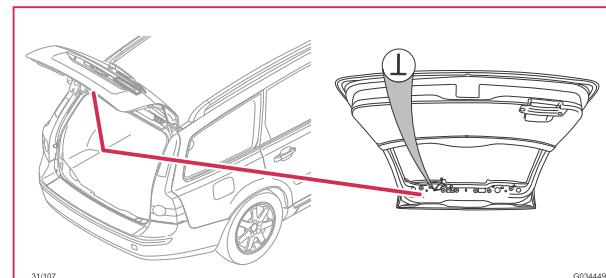


31/110 Ground connection, right MacPherson strut tower

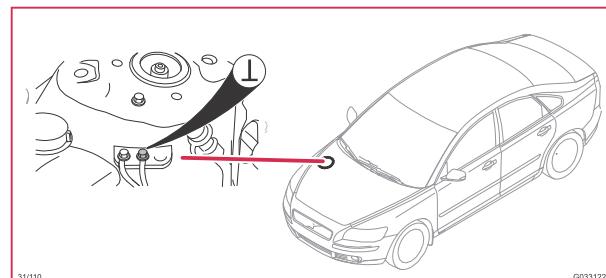


Component illustrations

31/112 - 64/25G


31/112 Ground connection, right MacPherson strut tower

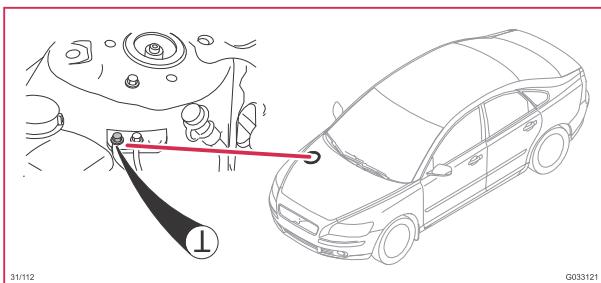


31/114 Ground connection, Left wheel housing

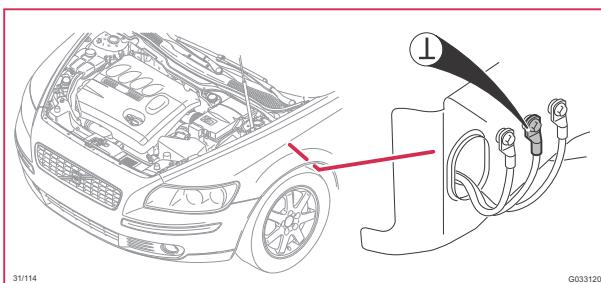


31/115 Ground connection, left A-post

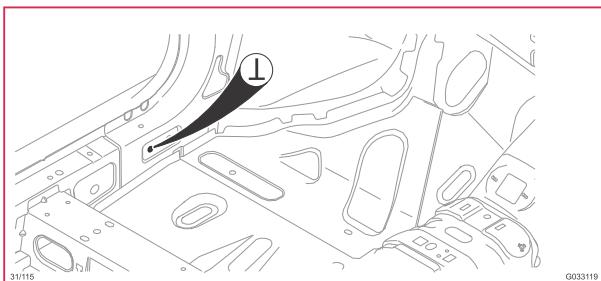


31/116 Ground connection, right A-post

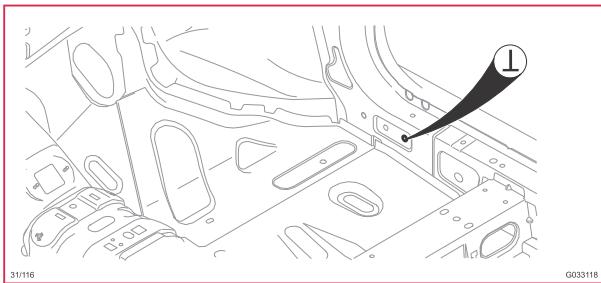


31/119 Ground connection, Left wheel housing

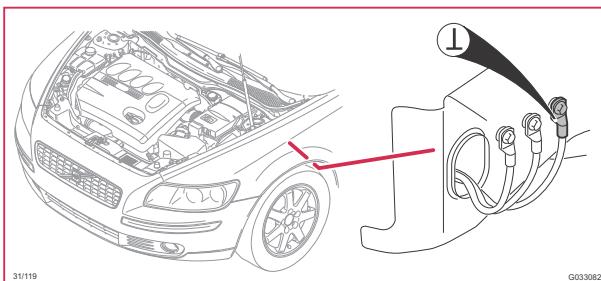


31/131 Ground connection, Behind lamp housing, front left

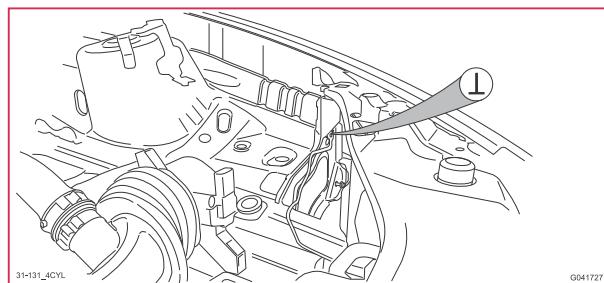


31/132 Ground connection, left MacPherson strut tower

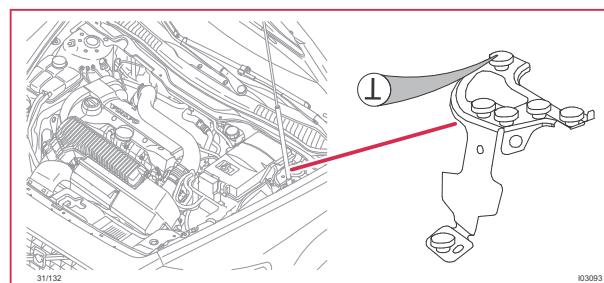


63/no. Branching point

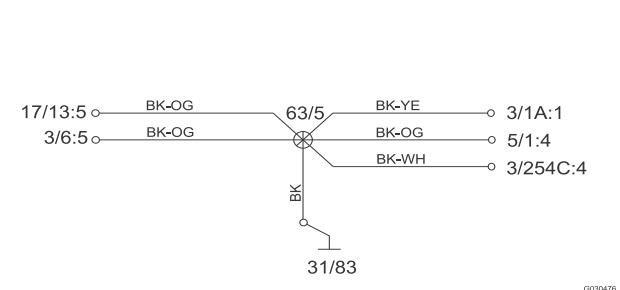

64/10B Connector, C70

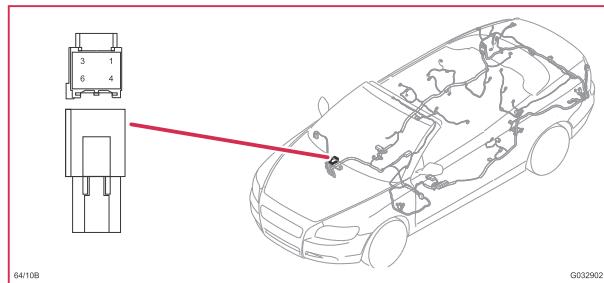


64/25G Connector

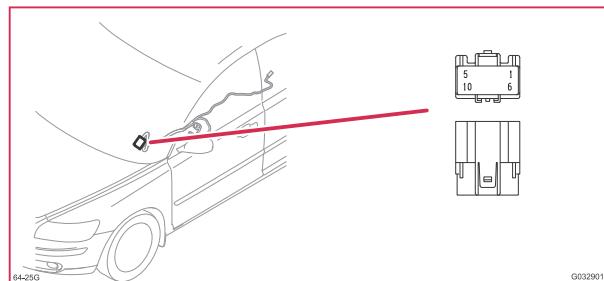


Component illustrations

64/27 - 64/48


64/27 Connector

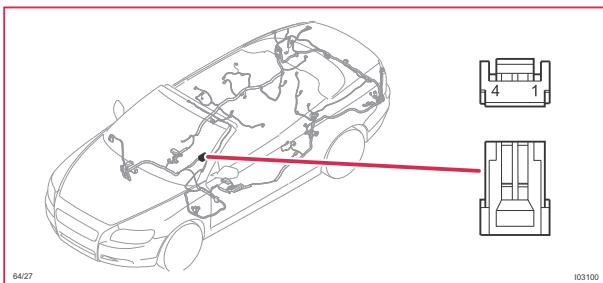


64/43 Connector

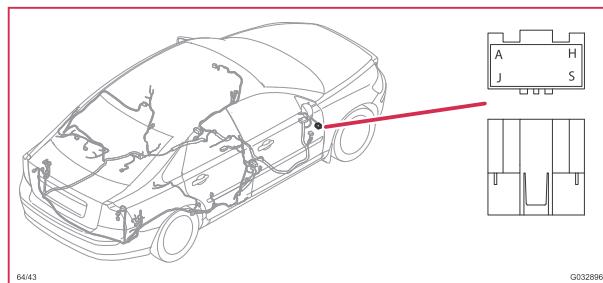


64/30 Connector

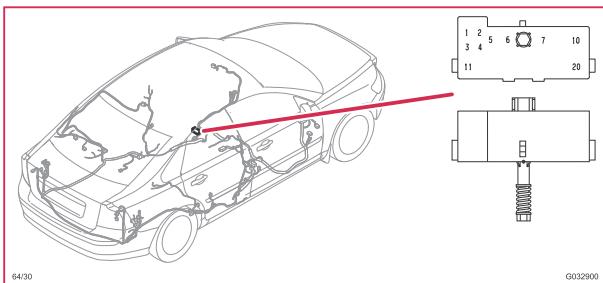


64/45 Connector

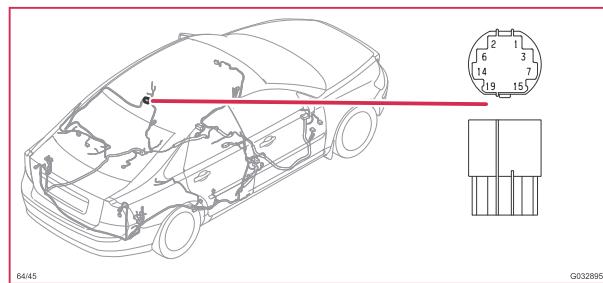


64/31 Connector

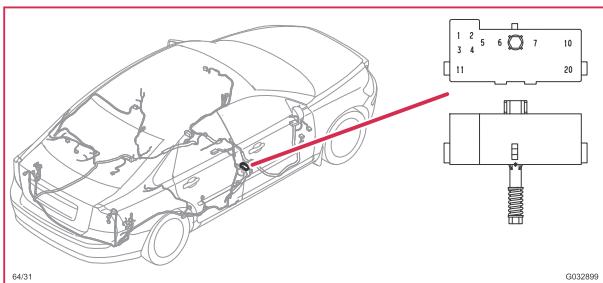


64/47 Connector

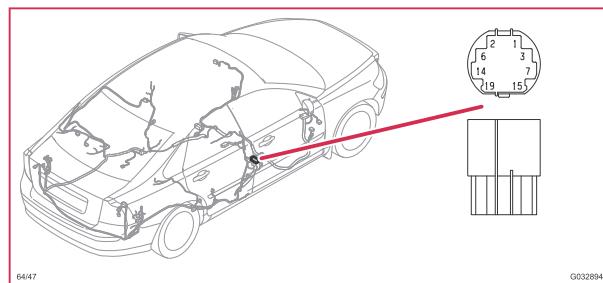


64/35 Connector

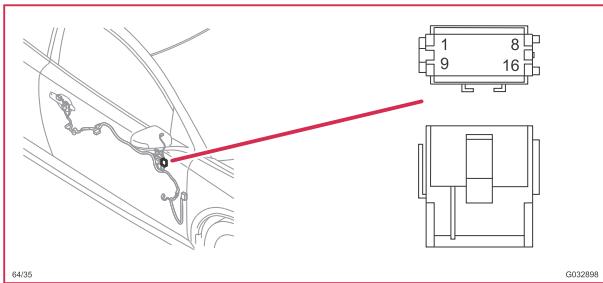


64/48A Connector

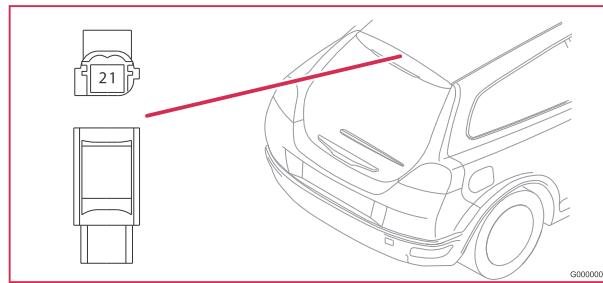

64/41 Connector

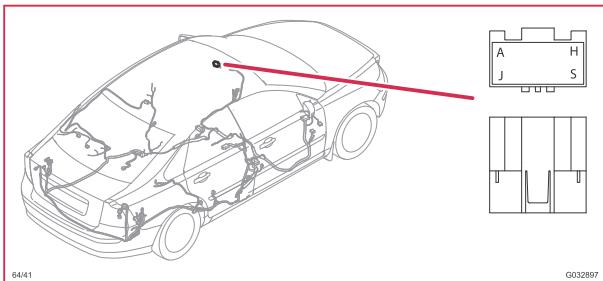


64/48 Connector, S40

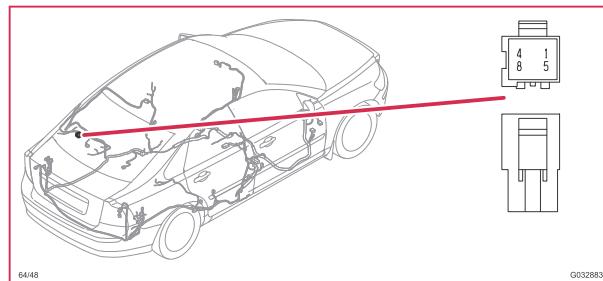


Component illustrations

64/48 - 64/90


64/48 Connector, V50

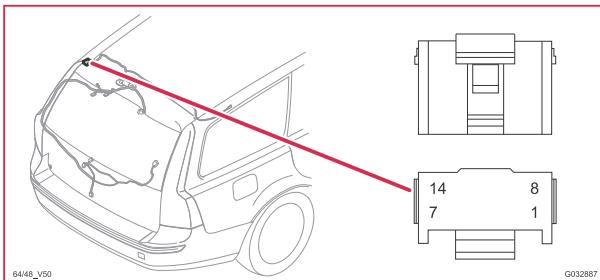


64/54 Connector

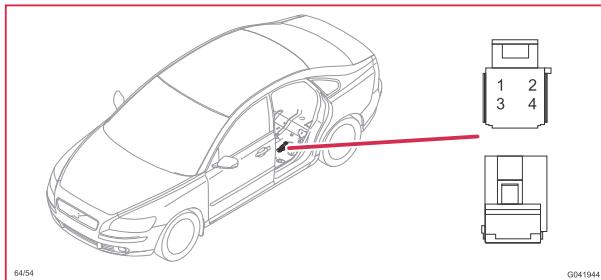


64/49 Connector

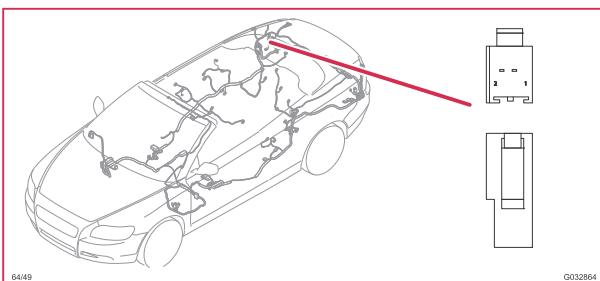


64/70 Connector

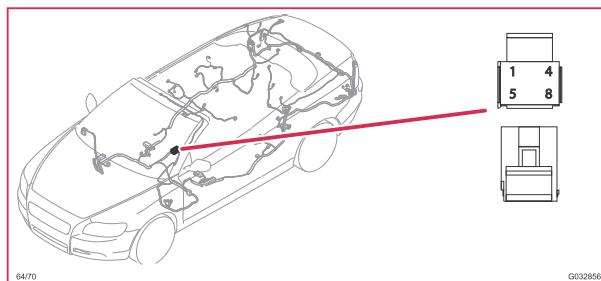


64/50 Connector

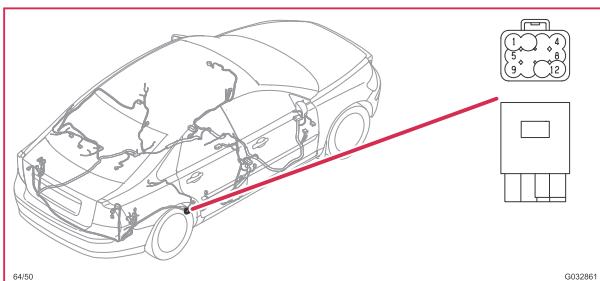


64/80 Connector

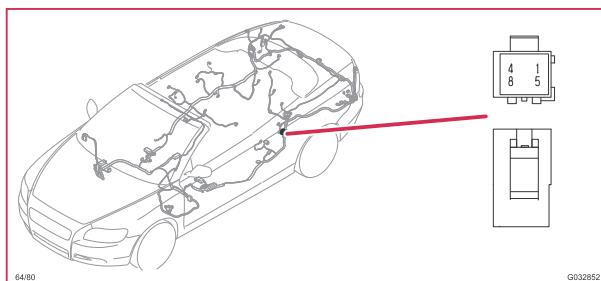


64/51 Connector

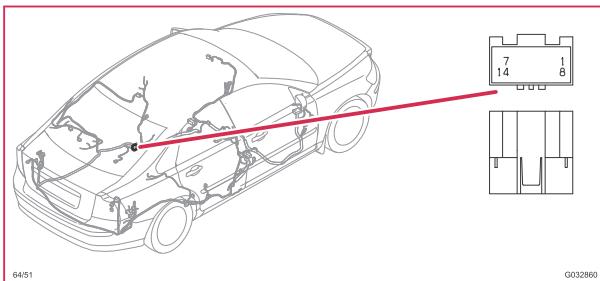


64/80A Connector

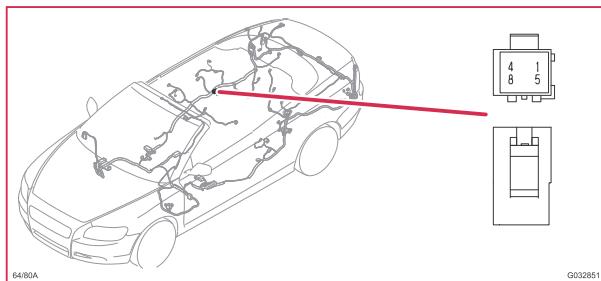

64/53 Connector

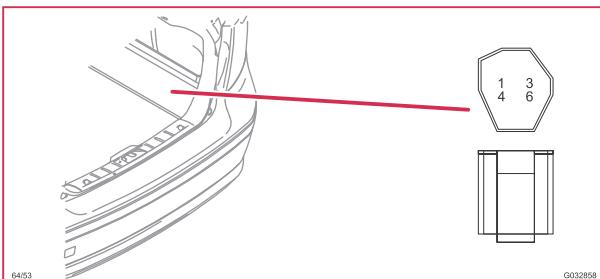


64/90 Connector

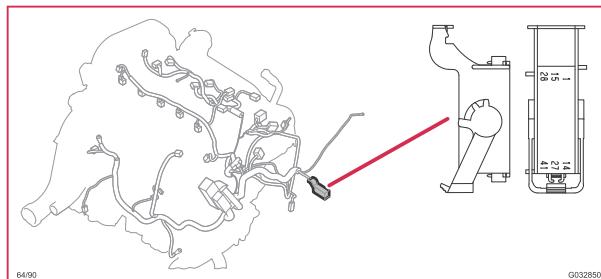


Component illustrations

64/97 - 64/191


64/97 Connector

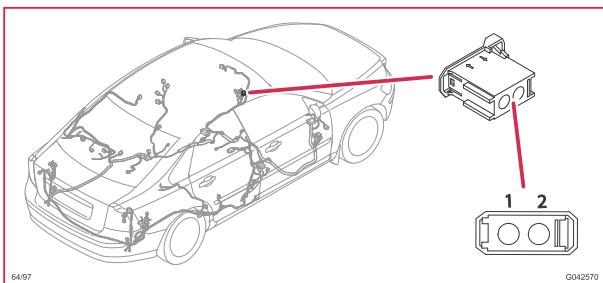


64/114 Connector

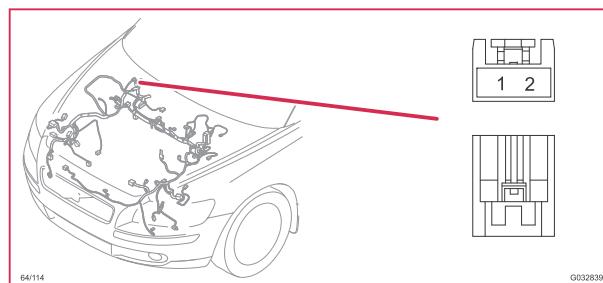


64/101 Connector

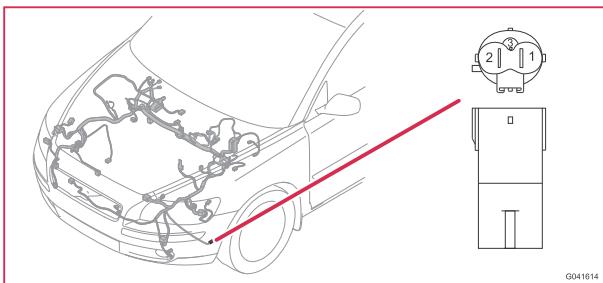


64/120 Connector

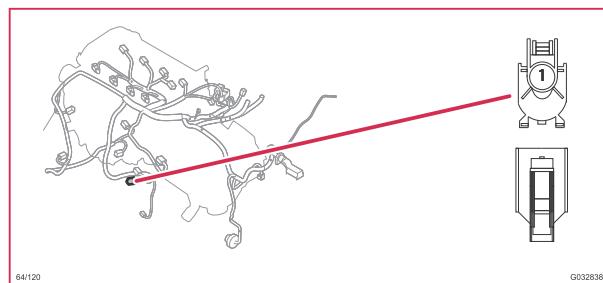


64/111 Connector

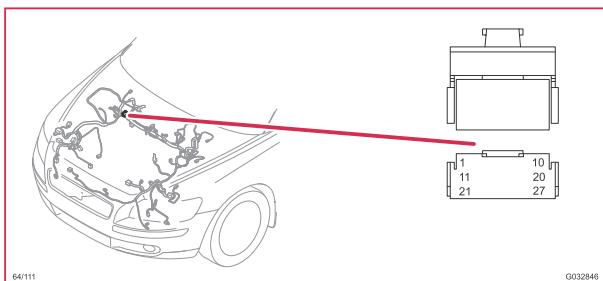


64/179 Connector

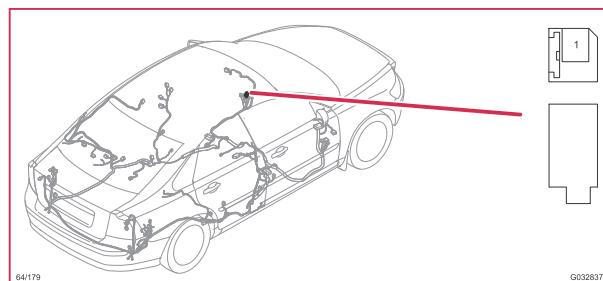


64/112 Connector

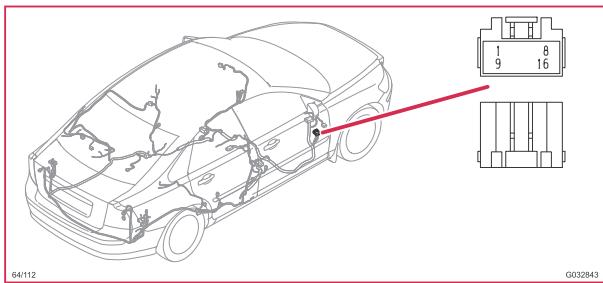


64/190 Connector

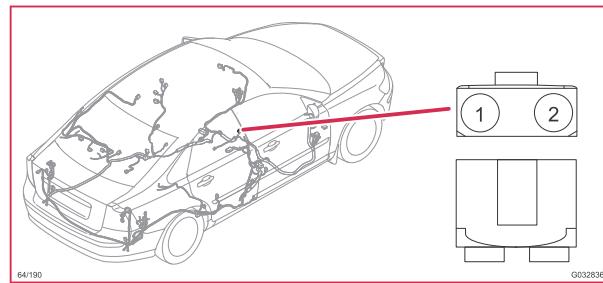

64/113 Connector

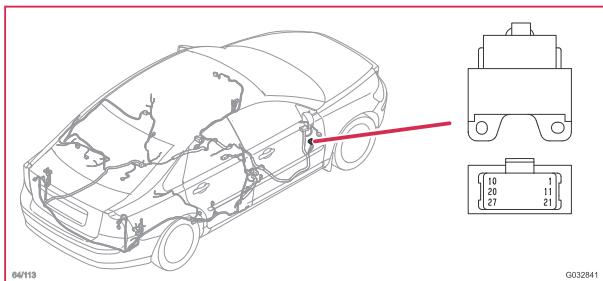


64/191 Connector

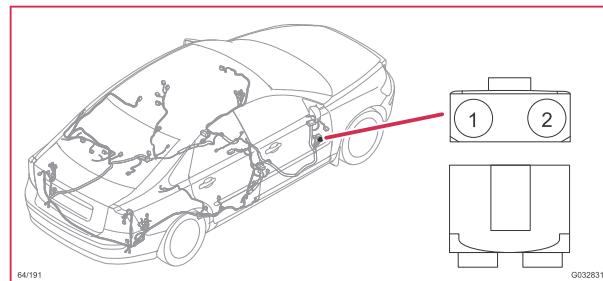


Component illustrations

64/231 - 64/333


64/231 Connector

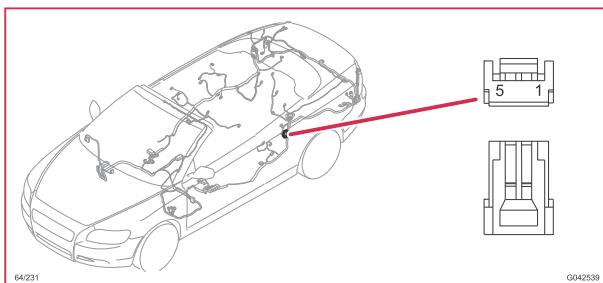


64/245 Connector

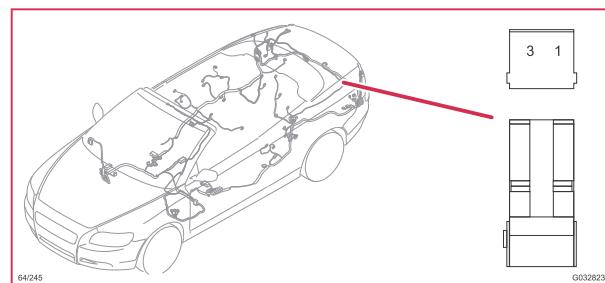


64/232 Connector

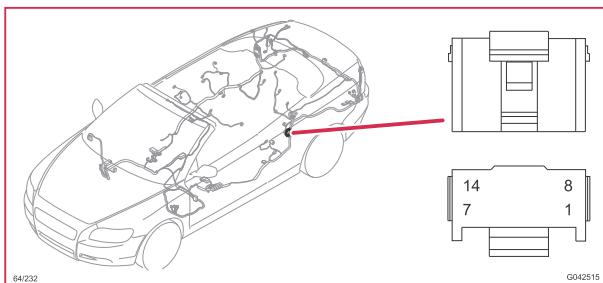


64/246 Connector

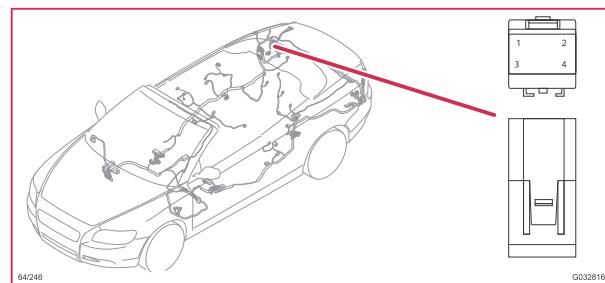


64/233 Connector

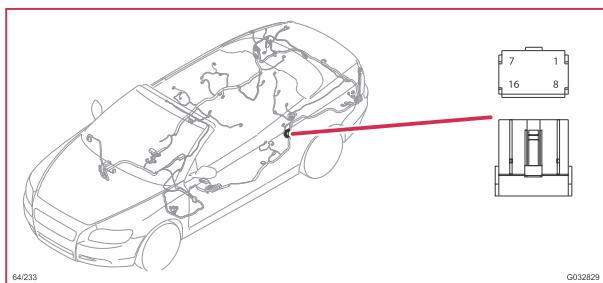


64/250 Connector

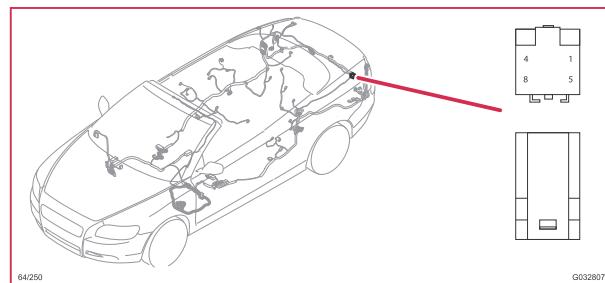


64/234 Connector

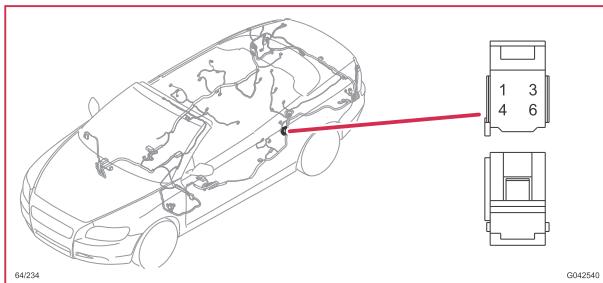


64/322 Connector

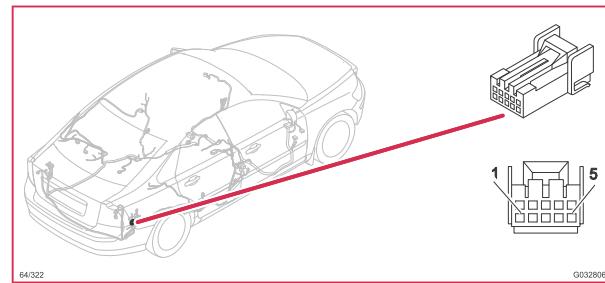

64/242 Connector

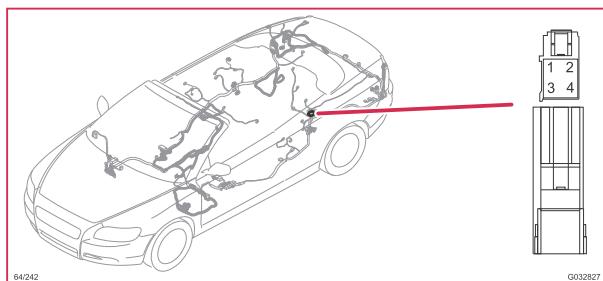


64/333 Connector

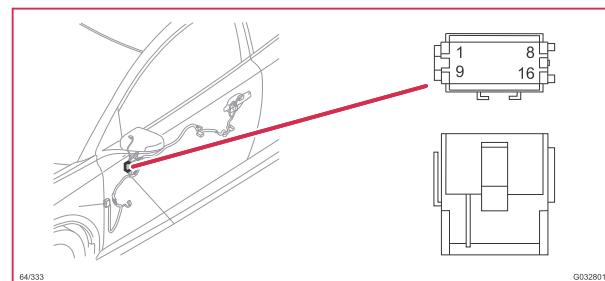


Component illustrations

64/425 - 64/708


64/425 Connector

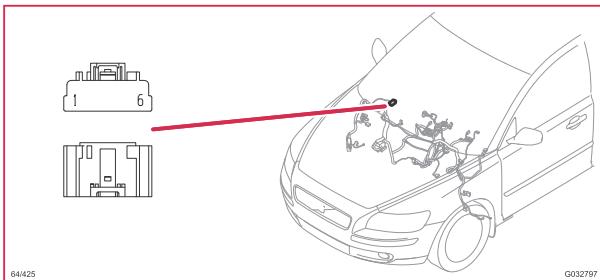


64/661 Connector

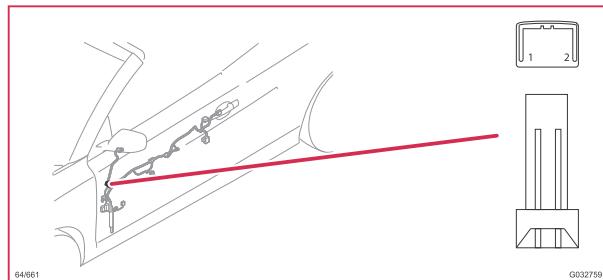


64/545 Connector

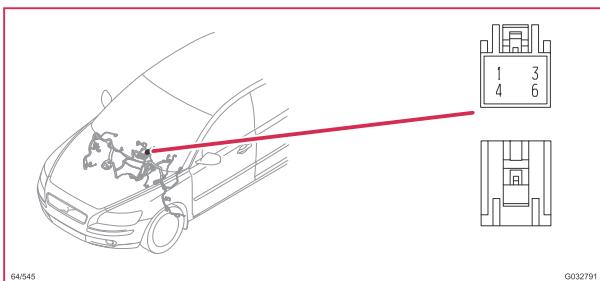


64/662 Connector

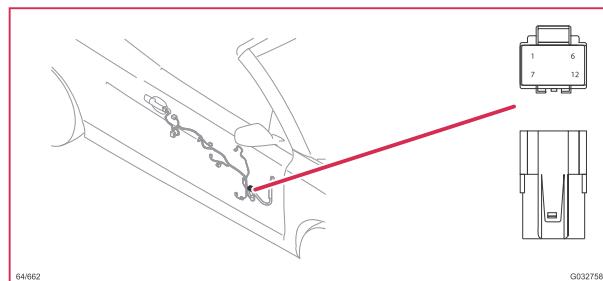


64/596 Connector

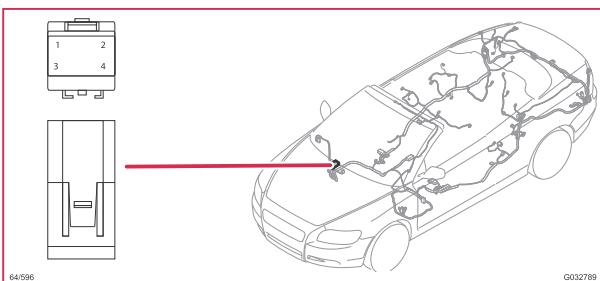


64/663 Connector

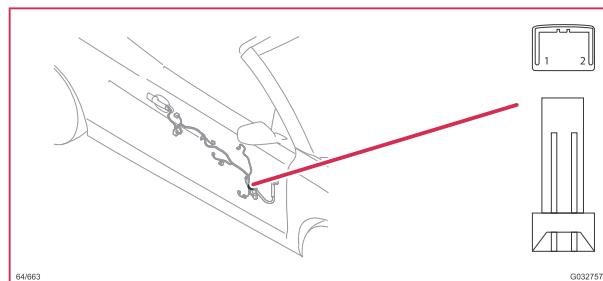


64/600 Connector

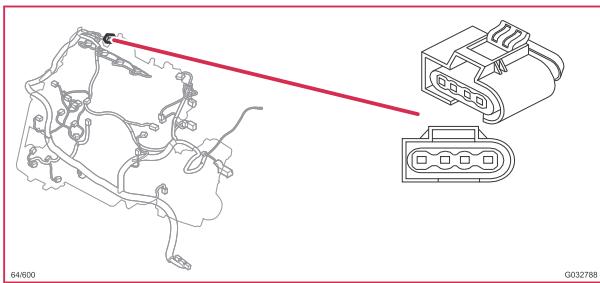


64/707 Connector

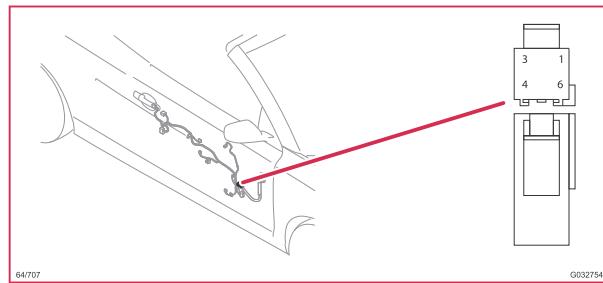

64/660 Connector

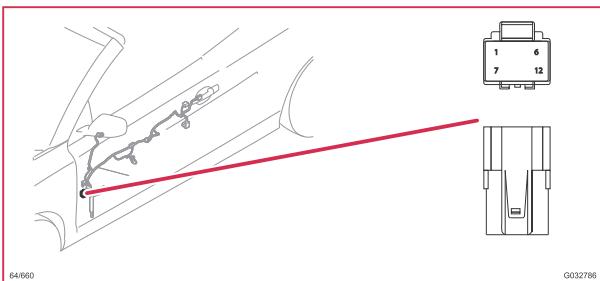


64/708 Connector

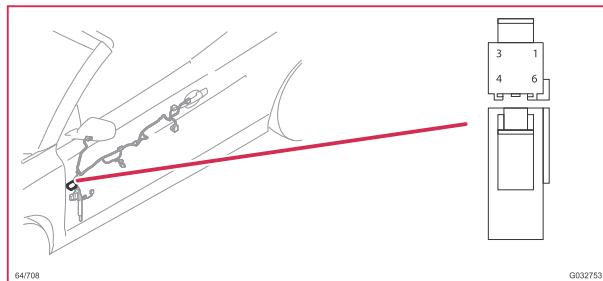


Component illustrations

64/791 - 64/1400


64/791 Connector

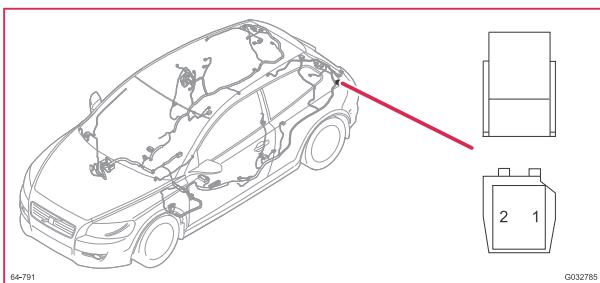


64/956 Connector

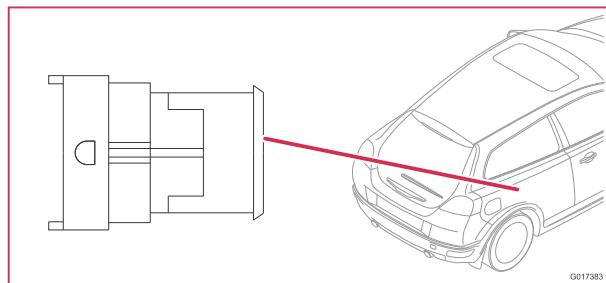


64/816 Connector

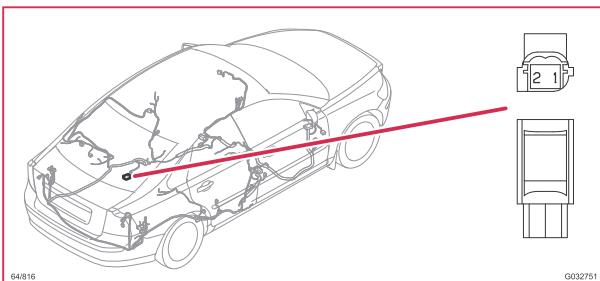


64/972 Connector

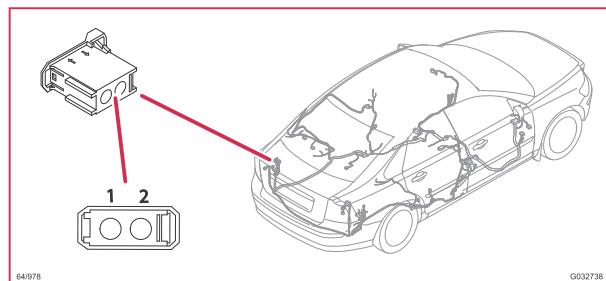


64/817 Connector

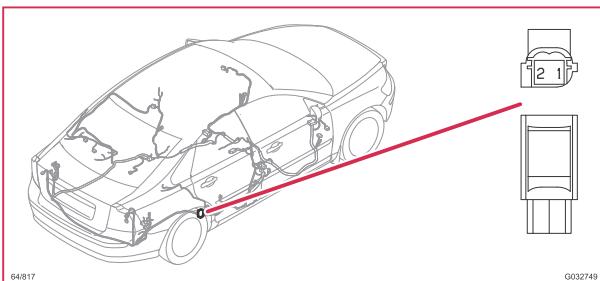


64/978 Connector

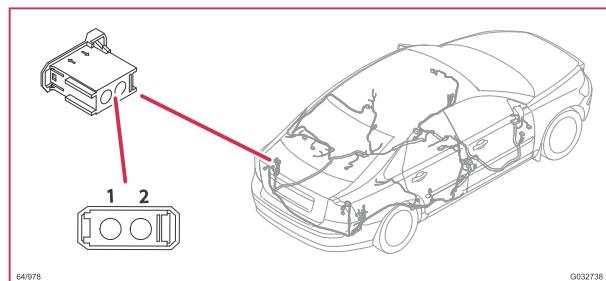


64/861 Connector

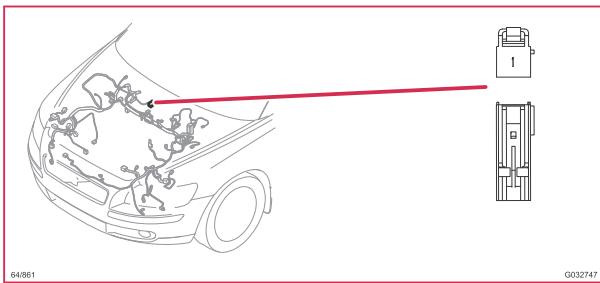


64/1300 Connector

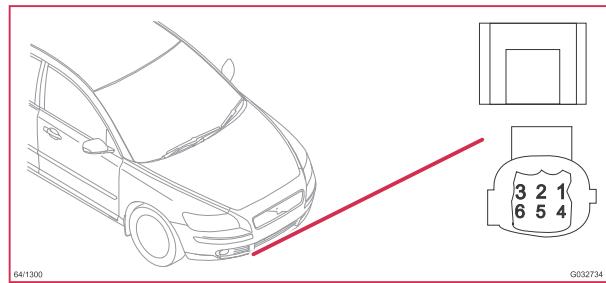

64/862 Connector

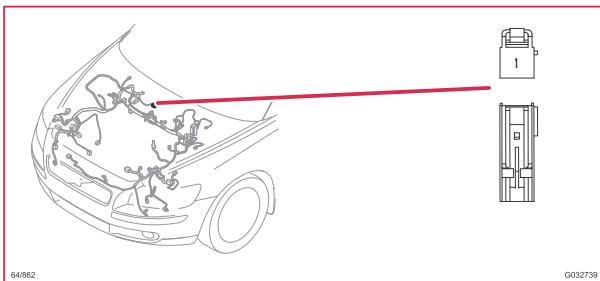


64/1400 Connector

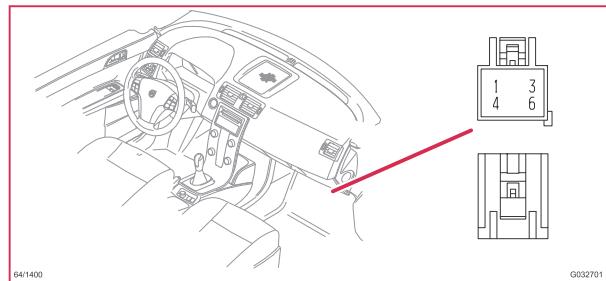


Component illustrations

F/no. - 64X/322


F/no. Fuse, passenger compartment

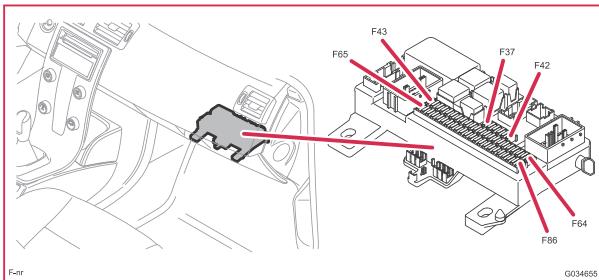


R/no. Relay, soldered

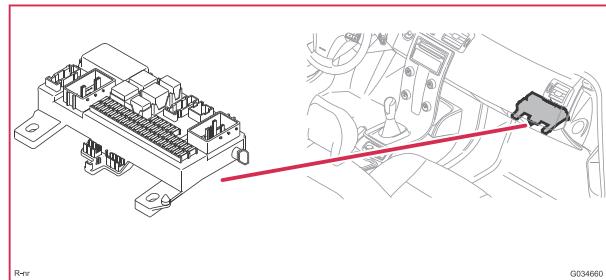


F/no. Fuse, engine compartment

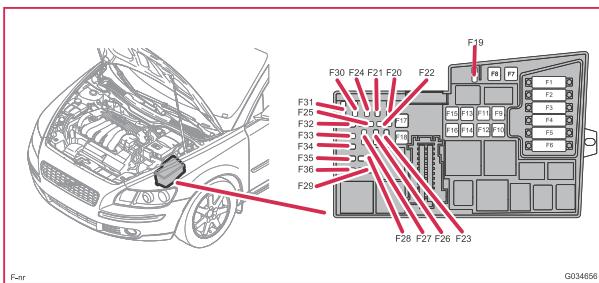

R/no. Relay, engine compartment

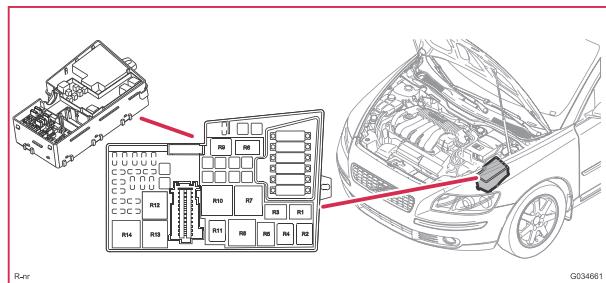

FH/no. Fuse in holder

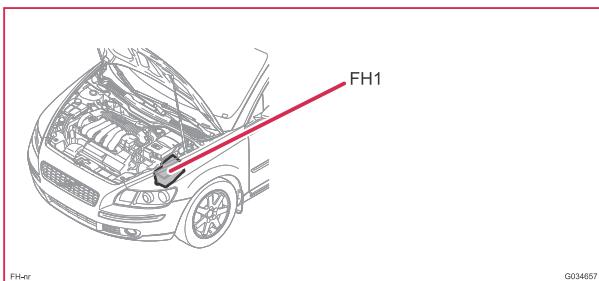

4X/110 Connector interface, original car

10X/17C Connector interface, original car

10X/18C Connector interface, original car

16X/1A Connector interface, original car

16X/1B Connector interface, original car

16X/105A Connector interface, original car


16X/105B Connector interface, original car

17X/19 Connector interface, original car


64X/25G Connector interface, original car

64X/322 Connector interface, original car

PF/no. Main fuse by battery

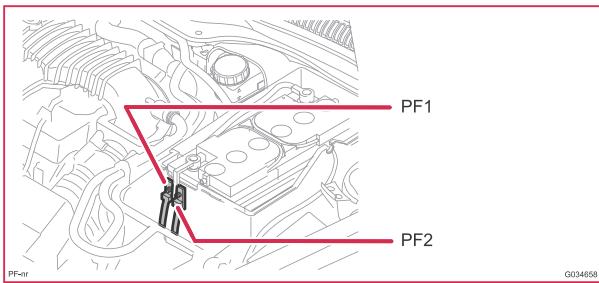

R/no. Relay, passenger compartment

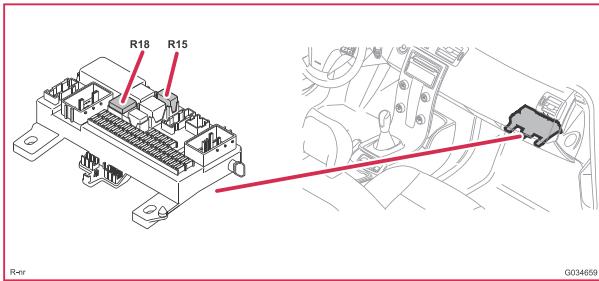

Index 1:2

A

Abbreviations	6
Accessory electronic module (AEM)	49, 112
Accessory USB unit (AUU)	123
Active headlight, (Dual Xenon)	73
Additional electrical equipment, Group 36	93
Alcohol lock	111
Alternator and voltage regulator, Group 32	68
Anti-theft alarm	108, 110
Audio	127
Audio C70	129
Audio High Performance/Premium Sound	130
Audio High Performance/Premium Sound C70	132
Audio, alternative connection	128
Automatic transmission AW55-51	149
Automatic transmission AWF21	150
Automatic transmission MPS6	152
Auxiliary heater	193
Auxiliary lights	92

B

Blind spot information system	176
Bluetooth	140
Bluetooth Handsfree & AUU, external amplifier	144
Bluetooth Handsfree & AUU, internal amplifier	143
Bluetooth Handsfree with AEM, external amplifier	147
Bluetooth Handsfree with AEM, internal amplifier	145
Bluetooth Handsfree, external amplifier	142
Bluetooth Handsfree, internal amplifier	141
Brake control system & DSTC	154
Brake control system & STC	153
Brake lights	78
Brake system, Group 59	153
Branching points	240

C

Cable harness routing in vehicle	252
Cable harness towbar/tow hitch 13 pin	121
Cable harness towbar/tow hitch 4-pin	117
Cable harness towbar/tow hitch 7 pin	119
Cellular phone	134
Central Electronic Module (CEM)	40
Central locking	158
Central locking front doors	156
Central locking fuel filler flap	164
Central locking rear doors	157
Central locking storage compartment	162
Central locking trunk lid/tailgate	159
Child safety lock	163
Climate control system Diesel	188
Climate control system PTC-elements	192
Climate control system, 4-Cyl.	186
Climate control system, 5-Cyl.	190
Climate control system, Group 87	186
Color abbreviations	6
Component illustrations	276
Connectors	202
Control module overview locations	38
Control modules	38
Control modules overview designations	39
Cooling fan	50
Cooling system, Group 26	50
Countries/Markets, abbreviations	6
Cruise control	51

D

Dashboard harness	256
-------------------------	-----

Data communication high speed CAN	44
Data communication MOST	45
Data communication, LIN	46
Data communication, Low speed CAN	42
Diagnostics system	116
Direction indicator	93, 95
Direction indicator (Dual-Xenon)	94, 96
Doors and openings, Group 83	156
Driver information module	124
Driver's door harness	268, 269, 270

E

Electric engine heater Flexifuel	195
Electrical distribution overview	9
Emission control	66
Emission control 4-Cyl. 1.6l	65
Engine compartment harness	255
Engine controls, Group 27	51
Engine harness	252
Engine management system Diesel, 4-Cyl. 1.6l	60
Engine management system Diesel, 5-Cyl. 2.0l	62
Engine management system, 4-Cyl. 1.6l	54
Engine management system, 4-Cyl. 2.0l	56
Engine management system, 5-Cyl. Turbo	58
Explanations	6
Exterior decorative elements, etc. Group 84	172

F

Floor harness	257
Fog lights	82
Fog lights Japan	84
Follow-me-home lighting	90
Fuse holder midi	17
Fuses	11
Fuses at Battery	23
Fuses in the Central Electronic Module (CEM)	18
Fuses in the engine compartment distribution box	11

G

Ground connections	30
Ground connections overview	30
Group no. explanations	6

H

Harness rear door	272
Hazard warning flashers	93, 95
Hazard warning flashers (Dual-Xenon)	94, 96
Heated door mirrors	174
Heated rear window	175
Heated seats	185
High and low beam	72
Horn	107
How to use the wiring diagrams	7

I

Ignition switch (SCU)	48
Ignition switch and relays	24
Ignition switch symbols	6
Ignition system/control system, Group 28	54
Immobilizer	106
Instrument and control illumination	91
Instruments, Group 38	124
Interior equipment, Group 85	177
Interior lighting	86
Internal equipment, Group 88	196

Index 2:2

K

Keyless vehicle 102

L

Lighting, Group 35 72

M

Main fuse box battery 16

Memory function driver's seat 177

Multimedia & Traffic information 136

O

Other relays 29

Other, abbreviations 6

Other, Group 39 127

Outlet 12V 114

P

Parking assistance 101

Parking heater 193

Parking light 74, 76

Parking light (Dual Xenon) 75, 77

Passenger door harness 268, 271

Portable navigation system 139

Power door mirrors 172

Power driver's seat 181

Power driver's seat with memory function 177, 178

Power passenger seat 183

Power roof C70 171

Power sunroof 170

Power supply 68

Power windows C70 168

Power windows front doors 167

Power windows rear doors 169

R

Rain sensor 100

Rear side panel harness 273

Rear-view mirror with automatic dimming 200

Relay in extra holder engine compartment 26

Relay, electric engine heater 194

Relays 24

Relays in Distribution box engine compartment 25

Relays in the Central Electronic Module (CEM) 27

Relays soldered in Central electronic module (CEM) 28

Relays, general 24

Remote control garage opening 201

Reversing lights 80

Roof harness 265

Running light 74, 76

Running light (Dual Xenon) 75, 77

S

Satellite radio 137

Seat belt reminder 125

Signal receiver central locking 165

Speed dependent power steering 155

Start/stop function 53

Starting system 70

Starting system, Group 33 70

Steering Column Lock Module (SCL) 106

Steering, Group 64 155

Subwoofer C70 138

Supplemental restraint system 196, 198

T

Table of Contents 3

Tail lights 74, 76

Tail lights (Dual Xenon) 75, 77

Tailgate harness 274, 275

Transmission M66 151

Transmission, Group 43 149

Tunnel harness 267

W

Washer headlights 98

Wiper/Washer rear window 99

Wiper/Washer Windshield 97

Wiring and fuses, Group 37 114

List of components 1:7

1/1	Battery	3/62	Hood alarm contact
1/3	Secondary battery	3/76	Lock unit, rear left door
2/14	Relay, glow plug system	3/77	Lock unit, rear right door
2/16	Relay, rear window wiper	3/78	Lock unit trunk lid/tailgate, C30
2/17	Relay, horn	3/80	Lock unit trunk lid/tailgate, S40
2/22	Relay, climate control system	3/81	Switch, central locking system, driver's door
2/23	Relay, fuel pump	3/82	Power window switches, driver's door
2/32	Main relay, engine management system	3/83	Switch, central locking system, passenger door
2/34	Relay, front fog lights	3/85	Switch, passenger door power window
2/35	Relay, starter motor	3/86	Power window switch, rear left door
2/63	Relay, high beam	3/93	Power window switch, right rear door
2/64	Relay, auxiliary lights (accessory)	3/94	Contact, driver's seat belt buckle
2/71	Relay cellular phone handsfree	3/100	Contact, passenger seat belt buckle
2/80	Relay, reversing lights	3/110	Lock unit, driver's door
2/82	Relay, heated rear window	3/111	Lock unit, passenger door
2/89	Relay, interior lighting	3/112	Light Switch Module (LSM)
2/92	Relay, windshield washer motor	3/117	Climate Control Module (CCM)
2/93	Relay, rear window washer motor	3/126	Switch unit, ceiling light
2/133	Relay vacuum pump	3/127	Driver Door Module (DDM)
2/142	Relay pre-heater fuel filter	3/128	Passenger Door Module (PDM)
2/159	Relay, infotainment	3/129	Left rear door module (LDM)
2/182	Relay, headlight washer motor	3/156	Right rear door module (RDM)
2/192	Relay, electric engine heater, 4-Cyl.	3/157	Gear Selector Module (GSM)
2/192	Relay, electric engine heater, 5-Cyl.	3/173	Switch, passenger side airbag
2/193	Relay, comfort functions	3/217	Switch, trunk lid/tailgate private lock
2/239	Relay coolant pump	3/218	Contact, LH rear belt buckle
2/242	Relay isolator battery	3/219	Contact, center rear belt buckle
2/243	Relay isolator secondary battery	3/254	Contact, RH rear belt buckle
2/247	Relay autostart	3/255	Steering Wheel Module (SWM)
3/1	Ignition switch	3/256	Position sensor, driver's seat
3/4	Switch unit, cruise control (SWS)	3/267	Position sensor, passenger seat
3/6	Switch, hazard warning flashers	3/268	Switch unit, telematics
3/8	Switch, heated rear window/rearview mirrors	3/271	Load assistance switch
3/9	Contact brake light	3/273	Contact, immobilizer, clutch pedal
3/10	Reversing light contact	3/274	Lock contact, LH front door
3/25	Power sunroof switch	3/275	Lock contact, RH front door
3/25	Switch, power roof, C70	3/276	Lock contact, LH rear door
3/26	Switch unit, power driver's seat	3/281	Lock contact, RH rear door
3/27	Switch unit, power passenger seat	3/286	Infotainment Control Module (ICM)
3/35	Switch, handle, trunk lid, C30	3/286	Switch BLIS/PAS/DRIVe, C30/S40/V50
3/35	Switch, handle, trunk lid/tailgate, S40/V50	3/287	Switch BLIS/PAS/DRIVe, C70
3/37	Contact horn	3/287	Switch, rear seat entry, left C30
3/39	Clutch pedal contact	3/288	Switch, rear seat entry, left C70
3/46	Seat contact, passenger seat	3/288	Switch, rear seat entry, right C30
3/47	Parking brake contact	3/293	Switch, rear seat entry, right C70
3/60	Switch, auxiliary lights		Handsfree control panel cellular phone

List of components 2:7

4/7	Combustion Preheater Module (CPM)	6/17	Driver seat motor, up/down front edge
4/9	Supplemental Restraint System Module (SRS)	6/18	Driver seat motor, up/down rear edge
4/16	Brake Control Module (BCM)	6/19	Driver seat motor, forward/backward
4/28	Transmission Control Module (TCM)	6/20	Passenger seat motor, forward/backward
4/31	Passenger compartment fan control module	6/25	Starter motor
4/33	Sunroof control module	6/26	Alternator
4/46	Engine Control Module (ECM), 4-Cyl. 1.6l D	6/28	Motor, passenger compartment fan
4/46.2	Engine Control Module (ECM), 5-Cyl. Turbo	6/29	Motor, electric cooling fan
4/46.3	Engine Control Module (ECM), 5-Cyl. 2.0l D	6/32	Rear window wiper motor
4/46.5	Engine Control Module (ECM), 4-Cyl. 1.6l D	6/33	Fuel pump
4/46.6	Engine Control Module (ECM), 4-Cyl. 2.0l	6/35	Fuel pump, auxiliary heater
4/46.7	Engine Control Module (ECM), 4-Cyl. 1.6l	6/37	Lock motor, fuel filler cover
4/50	Electronic throttle module	6/38	Left-hand headlight level adjustment motor
4/52	Power Seat Module (PSM)	6/39	Right-hand headlight level adjustment motor
4/56	Central Electronic Module (CEM)	6/48	Damper Motor Module (DMM), recirculation
4/56 A-H	Central Electronic Module (CEM)	6/62	Power rear-view mirror driver's door
4/59	Convertible Roof Module (CRM)	6/63	Power passenger door mirror
4/71	Cooling fan control module	6/64	Passenger seat motor, backrest angle
4/76	Remote control unit for garage door opener	6/65	Passenger seat motor, up/down front edge
4/78	Accessory electronic module (AEM)	6/66	Passenger seat motor, up/down rear edge
4/83	Fuel pump control module	6/67	Pump, fuel leakage control
4/86	Parking Assistance Module (PAM)	6/71	Electrical power steering module (EPS)
4/93	Keyless Vehicle Module (KVM)	6/73	Coolant pump, auxiliary heater
4/102	Steering Column Lock Module (SCL)	6/95	Damper Motor Module (DMM), temperature, left side
4/109	Glow plug control module	6/96	Damper Motor Module (DMM), temperature, right side
4/110	Trailer Module (TRM)	6/102	Damper Motor Module (DMM), defroster
4/114	Headlamp Control Module (HCM)	6/103	Damper Motor Module (DMM), floor/ventilation
4/119	Remote Receiver Module (RRX)	6/104	High pressure headlight washer motor
4/119	Remote Keyless Entry (RKE)	6/114	Vacuum pump
4/124	Accessory USB unit (AUU)	6/117	Interior temperature sensor
4/126	Left Camera Module (LCM)	6/118	Regulator motor, swirl throttle
4/127	Right Camera Module (RCM)	6/120	Engine throttle body
5/1	Driver Information Module (DIM)	6/143	Regulator motor, Turbo
6/1	Wiper Motor Module (WMM)	6/149	Electric catch motor
6/2	Washer pump	6/155	Pump unit, roof operation
6/16	Driver seat motor, backrest angle		

List of components 3:7

7/4	Brake fluid level sensor	7/149	Rain Sensor Module (RSM)
7/5	Washer fluid level sensor	7/154	Sensor fuel temperature
7/6	Oil pressure monitor, 4-Cyl.	7/156	Pressure and temperature sensor fuel, Turbo
7/6	Oil pressure monitor, Turbo	7/158	Rear mass movement sensor, C70
7/8	Pressure sensor, climate control system	7/159	Air Quality Sensor (AQS)
7/12	Solar sensor, twilight sensor and indicator alarm	7/160	Brake vacuum sensor
7/15	Heated oxygen sensor, front	7/162	Pressure sensor, fuel line
7/16	Sensor, coolant temperature	7/163	Camshaft position sensor 2
7/17	Mass air flow sensor (MAF), Turbo	7/164	Body Sensor Cluster Stability Sensor (BSC)
7/24	Front knock sensor, 4-Cyl.	7/165	Pressure and temperature sensor, intake manifold
7/24	Front knock sensor, Turbo	7/166	Oil level sensor
7/25	Impulse sensor, 4-Cyl.	7/172	Position sensor camshaft, intake side, 5-Cyl.
7/25	Impulse sensor, Turbo	7/172	Position sensor camshaft, intake side, 4-Cyl.
7/25	Impulse sensor, Diesel		Diesel
7/31	Sensor ABS, front left	7/173	Camshaft position sensor, exhaust side, 5-Cyl.
7/32	Sensor ABS, front right	7/173	Position sensor camshaft, outlet side, 5-Cyl
7/35	Oil level sensor		Diesel
7/41	Temperature sensor evaporator		Differential pressure sensor, particle filter
7/51	Accelerator pedal sensor	7/174	Front impact sensor, right
7/56	Sensor ABS, rear left	7/178	Front impact sensor, left
7/57	Right-hand rear ABS sensor	7/179	Remote control IR sensor, RTI
7/61	Input speed sensor	7/182	Temperature sensor, catalytic converter
7/62	Output speed sensor	7/190	Temperature sensor, particle filter
7/69	Sensor outdoor temperature	7/191	Position sensor turbo
7/74	Fluid temperature sensor, automatic transmission	7/193	Belt retractor sensor, driver
7/82	Heated oxygen sensor, rear	7/195	Belt retractor sensor, passenger
7/93	Occupant Weight Sensor (OWS)	7/198	Detector, windshield frame
7/100	Level sensor, alarm	7/199	Ultrasonic sensor (IMS)
7/101	Glass-break sensor	7/202	EGR bypass position sensor
7/108	Left-hand rear side impact sensor	7/204-	Front parking assistance sensor
7/109	Right-hand rear side impact sensor	7/207	Hall sensor cargo compartment
7/110	Temperature sensor, driver's seat	7/220	Position sensor, rear roof section
7/111	Temperature sensor, passenger seat	7/221	Position sensor, front roof section
7/115	Side impact sensor, left B-post	7/222	Detector, cargo compartment
7/116	Side impact sensor, right B-post	7/223	Hall sensor roof
7/120	Angle sensor, Bi-Xenon rear	7/224	Side impact sensor, left door, C30/C70
7/121	Angle sensor, Bi-Xenon front	7/228	Side impact sensor, right door, C30/C70
7/122	Mass Movement Sensor module (MMS), front C70	7/229	Sensor, folding of backrest
7/123	Clutch pedal sensor	7/230	Sensor, folding of backrest
7/124	Sensor brake pedal	7/231	Alcolock sensor
7/130	Fuel level sensor, ejector side	7/238	Sensor battery monitoring
7/131-	Rear parking assistance sensor	7/240	Gear position sensor neutral position
7/134	Sensor fuel level, pump side	7/243	Brake vacuum sensor
7/143		7/251	

List of components 4:7

8/3	Electromagnetic clutch, climate control system	9/1	Front 12V outlet
8/6-10	Injection valves	9/2	Heated rear window
8/18	EVAP valve	9/12	Seat Heating Module (SHM), driver's side
8/19	Solenoid, variable valve timing, intake	9/13	Seat Heating Module (SHM), passenger side
8/28	Turbo control valve	9/16	Heating element, driver's seat backrest
8/30	Airbag igniter, driver's side	9/17	Heating element, passenger seat backrest
8/31	Airbag igniter, passenger side	9/18	Heating element, driver's seat cushion
8/32	Igniter, airbag stage 2, passenger side	9/19	Heating element, passenger seat cushion
8/33	Igniter, belt tensioner, driver's side	9/25	Rear 12V outlet
8/34	Igniter, belt tensioner, passenger side	9/30	Auxiliary heater
8/36	Solenoid shift lock	9/32	PTC resistor, crankcase ventilation
8/37	Automatic transmission	9/33	Electrically heated rear-view mirror, driver's door
8/38	Shift solenoid 1	9/34	Electrically heated rear-view mirror, passenger door
8/39	Shift solenoid 2	9/38	Electrically heated fuel filter
8/40	Lock-up solenoid	9/41	PTC-element
8/41	Pressure solenoid	9/41.1	Electric engine heater
8/45	Solenoid, variable valve timing, intake	10/1	Lamp housing, front left
8/48	Auto-dimming rearview mirror	10/2	Lamp housing, front right
8/51	Igniter side airbag, driver's side	10/3	License plate lighting
8/52	Igniter side airbag, passenger side	10/5	Fog light, front left
8/55	Igniter, rear left belt tensioner	10/6	Fog light, front right
8/56	Igniter, rear right belt tensioner	10/11	Front left running/parking light
8/57	Igniter, left anti-roll bar	10/12	Front right running/parking light
8/58	Igniter, right anti-roll bar	10/13	Front left direction indicator
8/61	Driver's side airbag igniter, stage 2	10/14	Front right direction indicator
8/66	Igniter, left inflatable curtain, S40/V50	10/14	Direction indicator, rear-view mirror driver's door
8/66	Igniter, left inflatable curtain, C70	10/16	Direction indicator, passenger door mirror
8/67	Igniter, right inflatable curtain, S40/V50	10/17	Lamp housing, rear right, C30
8/67	Igniter, right inflatable curtain, C70	10/17	Lamp housing, rear right, S40/V50
8/71	Throttle solenoid	10/17	Lamp housing, rear right, C70
8/72	Shift solenoid 3	10/18	Lamp housing, rear left, C30
8/73	Shift solenoid 4	10/18	Lamp housing, rear left, S40/V50
8/74	Shift solenoid 5	10/18	Lamp housing, rear left, C70
8/81	Solenoid, variable valve timing, exhaust	10/19	Auxiliary brake lights, C30
8/84	Switch, vacuum pump	10/19	Auxiliary brake light, S40/V50
8/92	Lap belt tensioner, driver	10/19	Auxiliary brake lights, C70
8/98	Control valve fuel pressure	10/22	Ceiling light
8/99	Steering column igniter	10/24	Cargo compartment lighting, C30
8/111	Control valve fuel flow	10/24	Cargo compartment lighting, S40
8/113	EGR bypass valve	10/24	Cargo compartment lighting, C70
8/114	Valve mixing air/fuel	10/25	Cargo compartment lighting
8/119	Pressure monitor, climate control system	10/26	Reading light, rear left
8/120	EGR valve, 4 Cyl.	10/27	Reading light, rear right
8/120	EGR valve, 5 Cyl.	10/29	Glove compartment lighting
8/127	Pressure switch, climate control system	10/43	Right brake light, C30
8/128	Driver's belt force limiter		
8/129	Passenger belt force limiter		
8/134	Solenoid, reverse interlock, manual		

List of components 5:7

10/43	Right brake light, S40/V50	15/31	Distribution box in engine compartment
10/43	Right brake light, C70	15/34	Main fuse box battery
10/44	Right tail light 1, C30	15/37	Fuse holder midi
10/44	Right tail light 1, S40/V50	16/1	Integrated Audio Module (IAM)
10/44	Right tail light 1, C70	16/3	Right-hand front door speaker
10/45	Right tail light 2, C30	16/4	Left-hand front door speaker
10/45	Right tail light 2, S40/V50	16/5	Right-hand rear door speaker
10/45	Right tail light 2, C70	16/6	Left-hand rear door speaker
10/46	Right rear fog light, C30	16/9	Window antenna
10/46	Right rear fog light, S40/V50	16/10	Horn 1
10/46	Right rear fog light, C70	16/11	Horn 2
10/47	Right rear direction indicator, C30	16/16	Amplifier window antenna, S40/V50
10/47	Right rear direction indicator, S40/V50	16/16	Window antenna amplifier, right, C30
10/47	Right rear direction indicator, C70	16/26	Center dashboard speaker
10/48	Right reversing light, C30	16/35	Siren Control Module (SCM)
10/48	Right reversing light, S40/V50	16/45	Portable navigation system
10/48	Right reversing light, C70	16/46	RTI Display
10/50	Left brake light, C30	16/47	Antenna GSM/GPS/RDAR, C30/S40/V50
10/50	Left brake light, S40/V50	16/47	GSM/GPS/RDAR antenna, C70
10/51	Left tail light 1, C30	16/50	Left-hand rear window antenna
10/51	Left tail light 1, S40/V50	16/60	Phone Module (PHM)
10/51	Left tail light 1, C70	16/67	Antenna amplifier, bumper
10/52	Left tail light 2, C30	16/68	TMC and FM subantenna, bumper
10/52	Left tail light 2, S40/V50	16/79	Subwoofer Module (SUB)
10/52	Left tail light 2, C70	16/98	Microphone
10/53	Rear left fog light, C30	16/105	Audio module (AUD)
10/53	Rear left fog light, S40/V50	16/108	Multimedia Module (MMM)
10/53	Rear left fog light, C70	16/127	Microphone, mobile phone handsfree
10/54	Rear left direction indicator, C30	16/132	Antenna, door lock, bumper
10/54	Rear left direction indicator, S40/V50	16/133	Antenna door lock cabin 1 rear
10/54	Rear left direction indicator, C70	16/134	Antenna, door lock, passenger compartment 2
10/55	Left reversing light, C30	16/135	Antenna, door lock, passenger compartment 3
10/55	Left reversing light, S40/V50	16/136	LH rear door tweeter
10/55	Left reversing light, C70	16/137	RH rear door tweeter
10/64	Right-hand high beam	16/138	Rear window antenna, right C30/V50
10/65	Auxiliary light, front right	16/140	SIM card reader
10/66	Right-hand low beam	16/141	Interference filter, rear window, left
10/68	Left-hand high beam	16/142	Interference filter, rear window, right
10/69	Auxiliary light, front left	16/145	Remote Digital Audio Receiver (RDAR)
10/70	Left-hand low beam	16/147	Bluetooth Phone Module (BPM)
10/97	Courtesy lighting, left	16/150	Window antenna amplifier, C30
10/102	Courtesy lighting, right	16/150	AM/FM antenna and amplifier, right rear fender, C70
10/114	Left-hand vanity mirror lighting	16/151	Distribution filter, front left door
10/115	Right-hand vanity mirror lighting	16/152	Distribution filter, front right door
10/148	Lighting, rear-view mirror driver's door	16/155	Speaker, driver's door
10/149	Lighting, rear-view mirror passenger door	16/156	Speaker, passenger door
10/150	Rear reading light, C30	16/157	Treble speaker, driver's door
10/150	Rear reading light, S40/V50	16/158	Treble speaker, passenger door
10/245	Lock indicator, left door	16/159	Control module, cellular phone handsfree
10/246	Lock indicator, right door		
10/255	Warning lights BLIS left		
10/256	Warning lights BLIS right		

List of components 6:7

17/13	Data link connector	64/41	Connector
17/19	12V outlet, cargo compartment	64/43	Connector
17/37	4-pin outlet, tow hitch cable harness	64/45	Connector
17/38	7-pin outlet, tow hitch cable harness	64/47	Connector
17/39	13-pin outlet, tow hitch cable harness	64/48A	Connector
17/40	Auxiliary equipment input (AUX)	64/48	Connector, S40
17/42	USB-port	64/48	Connector, V50
		64/49	Connector
18/4	Contact reel	64/50	Connector
		64/51	Connector
20/3-7	Spark plug and ignition coil	64/53	Connector
20/17	Transformer, ignition coils	64/70	Connector
20/22-26	Glow plug	64/80	Connector
		64/80A	Connector
26/5	DC/AC converter, fuel tank	64/90	Connector
		64/97	Connector
31/3	Ground connection, left MacPherson strut tower	64/111	Connector
31/4	Ground connection, engine	64/113	Connector
31/6	Ground connection, A-post, driver's side	64/114	Connector
31/10	Ground connection, A-post, passenger side	64/120	Connector
31/11	Ground connection, rear left side	64/179	Connector
31/12	Ground connection, rear right side	64/190	Connector
31/66	Ground connection, Front seat riser, left side	64/191	Connector
31/67	Ground connection, front right seat riser	64/231	Connector
31/80	Ground connection, Left wheel housing	64/232	Connector
31/83	Ground connection, A-post, driver's side	64/233	Connector
31/84	Ground connection, A-post, passenger side	64/234	Connector
31/88	Ground connection, engine	64/245	Connector
31/89	Ground connection, engine	64/246	Connector
31/102	Ground connection, front member, 4-Cyl.	64/250	Connector
31/107	Ground connection, tailgate (V50)	64/322	Connector
31/110	Ground connection, right MacPherson strut tower	64/333	Connector
31/112	Ground connection, right MacPherson strut tower	64/425	Connector
31/114	Ground connection, Left wheel housing	64/545	Connector
31/115	Ground connection, left A-post	64/596	Connector
31/116	Ground connection, right A-post	64/600	Connector
31/119	Ground connection, Left wheel housing	64/660	Connector
31/131	Ground connection, Behind lamp housing, front left	64/661	Connector
31/132	Ground connection, left MacPherson strut tower	64/662	Connector
		64/663	Connector
		64/707	Connector
		64/708	Connector
		64/791	Connector
		64/816	Connector
63/no.	Branching point	64/817	Connector
		64/861	Connector
64/10B	Connector, C70	64/862	Connector
64/25G	Connector	64/956	Connector
64/27	Connector	64/972	Connector
64/30	Connector	64/978	Connector
64/31	Connector	64/1300	Connector
64/35	Connector	64/1400	Connector

List of components 7:7

F/no.	Fuse, passenger compartment
F/no.	Fuse, engine compartment
FH/no.	Fuse in holder
PF/no.	Main fuse by battery
R/no.	Relay, passenger compartment
R/no.	Relay, soldered
R/no.	Relay, engine compartment
4X/110	Connector interface, original car
10X/17C	Connector interface, original car
10X/18C	Connector interface, original car
16X/1A	Connector interface, original car
16X/1B	Connector interface, original car
16X/105A	Connector interface, original car
16X/105B	Connector interface, original car
17X/19	Connector interface, original car
64X/25G	Connector interface, original car
64X/322	Connector interface, original car