



Volvo S60
(2003-2004)



Wiring Diagrams and Electric Model Year 2004

Abbreviations.....	3
How to use the wiring diagrams	4

Electrical distribution

Overview.....	6
---------------	---

Fuses

Engine compartment 11A/1-8.....	8
Engine compartment 11B/1-9	9
Engine compartment 11B/11-23	10
Passenger compartment 11C/1-9	11
Passenger compartment 11C/10-21	12
Passenger compartment 11C/22-27	13
Passenger compartment 11C/28-31	14
Passenger compartment 11C/32-38	15
Cargo compartment 11D/1-18.....	16
Cargo compartment 11E/1-7	17

Relays/Shunts

Ignition switch and relays	18
Engine compartment FMA2 - FST3	19
Passenger compartment CMA2 - CSH4.....	20
Cargo compartment RMA1 - RSH6	21
Other relays	22

Ground connections

31/1 - 31/10.....	23
31/44 - 31/70	24
31/72 - 31/83	25
31/84 - 31/91	26
31/93 - 31/96	27
31/98	28

Control modules

Accessory Electronic Module (AEM)	29
Overview, location.....	30
Overview, designations.....	31
Central Electronic Module (CEM)	32
Rear Electronic Module (REM)	34
Data communication	36

Group 23

Engine management system, 5-cyl normally aspirated.....	38
Engine management system, 5-cyl Turbo.....	40
Engine management system, 6-cyl.....	42
Engine management system, Bifuel.....	44
Engine management system, Diesel.....	46
Emission control, 5-cyl normally aspirated	48
Emission control, 6-cyl & 5-cyl Turbo	49

Group 26

Cooling fan.....	50
------------------	----

Group 27

Cruise control.....	51
---------------------	----

Group 32

Power supply.....	52
-------------------	----

Group 33

Starting system	53
-----------------------	----

Group 35

Main and dipped beam	54
Main and dipped beam, Bi-Xenon.....	55
Fog lights.....	56
Position/parking lights, tail lights and license plate lighting.....	57
Brake lights.....	58
Reversing lights	59
Interior lighting	60
Beam length adjustment.....	61
Safety lighting	62
Auxiliary light.....	63

Group 36

Indicators and warning lights.....	64
Horn	65
Wiper/washer, windscreen.....	66
Wiper/washer, headlights	67
Accessory Electronic Module (AEM).....	68
Rain sensor	69
Anti-theft alarm.....	70
Parking Assistance system S80	71
Parking Assistance system	72
Electronic immobilizer.....	73

Group 37

Trailer functions	74
Towing bracket wiring, 7-pin	75
Towing bracket wiring, 13-pin.....	76
Diagnostics system.....	77
12V outlet.....	78
12V cargo compartment socket	79

Group 38

Driver information module	80
Driver information module, Bi-fuel	81
Seat belt reminder.....	82

Group 39

Road Traffic Information RTI.....	83
Audio with auxiliary amplifier	84
Audio	86
CD changer	87
Mobile phone.....	88
Handsfree.....	89
Audio adapter wiring	90

Group 43

Automatic transmission, AW55-50SN/AW50AWD.....	91
Automatic transmission, 4T65EV	92
Geartronic	93

Order number TP 3970032

Replaces previous manual TP 3970031

Shift lock.....	94
Differential Electronic Module (DEM)	95
Group 59	
Brake Control Module (BCM)	96
Group 64	
Electronic power steering	97
Group 76	
Four-C	98
Group 83	
Power windows	99
Central locking.....	100
Power sunroof.....	101
Group 84	
Heated rear window	102
Heated door mirrors	103
Power door mirrors	104
Group 85	
Heated seats	105
Power driver's seat	106
Power passenger seat	107
Group 87	
Manual climate control (MCC)	108
Electronic climate control (ECC)	109
Parking heater, auxiliary heater.....	110
Parking heater, remote start.....	111

Parking heater, Call start	112
Relay, engine heater	113
Short stop heater	114

Group 88

SRS Supplemental Restraint System.....	115
Electrically adjustable head restraint	116
Remote garage door opener	117

Connectors..... 118

Junction points..... 136

Cable harness routing in vehicle

Engine harness Petrol	146
Engine harness Diesel.....	147
Transmission harness 4T65EV	148
Front engine compartment harness LHD	149
Front engine compartment harness RHD	150
Front passenger compartment harness LHD	151
Front passenger compartment harness RHD	152
Rear passenger compartment harness	153
Cargo compartment harness.....	153
Roof harness & boot lid/tailgate	154
Door harness.....	155
Bifuel harness.....	156


Component illustrations..... 157

Index 197

List of components

Fuses

Engine compartment 11B/1-9

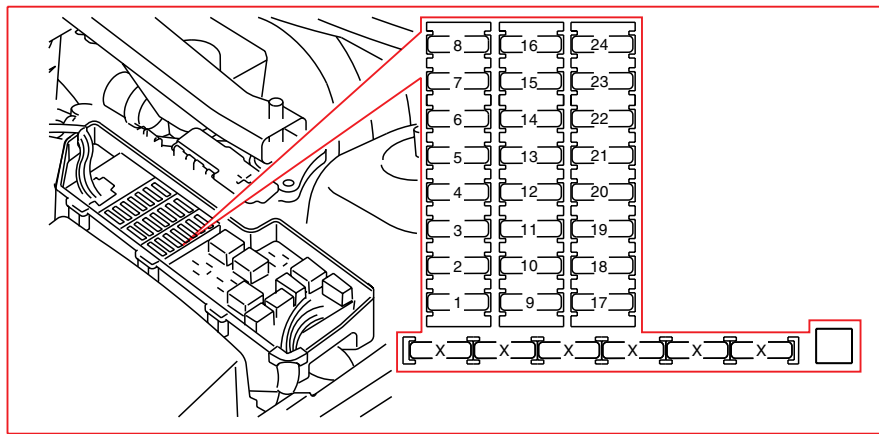


11B Fuses in the engine compartment

No.	Fuse function	via	A
1	6/35 Fuel pump, auxiliary heater 6/73 Coolant pump, auxiliary heater 9/30 Auxiliary heater	4/7 4/7 4/7	25
2	Accessory (auxiliary light)		20
4	4/46 Engine Control Module (ECM), Diesel, Bi-fuel 7/15 Lambda probe 7/82 Lambda probe, diagnosis 1 7/103 Lambda probe 3 7/104 Lambda probe 4 (diagnostic probe) 8/111 Solenoid valve, high-pressure diesel		20
5	6/67 Pump, fuel leakage control 6/105 Fuel distributor, gas 8/18 EVAP valve 8/19 Solenoid, variable valve time, inlet 8/28 Turbocharger control valve 8/75 Valve, fuel cut-off DFCO 8/81 Solenoid, variable valve timing outlet 9/32 PTC resistor, air preheating, 5-cyl Petrol, Bi-Fuel		10
6	7/17 Mass airflow meter MAF, Diesel 4/46 Engine Control Module (ECM), Petrol 7/17 Mass airflow sensor (MAF), Petrol 8/6-11 Injectors		5 15
7	4/46 Engine Control Module (ECM), 5-cyl normally aspirated 4/50 Electronic Throttle Module (ETM), Bi-Fuel		10
8	6/44 Cooling fan, electrics box, engine compartment 7/51 Accelerator pedal sensor 8/3 Electromagnetic clutch, climate control system	2/22	10
9	2/17 Horn relay 16/10 Horn 1 16/11 Horn 2	2/17 2/17	15
	continues		

Control modules

Central Electronic Module (CEM)

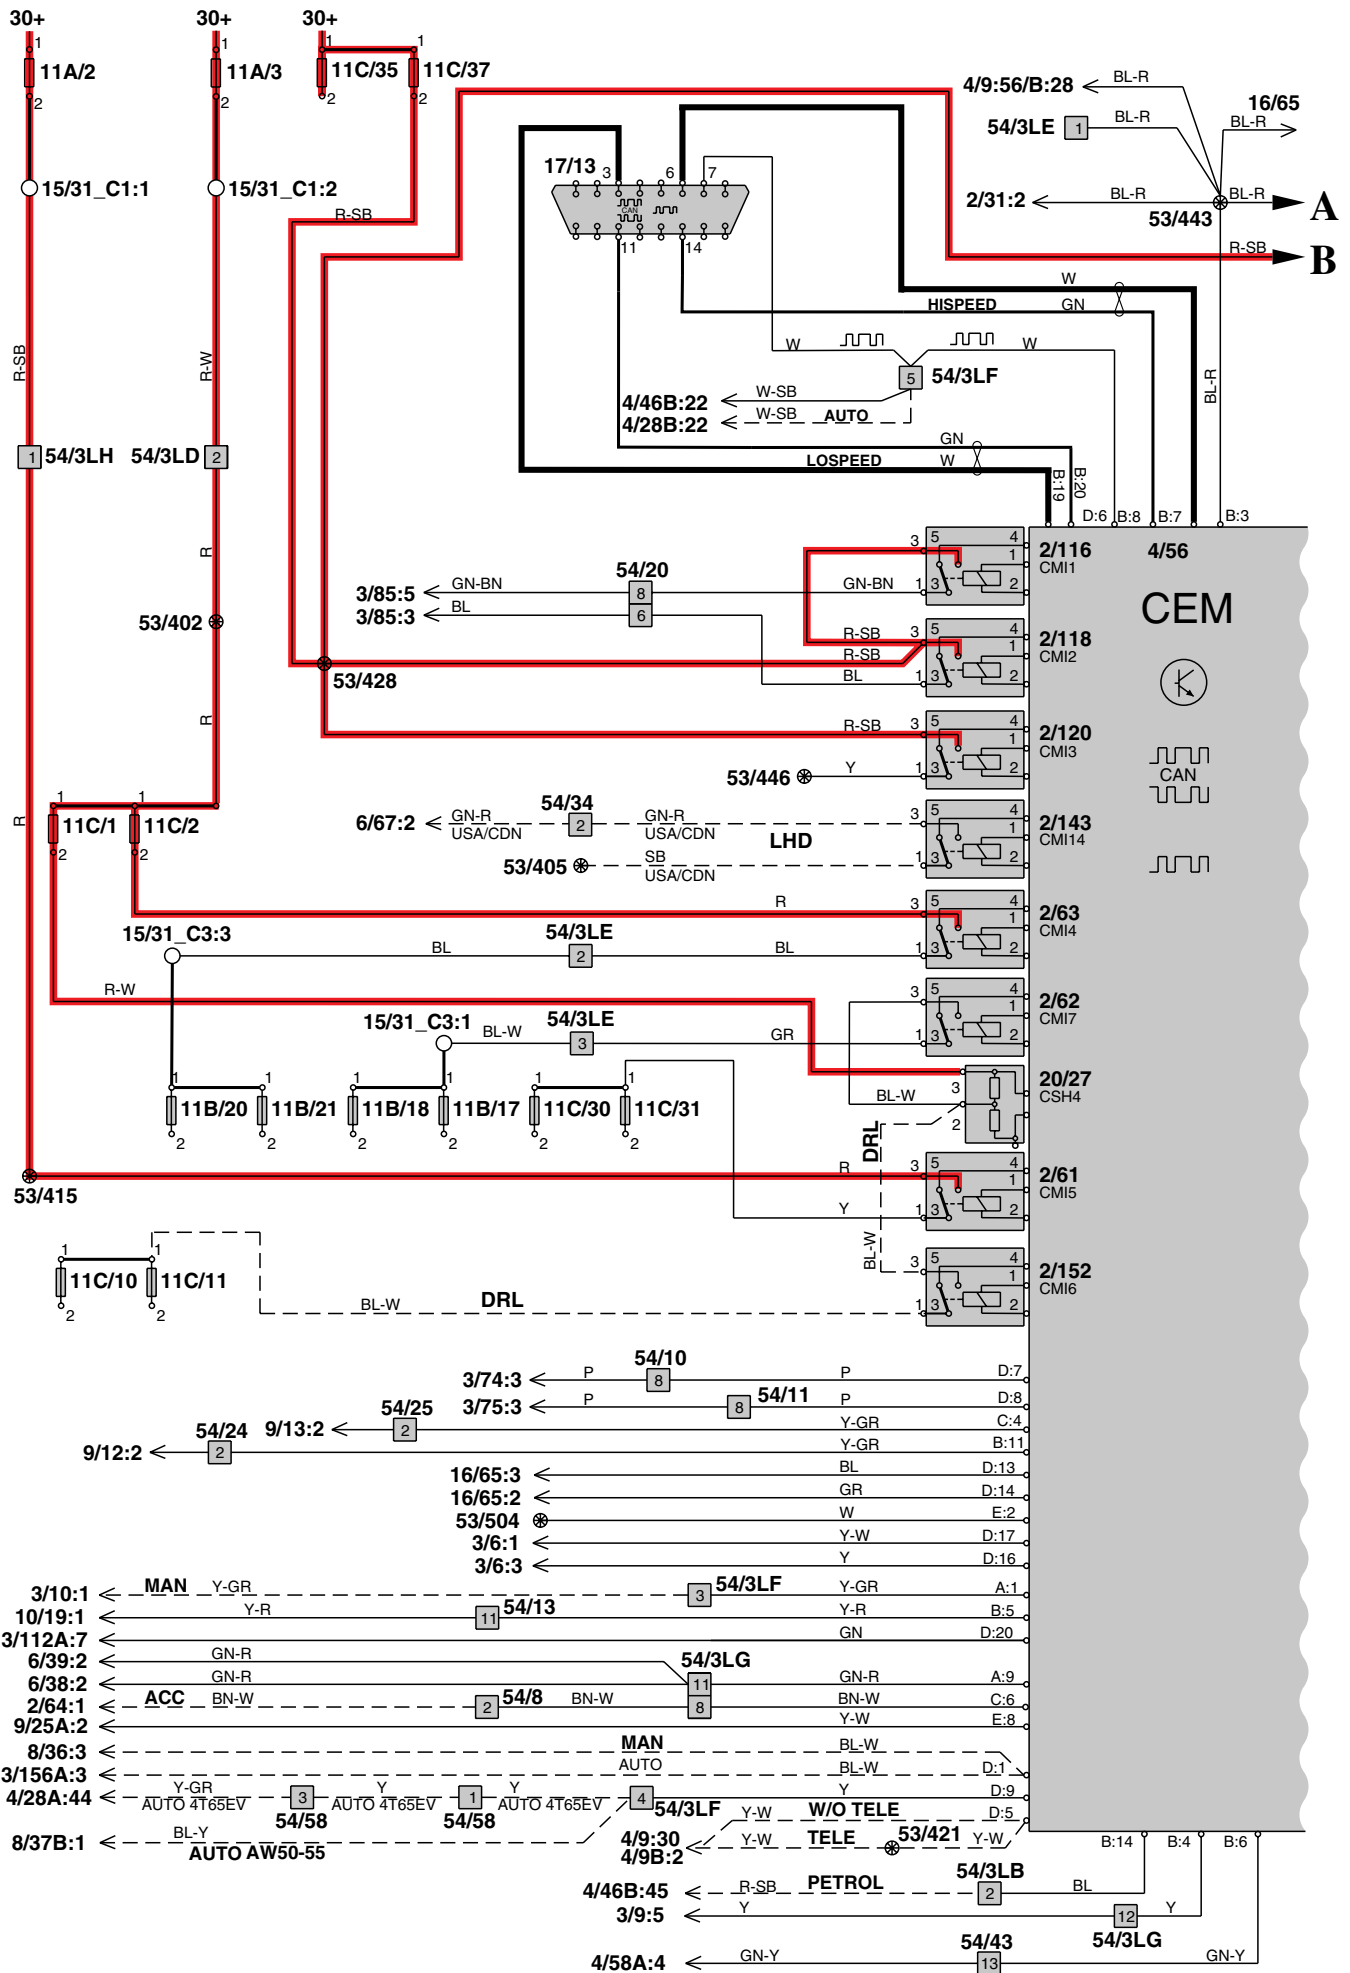

Cable harness routing in vehicle

Engine harness Petrol

