



Volvo V70
(2008-2009)



Wiring Diagrams and Electric Model Year 2009



VOLVO V70 (08-), XC70 (08-) & S80 (07-)

WIRING DIAGRAM 2009



TP 39128202

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)	2
Explanations	6
Abbreviations	6
How to use the wiring diagrams 1:2	7
Electrical distribution 1:2	9

Fuses

Distribution box in engine compartment F1-F7	11
Distribution box in engine compartment F9-F24	12
Distribution box in engine compartment F25-F30	13
Distribution box in engine compartment F31-F37	14
Distribution box in engine compartment F38	15
Distribution box in engine compartment F39-F44	16
Fuses in the Central electronic module (CEM) F1 - F11	17
Fuses in the Central electronic module (CEM) F13 - F19	18
Fuses in the Central electronic module (CEM) F20 - F28	19
Passenger compartment	20
Distribution box in engine compartment FA1-FA12	21
Distribution box in engine compartment FB1-FB12	22
Distribution box in engine compartment FD1-FD7	23
Battery PF1-PF2	24

Relays

Relays in engine compartment R2	25
Relays in engine compartment R8 - R9	26
Relays in engine compartment R10 - R13	27
Cargo compartment	28
Distribution box in cargo compartment RA1-RD1	29
Central Electronic Module (CEM)	30

Ground connections

Overview	31
31/1 - 31/6	32
31/7 - 31/10	33
31/15 - 31/47	34
31/48 - 31/68	35
31/83 - 31/88	36
31/89 - 31/95	37
31/96 - 31/XX15	38
31/TRM - 31/AL	39

Control modules

Overview of locations	40
Overview of designations	41
Central Electronic Module (CEM) 1:3	42
Data communication high speed CAN	45
Data communication high speed CAN, 4-Cyl.	46
Midspeed CAN data communication, LHD	47
Midspeed CAN data communication, RHD	48
Data communication LIN 1:2	49
Data communication MOST	51
Steering Wheel Module (SWM)	52

Group 23 Fuel system

Engine management system, 4-Cyl. 1:2	53
Engine management system, 5-Cyl. Turbo 1:2	55
Engine management system, 4-Cyl. Diesel 1:2	57
Engine management system, 6-Cyl. 1:2	59
Engine management system, 6-Cyl. Turbo 1:2	61
Engine management system, 8-Cyl. 1:2	63
Engine management system, 5-Cyl. Diesel 1:3	65
Emission control, 4-Cyl.	68
Emission control, 5-Cyl. Turbo	69
Emission control, 6-Cyl.	70
Emission control, 8-Cyl.	71

Group 26 Cooling system

Cooling fan, 5-Cyl. Turbo & 6-Cyl.	72
Cooling fan, 4-Cyl.	73
Cooling fan, 5-Cyl. Diesel	74
Cooling fan, 4-Cyl. Diesel	75
Cooling fan, 8-Cyl.	76

Group 27 Engine controls

Cruise control, 4-Cyl.	77
Cruise control, 4-Cyl. Diesel	78
Cruise control, 5-Cyl. & 6-Cyl.	79
Cruise control, 5-Cyl. Diesel	80
Cruise control, 8-Cyl.	81

Group 32 Alternator and voltage regulator

Power supply	82
--------------------	----

Group 33 Starting system

Starting system	83
Starting system, 4-Cyl.	84

Table of Contents 2:3

Group 35 Lighting

High and low beam	85
High and low beam (Bi-Xenon®)	86
Beam length adjustment, manual	87
Beam length adjustment, automatic (Bi-Xenon®)	88
Running-/ Parking lights, Tail lights V70	89
Running-/ Parking lights, Tail lights S80	90
Running light/ Parking light, Tail lights (Bi-Xenon®) V70	91
Running light/ Parking light, Tail lights (Bi-Xenon®) S80	92
Fog lights V70	93
Fog lights S80	94
Brake light V70	95
Brake light S80	96
Reversing lights V70	97
Reversing lights S80	98
Follow-me-home lighting, LHD	99
Follow-me-home lighting, RHD	100
Interior lighting, LHD 1:2	101
Interior lighting, RHD 1:2	103
Active headlights	105
Lighting in sill moldings	106
Auxiliary lights	107
Lighting in doors LHD	108
Lighting in doors RHD	109
Lighting mug holder and floor	110

Group 36 Additional electrical equipment

Rain sensor	111
Direction indicator and Hazard warning flashers LHD V70	112
Direction indicator and Hazard warning flashers LHD S80	113
Direction indicator and Hazard warning flashers RHD V70	114
Direction indicator and Hazard warning flashers RHD S80	115
Windshield wiper/washer	116
High-pressure headlight washer	117
Wiper/washer rear window	118
Horn	119
Keyless vehicle 1:2	120
Anti-theft alarm	122
Parking assistance	123
Collision warning with brake servo	124
Tire pressure warning (TPMS)	125
Alcolock	126

Group 37 Wiring and fuses

Diagnostics system	127
12V outlet	128
Tow hitch cable harness, 4-pin V70	129
Tow hitch cable harness, 4-pin S80	130
Tow hitch cable harness, 7-pin V70	131
Tow hitch cable harness, 7-pin S80	132
Tow hitch cable harness, 13-pin V70	133
Tow hitch cable harness, 13-pin S80	134
Accessory USB unit (AUU)	135

Group 38 Instruments

Seat belt reminder	136
Driver information module	137
Analog clock	138

Group 39 Other

Audio Premium 1:3	139
Audio 1:2	142
Cellular phone 1:2	144
DAB Radio	146
Bluetooth phone system	147
Bluetooth Handsfree	148
Multimedia & Traffic information	149
Rear seat entertainment	150
Satellite radio	151
Parking camera	152
Navigation system, portable	153

Group 43 Transmission

M66 transmission	154
Automatic transmission TF-80SC AWD	155
Differential Electronic Module (DEM)	156

Group 55 Parking brake

Electronic parking brake	157
--------------------------------	-----

Group 59 Brake system

Brake control system & DSTC	158
-----------------------------------	-----

Group 64 Steering

Electronic power steering	159
---------------------------------	-----

Group 76 Shock absorbers

Four-C	160
--------------	-----

Table of Contents 3:3

Group 83 Doors and openings

Central locking, front doors, LHD.....	161
Central locking, front doors, RHD	162
Central locking, rear doors.....	163
Central locking, trunk lid V70	164
Central locking, trunk lid S80	165
Central locking, fuel filler flap.....	166
Signal receiver, central locking	167
Front door power windows, LHD	168
Front door power windows, RHD	169
Rear door power windows	170
Power sunroof.....	171

Group 84 Exterior decorative elements, etc.

Power door mirrors, LHD	172
Power door mirrors, RHD	173
Heated door mirrors, LHD.....	174
Heated door mirrors, RHD	175
Blind spot information system LHD.....	176
Blind spot information system RHD	177
Heated rear window.....	178

Group 85 Interior equipment

Power driver's seat with memory function, LHD	179
Power driver's seat with memory function, RHD	180
Power passenger seat, LHD	181
Power passenger seat, RHD	182
Heated power front seats with fans	183
Heated power front seats without fans	184
Electrically heated rear seat	185
Massage seats.....	186

Group 87 Climate control system

Climate control system PTC-element	187
Climate control system, 4-Cyl. 1:2	188
Climate control system, 5-, 6- & 8-Cyl. 1:2	190
Climate control system, 5-Cyl. Diesel 1:2	192
Parking heater, auxiliary heater	194
Parking heater, remote start	195
Refrigeration box rear seat	196

Group 88 Internal equipment

Rear-view mirror with automatic dimming.....	197
Supplemental Restraint System (SRS) 1:2.....	198

Electrically adjustable head restraint	200
Remote garage door opener.....	201

Connectors..... 202

Cable harness routing in vehicle

Engine harness, 4-Cyl.....	239
Engine harness, 5-Cyl.....	239
Engine harness, 6-Cyl.....	240
Engine harness, 6-Cyl. Turbo	240
Engine harness, 8-Cyl.....	241
Engine harness, Diesel	241
Engine harness, 4-Cyl. Diesel.....	242
Harness engine compartment.....	243
Harness dashboard, LHD	244
Harness dashboard, RHD	245
Harness floor, LHD S80	246
Harness floor, RHD S80	247
Harness Floor, LHD V70	248
Harness Floor, RHD V70	249
Harness infotainment, LHD S80	250
Harness infotainment, RHD S80	251
Harness Infotainment, LHD V70	252
Harness Infotainment, RHD V70.....	253
Harness ceiling, S80	254
Harness ceiling, V70	254
Harness center console	255
Harness tunnel.....	255
Harness front door, left	256
Harness front door, right	256
Harness rear door, left	257
Harness rear door, right.....	257
Harness trunk lid/tailgate, S80	258
Harness trunk lid/tailgate, V70	258
Harnesses rear axle.....	259
Harnesses Executive	260

Branching points261


Component illustrations277

Index 1:2342

List of components 1:8344


Electrical distribution 2:2

Overview, rear electrical center

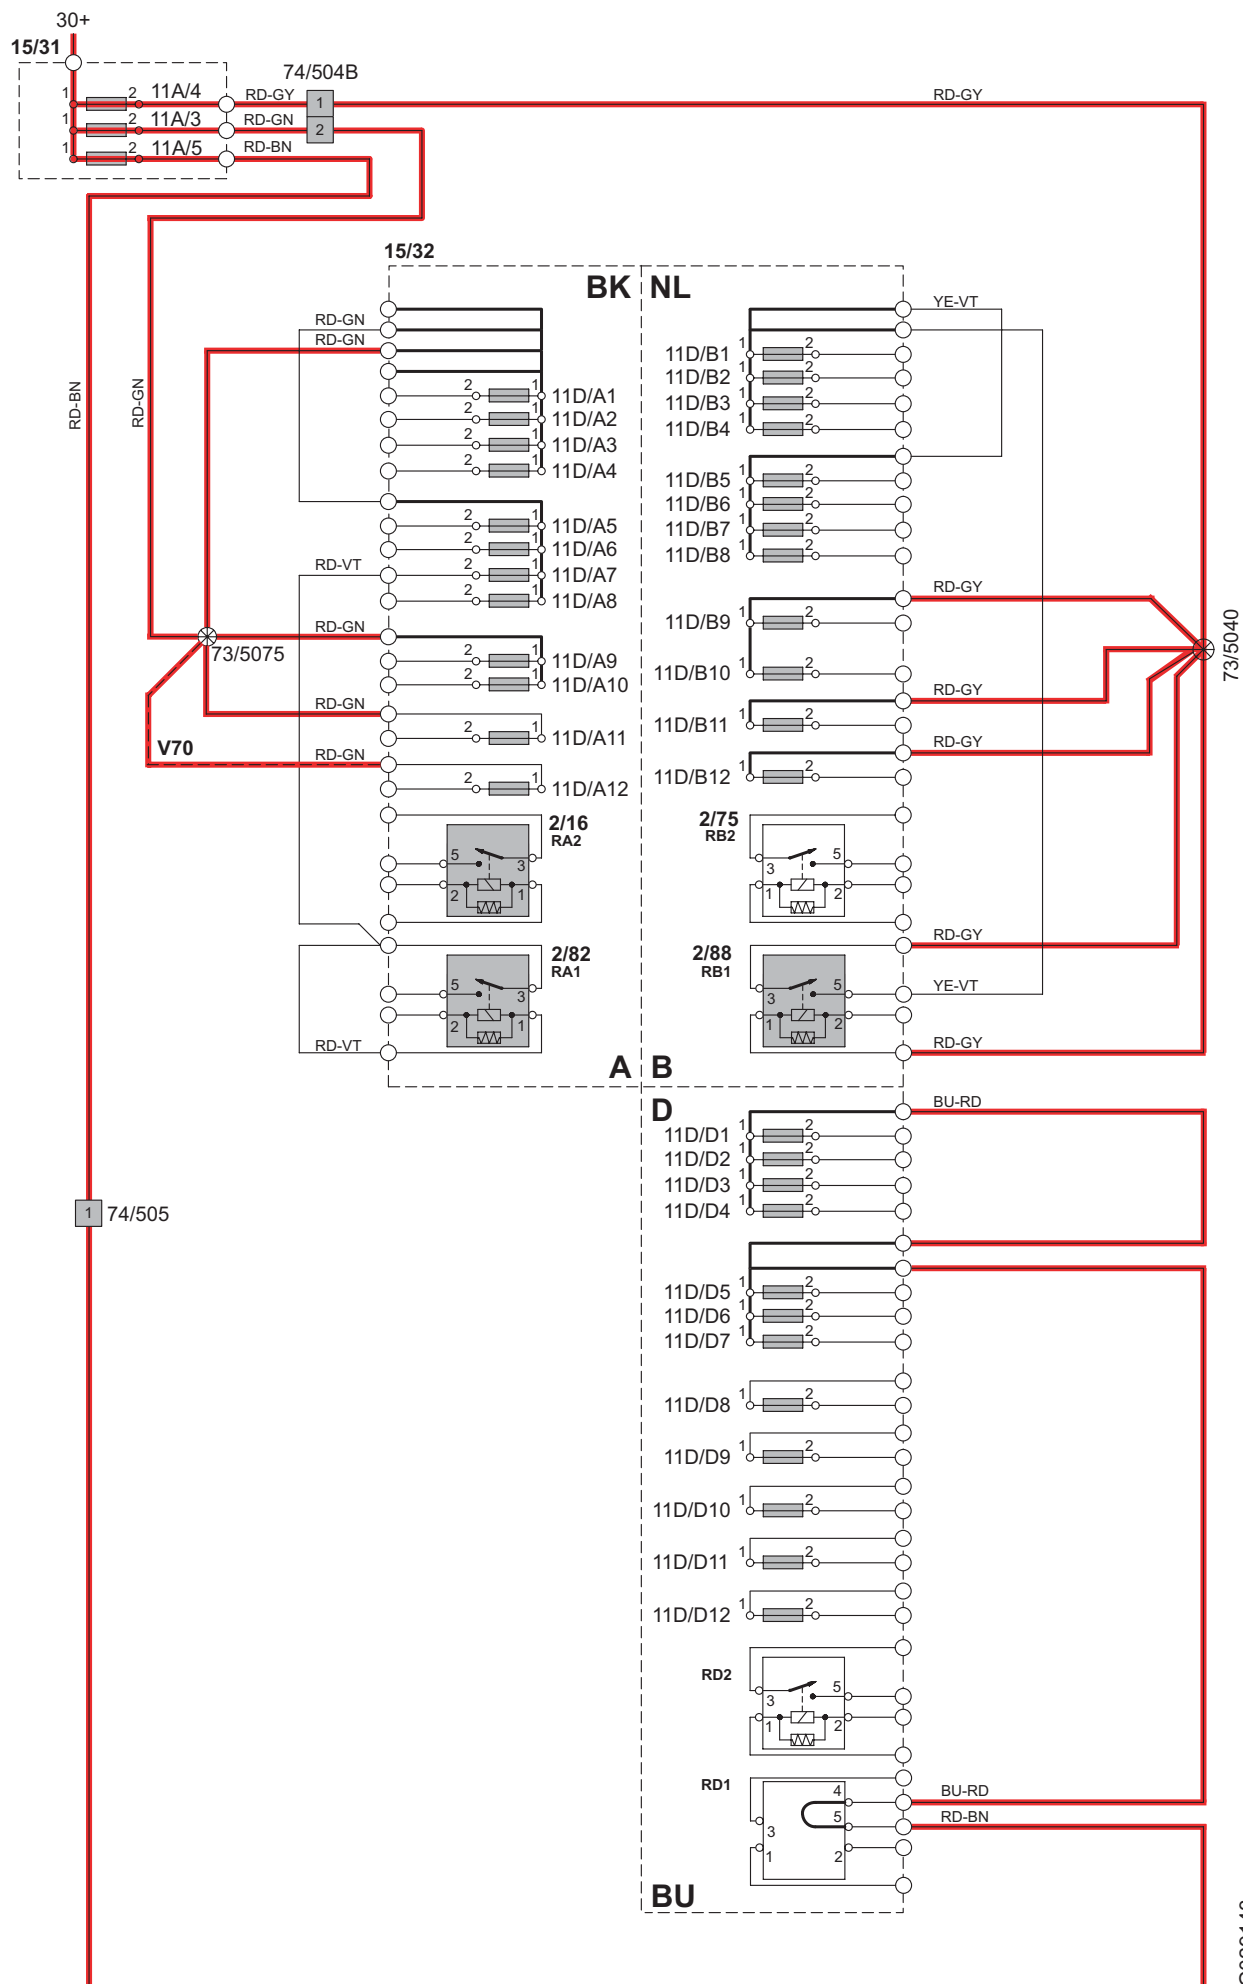

G029143


Fuses
Battery PF1-PF2

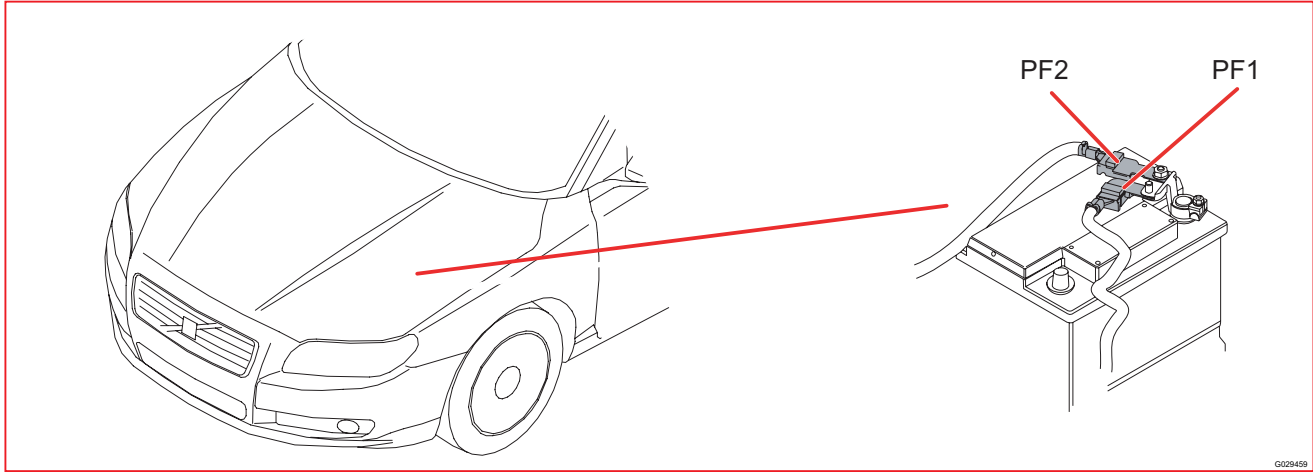

1/1 Battery


No.	Fuse function		via	A
PF1	11A/1-11A/7	Fuses in the engine compartment distribution box	-	150
	11B/8-11B/14	Fuses in the engine compartment distribution box	-	
	11B/16-11B/21	Fuses in the engine compartment distribution box	2/31	
	11B/22-11B/24	Fuses in the engine compartment distribution box	-	
	11B/25-11B/27	Fuses in the engine compartment distribution box	2/193	
	11B/28-11B/29	Fuses in the engine compartment distribution box	-	
	11B/30-11B/34	Fuses in the engine compartment distribution box	-	
	11B/35-11B/41	Fuses in the engine compartment distribution box	2/32	
PF2	11A/42-11A/44	Fuses in the engine compartment distribution box	-	150
	6/25	Starter motor	-	
	6/26	Alternator Control Module (ACM)	-	

Cable harness routing in vehicle Engine harness, 4-Cyl.

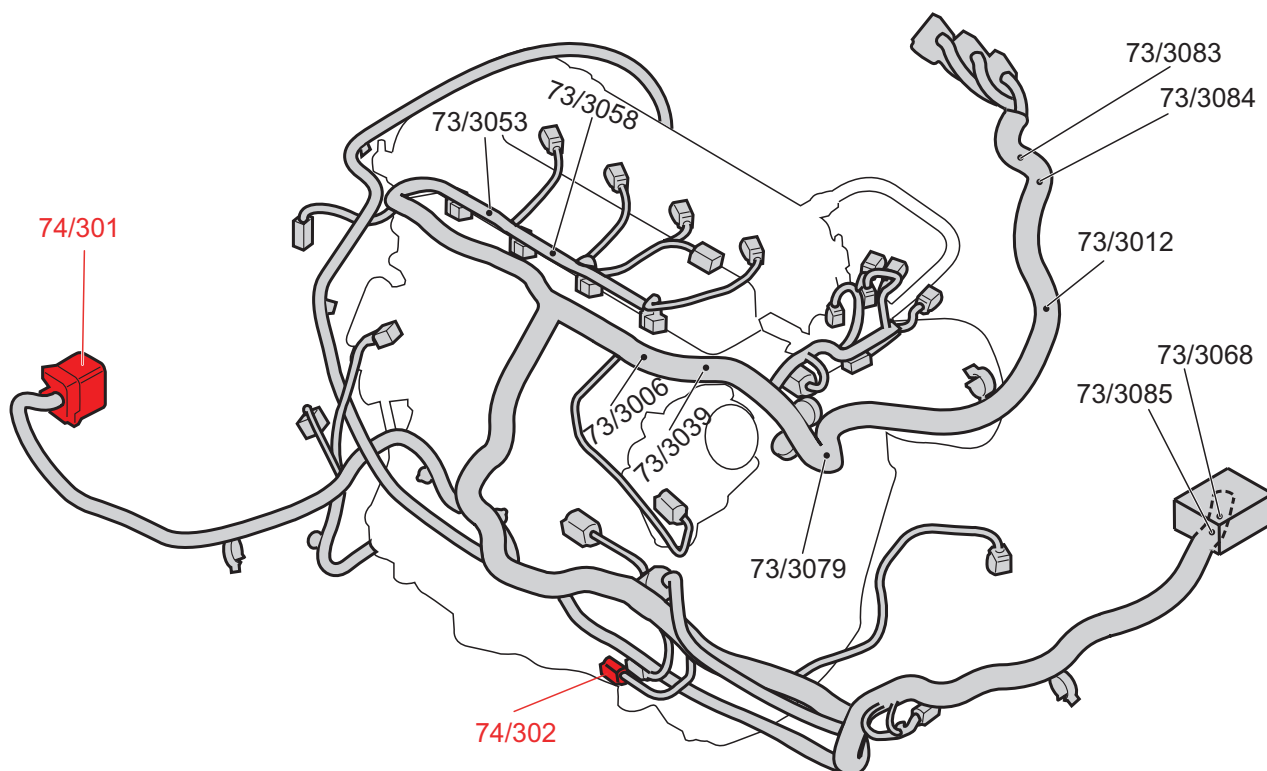

G028507

Cable harness routing in vehicle Engine harness, 5-Cyl.

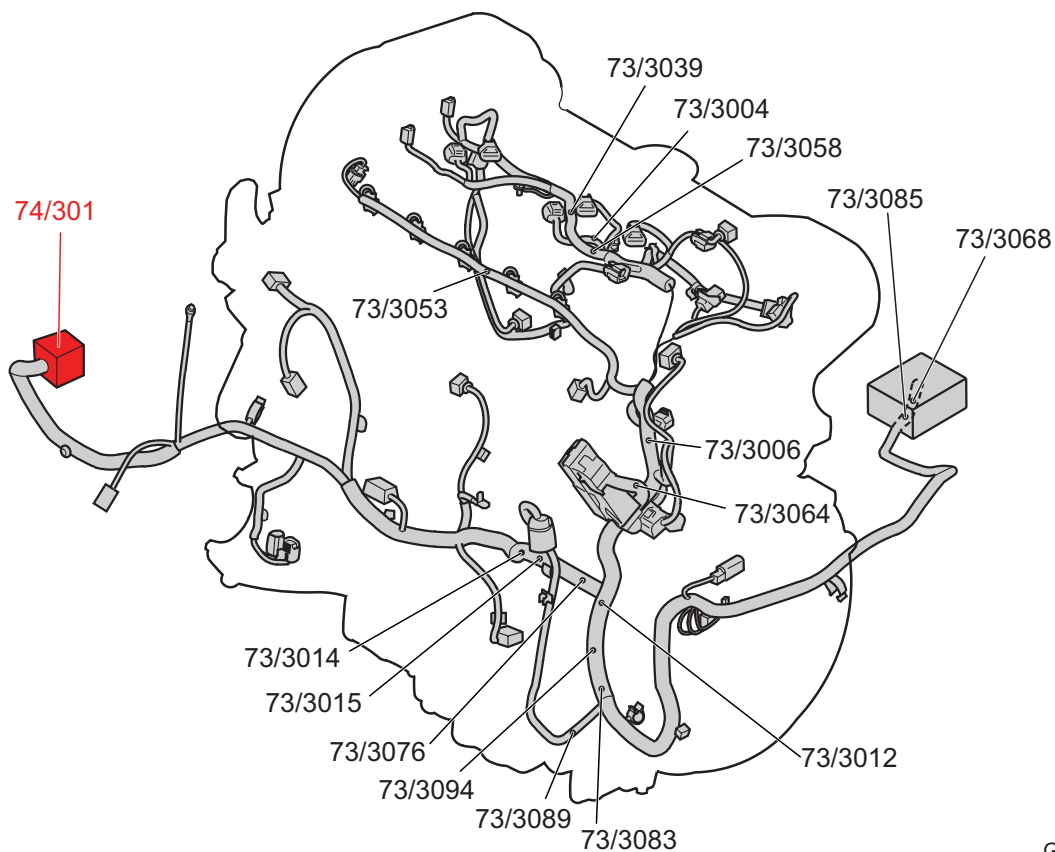

G035645