



Volvo V70
(2009-2010)



Wiring Diagrams and Electric Model Year 2010

Reparaturarbeiten sollten nur von geschultem Fachpersonal durchgeführt werden.

Bitte nutzen Sie bei allen Reparaturen die aufgeführten Spezialwerkzeuge.

Dieses Dokument ist urheberrechtlich geschützt. Jede über die oben beschriebene Speicherung für eigene Zwecke hinausgehende Vervielfältigung, jegliche Verbreitung und/oder öffentliche Zugänglichmachung – auch auszugsweise – stellt eine Urheberrechtsverletzung dar und wird vom Inhaber der ausschließlichen Nutzungsrechte sowohl zivil- als ggf. auch strafrechtlich verfolgt.

Weder Volvo noch die TEC-VERLAG GmbH geben eine Gewährleistung oder Garantie hinsichtlich der Richtigkeit der Angaben in diesem Dokument und haften für Schäden.

© Copyright by Volvo. Urheberrechtlich geschützt

Lizenziert durch:



TEC-VERLAG
TECHNISCHE SERVICELITERATUR



VOLVO V70 (08-), XC70 (08-) & S80 (07-)

WIRING DIAGRAM 2010



TP 39152202

Vehicles with SRS (Airbag)/SIPS bag/ IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box.

Changes introduced up to April 2009 inclusive

Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:

Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS) at

www.volvocarstechnicalinfo.ford.com/vss

We retain the right to make modifications

Table of Contents 1:3

| | |
|---|----|
| Vehicles with SRS (Airbag)/SIPS bag/ IC (Inflatable curtain) | 2 |
| Explanations | 6 |
| How to use the wiring diagrams 1:2..... | 7 |
| Electrical distribution 1:2 | 9 |
| Fuses | |
| Distribution box in engine compartment F1-F7 | 11 |
| Distribution box in engine compartment F9-F24..... | 12 |
| Distribution box in engine compartment F25-F31..... | 13 |
| Distribution box in engine compartment F32-F37..... | 14 |
| Distribution box in engine compartment F38 | 15 |
| Distribution box in engine compartment F38-F39..... | 16 |
| Distribution box in engine compartment F39-F44..... | 17 |
| Central Electronic Module (CEM) F1-F11..... | 18 |
| Central Electronic Module (CEM) F13-F19..... | 19 |
| Central Electronic Module (CEM) F20-F28..... | 20 |
| Passenger compartment..... | 21 |
| Distribution box in cargo compartment FA1-FA12..... | 22 |
| Distribution box in cargo compartment FB1-FB12..... | 23 |
| Distribution box in cargo compartment FD1-FD7 | 24 |
| Battery PF1-PF2..... | 25 |
| Relays | |
| Relays in the engine compartment R2..... | 26 |
| Relays in the engine compartment R8-R9..... | 27 |
| Relays in the engine compartment R10-R13..... | 28 |
| Cargo compartment..... | 29 |
| Distribution box in cargo compartment RA1-RD1..... | 30 |
| Central Electronic Module (CEM) | 31 |
| Ground connections | |
| Overview..... | 32 |
| 31/1 - 31/6 | 33 |
| 31/7 - 31/15 continues | 34 |
| 31/15 - 31/48 | 35 |
| 31/65 - 31/83 continues | 36 |
| 31/83 - 31/90 | 37 |
| 31/93 - 31/XX10..... | 38 |
| 31/XX14 - 31/AL | 39 |
| Control modules | |
| Overview locations..... | 40 |
| Overview designations..... | 41 |
| Central Electronic Module (CEM) 1:3 | 42 |
| Data communication high speed CAN..... | 45 |
| Data communication high speed CAN, 4-Cyl. | 46 |
| Data communication intermediate speed CAN, LHD... | 47 |
| Data communication intermediate speed CAN, RHD .. | 48 |
| Data communication, LIN 1:2..... | 49 |
| Data communication MOST | 51 |
| Steering Wheel Module (SWM) | 52 |
| Group 23 Fuel system | |
| Engine management system, 4-Cyl. 1:2 | 53 |
| Engine management system, 5-Cyl. Turbo 1:2..... | 55 |
| Engine management system, 6-Cyl. 1:2 | 57 |
| Engine management system, 6-Cyl. B6324S2 1:2 | 59 |
| Engine management system, 6-Cyl. Turbo 1:2..... | 61 |
| Engine management system, 8-Cyl. 1:2 | 63 |
| Emission control 4-Cyl. | 65 |
| Emission control 5-Cyl. Turbo..... | 66 |
| Emission control 6-Cyl. | 67 |
| Emission control 8-Cyl. | 68 |
| Engine management system, 4-Cyl. Diesel | |
| DW10 1:2..... | 69 |
| Engine management system, 4-Cyl. Diesel | |
| DV6B 1:3 | 71 |
| Engine management system, 5-Cyl. Diesel | |
| Single Turbo 1:3 | 74 |
| Engine management system, 5-Cyl. Diesel | |
| Twin Turbo 1:3..... | 77 |
| Group 26 Cooling system | |
| Cooling fan 4-Cyl. | 80 |
| Cooling fan, 5-Cyl. Turbo & 6-Cyl. | 81 |
| Cooling fan, 4-Cyl. Diesel | 82 |
| Cooling fan, 5-Cyl. Diesel | 83 |
| Cooling fan 8-Cyl. | 84 |
| Group 27 Engine controls | |
| Cruise control 4-Cyl. | 85 |
| Cruise control 4-Cyl. Diesel | 86 |
| Cruise control 5-Cyl. & 6-Cyl. | 87 |
| Cruise control 5-Cyl. Diesel | 88 |
| Cruise control 8-Cyl. | 89 |
| Group 32 Alternator and voltage regulator | |
| Power supply 4-Cyl. | 90 |
| Power supply | 91 |
| Group 33 Starting system | |
| Starting system 4-Cyl..... | 92 |
| Starting system 5-, 6- & 8-Cyl..... | 93 |
| Starting system 5-Cyl. Diesel..... | 94 |

Table of Contents 2:3

Group 35 Lighting

| | |
|---|-----|
| High and low beam | 95 |
| High and low beam (Dual Xenon) | 96 |
| Beam length adjustment, manual | 97 |
| Beam length adjustment, automatic (Dual Xenon) | 98 |
| Running/Parking lights, Tail lights V70 | 99 |
| Running/Parking lights, Tail lights S80 | 100 |
| Running/Parking lights, Tail lights (Dual Xenon) V70 | 101 |
| Running/Parking lights, Tail lights (Dual Xenon) S80 | 102 |
| Fog lights V70 | 103 |
| Fog lights S80 | 104 |
| Brake lights V70 | 105 |
| Brake lights S80 | 106 |
| Reversing lights V70 | 107 |
| Reversing lights S80 | 108 |
| Follow-me-home lighting LHD | 109 |
| Follow-me-home lighting RHD | 110 |
| Interior lighting, LHD 1:2 | 111 |
| Interior lighting, RHD 1:2 | 113 |
| Active headlight | 115 |
| Lighting in door sill trims | 116 |
| Auxiliary lights | 117 |
| Lighting mug holder and floor | 118 |

Group 36 Additional electrical equipment

| | |
|--|-----|
| Rain sensor | 119 |
| Direction indicator and hazard warning flashers LHD V70 | 120 |
| Direction indicator and hazard warning flashers LHD S80 | 121 |
| Direction indicator and hazard warning flashers RHD V70 | 122 |
| Direction indicator and hazard warning flashers RHD S80 | 123 |
| Wiper/washer windshield | 124 |
| High pressure headlight washer | 125 |
| Wiper/Washer rear window | 126 |
| Horn | 127 |
| Keyless vehicle 1:2 | 128 |
| Anti-theft alarm | 130 |
| Parking assistance | 131 |
| Collision warning with power brake booster | 132 |
| Tire pressure monitoring system (TPMS) | 133 |
| Alcohol lock | 134 |

Group 37 Wiring and fuses

| | |
|---|-----|
| Diagnostics system | 135 |
| Outlet 12V | 136 |
| Cable harness towbar/tow hitch 4-pin V70 | 137 |
| Cable harness towbar/tow hitch 4-pin S80 | 138 |
| Cable harness towbar/tow hitch 7-pin V70 | 139 |
| Cable harness towbar/tow hitch 7-pin S80 | 140 |
| Cable harness towbar/tow hitch 13-pin V70 | 141 |
| Cable harness towbar/tow hitch 13-pin S80 | 142 |
| Accessory USB unit (AUU) | 143 |

Group 38 Instruments

| | |
|---------------------------------|-----|
| Seat belt reminder | 144 |
| Driver information module | 145 |
| Analog clock | 146 |

Group 39 Other

| | |
|--|-----|
| Audio Premium 1:3 | 147 |
| Audio 1:2 | 150 |
| Cellular phone 1:2 | 152 |
| DAB Radio | 154 |
| Telephone system Bluetooth | 155 |
| Bluetooth Handsfree | 156 |
| Multimedia & Traffic information | 157 |
| Rear seat entertainment | 158 |
| Satellite radio | 159 |
| Parking camera | 160 |
| Navigation system, portable | 161 |

Group 43 Transmission

| | |
|--|-----|
| Transmission M66 | 162 |
| Automatic transmission, TF-80SC AWD | 163 |
| Automatic transmission MPS6 | 164 |
| Differential Electronic Module (DEM) | 165 |

Group 55 Parking brake

| | |
|------------------------------|-----|
| Electric parking brake | 166 |
|------------------------------|-----|

Group 59 Brake system

| | |
|-----------------------------------|-----|
| Brake control system & DSTC | 167 |
|-----------------------------------|-----|

Group 64 Steering

| | |
|--------------------------------------|-----|
| Speed dependent power steering | 168 |
|--------------------------------------|-----|

Group 76 Shock absorbers

| | |
|--------------|-----|
| Four-C | 169 |
|--------------|-----|

Table of Contents 3:3

Group 83 Doors and openings

| | |
|--|-----|
| Central locking front doors LHD | 170 |
| Central locking front doors RHD | 171 |
| Central locking rear doors..... | 172 |
| Central locking trunk lid/tailgate V70 | 173 |
| Central locking trunk lid/tailgate S80 | 174 |
| Central locking fuel filler flap..... | 175 |
| Signal receiver central locking..... | 176 |
| Power windows front doors LHD | 177 |
| Power windows front doors RHD | 178 |
| Power windows rear doors | 179 |
| Power sunroof..... | 180 |

Group 84 Exterior decorative elements, etc.

| | |
|---|-----|
| Power door mirrors LHD | 181 |
| Power door mirrors RHD | 182 |
| Heated door mirrors LHD..... | 183 |
| Heated door mirrors RHD..... | 184 |
| Blind spot information system LHD..... | 185 |
| Blind spot information system RHD | 186 |
| Heated rear window..... | 187 |

Group 85 Interior equipment

| | |
|---|-----|
| Power driver's seat with memory function, LHD | 188 |
| Power driver's seat with memory function, RHD | 189 |
| Power passenger seat, LHD..... | 190 |
| Power passenger seat, RHD | 191 |
| Heated front seats with fans | 192 |
| Heated front seats without fans | 193 |
| Heated rear seat..... | 194 |
| Massage seats..... | 195 |

Group 87 Climate control system

| | |
|---|-----|
| Climate control system PTC-element | 196 |
| Climate control system, 4-Cyl. 1:2 | 197 |
| Climate control system, 5-, 6- & 8-Cyl. 1:2 | 199 |
| Climate control system 5-Cyl. Diesel 1:2 | 201 |
| Parking heater, auxiliary heater | 203 |
| Parking heater, remote start | 204 |
| Refrigeration box rear seat | 205 |

Group 88 Internal equipment

| | |
|--|-----|
| Rear-view mirror with automatic dimming..... | 206 |
| Supplemental restraint system 1:2 | 207 |
| Power folding headrest..... | 209 |
| Remote controlled garage opening..... | 210 |

Connectors..... 211

Cable harness routing in vehicle

| | |
|---------------------------------------|-----|
| Engine harness 4-Cyl..... | 249 |
| Engine harness, 5-Cyl..... | 249 |
| Engine harness, 6-Cyl..... | 250 |
| Harness engine, 6-Cyl. Turbo | 250 |
| Engine harness, 8-Cyl..... | 251 |
| Harness engine, Diesel..... | 251 |
| Harness engine, 1.6L Diesel..... | 252 |
| Harness engine, 2.0L Diesel..... | 252 |
| Engine compartment harness | 253 |
| Harness dashboard, LHD | 254 |
| Harness Dashboard, RHD | 255 |
| Harness Floor, LHD S80..... | 256 |
| Harness Floor, RHD S80 | 257 |
| Harness Floor, LHD V70..... | 258 |
| Harness Floor, RHD V70 | 259 |
| Harness infotainment, LHD S80 | 260 |
| Harness infotainment, RHD S80 | 261 |
| Harness infotainment, LHD V70 | 262 |
| Harness infotainment, RHD V70..... | 263 |
| Roof harness, S80 | 264 |
| Roof harness, V70 | 264 |
| Center console harness | 265 |
| Tunnel harness | 265 |
| Harness front door, left | 266 |
| Harness front door, right | 266 |
| Harness rear door, left | 267 |
| Harness rear door, right | 267 |
| Trunk lid/tailgate harness, S80 | 268 |
| Trunk lid/tailgate harness, V70 | 268 |
| Harnesses rear axle..... | 269 |
| Executive harnesses..... | 270 |

Branching points

271

Component illustrations

288

Index 1:2

355

List of components 1:8

357

Explanations

Abbreviations

Groups

| | |
|----------|--------------------------------------|
| Group 23 | = Fuel system |
| Group 26 | = Cooling system |
| Group 27 | = Engine controls |
| Group 32 | = Alternator and voltage regulator |
| Group 33 | = Starting system |
| Group 35 | = Lighting |
| Group 36 | = Additional electrical equipment |
| Group 37 | = Wiring and fuses |
| Group 38 | = Instruments |
| Group 39 | = Other |
| Group 43 | = Transmission |
| Group 55 | = Parking brake |
| Group 59 | = Brake system |
| Group 64 | = Steering |
| Group 76 | = Shock absorbers |
| Group 83 | = Doors and openings |
| Group 84 | = Exterior decorative elements, etc. |
| Group 85 | = Interior equipment |
| Group 87 | = Climate control system |
| Group 88 | = Internal equipment |

Ignition switch symbols

| | |
|-----|--|
| X | = Accessories (audio position) |
| S | = Powered upon insertion of key |
| 15 | = Contact remains connected during start |
| 15I | = Contact is broken while starting |
| 30 | = Constant power from the battery |
| 50 | = Start |

Countries/Markets

| | |
|-------|----------------------------------|
| A | = Austria |
| AUS | = Australia |
| B | = Belgium |
| CDN | = Canada |
| CH | = Switzerland |
| D | = Germany |
| DK | = Denmark |
| E | = Spain |
| EU/OS | = Markets outside USA and Canada |
| FIN | = Finland |
| GB | = Great Britain |
| ISR | = Israel |
| J | = Japan |
| KOR | = Korea |
| N | = Norway |
| NL | = Netherlands |
| S | = Sweden |
| USA | = United States of America |
| WEU | = Western Europe |

Other

| | |
|----------|-------------------------------------|
| ACC | = Adaptive Cruise Control |
| Ag | = Silver plated |
| Au | = Gold plated |
| AUTO | = Automatic transmission |
| BLIS | = Blind spot information system |
| CAN | = CAN communication |
| DPY | = Display |
| Du-X | = Dual Xenon |
| ECC | = Electronic climate control system |
| ETA | = Throttle unit |
| EXC | = Exclusive |
| GDL | = Gas discharge lamp |
| HISPEED | = High speed data bus |
| IR | = Infrared sensor |
| KEYLESS | = Keyless vehicle |
| LIN | = LIN communication |
| LH | = Left-hand side |
| LHD | = Left-hand drive |
| MAN | = Manual transmission |
| MEMORY | = Memory driver's seat |
| MIDSPEED | = Midspeed data bus |
| MMS | = Mass Movement Sensor |
| PETROL | = Gasoline |
| RH | = Right-hand side |
| RHD | = Right-hand drive |
| RTI | = Road Traffic Information |
| SCR | = Screened |
| SRS | = Airbag |
| T | = Turbocharged engine |
| W/O | = Without |
| 2WD | = Two-wheel drive |
| 4CYL, I4 | = 4-cylinder engine |
| 5CYL, I5 | = 5-cylinder engine |
| 6CYL, I6 | = 6-cylinder engine |
| 8CYL, V8 | = 8-cylinder engine |

Colors

| | |
|--------|---------------|
| BK, SB | = Black |
| BN | = Brown |
| BU, BL | = Blue |
| GN | = Green |
| GY, GR | = Gray |
| LGN | = Light Green |
| NL | = Natural |
| OG, OR | = Orange |
| PK, P | = Pink |
| RD, R | = Red |
| VT, VO | = Violet |
| WH, W | = White |
| YE, Y | = Yellow |

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

- 1 Battery
- 2 Relay
- 3 Switch
- 4 Control module
- 5 Driver information module
- 6 Electric motor
- 7 Sensor
- 8 Actuator
- 9 Heating element
- 10 Light
- 11 Fuse
- 15 Electrical distribution rail/box
- 16 Audio
- 17 Service/diagnostics
- 18 Contact reel
- 19 Meter
- 20 Ignition component/shunt
- 27 Optics
- 31 Ground connection
- 73 Branching point
- 74 Connector

The systems are shown in non active status, i.e. with "key removed" and when doors, hatches and hood are closed.

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".



F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

The end of the manual contains a section that describes component appearance and location in numerical order.

How to use the wiring diagrams 2:2

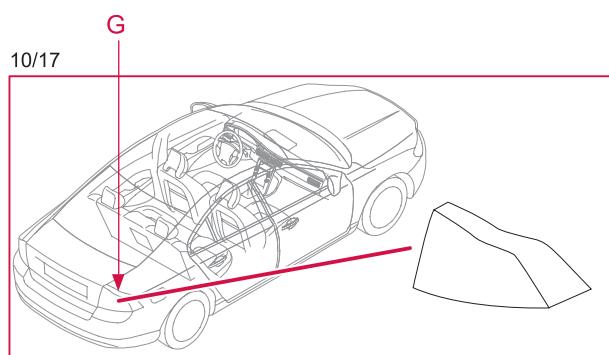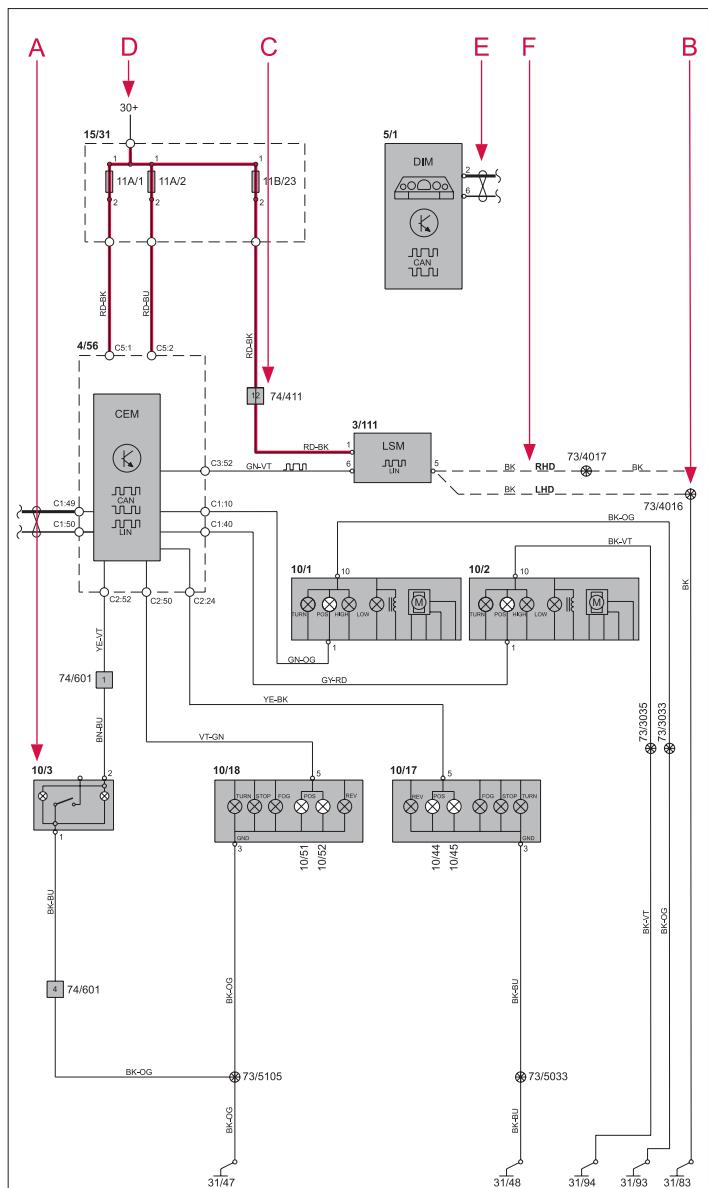


List of symbols

- = System voltage
- = Ground connection via wiring
- = Ground connection in component/chassis
- = Screened wire
- = Junction point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component


Electrical distribution 1:2

Overview, Electrical center and Cold zone in engine compartment

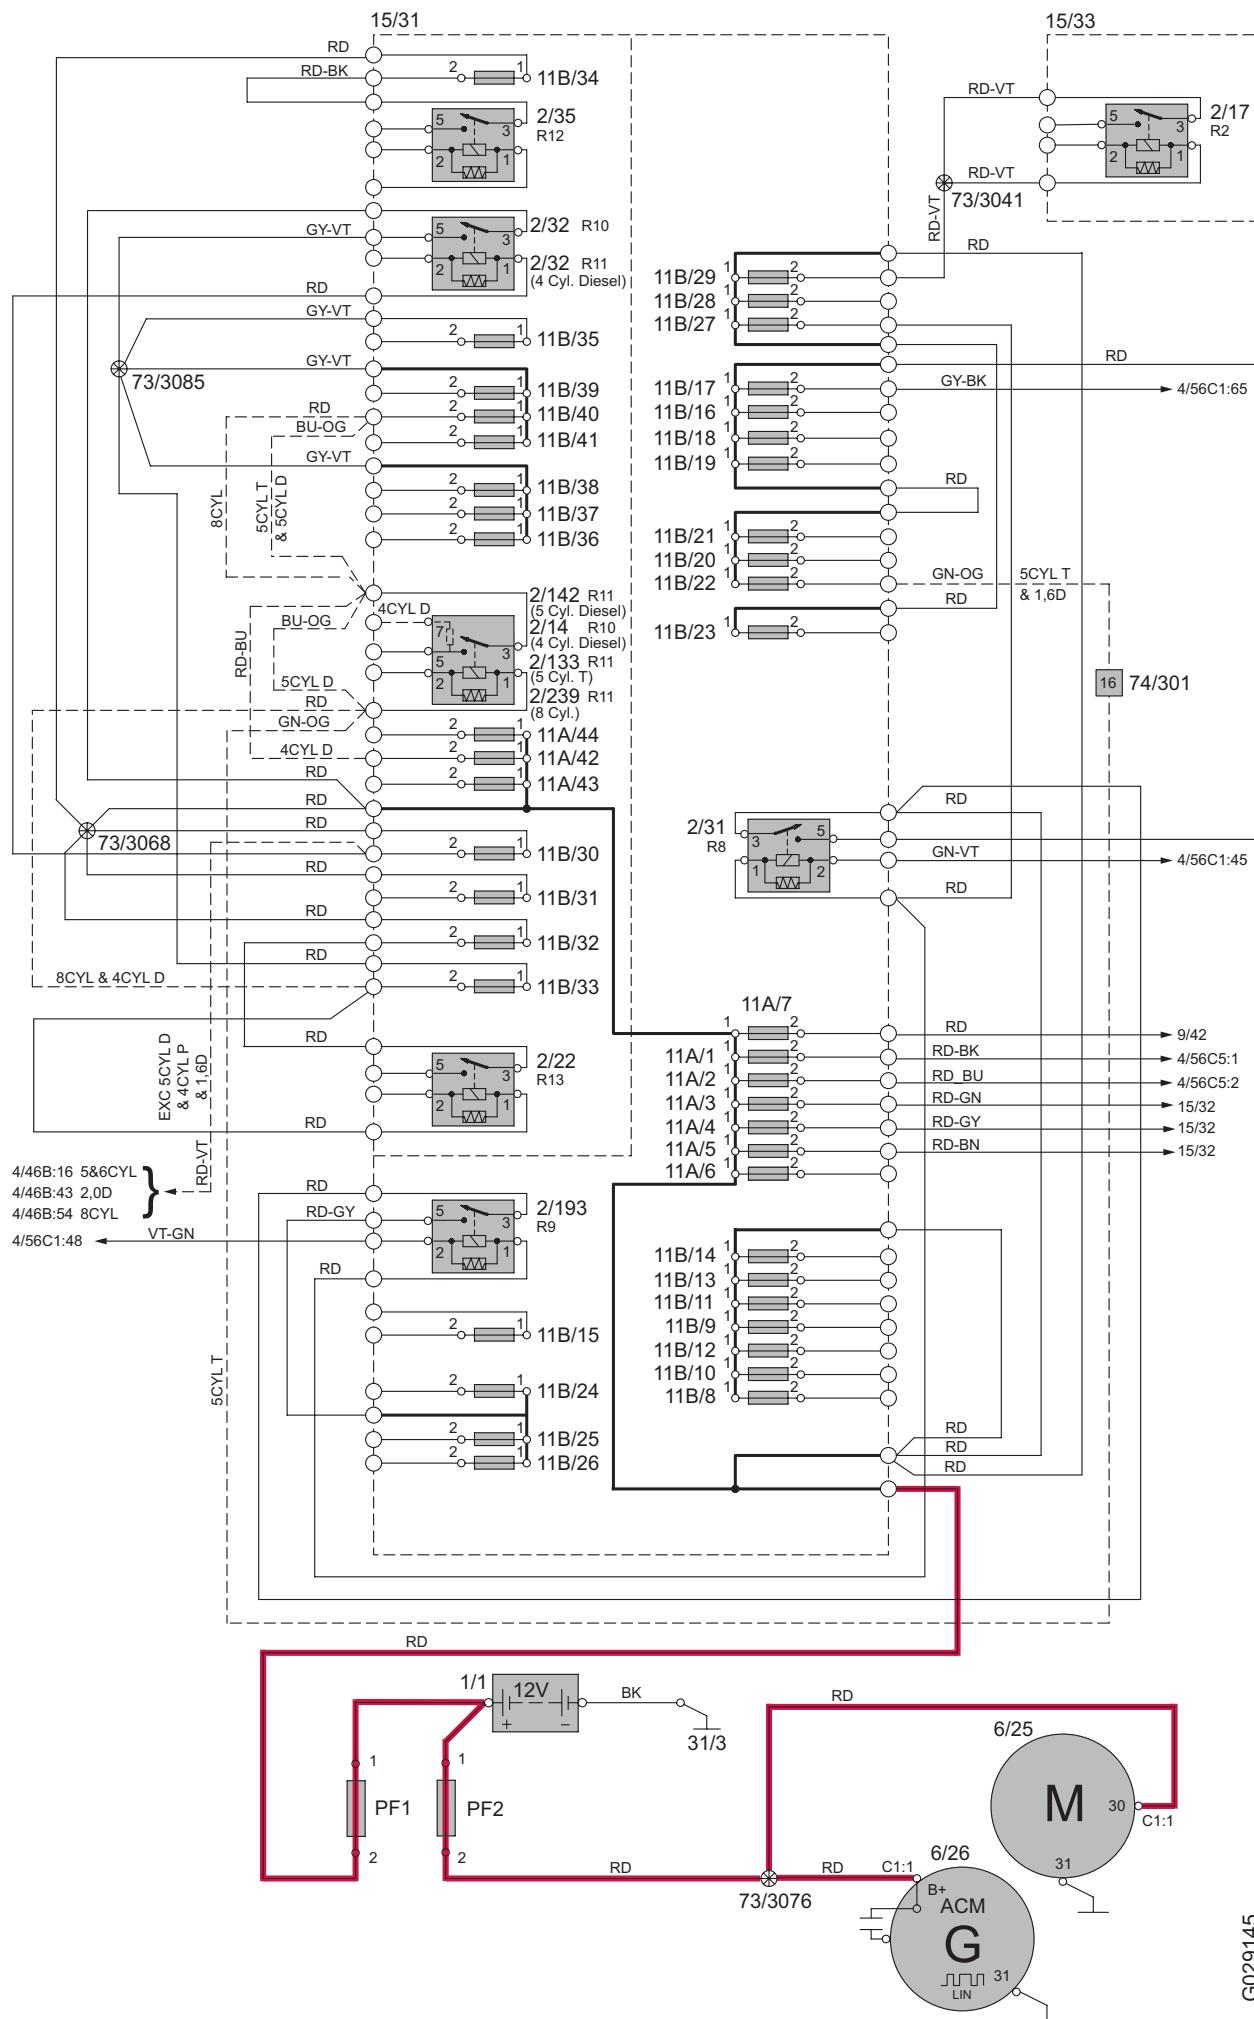


Electrical distribution 2:2

Overview, Distribution box in cargo compartment

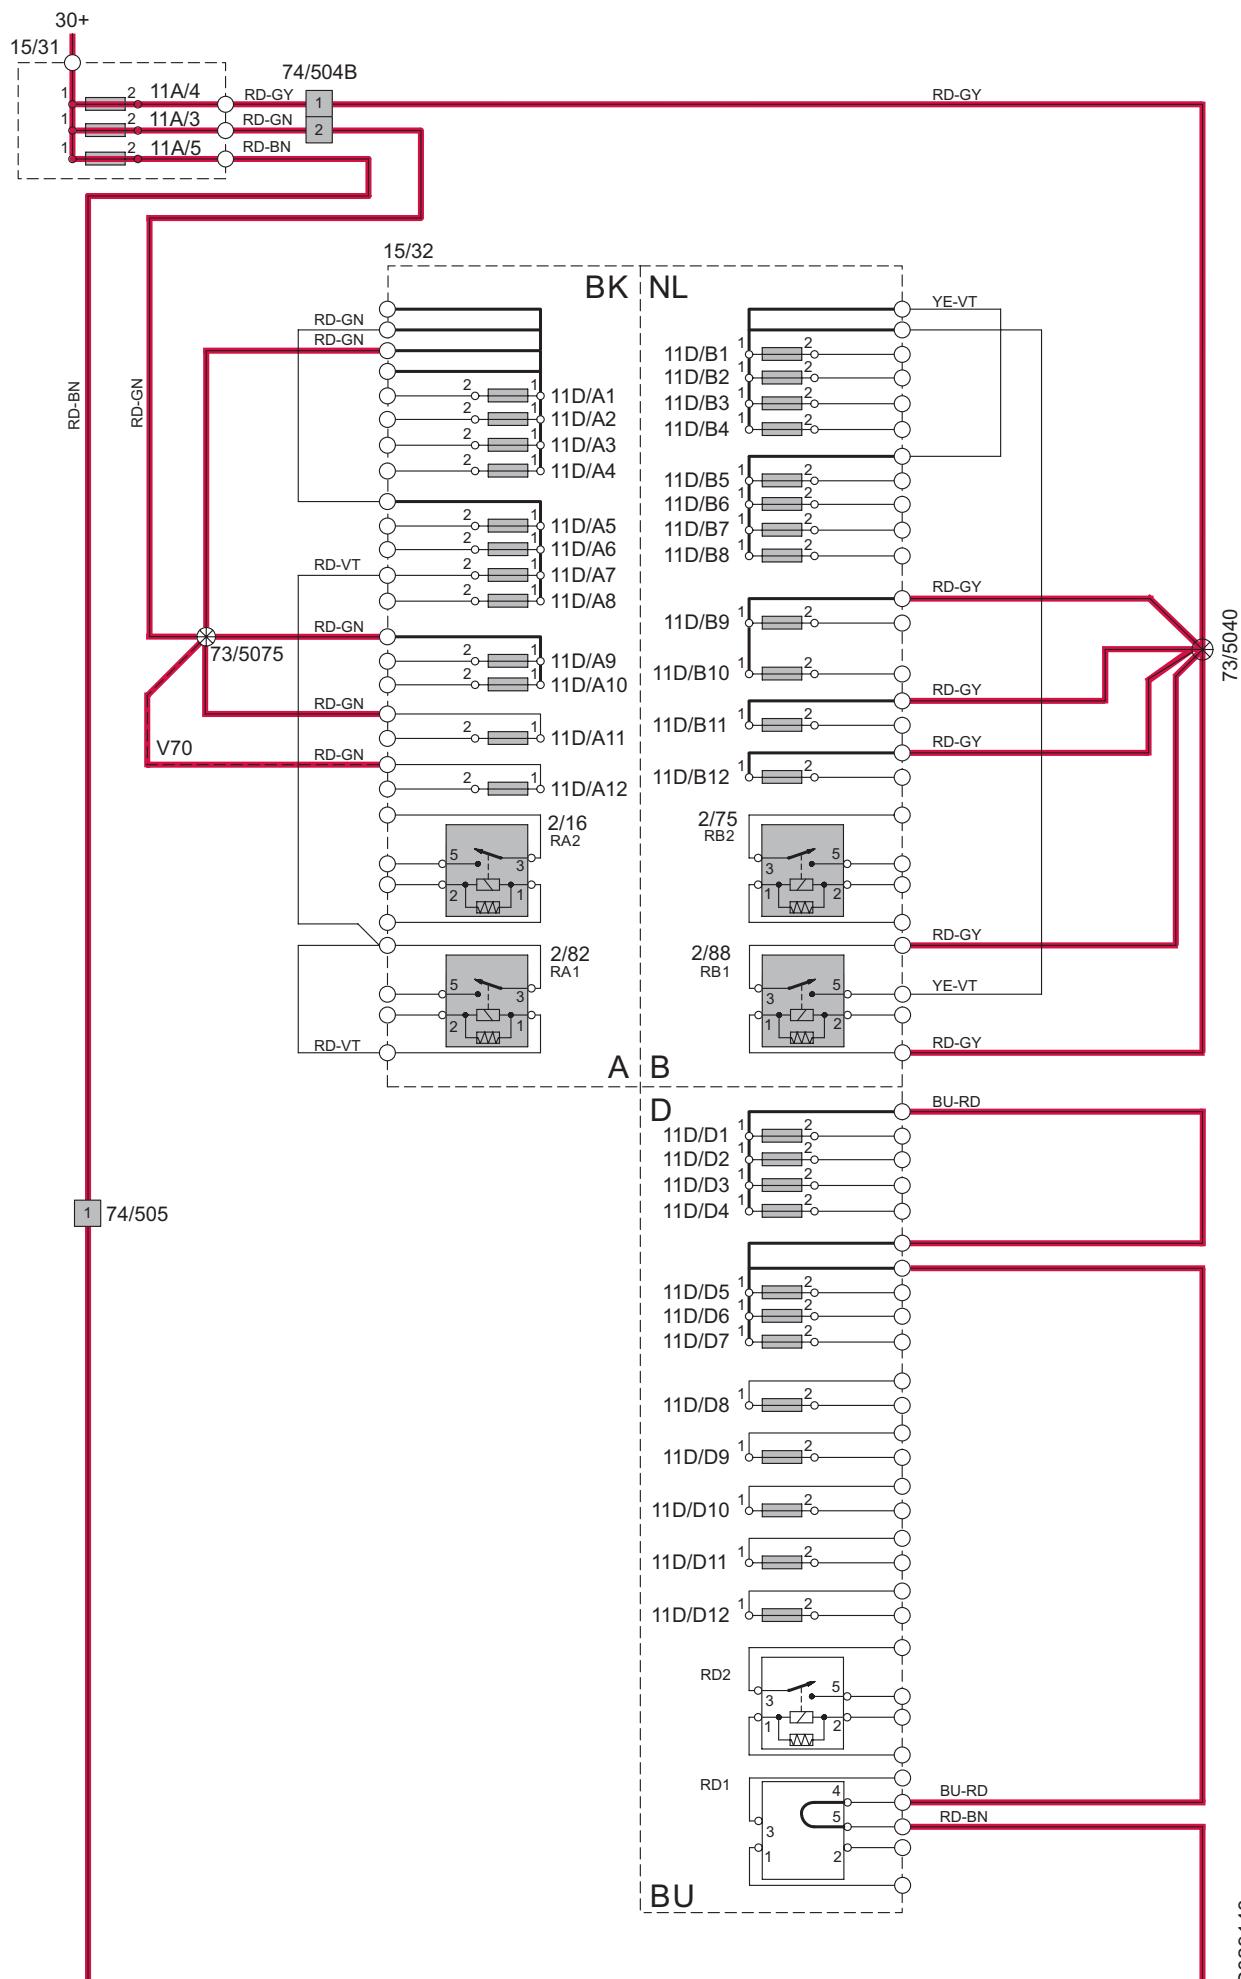

Fuses

Distribution box in engine compartment F1-F7

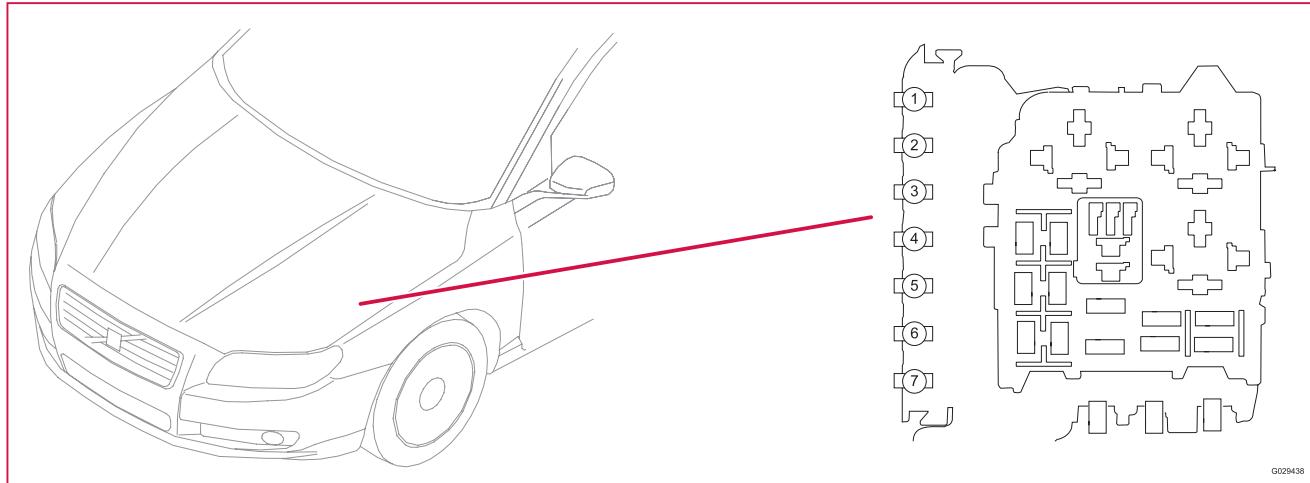


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----------|-------|----------------------------|-------------------------------------|-------|
| F1 | 11A/1 | Main fuse for fuses in CEM | - | 50 |
| F2 | 11A/2 | Main fuse for fuses in CEM | - | 50 |
| F3 | 11A/3 | 11D/A1-11D/A12 | Fuses in cargo compartment fuse box | - 60 |
| F4 | 11A/4 | 2/88 | Relay, 15-feed rear | - 60 |
| | | 11D/B1-11D/B8 | Fuses in cargo compartment fuse box | 2/88 |
| | | 11D/B9-11D/B12 | Fuses in cargo compartment fuse box | - |
| F5 | 11A/5 | 11D/D1-11D/D7 | Fuses in cargo compartment fuse box | - 50 |
| F7 | 11A/7 | 9/42 | PTC-element | - 100 |
| continues | | | | |

Fuses

Distribution box in engine compartment F9-F24

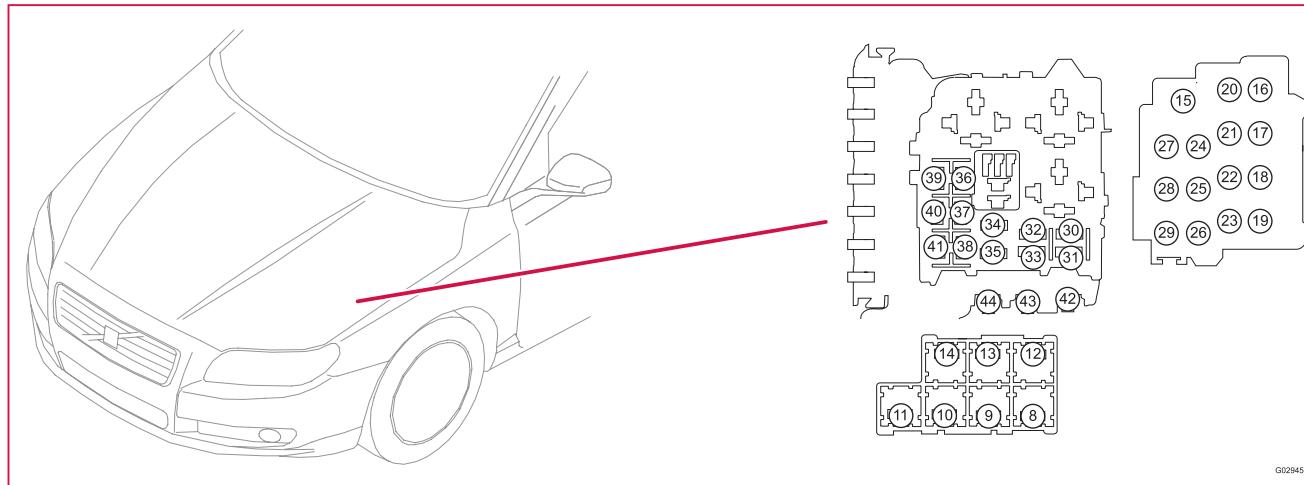

G029458


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|--|-------|----|
| F9 | 11B/9 | 6/1 Wiper Motor Module (WMM) | - | 30 |
| F10 | 11B/10 | 4/7 Combustion Preheater Module (CPM) | - | 25 |
| F11 | 11B/11 | 4/31 Passenger compartment fan control module 6/28 Motor, passenger compartment fan | - | 40 |
| F13 | 11B/13 | 4/16 Brake Control Module (BCM), pump | - | 40 |
| F14 | 11B/14 | 4/16 Brake Control Module (BCM), valves | - | 20 |
| F16 | 11B/16 | 4/118 Headlamp Control Module (HCM) 10/1 Lamp housing, front left 10/2 Lamp housing, front right | - | 10 |
| F17 | 11B/17 | F2-F4 Fuses in the Central Electronic Module (CEM) | - | 20 |
| F18 | 11B/18 | 4/80 Forward Sensing Module (FSM) 7/203 Forward-aimed radar (FLR) | - | 5 |
| F19 | 11B/19 | 4/99 Speed dependent power steering control module | - | 5 |
| F20 | 11B/20 | 4/28 Transmission Control Module (TCM) 4/28B Transmission Control Module (TCM) MPS6 4/46 Engine Control Module (ECM) 4/9 Supplemental Restraint System Module (SRS) | - | 10 |
| F21 | 11B/21 | 9/43 Heated windshield washer nozzle, left 9/44 Heated windshield washer nozzle, right | - | 10 |
| F22 | 11B/22 | 6/114 Vacuum pump, 5-Cyl. Turbo 6/164 Electrical power steering module (EPS) | 2/133 | 5 |
| F23 | 11B/23 | 3/111 Light Switch Module (LSM) | - | 5 |
| F24 | 11B/24 | 6/104 High pressure headlight washer motor | - | 15 |

continues

Fuses

Distribution box in engine compartment F25-F31

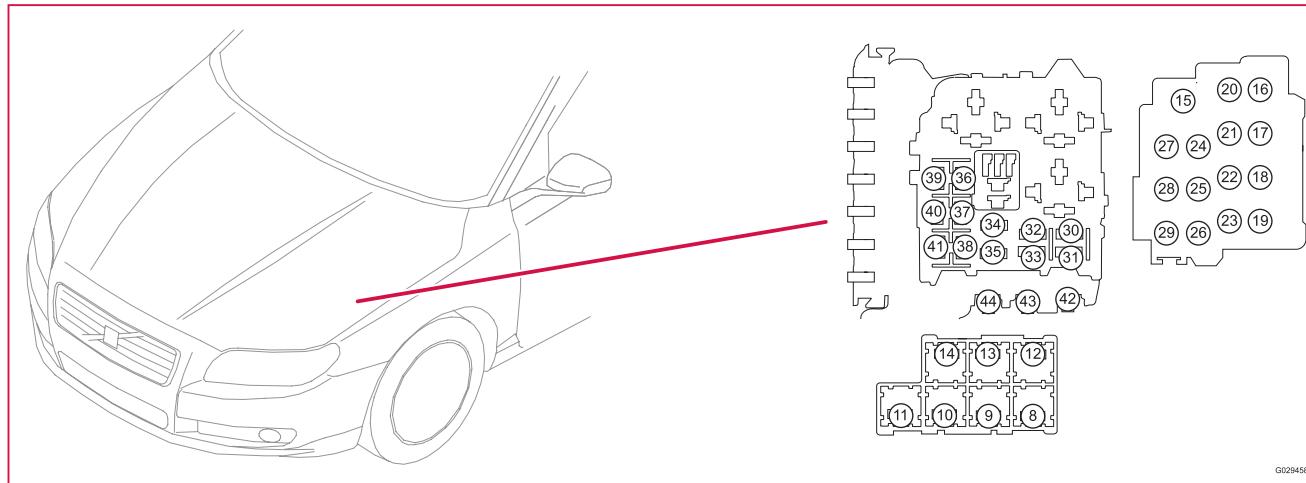


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|---|--------------------------------------|----|
| F25 | 11B/25 | 9/1 Front 12V outlet 9/25 Rear 12V outlet 16/45 Portable navigation system 16/109 DVD player/control module | - - - - | 15 |
| F26 | 11B/26 | 3/117 Switch unit, ceiling light 4/33 Sunroof control module 6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), temperature, left side 6/96 Damper Motor Module (DMM), temperature, right side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/159 Air Quality Sensor (AQS) | - - - - - - - - | 5 |
| F27 | 11B/27 | 2/31 Relay, 15-feed 2/193 Relay, comfort functions | - - | 5 |
| F28 | 11B/28 | 2/64 Relay, auxiliary lights 10/65 Auxiliary light, front right 10/69 Auxiliary light, front left | - 2/64 2/64 | 20 |
| F29 | 11B/29 | 2/17 Relay, horn 16/10 Horn 1 16/11 Horn 2 | - 2/17 2/17 | 15 |
| F30 | 11B/30 | 2/32 Main relay, engine management system 4/46 Engine Control Module (ECM) | - - | 10 |
| F31 | 11B/31 | 4/28 Transmission Control Module (TCM) 4/28 Transmission Control Module (TCM) MPS6 | - - | 15 |

continues

Fuses

Distribution box in engine compartment F32-F37

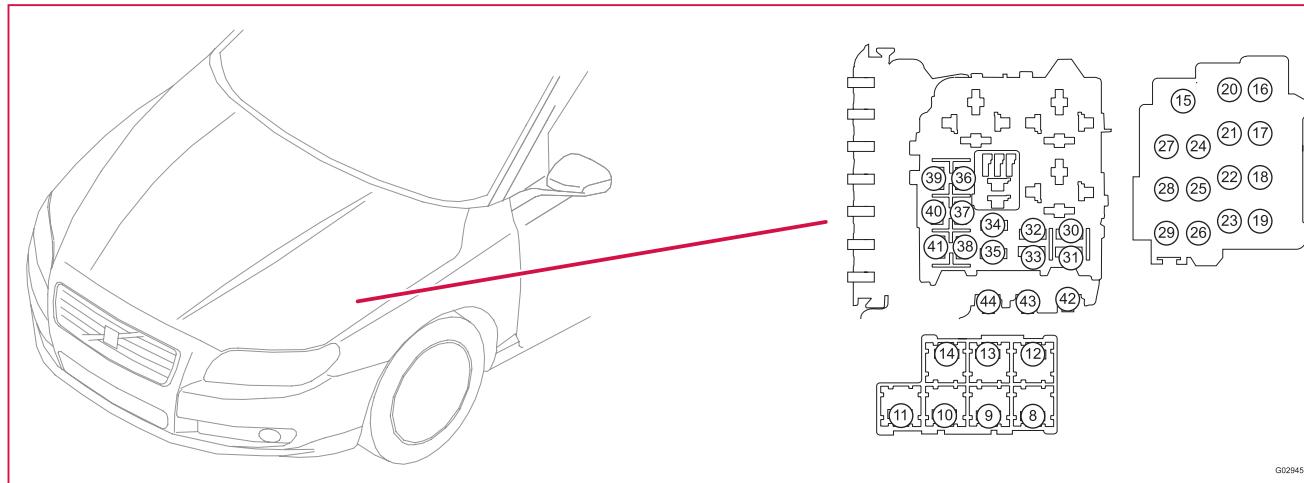


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|---|--|----------|
| F32 | 11B/32 | 8/3 Electromagnetic clutch, climate control system | 2/22 | 15 |
| F33 | 11B/33 | 2/14 Relay, glow plug system. 4-Cyl. Diesel 2/22 Relay, climate control system 2/239 Relay, coolant pump, 8-Cyl. | - - - | 5 |
| F34 | 11B/34 | 6/25 Starter motor | 2/35 | 30 |
| F35 | 11B/35 | 20/3-8 Spark plug with ignition coil, 5-, 6- & 8-Cyl. 20/12-13 Spark plug with ignition coil, 8-Cyl. 20/16 Capacitor 4/109 Control module glow plug, 5-Cyl. Diesel 20/3-6 Spark plug with ignition coil, 4-Cyl. 8/82 Solenoid, variable turbo geometry, 4-Cyl. Diesel 8/111 Control valve fuel flow, 4-Cyl. 1.6L Diesel 8/132 Control valve intake, 4-Cyl. 2.0L Diesel | - - - - - - - - - - | 20 10 |
| F36 | 11B/36 | 4/46 Engine Control Module (ECM), 4-, 5-, 6-, 8-Cyl. 6/120 Throttle unit 4/46 Engine control module (ECM), 4-, 5-Cyl. Diesel 6/120 Throttle unit, 5-Cyl. Diesel | - 4/46 - 4/46 | 10 15 |
| F37 | 11B/37 | 4/46 Engine Control Module (ECM), 6-Cyl. & 5-Cyl. 1.6L Diesel 6/99 Engine EGR, 4-Cyl. 1.6L Diesel 7/35 Oil level sensor 8/6-11 Injection valves 8/98 Control valve fuel pressure, Diesel 8/111 Control valve fuel flow, 5-Cyl. Diesel 8/115 Injector 8/116 Injector 7/17 Mass airflow sensor (MAF) 7/17 Mass air flow sensor (MAF), 2.0L Diesel | - - - - - - - - - - | 15 10 |

Fuses

Distribution box in engine compartment F38

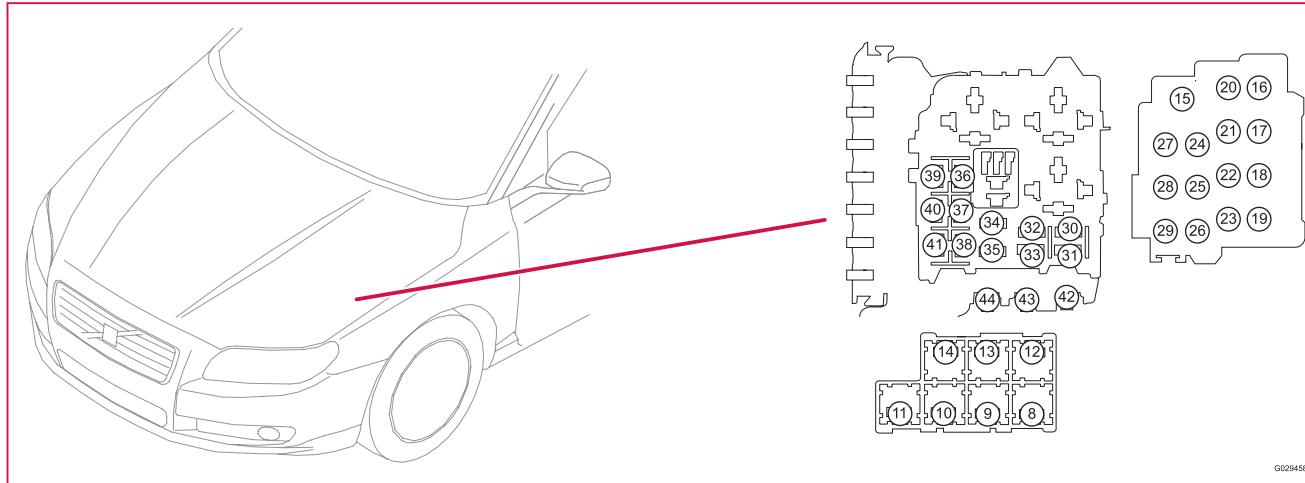

G029458


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|--|-----|----|
| F38 | 11B/38 | 6/99 Engine EGR, 4-Cyl. Gasoline 8/18 EVAP valve, 4-Cyl. Gasoline 8/45 Vacuum valve variable intake manifold, 4-Cyl. Gasoline 8/114 Valve mixing air/fuel, 4-Cyl. Gasoline | - | 10 |
| | | 8/77 Control valve, fuel volume, 4-Cyl. 2.0L Diesel 8/122 Bypass valve charge air cooler, 4-Cyl. 1.6L Diesel 8/133 Control valve, fuel pressure, 4-Cyl. 2.0L Diesel | - | |
| | | 8/3 Electromagnetic clutch climate control system, 5-Cyl. Turbo. 8/28 Turbocharger control valve, 5 & 6-Cyl. Turbo. 8/68 Relief valve, 6-Cyl. Turbo 8/81 Solenoid, variable valve timing, exhaust, 5-Cyl. Turbo. 8/117 Solenoid, variable valve timing, intake, 5-Cyl. Turbo. | - | |
| | | 6/143 Control motor, turbo, 5-Cyl. Diesel, 1T 7/35 Oil level sensor, 5-Cyl. Diesel 8/3 Electromagnetic clutch, climate control system, 5-Cyl. Diesel 8/113 Bypass valve, EGR cooling, 5-Cyl. Diesel 8/120 EGR valve, 5-Cyl. Diesel 8/157 Turbocharger control valve, Diesel, 2T | - | |

continues

Fuses

Distribution box in engine compartment F38-F39

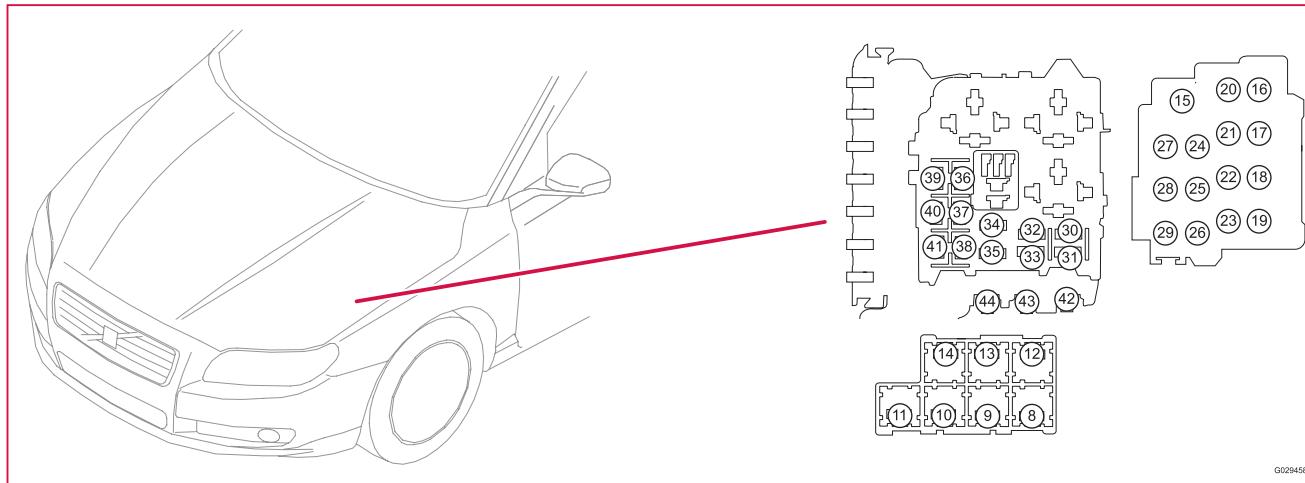

G029458


15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|--|-----|----|
| F38 | 11B/38 | 4/46 Engine Control Module (ECM), 6-Cyl. | - | 10 |
| | | 6/139 Upper actuator motor, intake manifold, 6-Cyl. W/O T | - | |
| | | 6/140 Lower actuator motor, intake manifold, 6-Cyl. W/O T | - | |
| | | 8/3 Electromagnetic clutch climate control system, 6-Cyl. | - | |
| | | 8/117 Solenoid, variable valve timing, intake, 6-Cyl. | - | |
| | | 8/125 Solenoid cam profile front, 6-Cyl. W/O T | - | |
| | | 8/126 Solenoid cam profile rear, 6-Cyl. W/O T | - | |
| | | 4/46 Engine Control Module (ECM), 8-Cyl. | - | |
| | | 8/3 Electromagnetic clutch climate control system, 8-Cyl. | - | |
| | | 8/19 Solenoid, variable valve timing, intake, bank 2, 8-Cyl. | - | |
| F39 | 11B/39 | 8/81 Solenoid, variable valve timing, exhaust, bank 2, 8-Cyl. | - | 15 |
| | | 8/117 Solenoid, variable valve timing, intake, bank 1, 8-Cyl. | - | |
| | | 8/118 Solenoid, variable valve timing, exhaust, bank 1, 8-Cyl. | - | |
| | | 7/15 Front heated oxygen sensor, 4-Cyl. Gasoline | - | |
| | | 7/82 Rear heated oxygen sensor, 4-Cyl. Gasoline | - | |
| | | 7/15 Front heated oxygen sensor, 5-Cyl. Diesel | - | 15 |
| | | 7/15 Front heated oxygen sensor, 5-Cyl. Turbo. | - | |
| | | 7/103 Rear heated oxygen sensor, 5-Cyl. Turbo. | - | |
| | | 8/18 EVAP valve, 5-Cyl. Turbo. | - | |

continues

Fuses

Distribution box in engine compartment F39-F44

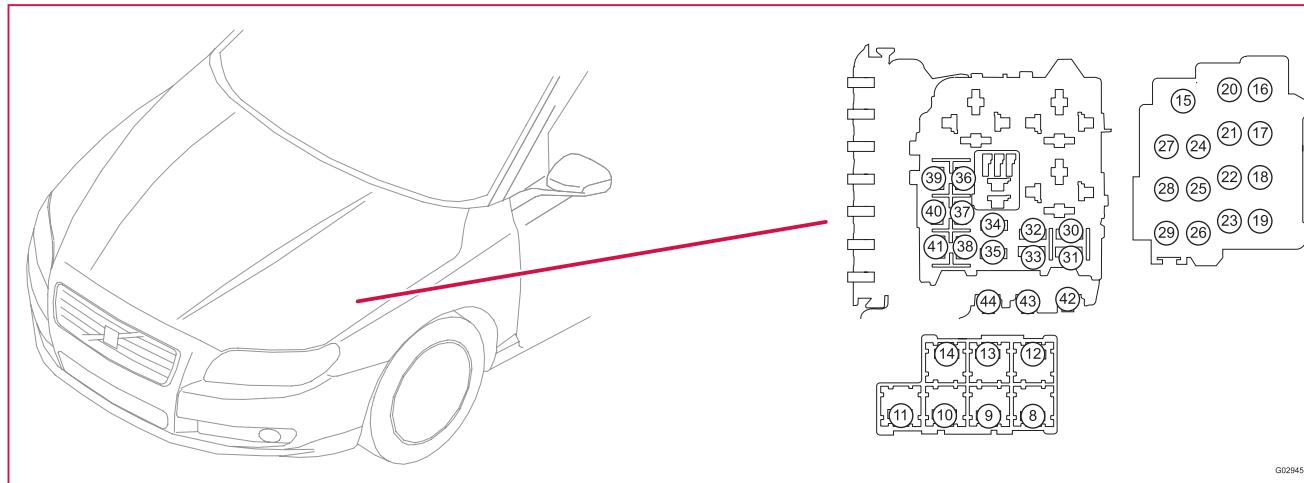


G029458

15/31 Distribution box in engine compartment

| No. | No. | Fuse function | via | A |
|-----|--------|--|-------|----|
| F39 | 11B/39 | 7/15 Front oxygen sensor, bank 1, 6-Cyl. | - | 15 |
| | | 7/82 Rear oxygen sensor, bank 1, 6-Cyl. | - | |
| | | 7/103 Front heated oxygen sensor bank 2, 6-Cyl. W/O T | - | |
| | | 7/104 Rear heated oxygen sensor bank 2, 6-Cyl. W/O T | - | |
| | | 8/18 EVAP valve, 6-Cyl. | - | |
| | | 7/15 Front oxygen sensor, bank 2, 8-Cyl. | - | |
| | | 7/82 Front oxygen sensor, bank 1, 8-Cyl. | - | |
| | | 7/103 Rear oxygen sensor, bank 2, 8-Cyl. | - | |
| | | 7/104 Rear oxygen sensor, bank 1, 8-Cyl. | - | |
| | | 8/18 EVAP valve, 8-Cyl. | - | |
| | | 8/107 Variable intake valve, 8-Cyl. | - | |
| F40 | 11B/40 | 6/114 Vacuum pump, 5-Cyl. | 2/133 | 20 |
| | | 9/32 PTC resistor crankcase ventilation, 5-Cyl. Turbo & Diesel | - | |
| | | 9/38 Heated fuel filter, 5-Cyl. Diesel | - | |
| | | 9/47 PTC resistor crankcase ventilation in hose, 5-Cyl. Diesel | - | |
| | | 6/73 Coolant pump, 8-Cyl. | 2/239 | 10 |
| F41 | 11B/41 | 6/67 Fuel leakage control pump, not 4- & 5-Cyl. | - | 5 |
| | | 7/200 Sensor coolant temperature, 6-Cyl. | | |
| | | 9/32 PTC resistor, crankcase ventilation | | |
| F42 | 11A/42 | 20/22-26 Glow plug, 5-Cyl. | 4/109 | 70 |
| | | 20/22-25 Glow plug, 4-Cyl. | 2/14 | 60 |
| F43 | 11A/43 | 4/71 Control module, cooling fan, 5-Cyl. Diesel, 6-Cyl., 8-Cyl. | - | 80 |
| | | 4/71 Control module, cooling fan, 4-Cyl., 5-Cyl. | - | 60 |
| F44 | 11A/44 | 6/164 Electrical power steering module (EPS), 4-Cyl. 1,6L Diesel | - | 80 |

Fuses

Central Electronic Module (CEM) F1-F11

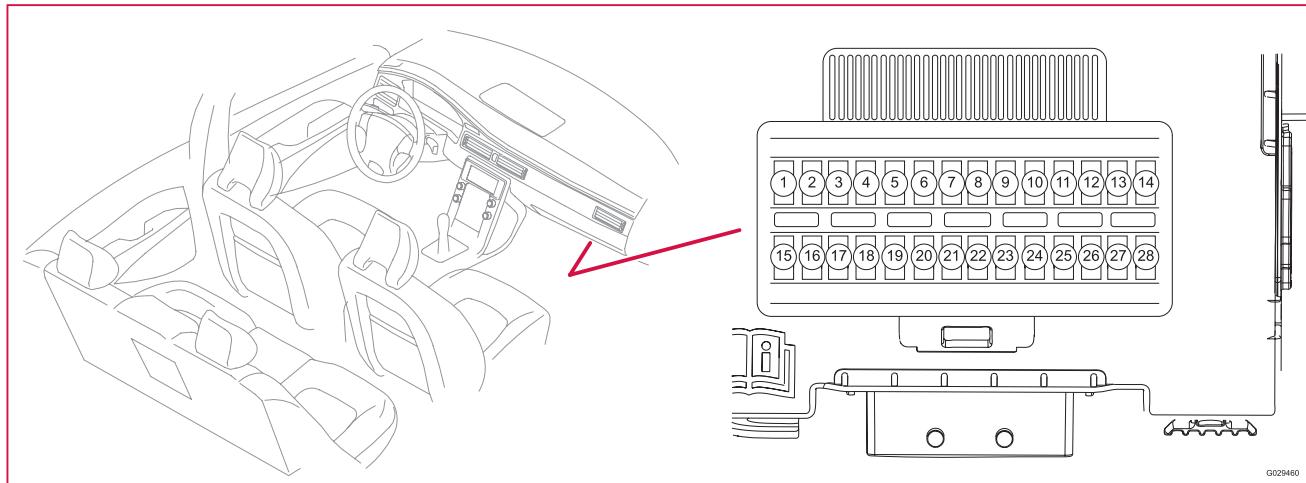


4/56 Central Electronic Module (CEM)

| No. | Fuse function | via | A |
|-----|---|-----------------------------------|-----|
| F1 | 7/149 Rain Sensor Module (RSM) | - | 5 |
| F2 | 4/9 Supplemental Restraint System Module (SRS) 7/93 Occupant Weight Sensor (OWS) | - - | 10 |
| F3 | 4/16 Brake Control Module (BCM) | - | 5 |
| F4 | 3/65 Switch, heated rear seat 7/51 Accelerator pedal sensor 8/48 Auto-dimming rearview mirror 9/42 PTC-element | - - - - | 7.5 |
| F6 | 3/281 Infotainment Control Module (ICM) 4/124 Accessory USB unit (AUU) 16/1 Integrated Audio Module (IAM) 16/36 TV receiver 16/109 DVD player/control module 16/159 Control module, cellular phone handsfree | - - - - | 15 |
| F7 | 3/4 Steering wheel switch left (SWSL) 3/131 Steering wheel switch right (SWSR) 3/135 RTI switch | 3/130 3/130 3/130, 3/131 | 7.5 |
| F9 | 10/1 Lamp housing, front left 10/2 Lamp housing, front right | K2 K2 | 15 |
| F10 | 4/33 Sunroof Module (SRM) | - | 20 |
| F11 | 10/48 Right-hand reversing light 10/55 Left-hand reversing light | K3 K3 | 7.5 |

continues

Fuses

Central Electronic Module (CEM) F13-F19

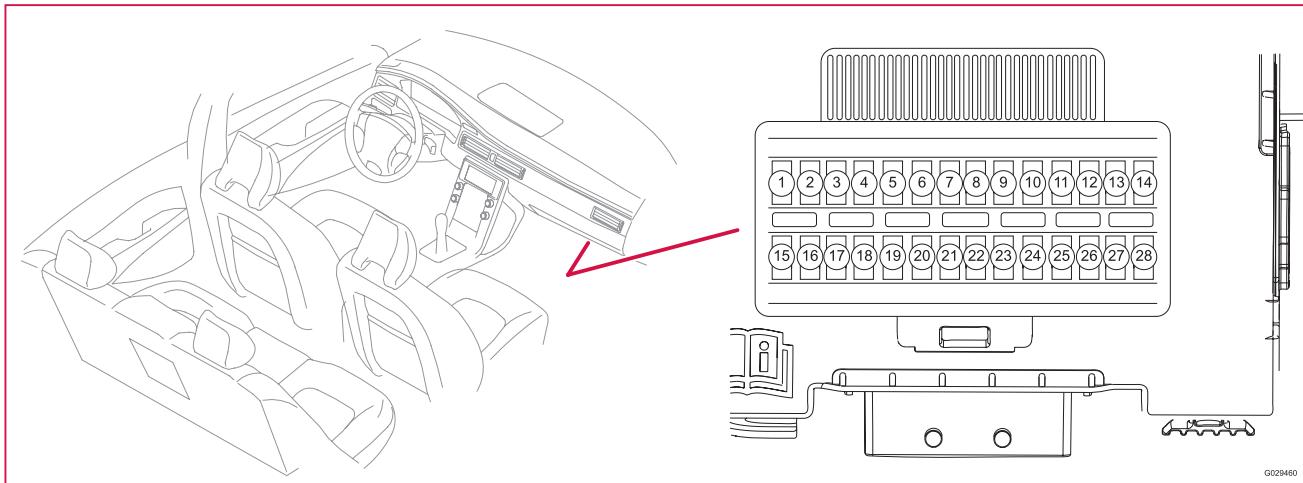


4/56 Central Electronic Module (CEM)

continues

Fuses

Central Electronic Module (CEM) F20-F28

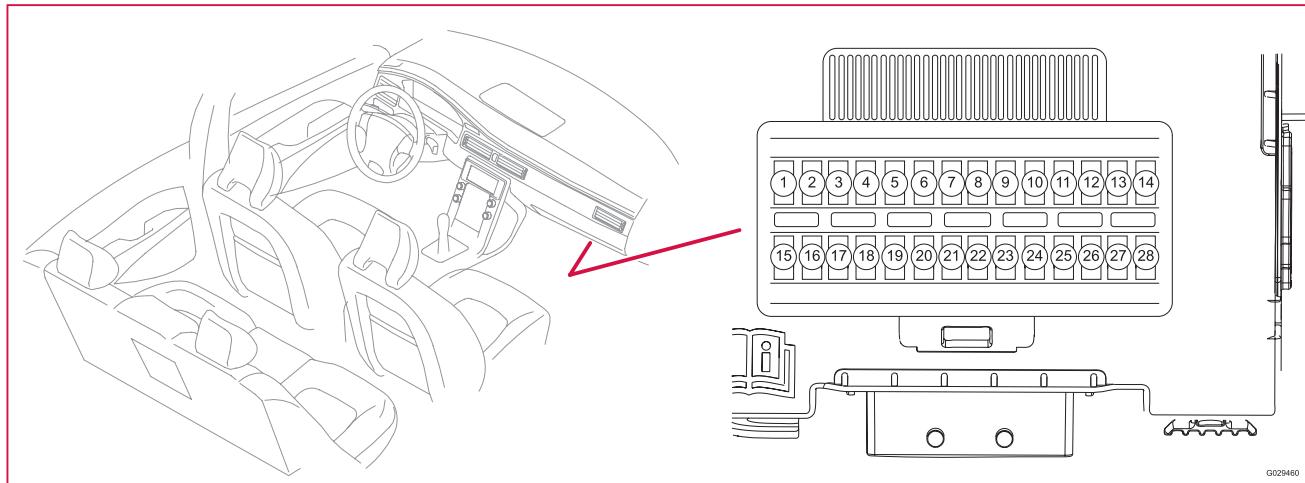


4/56 Central Electronic Module (CEM)

| No. | Fuse function | via | A |
|-----|--|-------------------------------|----|
| F20 | 6/32 Rear window wiper motor, V70 | 2/16 | 15 |
| F21 | 4/119 Remote Keyless Entry (RKE) 4/119.2 Remote Receiver Module (RRX) 7/199 Ultrasonic sensor (IMS) 7/214 Heartbeat sensor | - - - - | 5 |
| F22 | 4/111 Additive Dosing Module (ADM) 6/33 Fuel pump | K8 K8, 4/83 | 20 |
| F23 | 4/102 Steering Column Lock Module (SCL) | K9 | 20 |
| F25 | K6-B Relay, soldered K12 Relay, soldered 3/78 Lock unit, tailgate V70 6/8 Lock motor central locking, trunk lid/tailgate, S80 6/37 Lock motor, fuel filler cover | - - K6-B K6-B K12 | 10 |
| F26 | 4/6 Climate Control Module (CCM) 16/35 Siren Control Module (SCM) 17/13 Data link connector | - - - | 5 |
| F27 | 3/132 Start Control Module (SCU) | - | 5 |
| F28 | 3/9 Contact brake light 4/93 Keyless Vehicle Module (KVM) | - 3/9 | 5 |

Fuses

Passenger compartment

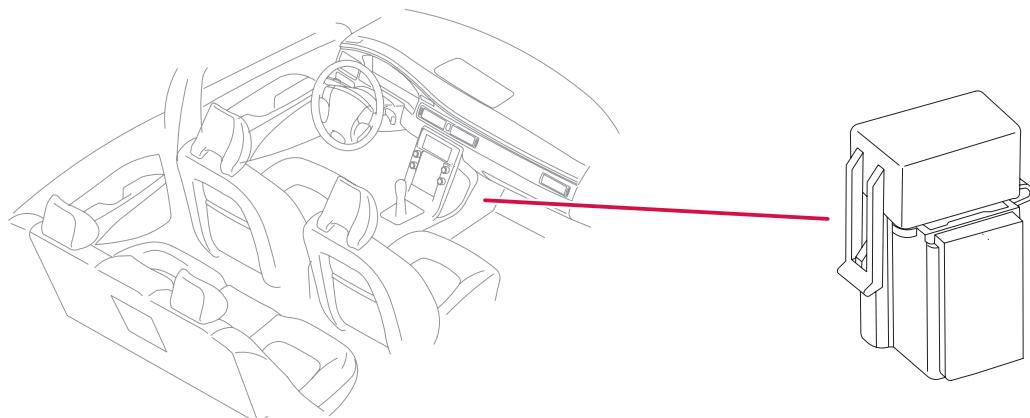


G032353

11 Fuse in extra fuse holder, passenger compartment

| No. | Fuse function | via | A |
|-----|------------------------|-----|---|
| 1 | 19/4 Analog clock | - | 5 |

Fuses

Distribution box in cargo compartment FA1-FA12

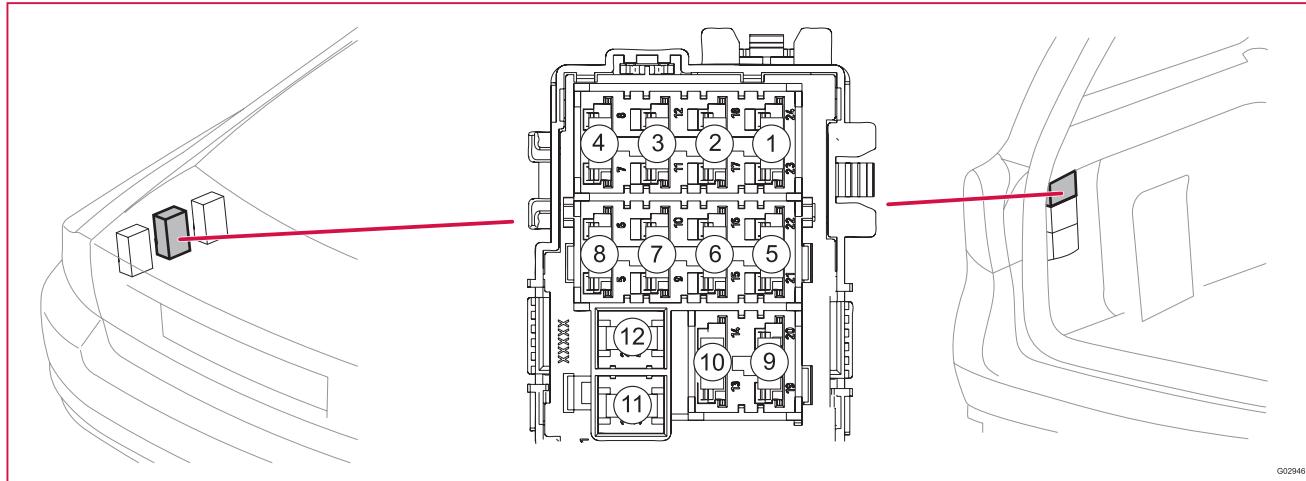


15/32 Distribution box in cargo compartment

| No. | No. | Fuse function | via | A |
|------|---------|---|-------------------|----|
| FA1 | 11D/A1 | 3/126 Driver Door Module (DDM) | - | 25 |
| FA2 | 11D/A2 | 3/127 Passenger Door Module (PDM) | - | 25 |
| FA3 | 11D/A3 | 3/128 Left rear door module (LDM) | - | 25 |
| FA4 | 11D/A4 | 3/129 Right rear door module (RDM) | - | 25 |
| FA6 | 11D/A6 | 9/24 Refrigeration box 17/19 12V outlet, cargo compartment | 2/141 - | 15 |
| FA7 | 11D/A7 | 2/82 Relay, heated rear window 9/2 Heated rear window 16/141 Interference filter, rear window, left | - 2/82 2/82 | 30 |
| FA8 | 11D/A8 | 8/59 Rear left head restraint solenoid, S80 8/60 Rear right head restraint solenoid, S80 | 2/75 2/75 | 15 |
| FA9 | 11D/A9 | 17/39 13-pin outlet, tow hitch cable harness | - | 15 |
| FA10 | 11D/A10 | 4/52 Power Seat Module (PSM) | | 25 |
| FA11 | 11D/A11 | 4/110 Trailer Module (TRM) | - | 40 |
| FA12 | 11D/A12 | 4/116 Power Operated Tailgate Module (POT), V70 | - | 30 |

Fuses

Distribution box in cargo compartment FB1-FB12

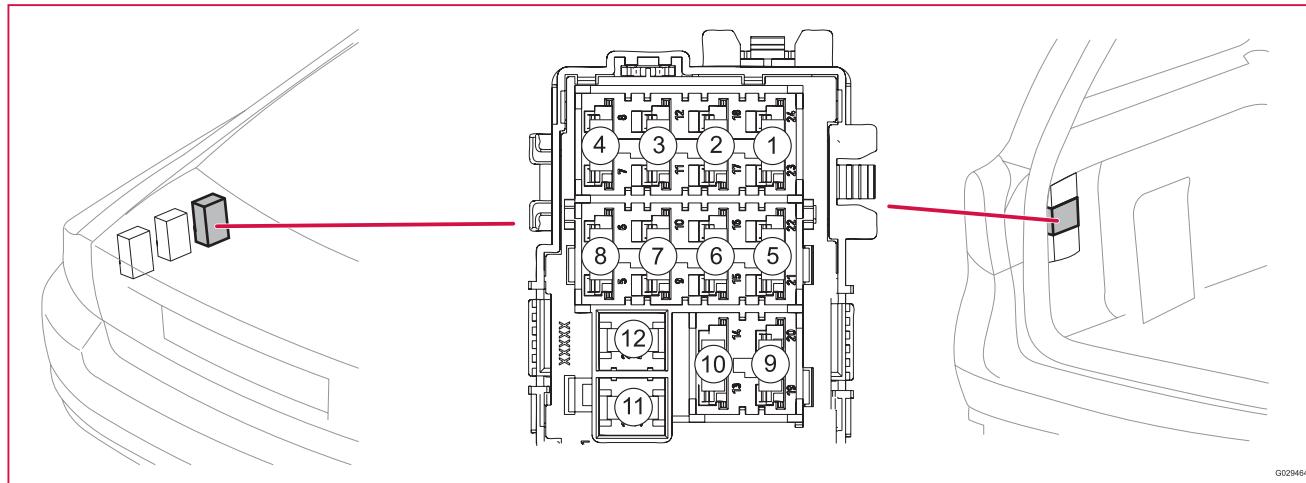


15/32 Distribution box in cargo compartment

| No. | No. | Fuse function | via | A |
|------|---------|---|-------|----|
| FB1 | 11D/B1 | 2/141 Refrigeration box relay 4/131 Control module back massage left 4/133 Control module back massage right 10/276 Lighting center armrest rear 1 10/277 Lighting center armrest rear 2 10/280 Lighting cooler compartment left 10/281 Lighting cooler compartment right | - | 5 |
| FB2 | 11D/B2 | 4/84 Suspension Module (SUM) | - | 15 |
| FB3 | 11D/B3 | 9/12 Seat Heating Module (SHM), driver's side | - | 15 |
| FB4 | 11D/B4 | 9/13 Seat Heating Module (SHM), passenger side | - | 15 |
| FB5 | 11D/B5 | 9/15 Control module, rear right seat heater | - | 15 |
| FB6 | 11D/B6 | 4/82 Differential Electronic Module (DEM) | - | 10 |
| FB7 | 11D/B7 | 9/14 Control module, rear left seat heater | - | 15 |
| FB9 | 11D/B9 | 3/27 Switch unit, power passenger seat | - | 25 |
| FB10 | 11D/B10 | 4/93 Keyless Vehicle Module (KVM) | - | 20 |
| FB11 | 11D/B11 | 6/146 Lock motor, rear left brake disc | 4/115 | 30 |
| FB12 | 11D/B12 | 6/147 Lock motor, rear right brake disc | 4/115 | 30 |

Fuses

Distribution box in cargo compartment FD1-FD7

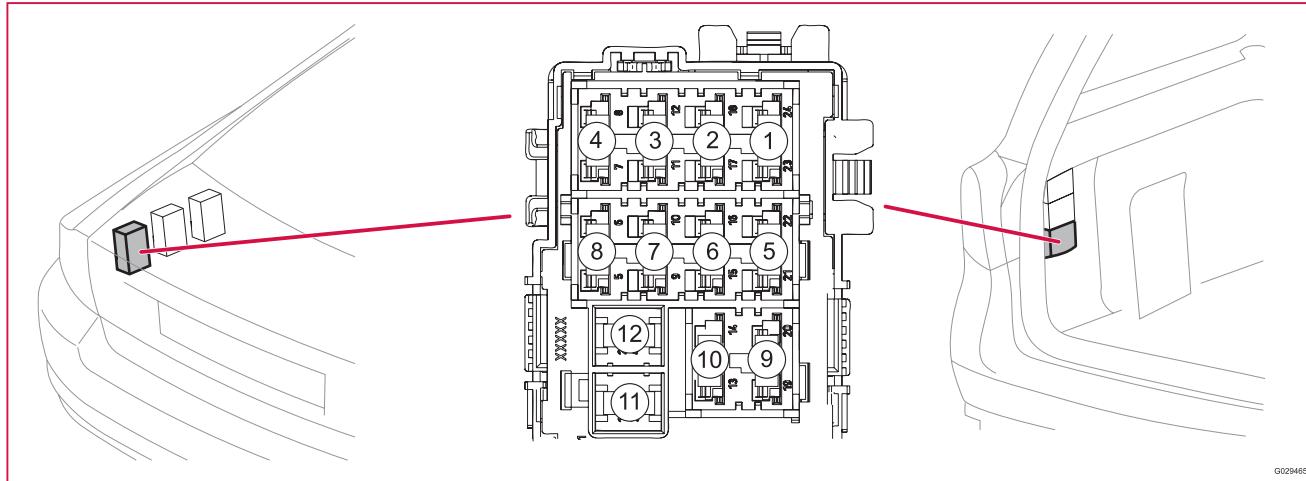


15/32 Distribution box in cargo compartment

| No. | No. | Fuse function | via | A |
|-----|--------|--|------------------|----|
| FD1 | 11D/D1 | 16/46 High Level Display Front (HLDF) 16/108 Multimedia Module (MMM) | - | 10 |
| FD3 | 11D/D3 | 16/79 Subwoofer Module (SUB), V70 | - | 25 |
| FD4 | 11D/D4 | 16/145 Remote digital audio receiver (RDAR) 16/162 Digital Audio Broadcast Module (DABM) | - | 5 |
| FD5 | 11D/D5 | 16/105 Audio module (AUD) | - | 25 |
| FD6 | 11D/D6 | 3/281 Infotainment Control Module (ICM) 4/124 Accessory USB unit (AUU) 11/1 Fuse in extra fuse holder, passenger compartment 16/1 Integrated Audio Module (IAM) | - - - - | 15 |
| FD7 | 11D/D7 | 16/60 Phone Module (PHM) 16/147 Bluetooth Phone Module (BPM) | - | 5 |

Fuses

Battery PF1-PF2

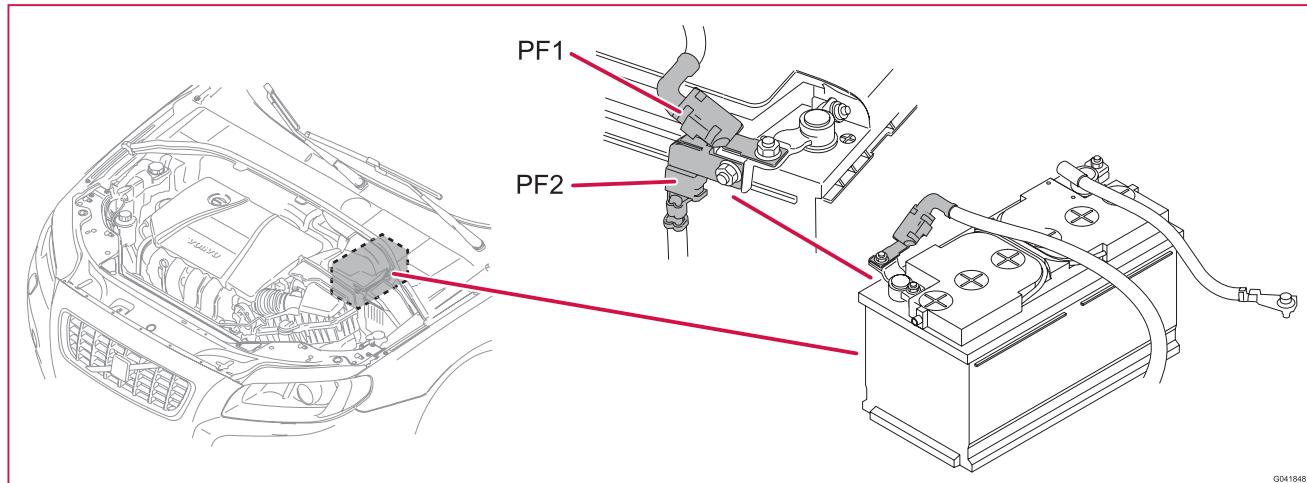


1/1 Battery

| No. | Fuse function | via | A |
|-----|---------------|---|-------|
| PF1 | 11A/1-11A/7 | Fuses in the fuse box in the engine compartment | - |
| | 11B/8-11B/14 | Fuses in the fuse box in the engine compartment | - |
| | 11B/16-11B/22 | Fuses in the fuse box in the engine compartment | 2/31 |
| | 11B/23 | Fuses in the fuse box in the engine compartment | - |
| | 11B/24-11B/26 | Fuses in the fuse box in the engine compartment | 2/193 |
| | 11B/27-11B/32 | Fuses in the fuse box in the engine compartment | - |
| | 11B/33 | Fuses in the fuse box in the engine compartment | 2/32 |
| | 11B/34 | Fuses in the fuse box in the engine compartment | - |
| | 11B/35-11B/41 | Fuses in the fuse box in the engine compartment | 2/32 |
| | 11A/42-11A/44 | Fuses in the fuse box in the engine compartment | - |
| PF2 | 6/25 | Starter motor | - |
| | 6/26 | Alternator Control Module (ACM) | - |
| | | | 150 |

Relays

Relays in the engine compartment R2

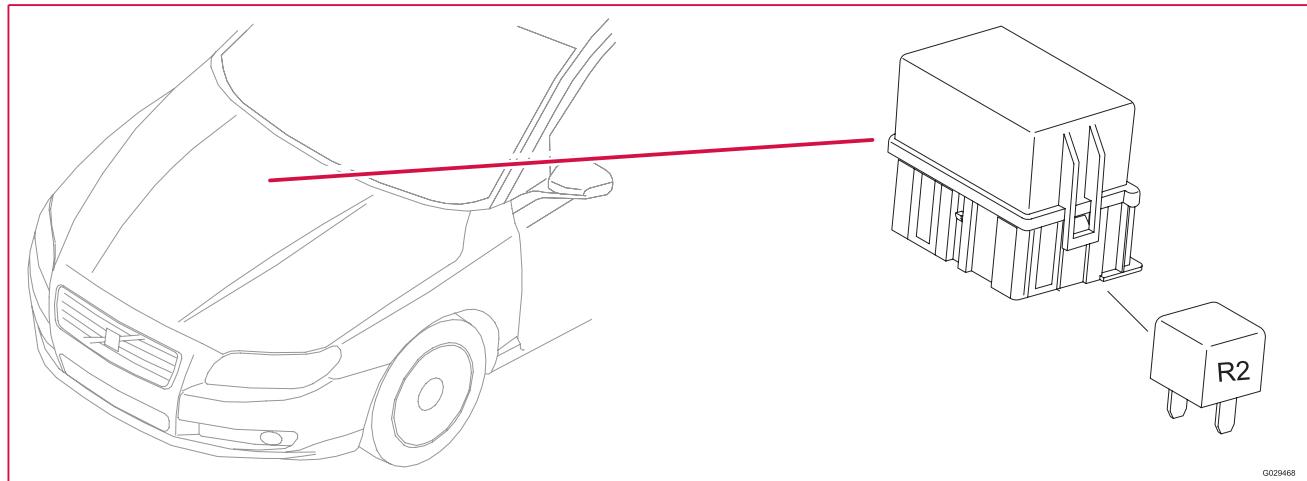


15/33 Engine compartment cold zone

| Pos | Relay function | |
|-----|----------------|-------------|
| R2 | 2/17 | Relay, horn |

Relays

Relays in the engine compartment R8-R9

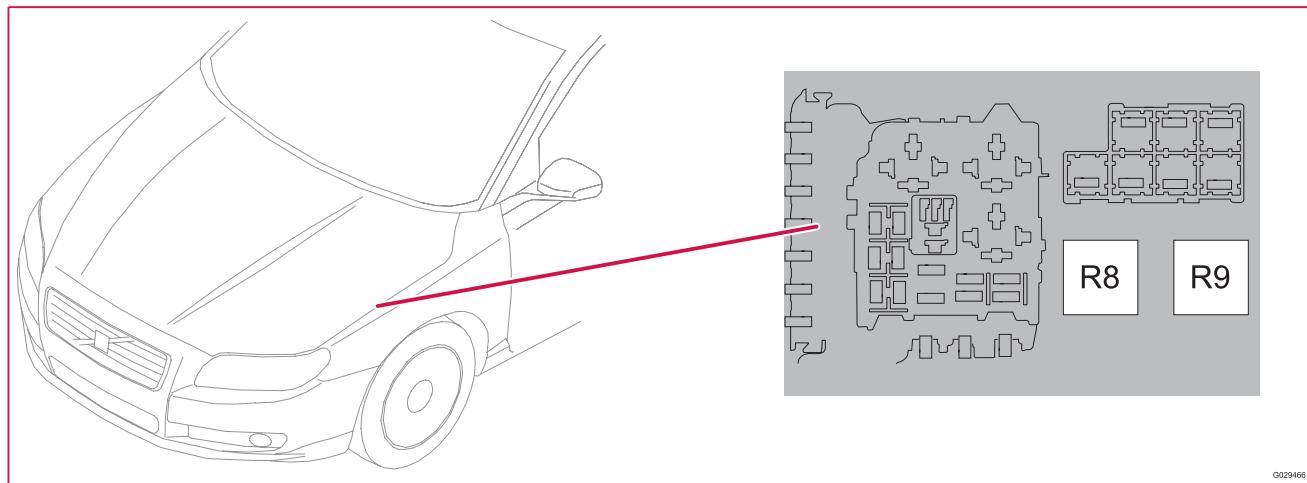


G029466

15/31 Distribution box engine compartment

| Pos | Relay function | |
|-----|----------------|--------------------------|
| R8 | 2/31 | Relay, 15-feed |
| R9 | 2/193 | Relay, comfort functions |

Relays

Relays in the engine compartment R10-R13

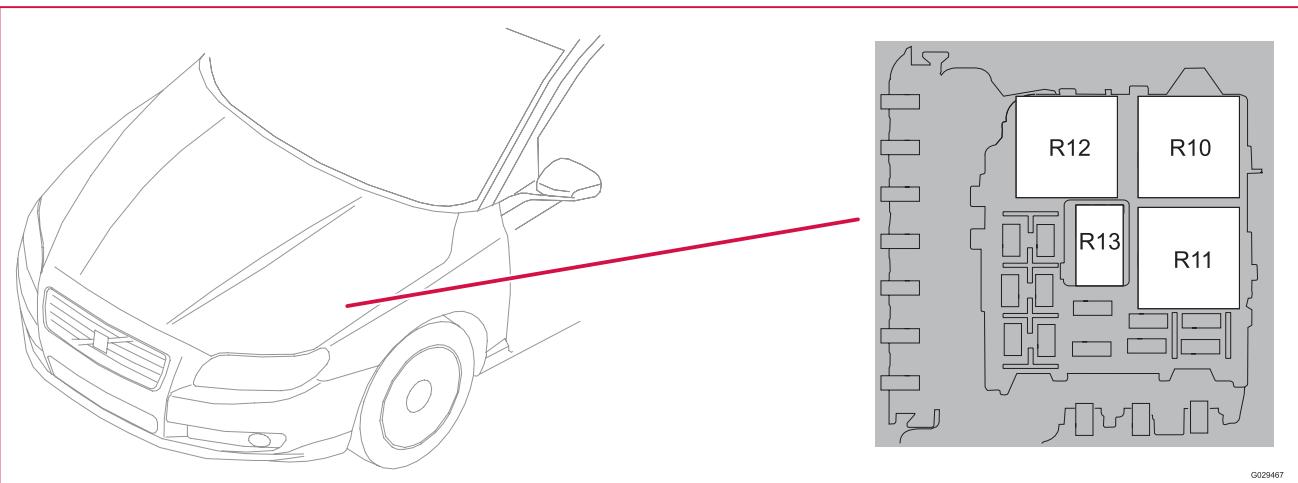


G029467

15/31 Distribution box engine compartment

| Pos | Relay function | |
|-----|----------------|--|
| R10 | 2/14 | Relay, glow plug system. 4-Cyl. Diesel |
| | 2/32 | Main relay, engine management system |
| R11 | 2/32 | Main relay, engine management system 4 Cyl. Diesel |
| | 2/133 | Relay, vacuum pump, 5-Cyl. Turbo |
| | 2/142 | Relay pre-heater fuel filter, 5-Cyl. Diesel |
| | 2/239 | Relay, coolant pump, 8-Cyl. |
| R12 | 2/35 | Relay, starter motor |
| R13 | 2/22 | Relay, climate control system |

Relays

Cargo compartment

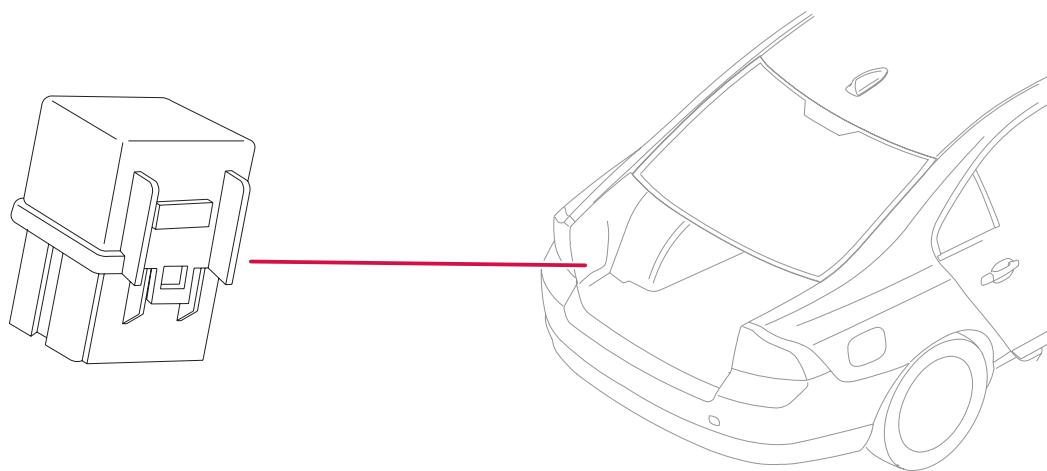

G032354


Relay in extra holder cargo compartment

Relay function

| | |
|-------|-------------------------|
| 2/141 | Refrigeration box relay |
|-------|-------------------------|

Relays

Distribution box in cargo compartment RA1-RD1

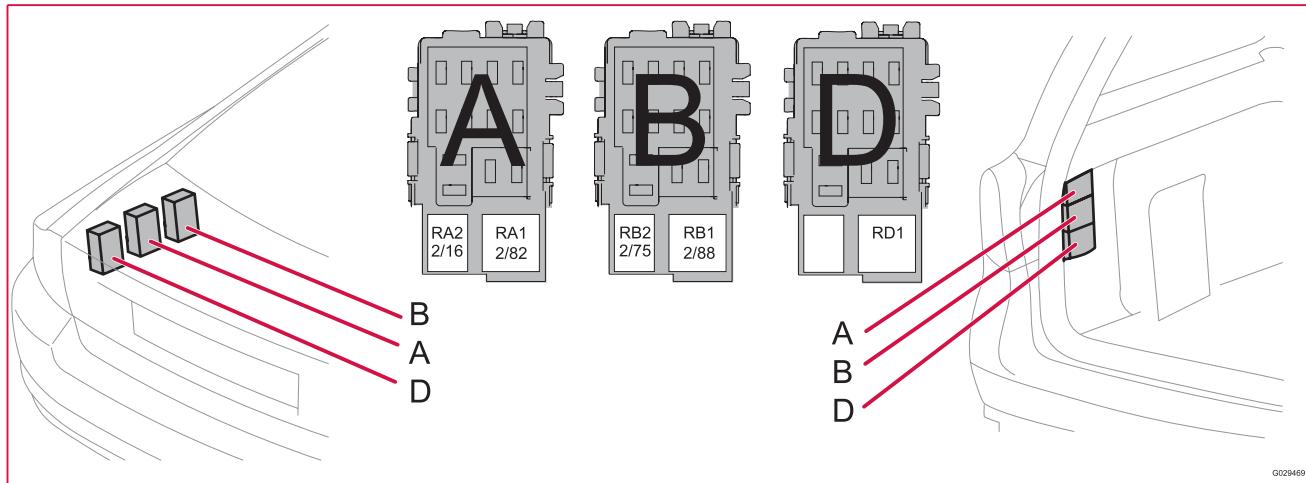

15/32 Distribution box in cargo compartment

| Pos | Relay function | |
|-----|----------------|--------------------------------------|
| RA1 | 2/82 | Relay, heated rear window |
| RA2 | 2/16 | Relay, rear window wiper |
| RB1 | 2/88 | Relay, 15-feed rear |
| RB2 | 2/75 | Rear adjustable head restraint relay |
| RD1 | | Mounting |

Relays - soldered


Central Electronic Module (CEM)

4/56 Central Electronic Module (CEM)

| Pos | Relay function |
|------------|--|
| K1 | Front fog lights |
| K2 | High beam |
| K3 | Reversing lights |
| K5-A | Washer motor |
| K5-B | Washer motor |
| K6-B | Central locking motor, trunk lid |
| K8 | Fuel pump |
| K9 | Steering Column Lock Module (SCL) |
| K10-A | Seat Heating Module (SHM), interior lighting |
| K12 | Lock motor, fuel filler cover |

Ground connections

Overview

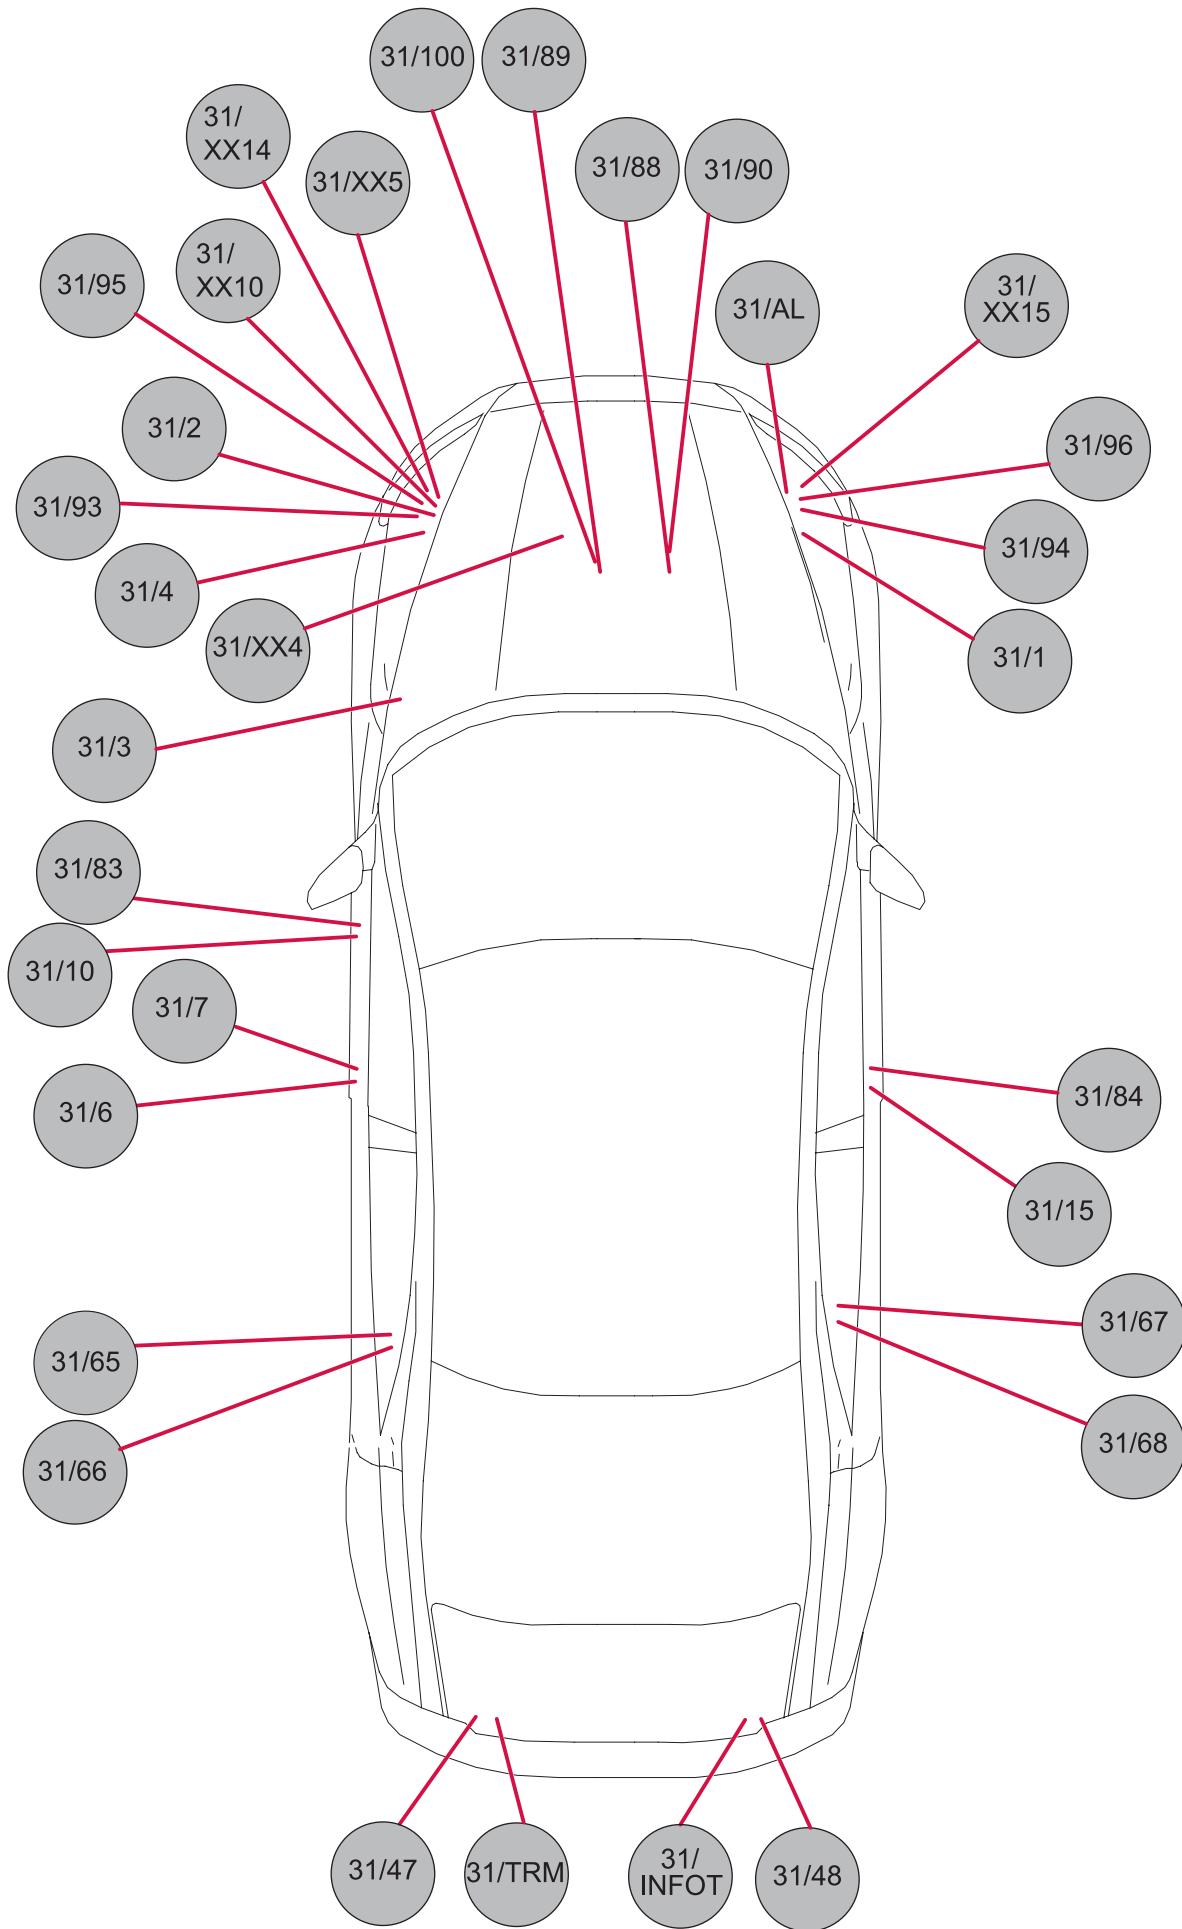

G029148

Ground connections

31/1 - 31/6

| | |
|-------------------------------|--|
| 31/1 | Ground connection, PTC |
| 9/42 | PTC-element |
| 31/2 LH wheel housing | |
| 4/71 | Cooling fan control module |
| 6/114 | Vacuum pump |
| 8/84 | Switch, vacuum pump |
| 9/32 | PTC resistor, crankcase ventilation |
| 9/38 | Electrically heated fuel filter |
| 31/3 Body, battery | |
| 1/1 | Battery |
| 31/4 Engine | |
| 31/XX4 | Ground connection |
| 31/6 Bottom rail, left | |
| 3/27 | Switch unit, power passenger seat, RHD |
| 3/65 | Switch, heated rear seat, LHD |
| 3/126 | Driver Door Module (DDM), LHD |
| 3/127 | Passenger Door Module (PDM), RHD |
| 3/128 | Left rear door module (LDM) |
| 3/156 | Gear Selector Module (GSM), LHD |
| 3/176 | Switch, driver's door power window, LHD |
| 3/273 | Lock contact, LH front door |
| 3/275 | Lock contact, LH rear door |
| 4/52 | Power Seat Module (PSM), LHD |
| 6/36 | Lock motor, central locking, LH front door |
| 6/57 | Lock motor, central locking, LH rear door |
| 8/134 | Solenoid, reverse interlock, manual, LHD |
| 9/1 | Front 12V outlet, LHD |
| 9/12 | Seat Heating Module (SHM), driver's side, LHD |
| 9/13 | Seat Heating Module (SHM), passenger side, RHD |
| 9/25 | Rear 12V outlet, LHD |
| 10/72 | Front ashtray lighting, LHD |
| 10/161 | Lighting mug holder, LHD |
| 10/286 | Lighting floor driver's side, LHD |
| 10/287 | Lighting floor passenger side, LHD |
| 16/36 | TV receiver, LHD |
| 16/45 | Navigation system portable, LHD |
| 16/109 | DVD player/control module, LHD |
| 16/181 | Rear headphone sockets, LHD |
| 19/4 | Analog clock, LHD |

Ground connections 31/7 - 31/15 continues

| 31/7 Bottom rail, left | |
|-------------------------------|---|
| 3/271 | Contact, immobilizer, clutch pedal, LHD |
| 3/284 | Diagnostic contact, brake light, LHD |
| 4/56 | Central Electronic Module (CEM), RHD |
| 7/51 | Accelerator pedal sensor, LHD |

| 31/10 Bottom rail, left | |
|--------------------------------|--|
| 3/6 | Switch, hazard warning flashers |
| 3/117 | Switch unit, ceiling light |
| 3/173 | Switch, trunk lid/tailgate private lock |
| 4/31 | Passenger compartment fan control module |
| 4/33 | Sunroof control module |
| 4/76 | Remote control unit for garage door opener |
| 4/102 | Steering Column Lock Module (SCL) |
| 4/119 | Remote Keyless Entry (RKE) |
| 4/119.2 | Remote Receiver Module (RRX) |
| 6/48 | Damper Motor Module (DMM), recirculation |
| 6/95 | Damper Motor Module (DMM), temperature, left side |
| 6/96 | Damper Motor Module (DMM), temperature, right side |
| 6/102 | Damper Motor Module (DMM), defroster |
| 6/103 | Damper Motor Module (DMM), floor/ventilation |
| 7/149 | Rain Sensor Module (RSM) |
| 7/159 | Air Quality Sensor (AQS) |
| 7/199 | Ultrasonic sensor |
| 7/238 | Alcolock sensor |
| 8/48 | Auto-dimming rearview mirror |
| 10/19 | Auxiliary brake light, S80 |
| 10/22 | Ceiling light |
| 10/29 | Glove compartment lighting |
| 10/114 | Left-hand vanity mirror lighting |
| 10/115 | Right-hand vanity mirror lighting |
| 10/150 | Rear reading light |
| 17/13 | Data link connector |
| 26/8 | Alcolock charging cradle |

| 31/15 Bottom rail, right | |
|---------------------------------|--|
| 3/27 | Switch unit, power passenger seat, LHD |
| 3/65 | Switch, heated rear seat, RHD |
| 3/126 | Driver Door Module (DDM), RHD |
| 3/127 | Passenger Door Module (PDM), LHD |
| 3/129 | Right rear door module (RDM) |
| 3/156 | Gear Selector Module (GSM), RHD |
| 3/176 | Switch, driver's door power window, RHD |
| 3/274 | Lock contact, RH front door |
| 3/276 | Lock contact, RH rear door |
| 4/52 | Power Seat Module (PSM), RHD |
| 6/55 | Lock motor, central locking, RH front door |

continues

Ground connections

31/15 - 31/48

| 31/15 Bottom rail, right | |
|---------------------------------|--|
| 6/56 | Lock motor, central locking, RH rear door |
| 8/134 | Solenoid, reverse interlock, manual, RHD |
| 9/1 | Front 12V outlet, RHD |
| 9/12 | Seat Heating Module (SHM), driver's side, RHD |
| 9/13 | Seat Heating Module (SHM), passenger side, LHD |
| 9/25 | Rear 12V outlet, RHD |
| 10/72 | Front ashtray lighting, RHD |
| 10/161 | Lighting mug holder, RHD |
| 10/286 | Lighting floor driver's side, RHD |
| 10/287 | Lighting floor passenger side, RHD |
| 16/36 | TV receiver, RHD |
| 16/45 | Navigation system portable, RHD |
| 16/109 | DVD-player/control module S80, RHD |
| 16/181 | Rear headphone sockets, RHD |
| 19/4 | Analog clock, RHD |

| 31/47 Rear bumper abutment, left | |
|---|---|
| 2/16 | Rear window wiper relay, V70 |
| 3/35 | Switch, handle, trunk lid/tailgate |
| 3/78 | Lock unit, tailgate V70 |
| 4/110 | Trailer Module (TRM), S80 |
| 4/115 | Park Brake Module (PBM) |
| 4/116 | Power Operated Tailgate Module (POT), V70 |
| 4/120 | Parking Assistance Camera module (PAC), S80 |
| 6/8 | Lock motor central locking, trunk lid/tailgate, S80 |
| 6/32 | Rear window wiper motor, V70 |
| 6/149 | Tailgate closing motor, V70 |
| 7/227A | Tailgate pinch sensor, right, V70 |
| 7/227B | Tailgate pinch sensor, left, V70 |
| 9/2 | Heated rear window, V70 |
| 10/3 | License plate lighting |
| 10/17 | Lamp housing, rear right V70 |
| 10/18 | Lamp housing, rear left |
| 10/19 | Auxiliary brake light V70 |

| 31/48 Rear bumper abutment, right | |
|--|-----------------------------------|
| 2/141 | Refrigeration box relay |
| 4/86 | Parking Assistance Module (PAM) |
| 6/37 | Lock motor, fuel filler cover |
| 7/214 | Heartbeat sensor |
| 9/24 | Refrigeration box |
| 10/17 | Lamp housing, rear right |
| 10/276 | Lighting center armrest rear 1 |
| 10/277 | Lighting center armrest rear 2 |
| 10/280 | Lighting cooler compartment left |
| 10/281 | Lighting cooler compartment right |
| 17/19 | 12V outlet, cargo compartment |

Ground connections

31/65 - 31/83 continues

| 31/65 Rear seat riser, left-hand side 1 | |
|---|---|
| 4/82 | Differential Electronic Module (DEM) |
| 4/110 | Trailer Module (TRM), V70 |
| 4/120 | Parking Assistance Camera module (PAC), V70 |
| 7/175 | Weight sensor passenger seat, seat belt reminder, RHD |
| 8/51 | Front left side airbag igniter |
| 8/52 | Igniter side airbag front passenger seat |
| 8/59 | Rear left head restraint solenoid, S80 |
| 9/14 | Control module, rear left seat heater |

| 31/66 Rear seat riser, left-hand side 2 | |
|---|------------------------------|
| 4/83 | Fuel pump control module |
| 4/111 | Additive Dosing Module (ADM) |
| 6/33 | Fuel pump |

| 31/67 Rear seat riser, RH side 1 | |
|----------------------------------|---|
| 4/84 | Suspension Module (SUM) |
| 4/93 | Keyless Vehicle Module (KVM) |
| 7/175 | Weight sensor passenger seat, seat belt reminder, LHD |
| 8/51 | Front left side airbag igniter, RHD |
| 8/60 | Rear right head restraint solenoid, S80 |
| 9/15 | Control module, rear right seat heater |

| 31/68 Rear seat riser, RH side 2 | |
|----------------------------------|-----------------------------------|
| 6/35 | Fuel pump, auxiliary heater |
| 9/38 | Heated fuel filter, 5-Cyl. Diesel |

| 31/83 Bottom rail, left | |
|-------------------------|--|
| 3/4 | Steering wheel switch left (SWSL) |
| 3/37 | Contact horn |
| 3/111 | Light Switch Module (LSM) |
| 3/130 | Steering Wheel Module (SWM) |
| 3/131 | Steering wheel switch right (SWSR) |
| 3/132 | Start Control Module (SCU) |
| 3/272 | Parking brake contact |
| 3/281 | Infotainment Control Module (ICM) |
| 3/293 | Handsfree control panel cellular phone |
| 4/6 | Climate Control Module (CCM) |
| 4/80 | Forward Sensing Module (FSM) |
| 4/124 | Accessory USB unit (AUU) |
| 5/1 | Driver Information Module (DIM) |
| 7/10 | Interior temperature sensor |
| 9/42 | PTC-element |
| 10/1 | Lamp housing, front left |
| 10/2 | Lamp housing, front right |

continues

Ground connections

31/83 - 31/90

| 31/83 Bottom rail, left | |
|--------------------------------|--|
| 16/1 | Integrated Audio Module (IAM) |
| 16/60 | Phone Module (PHM) |
| 16/123 | Auxiliary equipment input (AUX) |
| 16/147 | Bluetooth Phone Module (BPM) |
| 16/159 | Control module, cellular phone handsfree |
| 17/13 | Data link connector |
| 19/4 | Analog clock |

| 31/84 Bottom rail, right | |
|---------------------------------|---|
| 3/271 | Contact, immobilizer, clutch pedal, RHD |
| 3/284 | Diagnostic contact, brake light, RHD |
| 4/56 | Central Electronic Module (CEM), LHD |
| 7/51 | Accelerator pedal sensor, RHD |

| 31/88 Engine ignition coils | |
|------------------------------------|---|
| 20/3 | Spark plug with ignition coil, 5-Cyl. Turbo |
| 20/4 | Spark plug with ignition coil, 5-Cyl. Turbo |
| 20/3 | Spark plug with ignition coil, 6-Cyl. |
| 20/4 | Spark plug with ignition coil, 6-Cyl. |
| 20/5 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/6 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/3 | Spark plug with ignition coil, 8-Cyl. |
| 20/5 | Spark plug with ignition coil, 8-Cyl. |

| 31/89 Engine ignition coils | |
|------------------------------------|---|
| 20/5 | Spark plug with ignition coil, 5-Cyl. Turbo |
| 20/6 | Spark plug with ignition coil, 5-Cyl. Turbo |
| 20/7 | Spark plug with ignition coil, 5-Cyl. Turbo |
| 20/5 | Spark plug with ignition coil, 6-Cyl. |
| 20/6 | Spark plug with ignition coil, 6-Cyl. |
| 20/7 | Spark plug with ignition coil, 6-Cyl. |
| 20/8 | Spark plug with ignition coil, 6-Cyl. |
| 20/16 | Capacitor |
| 20/7 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/8 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/7 | Spark plug with ignition coil, 8-Cyl. |
| 20/12 | Spark plug with ignition coil, 8-Cyl. |

| 31/90 Engine ignition coils | |
|------------------------------------|---|
| 20/3 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/4 | Spark plug with ignition coil, 6-Cyl. Turbo |
| 20/16 | Capacitor, 6-Cyl. Turbo |
| 20/4 | Spark plug with ignition coil, 8-Cyl. |
| 20/6 | Spark plug with ignition coil, 8-Cyl. |

Ground connections

31/93 - 31/XX10

| 31/93 LH wheel housing 2 | |
|---------------------------------|---|
| 4/99 | Speed dependent power steering control module |
| 7/5 | Washer fluid level sensor |
| 9/43 | Heated windshield washer nozzle, left |
| 9/44 | Heated windshield washer nozzle, right |
| 10/1 | Lamp housing, front left |
| 10/5 | Fog light, front left |

| 31/94 RH wheel housing 2 | |
|---------------------------------|--------------------------------------|
| 6/104 | High pressure headlight washer motor |
| 10/2 | Lamp housing, front right |
| 10/6 | Fog light, front right |
| 16/10 | Horn 1 |
| 16/11 | Horn 2 |

| 31/95 LH wheel housing 3 | |
|---------------------------------|--------------------------------------|
| 4/56 | Central Electronic Module (CEM), RHD |
| 4/118 | Headlamp Control Module (HCM) |
| 7/4 | Brake fluid level sensor |
| 16/35 | Siren Control Module (SCM) |

| 31/96 RH wheel housing 3 | |
|---------------------------------|--------------------------------------|
| 3/62 | Hood alarm contact |
| 4/56 | Central Electronic Module (CEM), LHD |
| 7/73 | Coolant level sensor |
| 7/203 | Forward-aimed radar (FLR) |

| 31/100 Engine ignition coils | |
|-------------------------------------|---------------------------------------|
| 20/8 | Spark plug with ignition coil, 8-Cyl. |
| 20/13 | Spark plug with ignition coil, 8-Cyl. |

| 31/XX4 Engine - Body | |
|-----------------------------|-------------------|
| 31/4 | Ground connection |

| 31/XX5 Ground connection, ECM | |
|--------------------------------------|---|
| 6/164 | Electrical power steering module (EPS), 1.6L Diesel |

| 31/XX10 LH wheel housing 1 | |
|-----------------------------------|---|
| 3/10 | Reversing light contact |
| 3/270 | Contact servo pressure |
| 3/282 | Switch indicator 1st gear, ISD |
| 4/28 | Transmission Control Module (TCM) |
| 4/46 | Engine Control Module (ECM) |
| 6/73 | Coolant pump |
| 6/139 | Upper actuating motor, intake manifold |
| 6/140 | Lower actuating motor, intake manifold |
| 7/200 | Sensor, coolant temperature |
| 8/3 | Electromagnetic clutch, climate control system, 4-Cyl. Diesel |
| 9/32 | PTC resistor, crankcase ventilation |

Ground connections

31/XX14 - 31/AL

31/XX14 LH wheel housing 3 (ABS)

| | |
|------|----------------------------|
| 4/16 | Brake Control Module (BCM) |
|------|----------------------------|

31/XX15 RH wheel housing

| | |
|-------|---|
| 4/7 | Combustion Preheater Module (CPM) |
| 4/106 | Control module, parking heater remote start |
| 6/1 | Wiper Motor Module (WMM) |

31/TRM Accessories

| | |
|--------|--|
| 2/141 | Refrigeration box relay |
| 4/131 | Control module back massage left |
| 4/133 | Control module back massage right |
| 9/24 | Refrigeration box |
| 10/276 | Lighting center armrest rear 1 |
| 10/277 | Lighting center armrest rear 2 |
| 10/280 | Lighting cooler compartment left |
| 10/281 | Lighting cooler compartment right |
| 17/37 | 4-pin outlet, tow hitch cable harness |
| 17/38 | 7-pin outlet, tow hitch cable harness |
| 17/39 | 13-pin outlet, tow hitch cable harness |

31/INFOT Infotainment


| | |
|--------|---------------------------------------|
| 16/46 | High Level Display Front (HLDF) |
| 16/79 | Subwoofer Module (SUB), V70 |
| 16/105 | Audio module (AUD) |
| 16/108 | Multimedia Module (MMM) |
| 16/145 | Remote digital audio receiver (RDAR) |
| 16/162 | Digital Audio Broadcast Module (DABM) |

31/AL Auxiliary lights

| | |
|-------|------------------------------|
| 10/65 | Auxiliary light, front right |
| 10/69 | Auxiliary light, front left |

Control modules

Overview locations

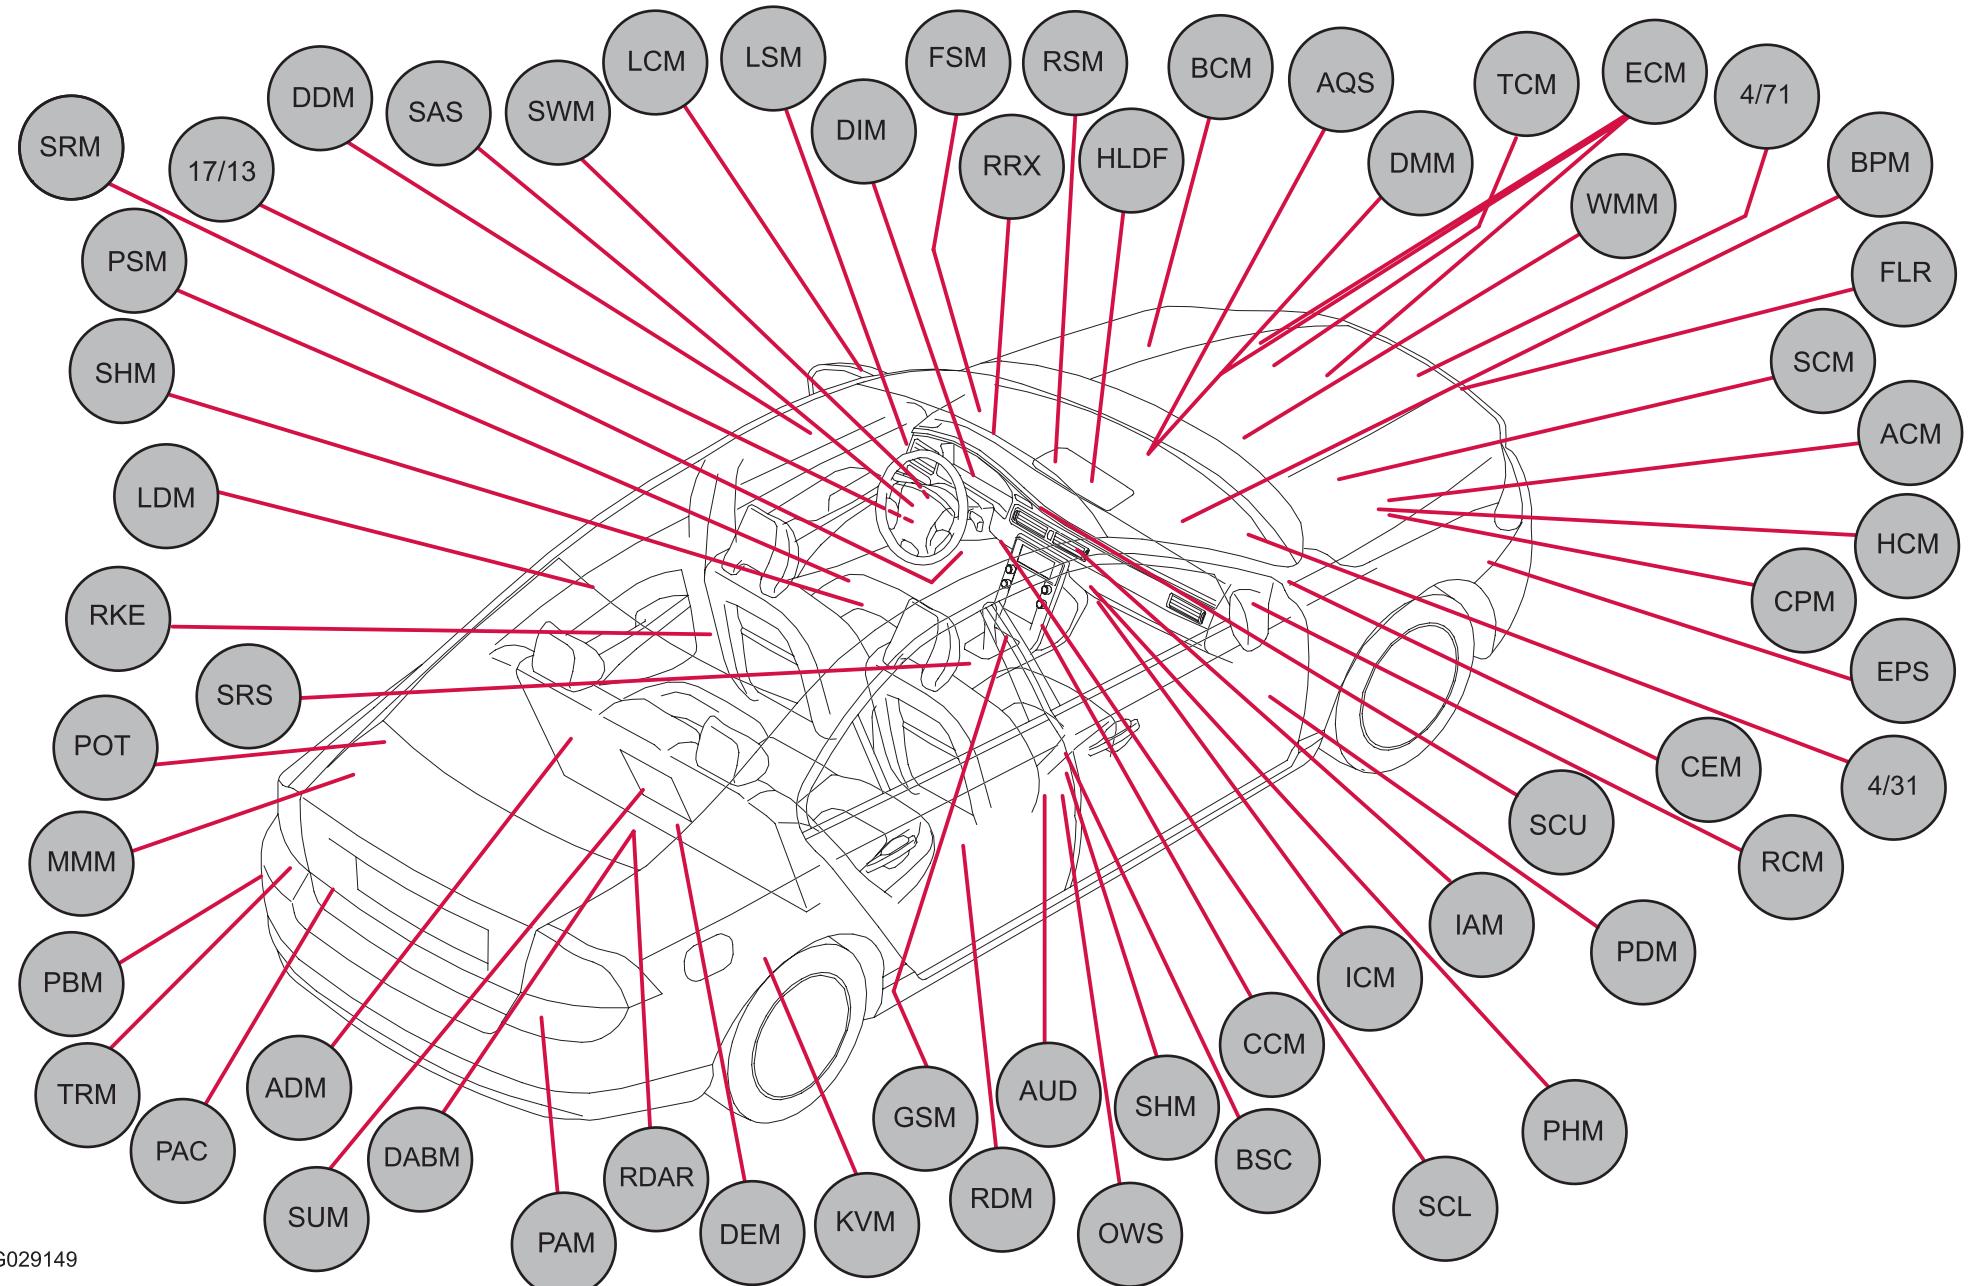

G029149


Control modules

Overview designations

| Unit | Designation | Unit | Designation |
|-------------|--|--------------|--|
| ACM | 6/26 Alternator Control Module (ACM) | OWS | 7/93 Occupant Weight Sensor (OWS) |
| ADM | 4/111 Additive Dosing Module (ADM) | PAC | 4/120 Parking Assistance Camera module (PAC) |
| AQS | 7/159 Air Quality Sensor (AQS) | PAM | 4/86 Parking Assistance Module (PAM) |
| AUD | 16/105 Audio module (AUD) | PBM | 4/115 Park Brake Module (PBM) |
| BCM | 4/16 Brake Control Module (BCM) | PDM | 3/127 Passenger Door Module (PDM) |
| BPM | 16/147 Bluetooth Phone Module (BPM) | PHM | 16/60 Phone Module (PHM) |
| BSC | 7/164 Body Sensor Cluster Stability Sensor (BSC) | POT | 4/116 Power Operated Tailgate Module (POT) |
| CCM | 4/6 Climate Control Module (CCM) | PSM | 4/52 Power Seat Module (PSM) |
| CEM | 4/56 Central Electronic Module (CEM) | RCM | 27/4 Right Camera Module (RCM) |
| CPM | 4/7 Combustion Preheater Module (CPM) | RDAR | 16/145 Remote digital audio receiver (RDAR) |
| DABM | 16/162 Digital Audio Broadcast Module (DABM) | RDM | 3/129 Right rear door module (RDM) |
| DDM | 3/126 Driver Door Module (DDM) | RKE | 4/119 Remote Keyless Entry (RKE) |
| DEM | 4/82 Differential Electronic Module (DEM) | RRX | 4/119.2 Remote Receiver Module (RRX) |
| DIM | 5/1 Driver Information Module (DIM) | RSM | 7/149 Rain Sensor Module (RSM) |
| DMM | Damper Motor Module (DMM) | SAS | 4/68 Steering Wheel Angle Sensor Module (SAS) |
| ECM | 4/46 Engine Control Module (ECM) | SCL | 4/102 Steering Column Lock Module (SCL) |
| EPS | 6/164 Electrical power steering module (EPS) | SCM | 16/35 Siren Control Module (SCM) |
| FLR | 7/203 Forward-aimed radar (FLR) | SCU | 3/132 Start Control Module (SCU) |
| FSM | 4/80 Forward Sensing Module (FSM) | SHM | Seat Heating Module (SHM) |
| GSM | 3/156 Gear Selector Module (GSM) | SRM | 4/33 Sunroof Module (SRM) |
| HCM | 4/118 Headlamp Control Module (HCM) | SRS | 4/9 Supplemental Restraint System Module (SRS) |
| HLDF | 16/46 High Level Display Front (HLDF) | SUM | 4/84 Suspension Module (SUM) |
| IAM | 16/1 Integrated Audio Module (IAM) | SWM | 3/130 Steering Wheel Module (SWM) |
| ICM | 3/281 Infotainment Control Module (ICM) | TCM | 4/28 Transmission Control Module (TCM) |
| KVM | 4/93 Keyless Vehicle Module (KVM) | TRM | 4/110 Trailer Module (TRM) |
| LCM | 27/3 Left Camera Module (LCM) | WMM | 6/1 Wiper Motor Module (WMM) |
| LDM | 3/128 Left rear door module (LDM) | 4/31 | 4/31 Passenger compartment fan control module |
| LSM | 3/111 Light Switch Module (LSM) | 4/71 | 4/71 Cooling fan control module |
| MMM | 16/108 Multimedia Module (MMM) | 17/13 | 17/13 Data link connector |

Control modules


Central Electronic Module (CEM) 1:3

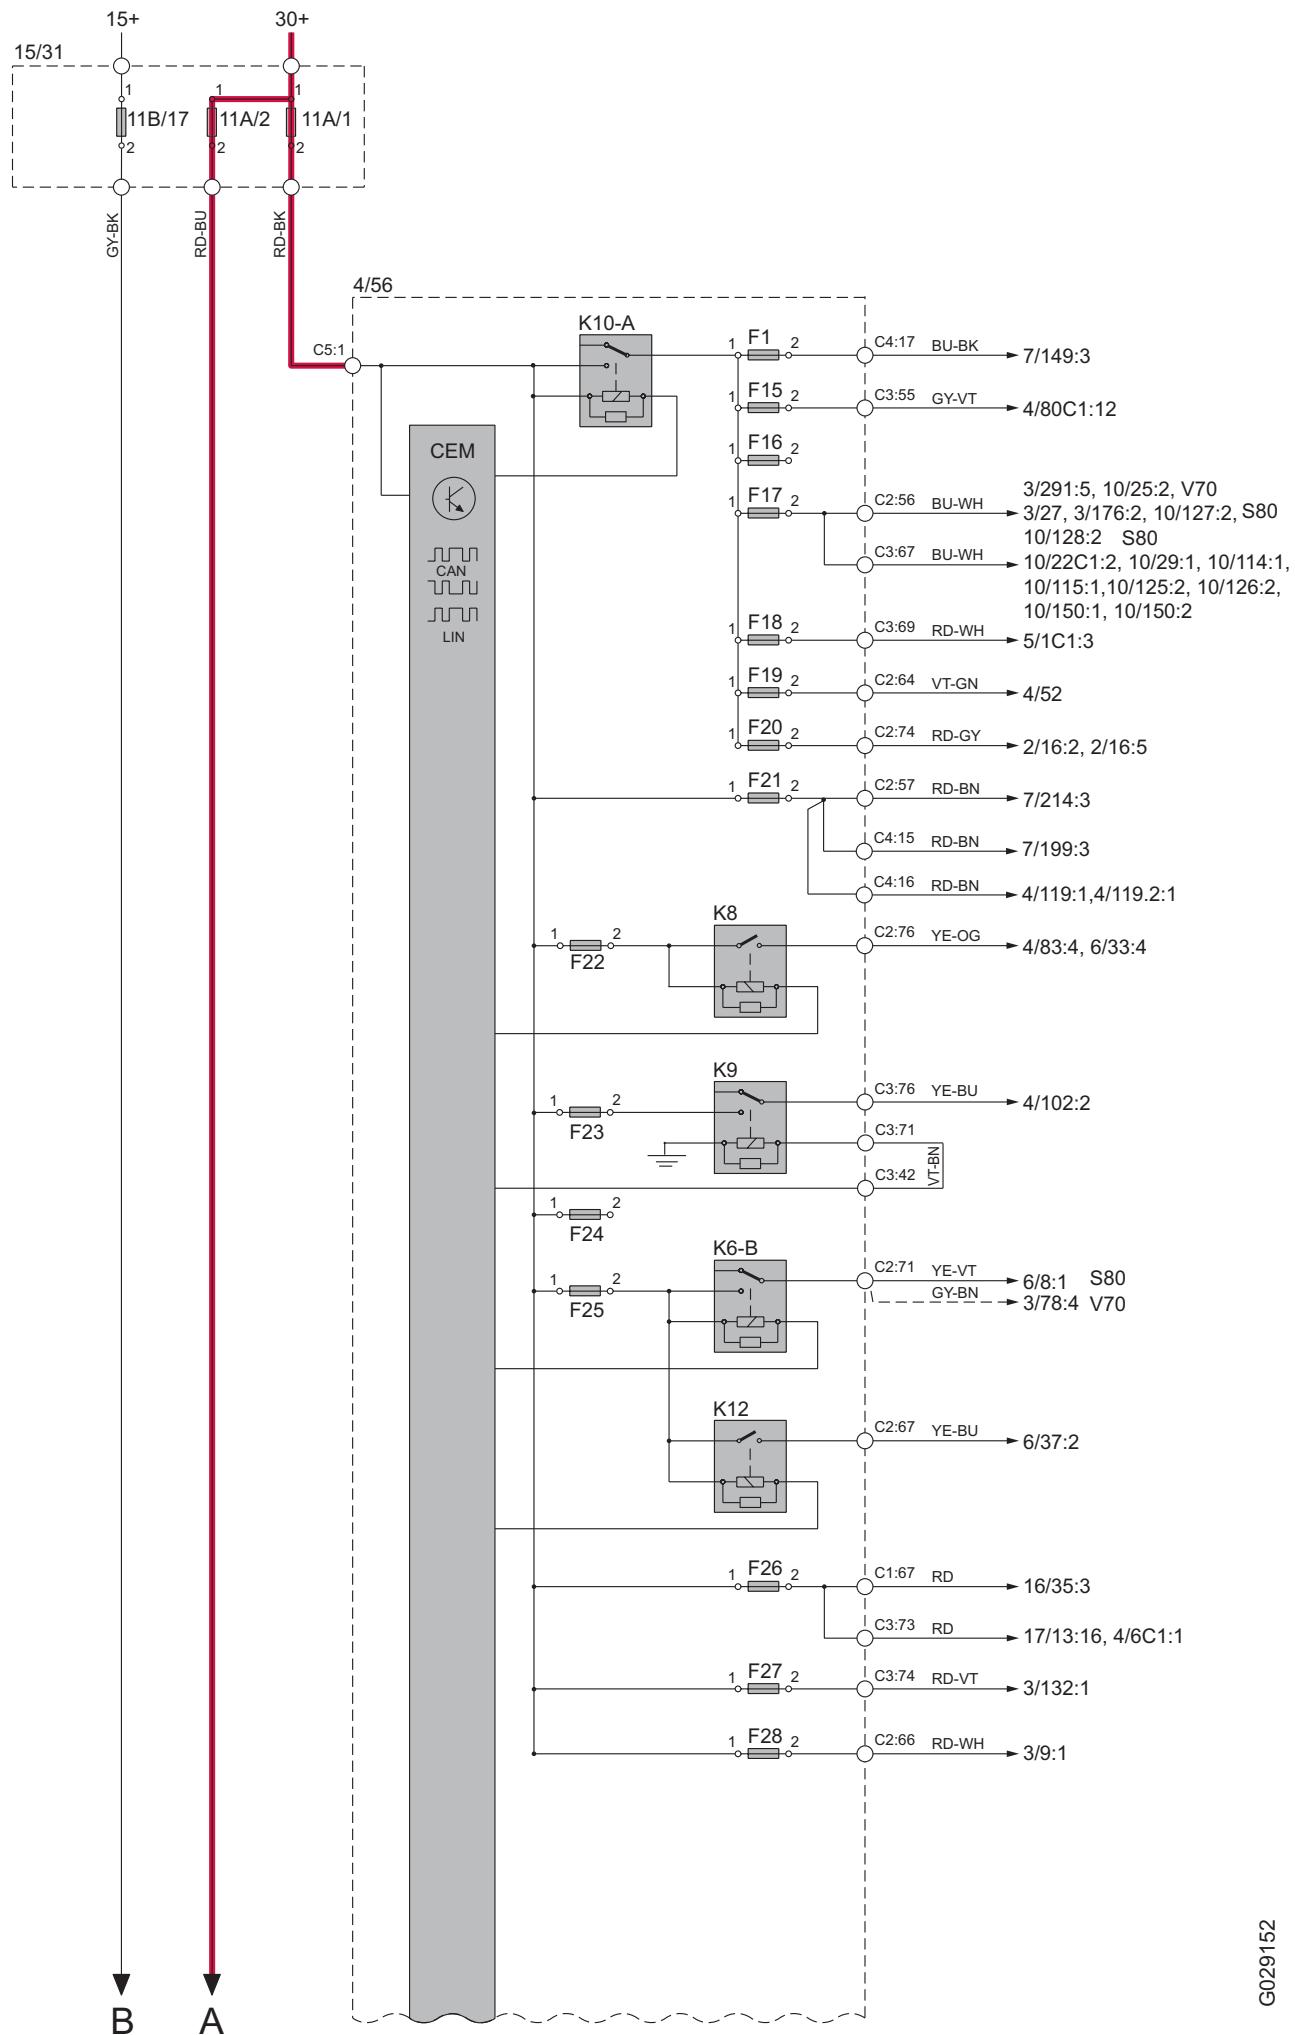

G029152

Control modules


Central Electronic Module (CEM) 2:3

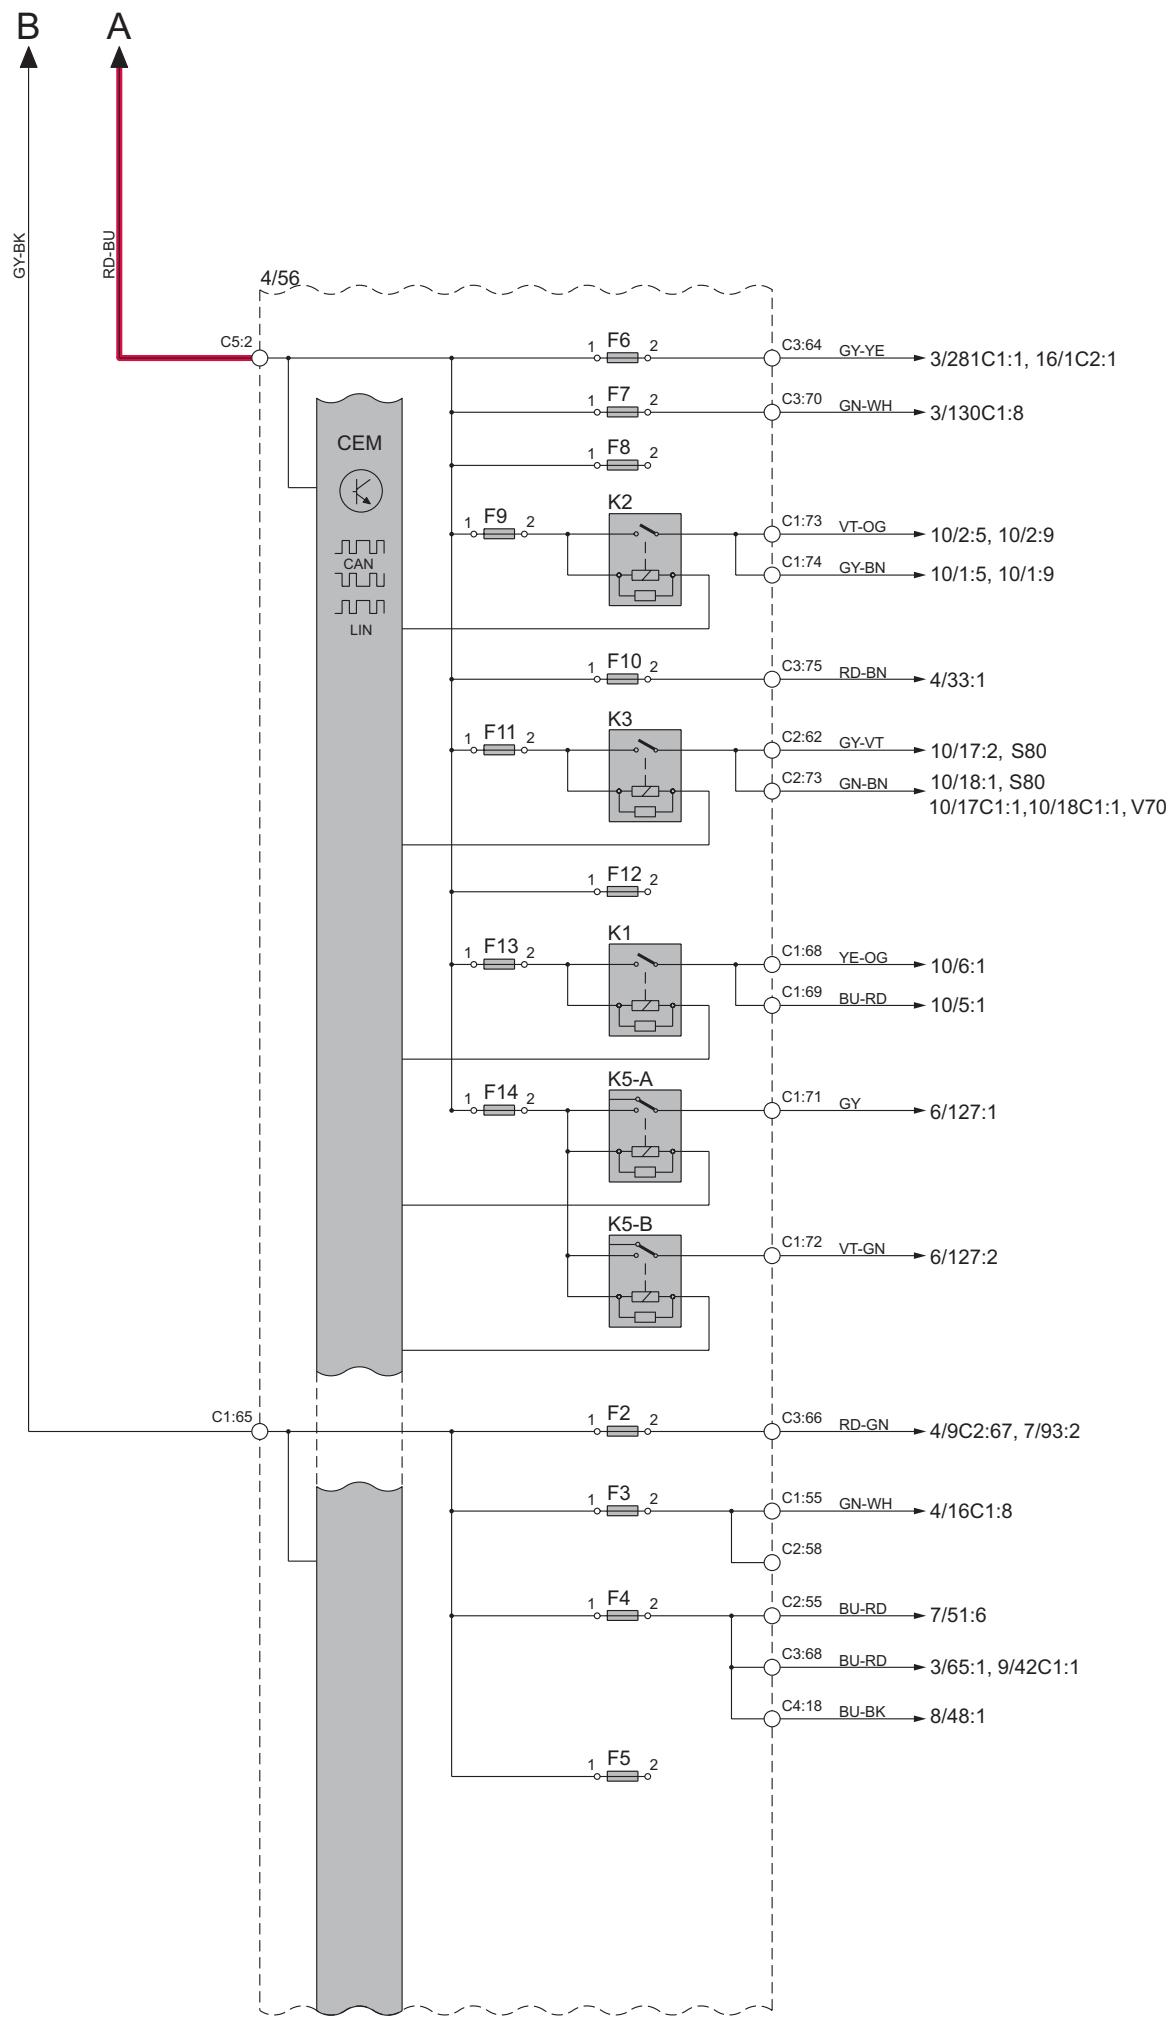

G029153


Control modules

Central Electronic Module (CEM) 3:3

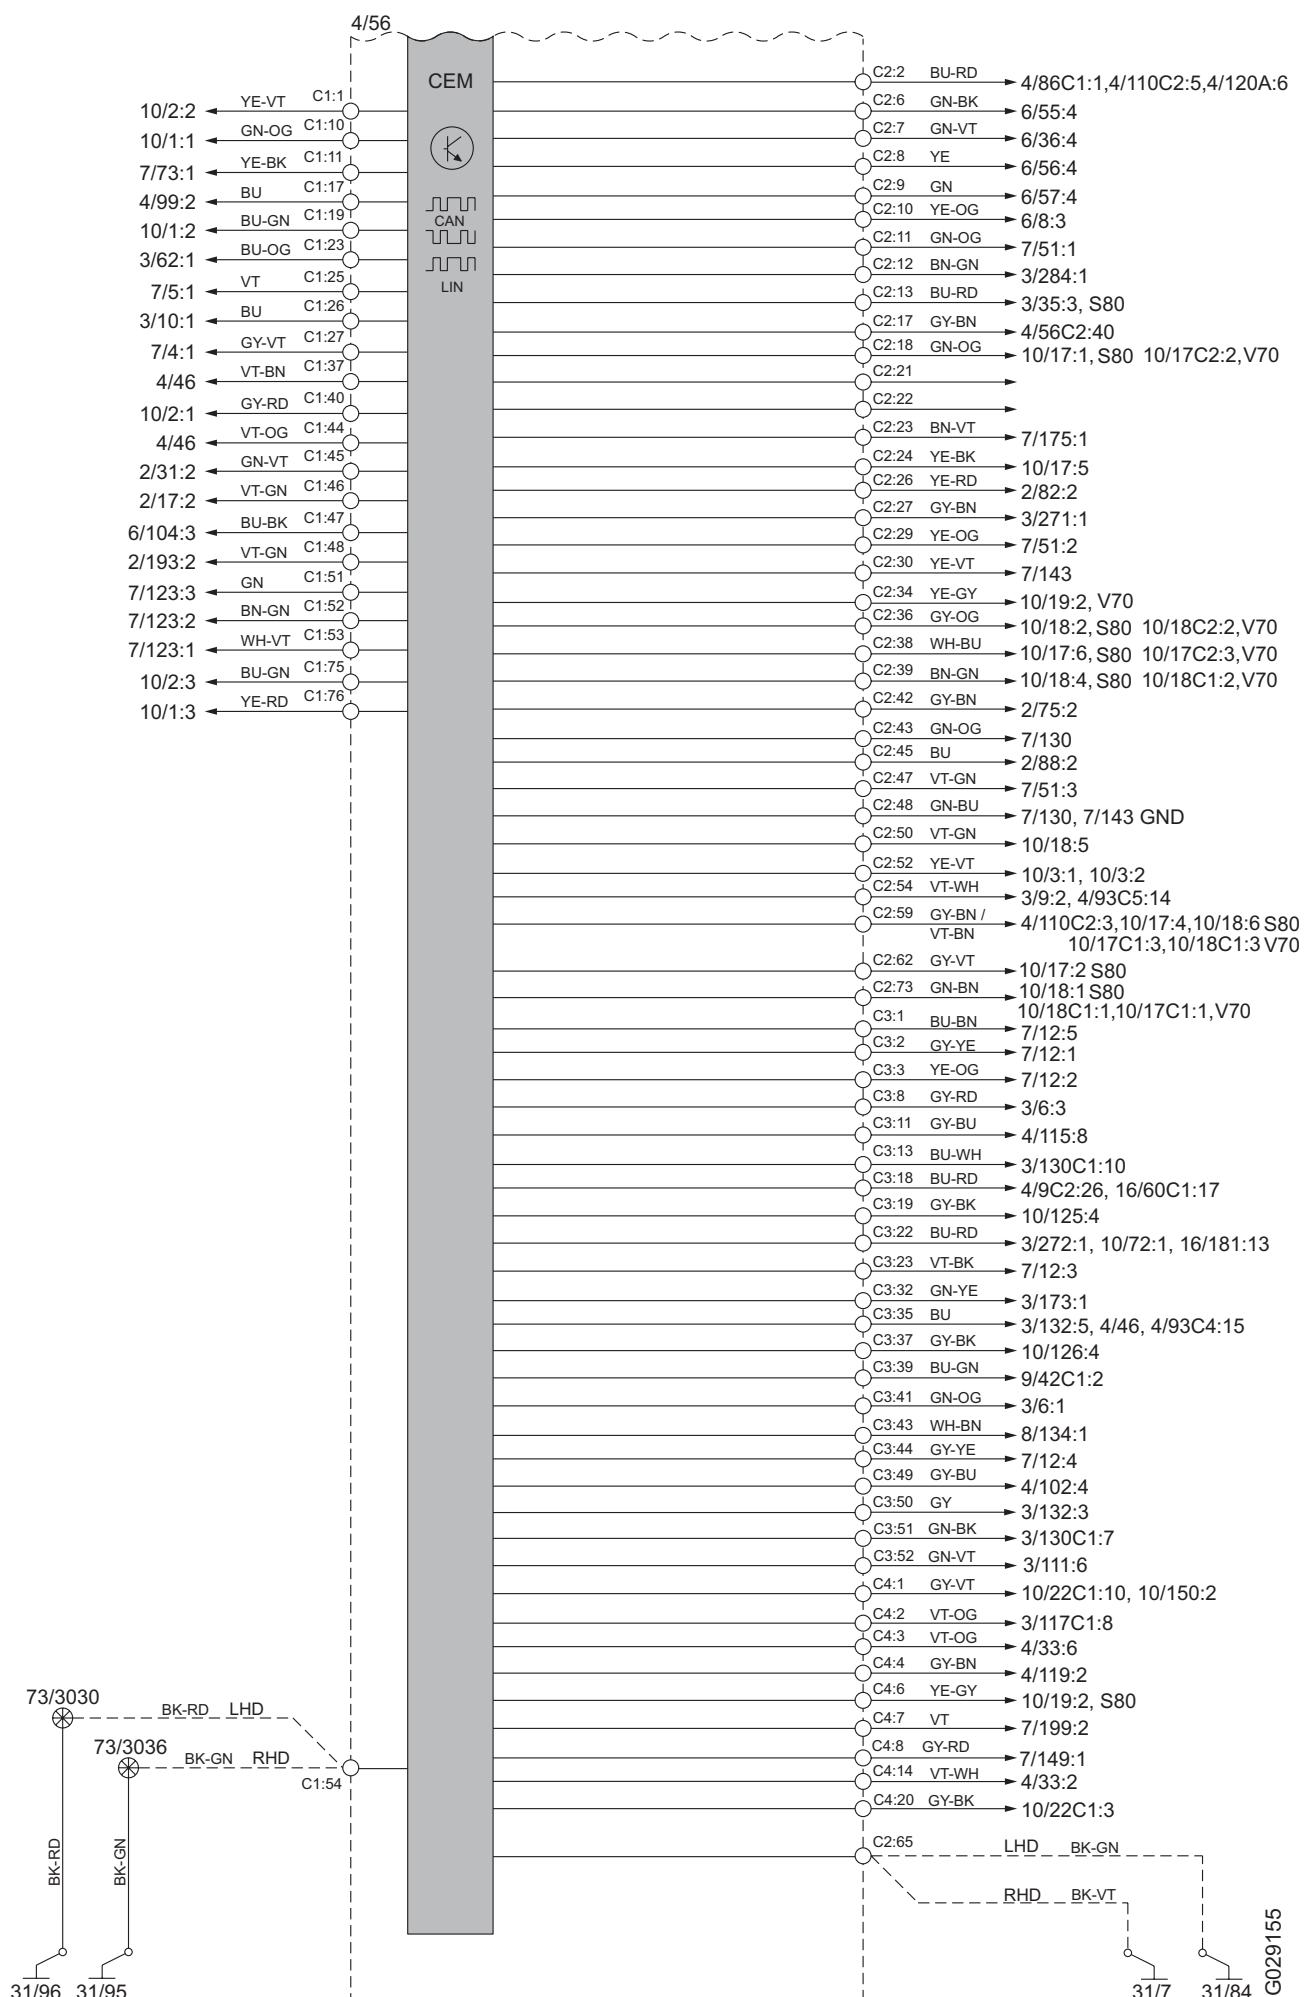


Control modules

Data communication high speed CAN

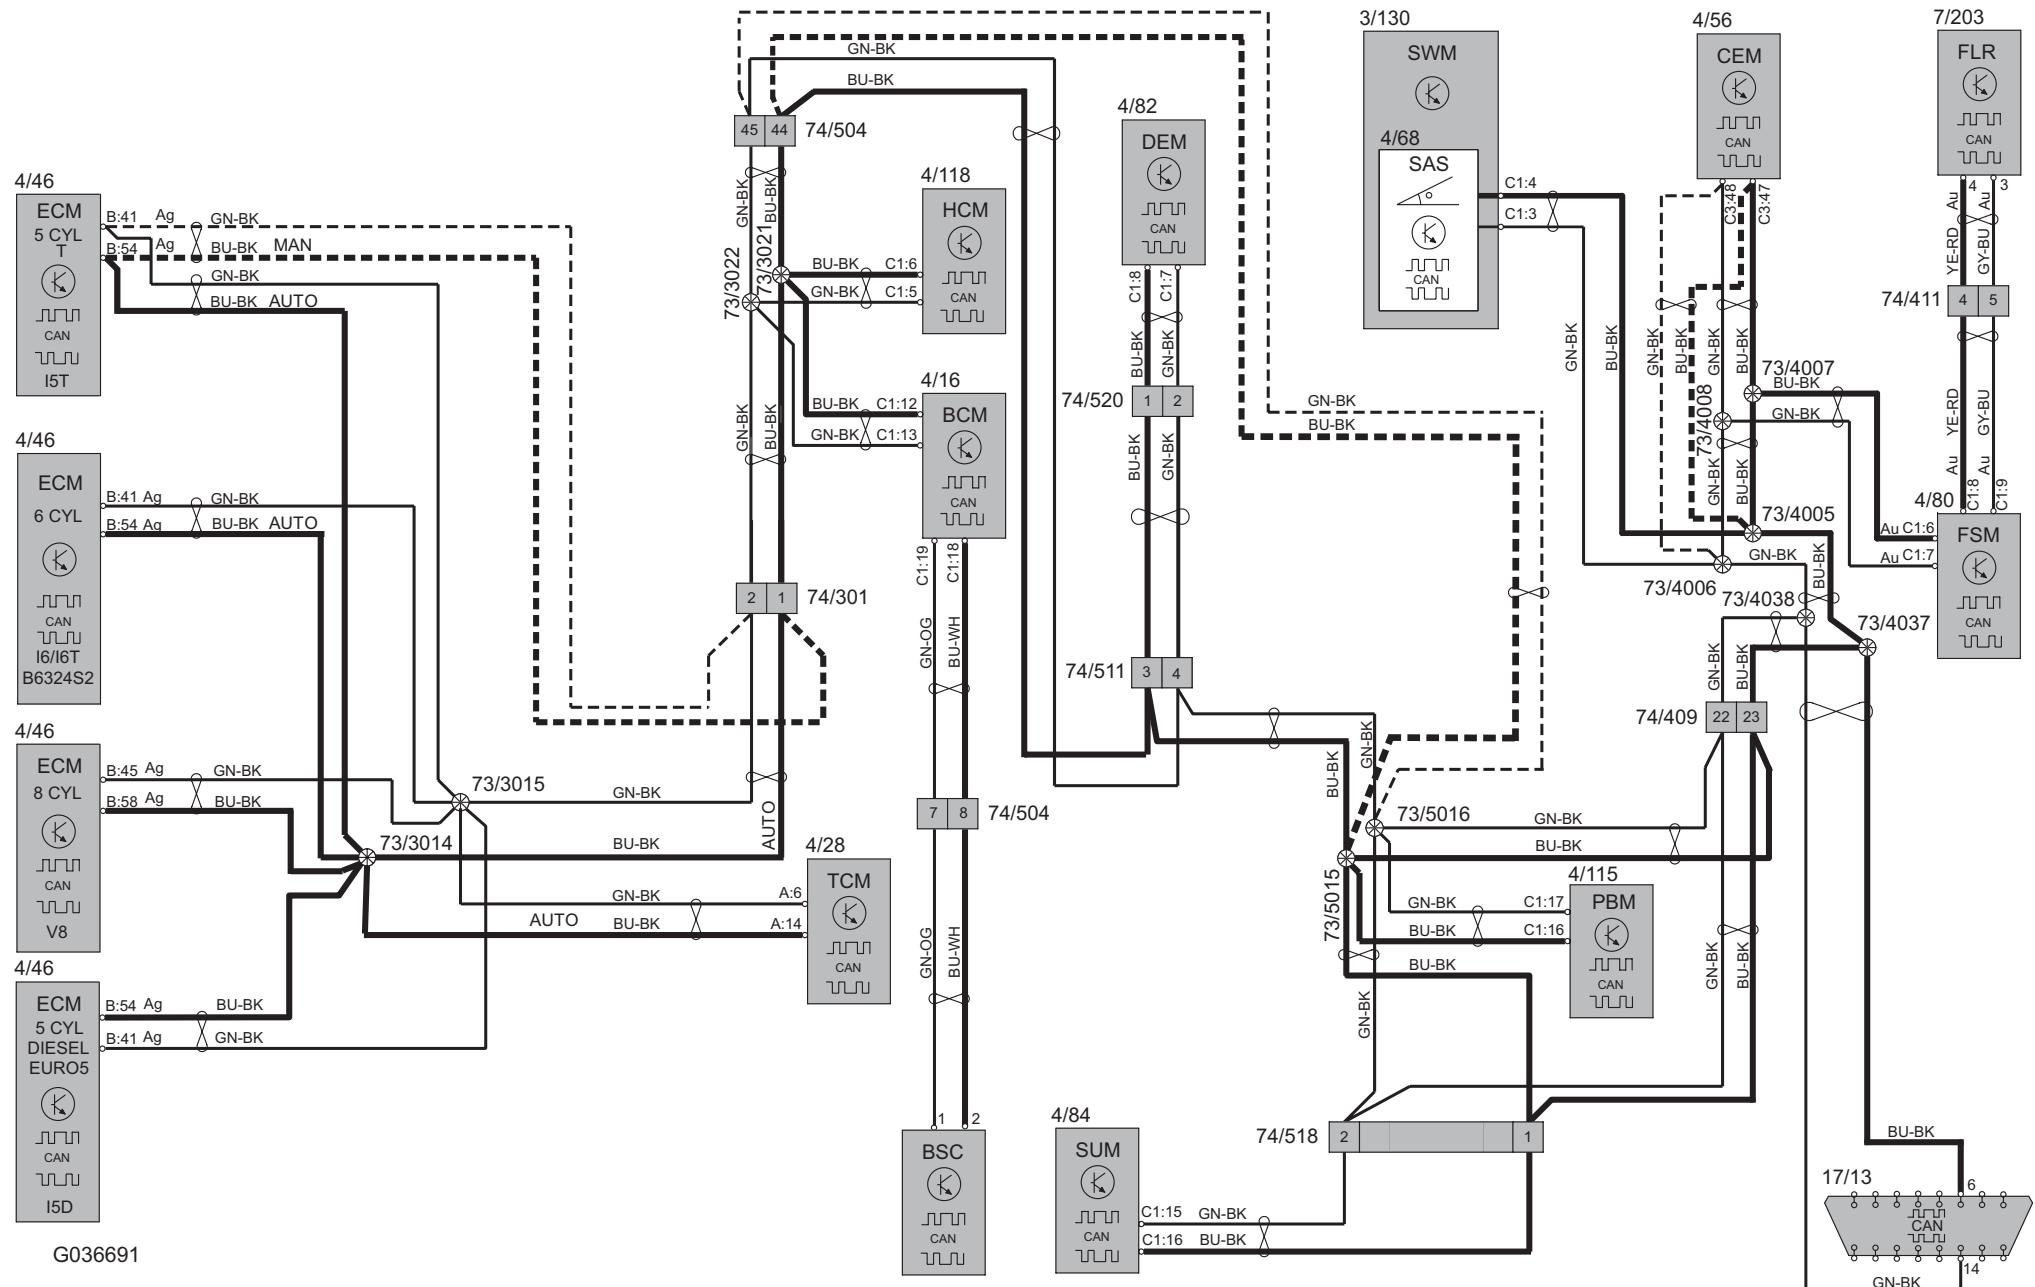


Control modules

Data communication high speed CAN, 4-Cyl.

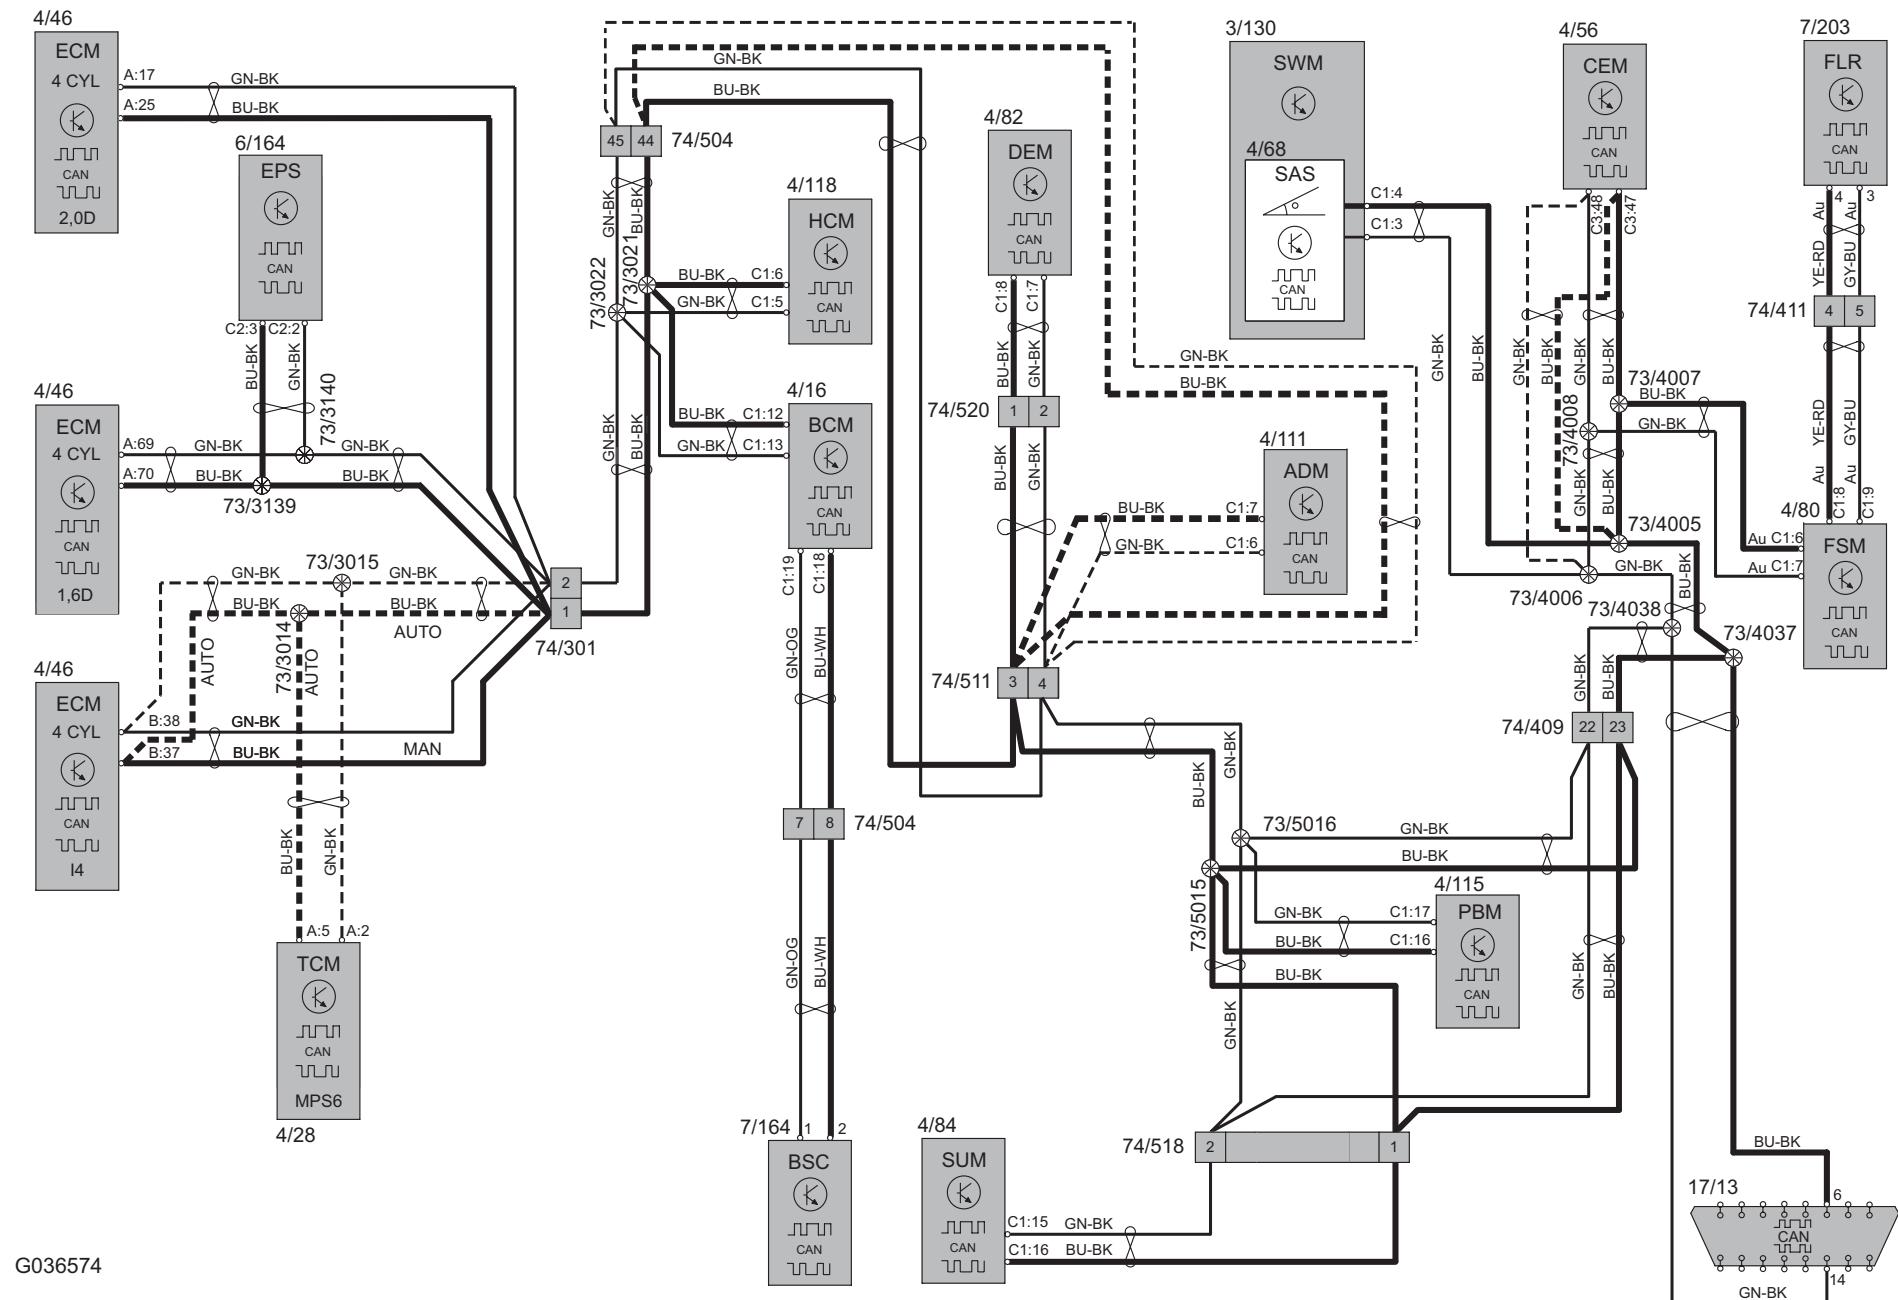


Control modules

Data communication intermediate speed CAN, LHD

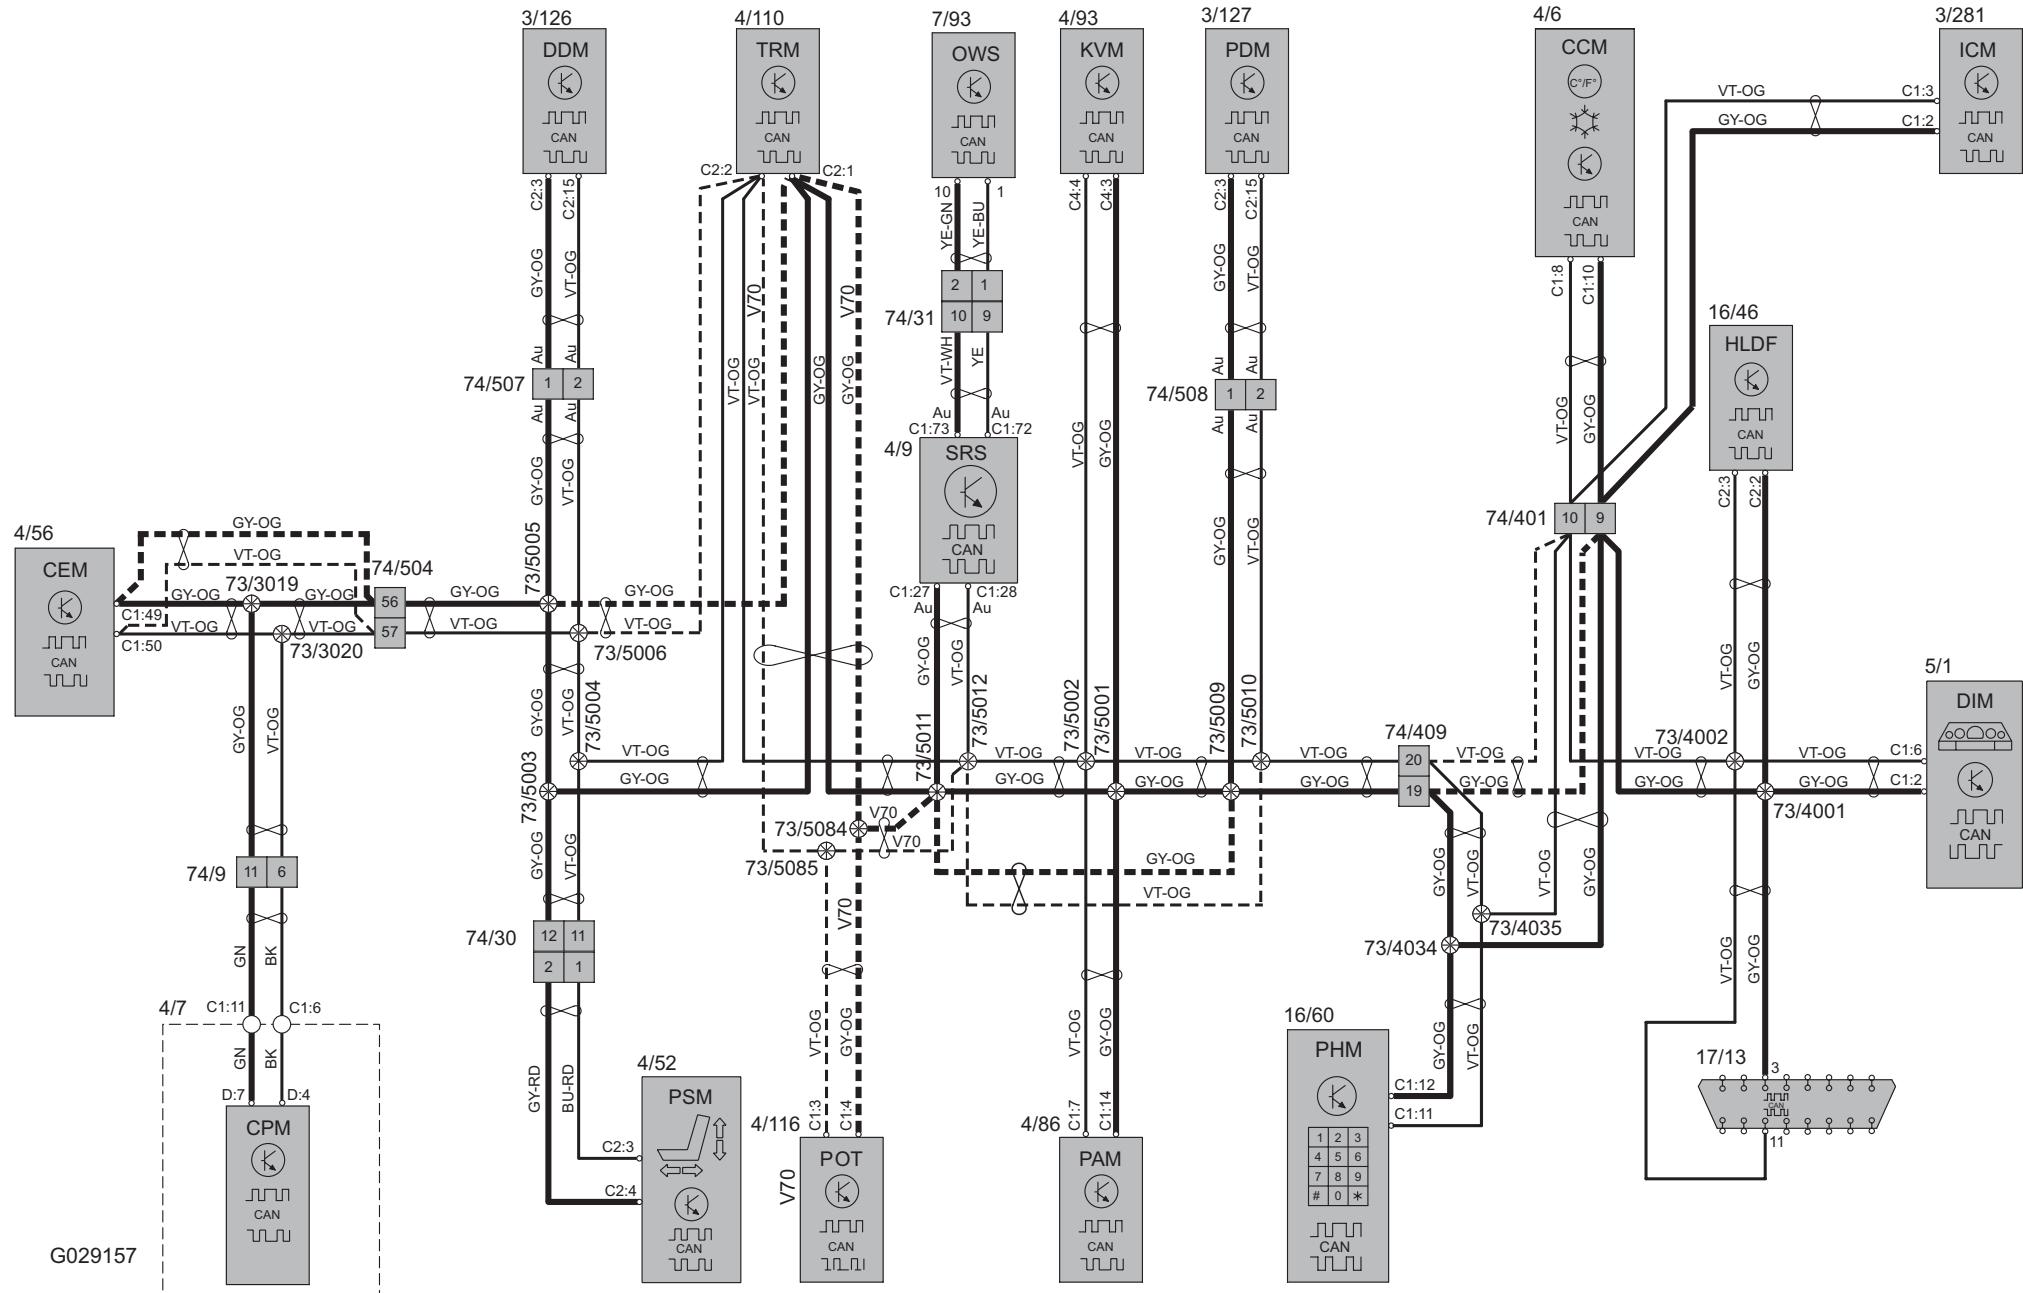

Control modules


Data communication intermediate speed CAN, RHD

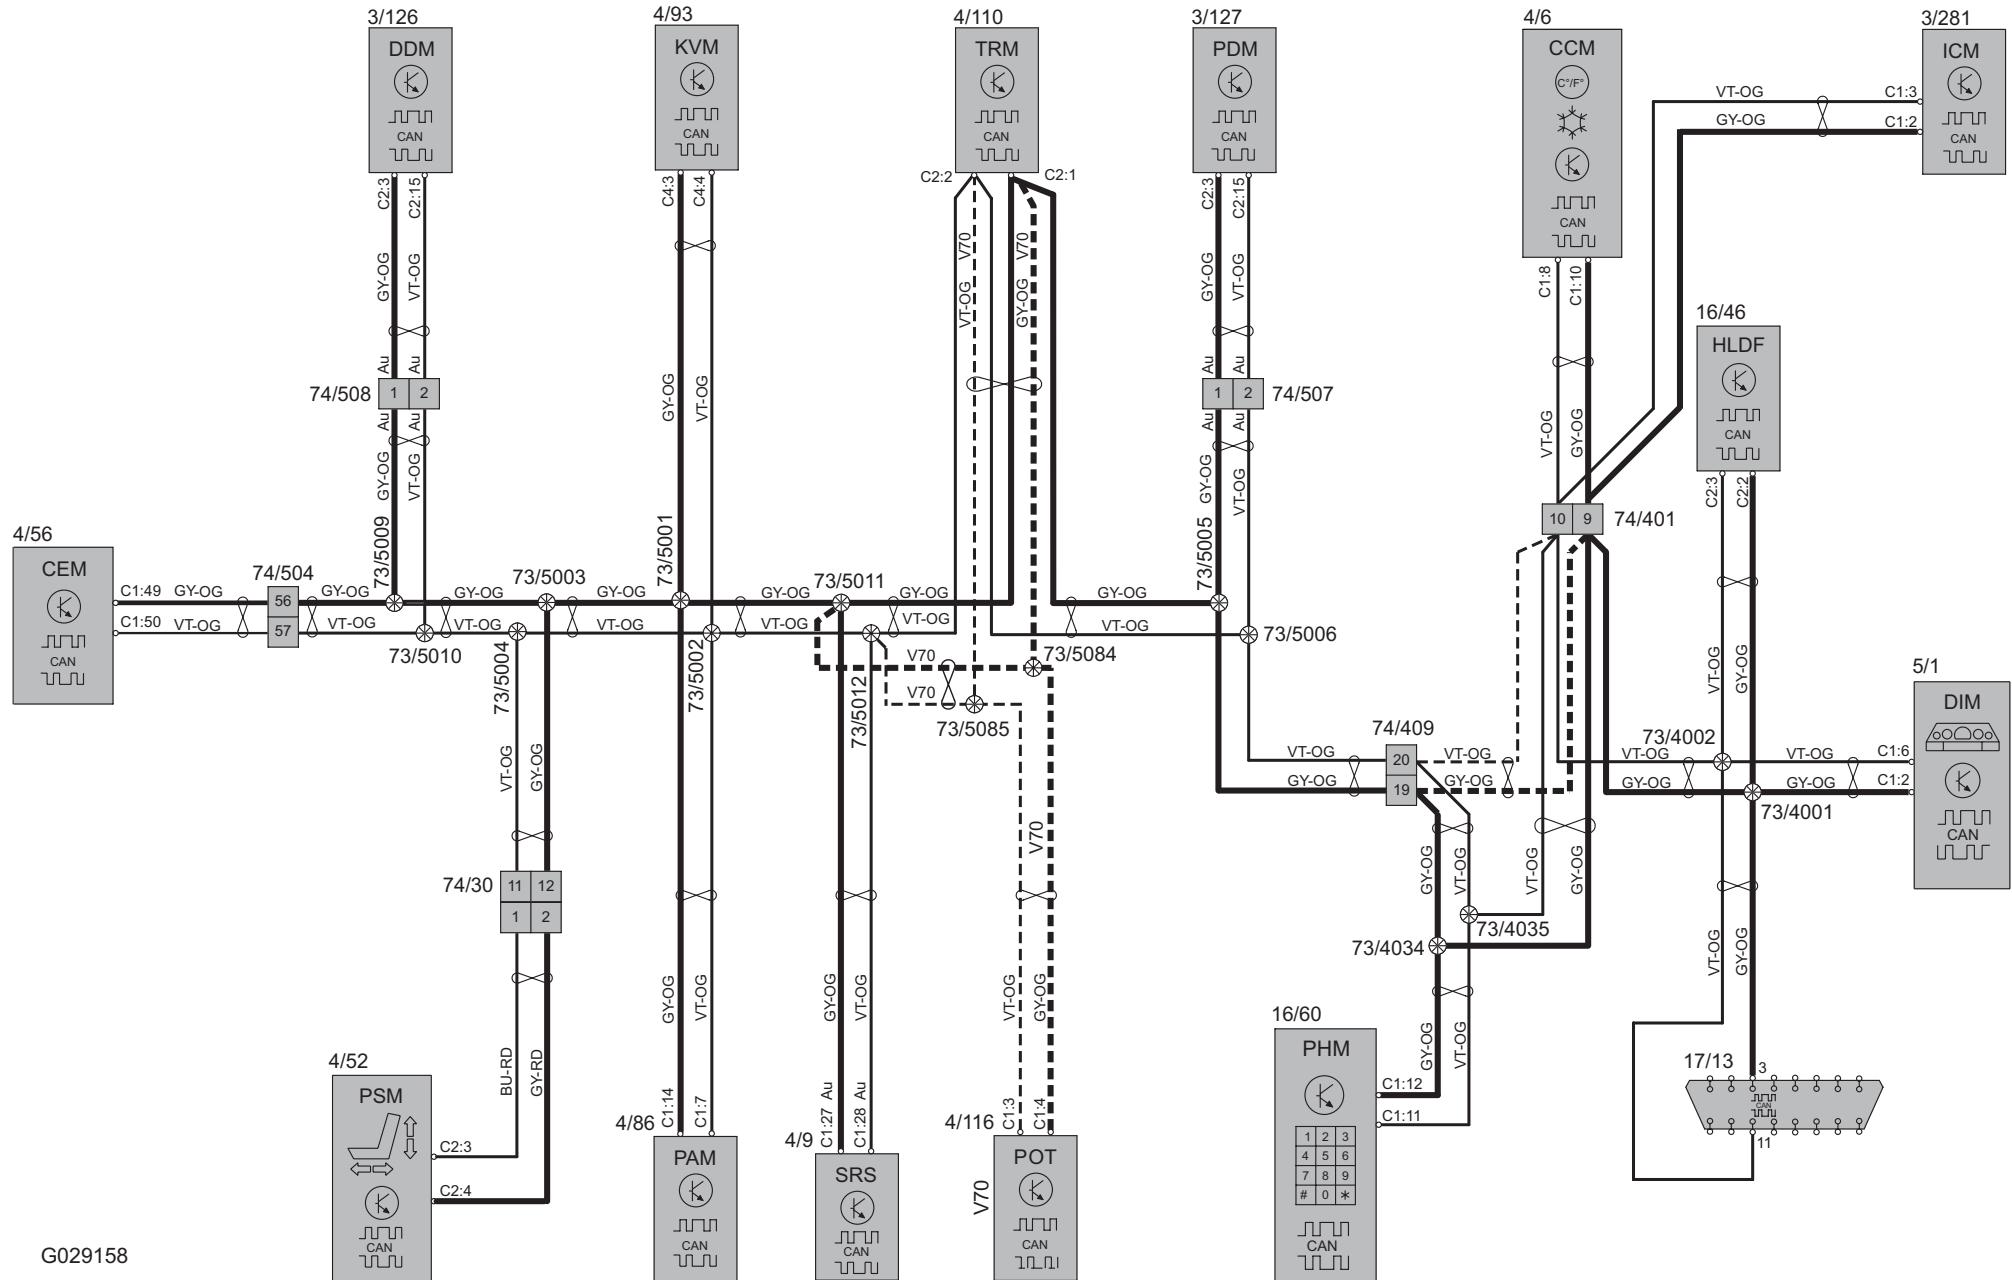

G029158


Control modules

Data communication, LIN 1:2

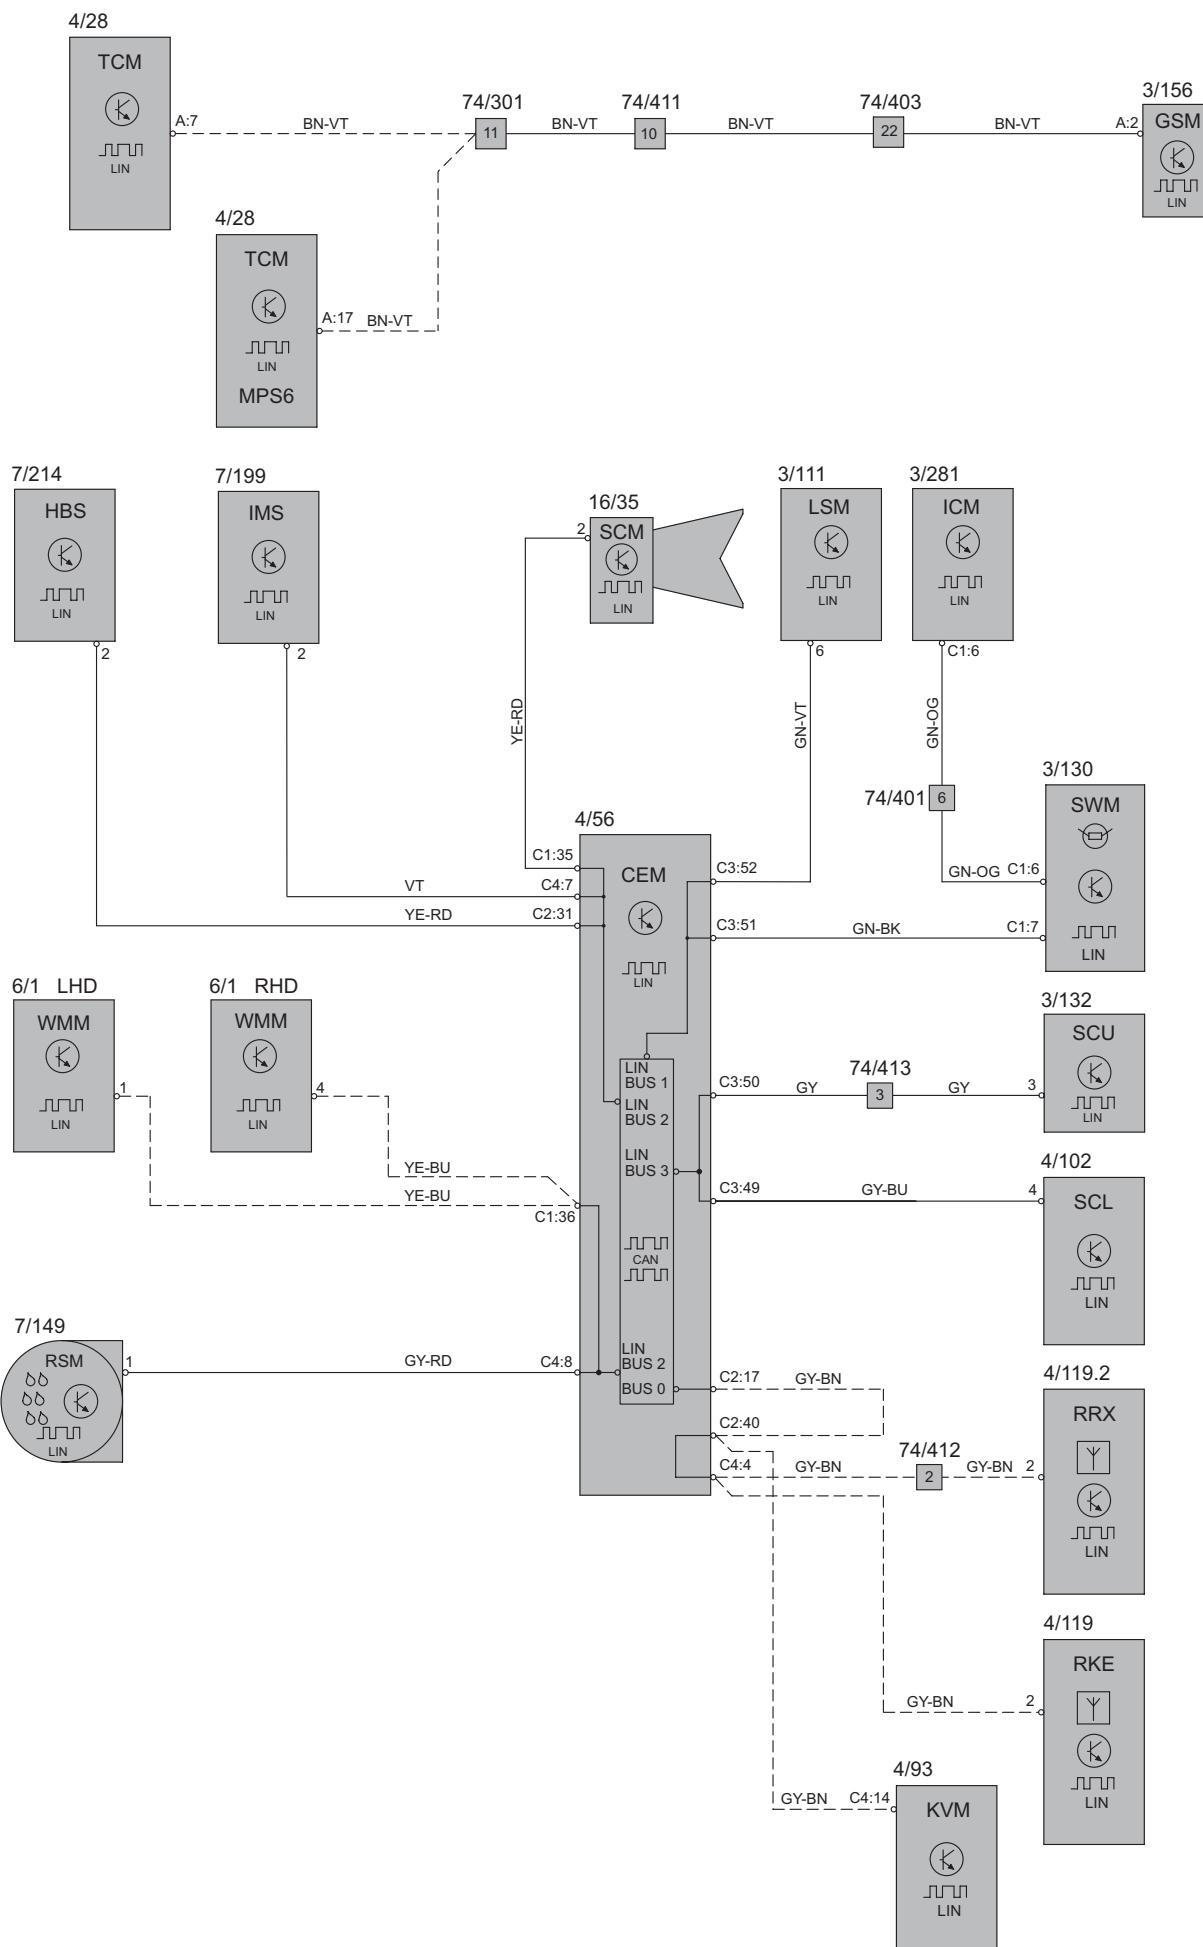

Control modules


Data communication, LIN 2:2

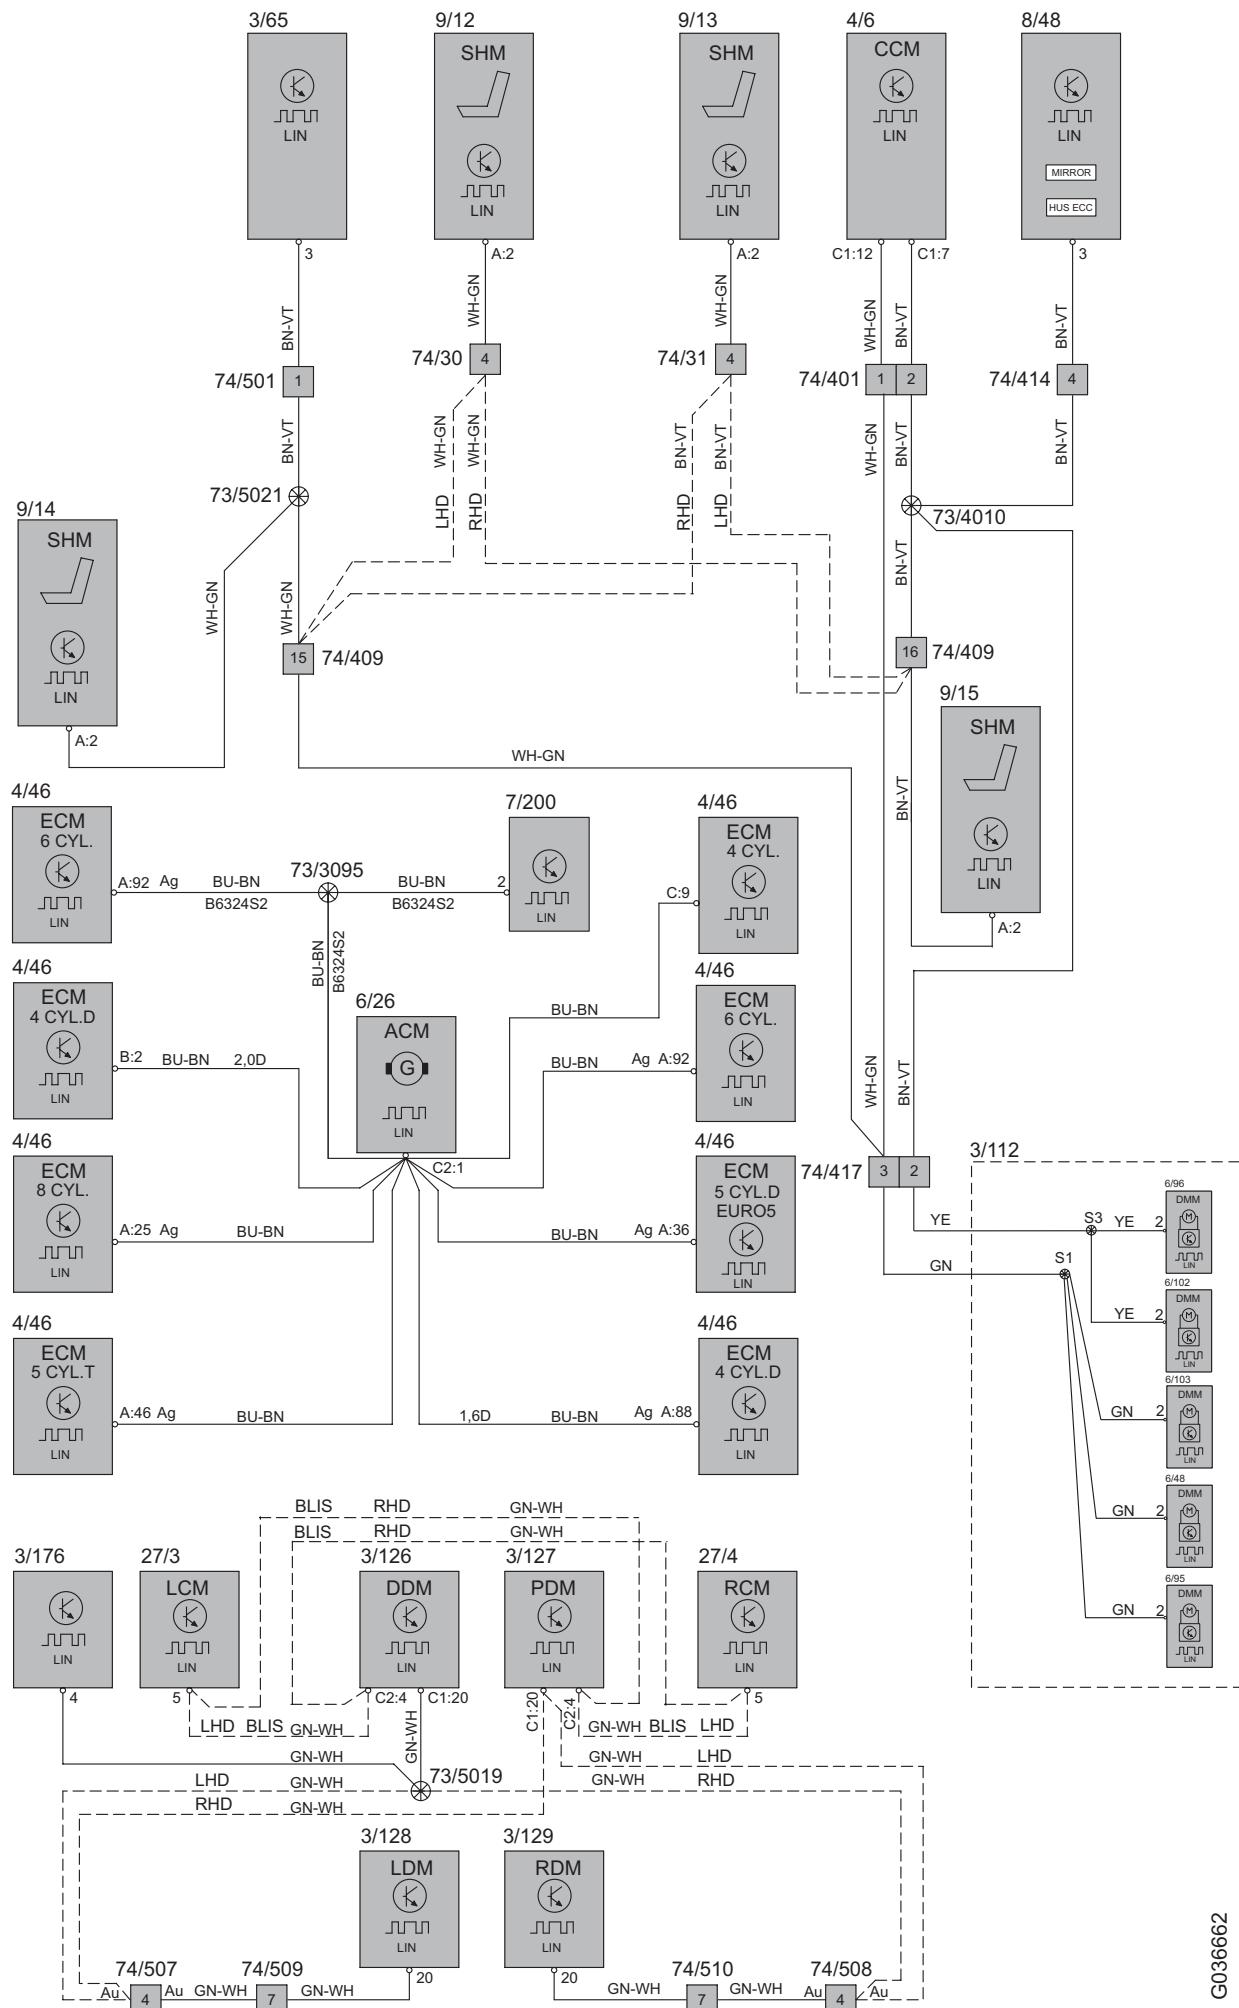

G036662

Control modules


Data communication MOST

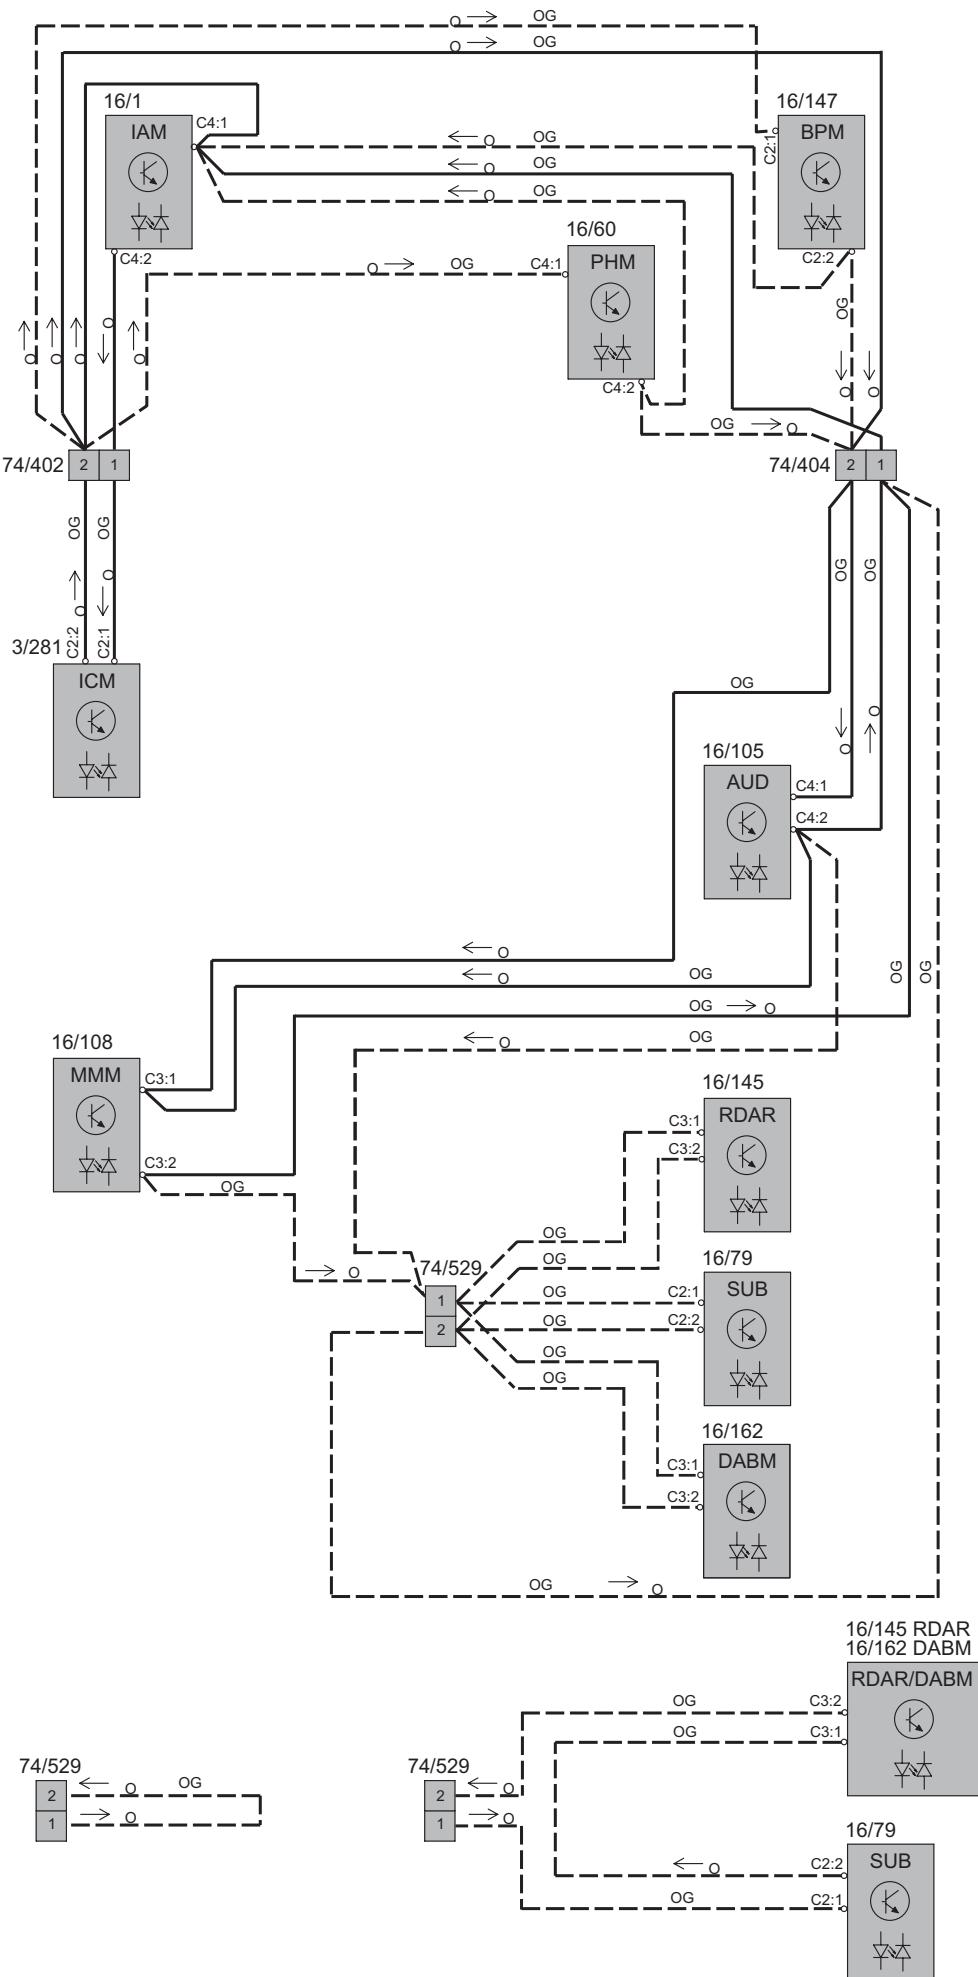

G029162

Control modules


Steering Wheel Module (SWM)

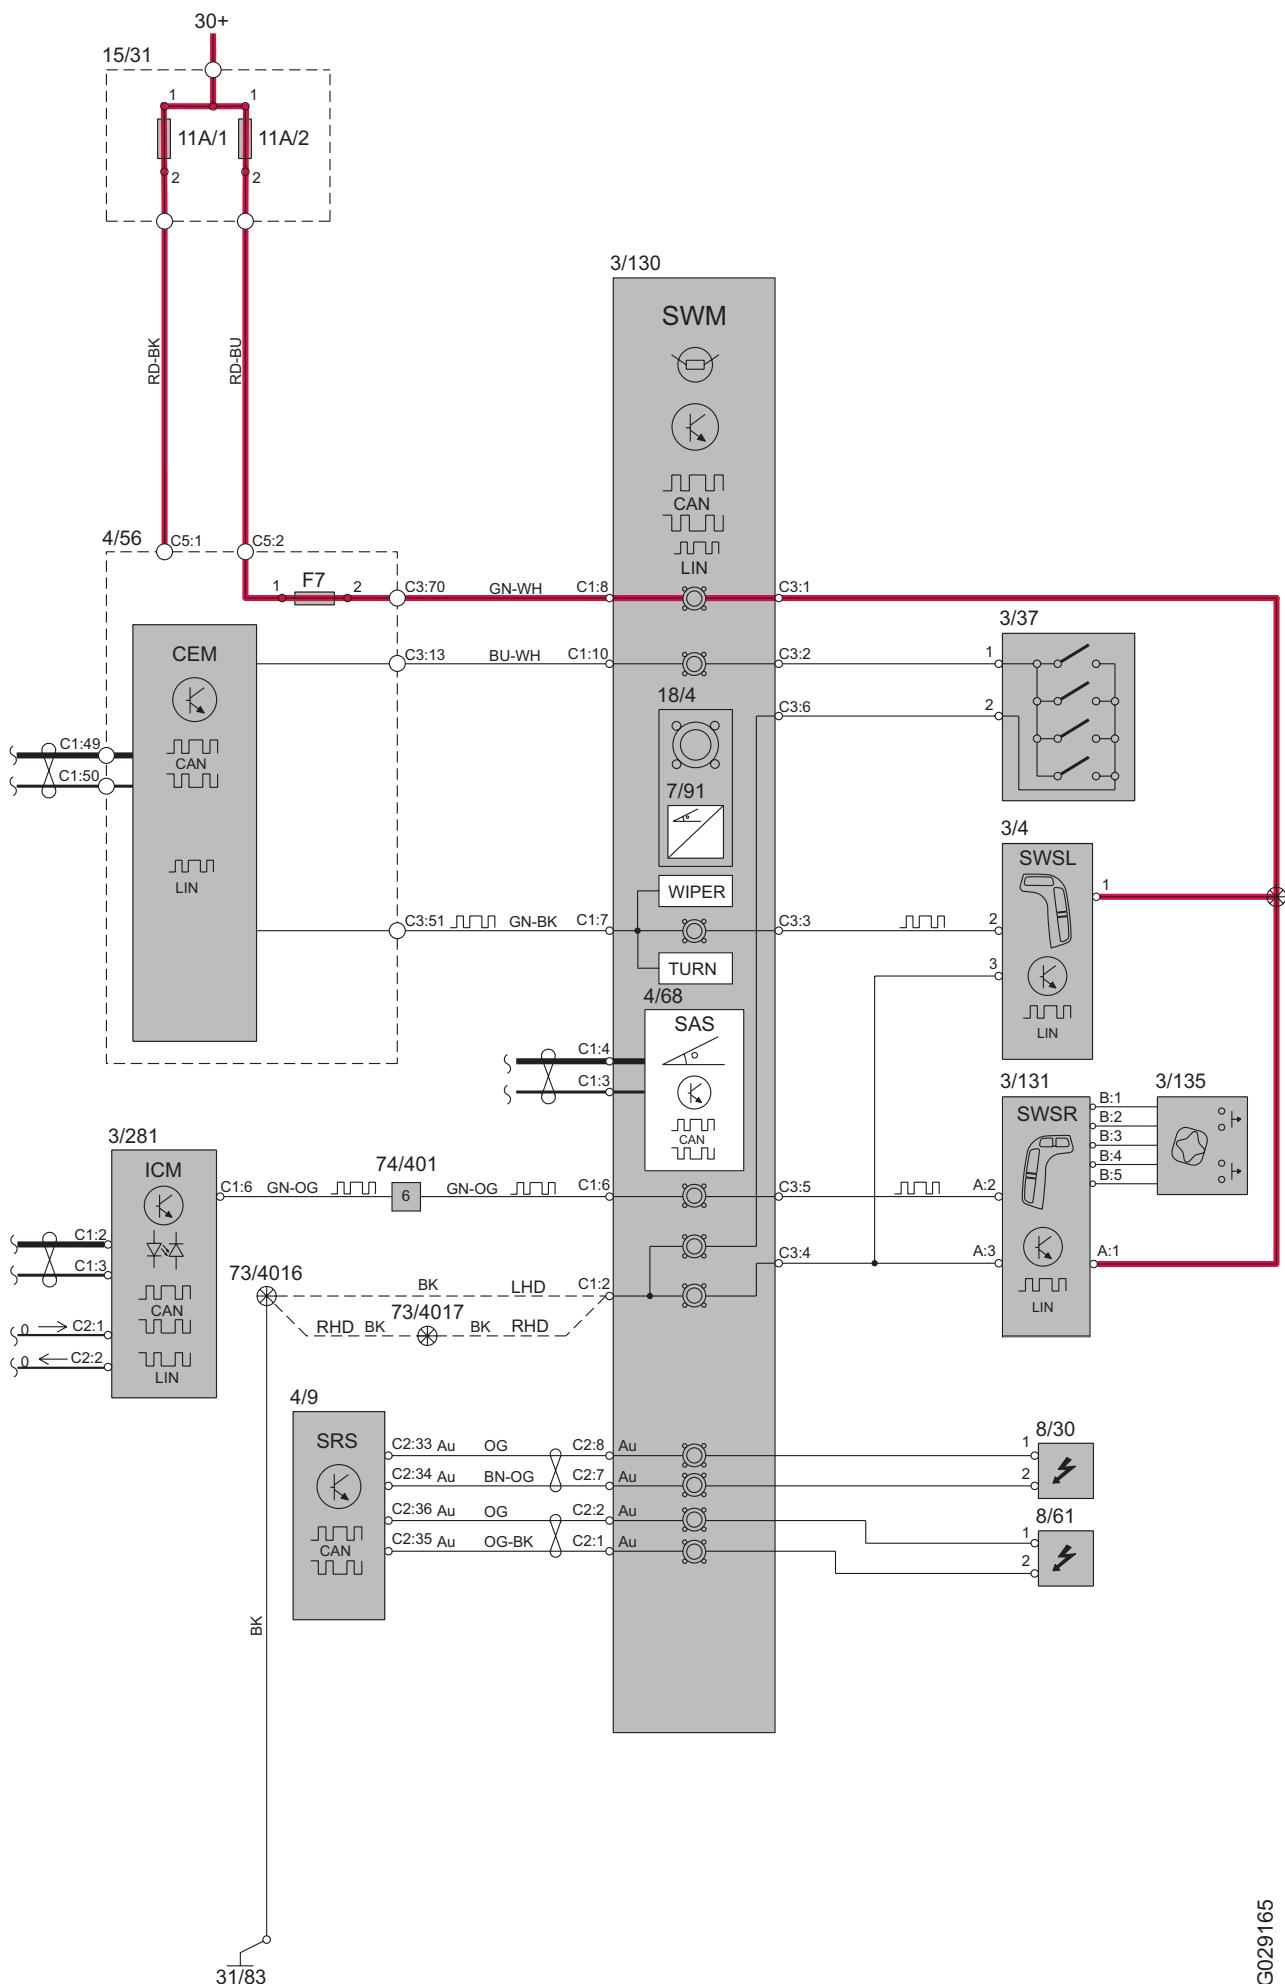

G029165


Group 23 Fuel system

Engine management system, 4-Cyl. 1:2

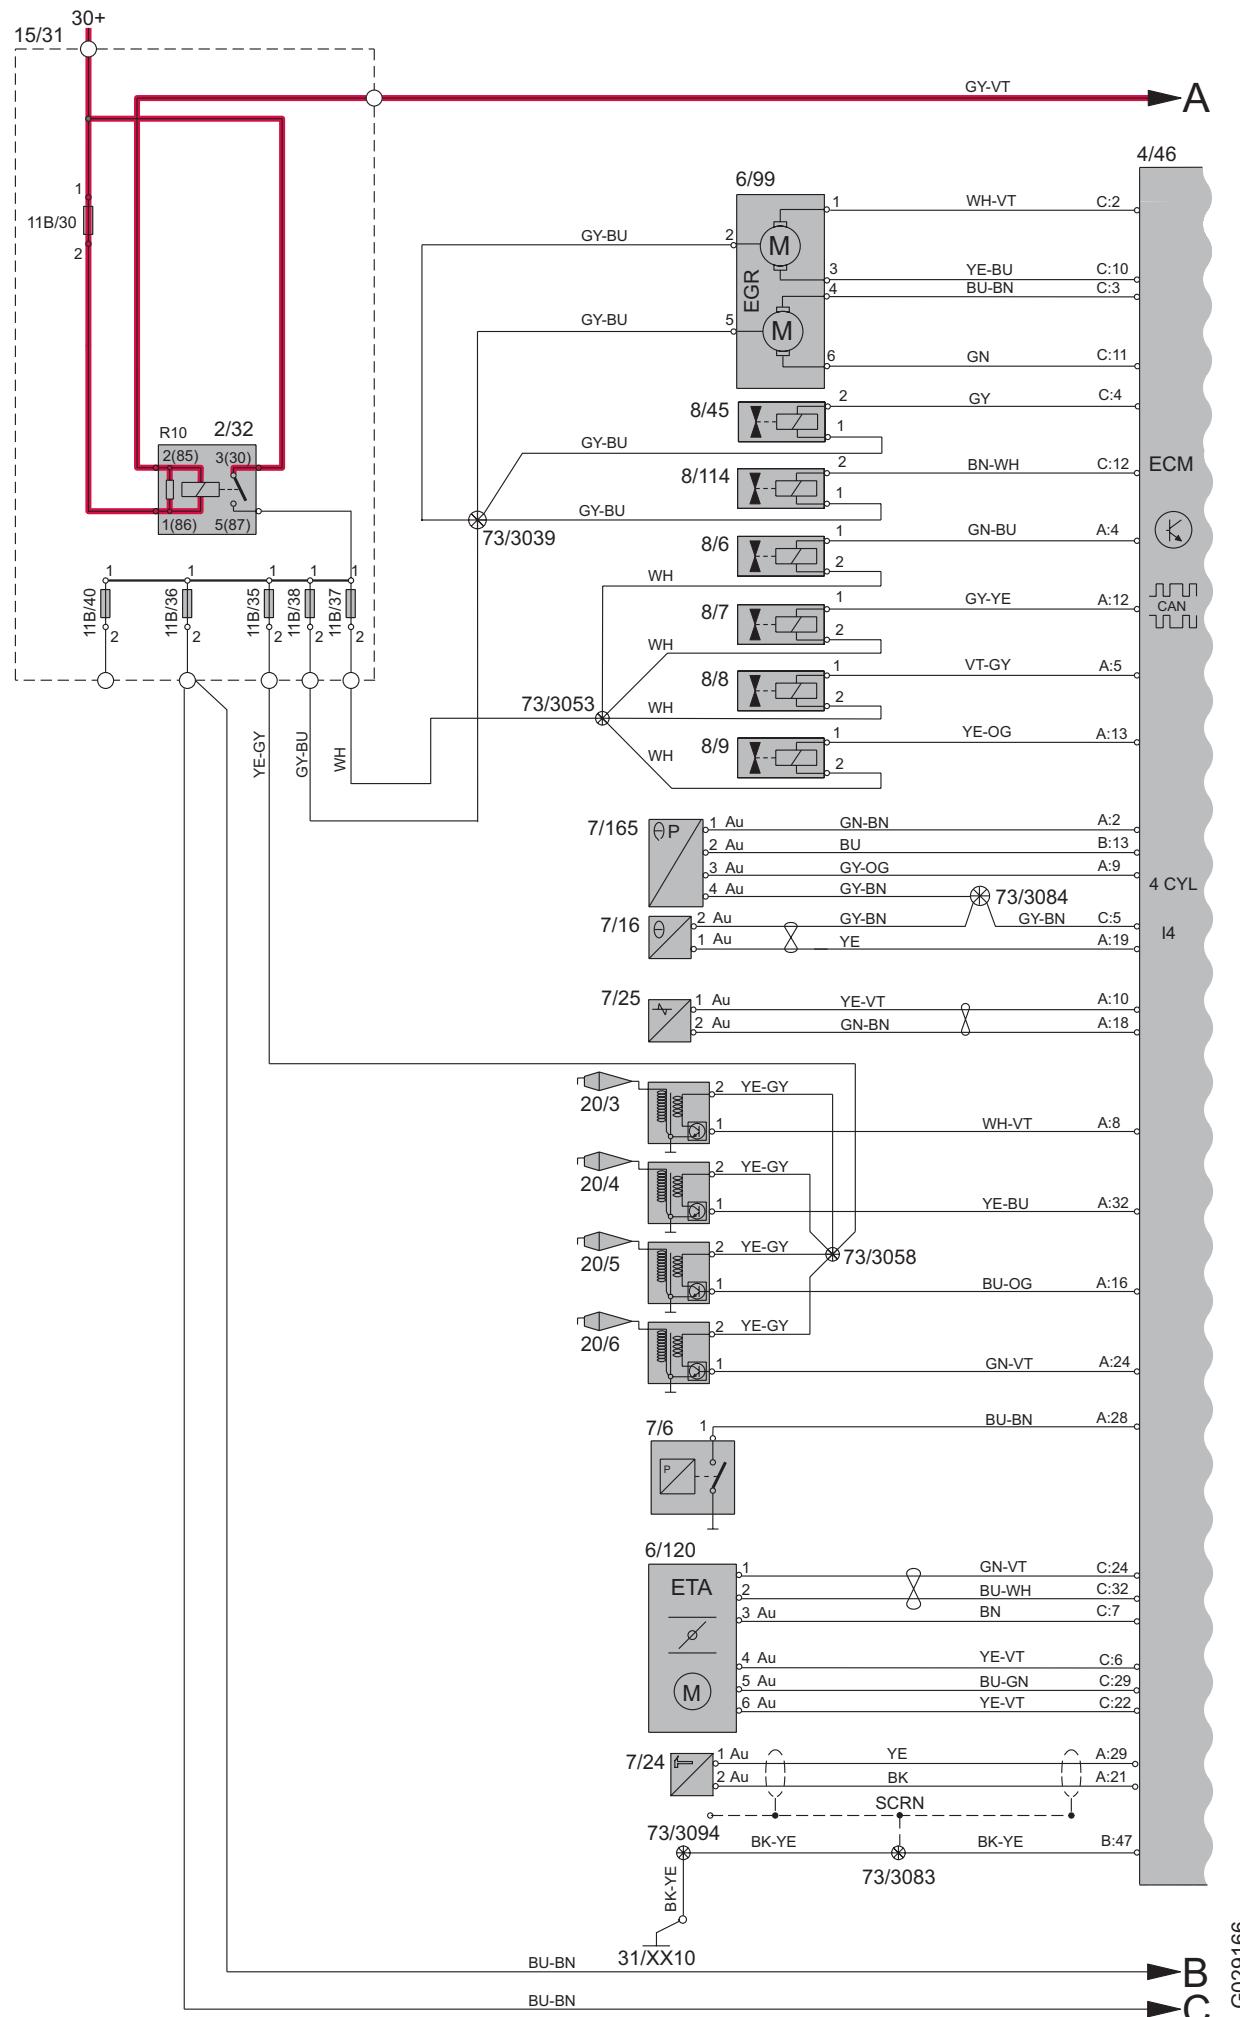


Group 23 Fuel system

Engine management system, 4-Cyl. 2:2

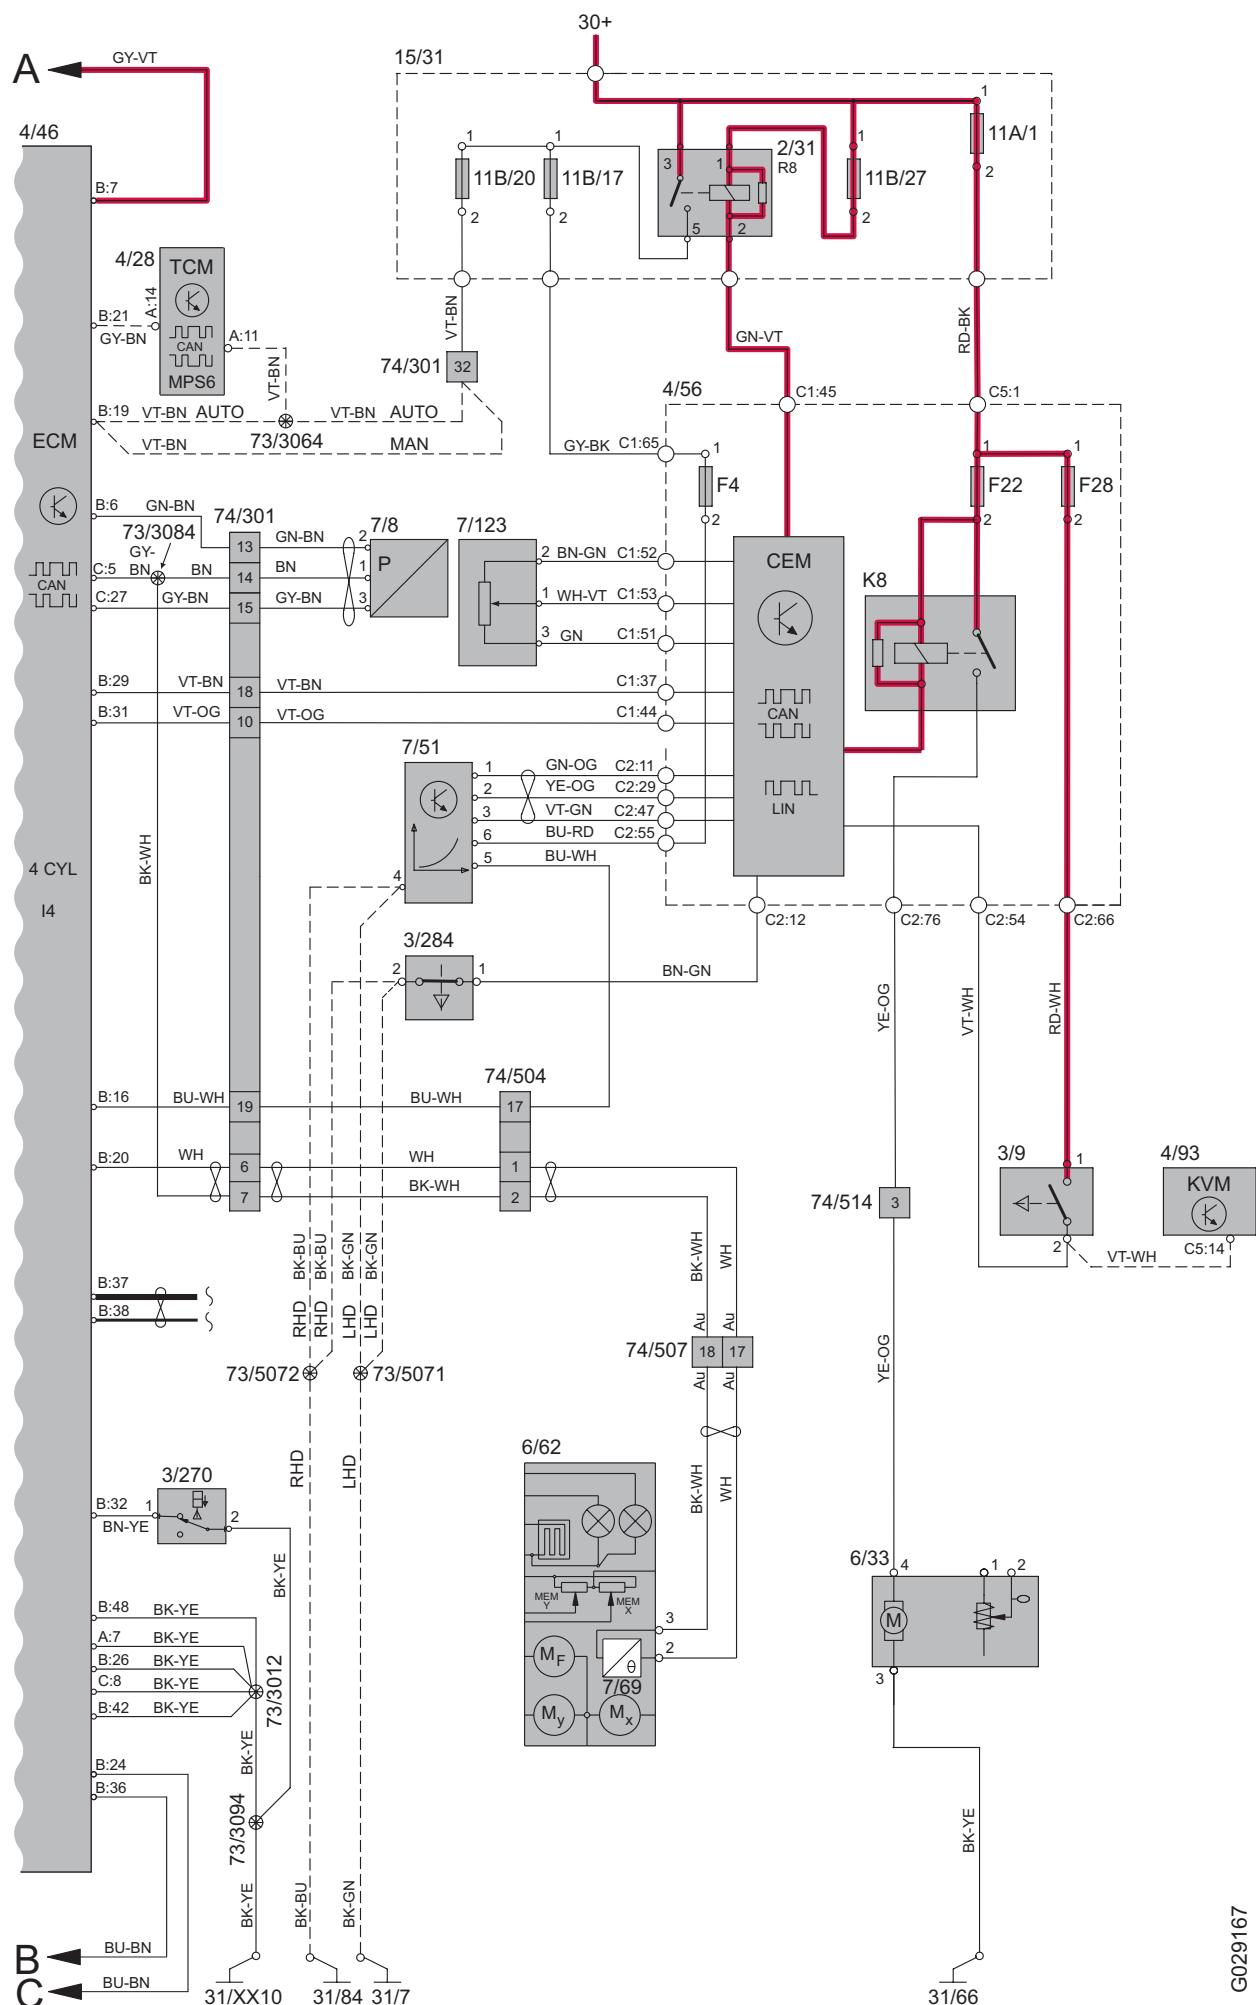


Group 23 Fuel system

Engine management system, 5-Cyl. Turbo 1:2

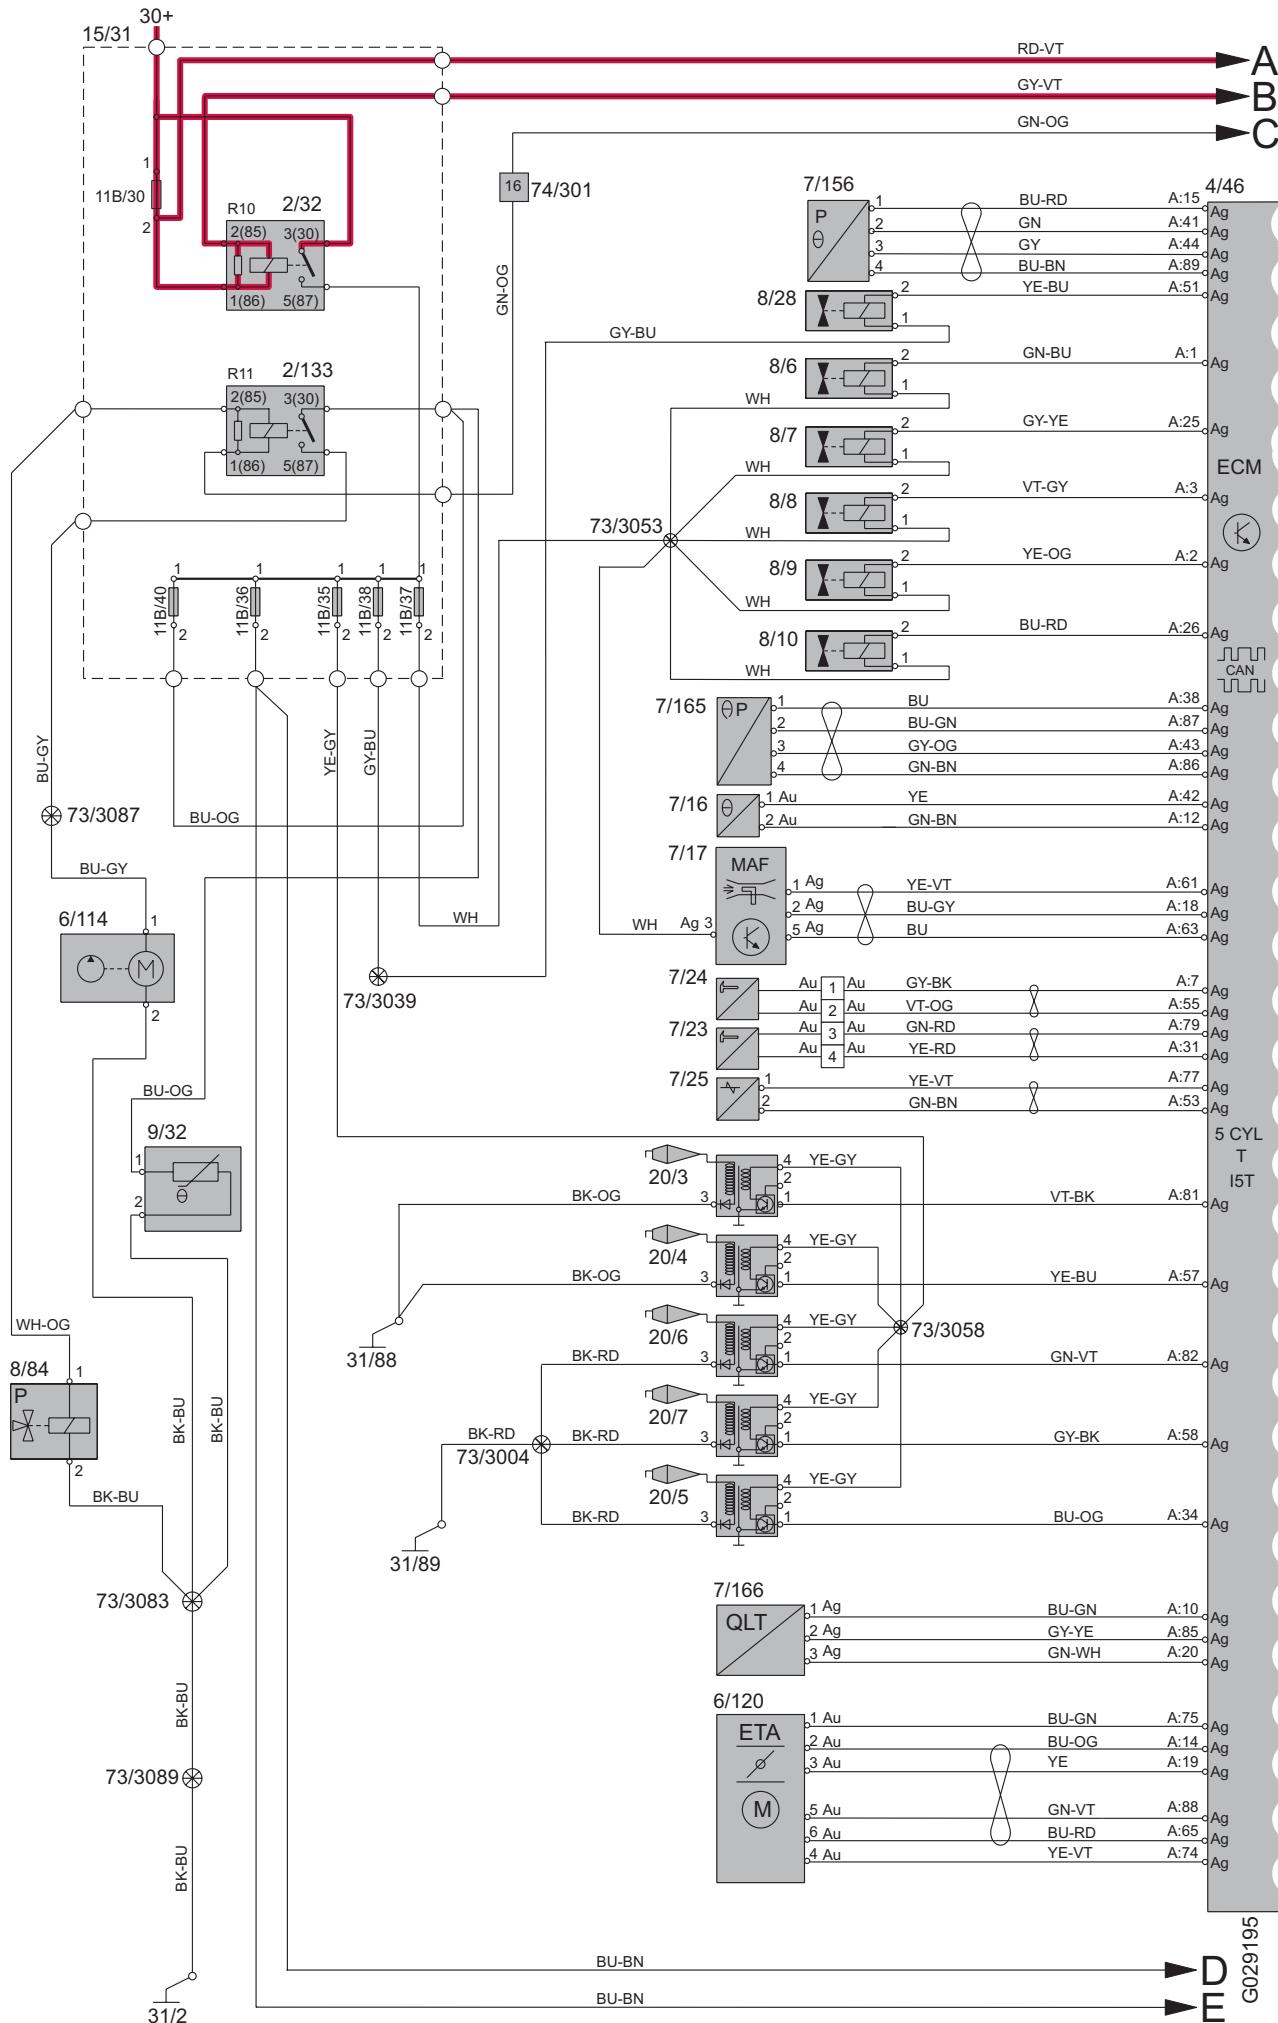


Group 23 Fuel system

Engine management system, 5-Cyl. Turbo 2:2

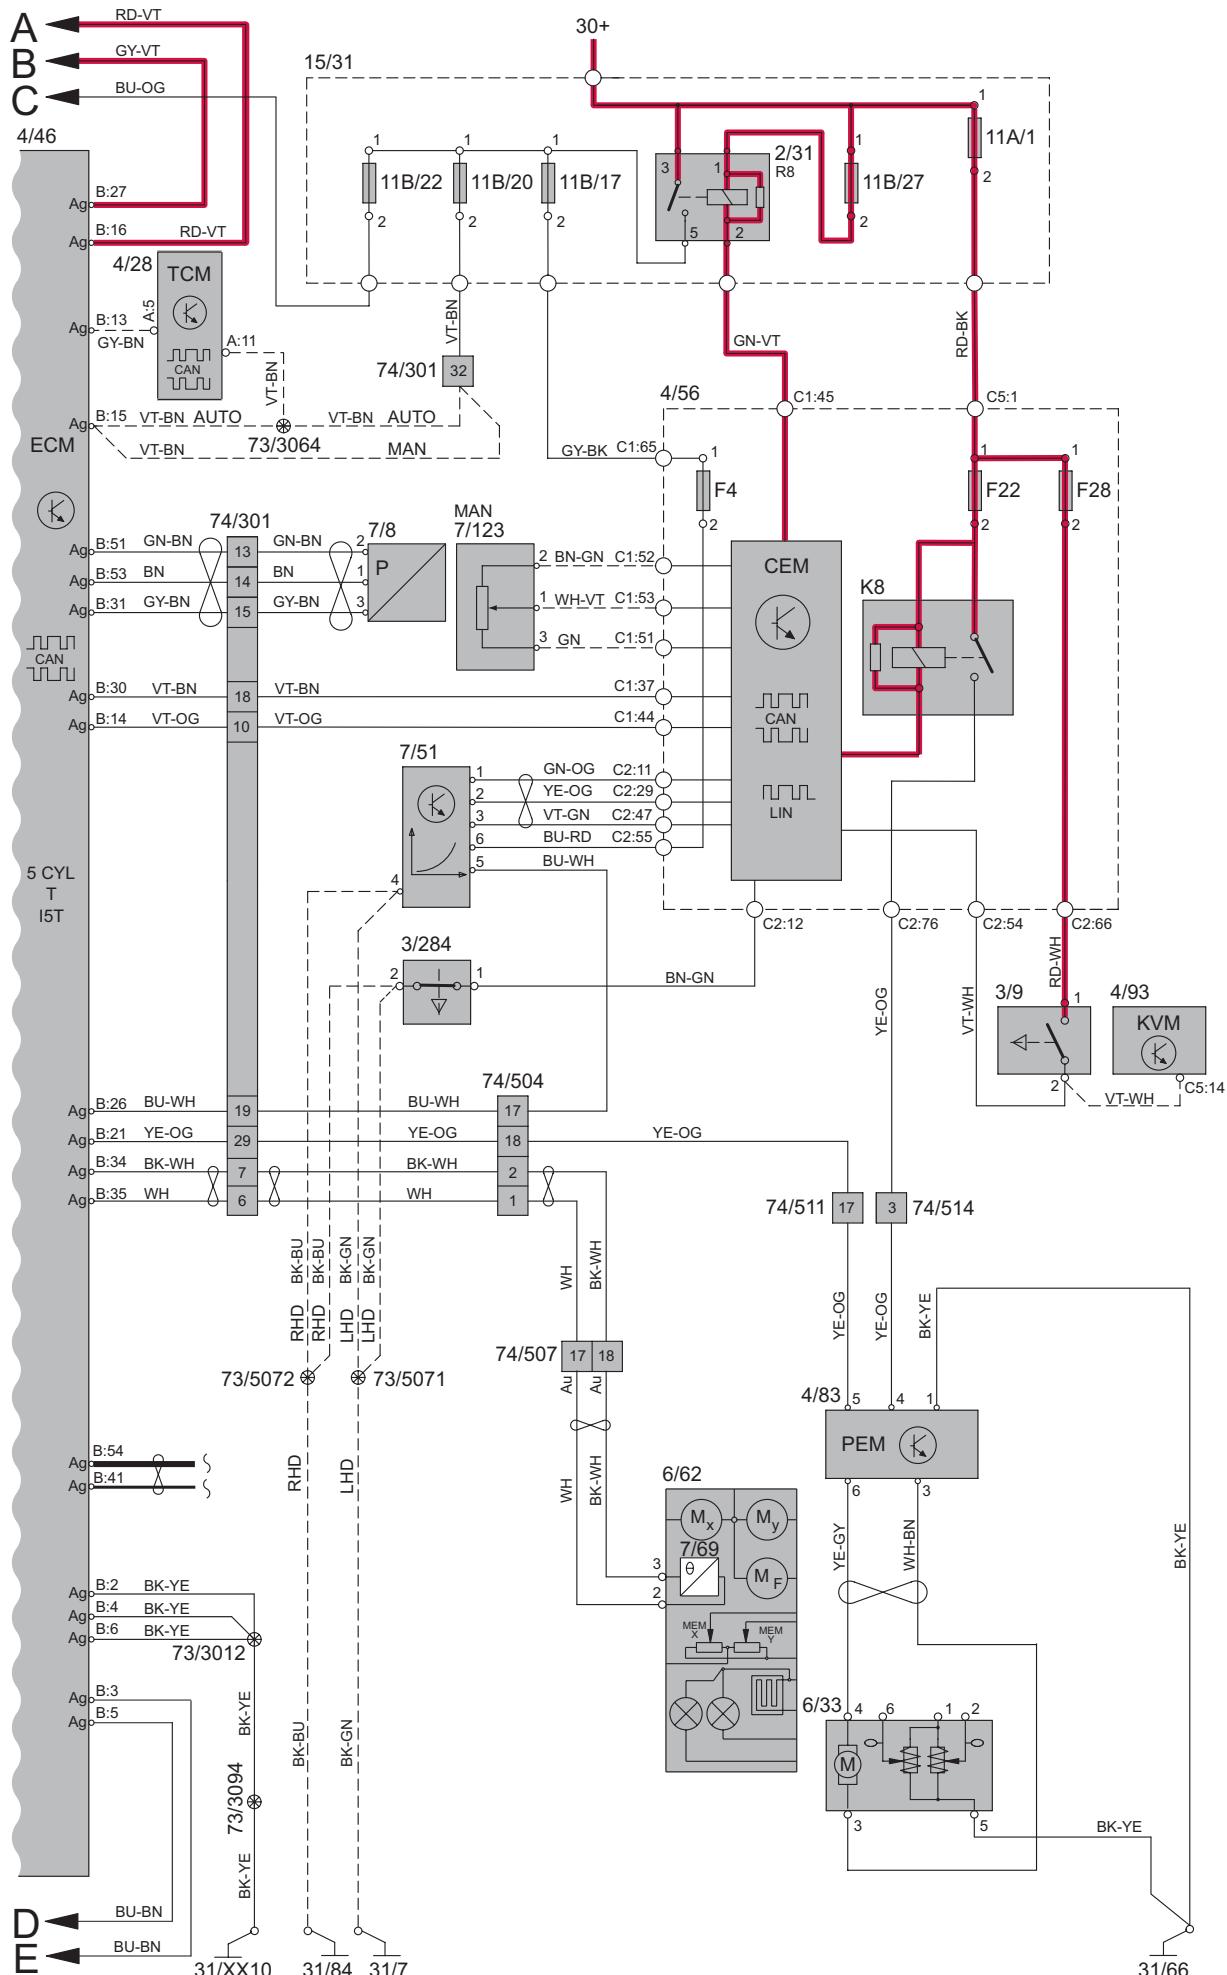


Group 23 Fuel system

Engine management system, 6-Cyl. 1:2

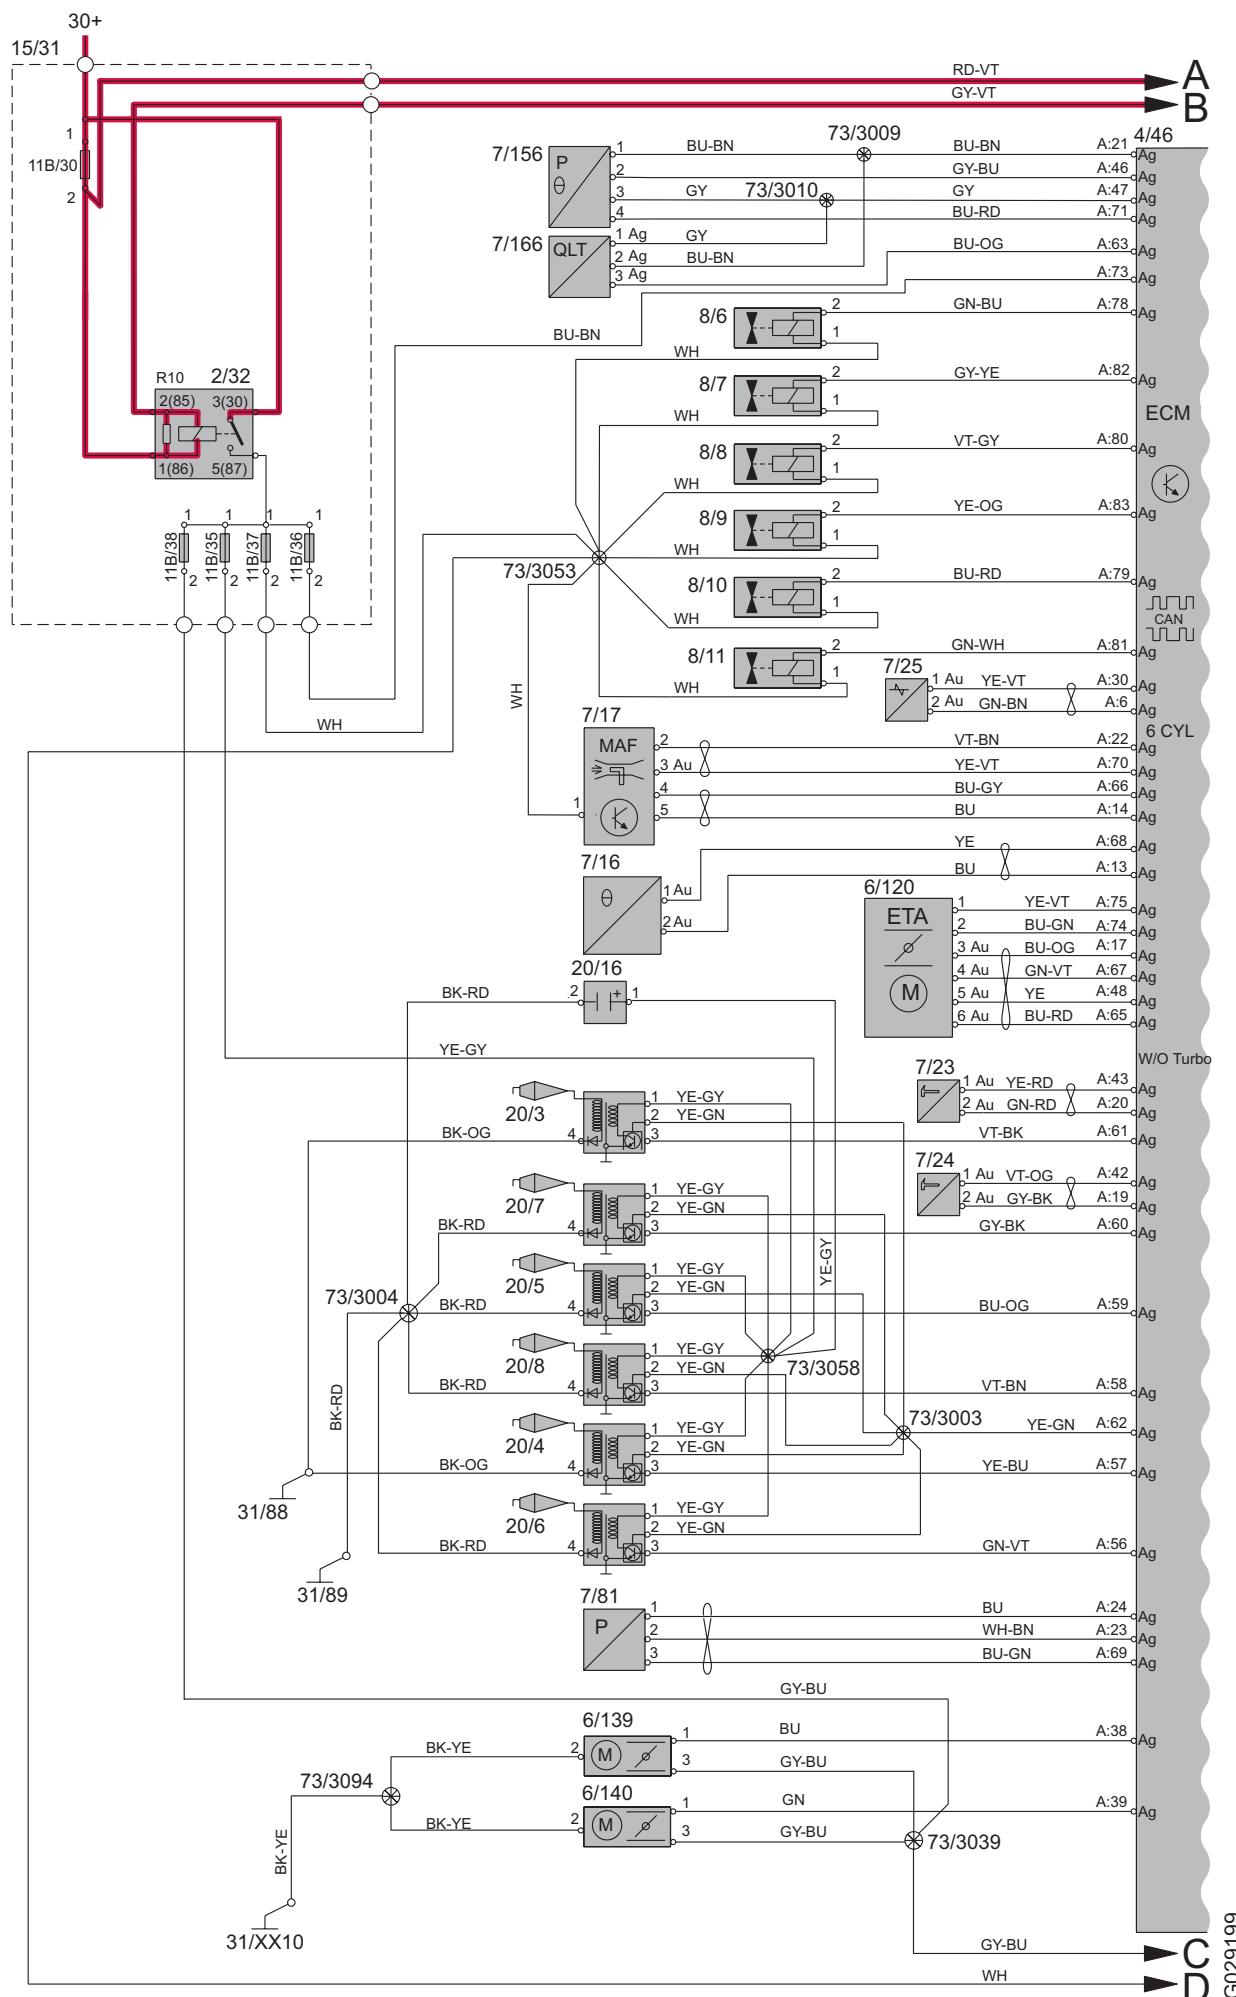


Group 23 Fuel system Engine management system, 6-Cyl. 2:2

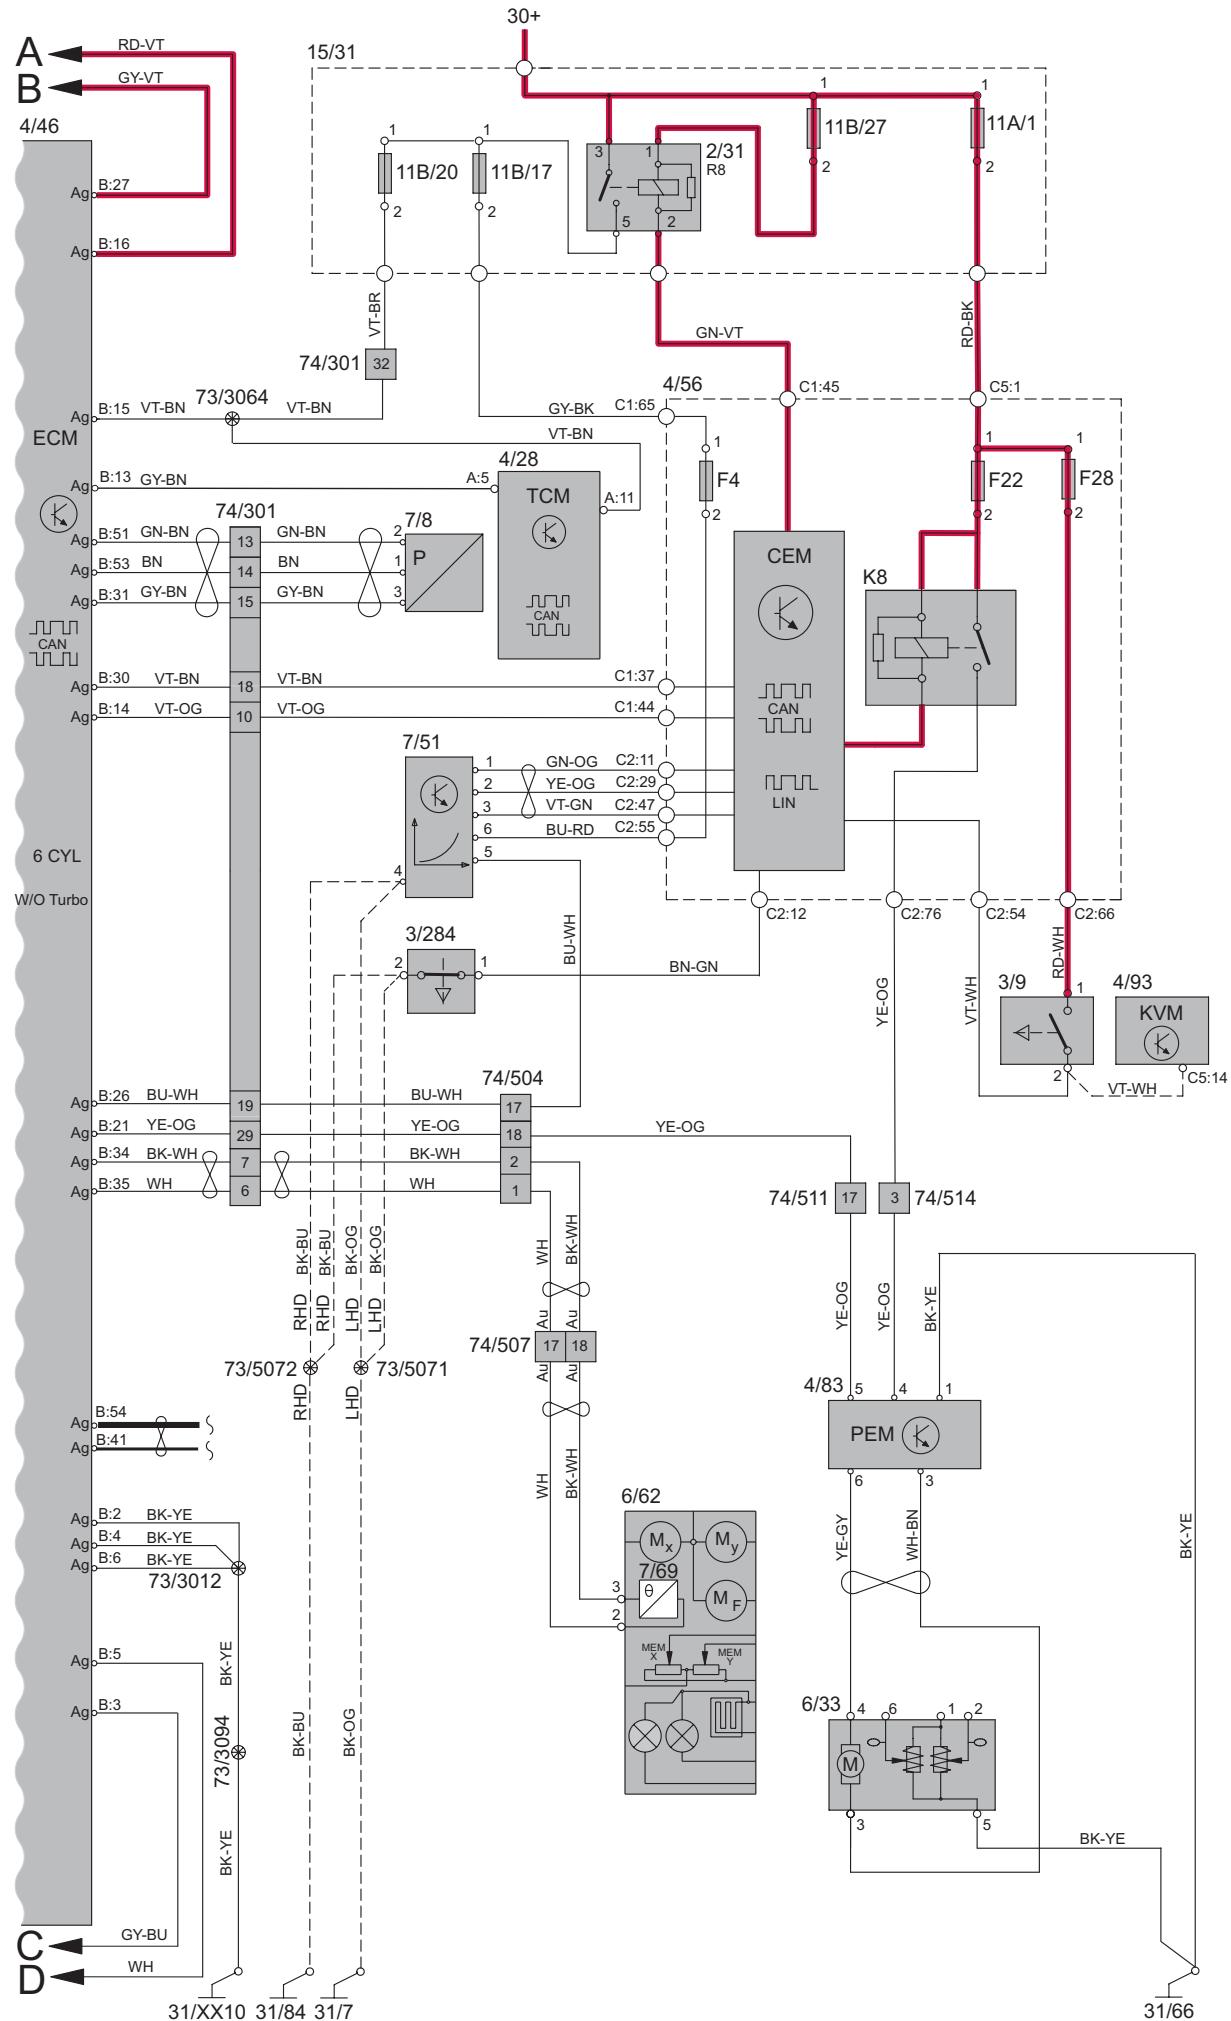


Group 23 Fuel system

Engine management system, 6-Cyl. B6324S2 1:2

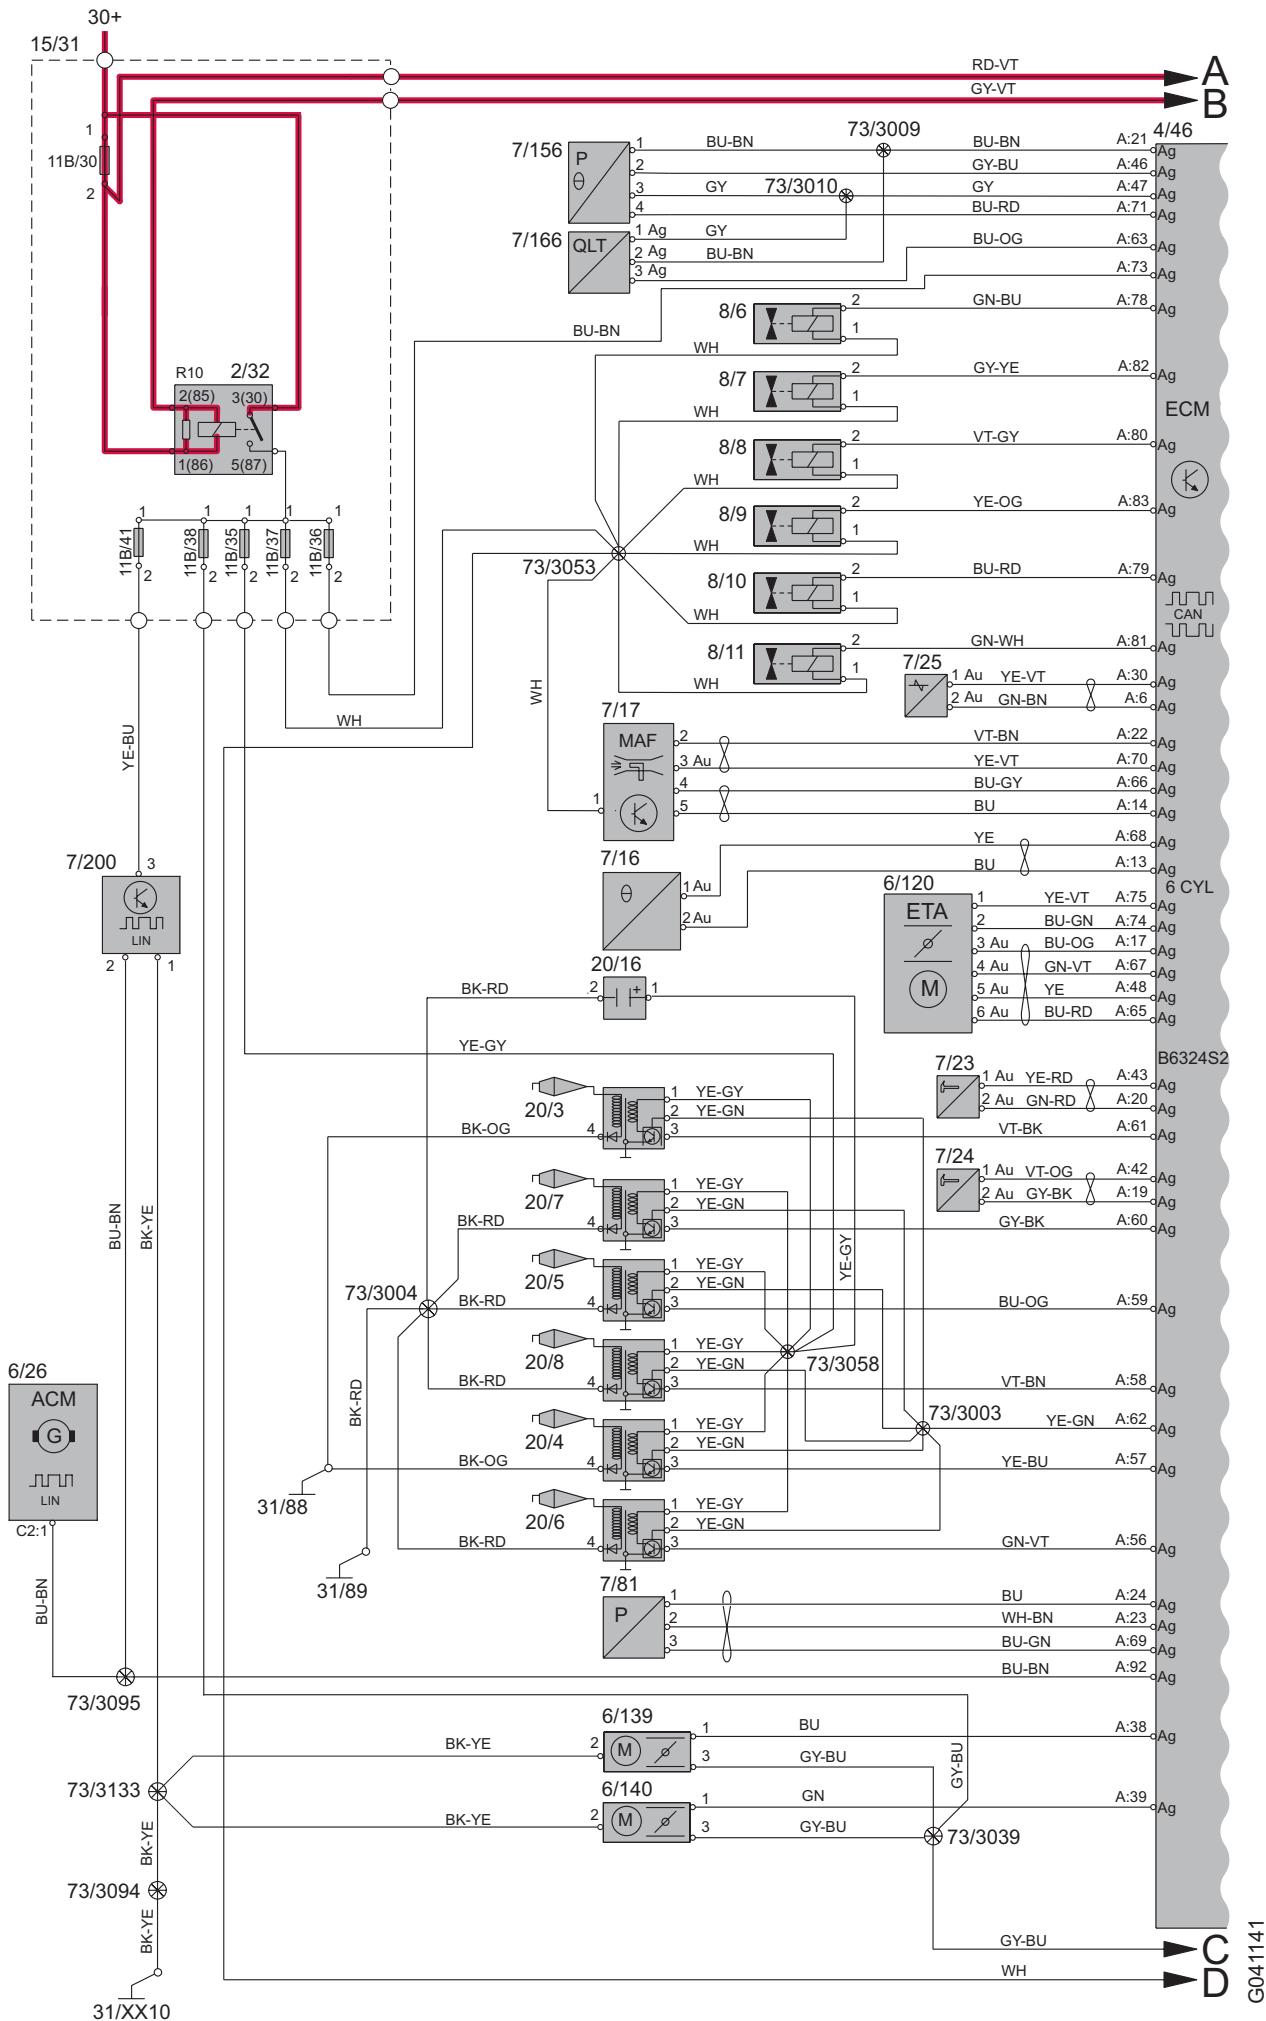


Group 23 Fuel system

Engine management system, 6-Cyl. B6324S2 2:2

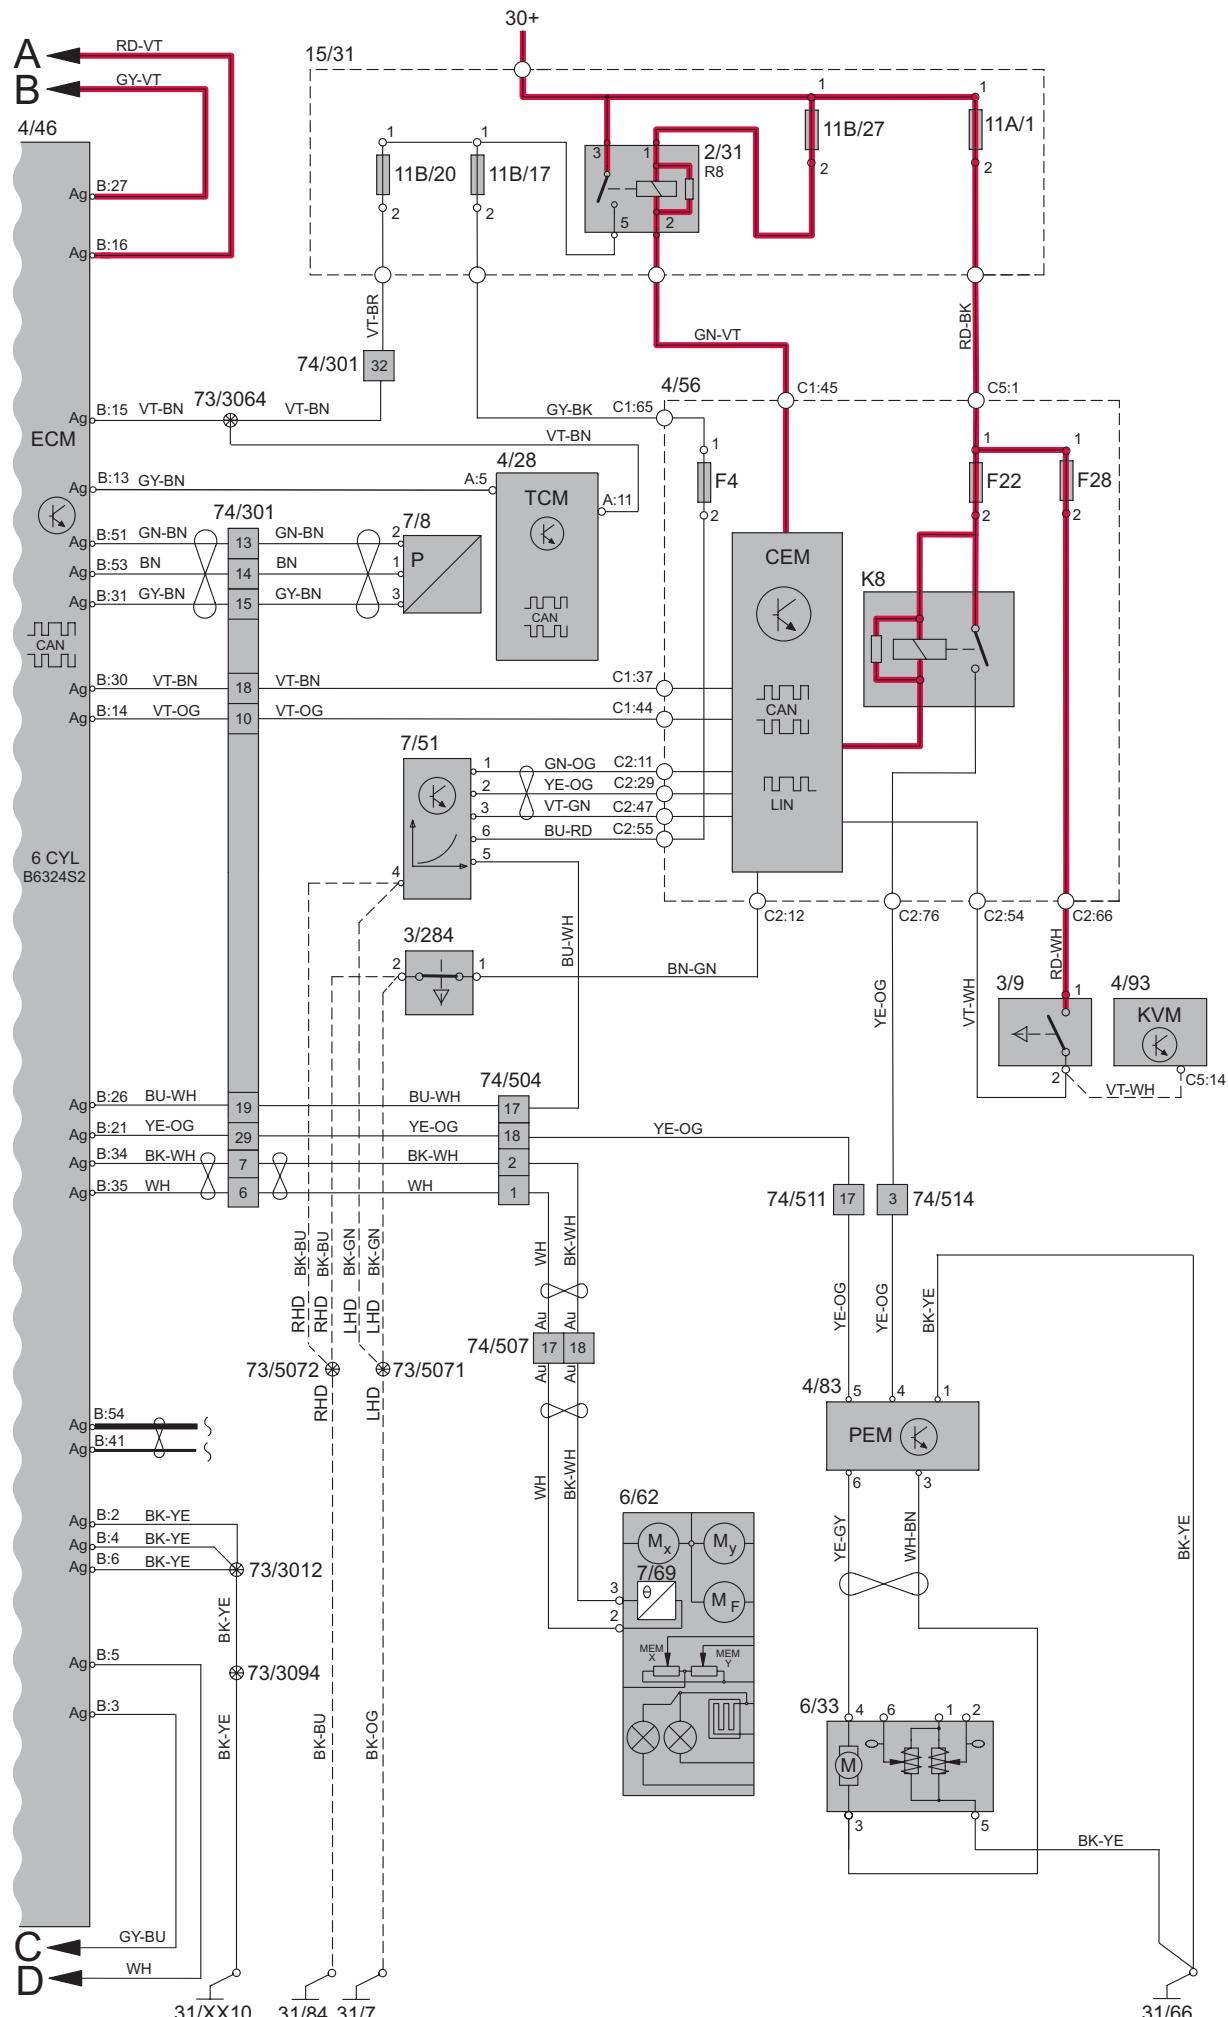


Group 23 Fuel system

Engine management system, 6-Cyl. Turbo 1:2

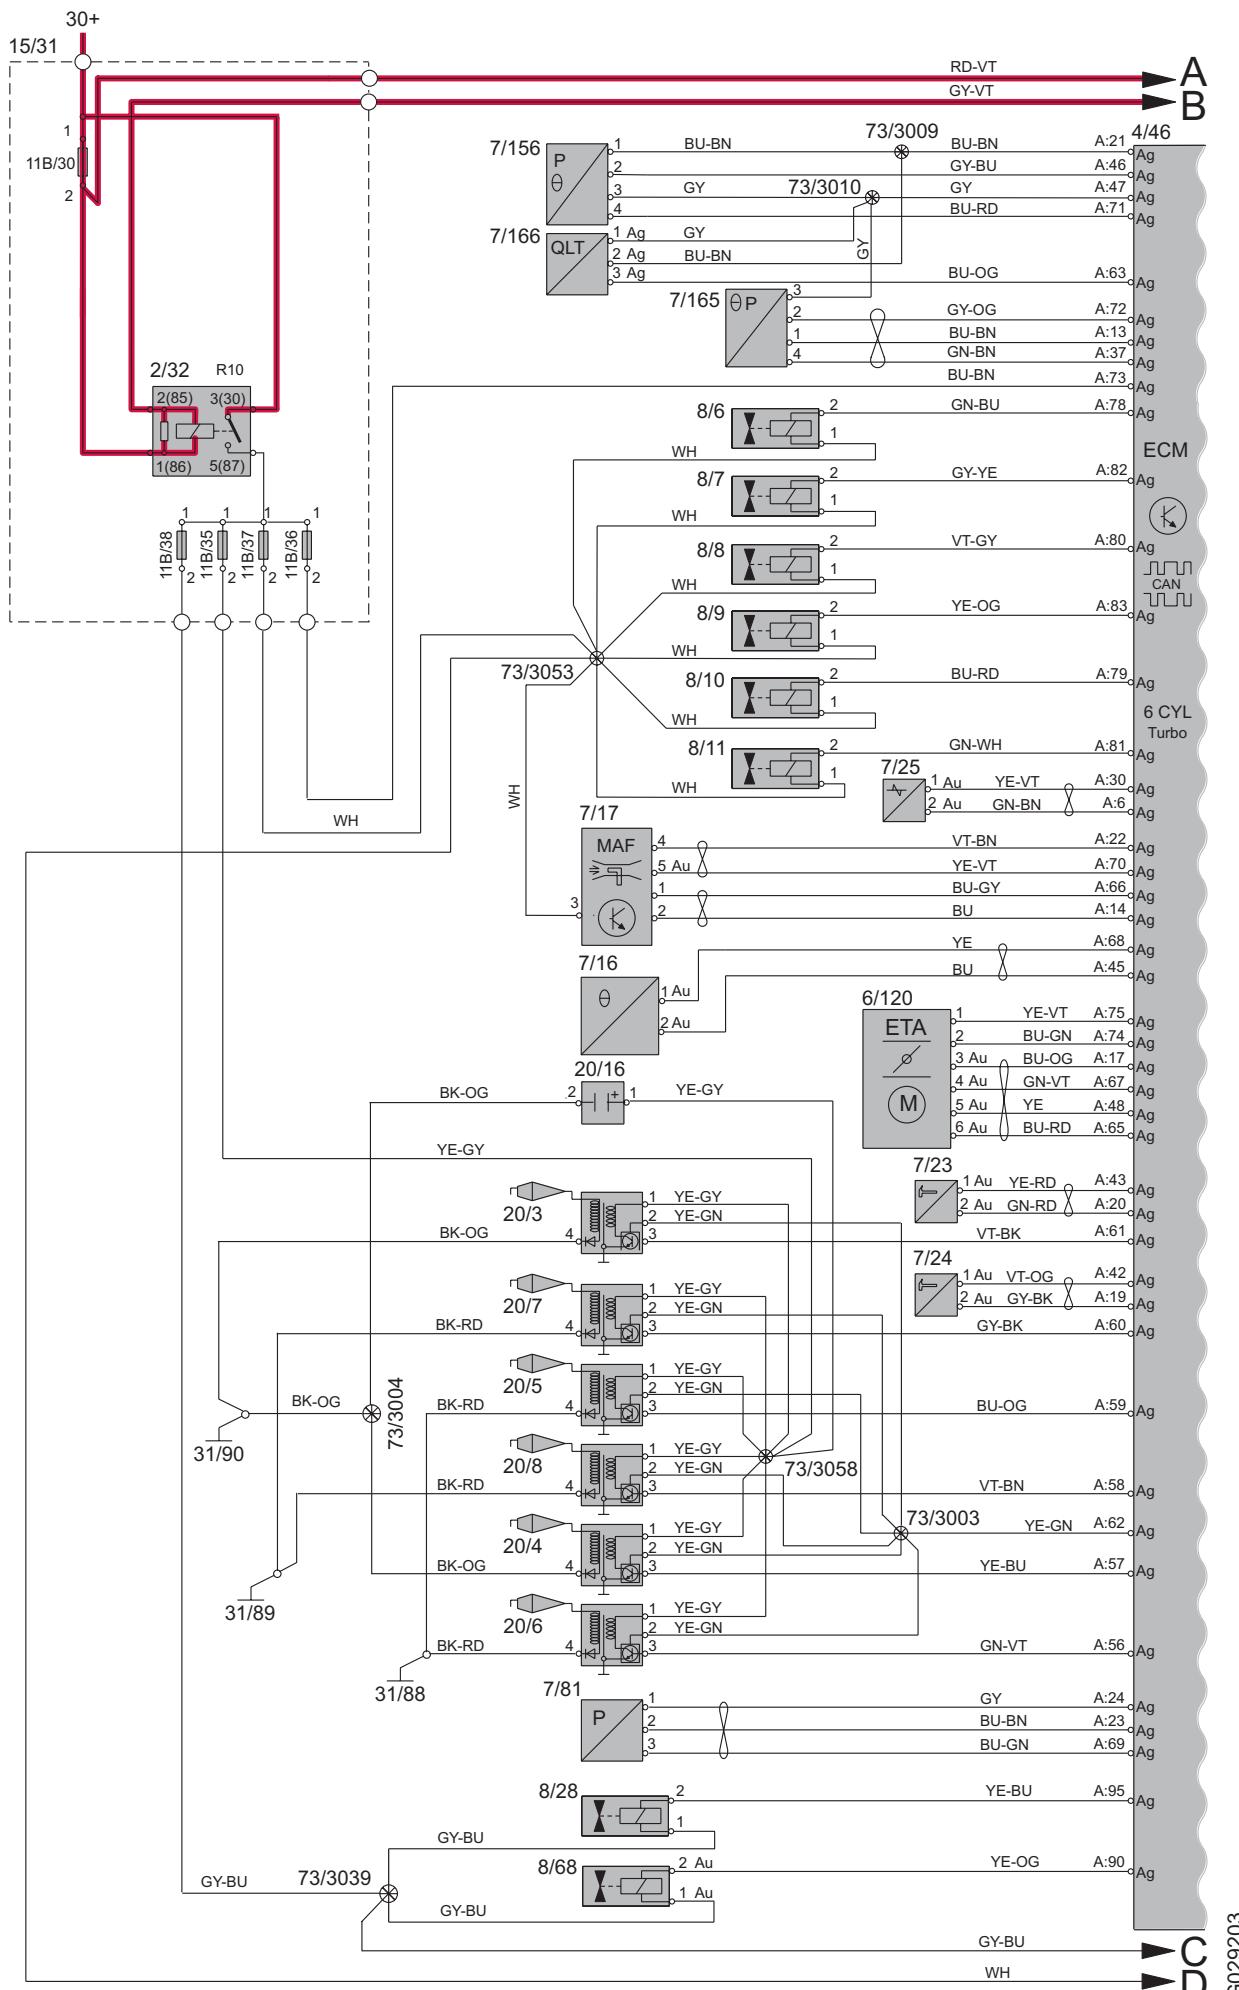


Group 23 Fuel system

Engine management system, 6-Cyl. Turbo 2:2

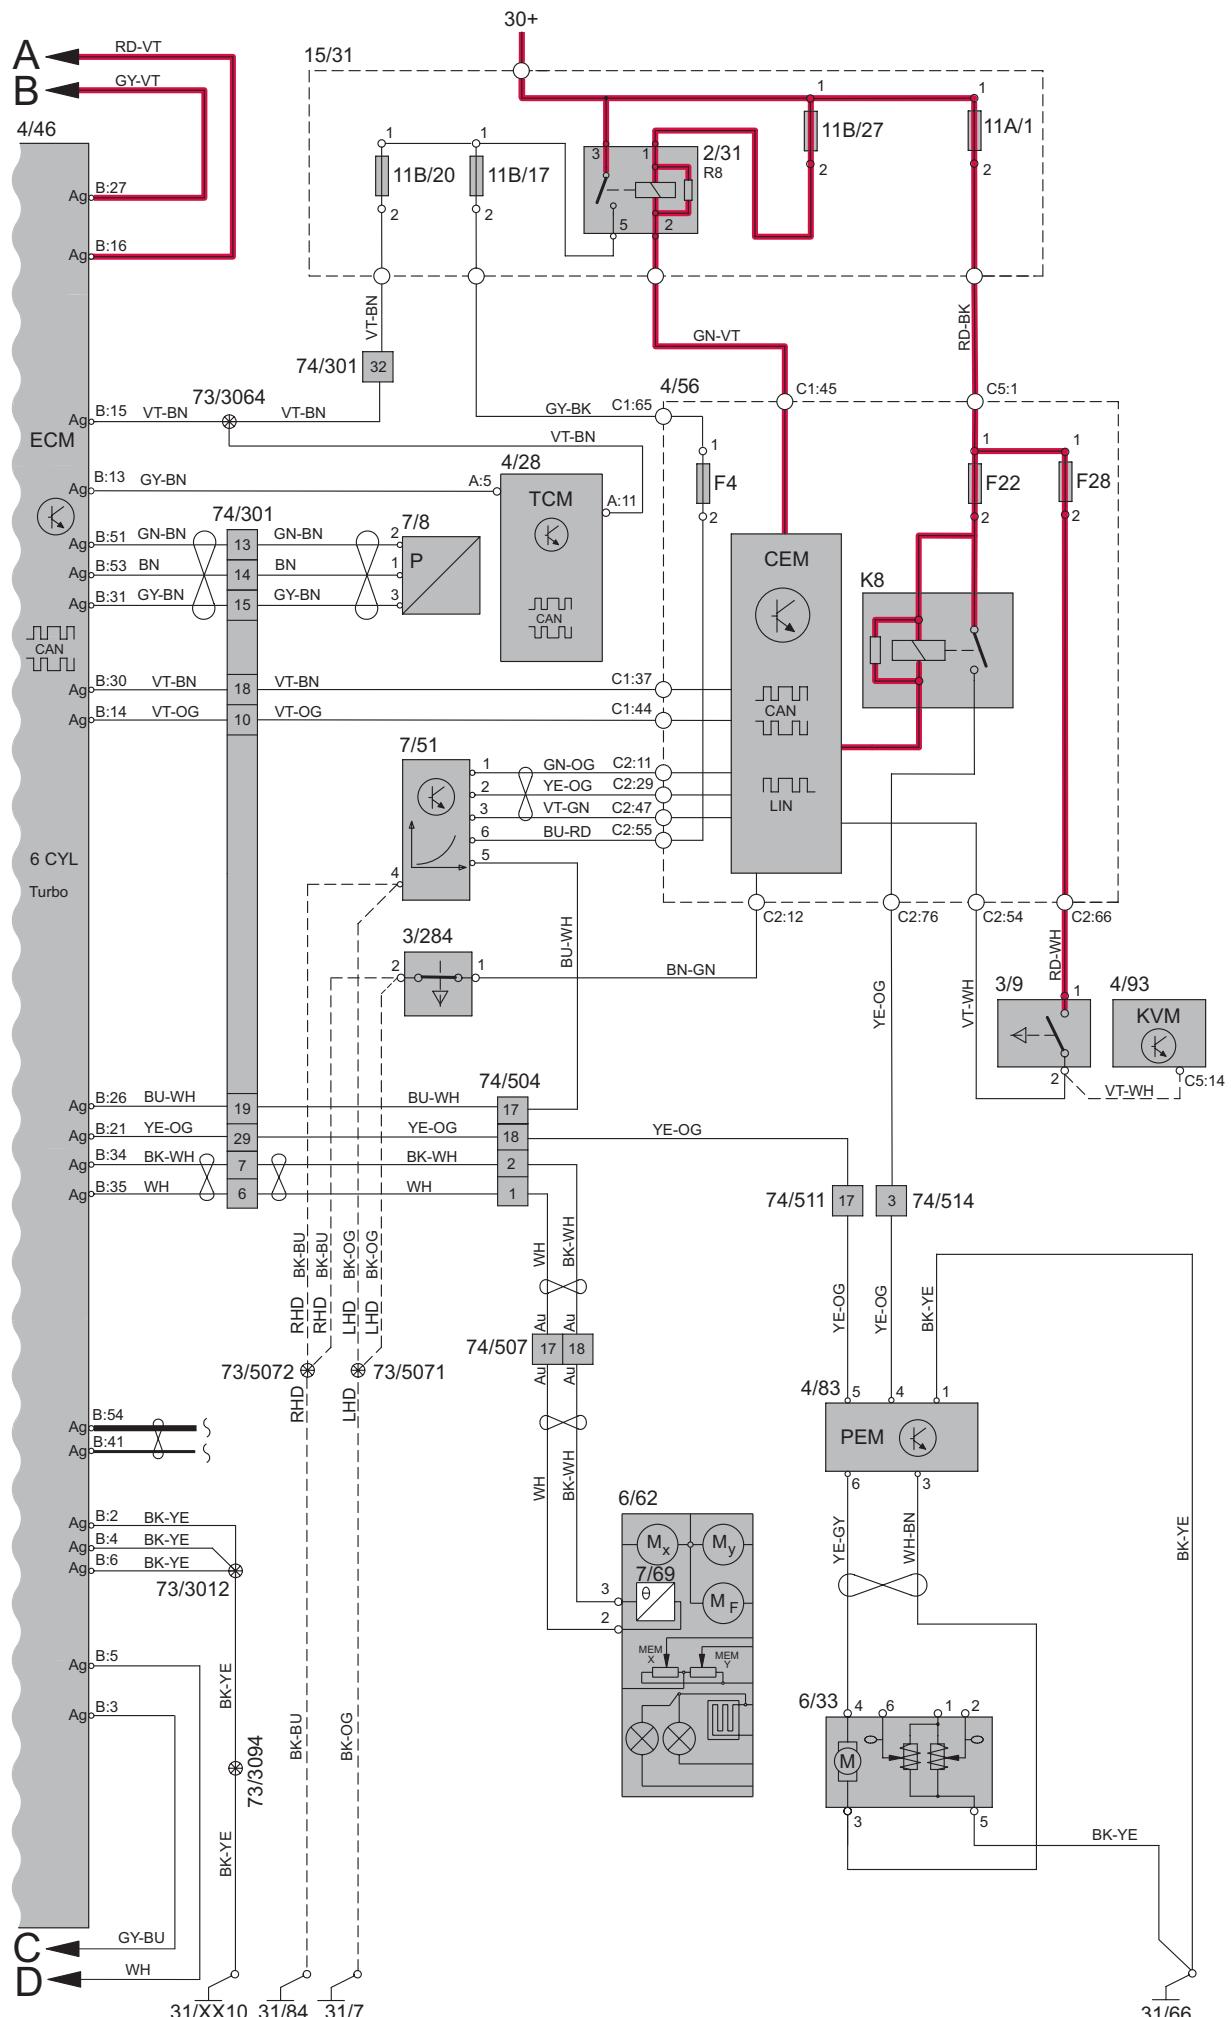


Group 23 Fuel system

Engine management system, 8-Cyl. 1:2

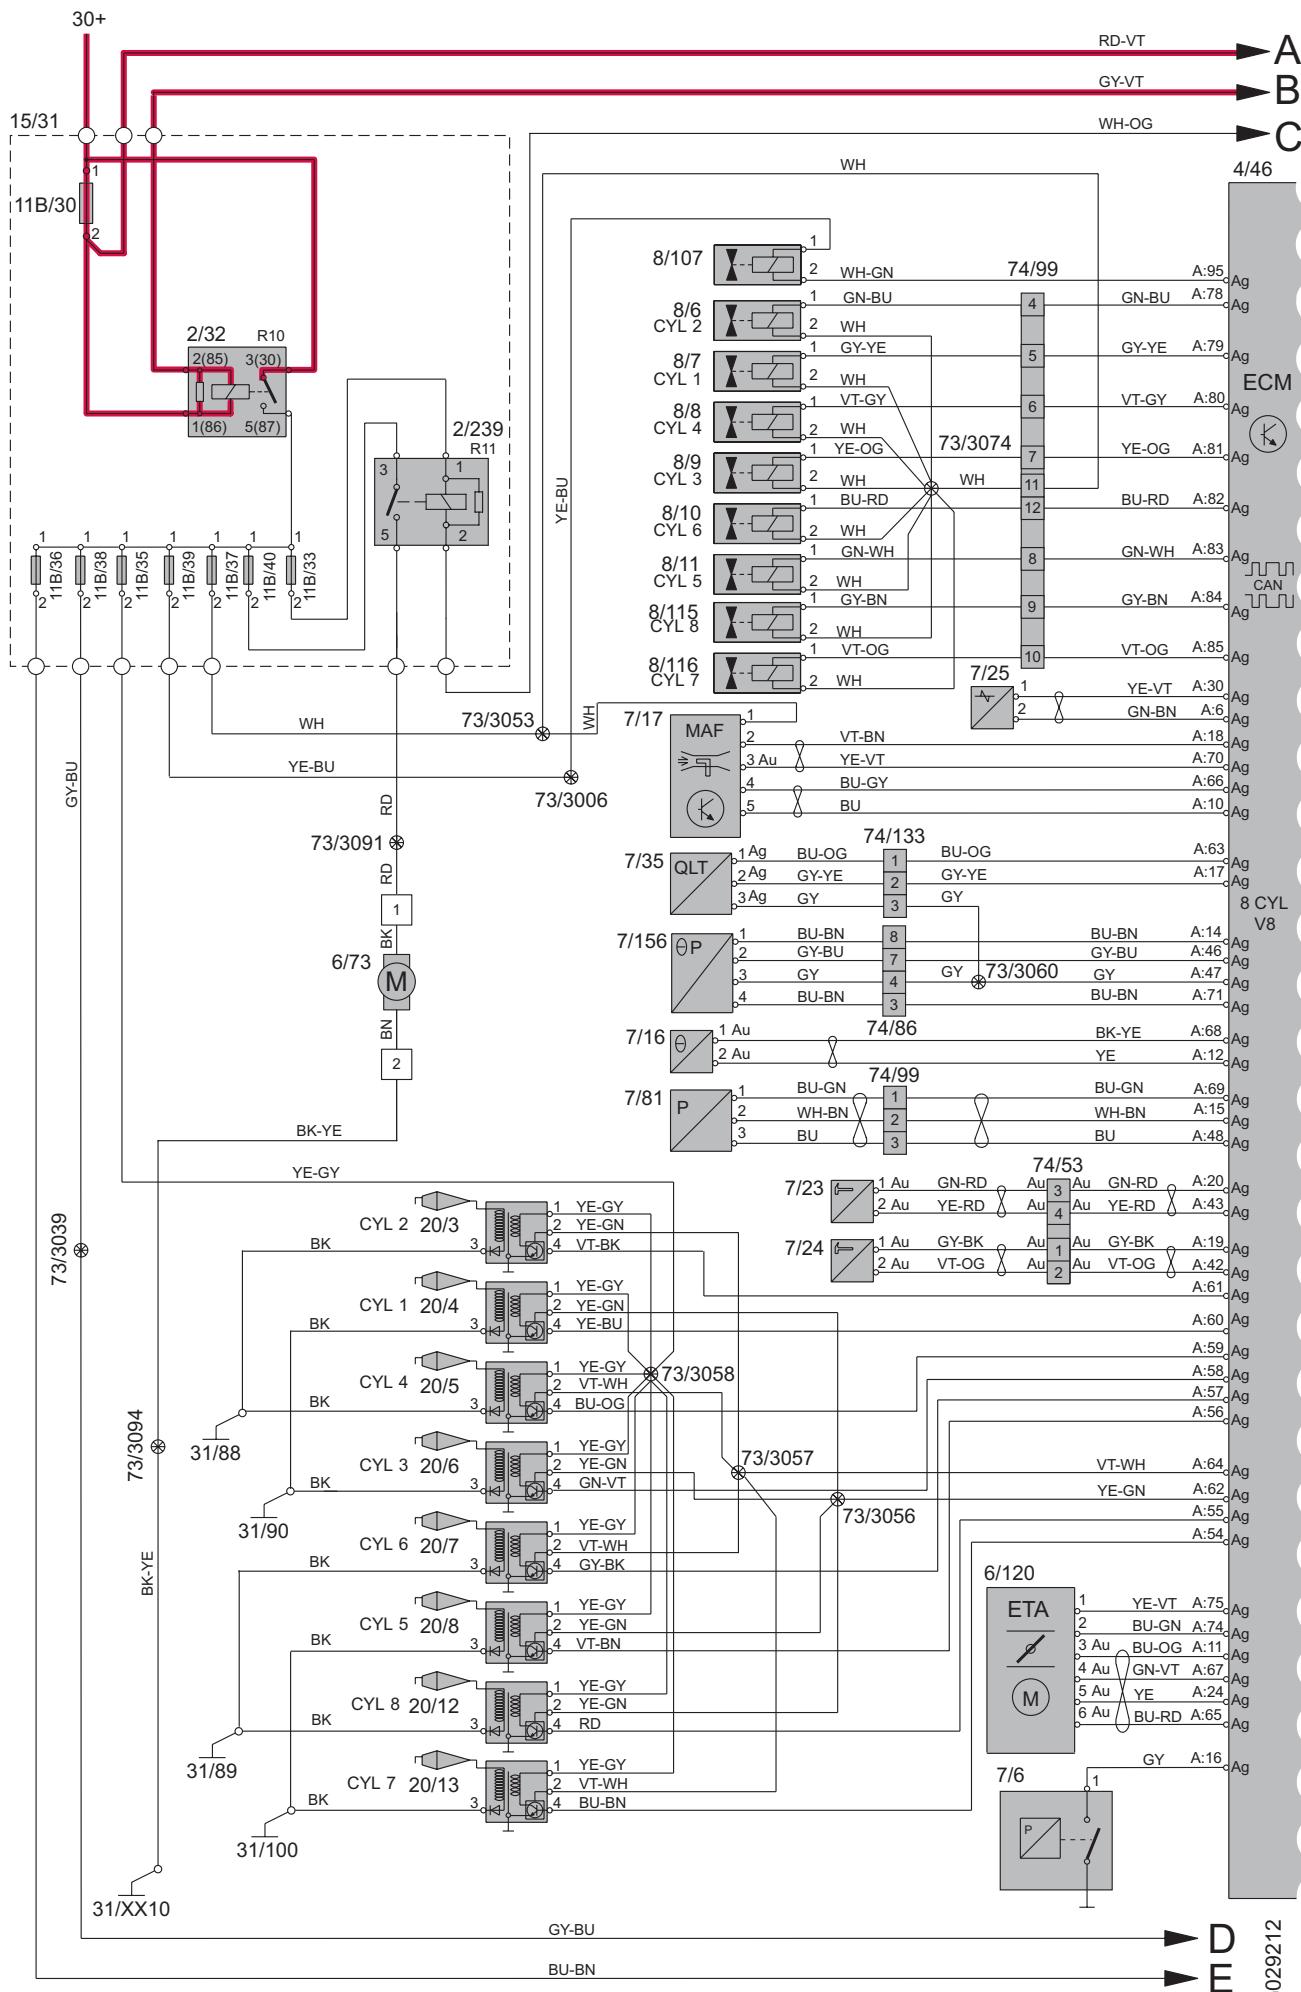


Group 23 Fuel system

Engine management system, 8-Cyl. 2:2

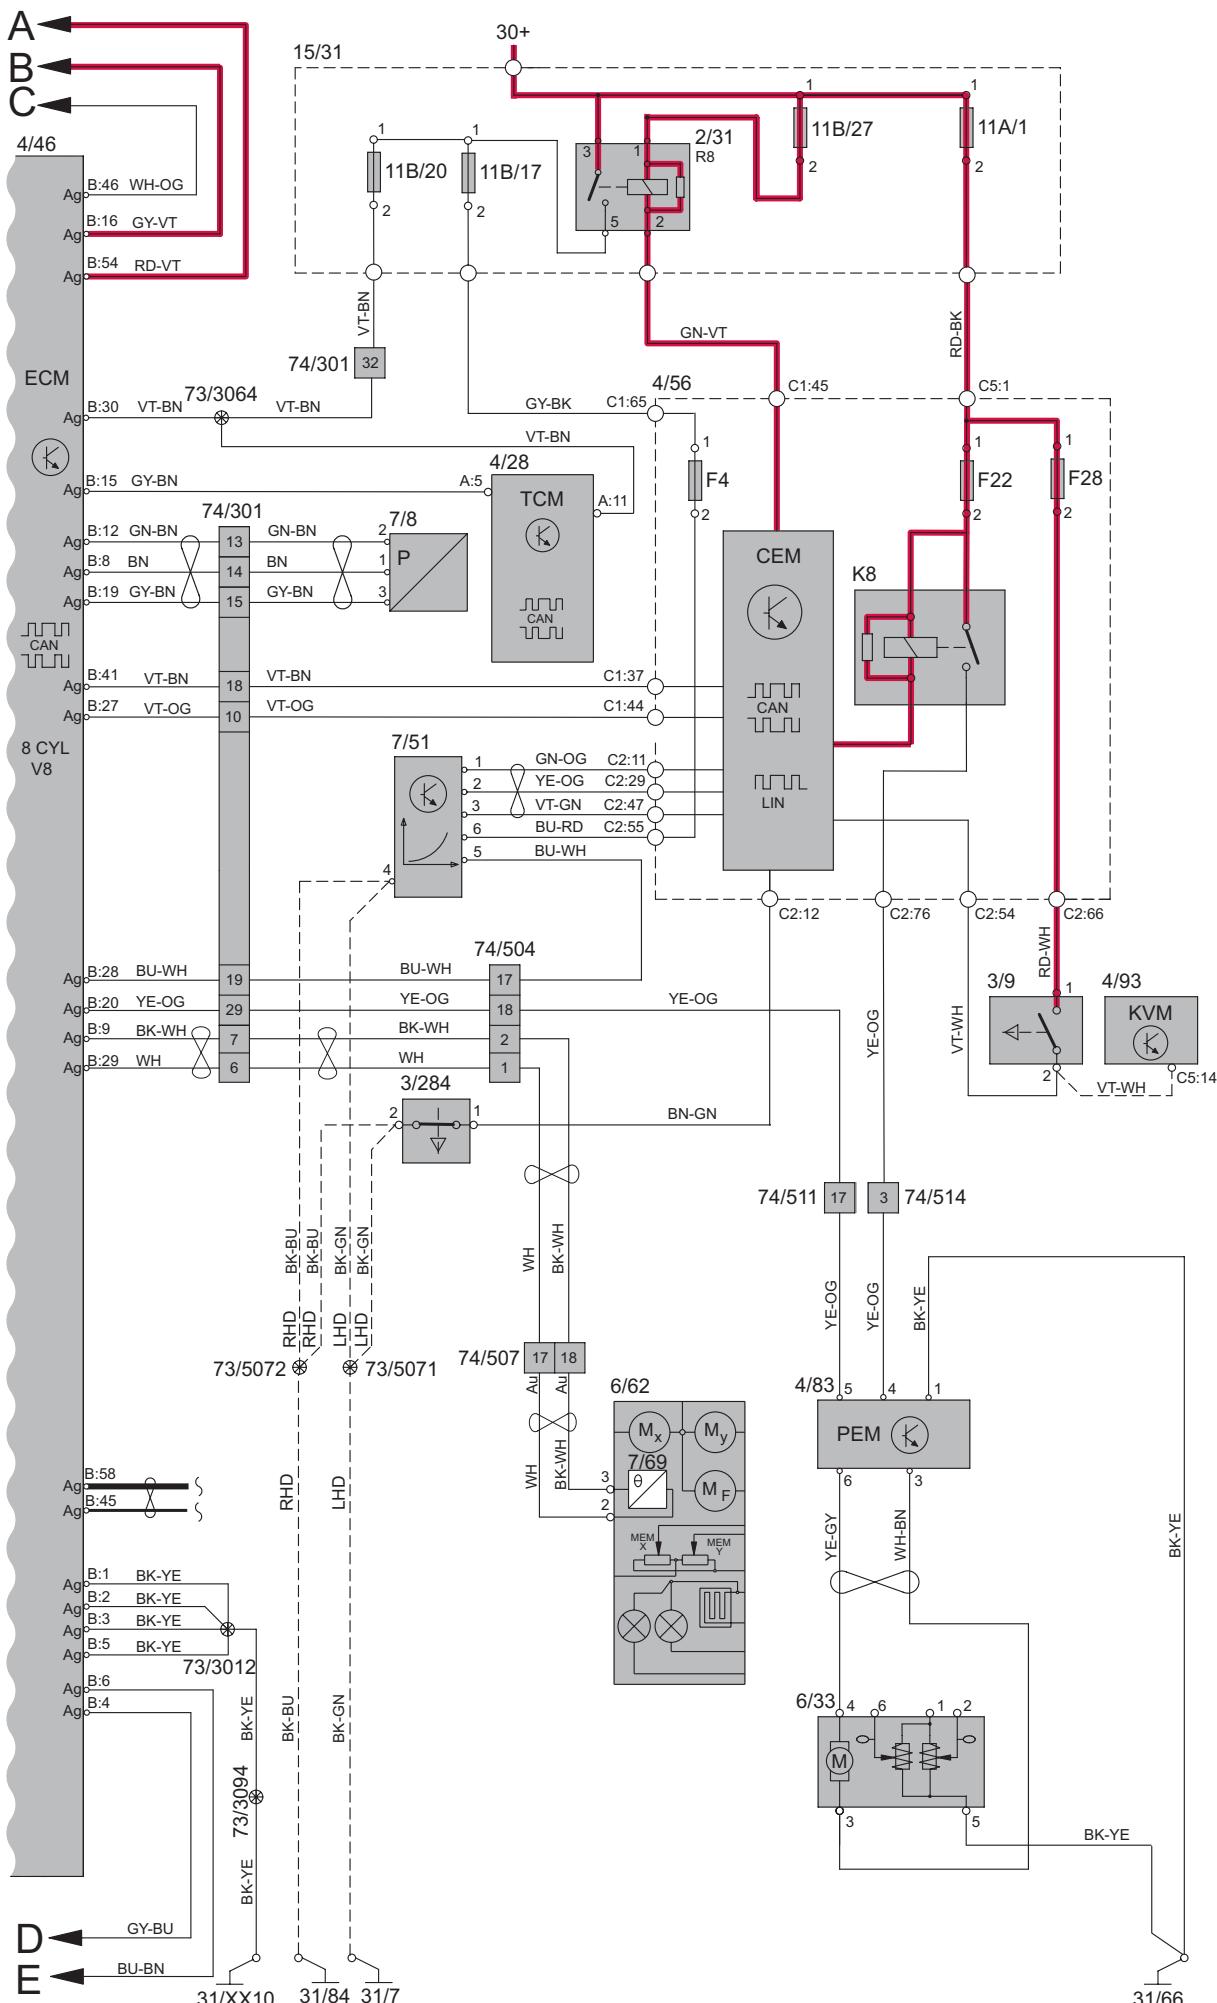


Group 23 Fuel system Emission control 4-Cyl.

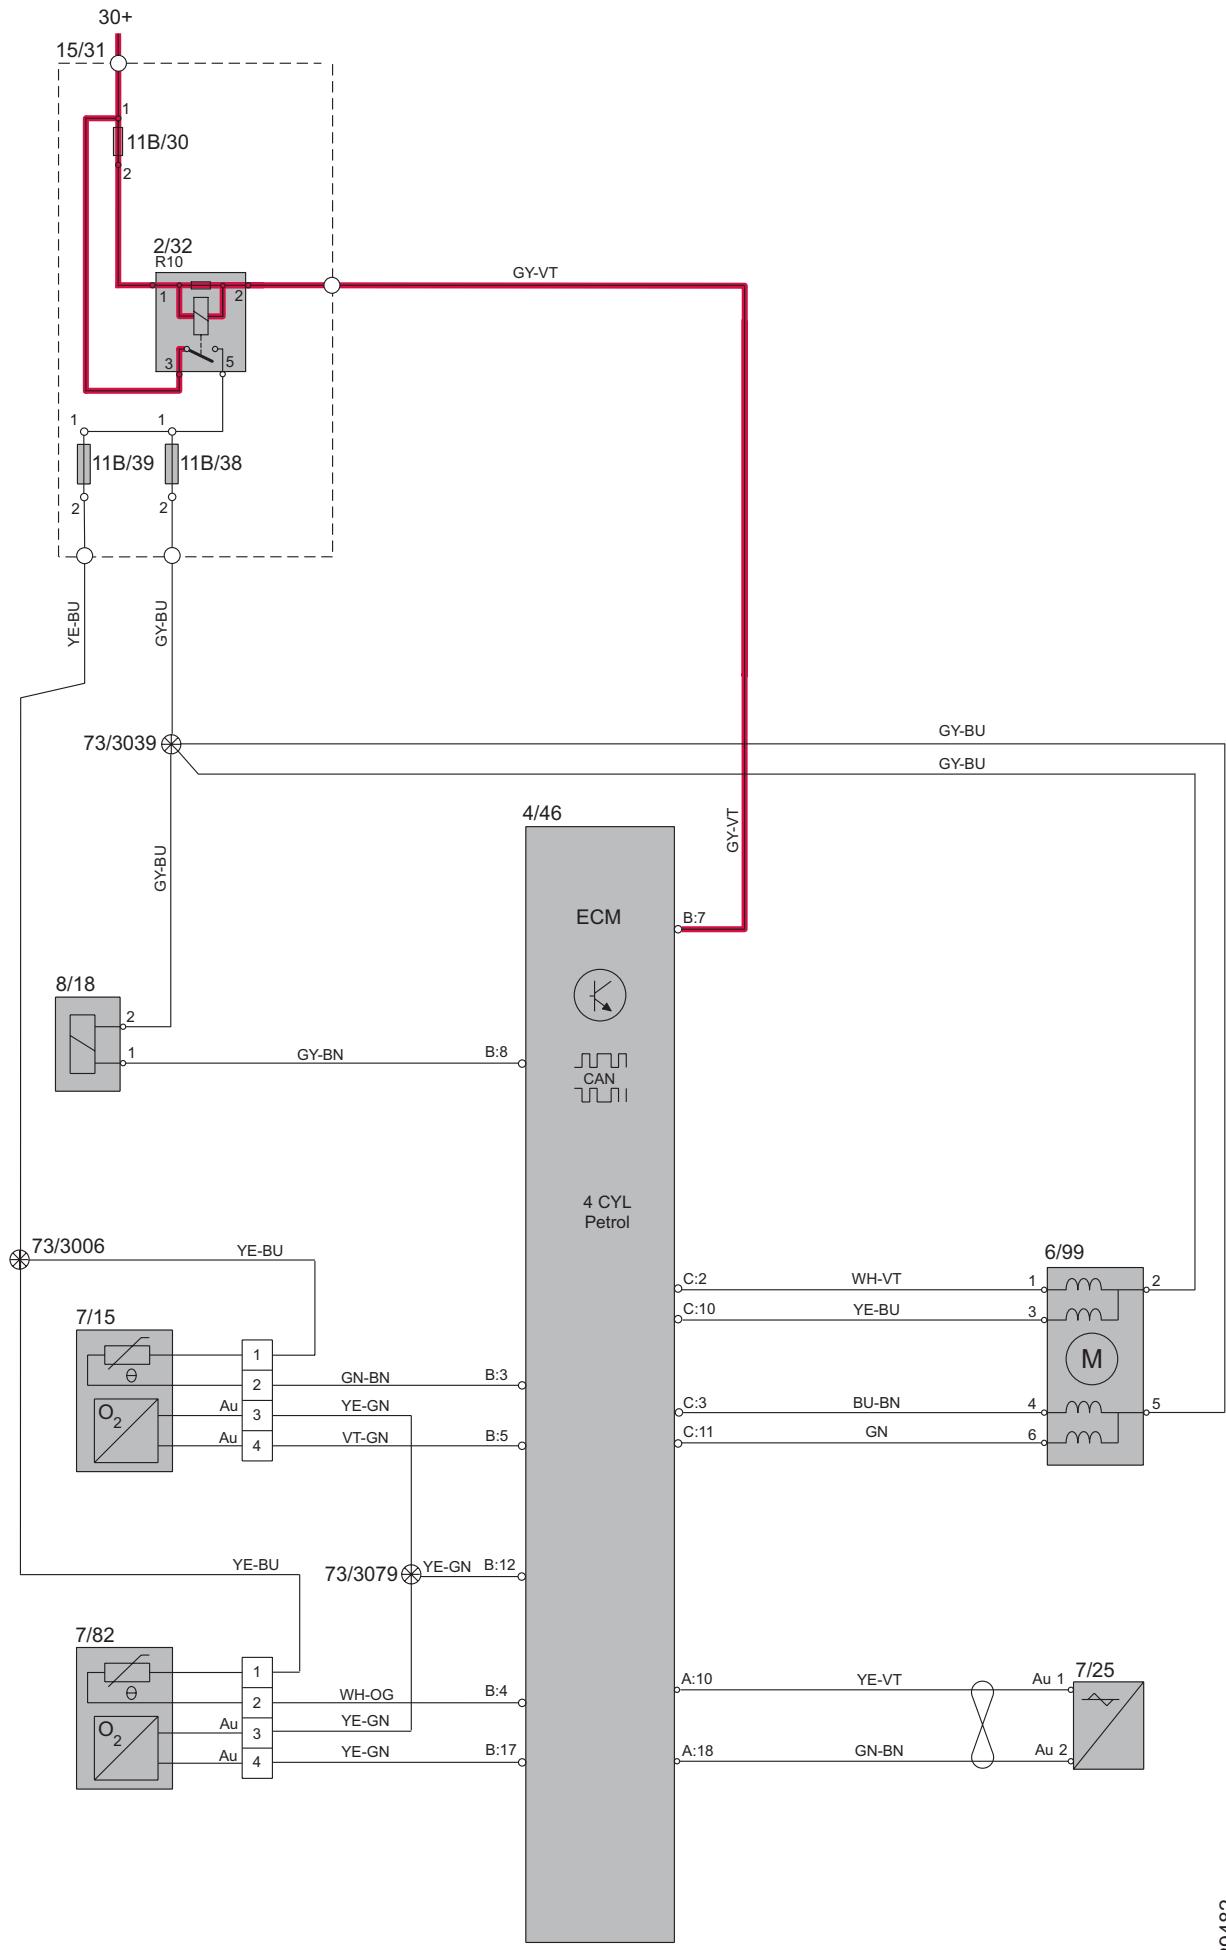

G029482

Group 23 Fuel system


Emission control 5-Cyl. Turbo

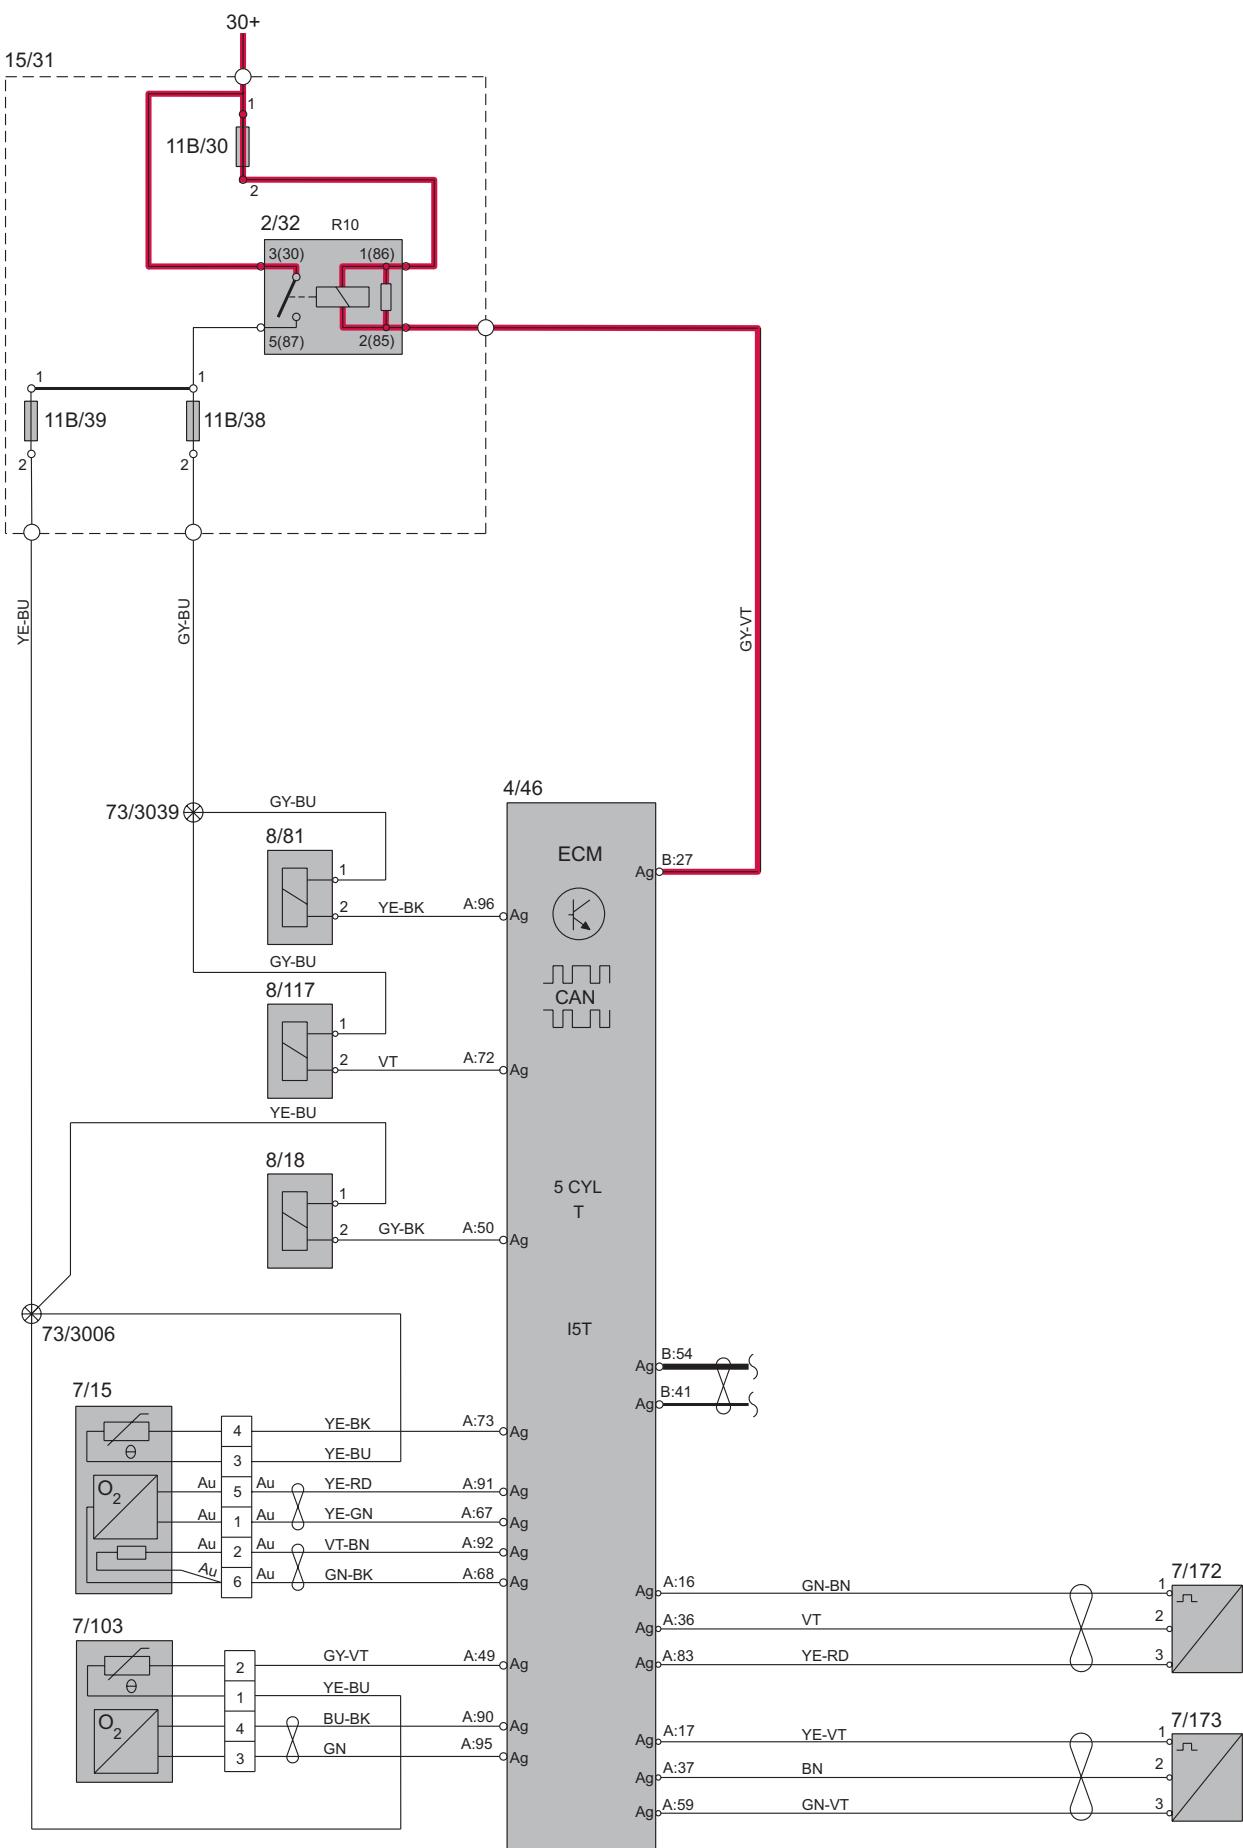


G029246

Group 23 Fuel system

Emission control 6-Cyl.

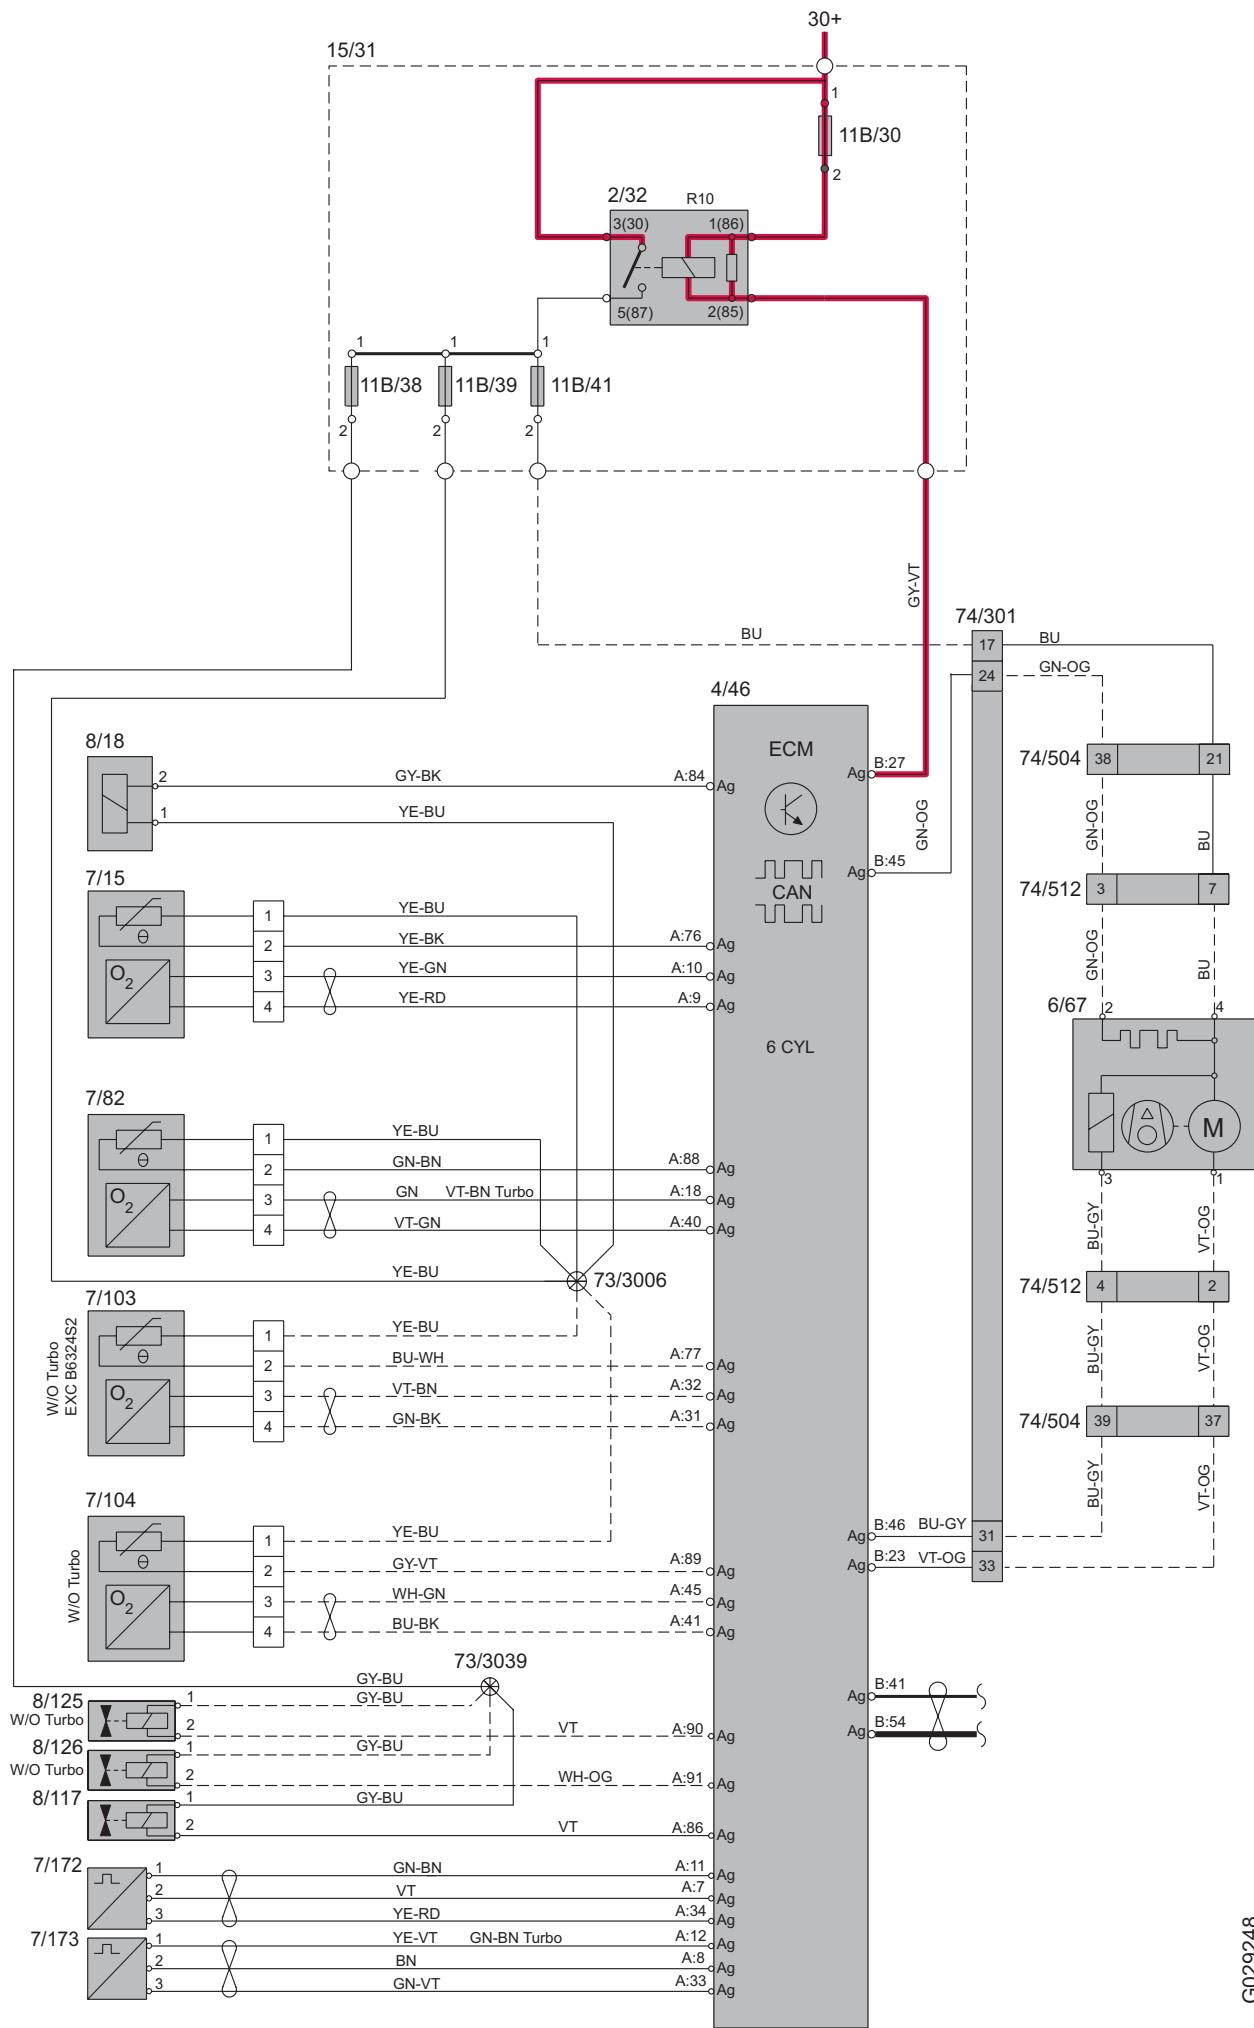


Group 23 Fuel system Emission control 8-Cyl.

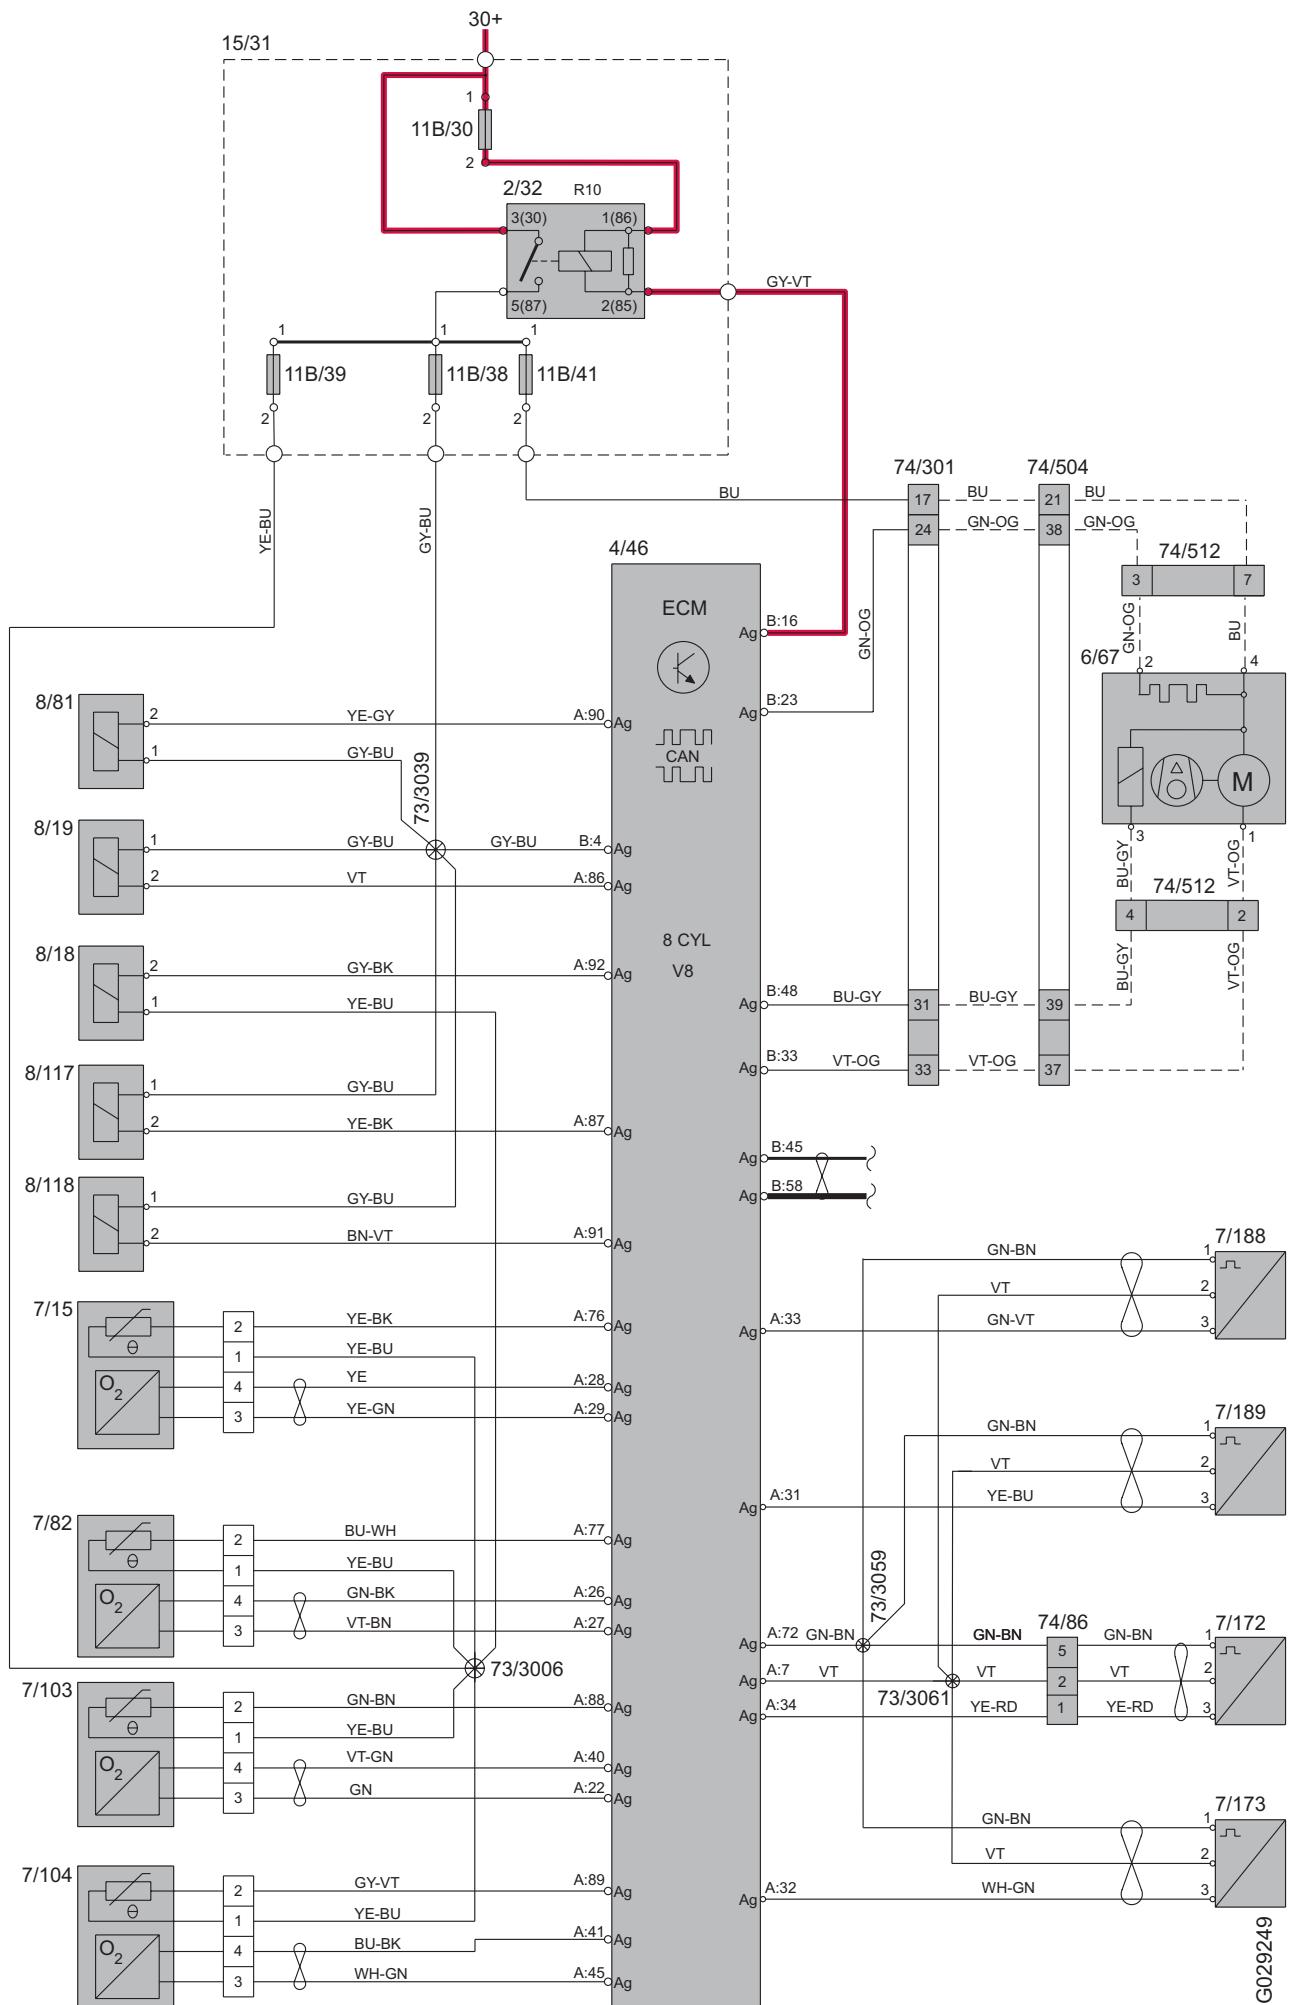

Group 23 Fuel system


Engine management system, 4-Cyl. Diesel DW10 1:2

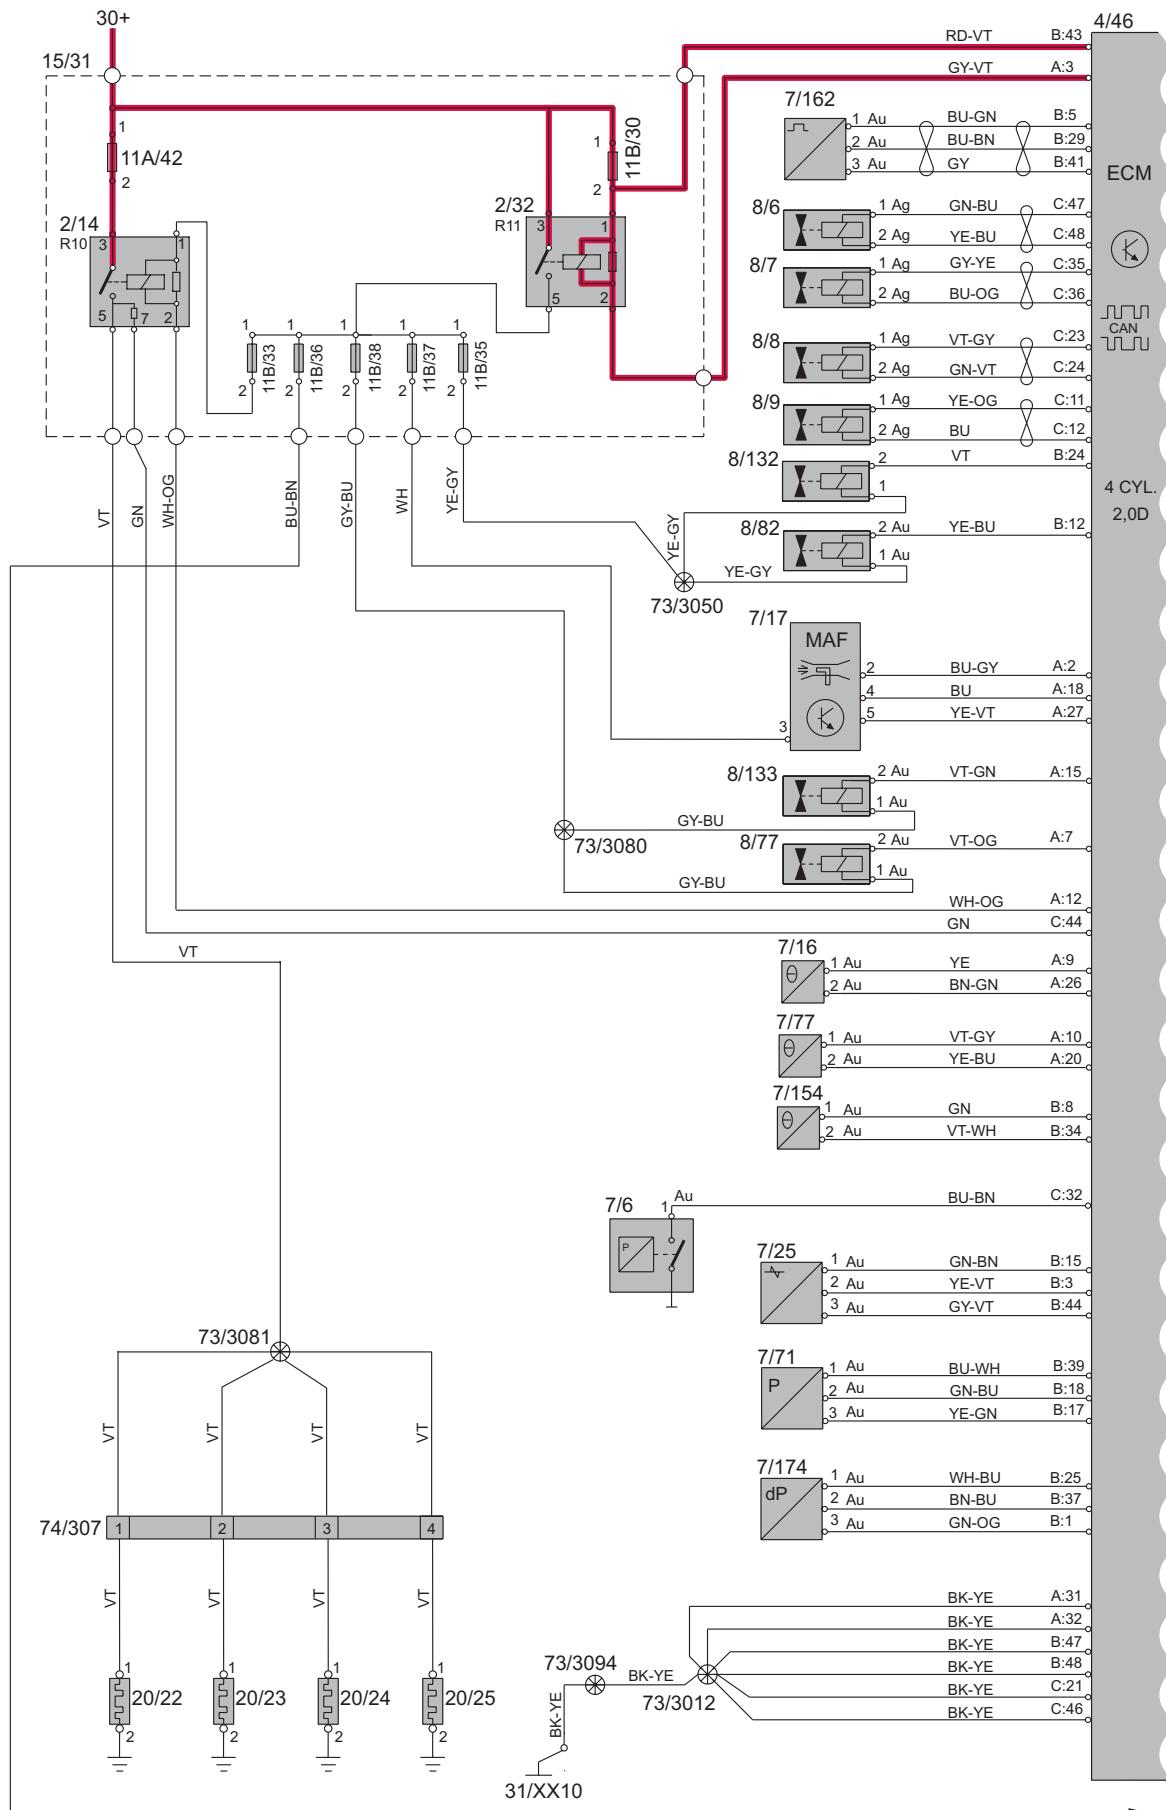

G029479


Group 23 Fuel system

Engine management system, 4-Cyl. Diesel DW10 2:2

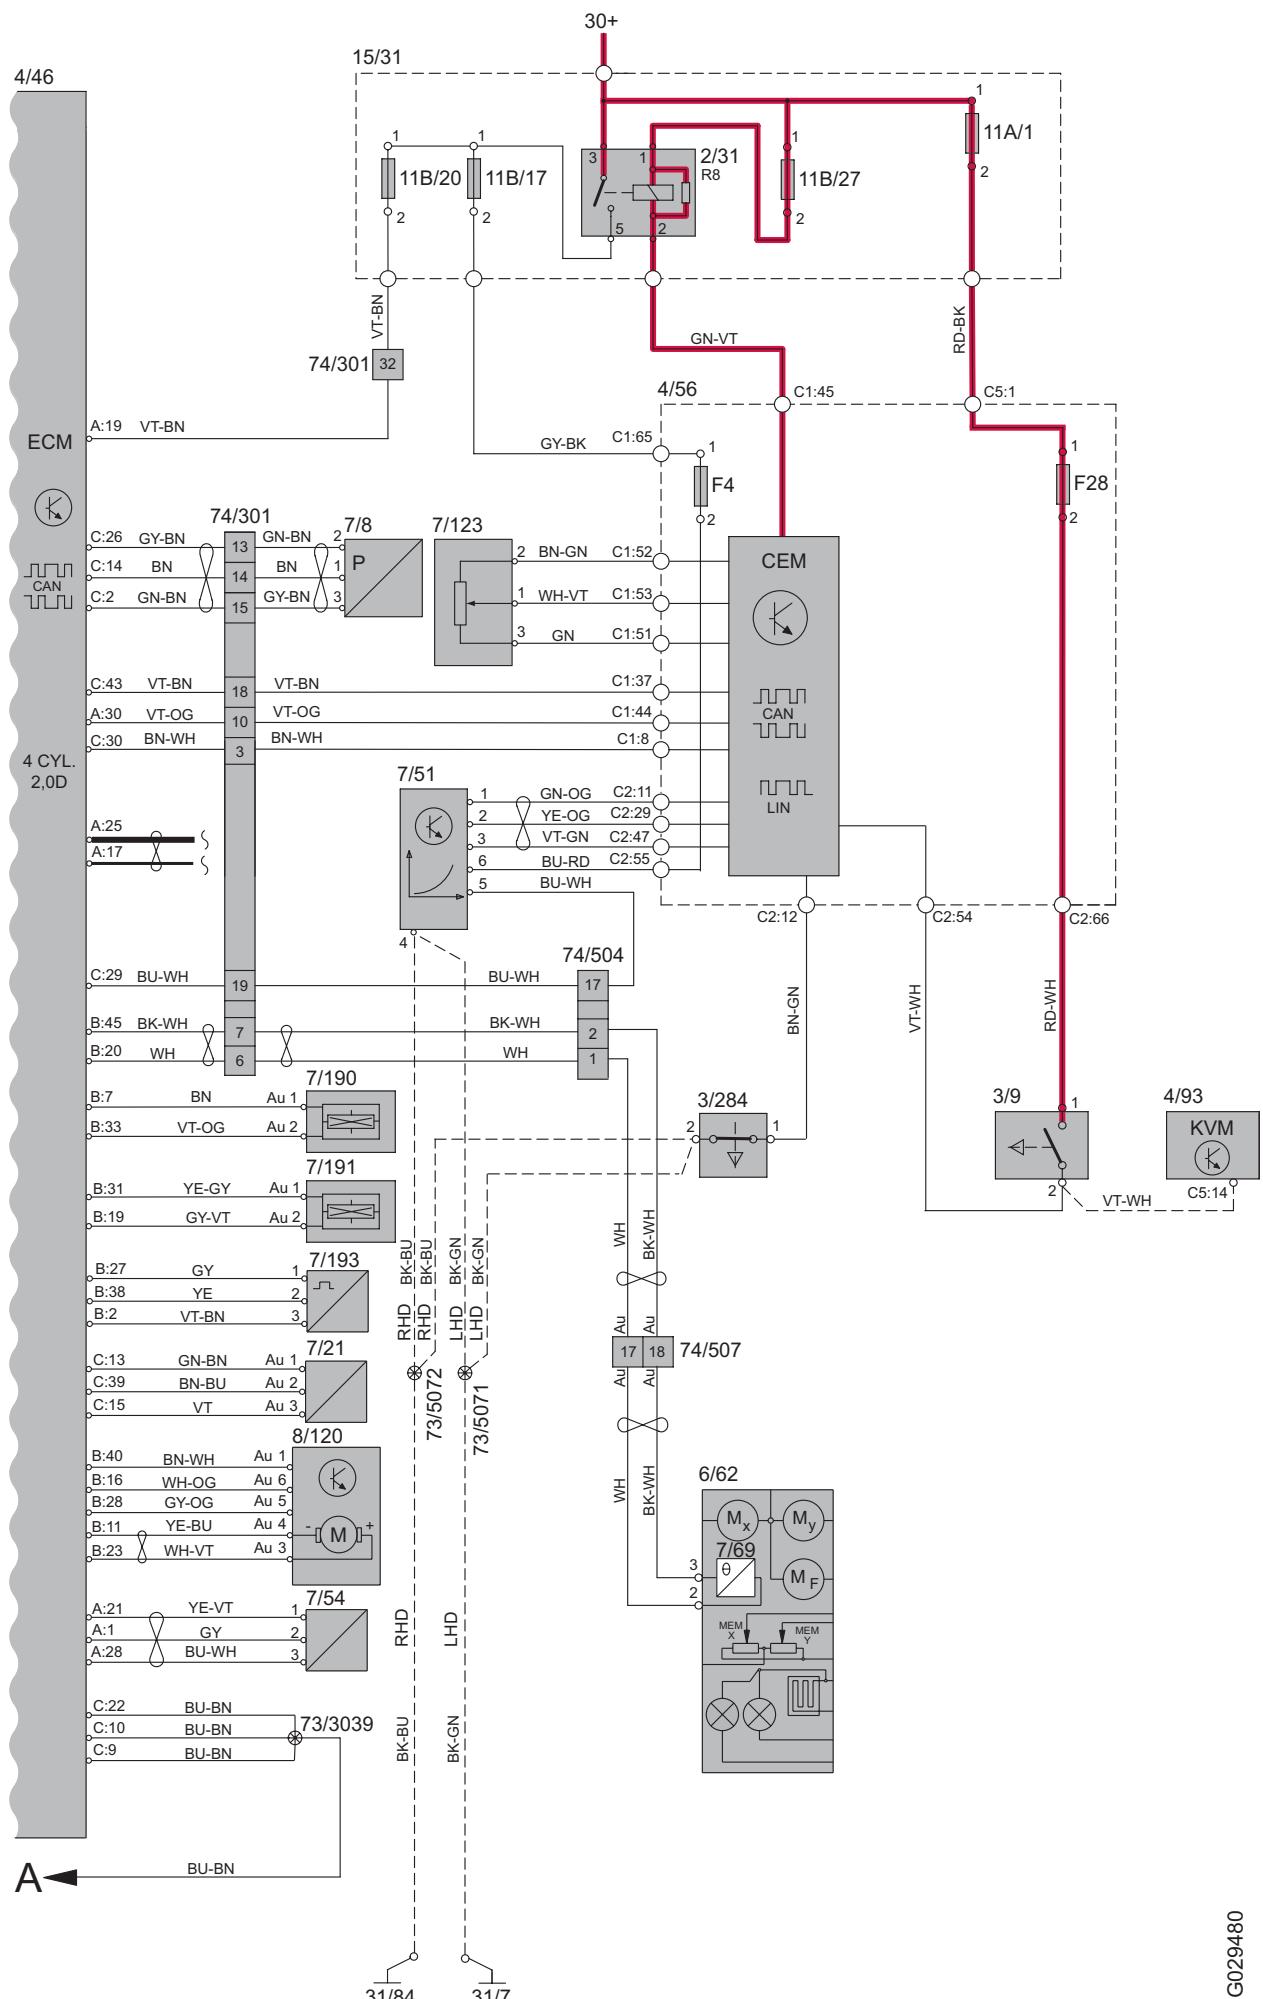


Group 23 Fuel system

Engine management system, 4-Cyl. Diesel DV6B 1:3

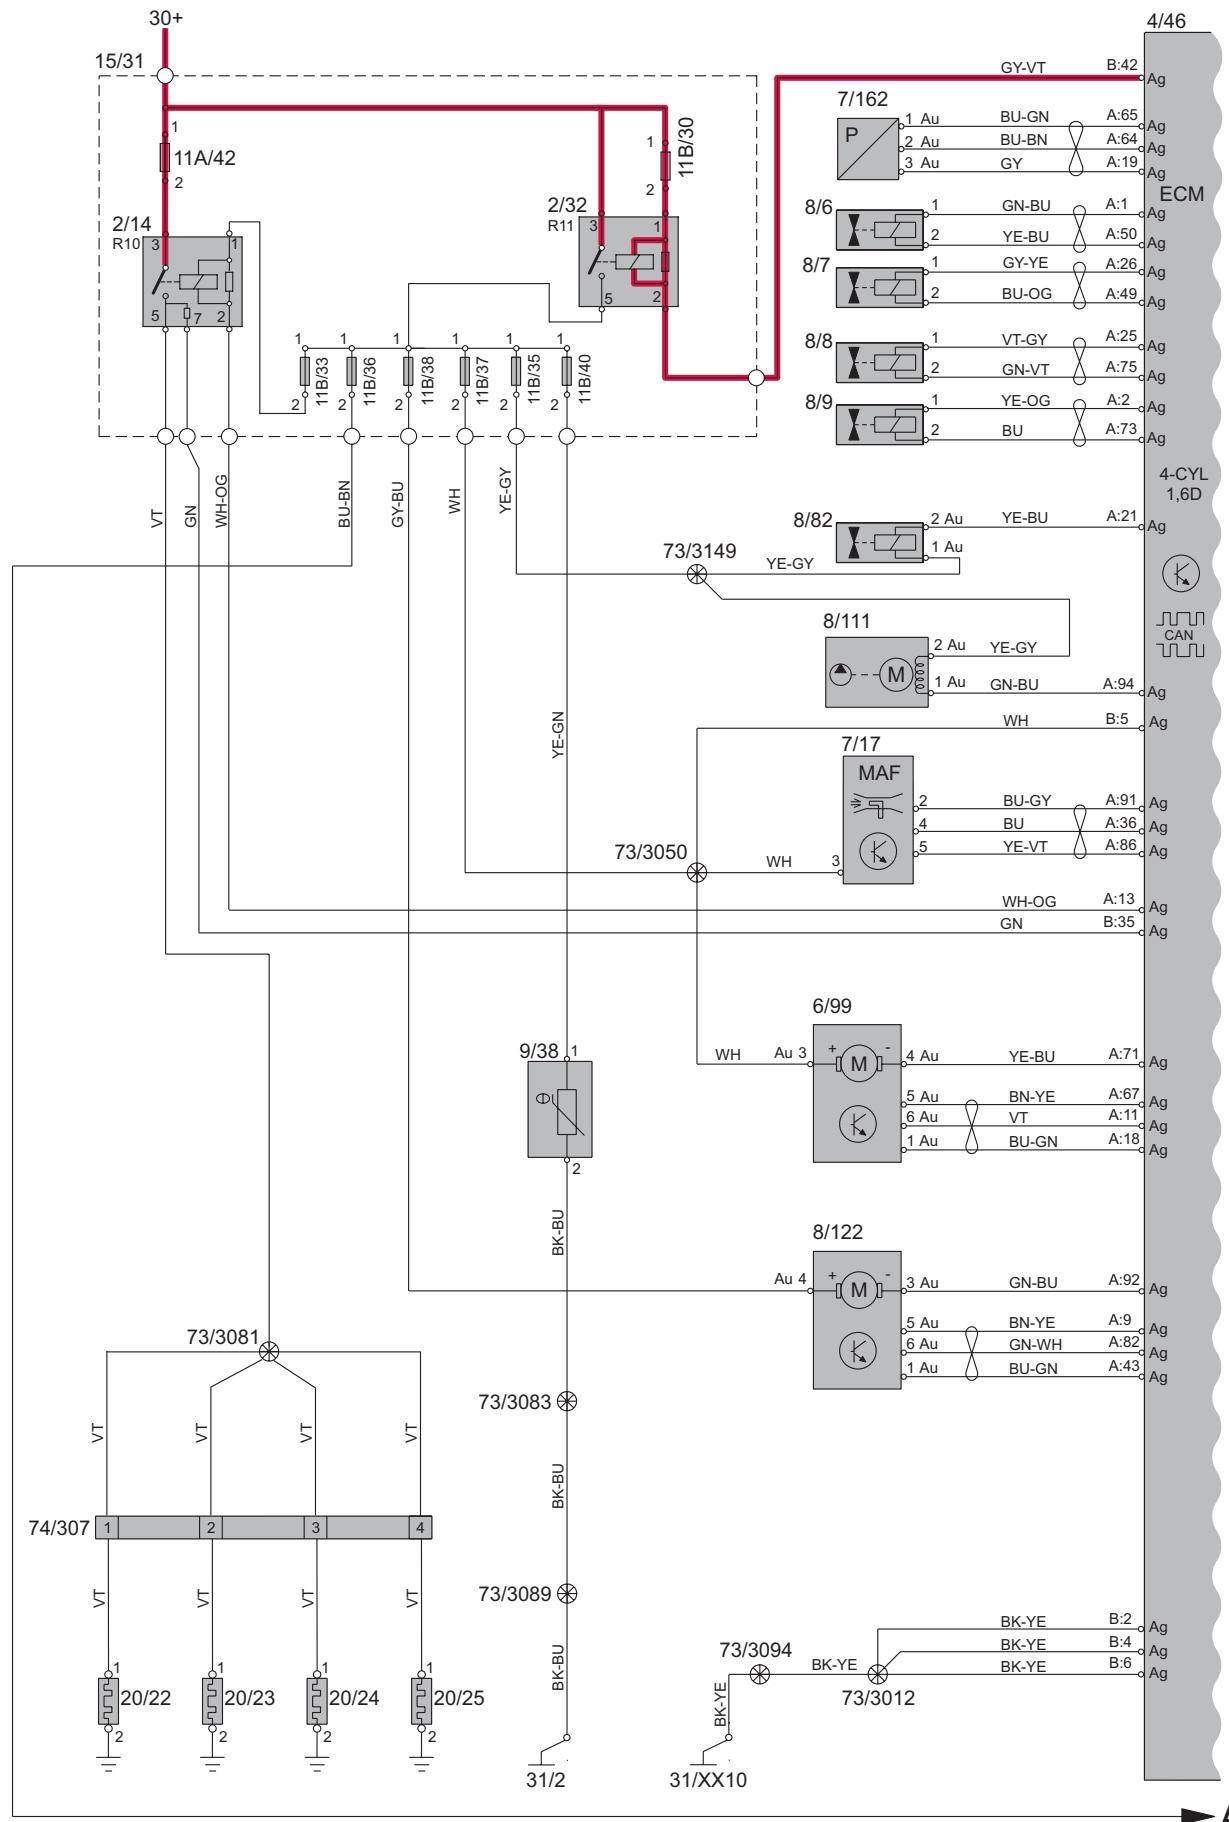

G041139


Group 23 Fuel system Engine management system, 4-Cyl. Diesel DV6B 2:3

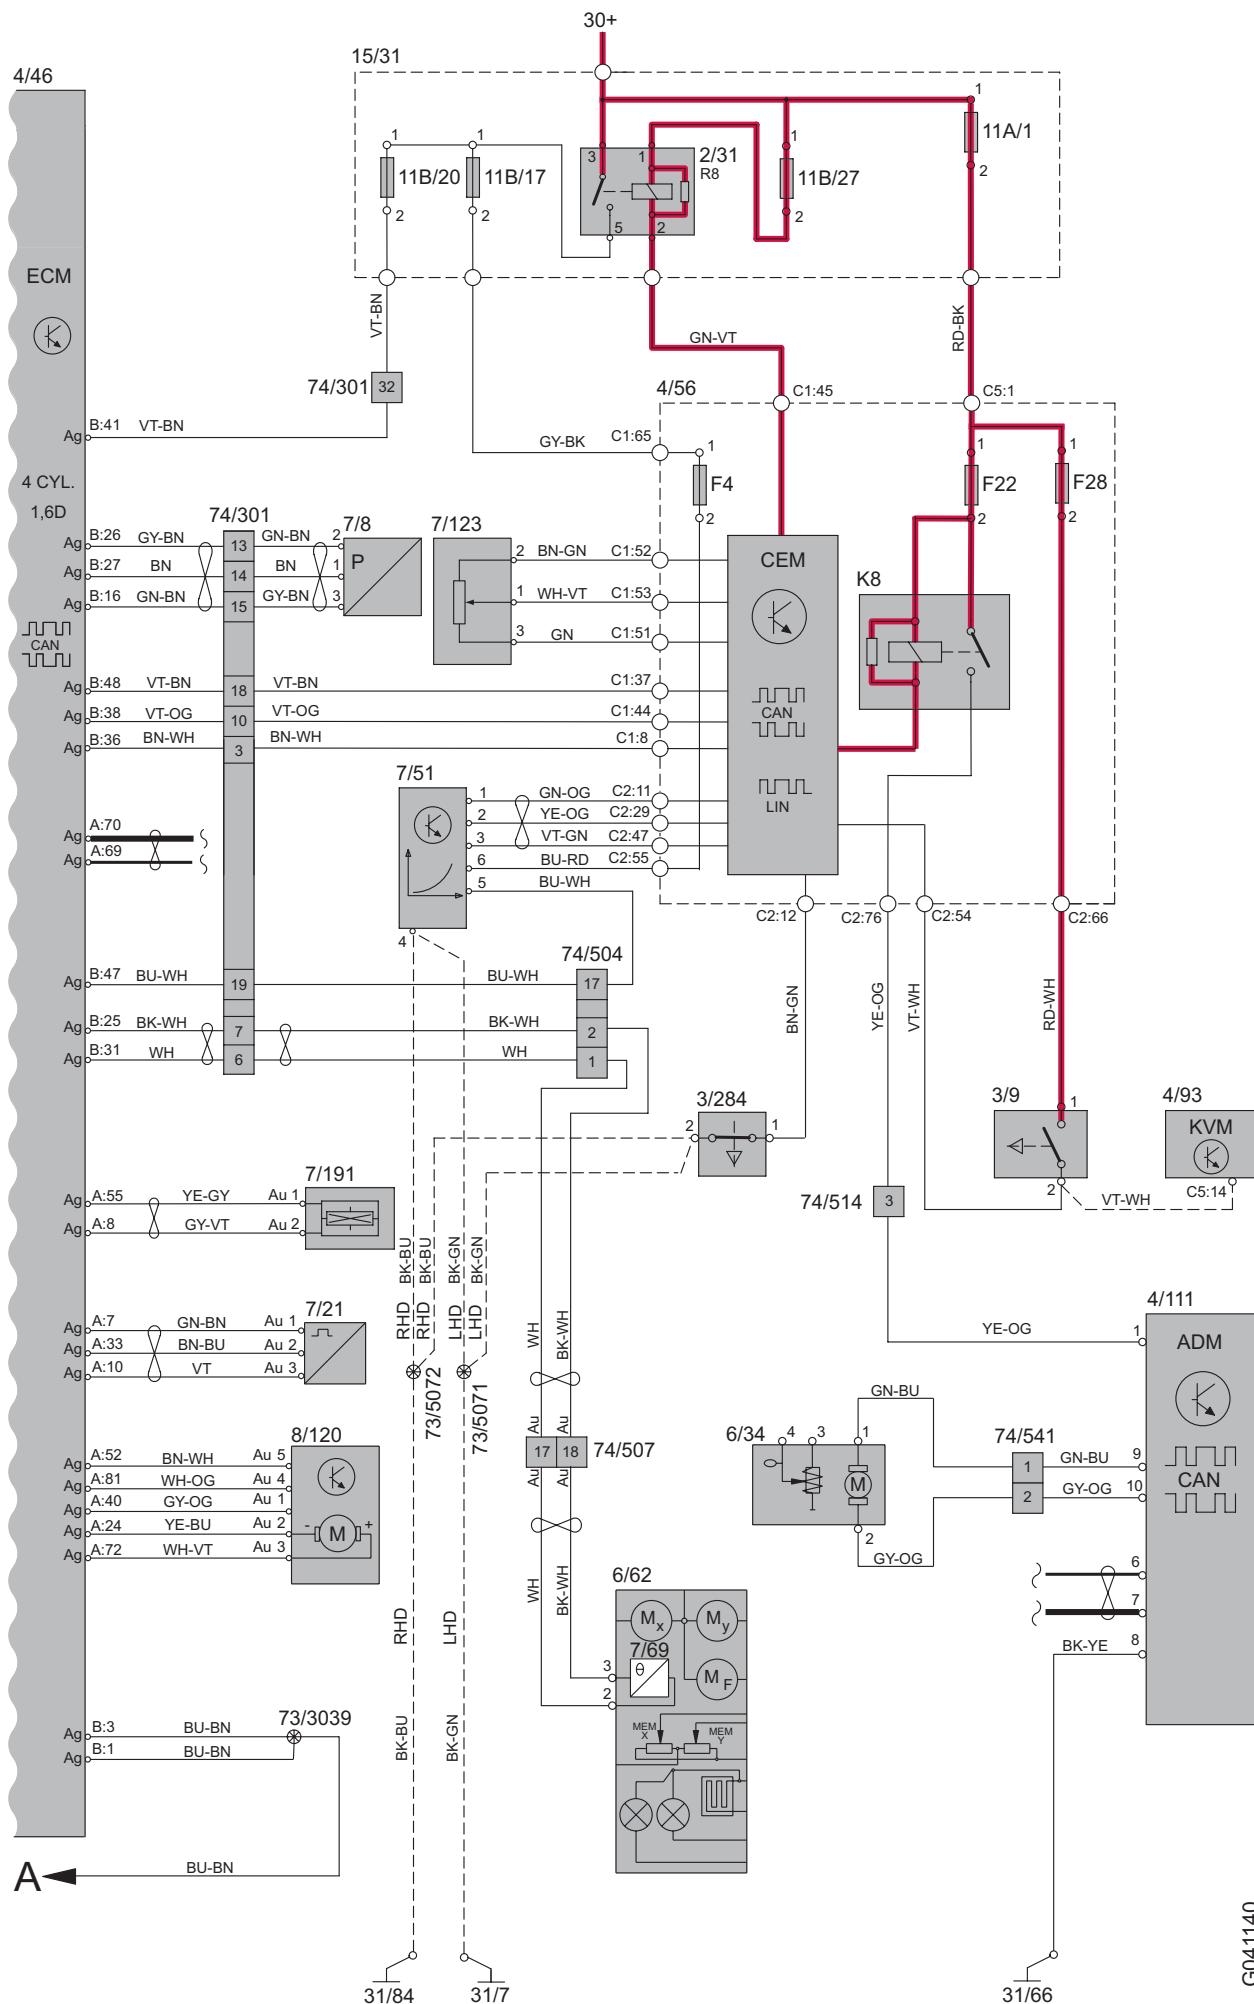

Group 23 Fuel system

Engine management system, 4-Cyl. Diesel DV6B 3:3


4/46

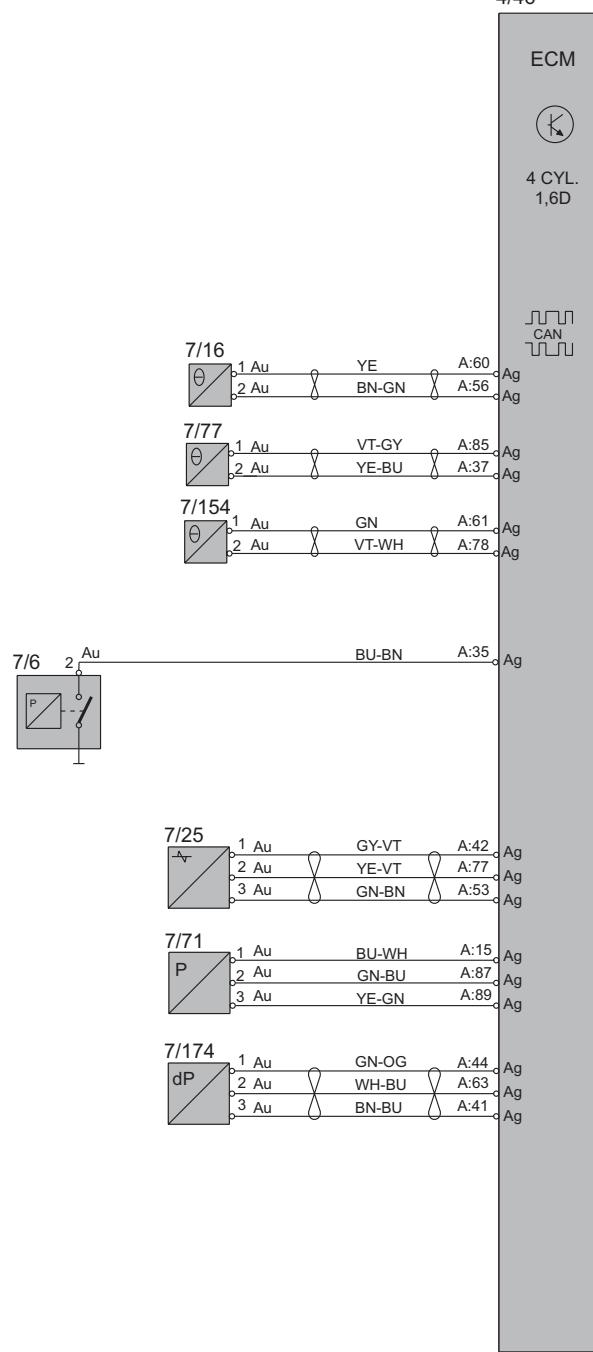

G041182


Group 23 Fuel system

Engine management system, 5-Cyl. Diesel Single Turbo 1:3

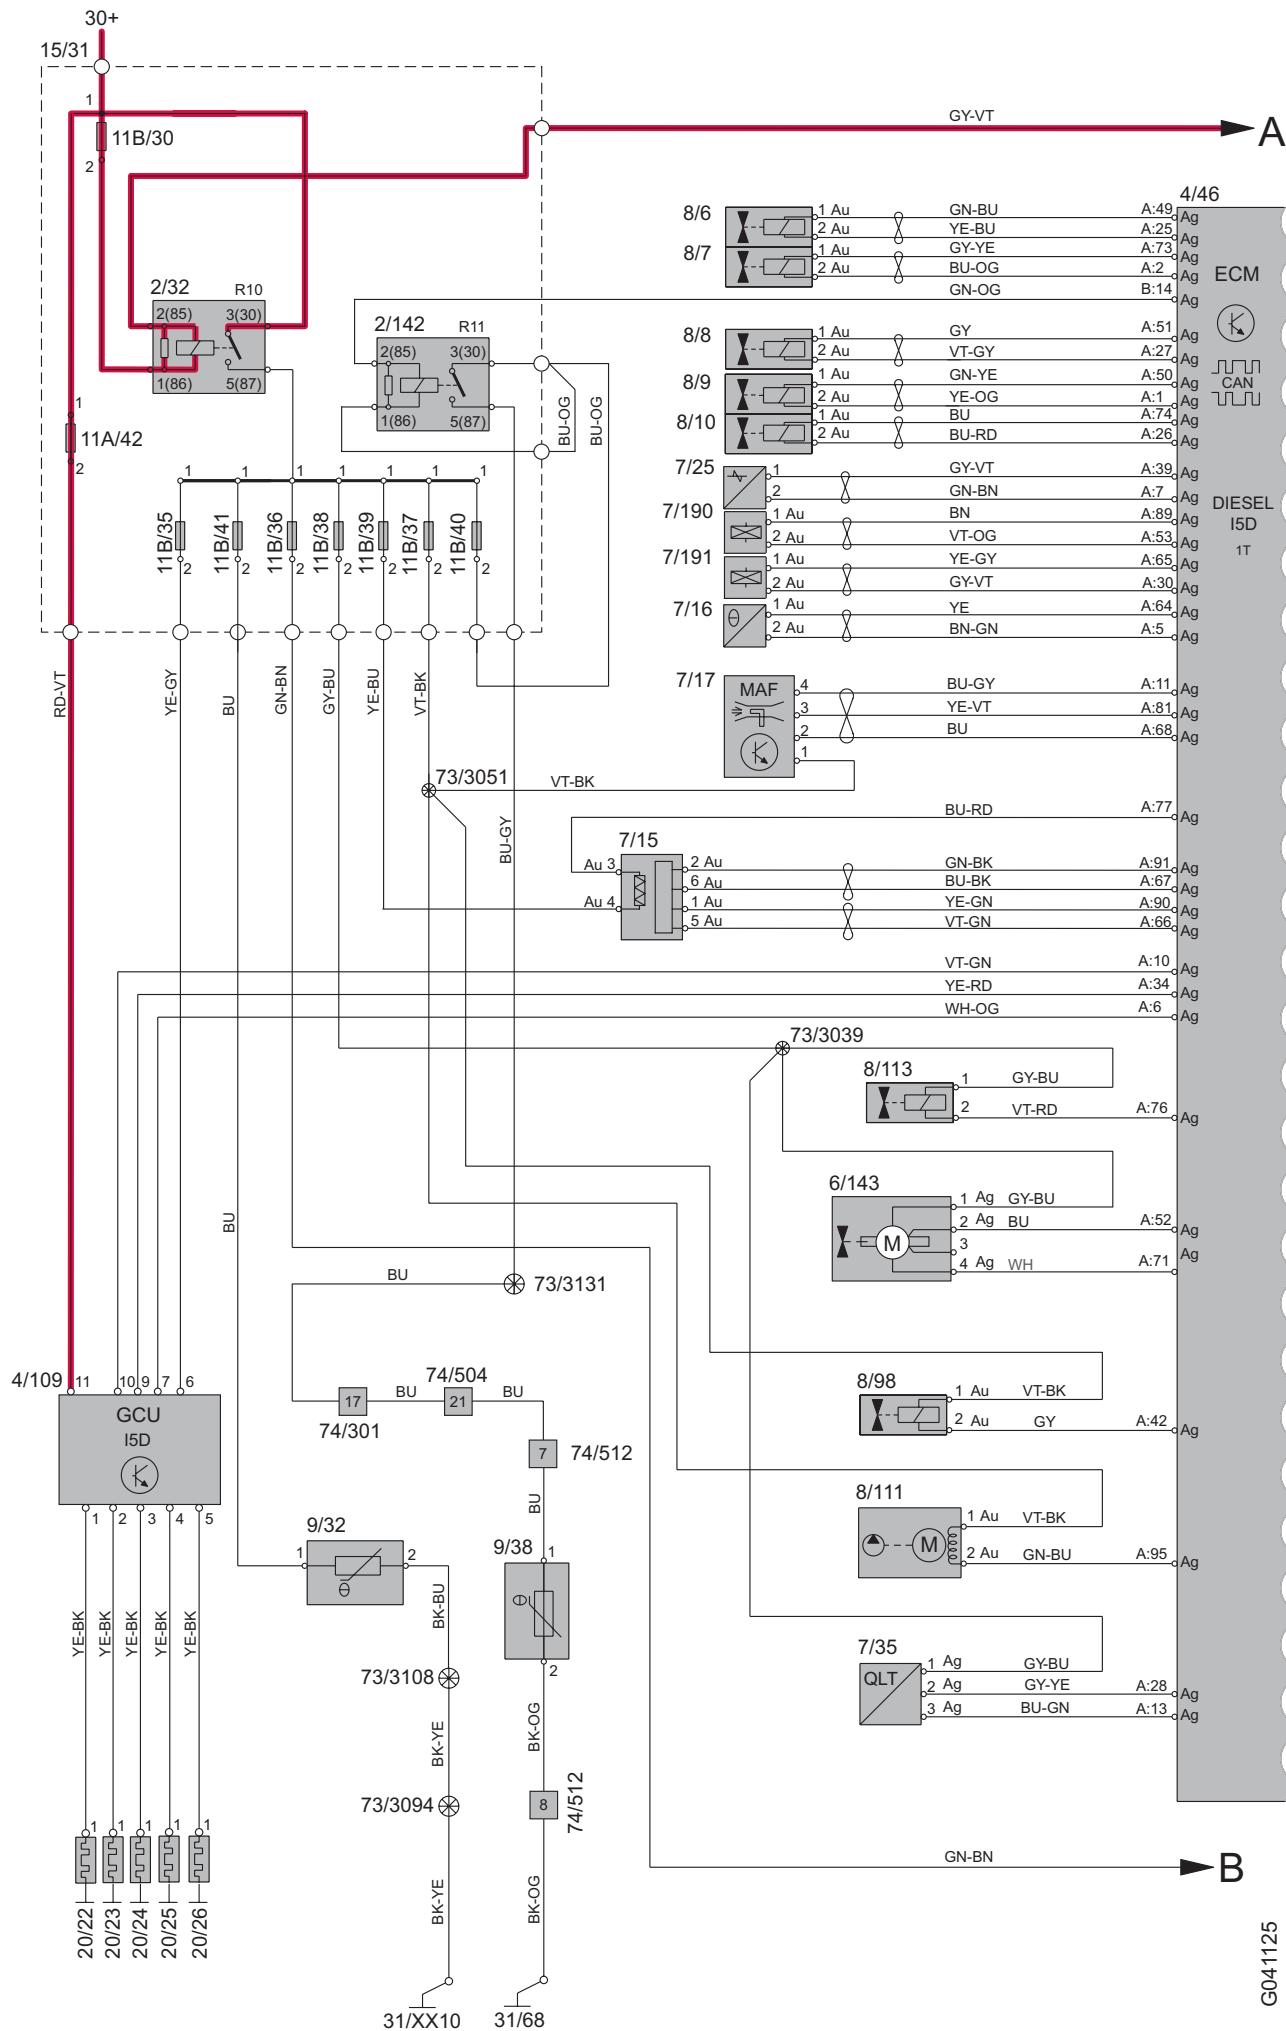

Group 23 Fuel system


Engine management system, 5-Cyl. Diesel Single Turbo 2:3

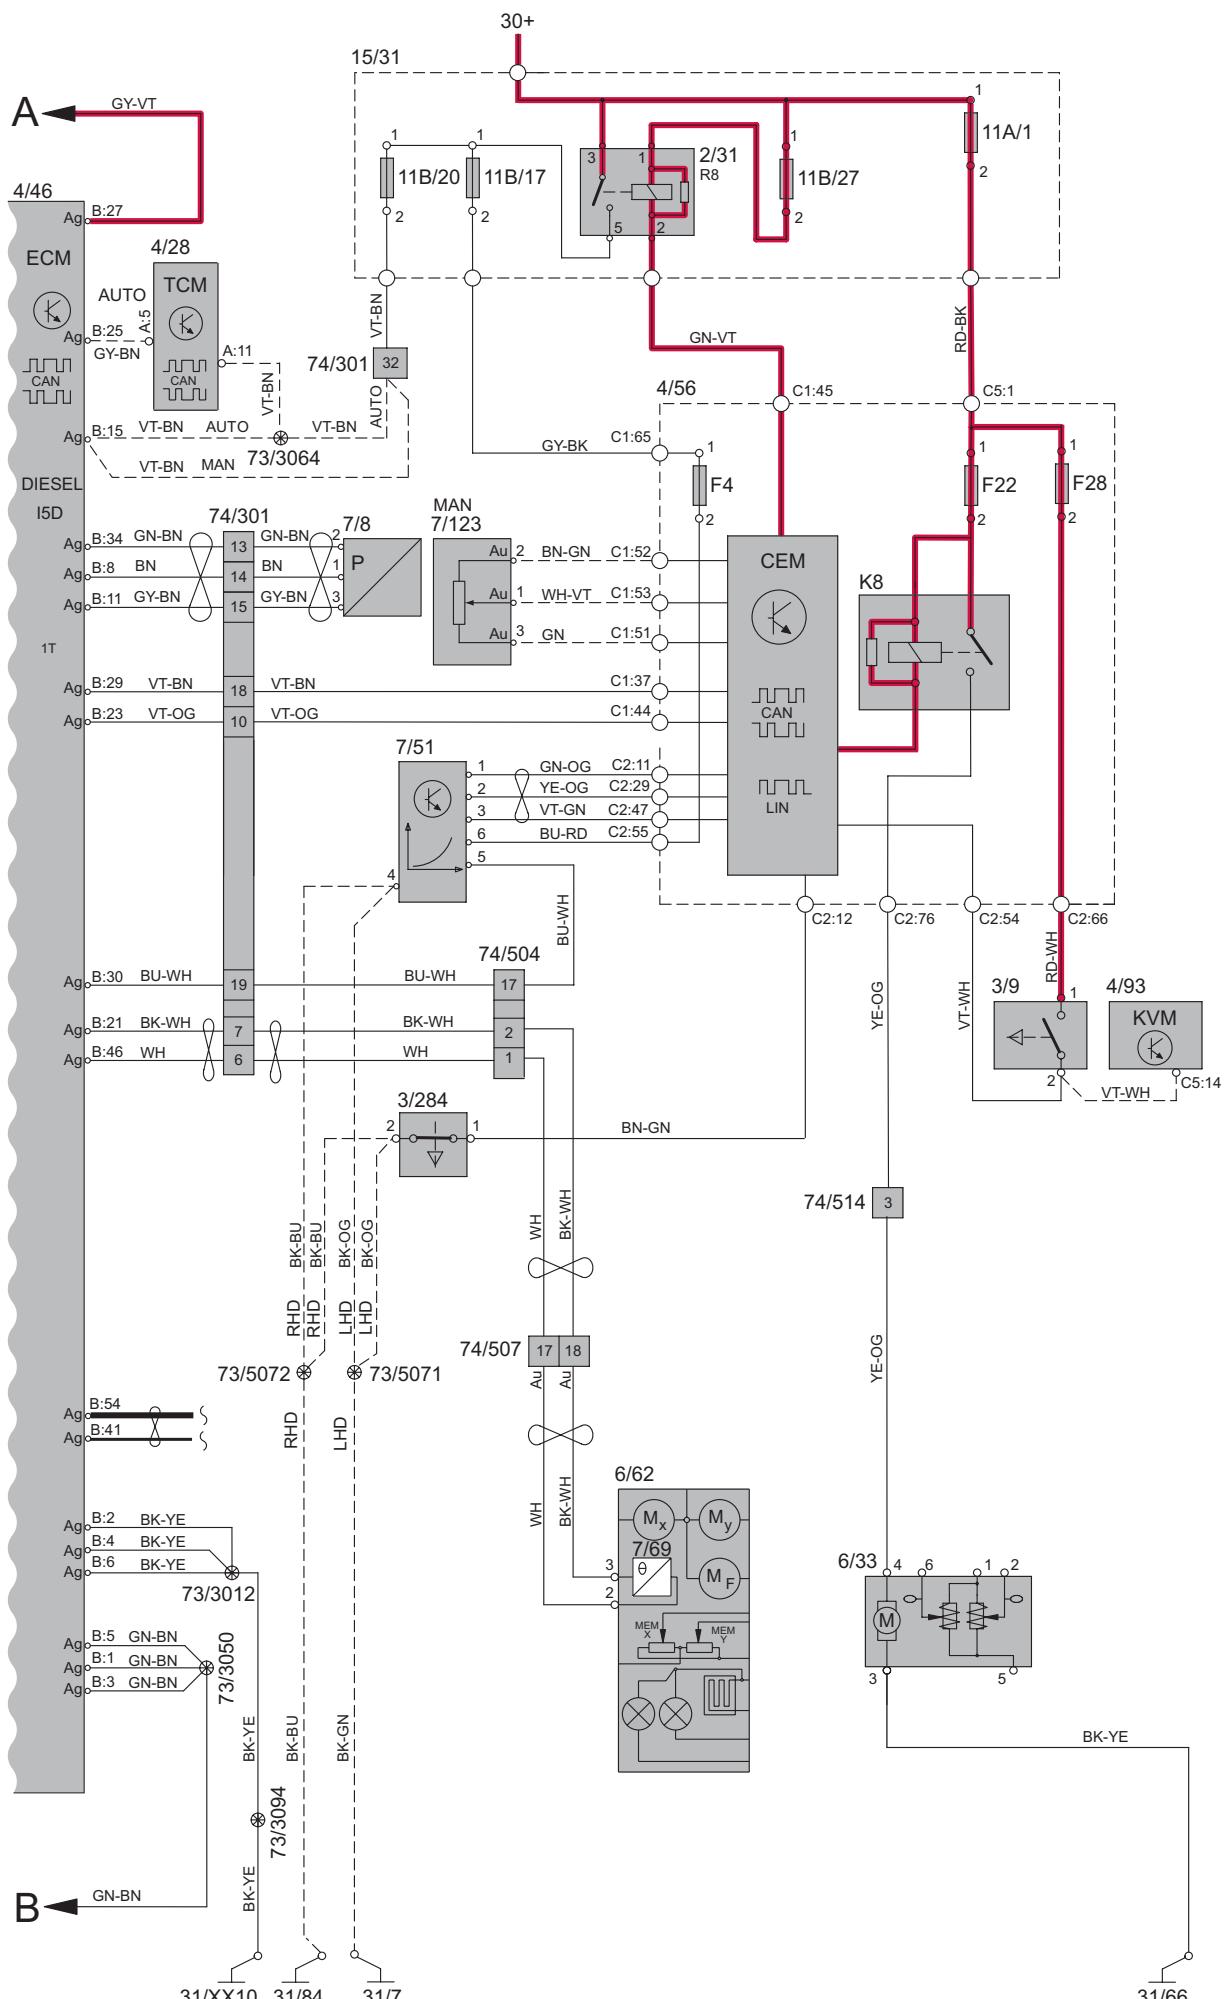

G041127

Group 23 Fuel system


Engine management system, 5-Cyl. Diesel Single Turbo 3:3

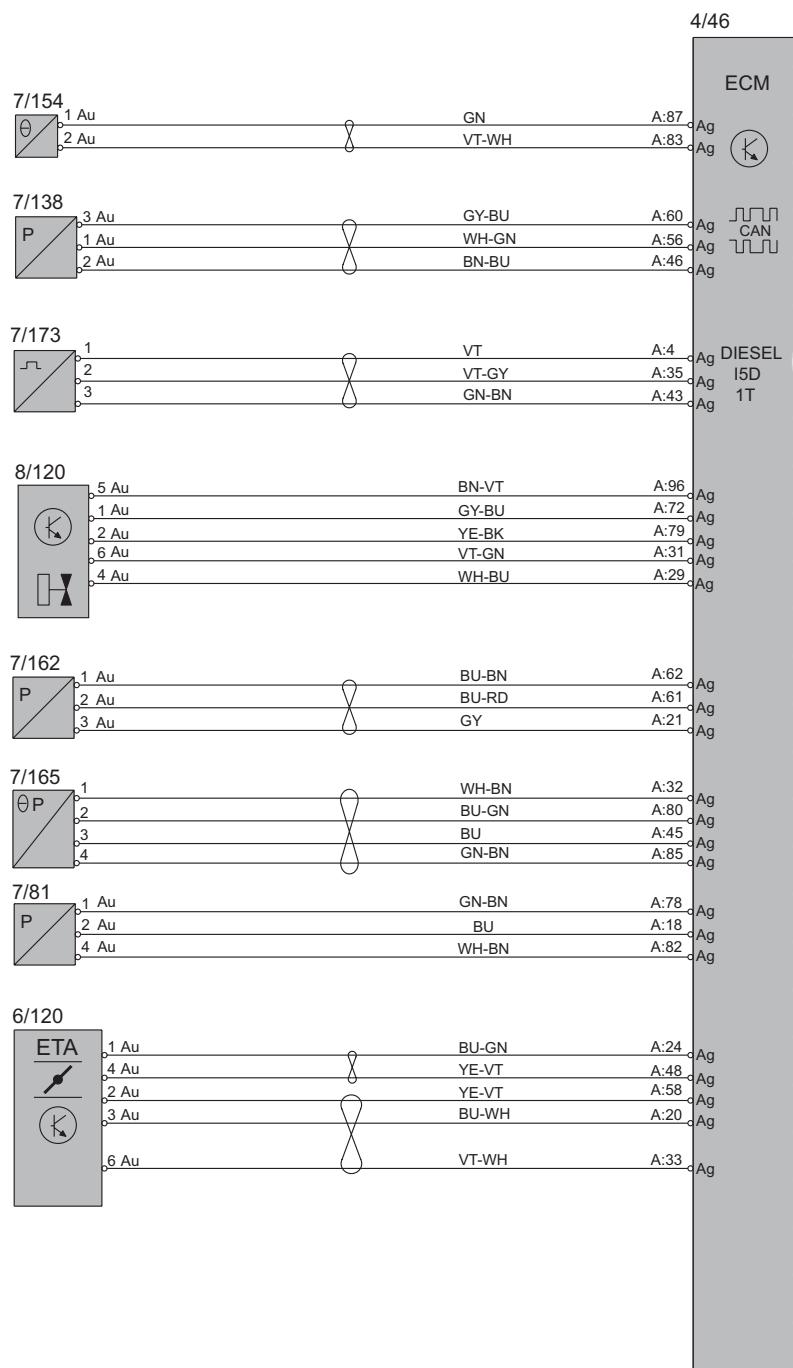

G041128

Group 23 Fuel system


Engine management system, 5-Cyl. Diesel Twin Turbo 1:3

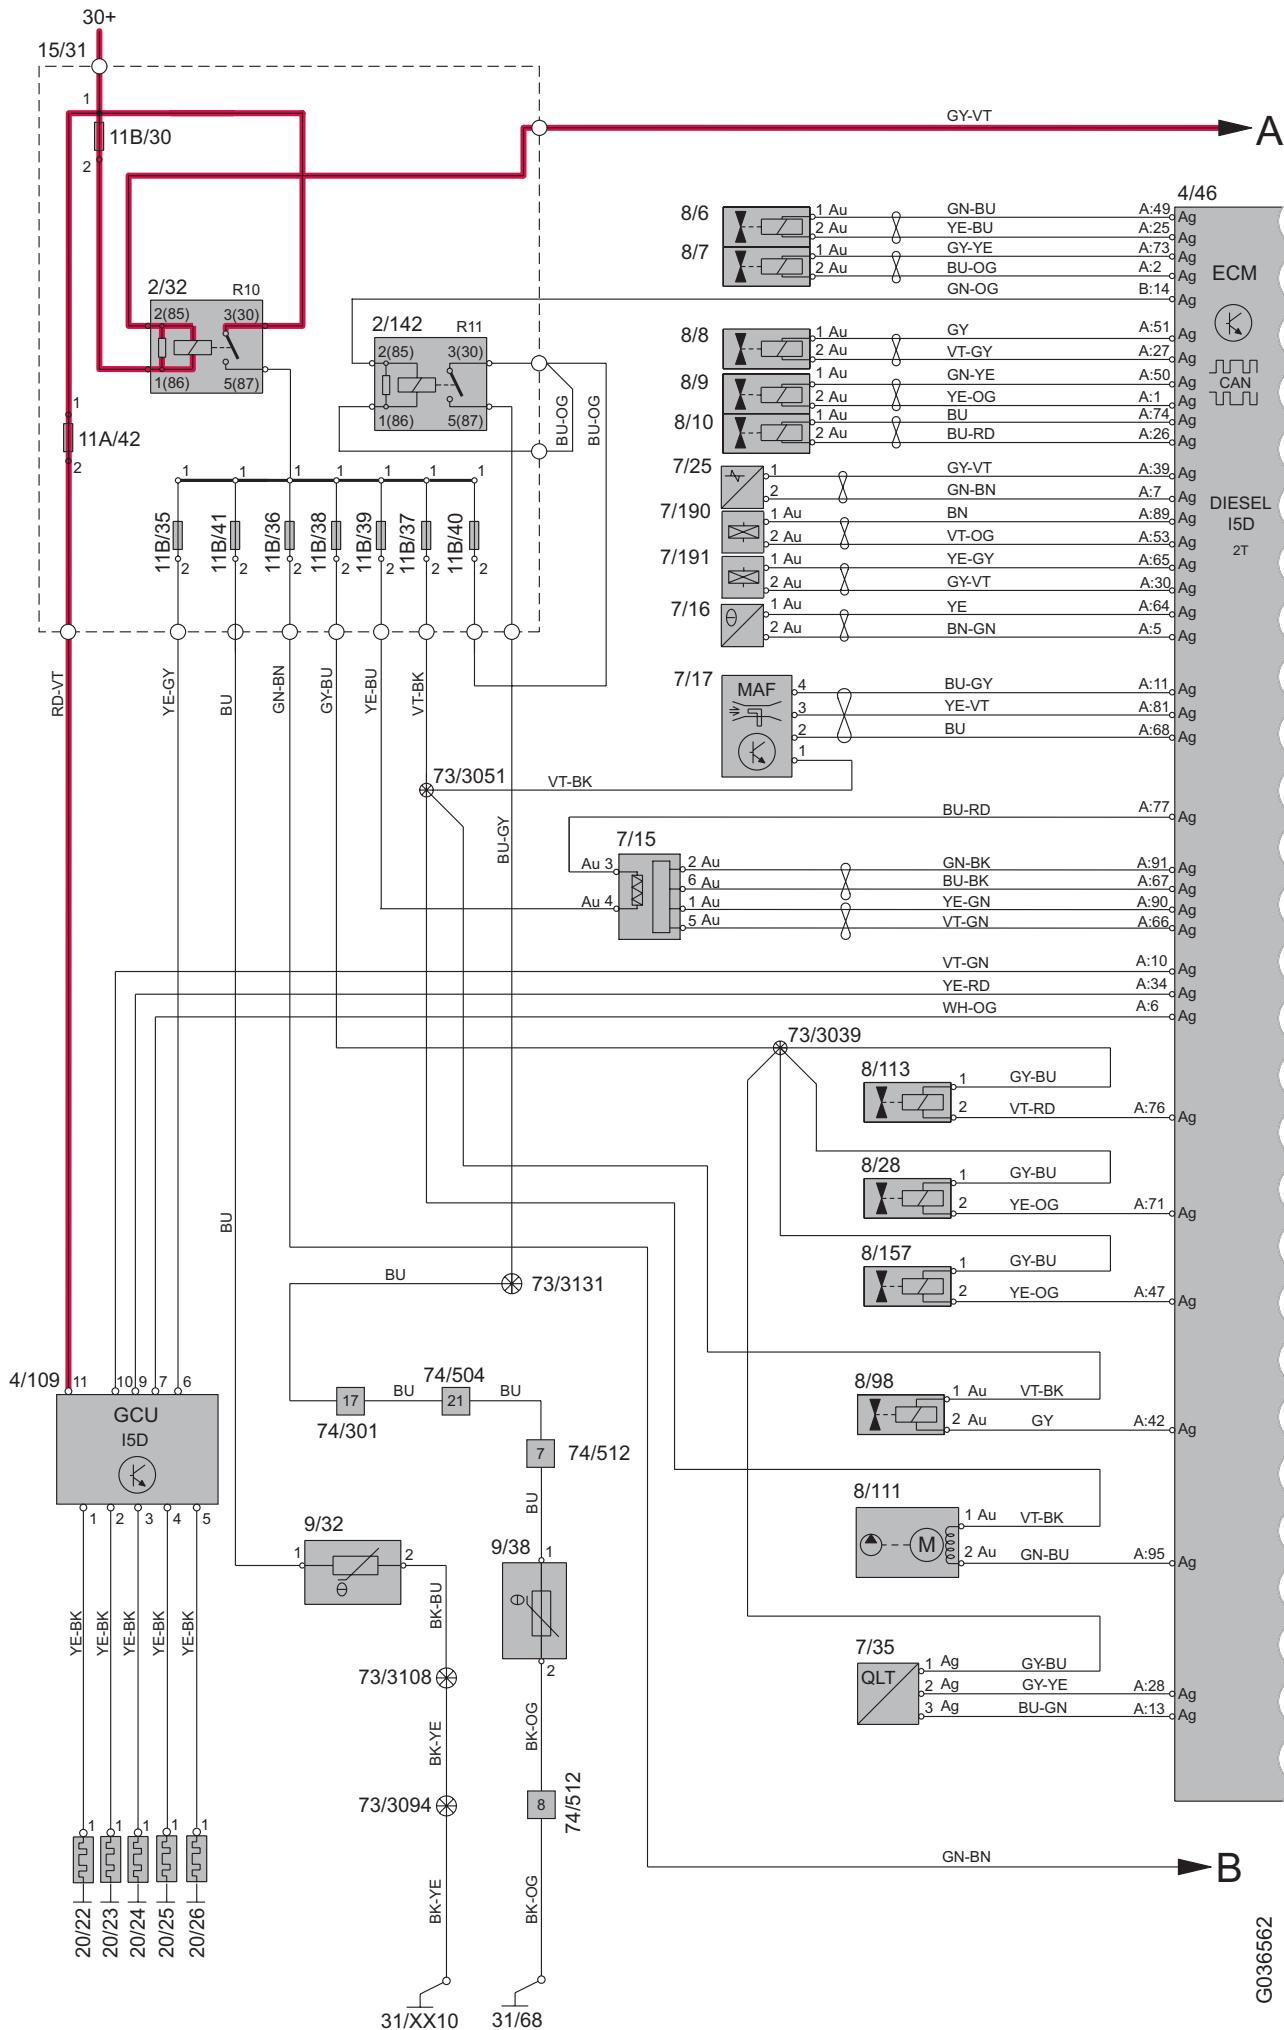

G036562

Group 23 Fuel system

Engine management system, 5-Cyl. Diesel Twin Turbo 2:3

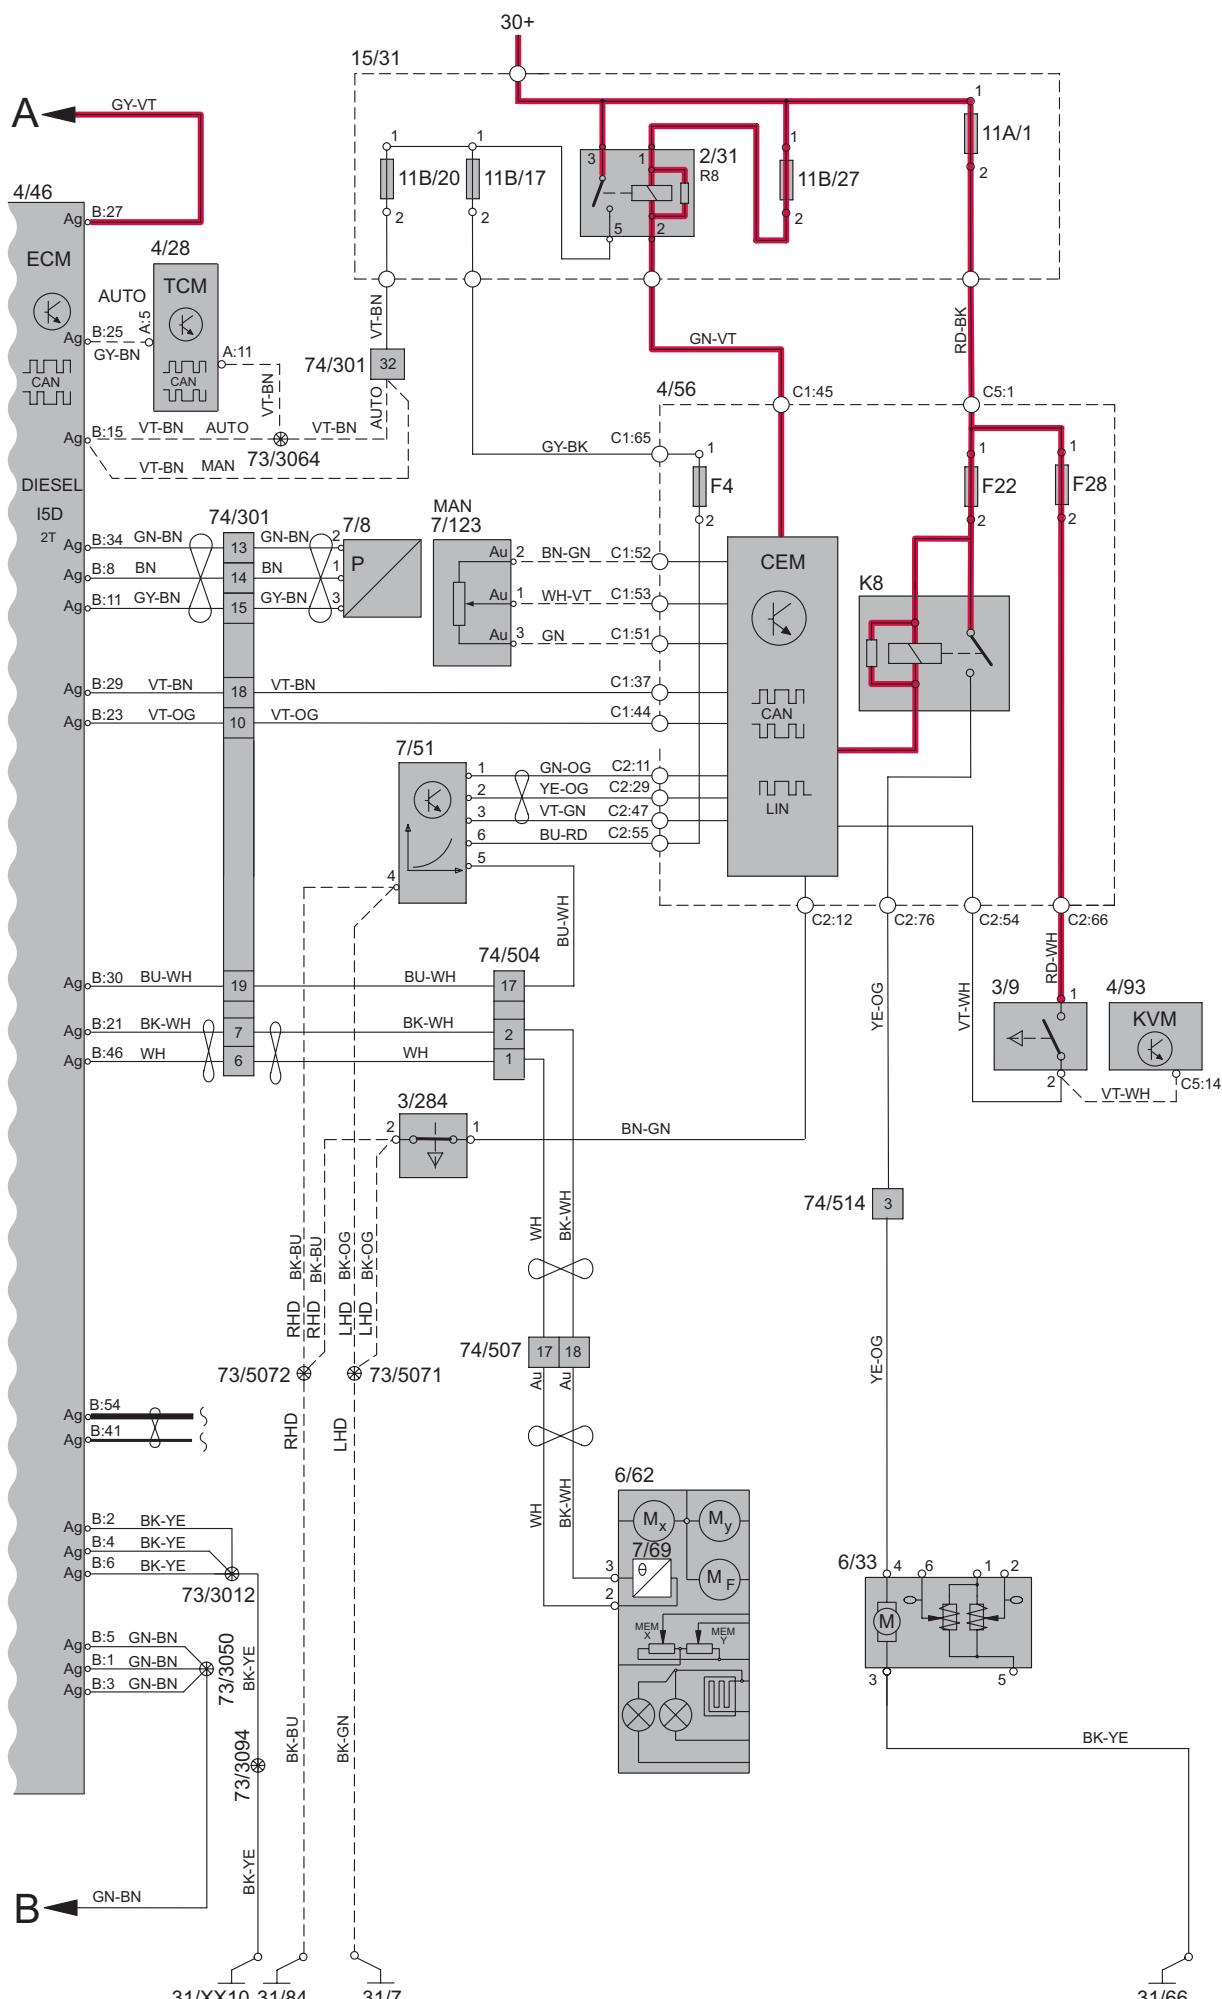


G036563

Group 23 Fuel system

Engine management system, 5-Cyl. Diesel Twin Turbo 3:3


4/46

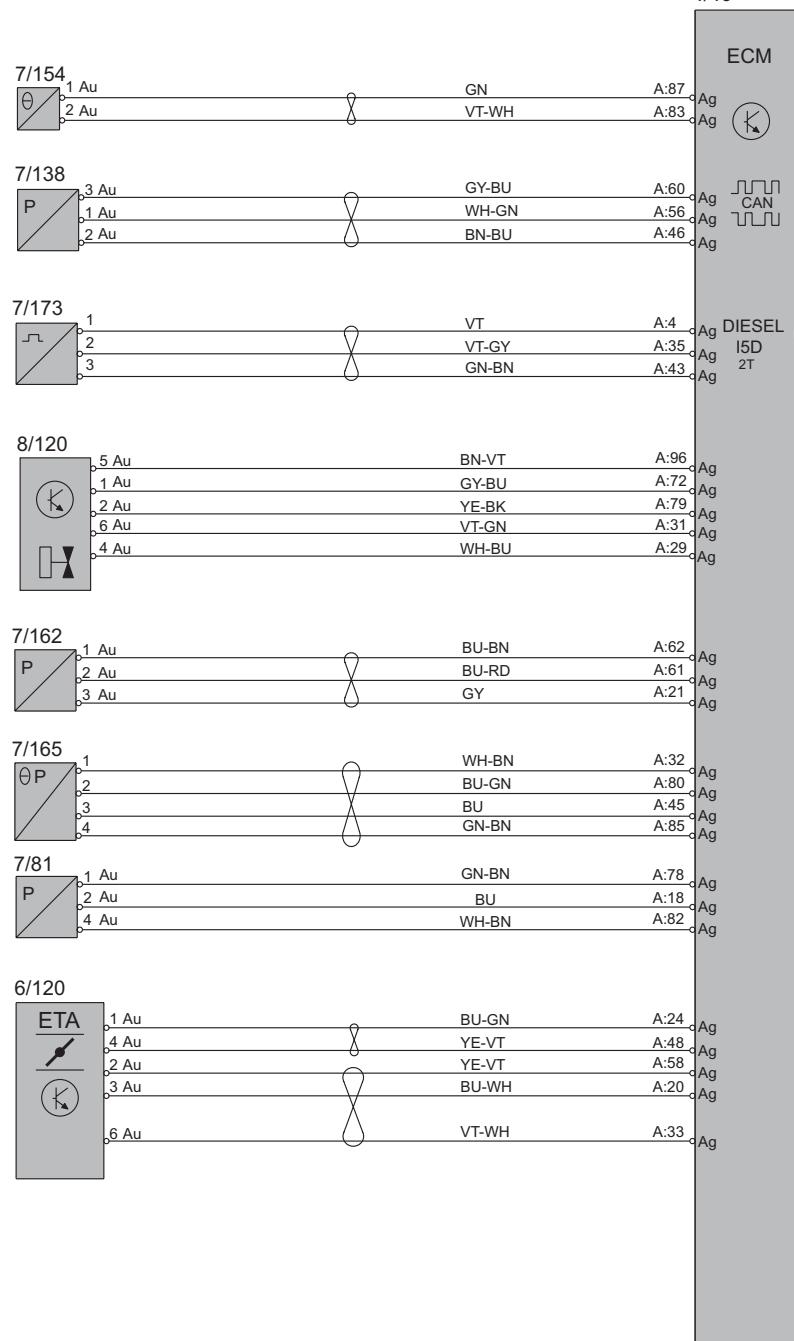

G036565


Group 26 Cooling system

Cooling fan 4-Cyl.

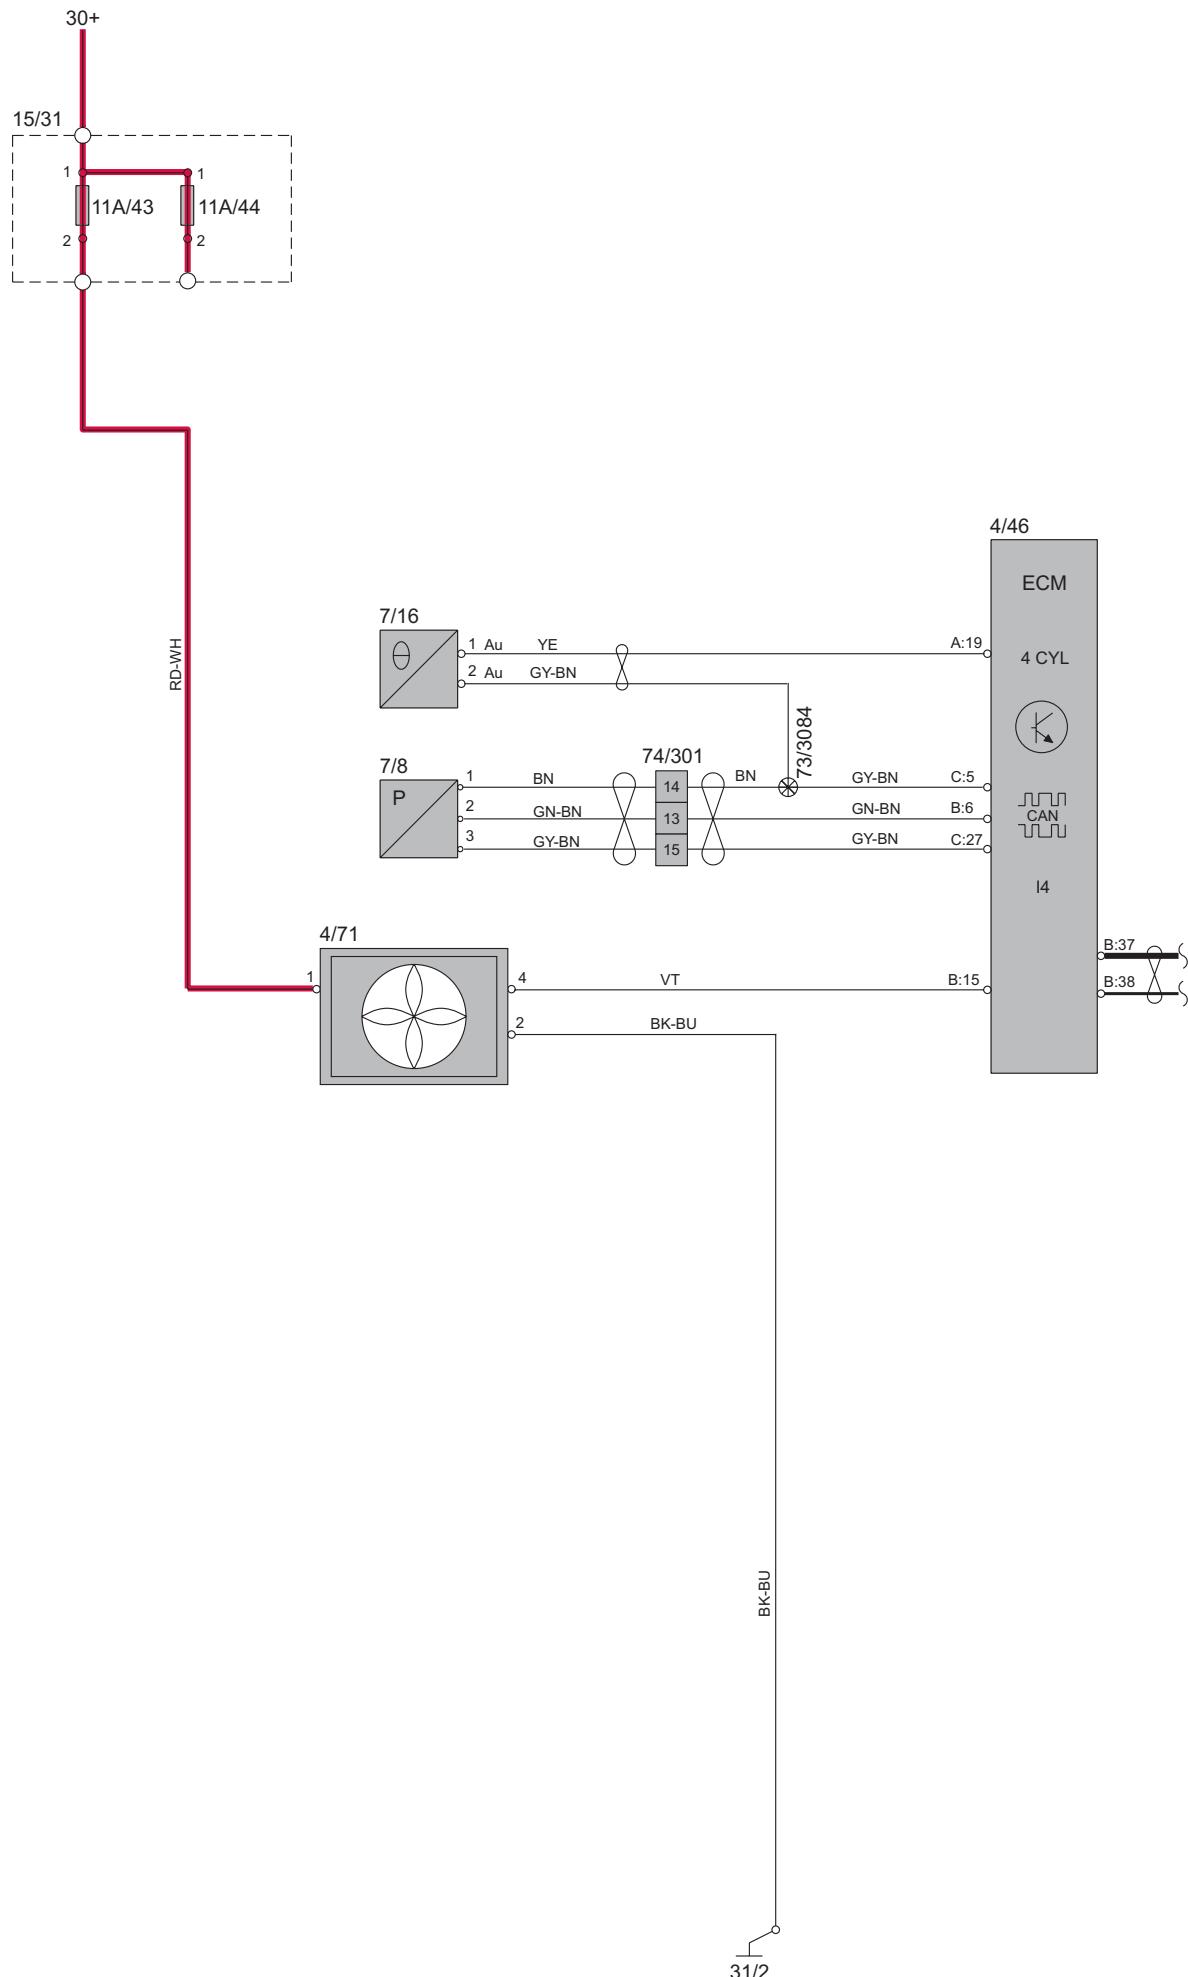


Group 26 Cooling system

Cooling fan, 5-Cyl. Turbo & 6-Cyl.

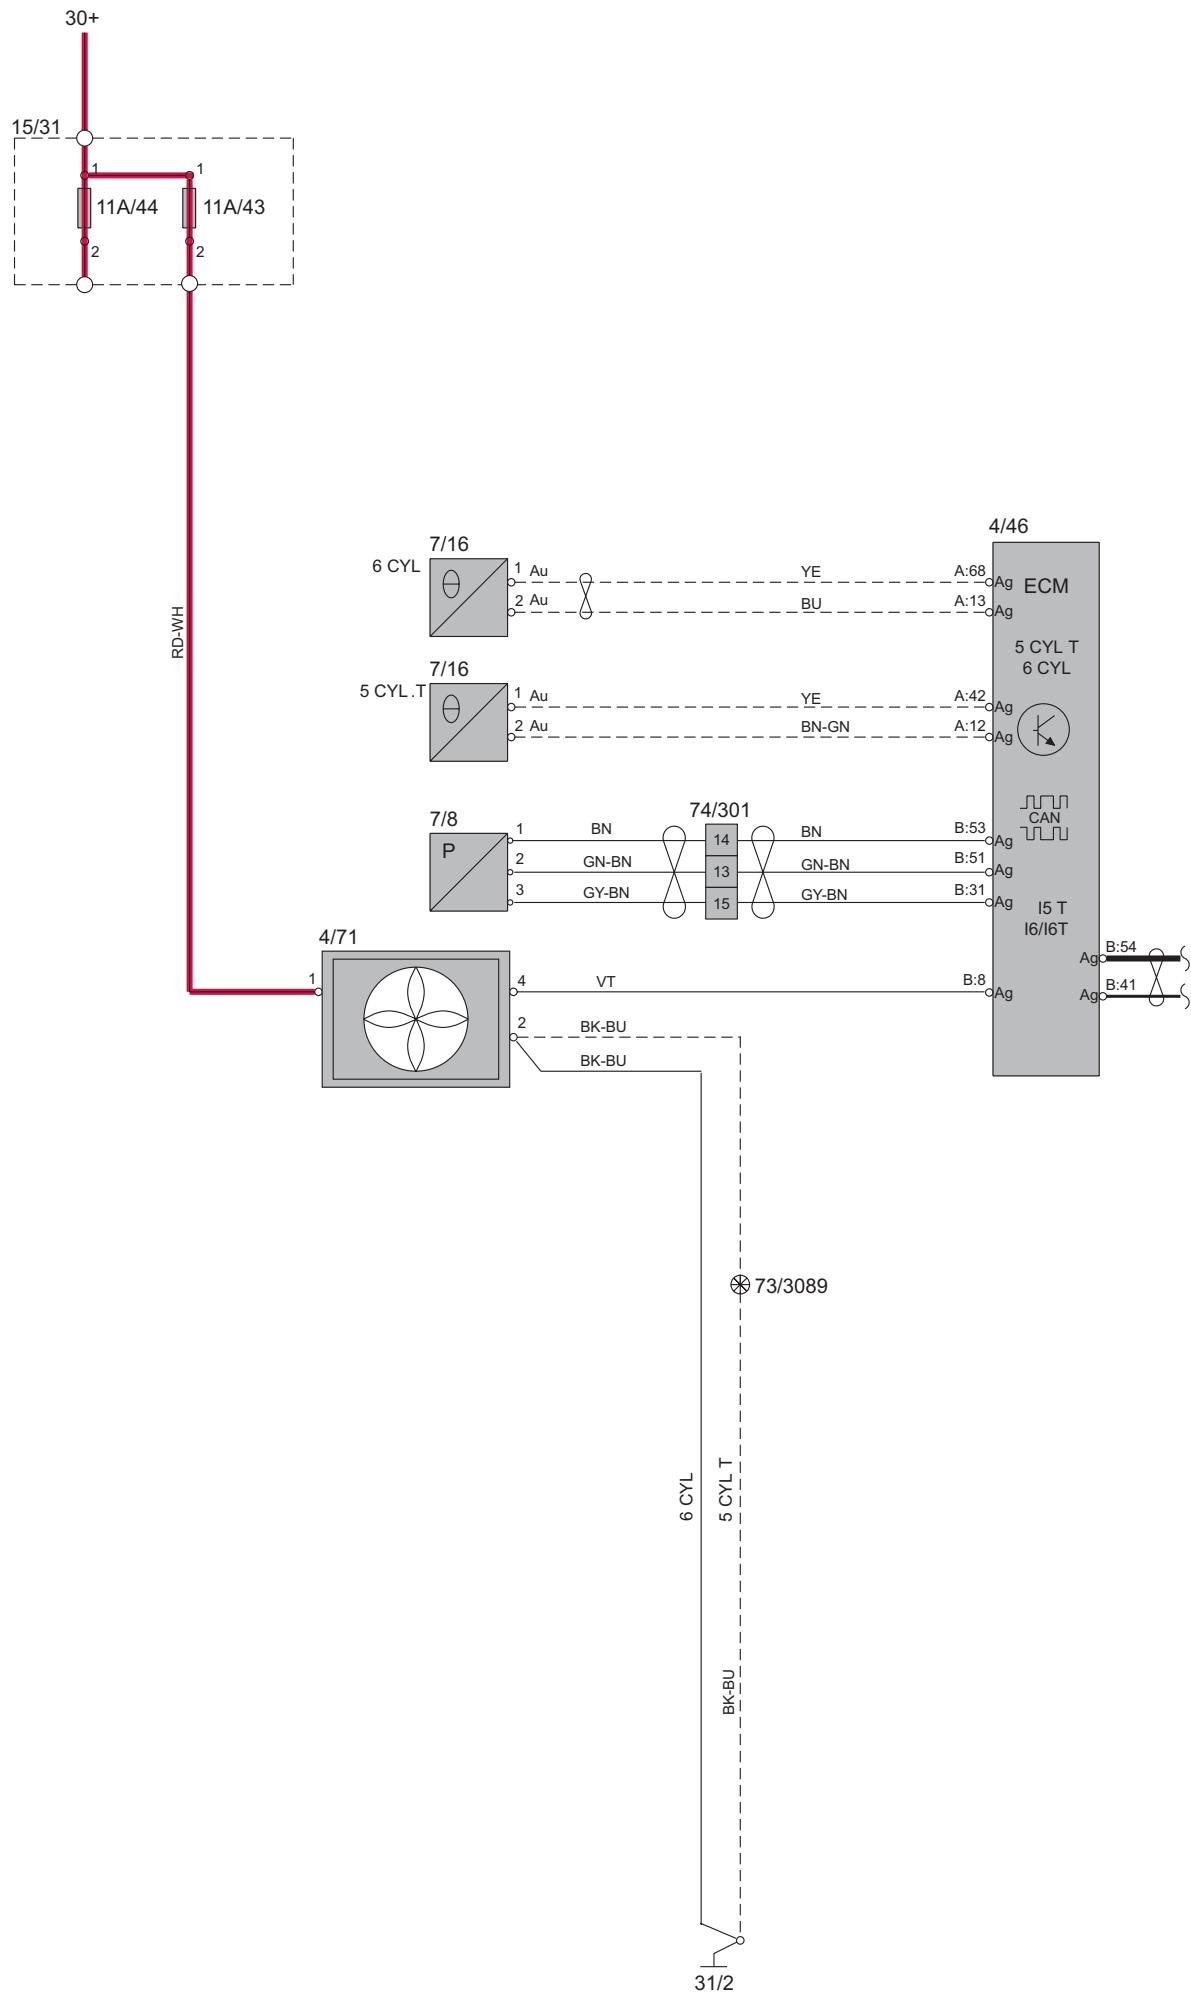


G029252

Group 26 Cooling system Cooling fan, 4-Cyl. Diesel

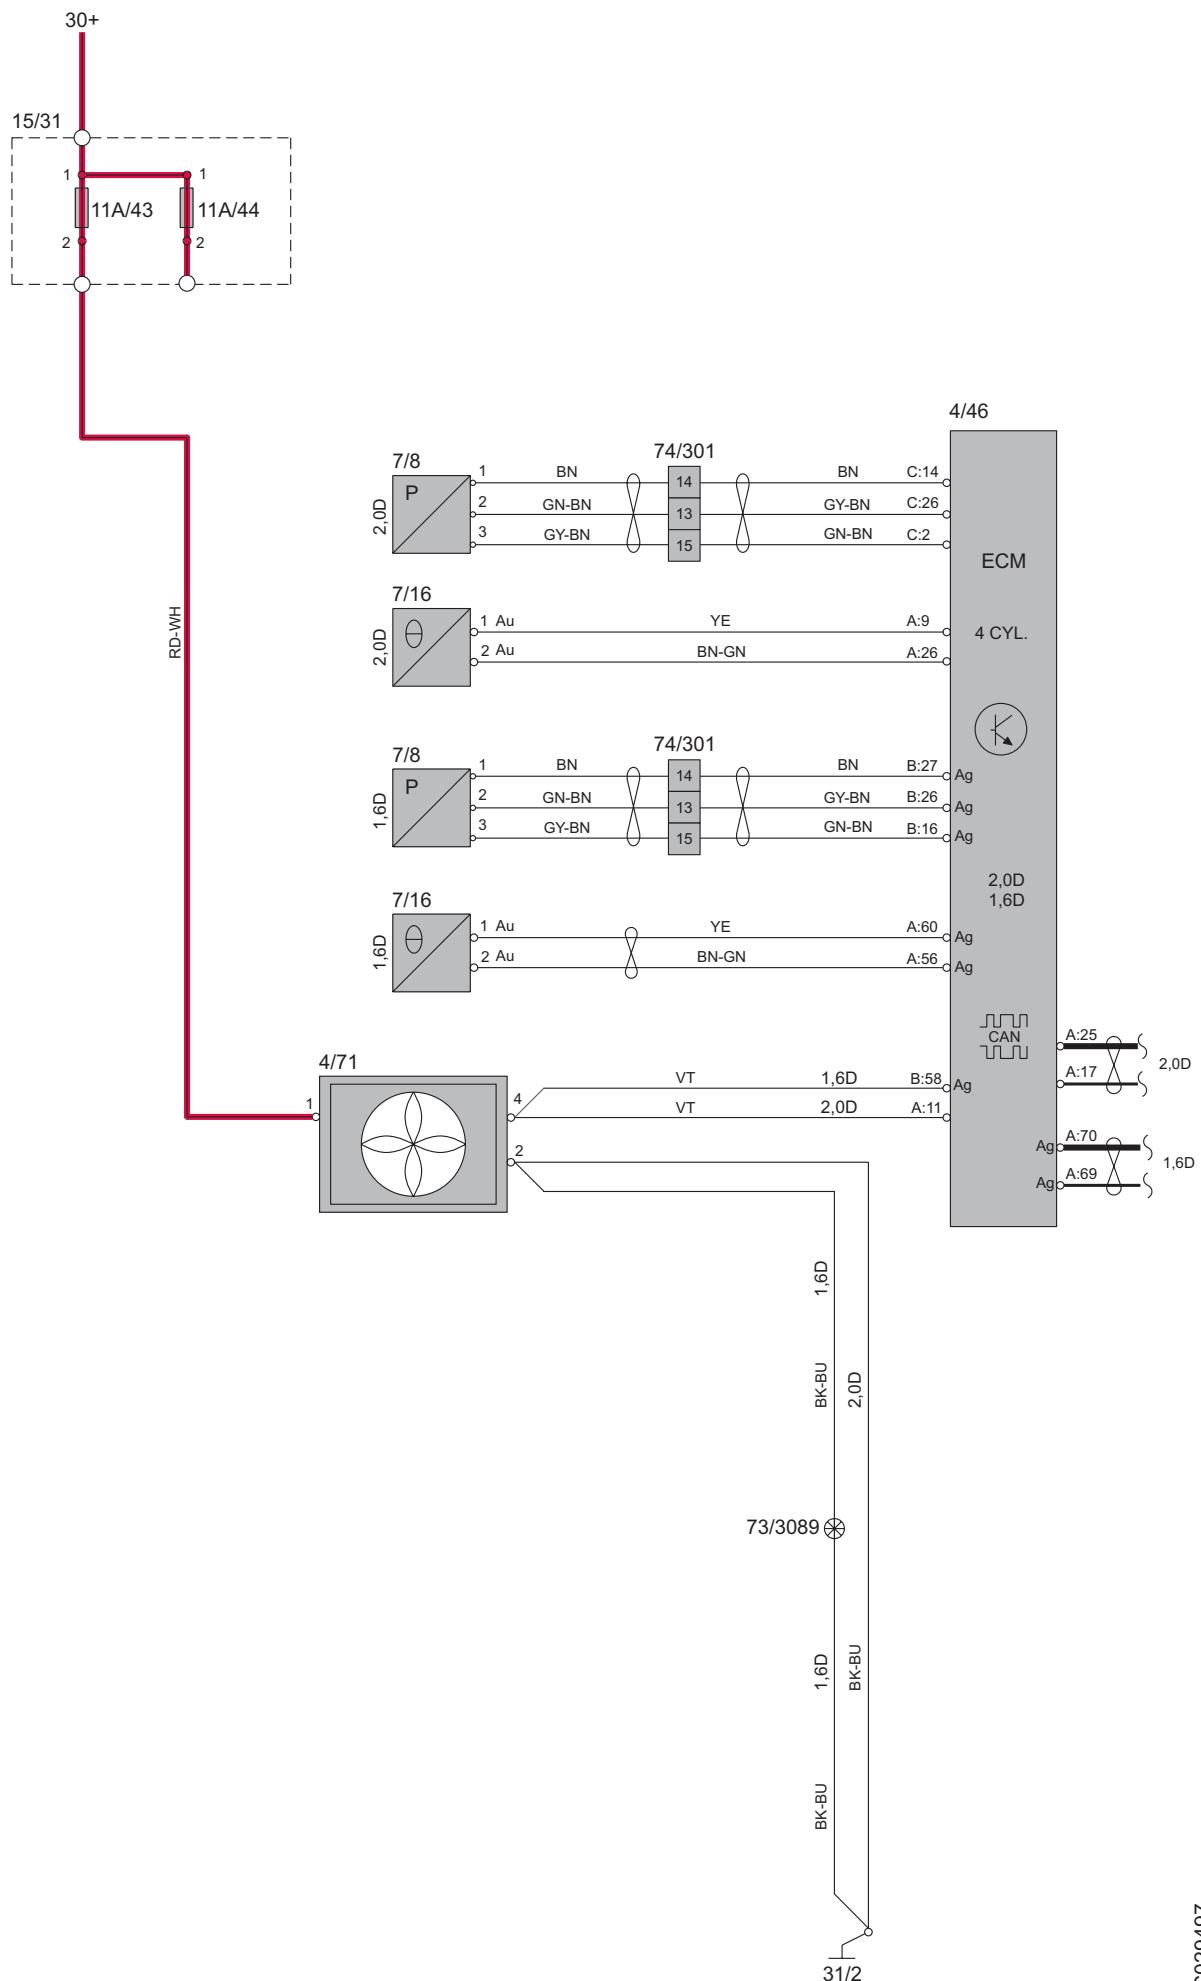

Group 26 Cooling system


Cooling fan, 5-Cyl. Diesel

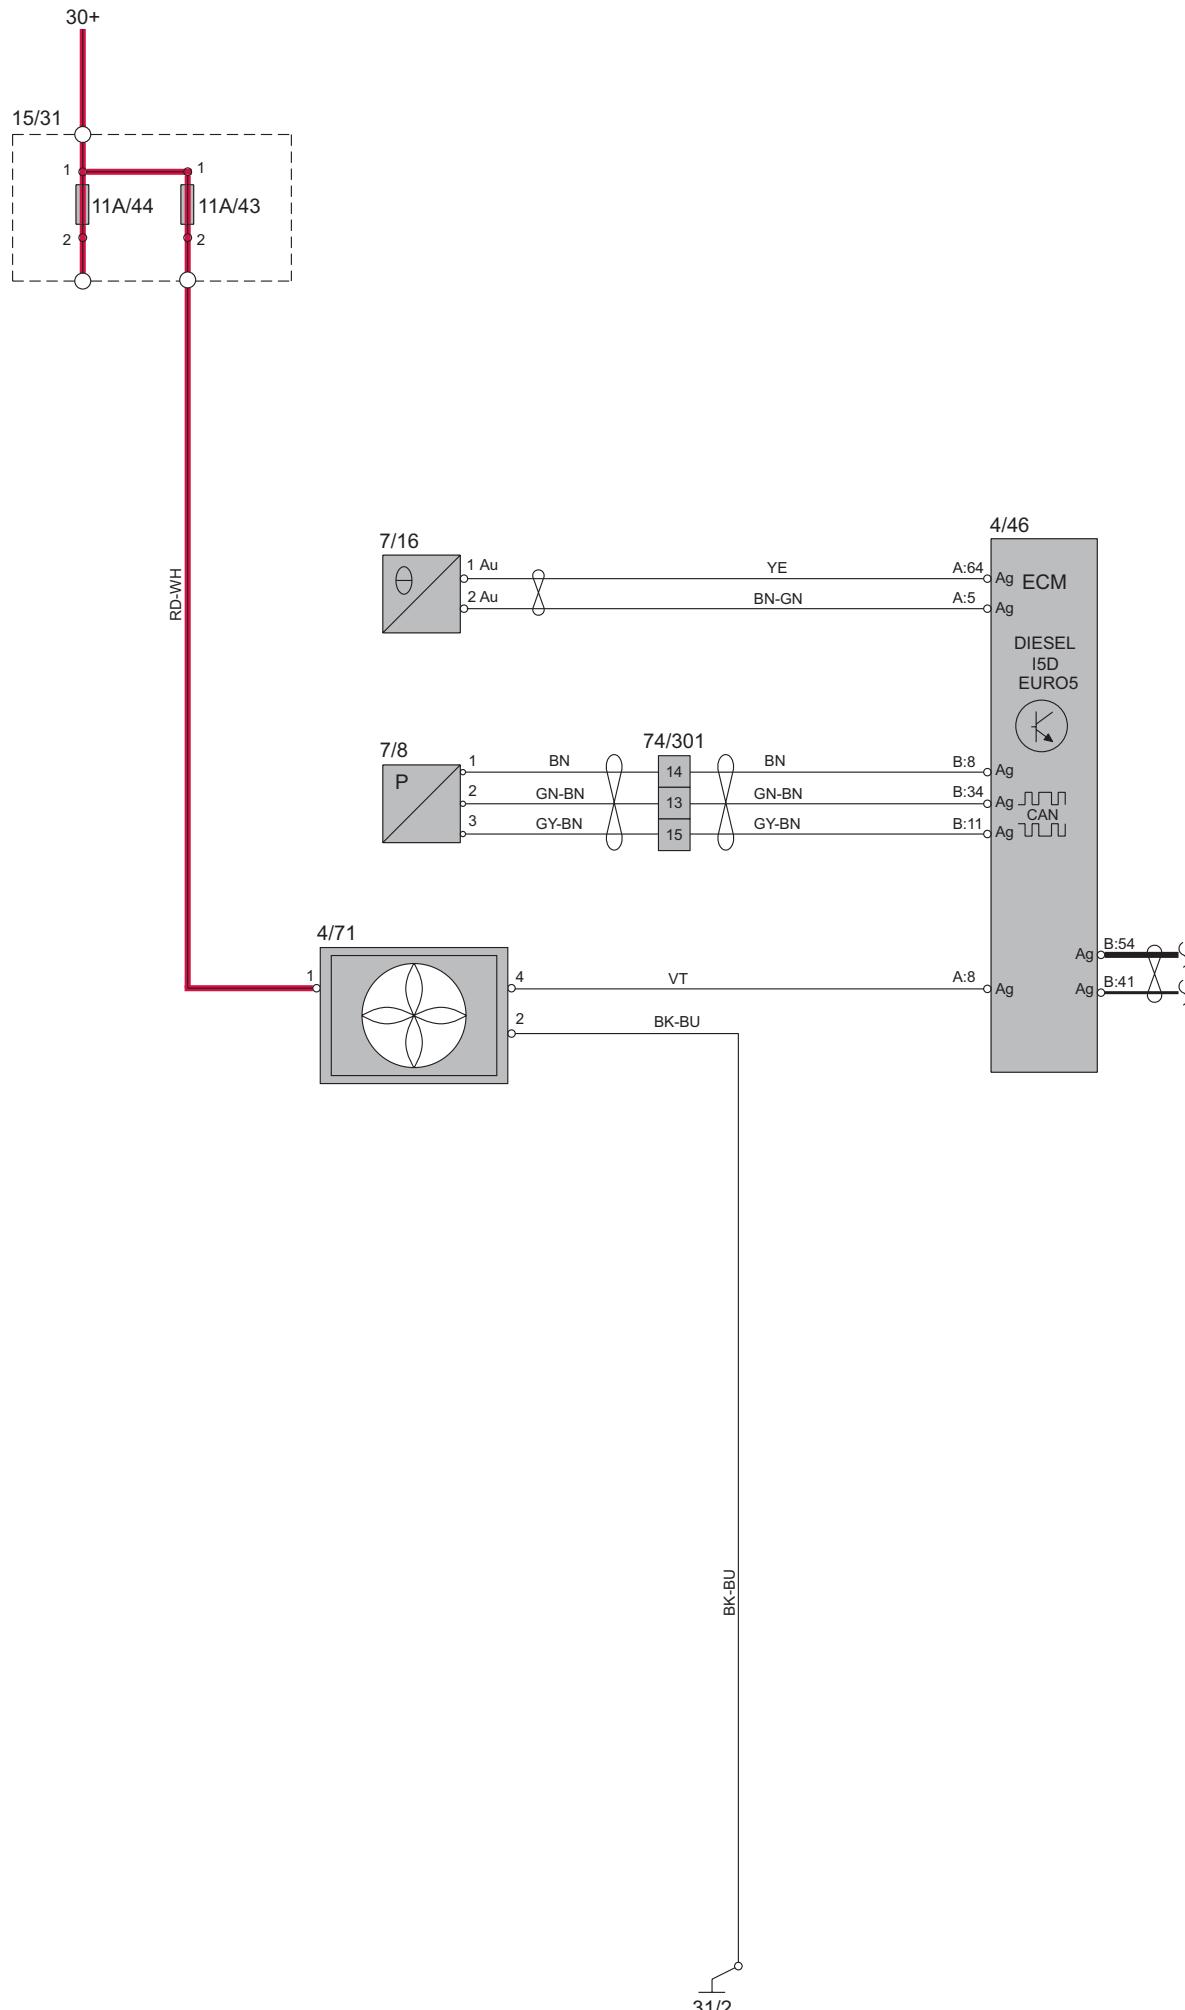

G036573

Group 26 Cooling system


Cooling fan 8-Cyl.

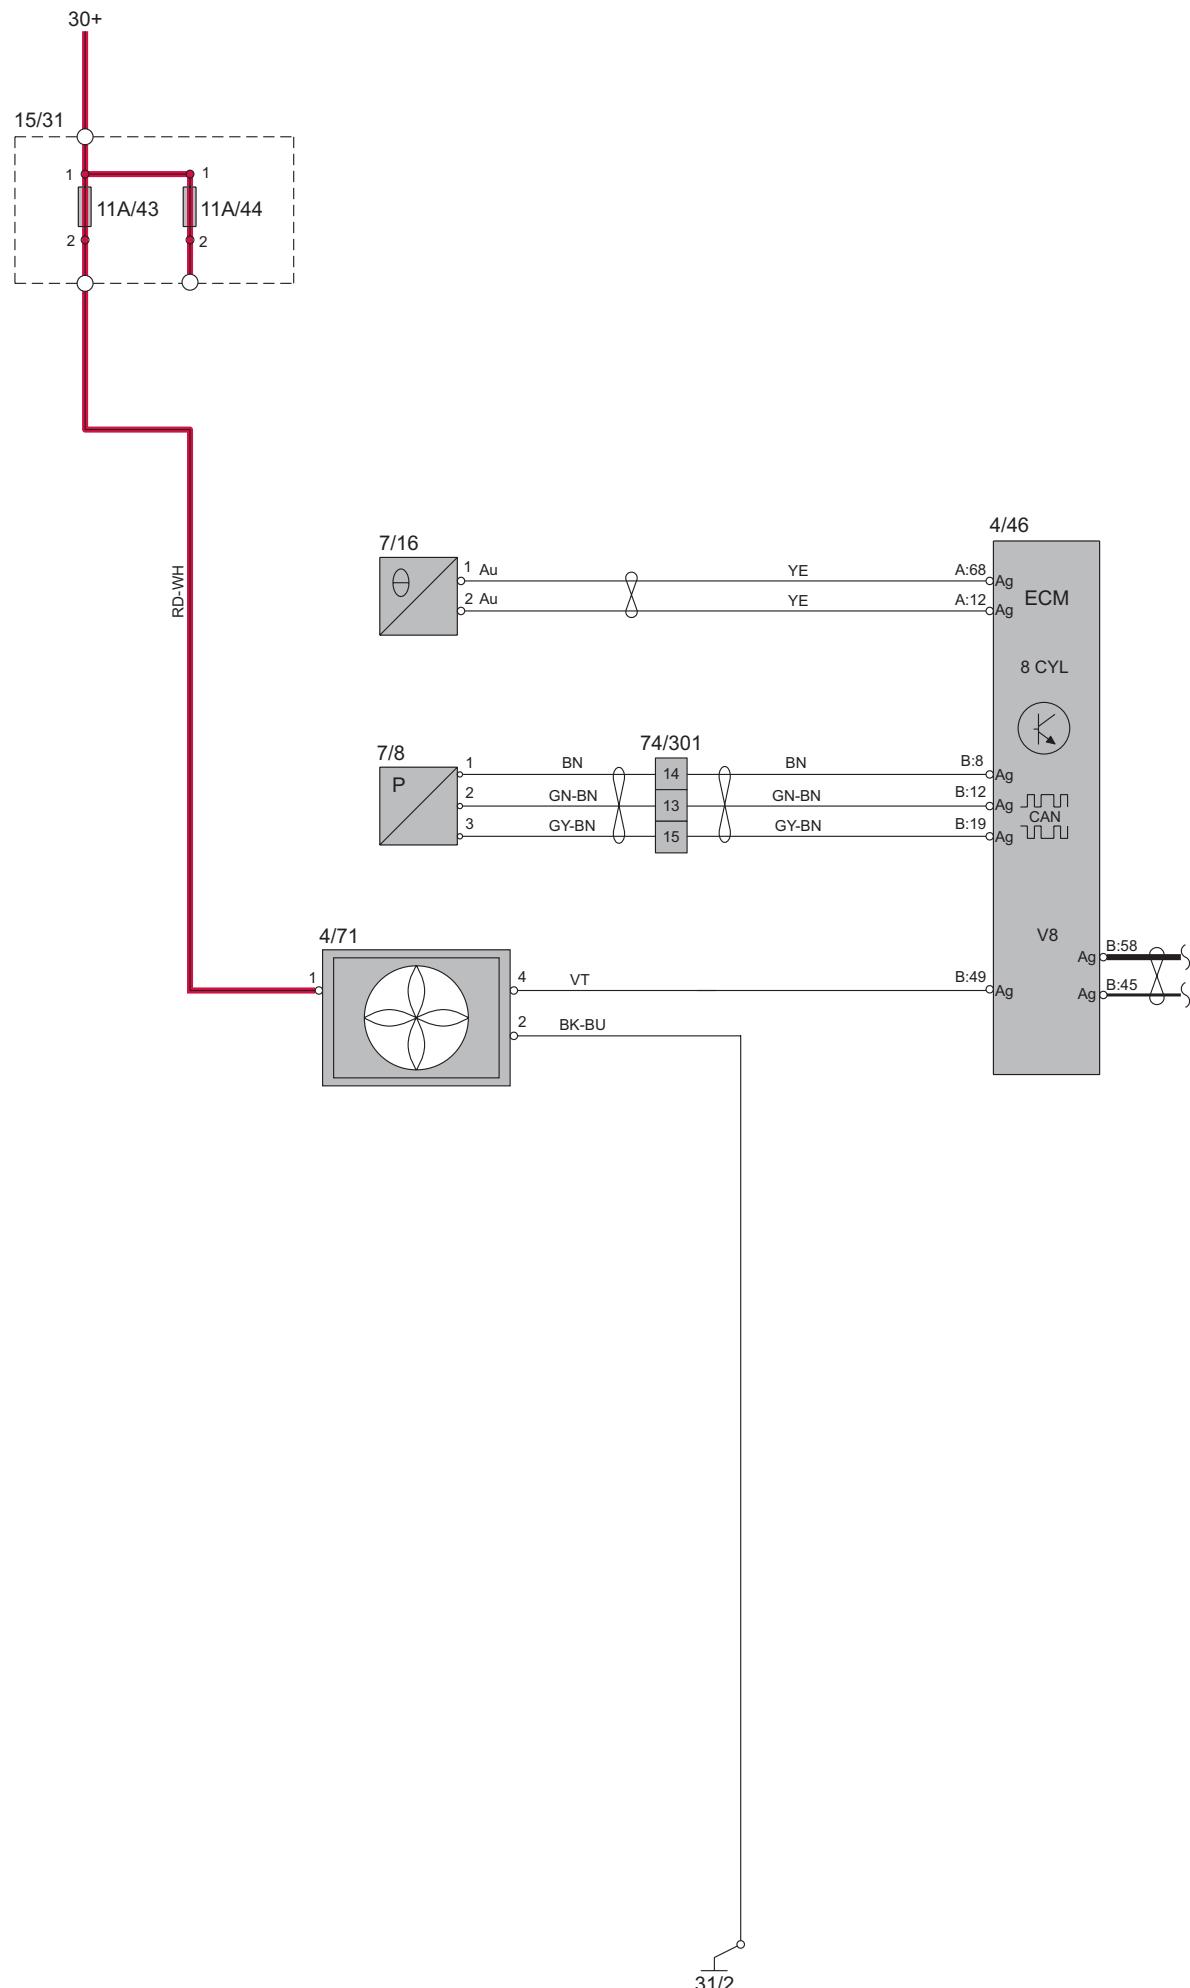


G029256

Group 27 Engine controls

Cruise control 4-Cyl.

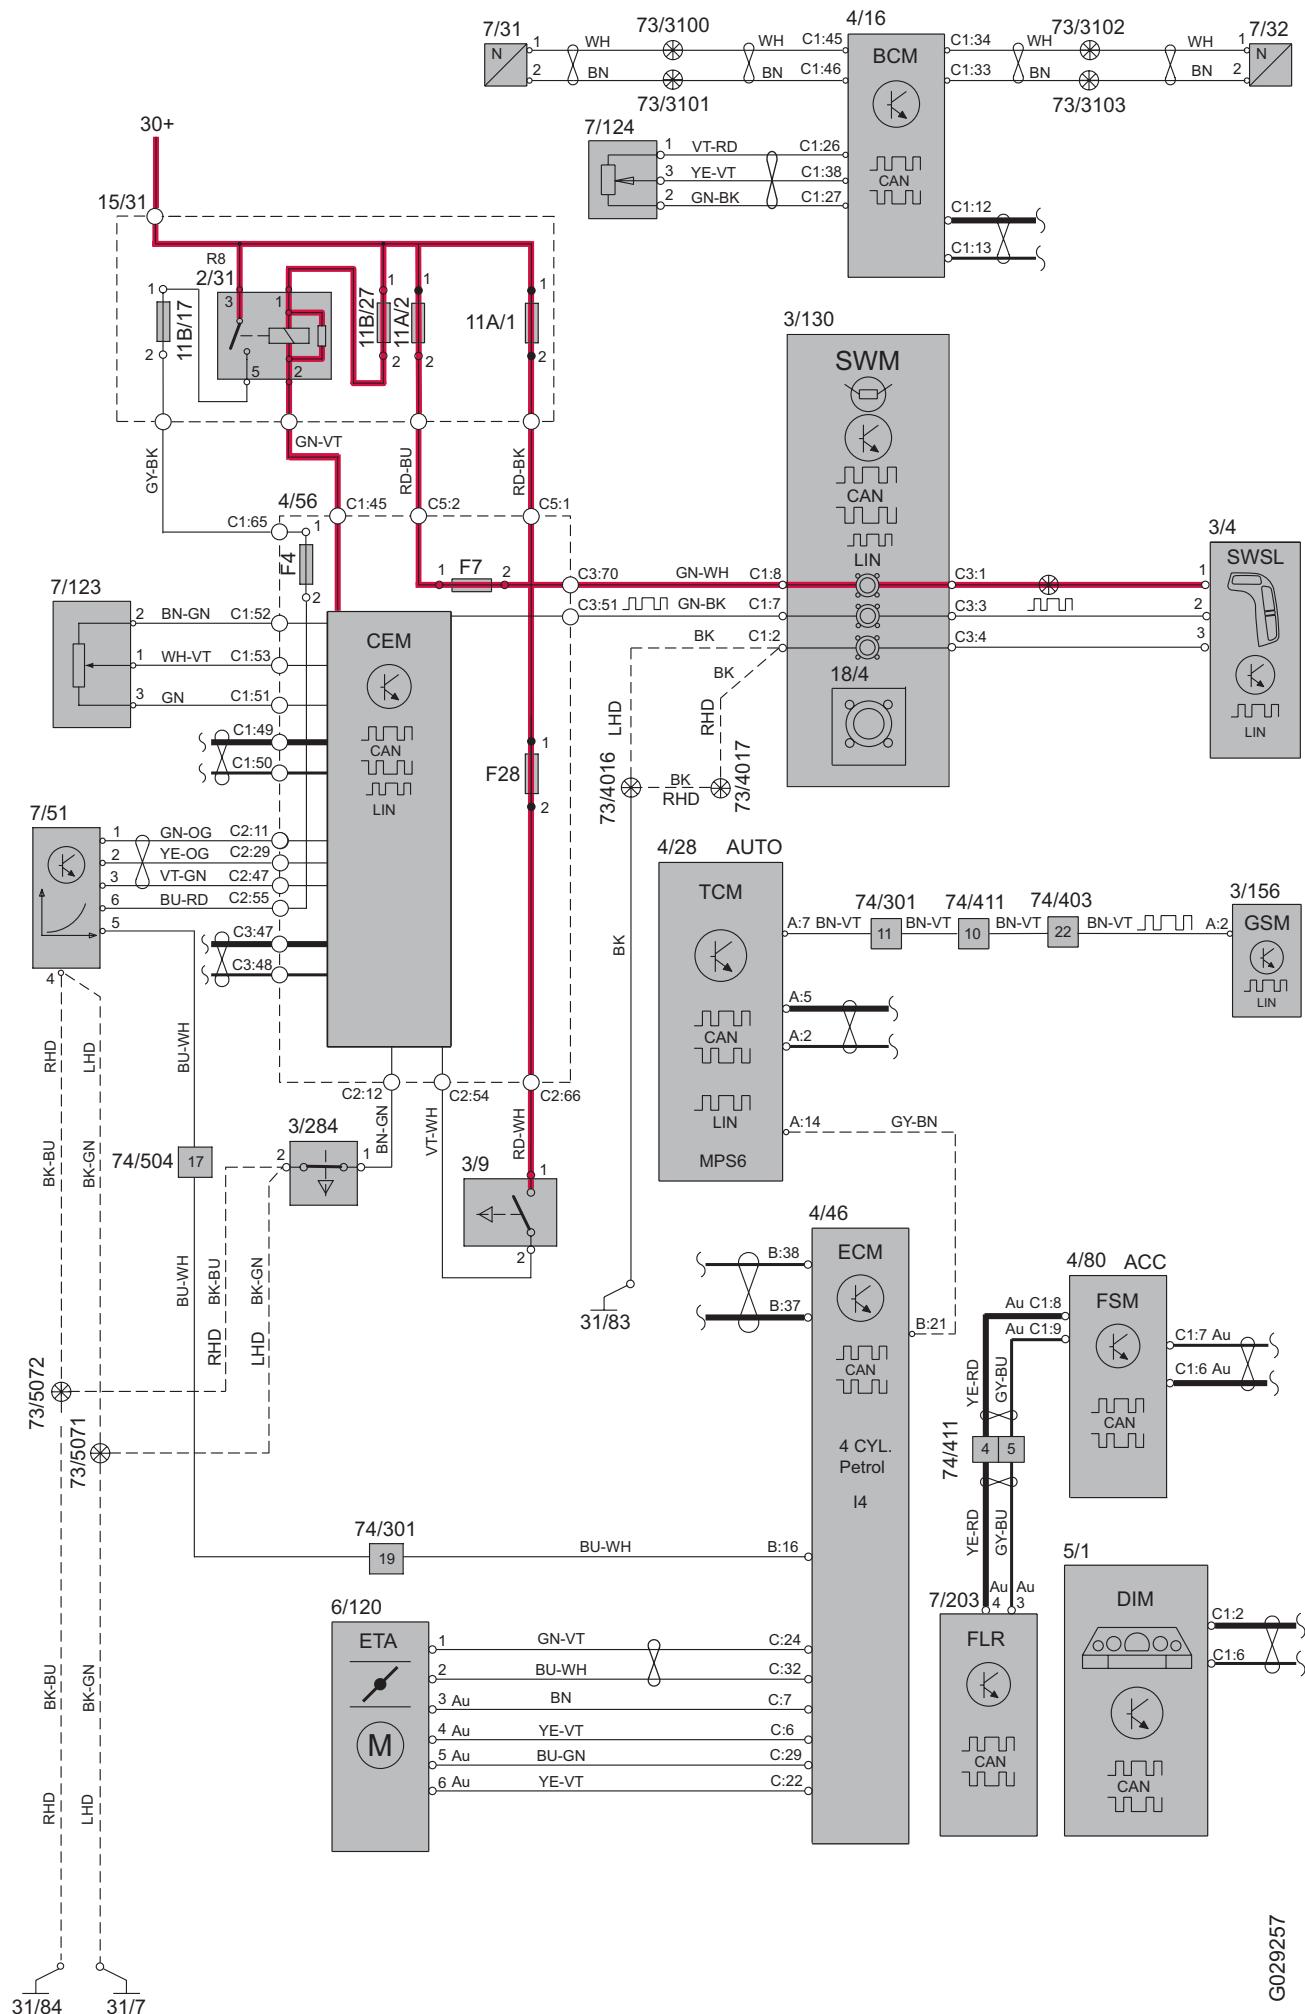


Group 27 Engine controls Cruise control 4-Cyl. Diesel

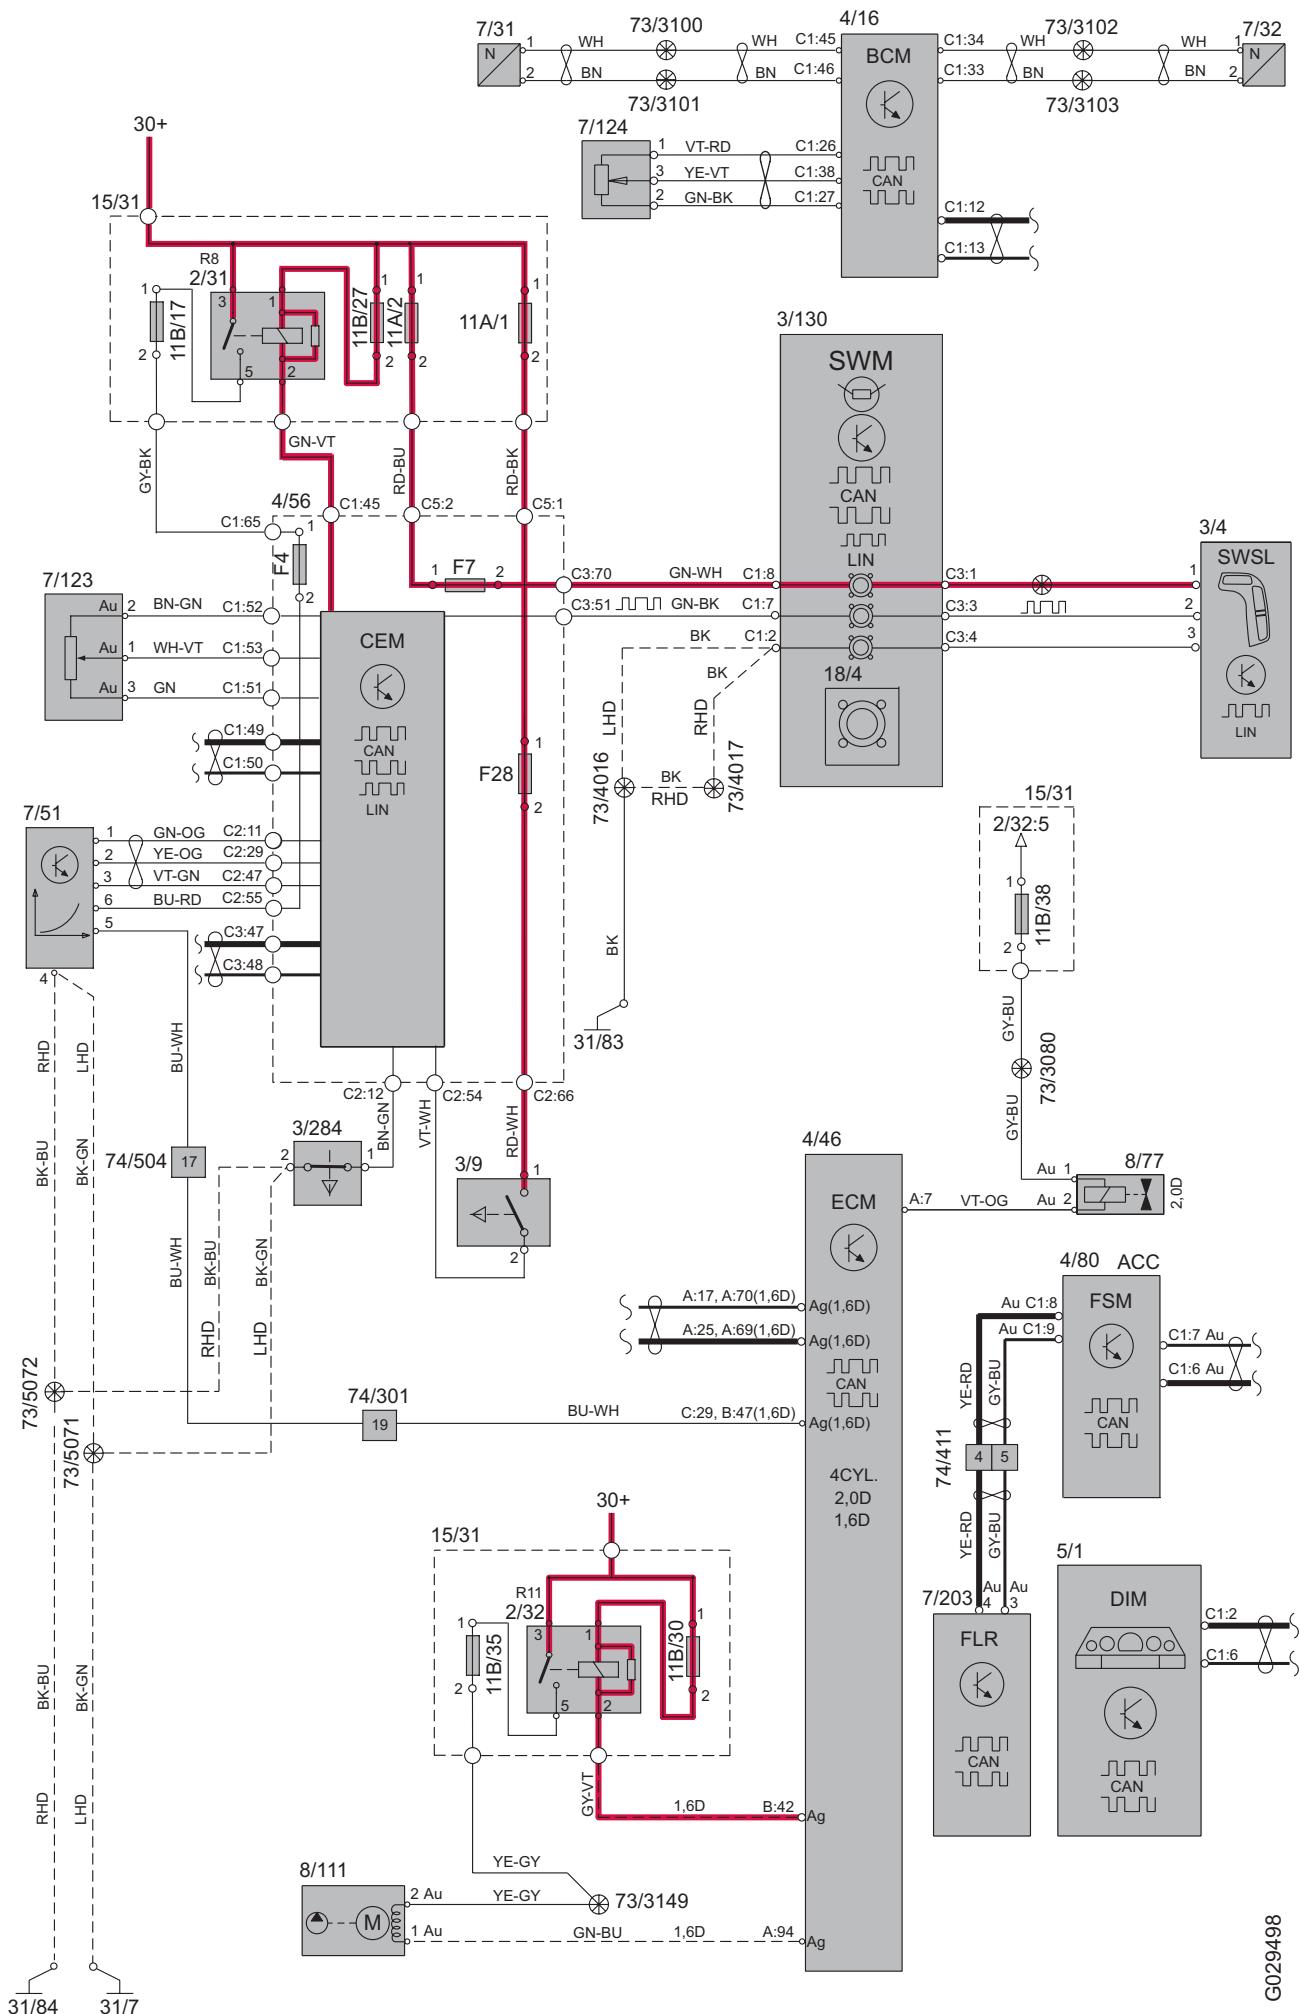


Group 27 Engine controls

Cruise control 5-Cyl. & 6-Cyl.

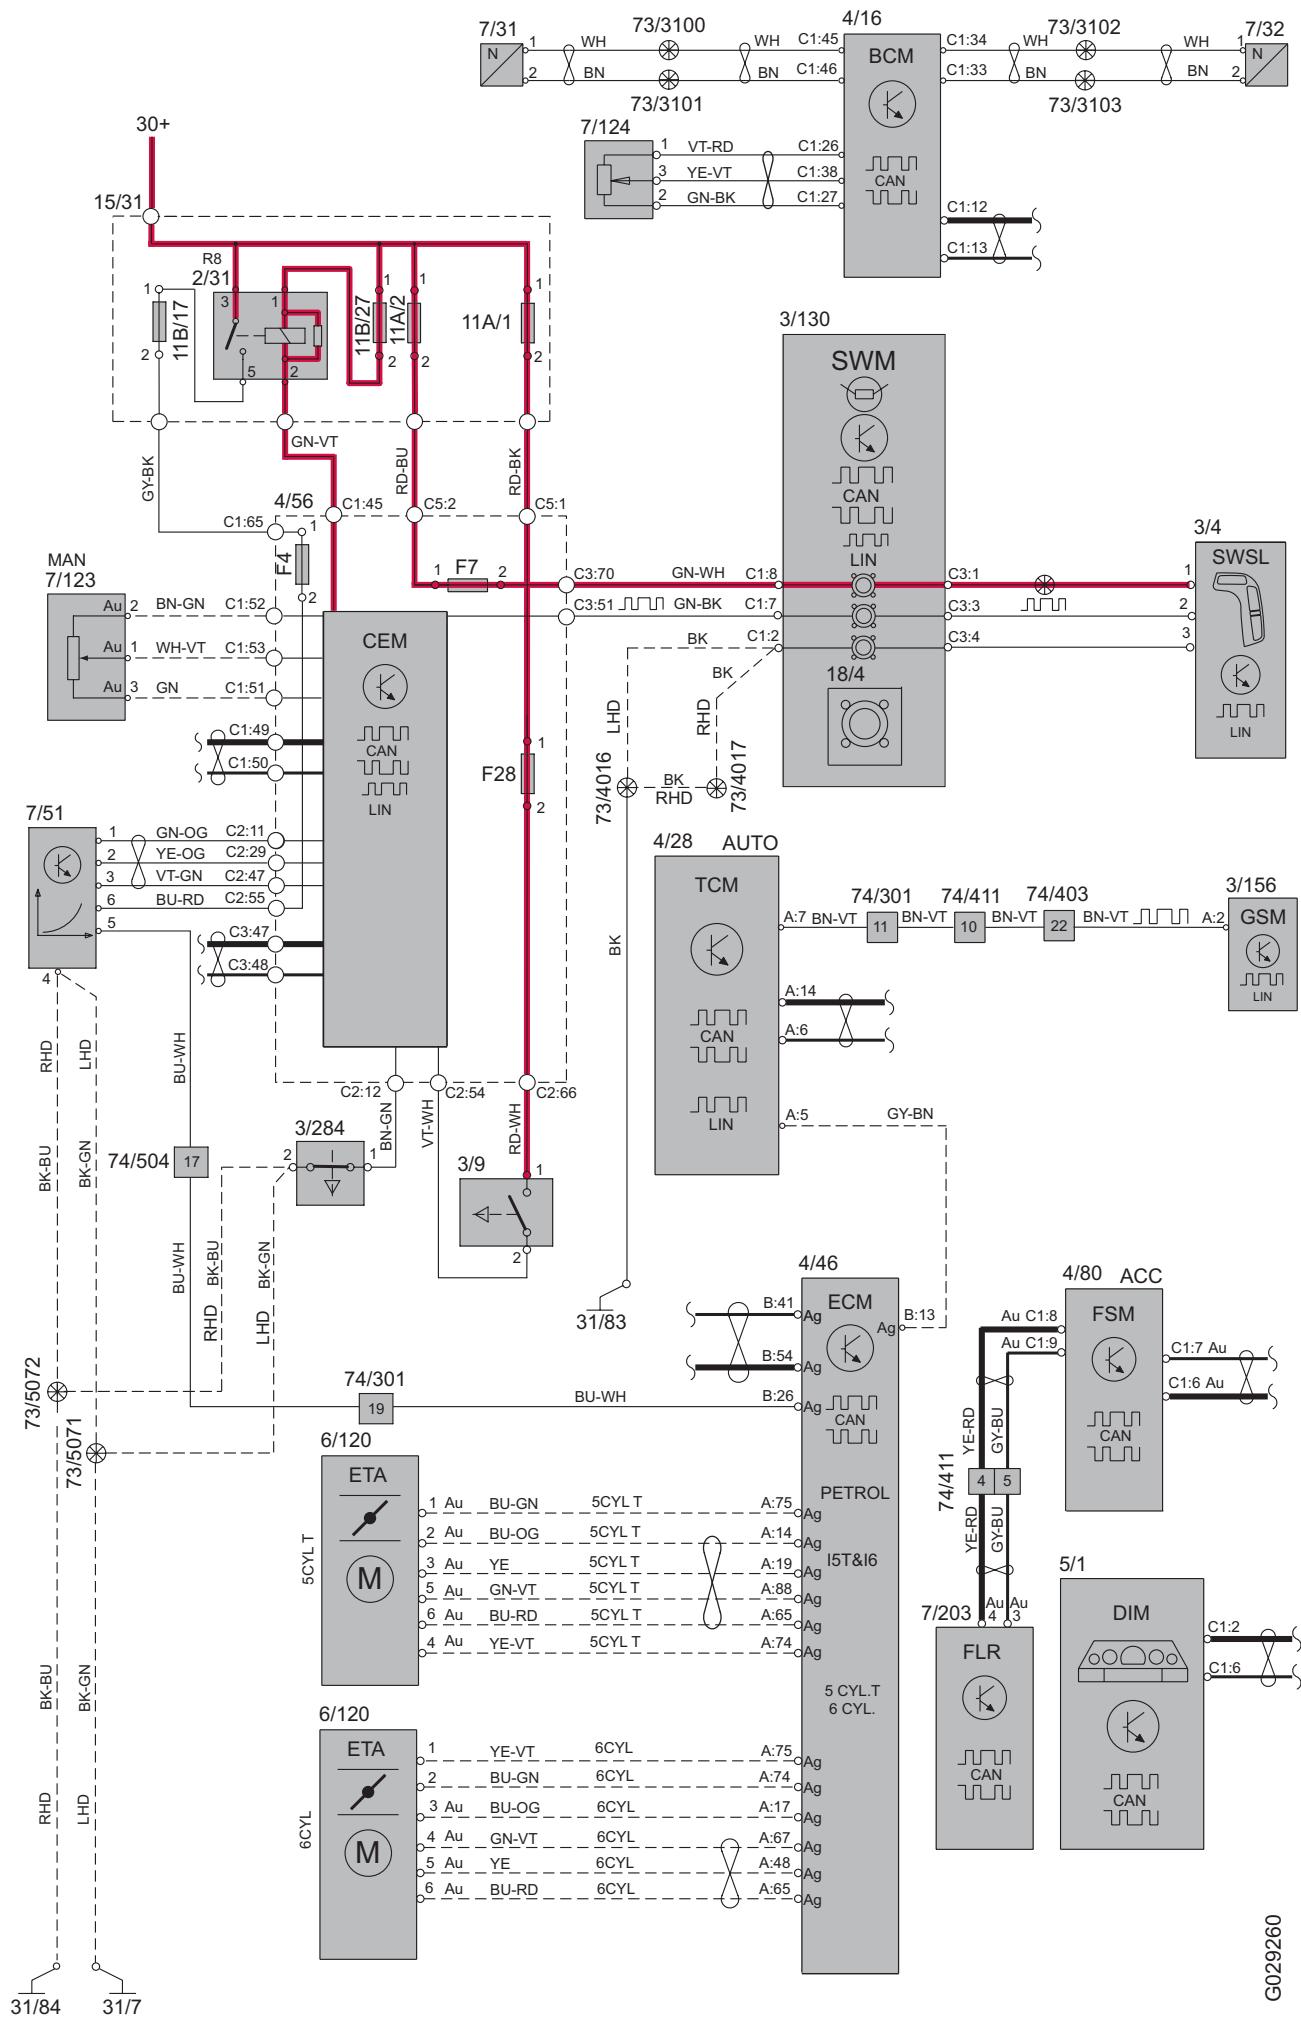


Group 27 Engine controls

Cruise control 5-Cyl. Diesel

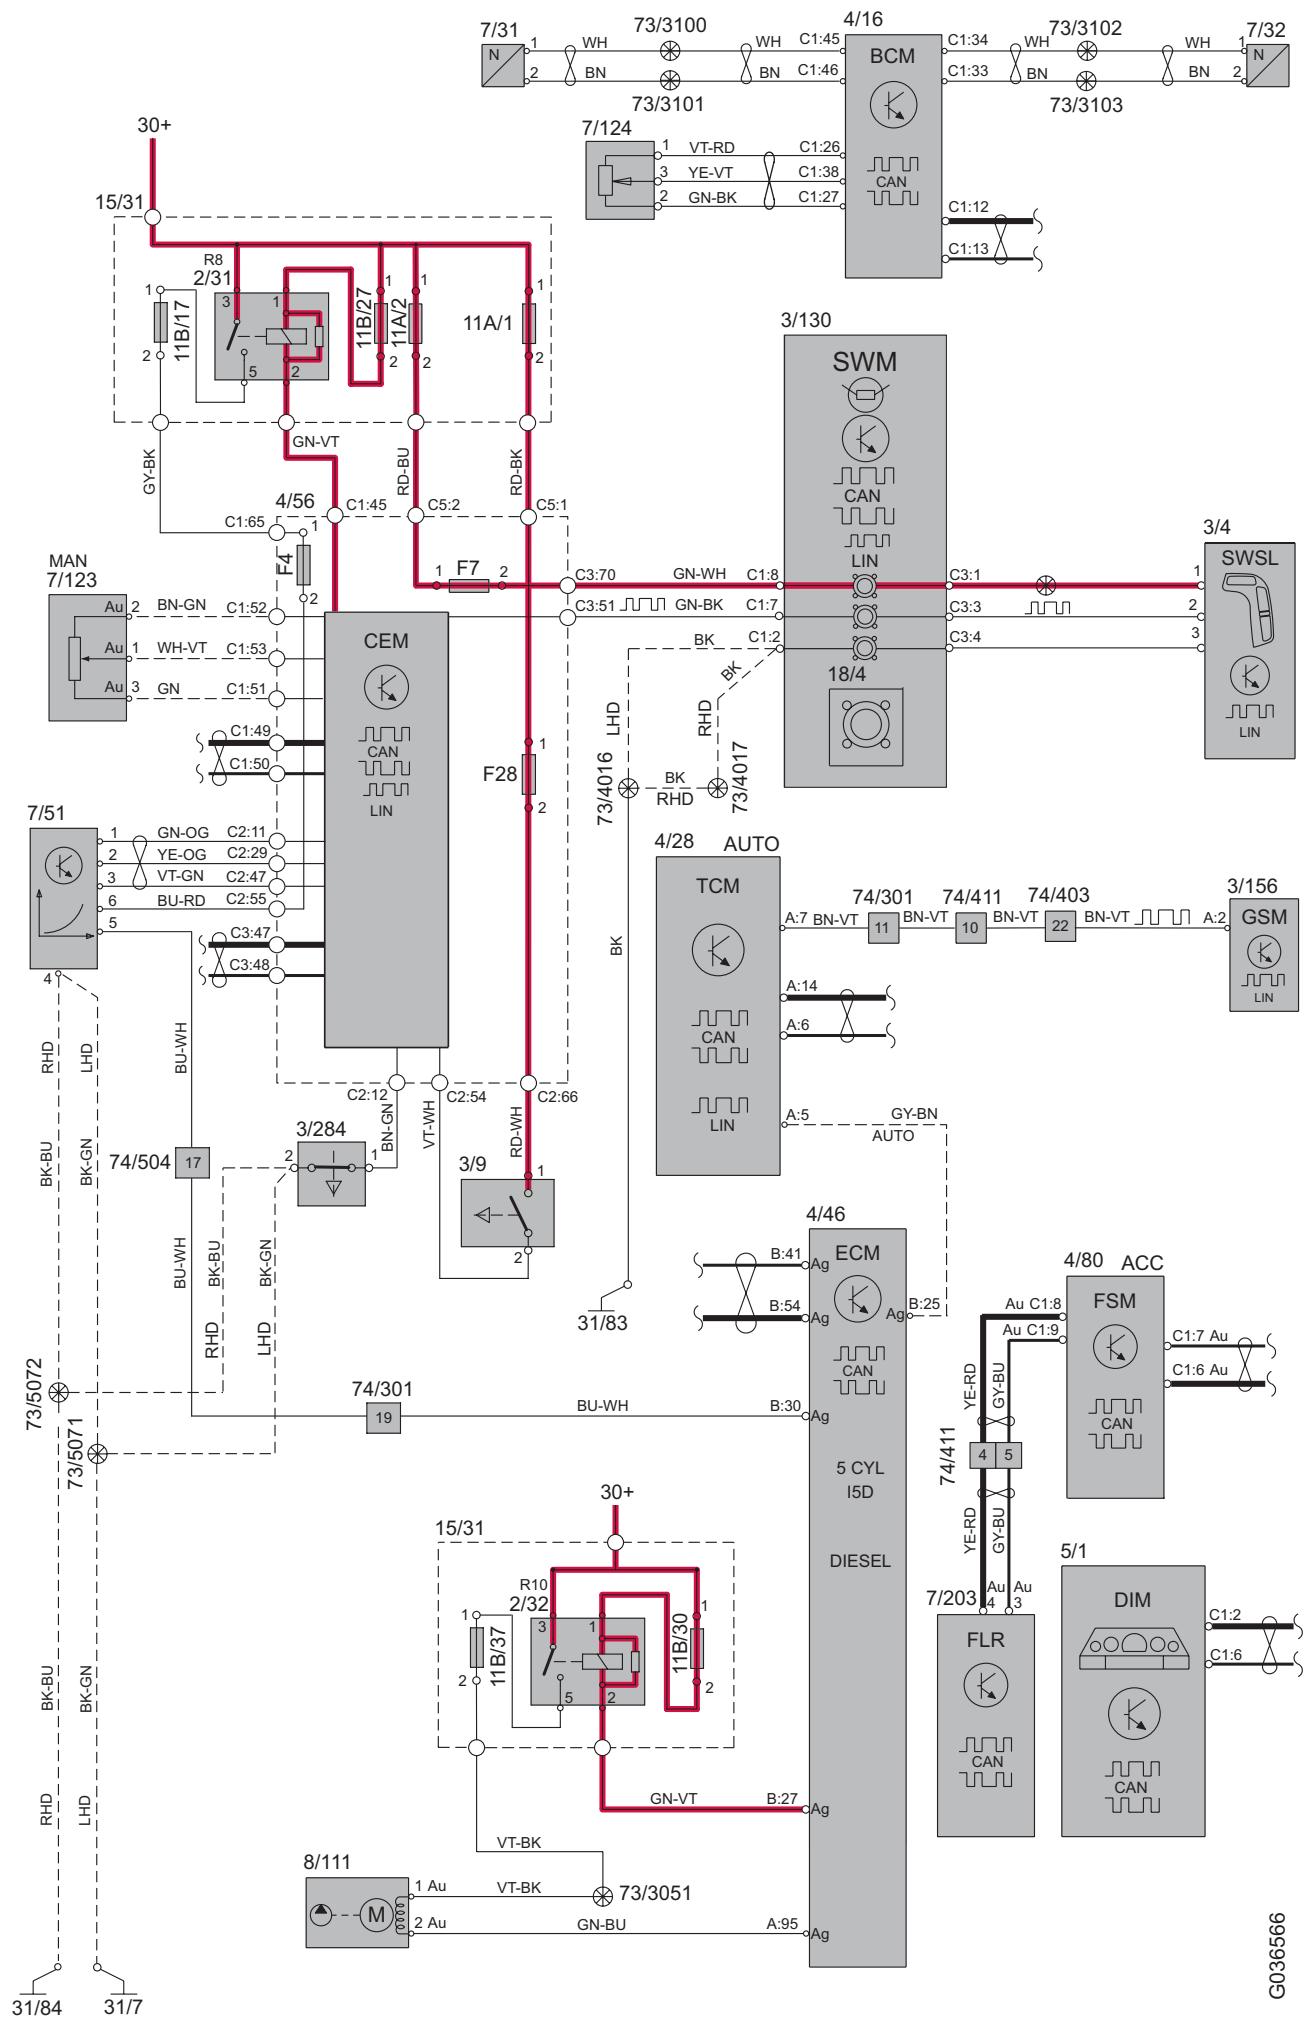


Group 27 Engine controls

Cruise control 8-Cyl.

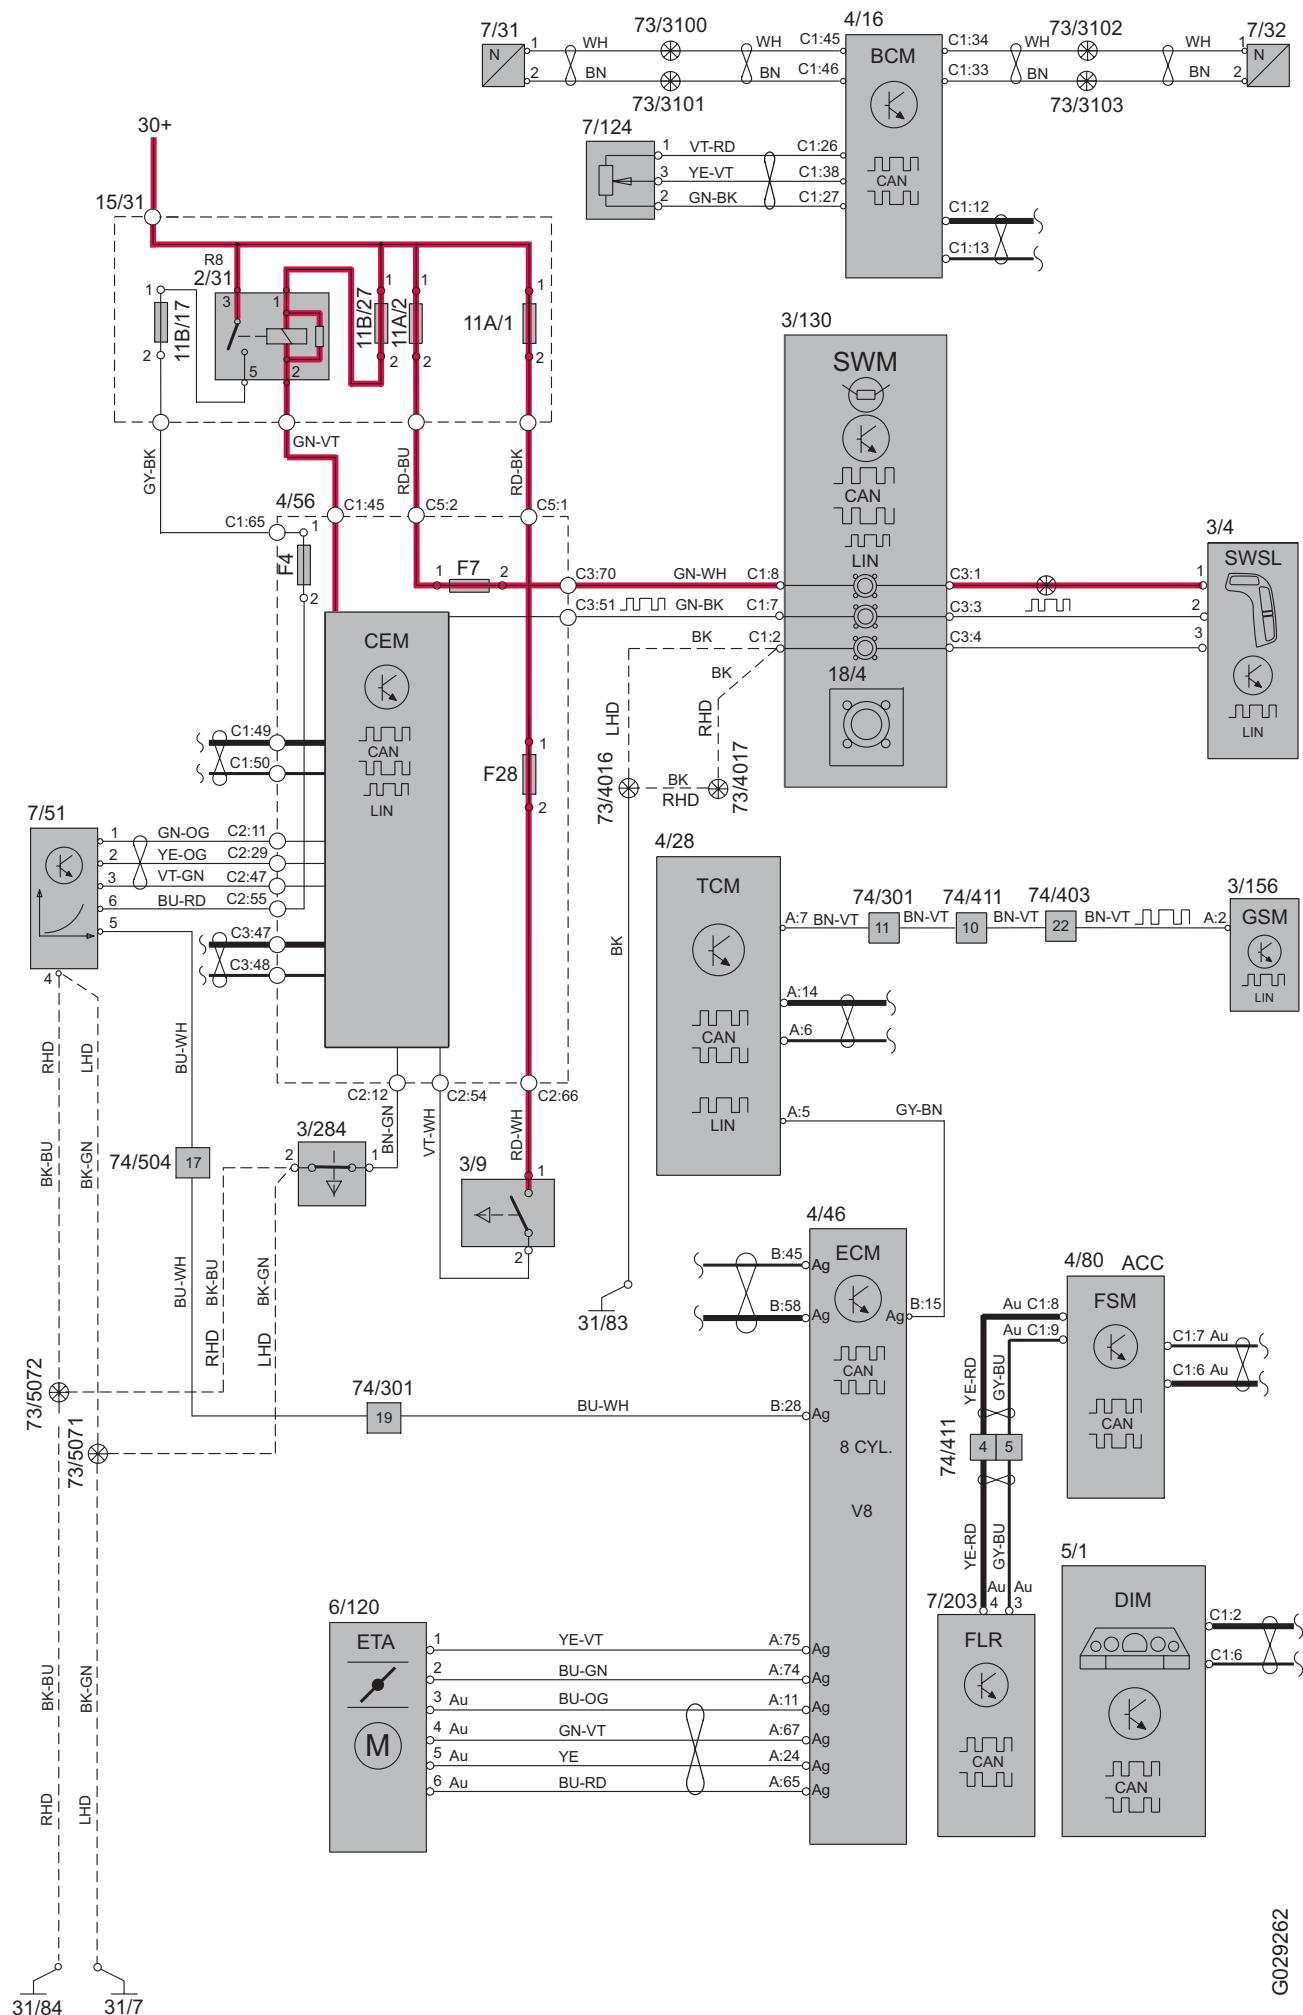


Group 32 Alternator and voltage regulator Power supply 4-Cyl.

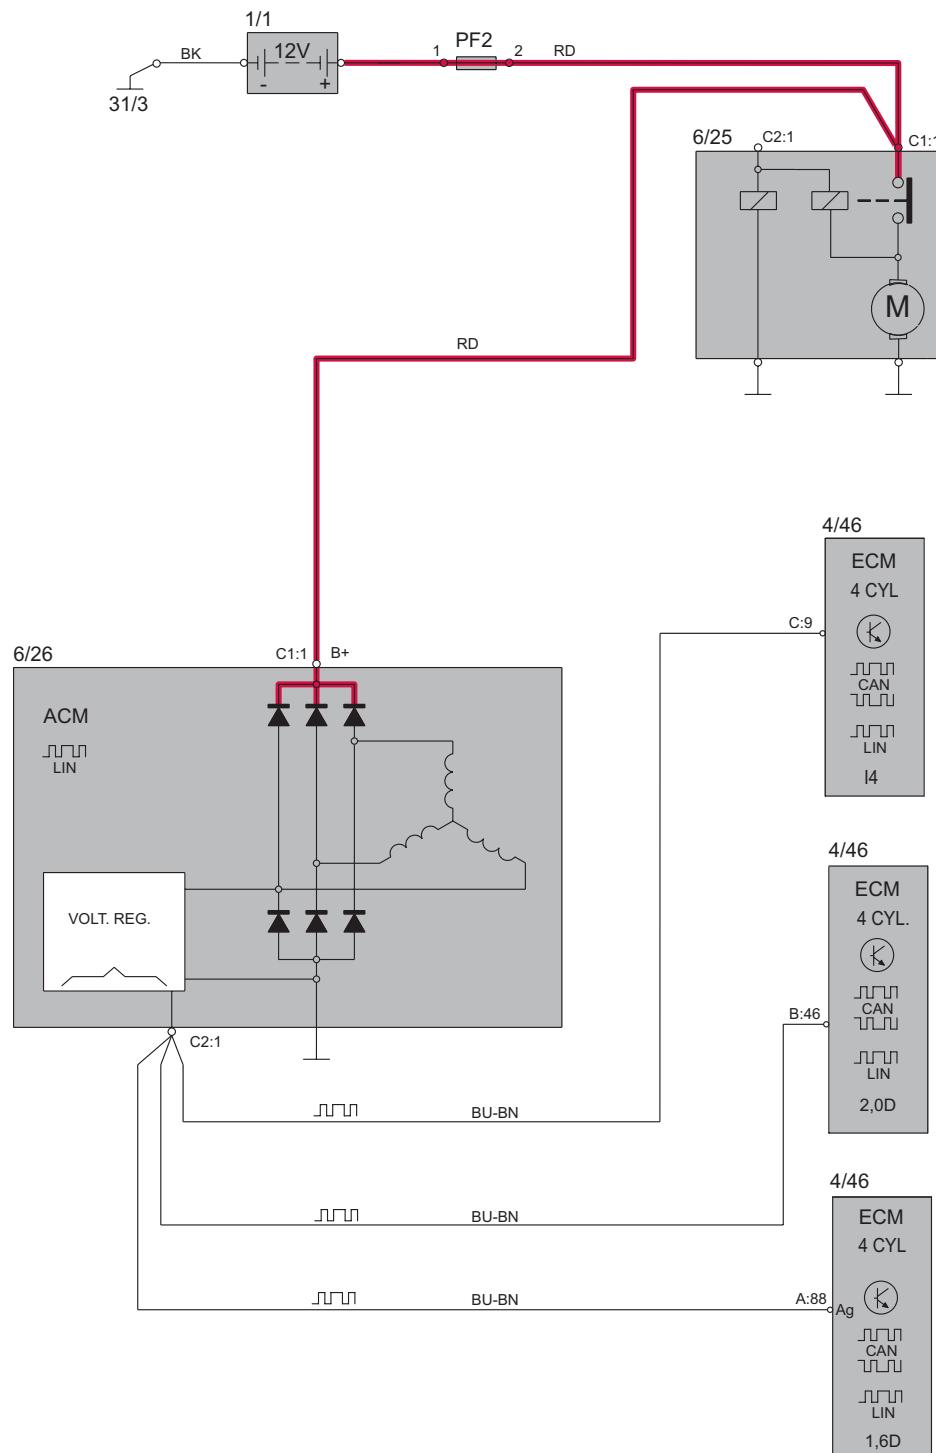

G041189


Group 32 Alternator and voltage regulator Power supply

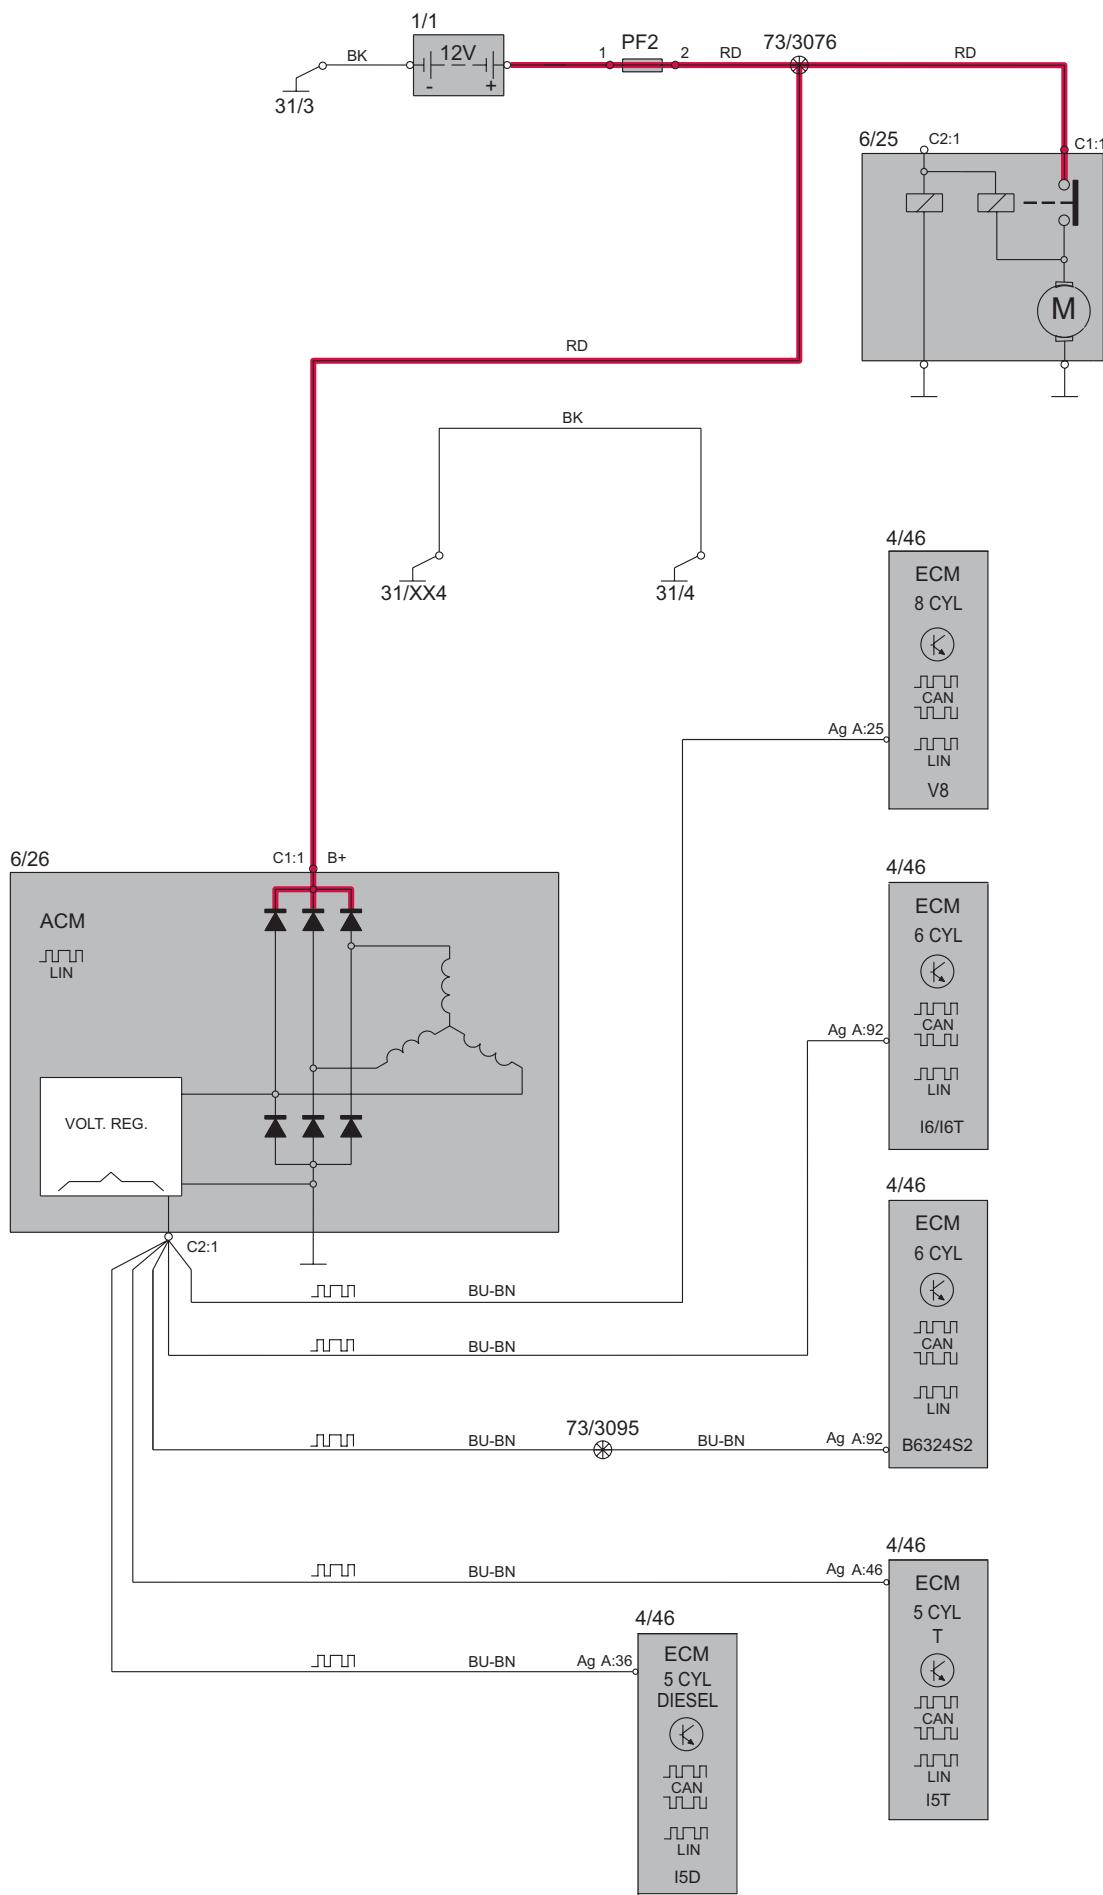

G036567


Group 33 Starting system

Starting system 4-Cyl.

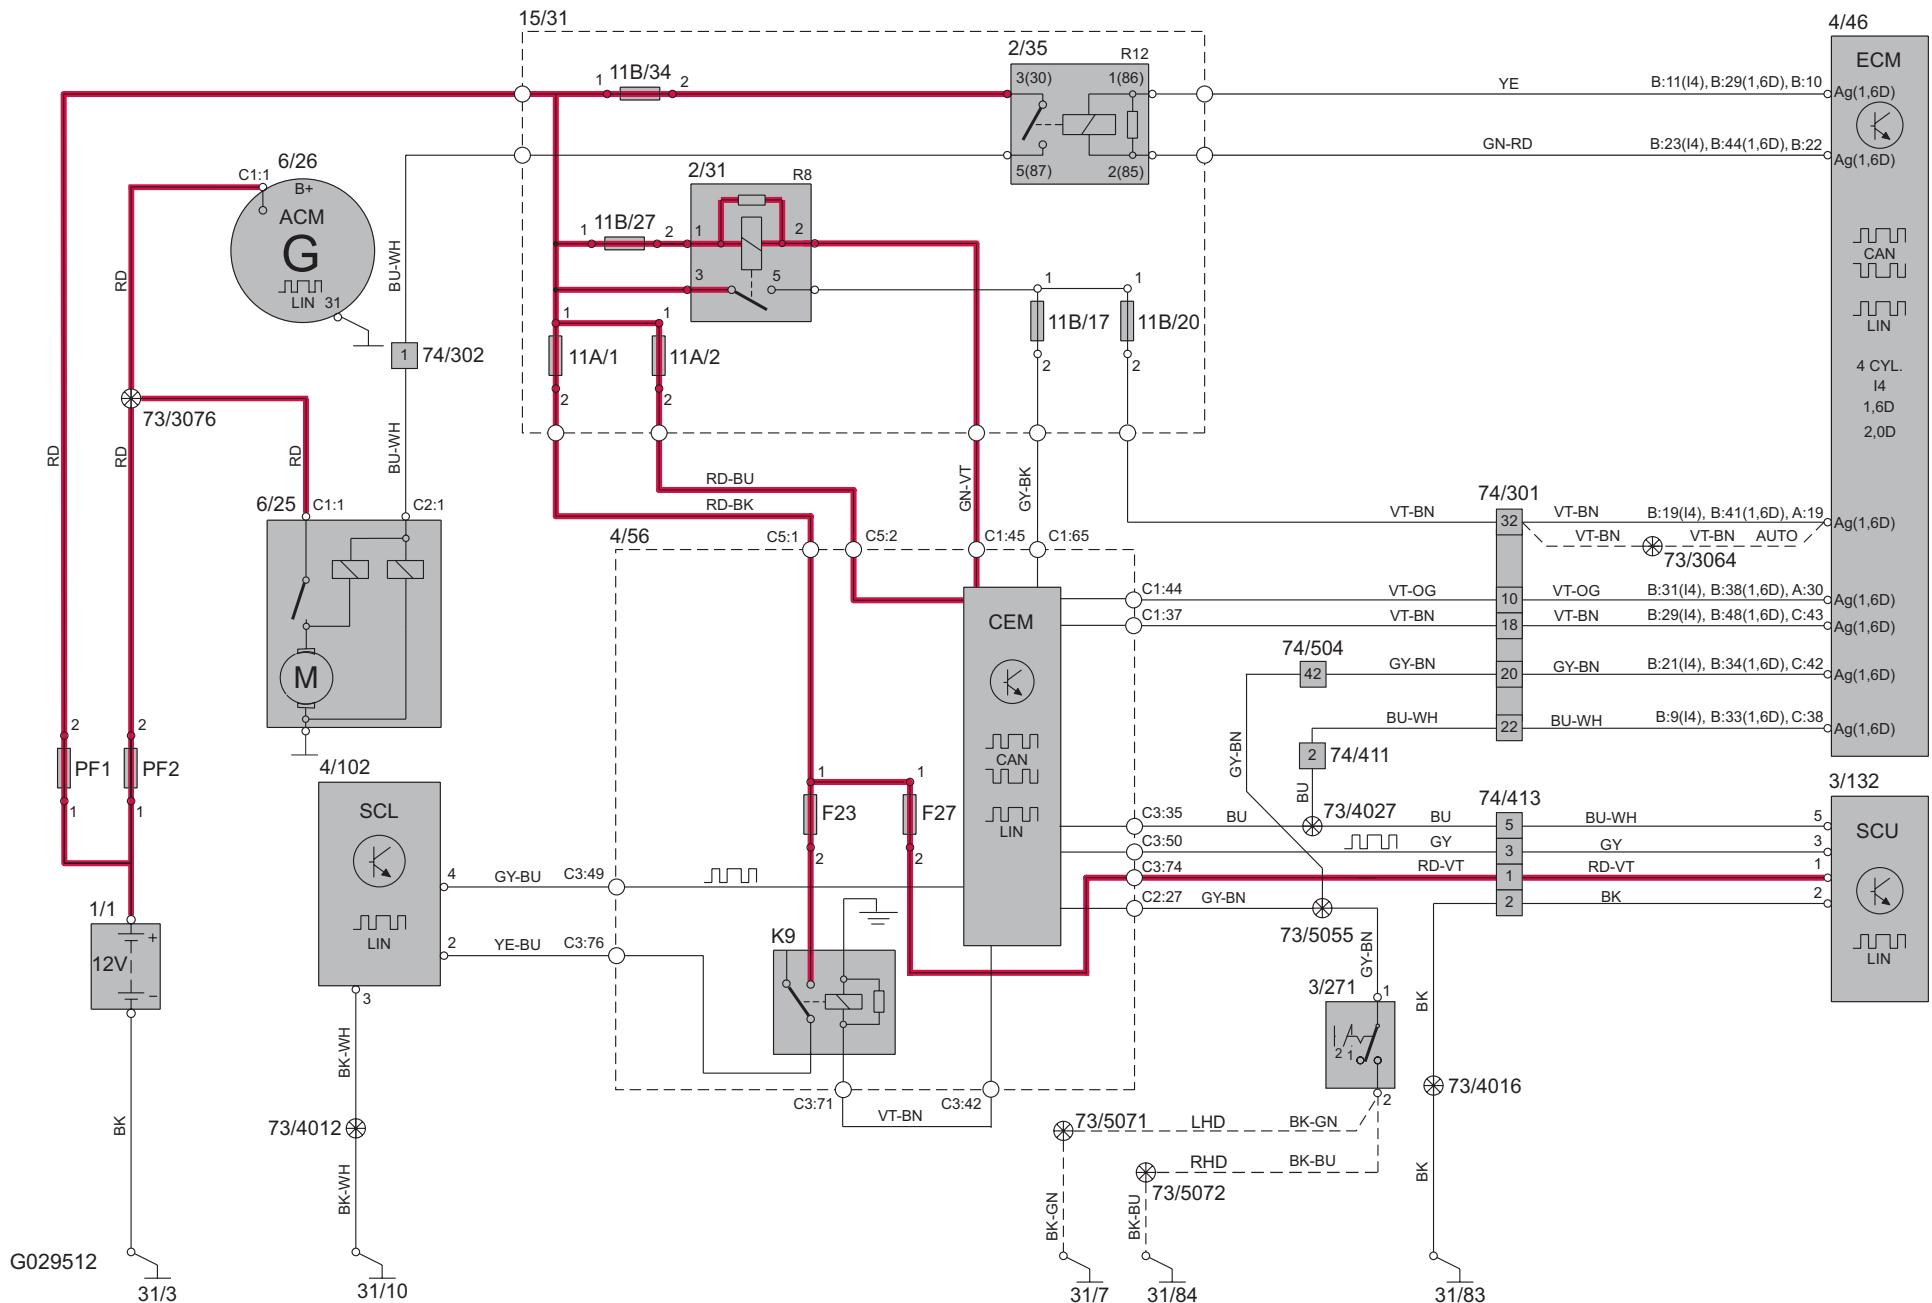


Group 33 Starting system

Starting system 5-, 6- & 8-Cyl.

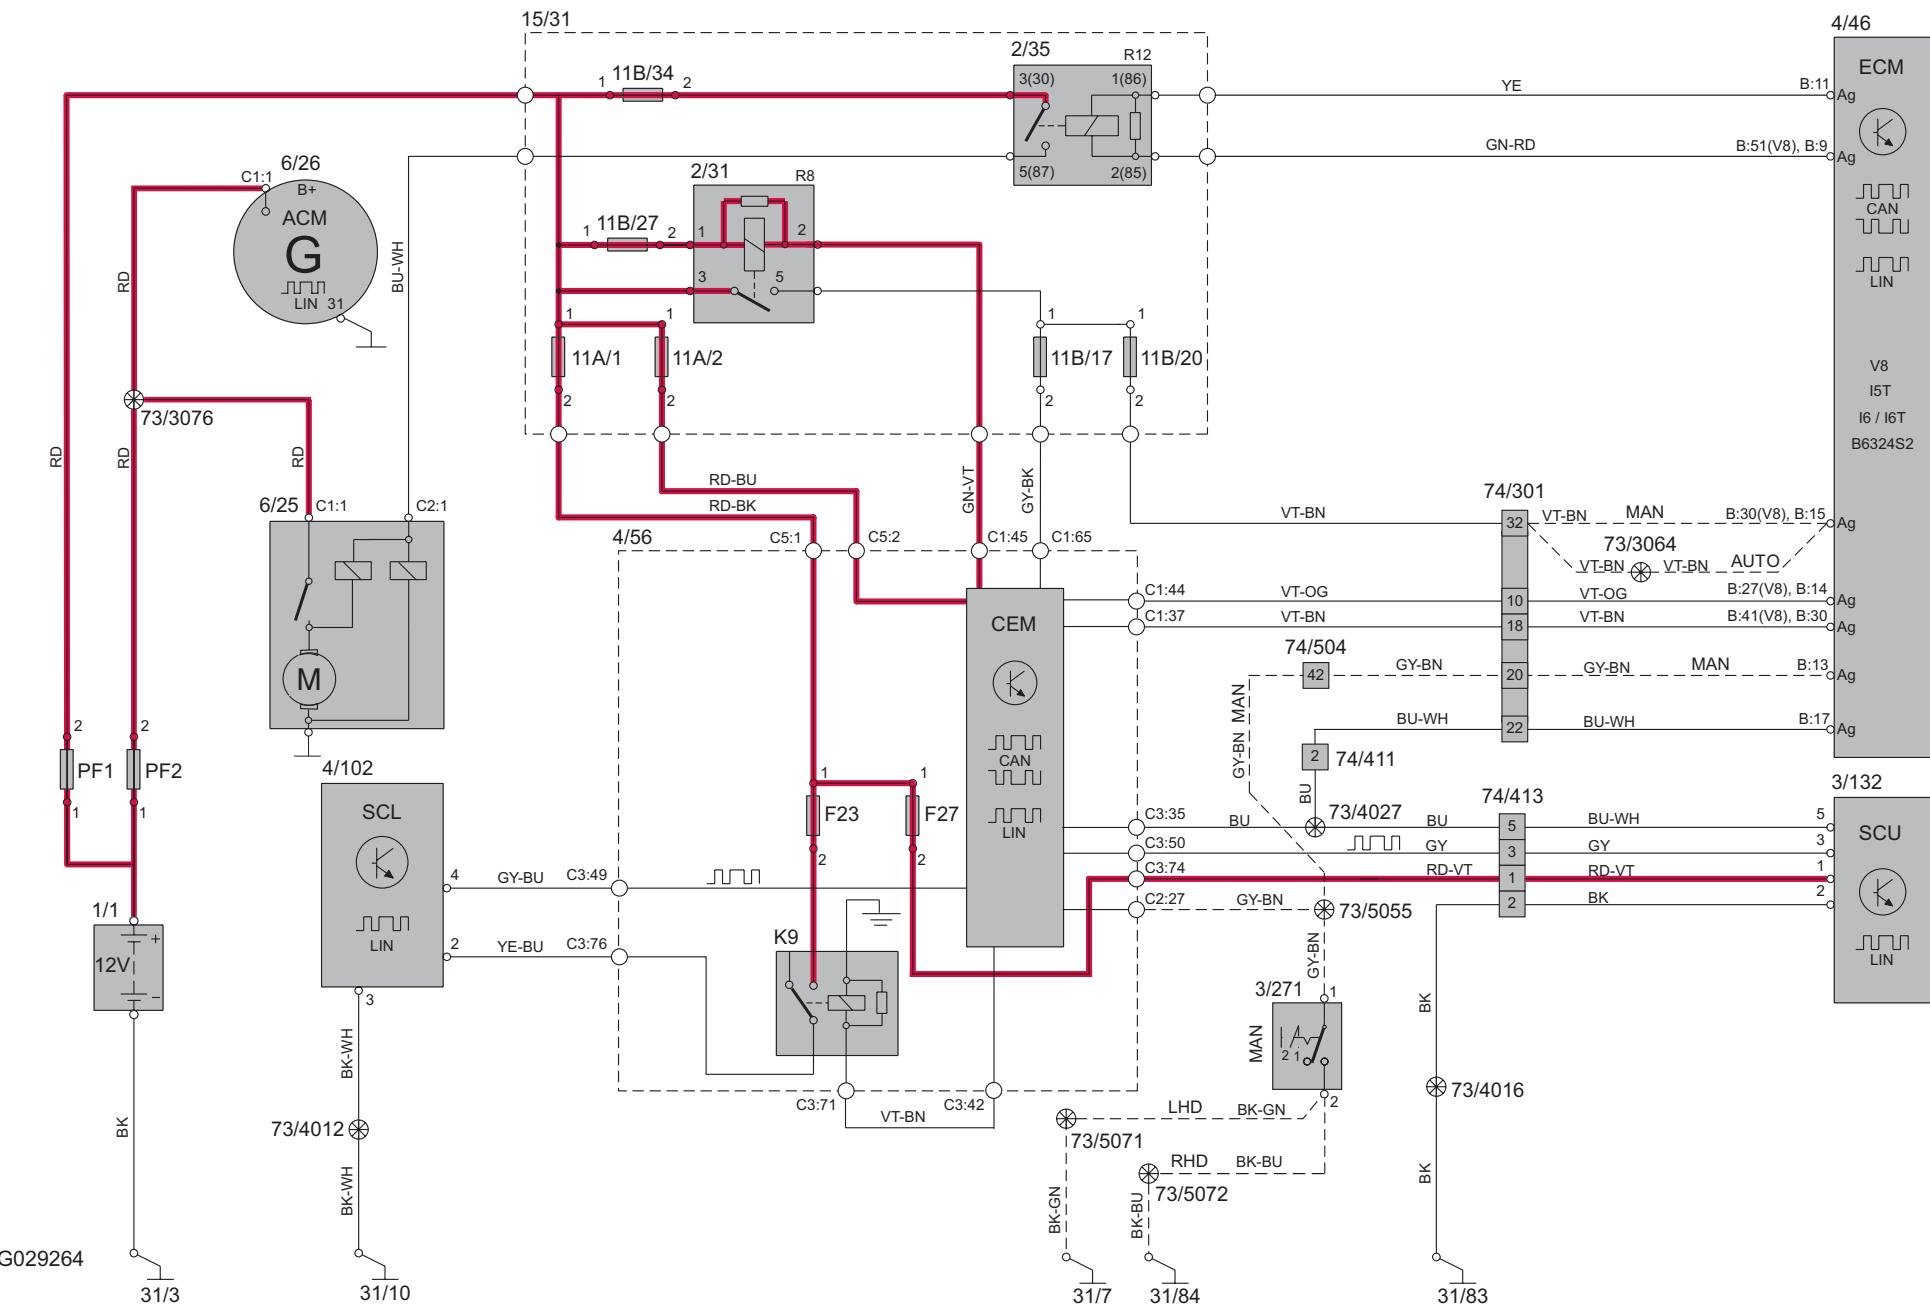


Group 33 Starting system

Starting system 5-Cyl. Diesel

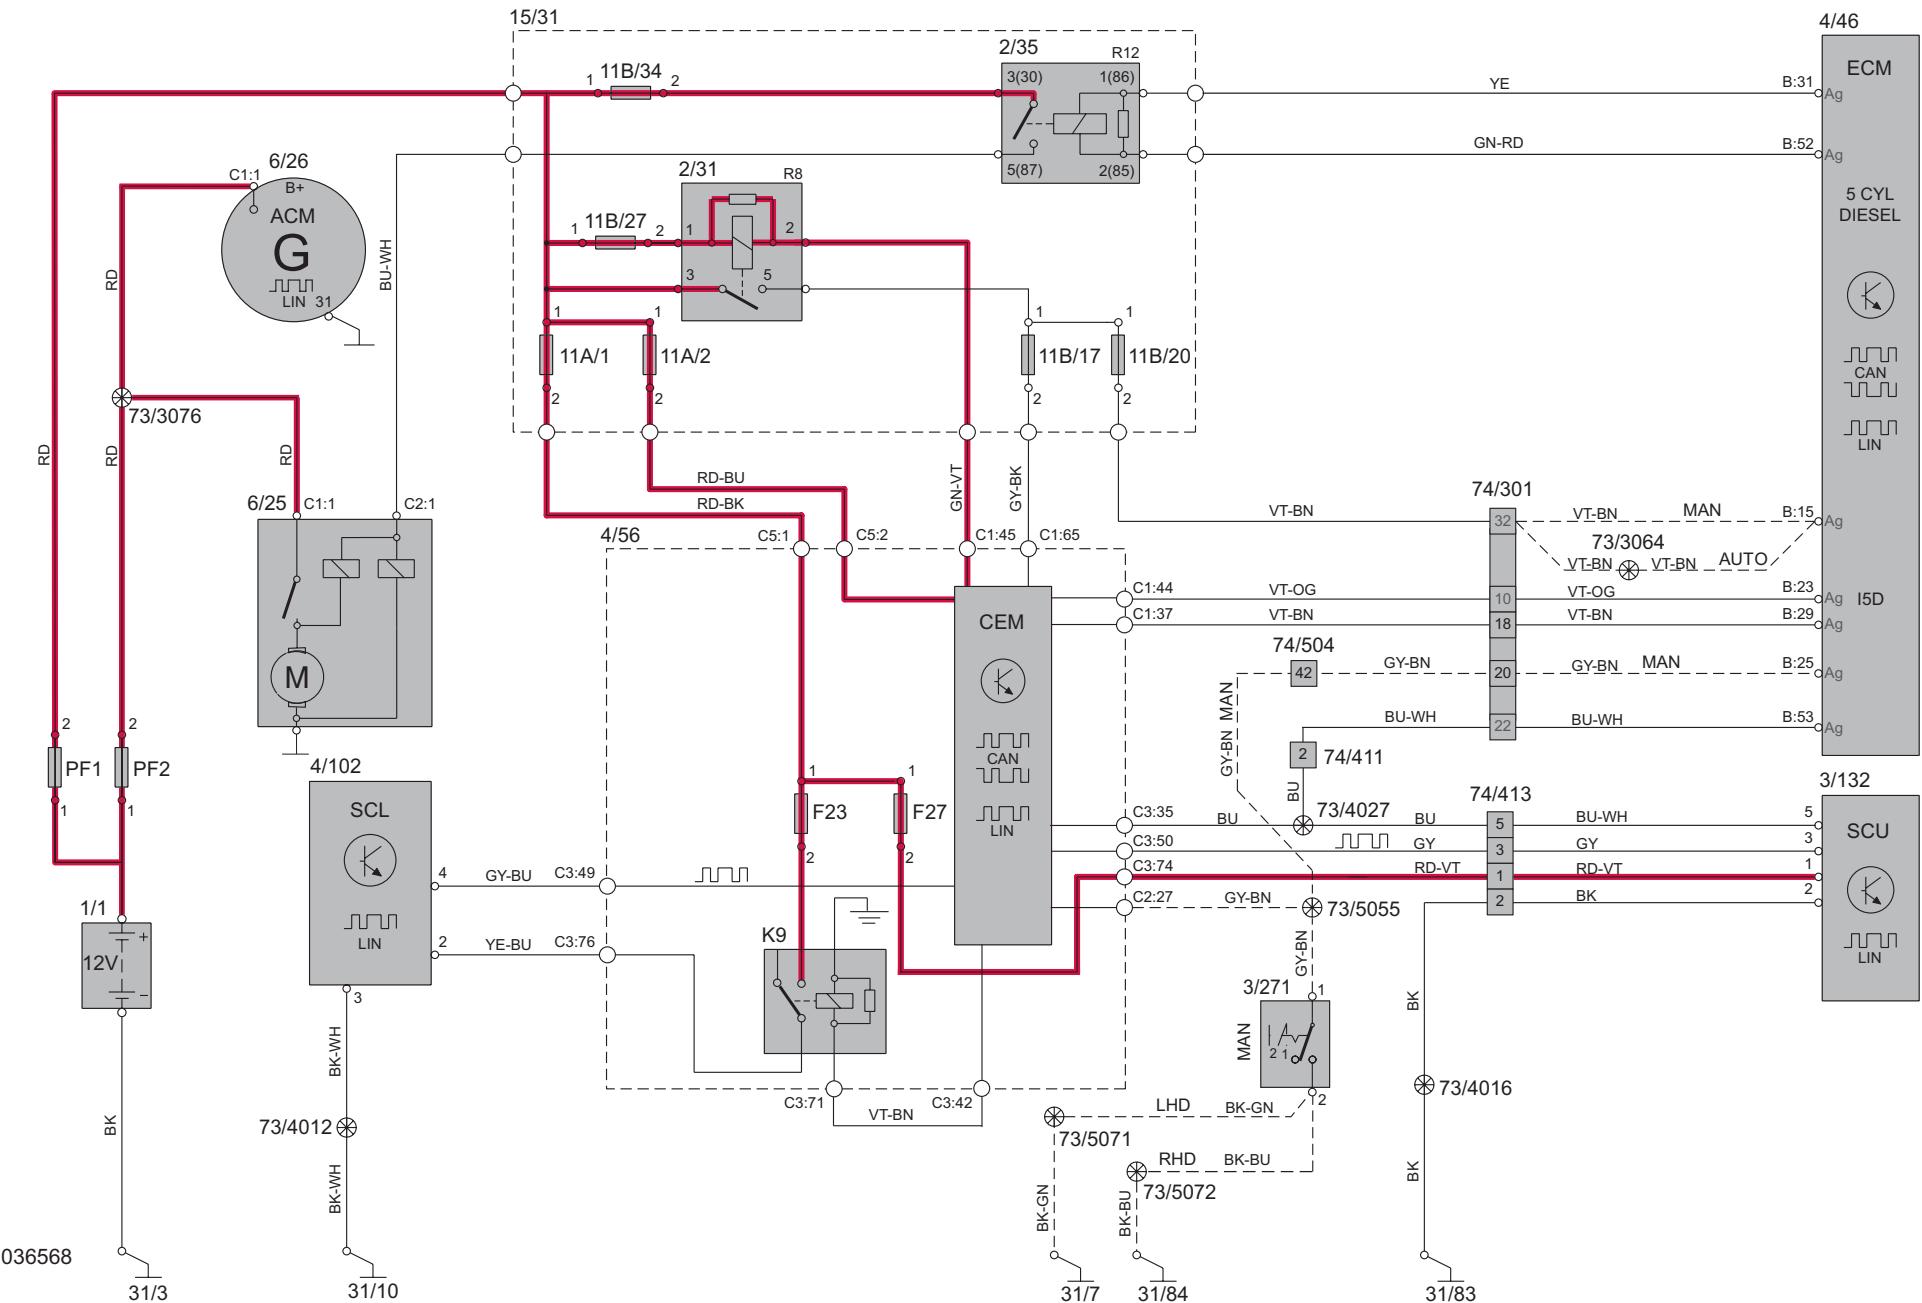


Group 35 Lighting

High and low beam

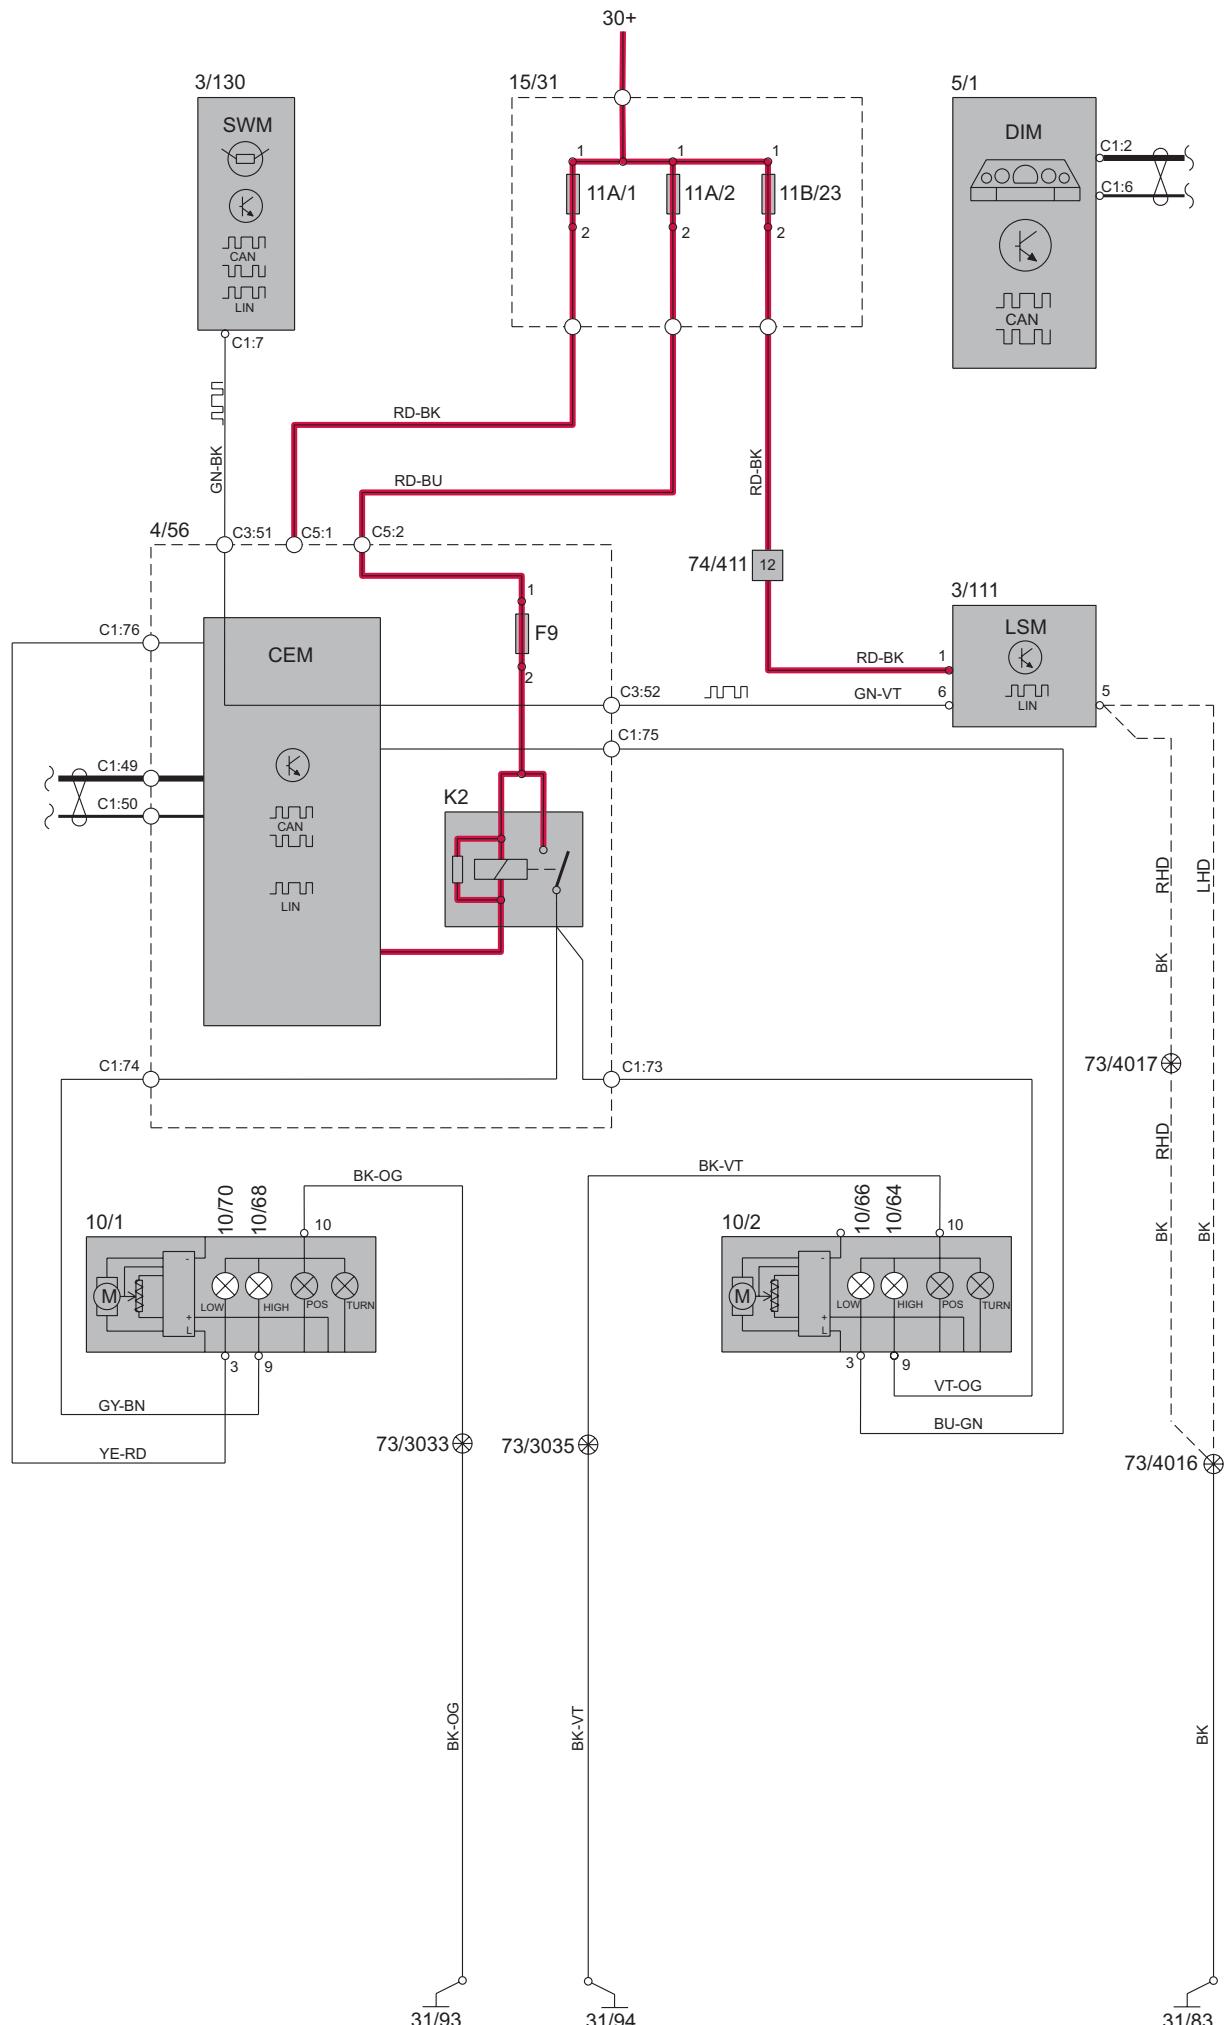


Group 35 Lighting

High and low beam (Dual Xenon)

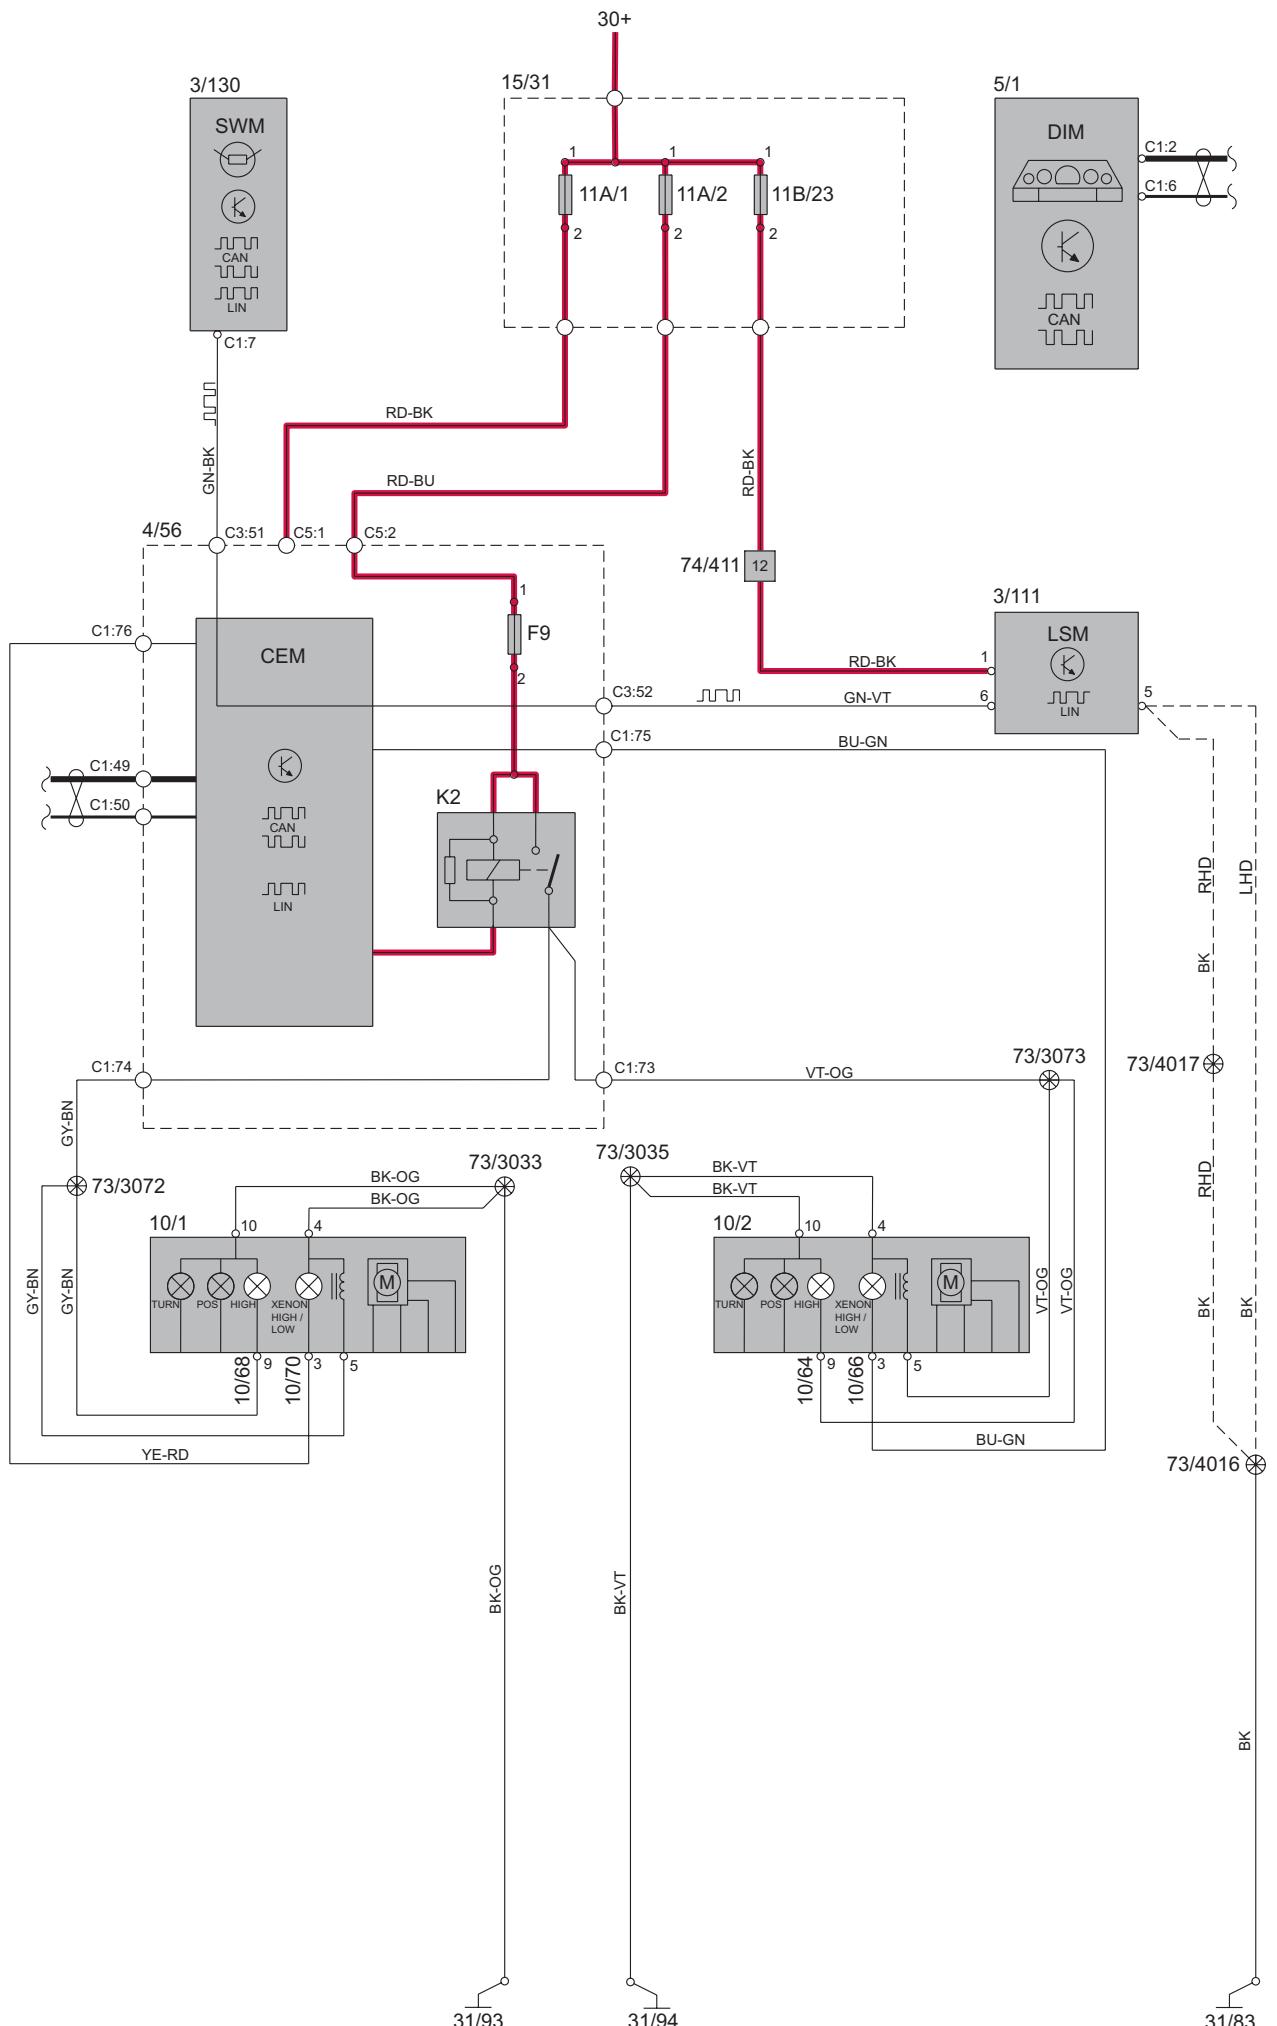

Group 35 Lighting


Beam length adjustment, manual

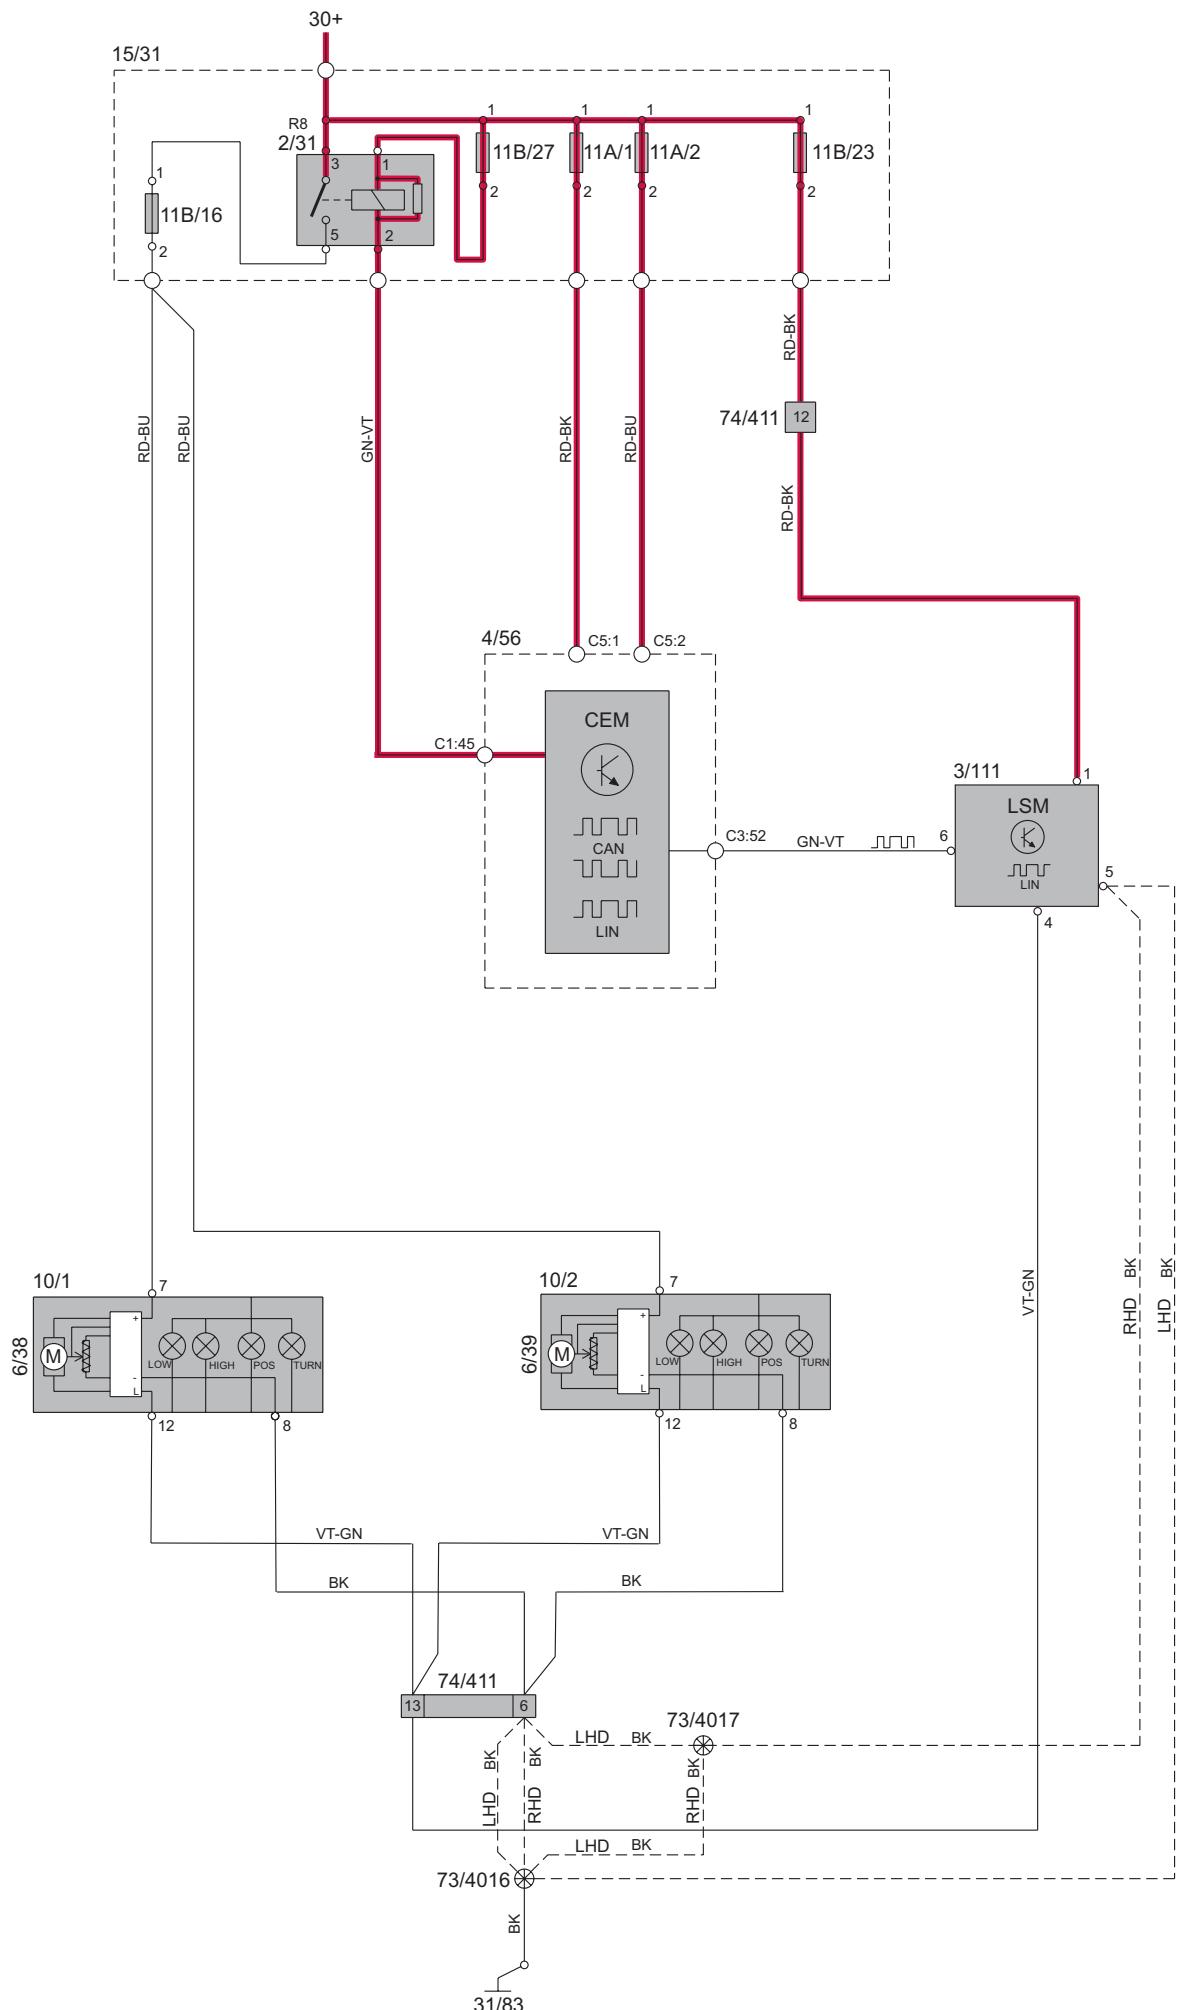

G028928


Group 35 Lighting

Beam length adjustment, automatic (Dual Xenon)

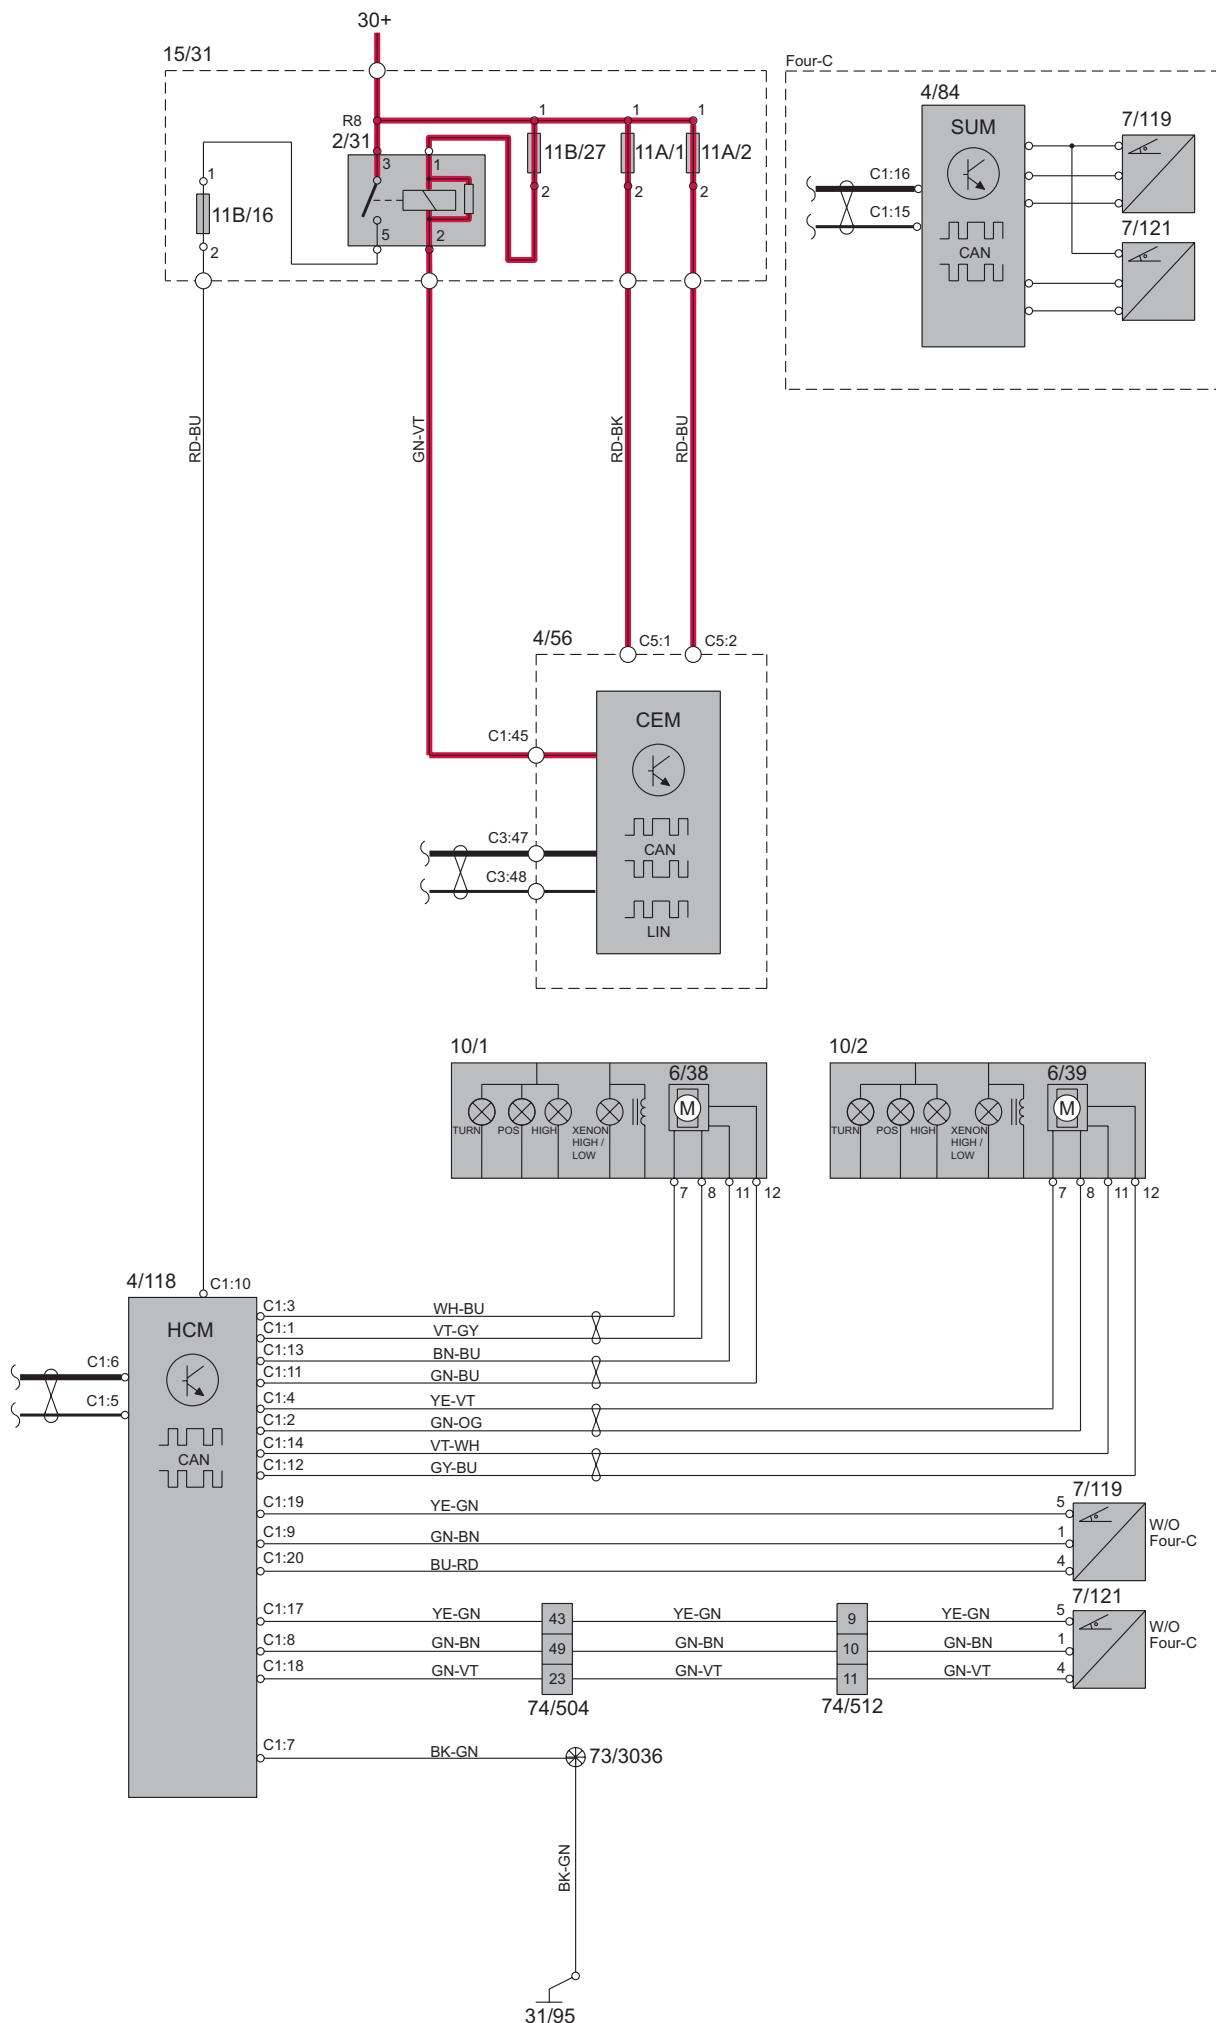


Group 35 Lighting

Running/Parking lights, Tail lights V70

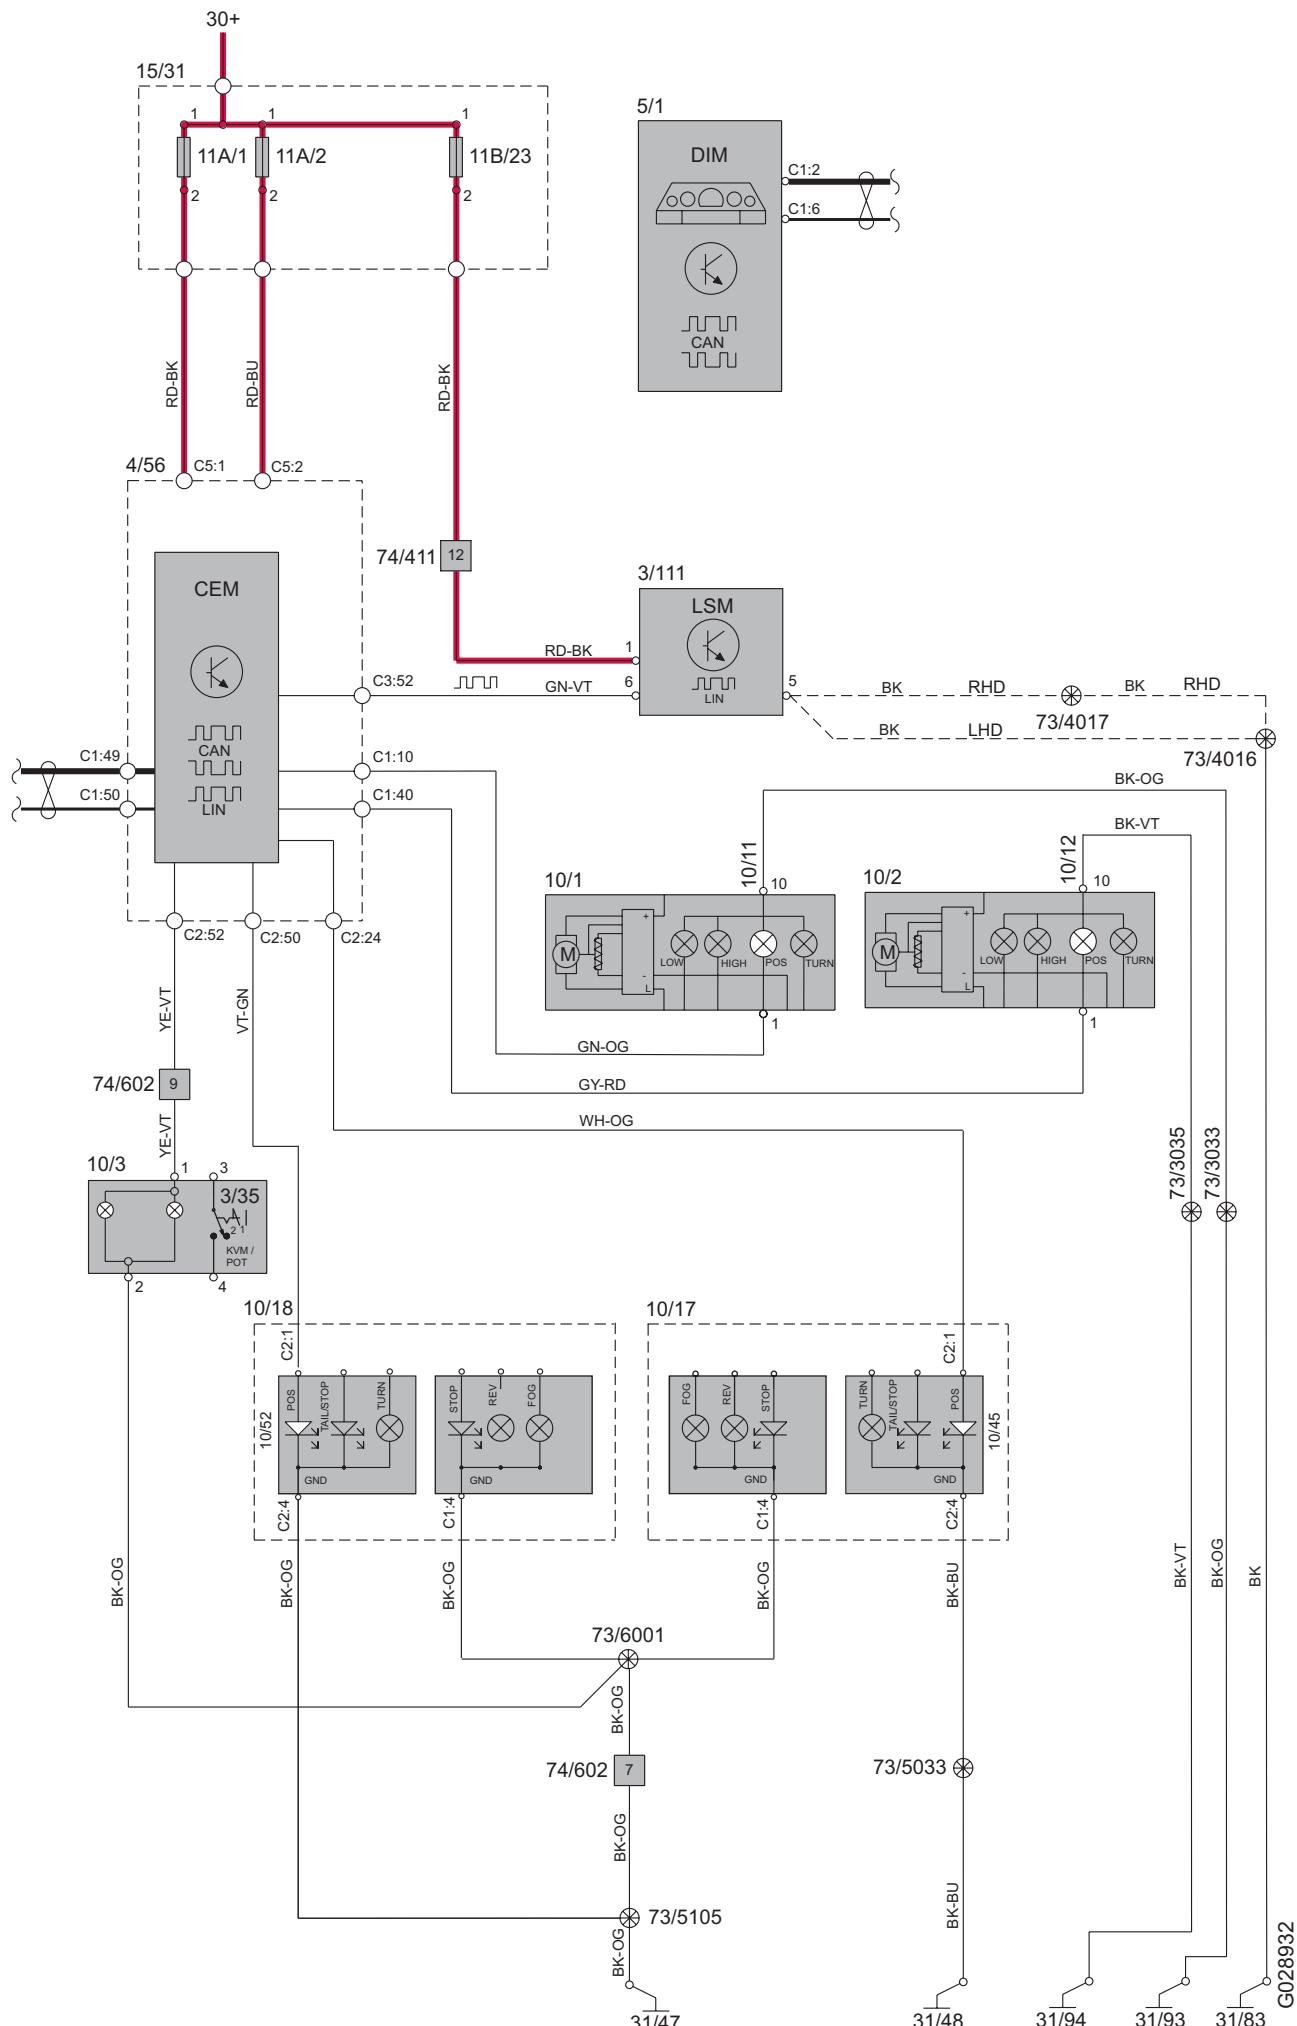


Group 35 Lighting

Running/Parking lights, Tail lights S80

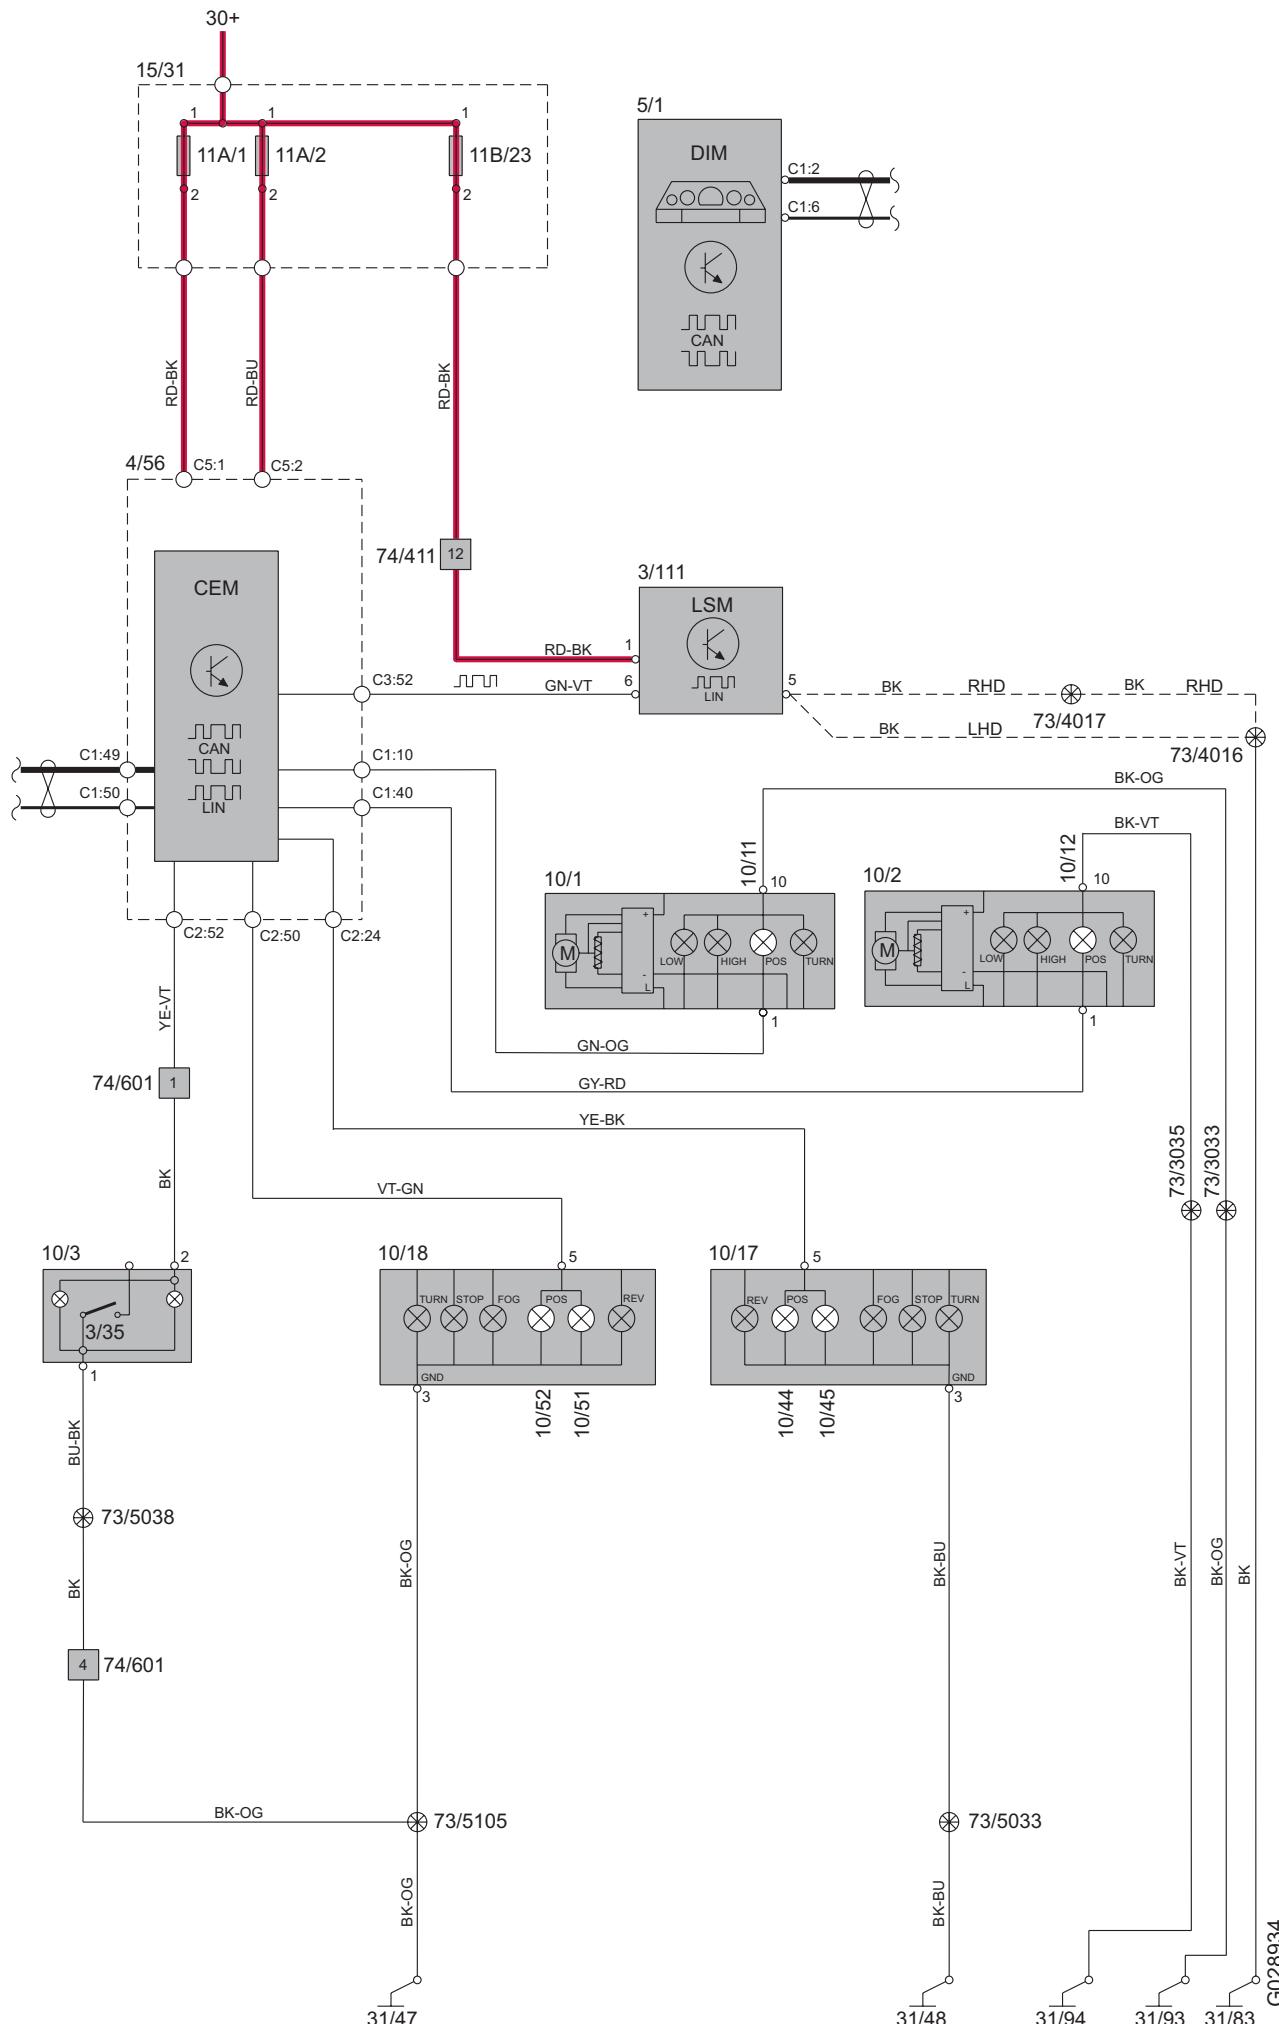


Group 35 Lighting

Running/Parking lights, Tail lights (Dual Xenon) V70

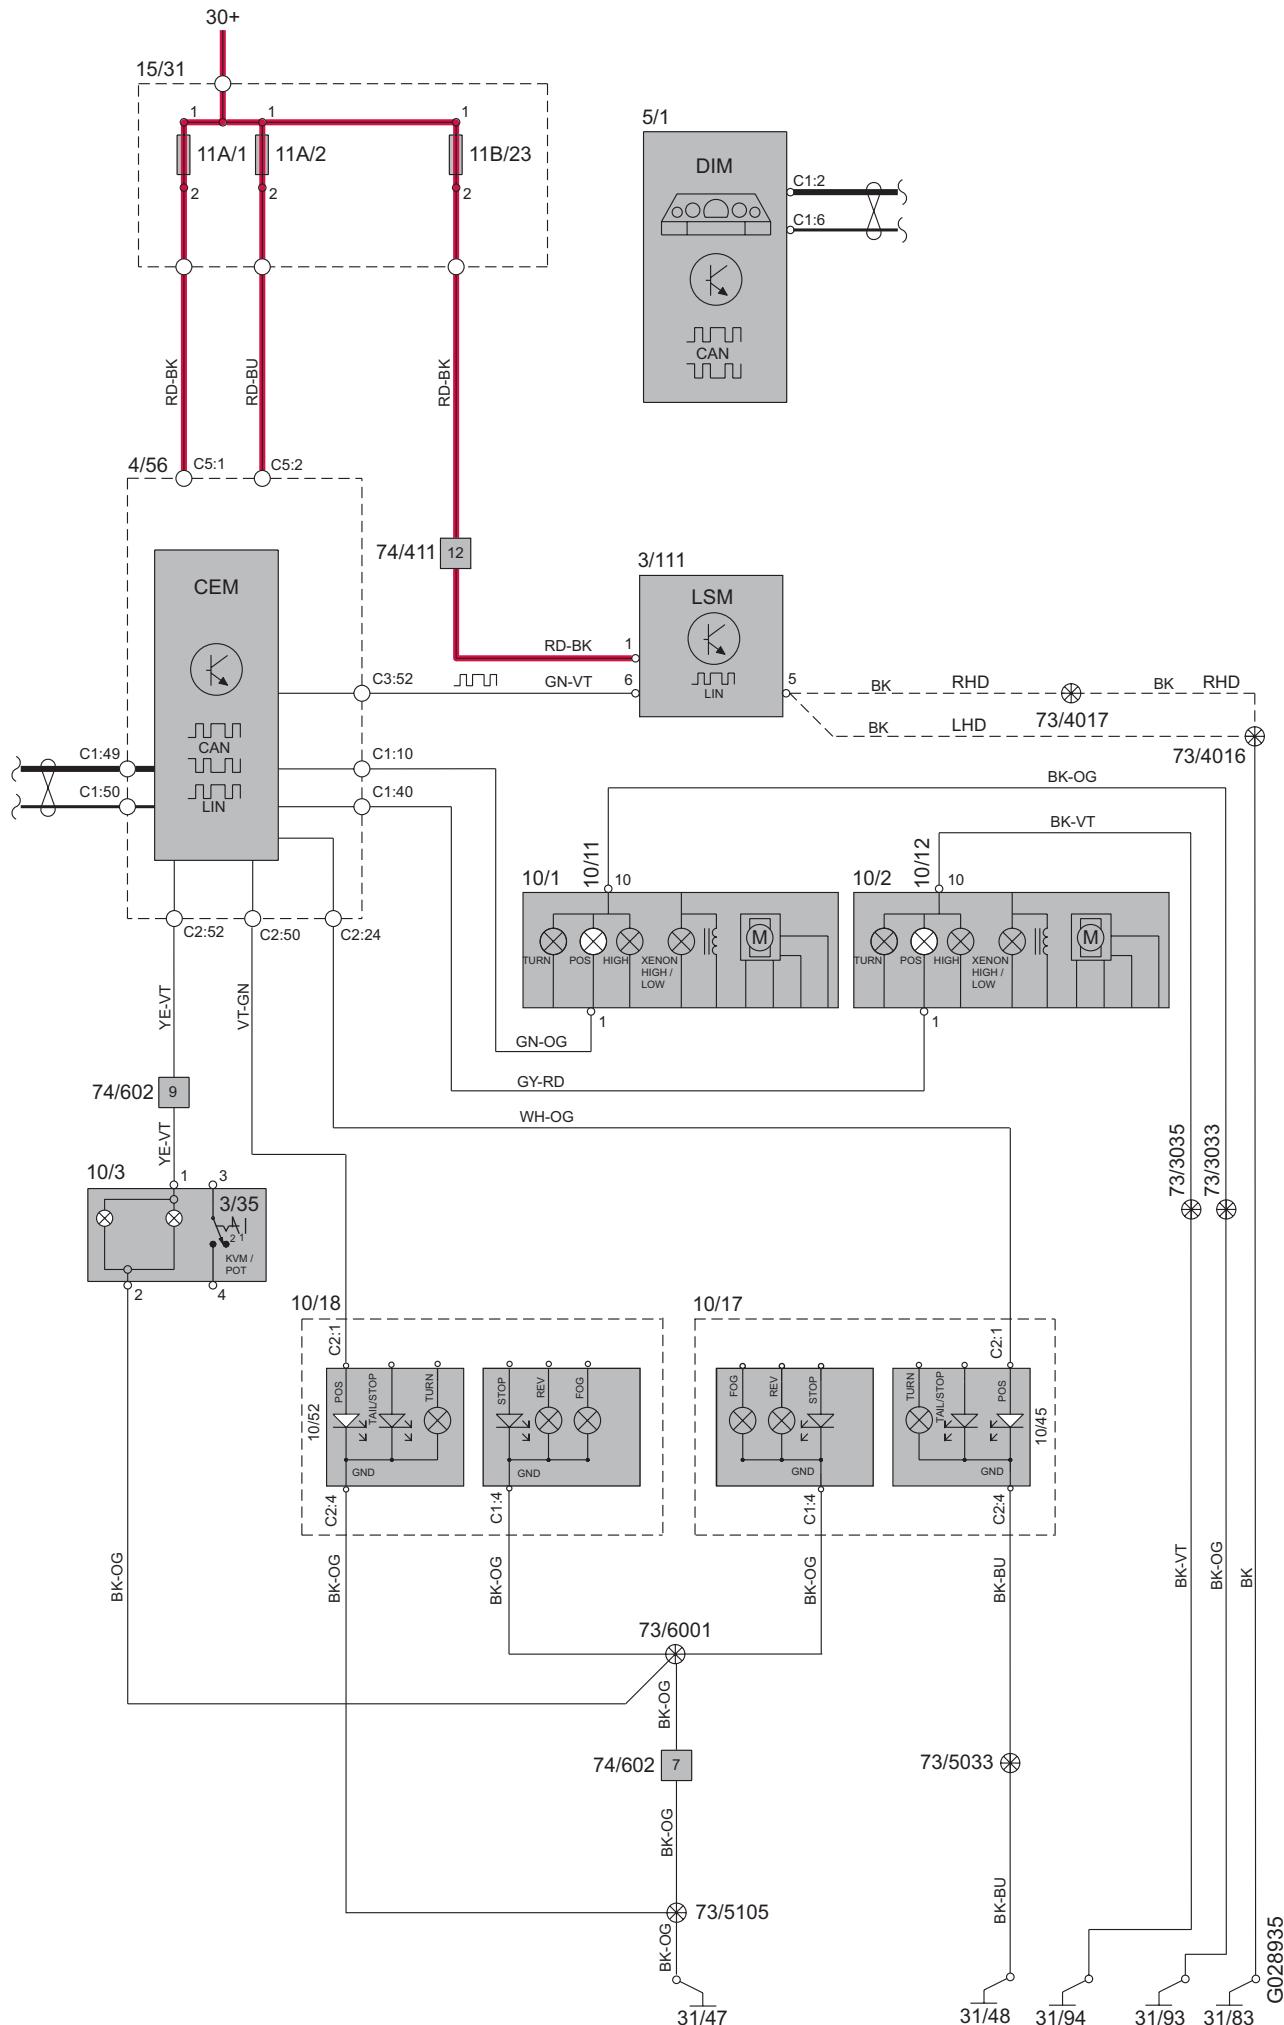


Group 35 Lighting

Running/Parking lights, Tail lights (Dual Xenon) S80

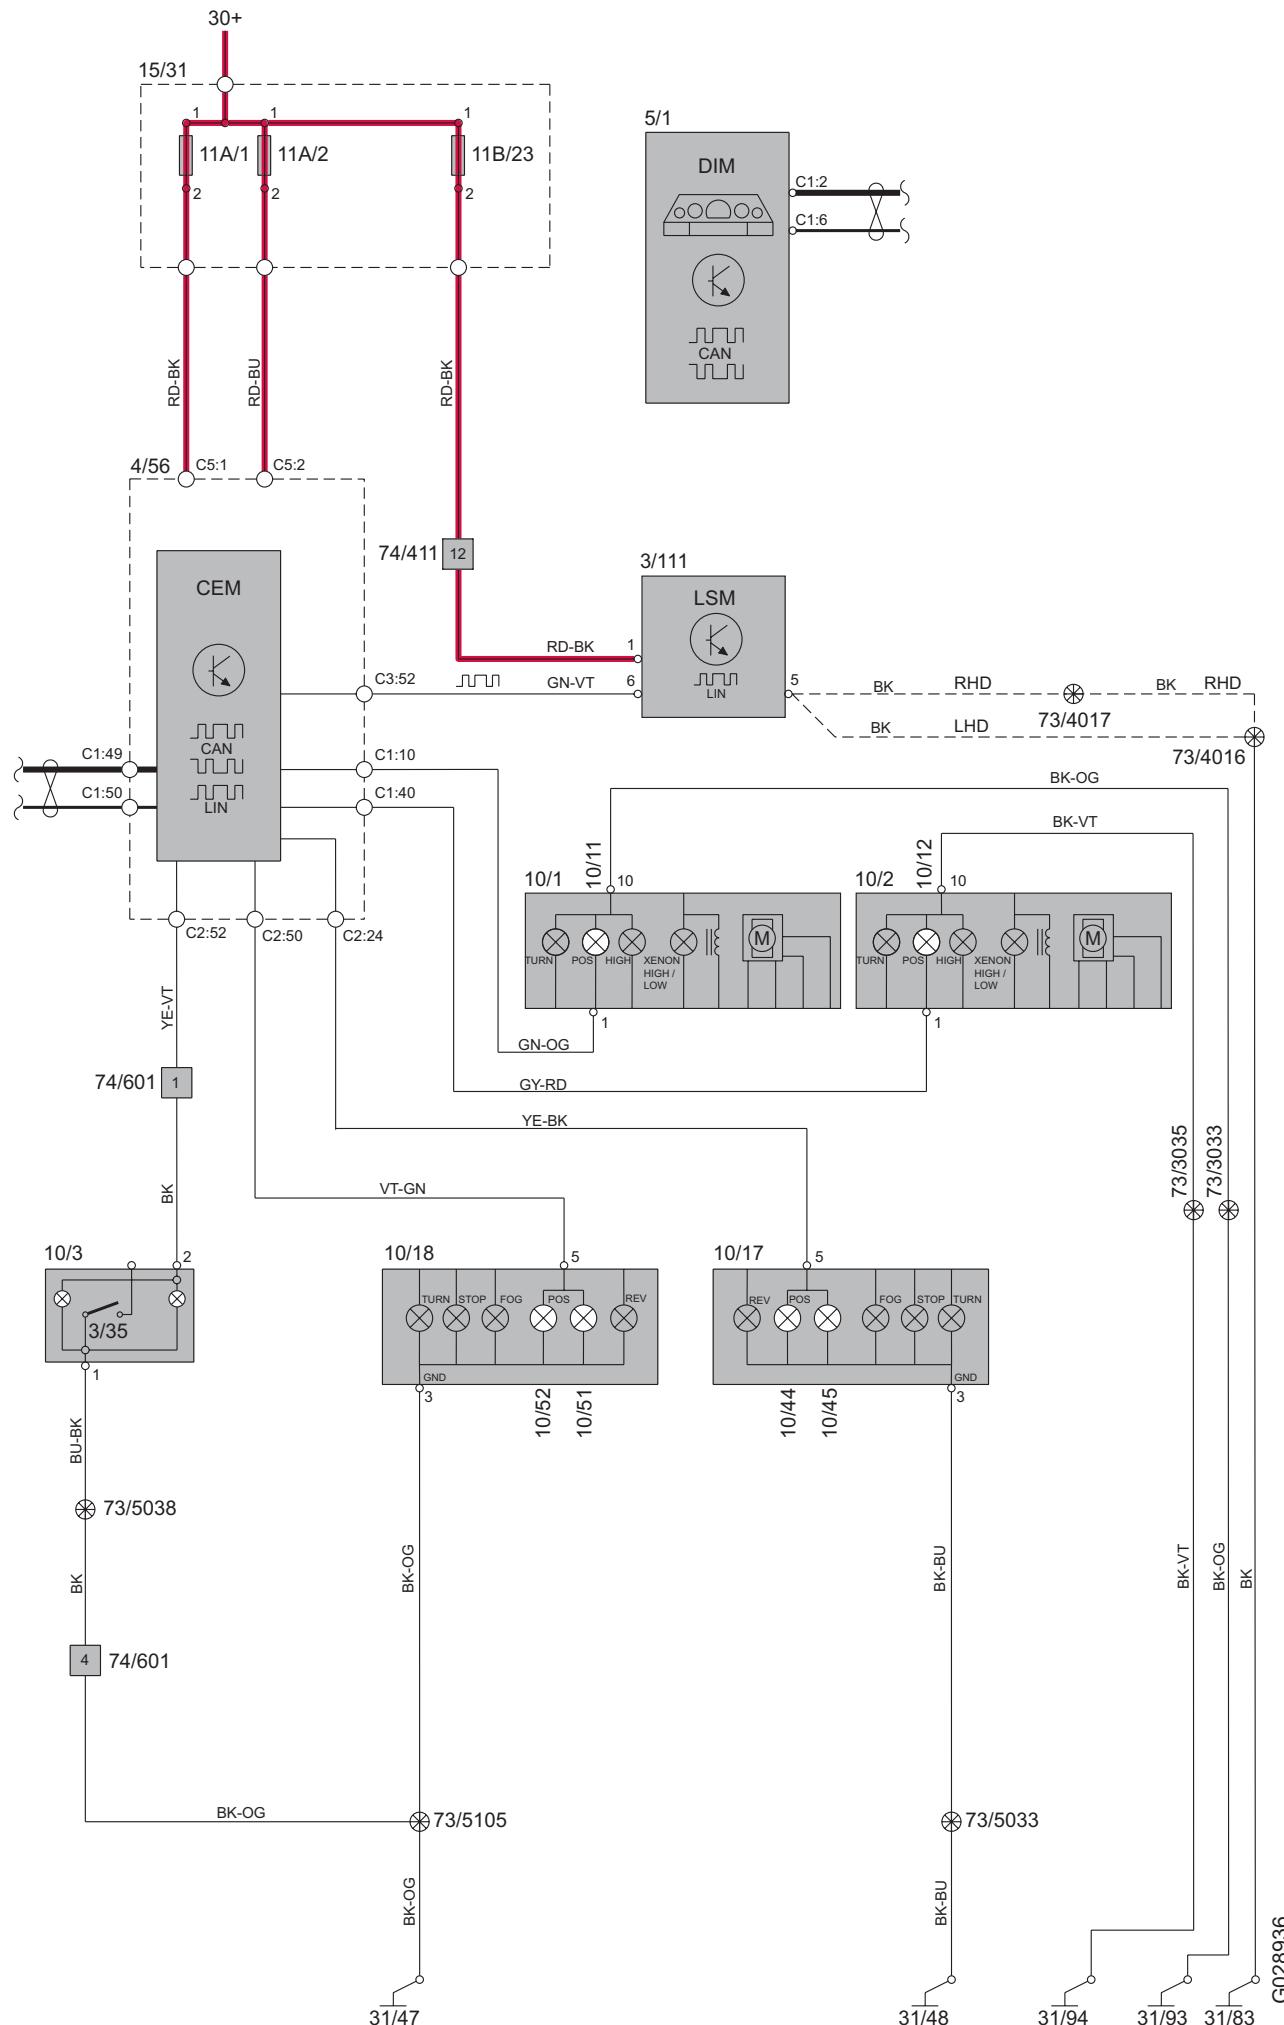


Group 35 Lighting

Fog lights V70

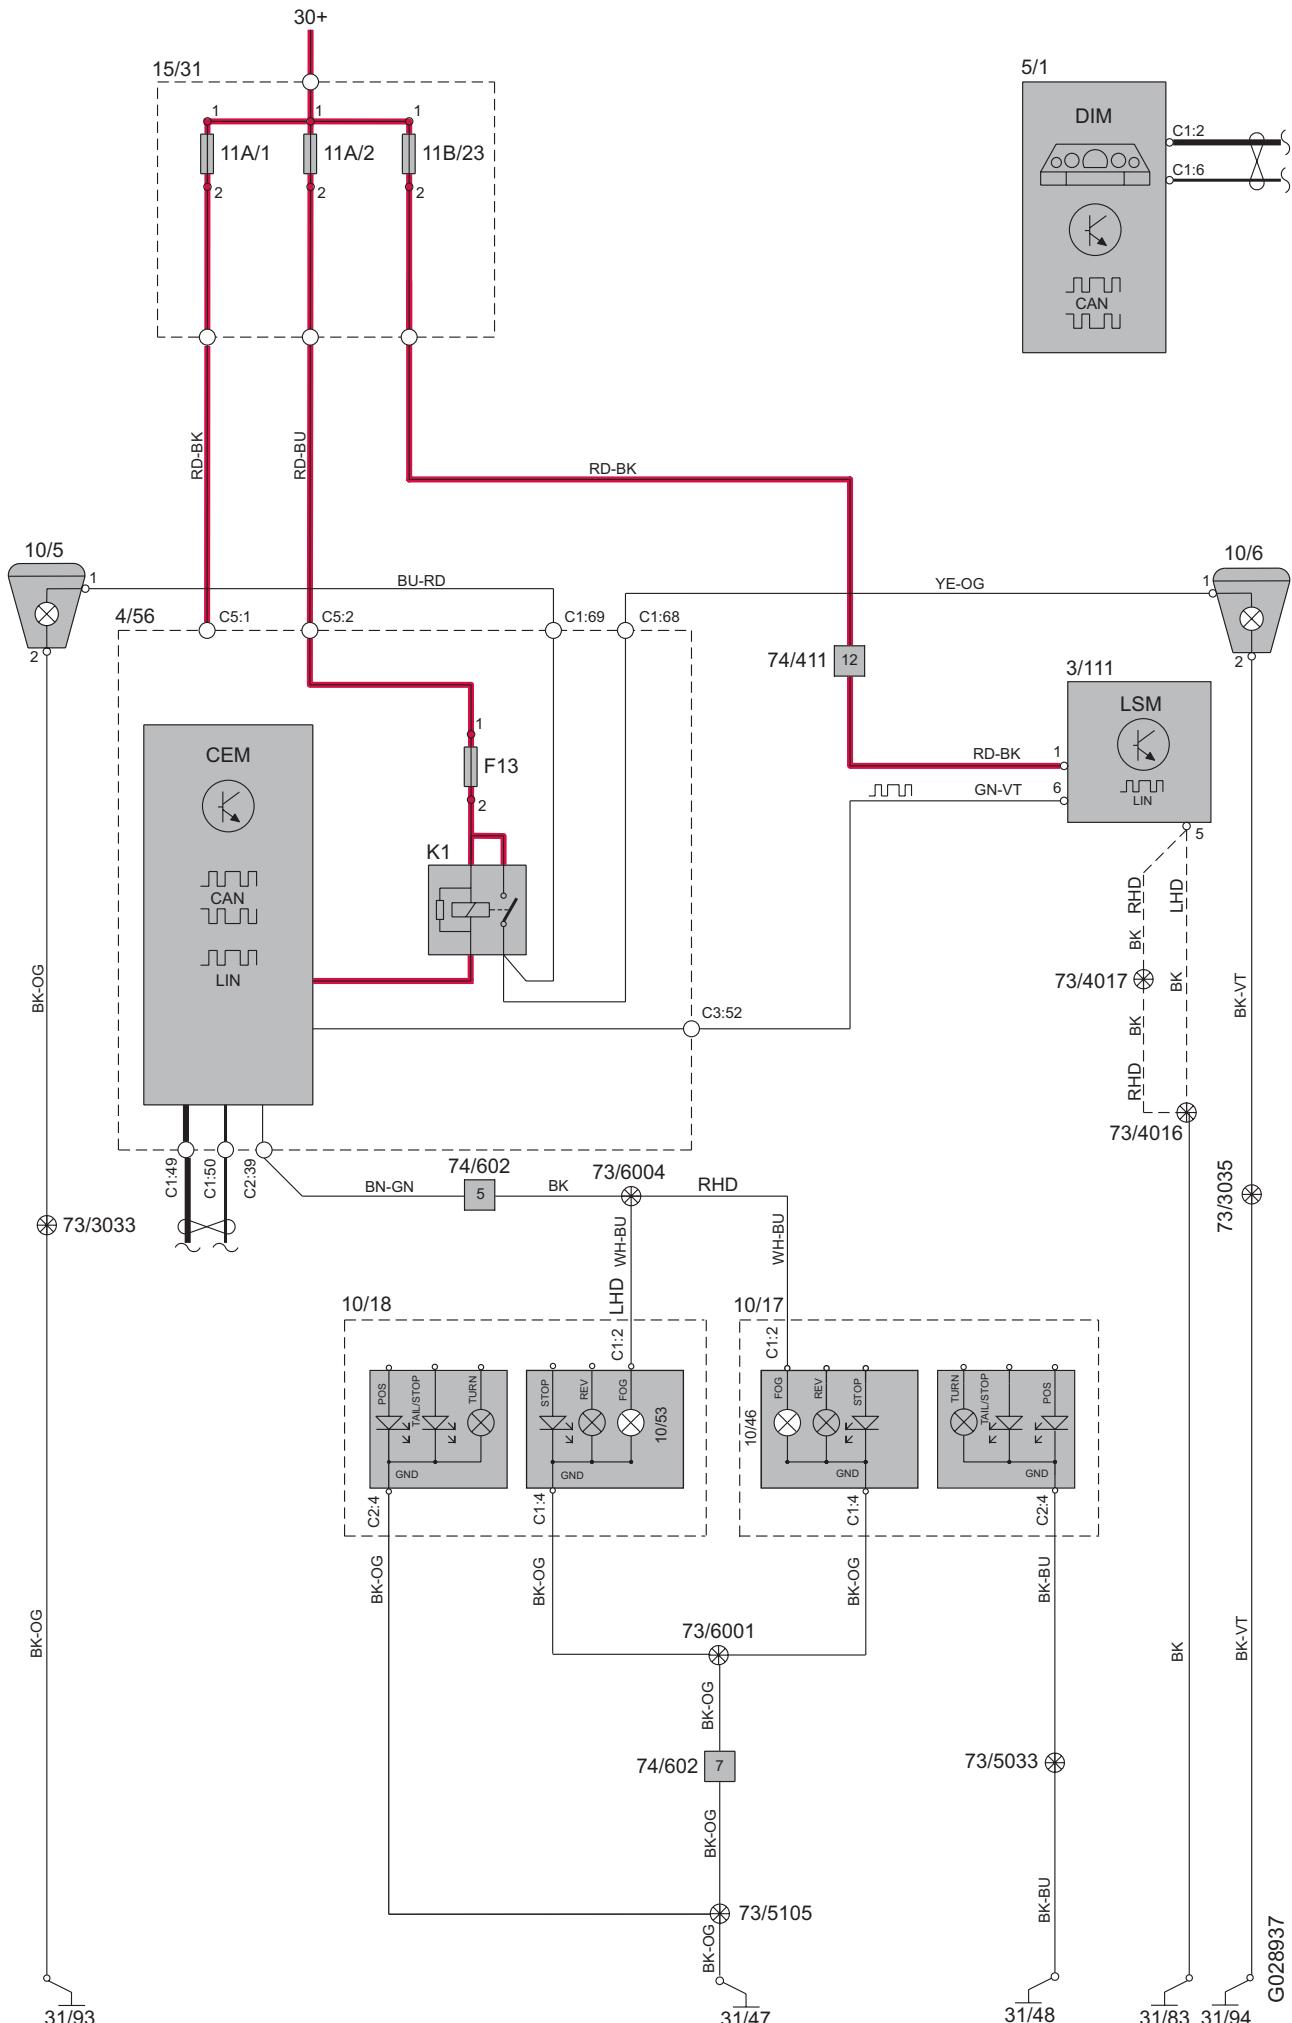


Group 35 Lighting

Fog lights S80

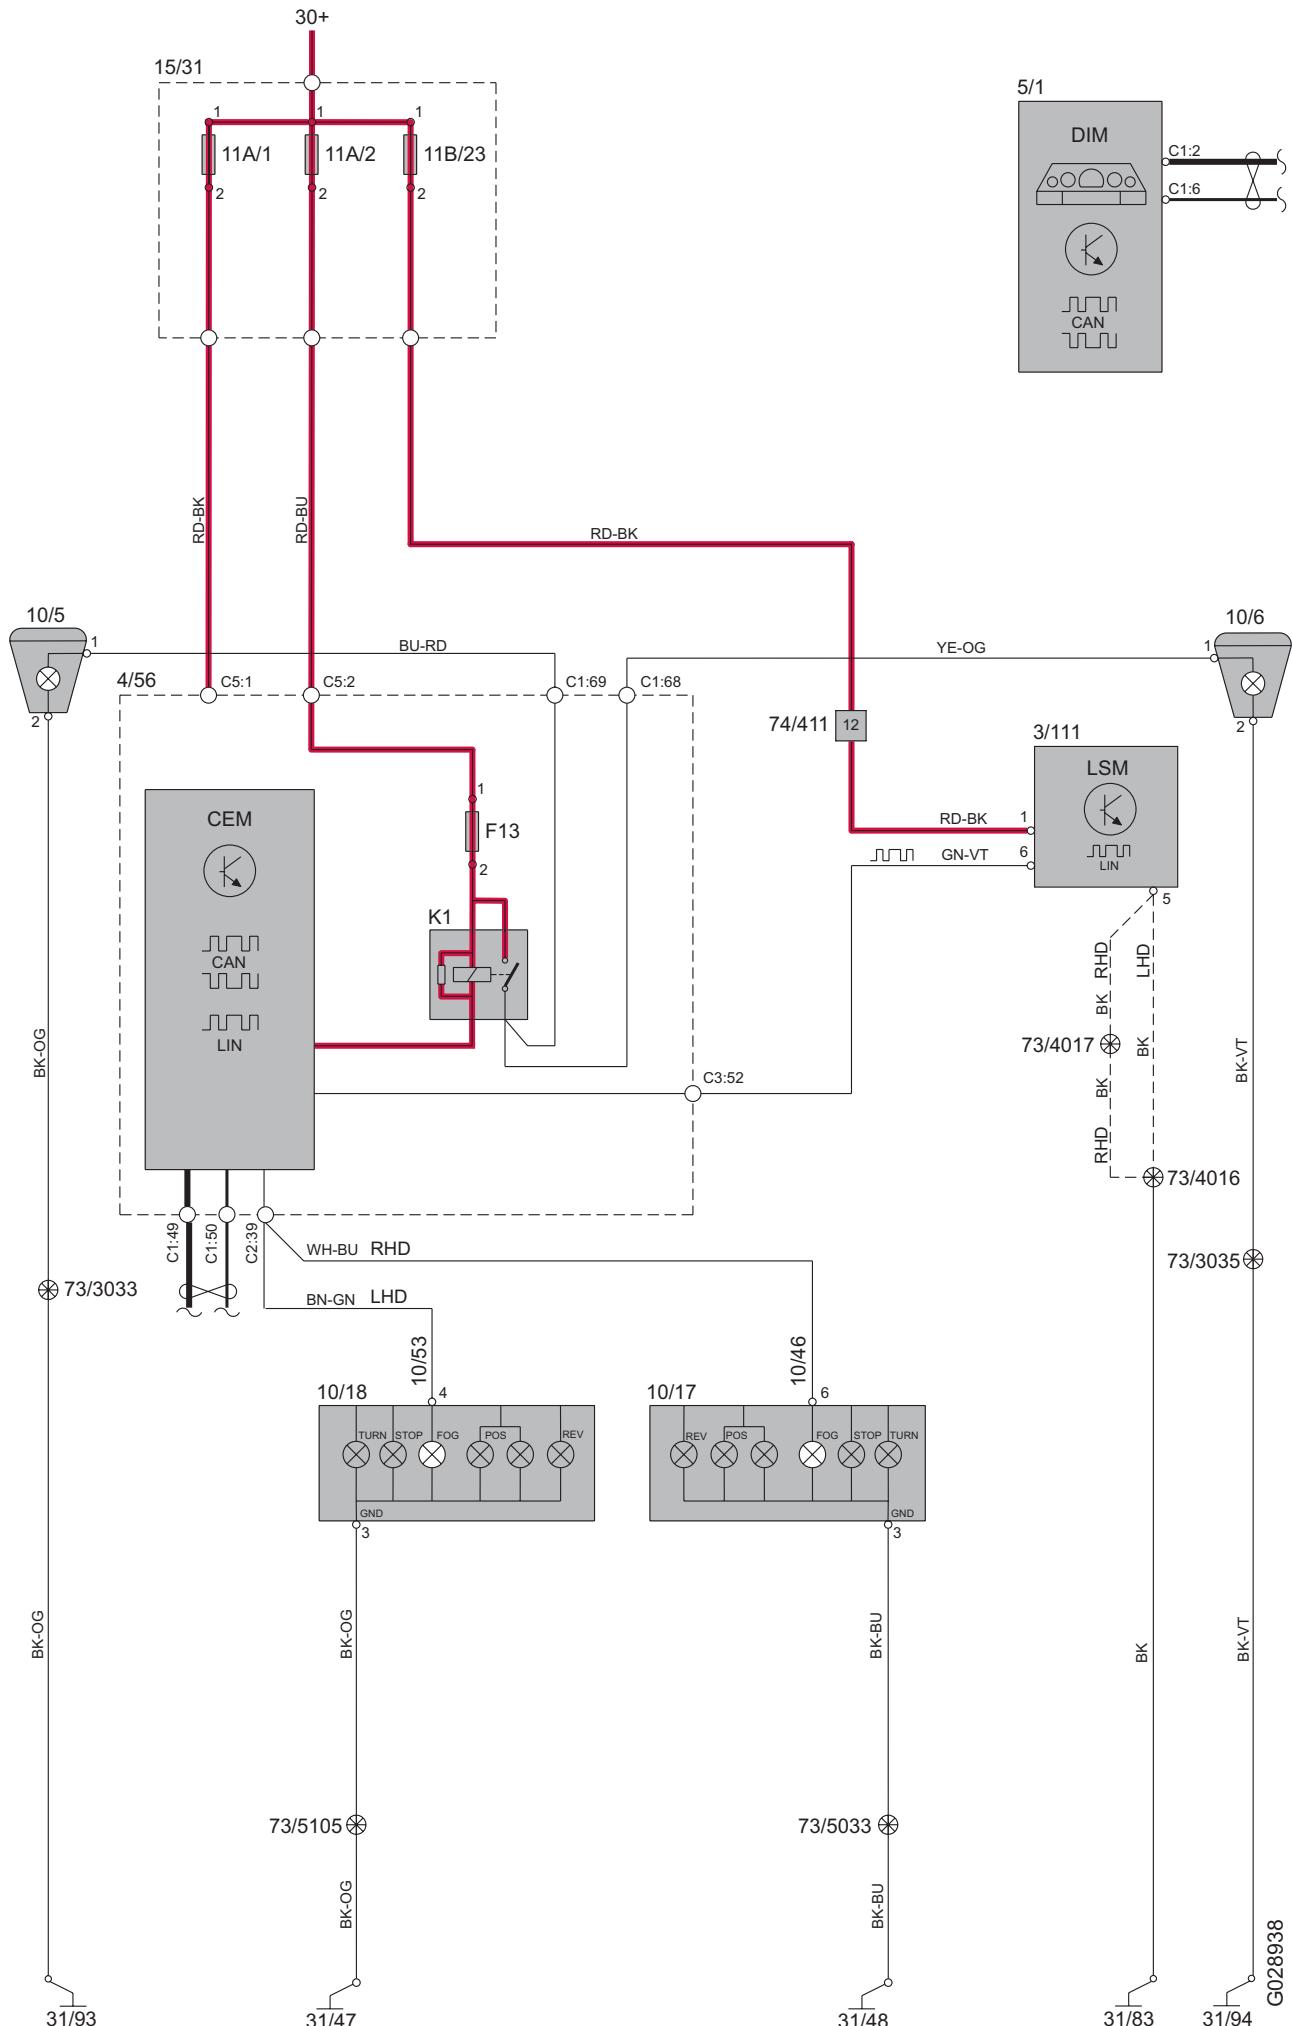

Group 35 Lighting


Brake lights V70

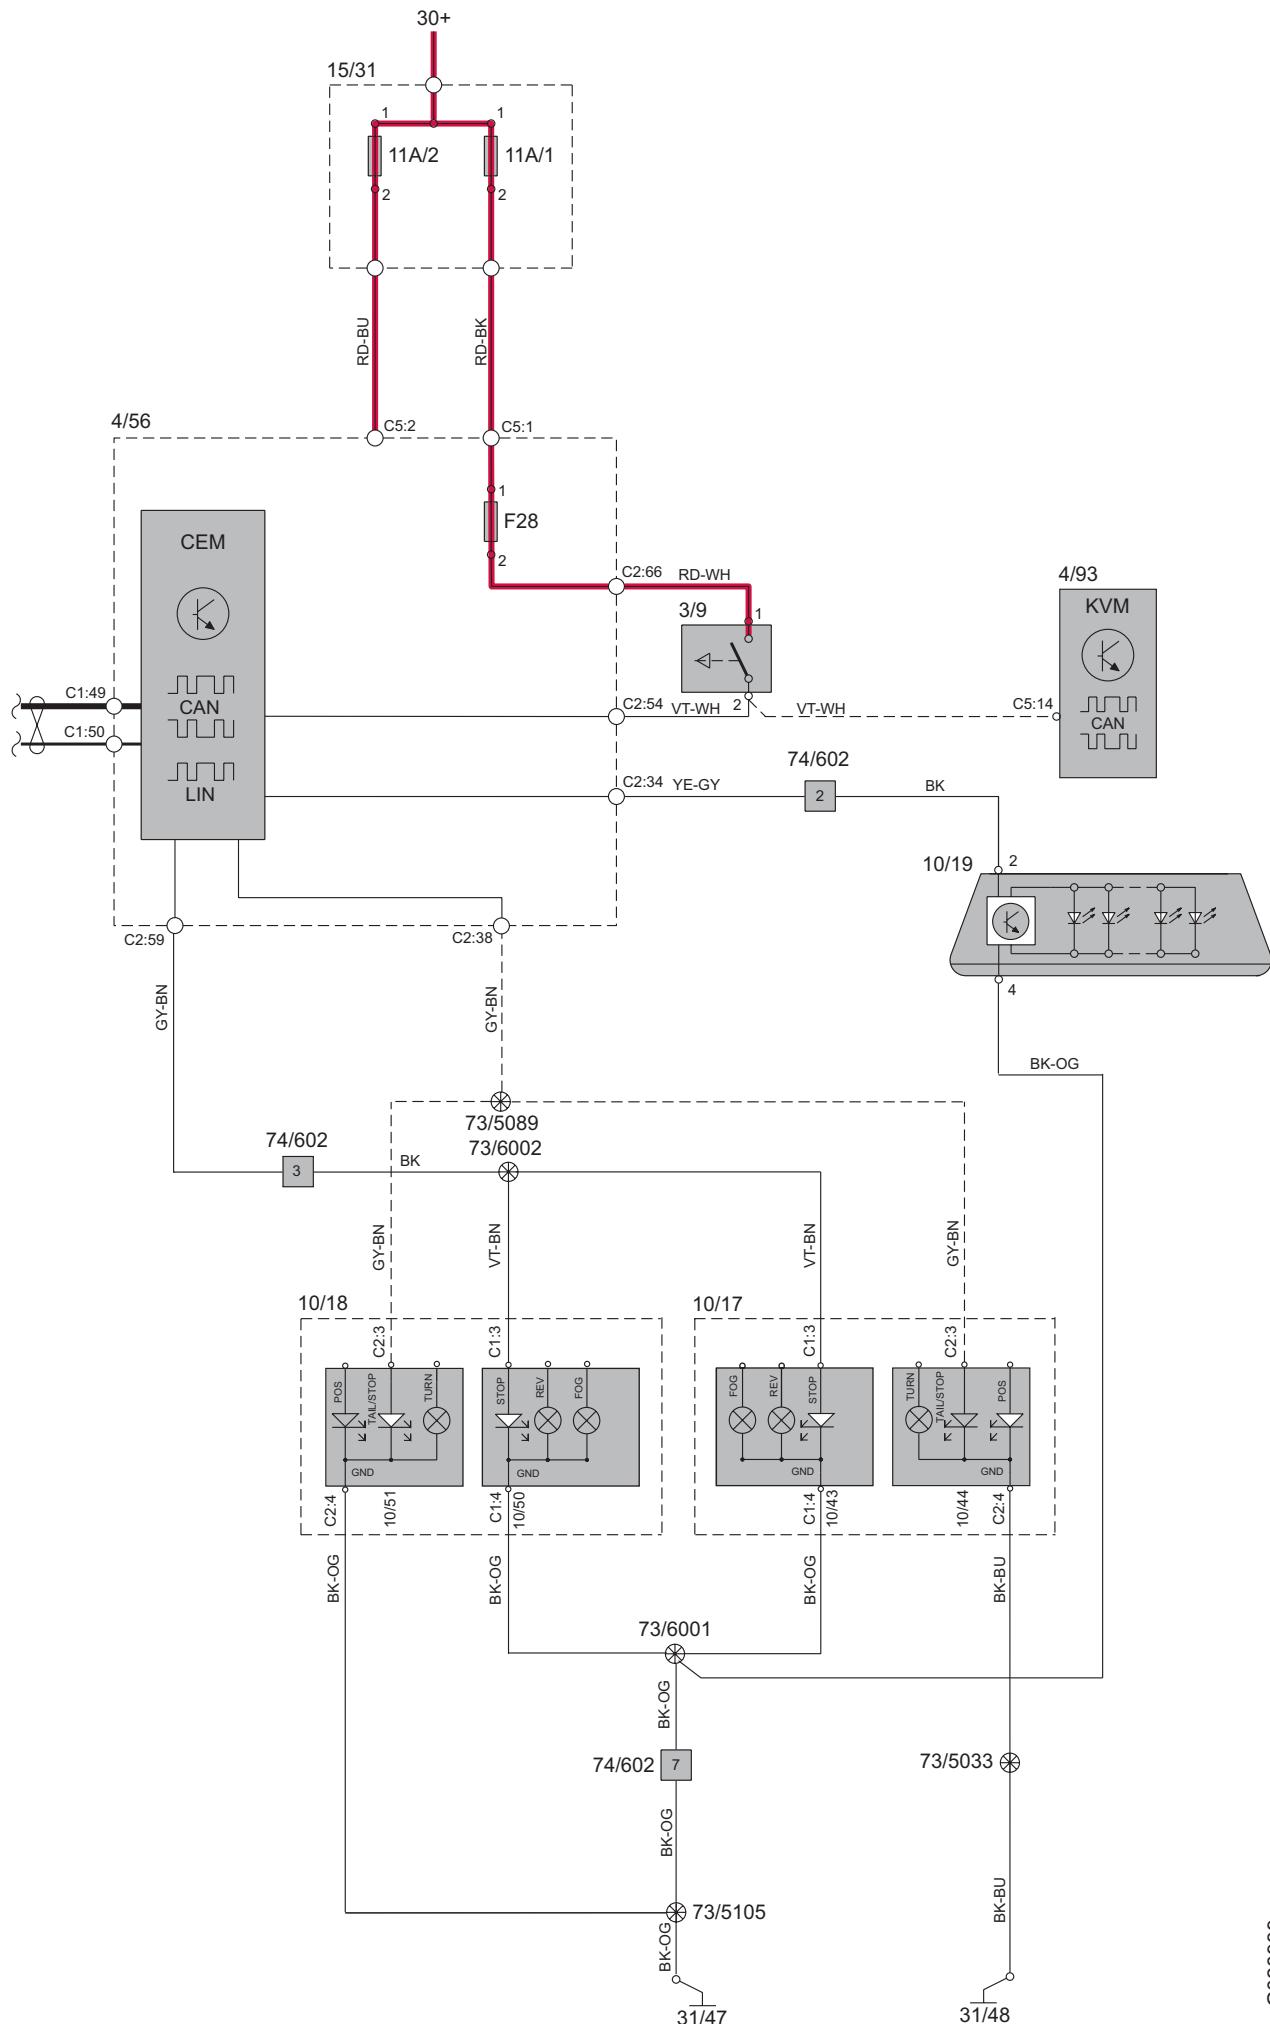

G028939


Group 35 Lighting

Brake lights S80

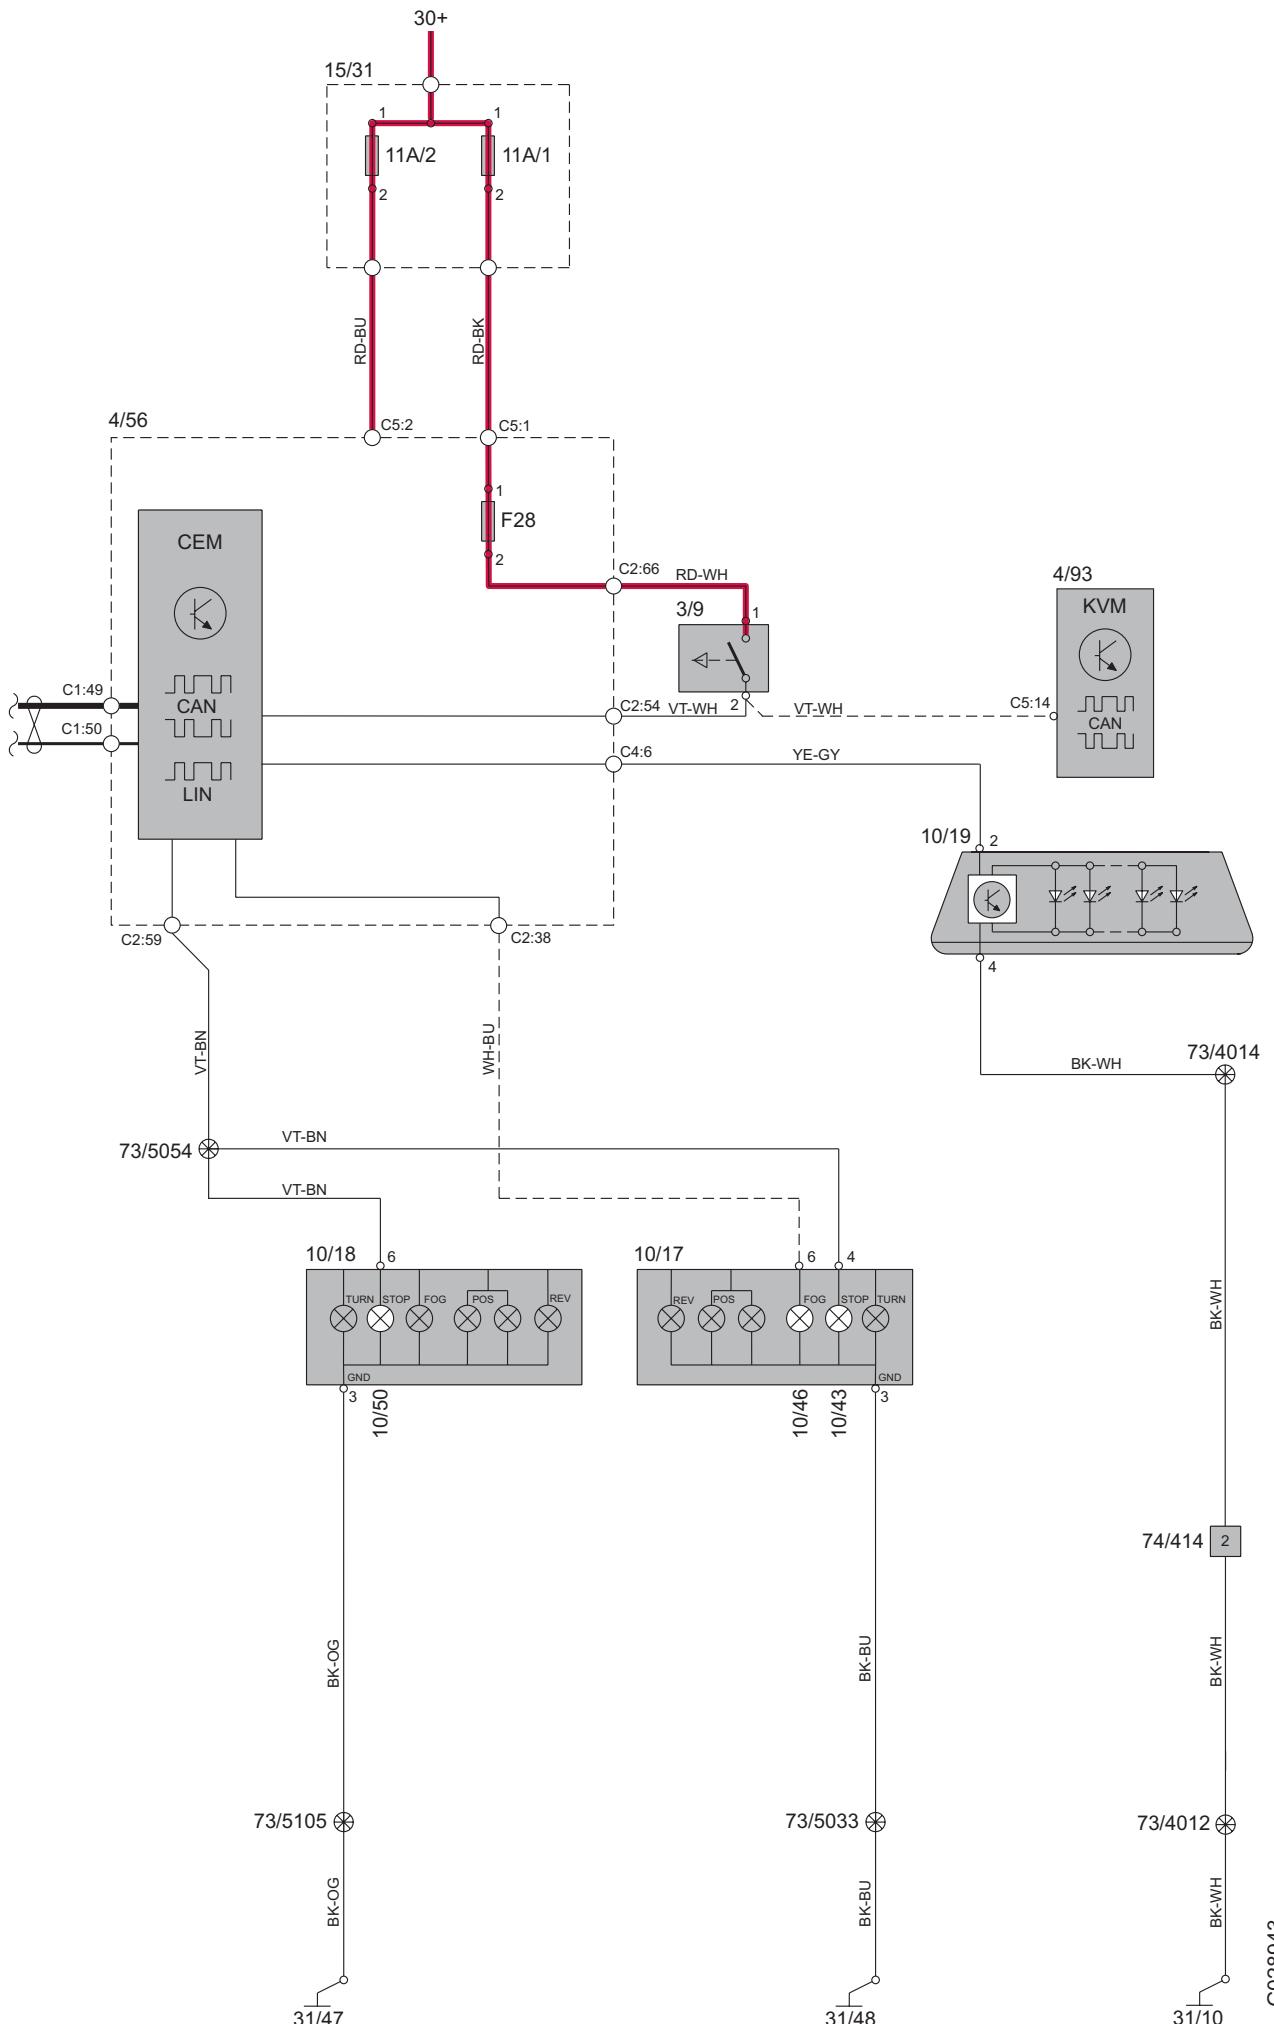


Group 35 Lighting

Reversing lights V70

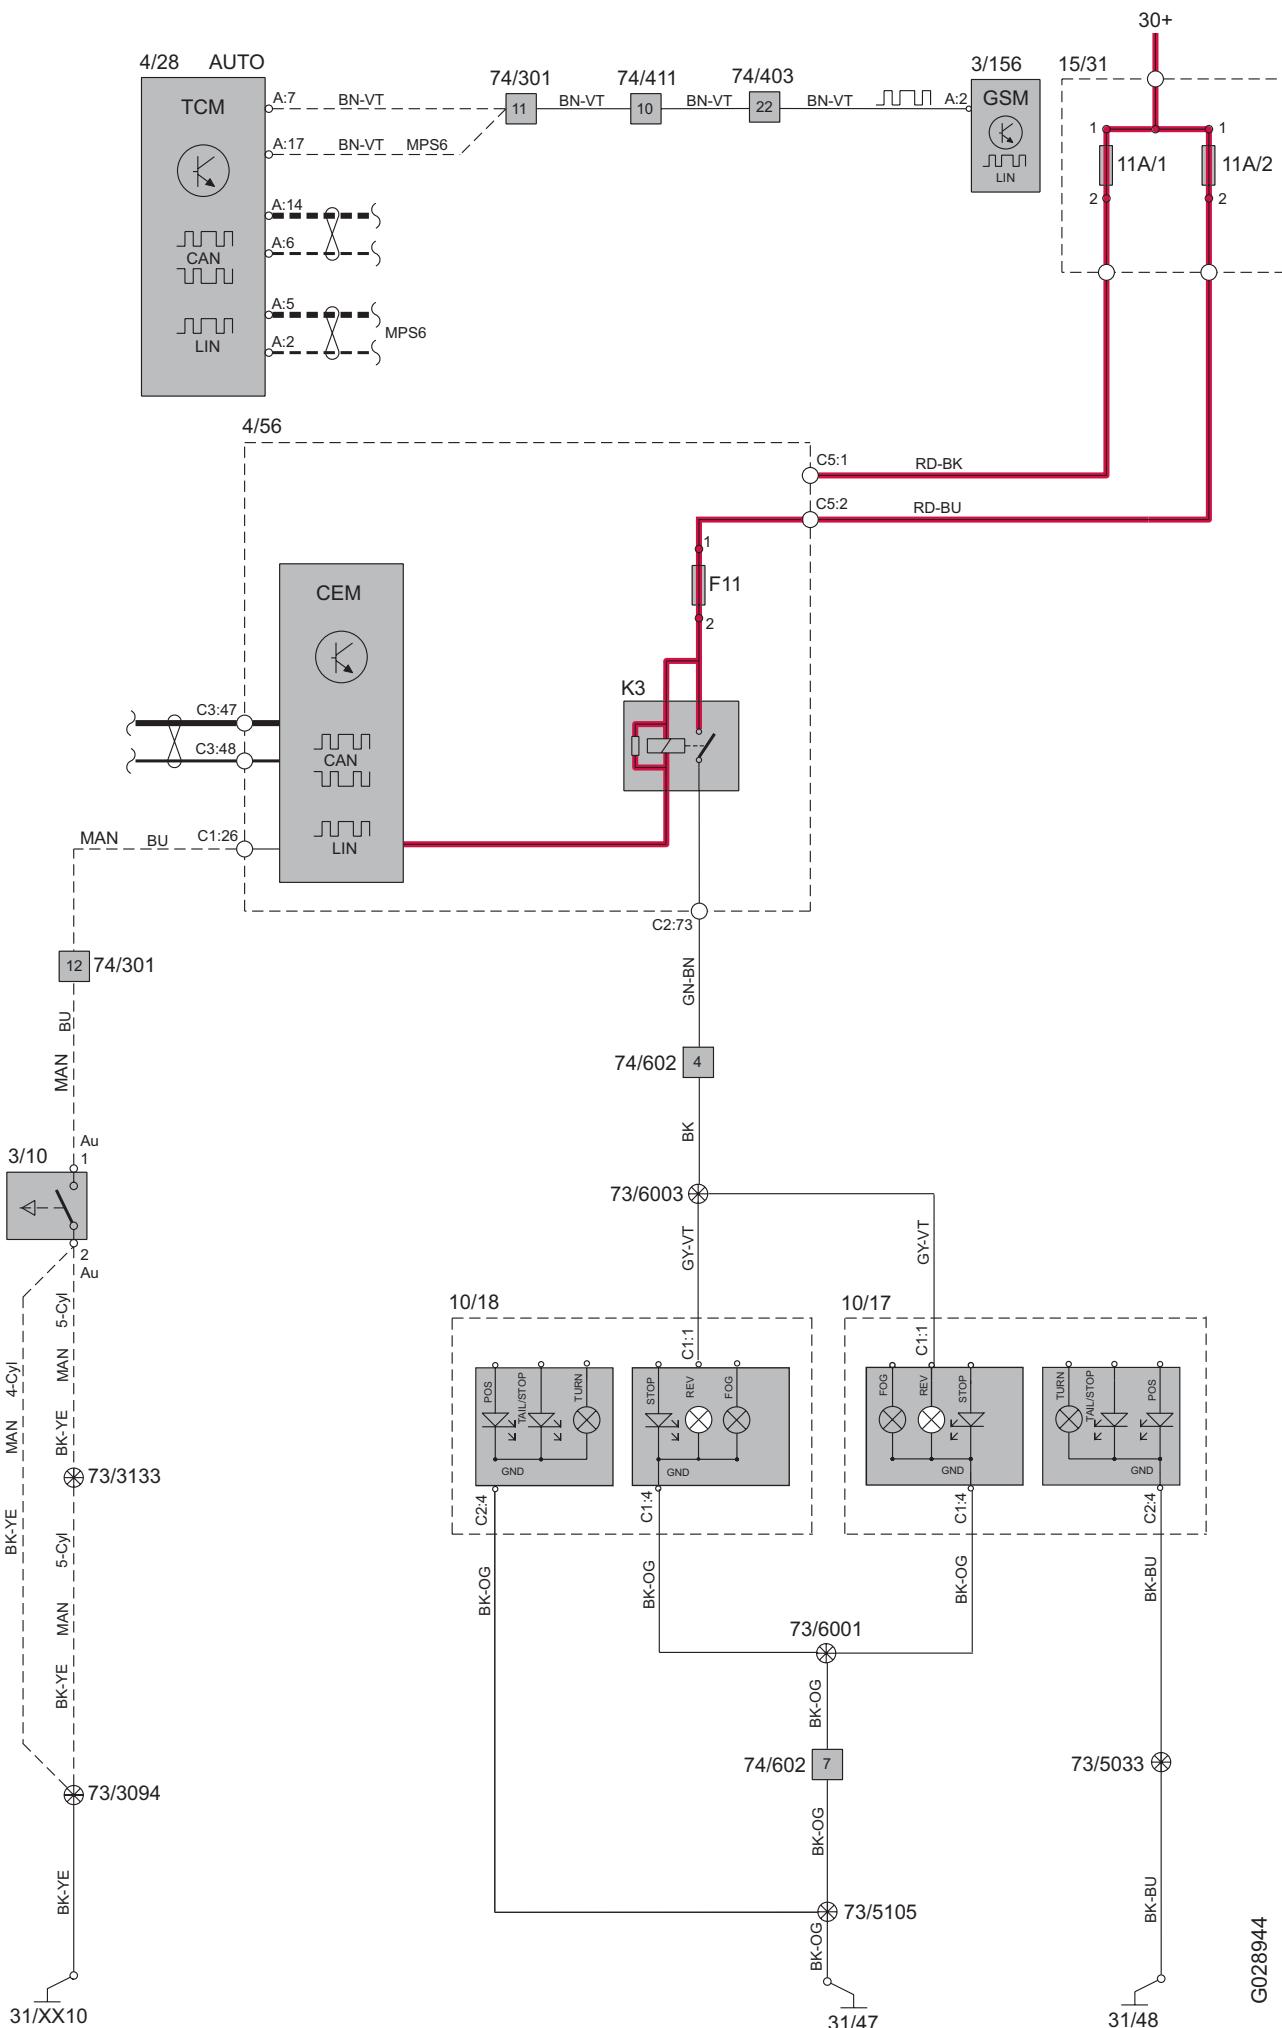


G028944

Group 35 Lighting Reversing lights S80

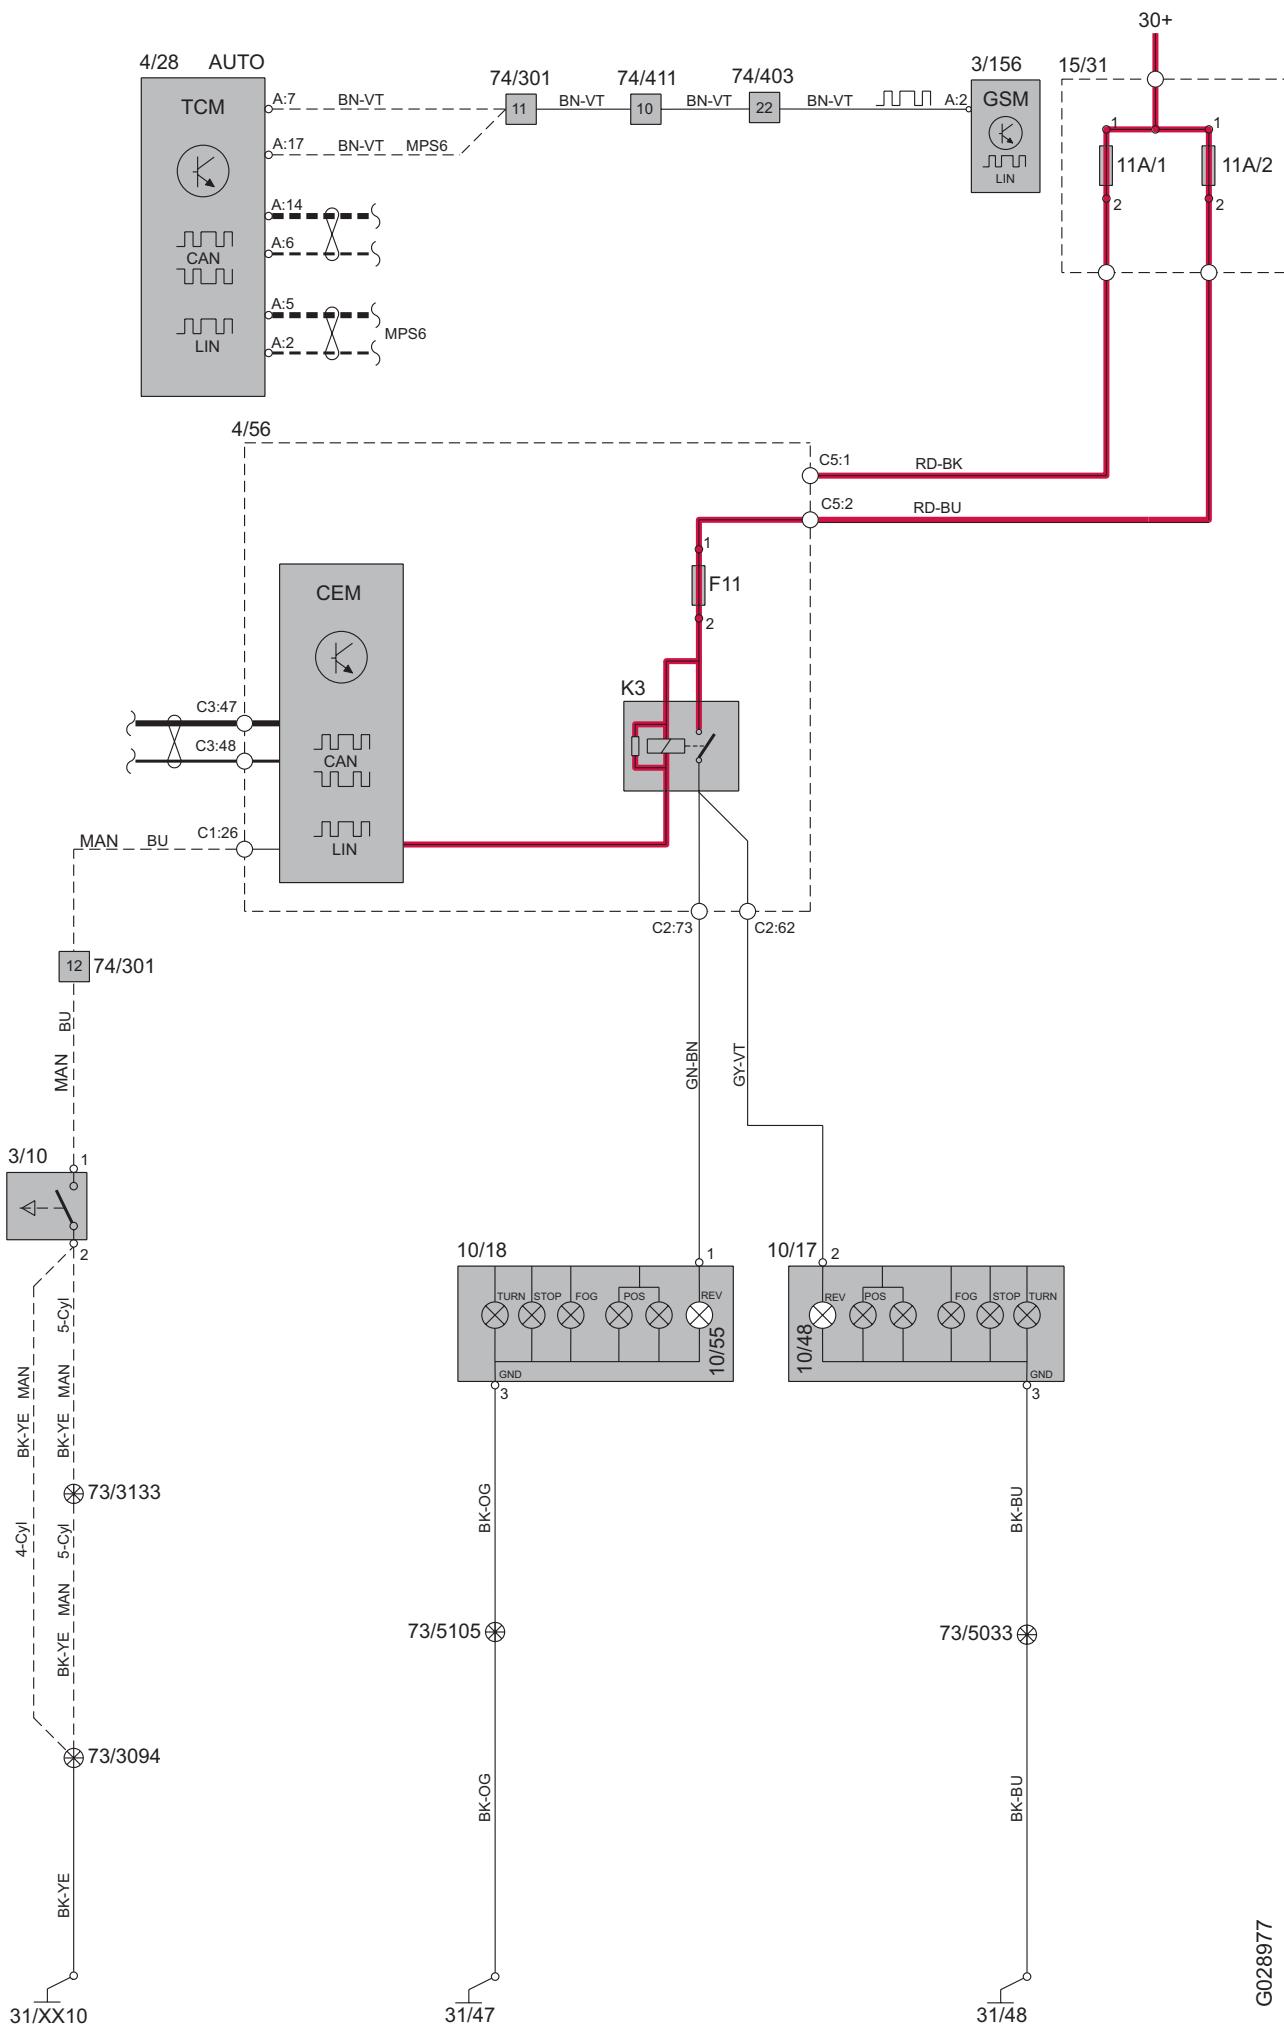


Group 35 Lighting

Follow-me-home lighting LHD

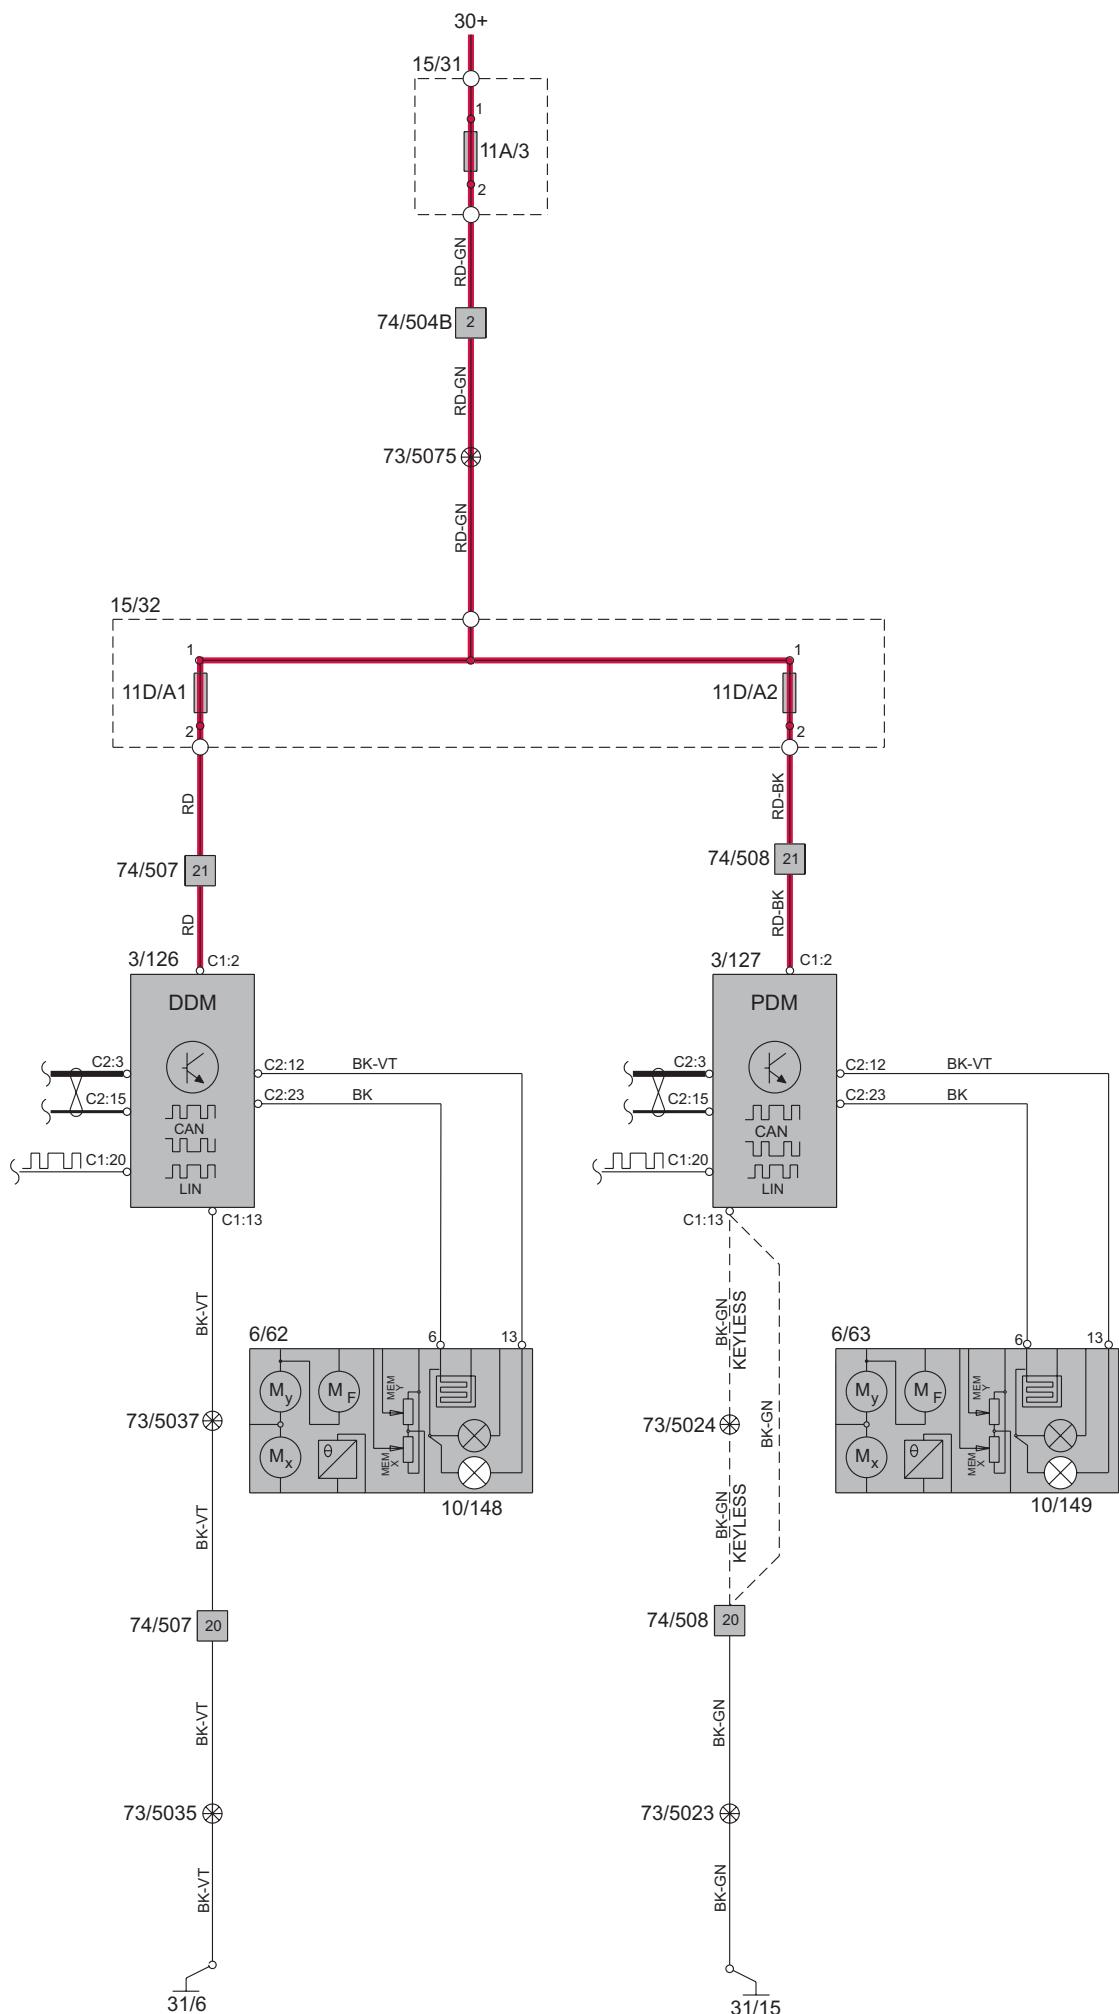


Group 35 Lighting

Follow-me-home lighting RHD

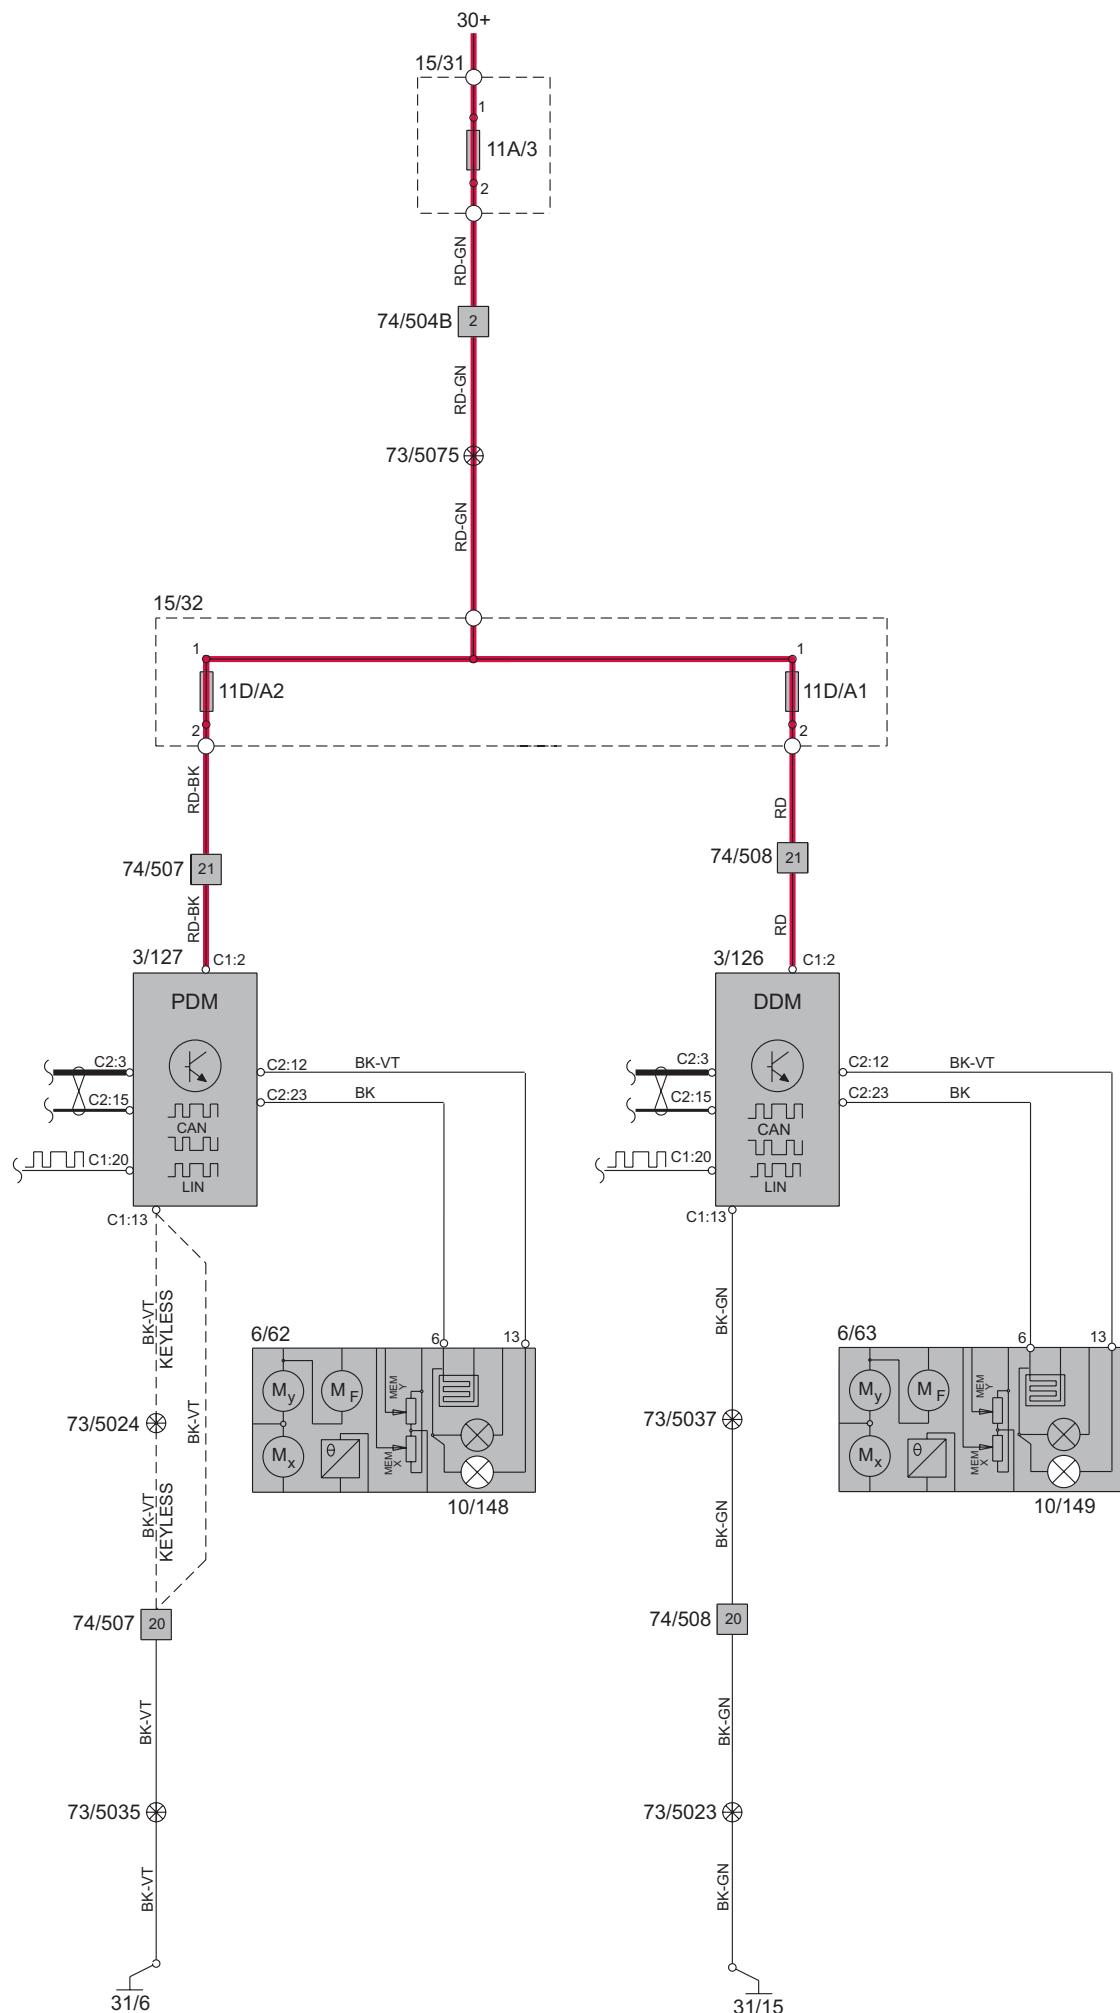


Group 35 Lighting

Interior lighting, LHD 1:2

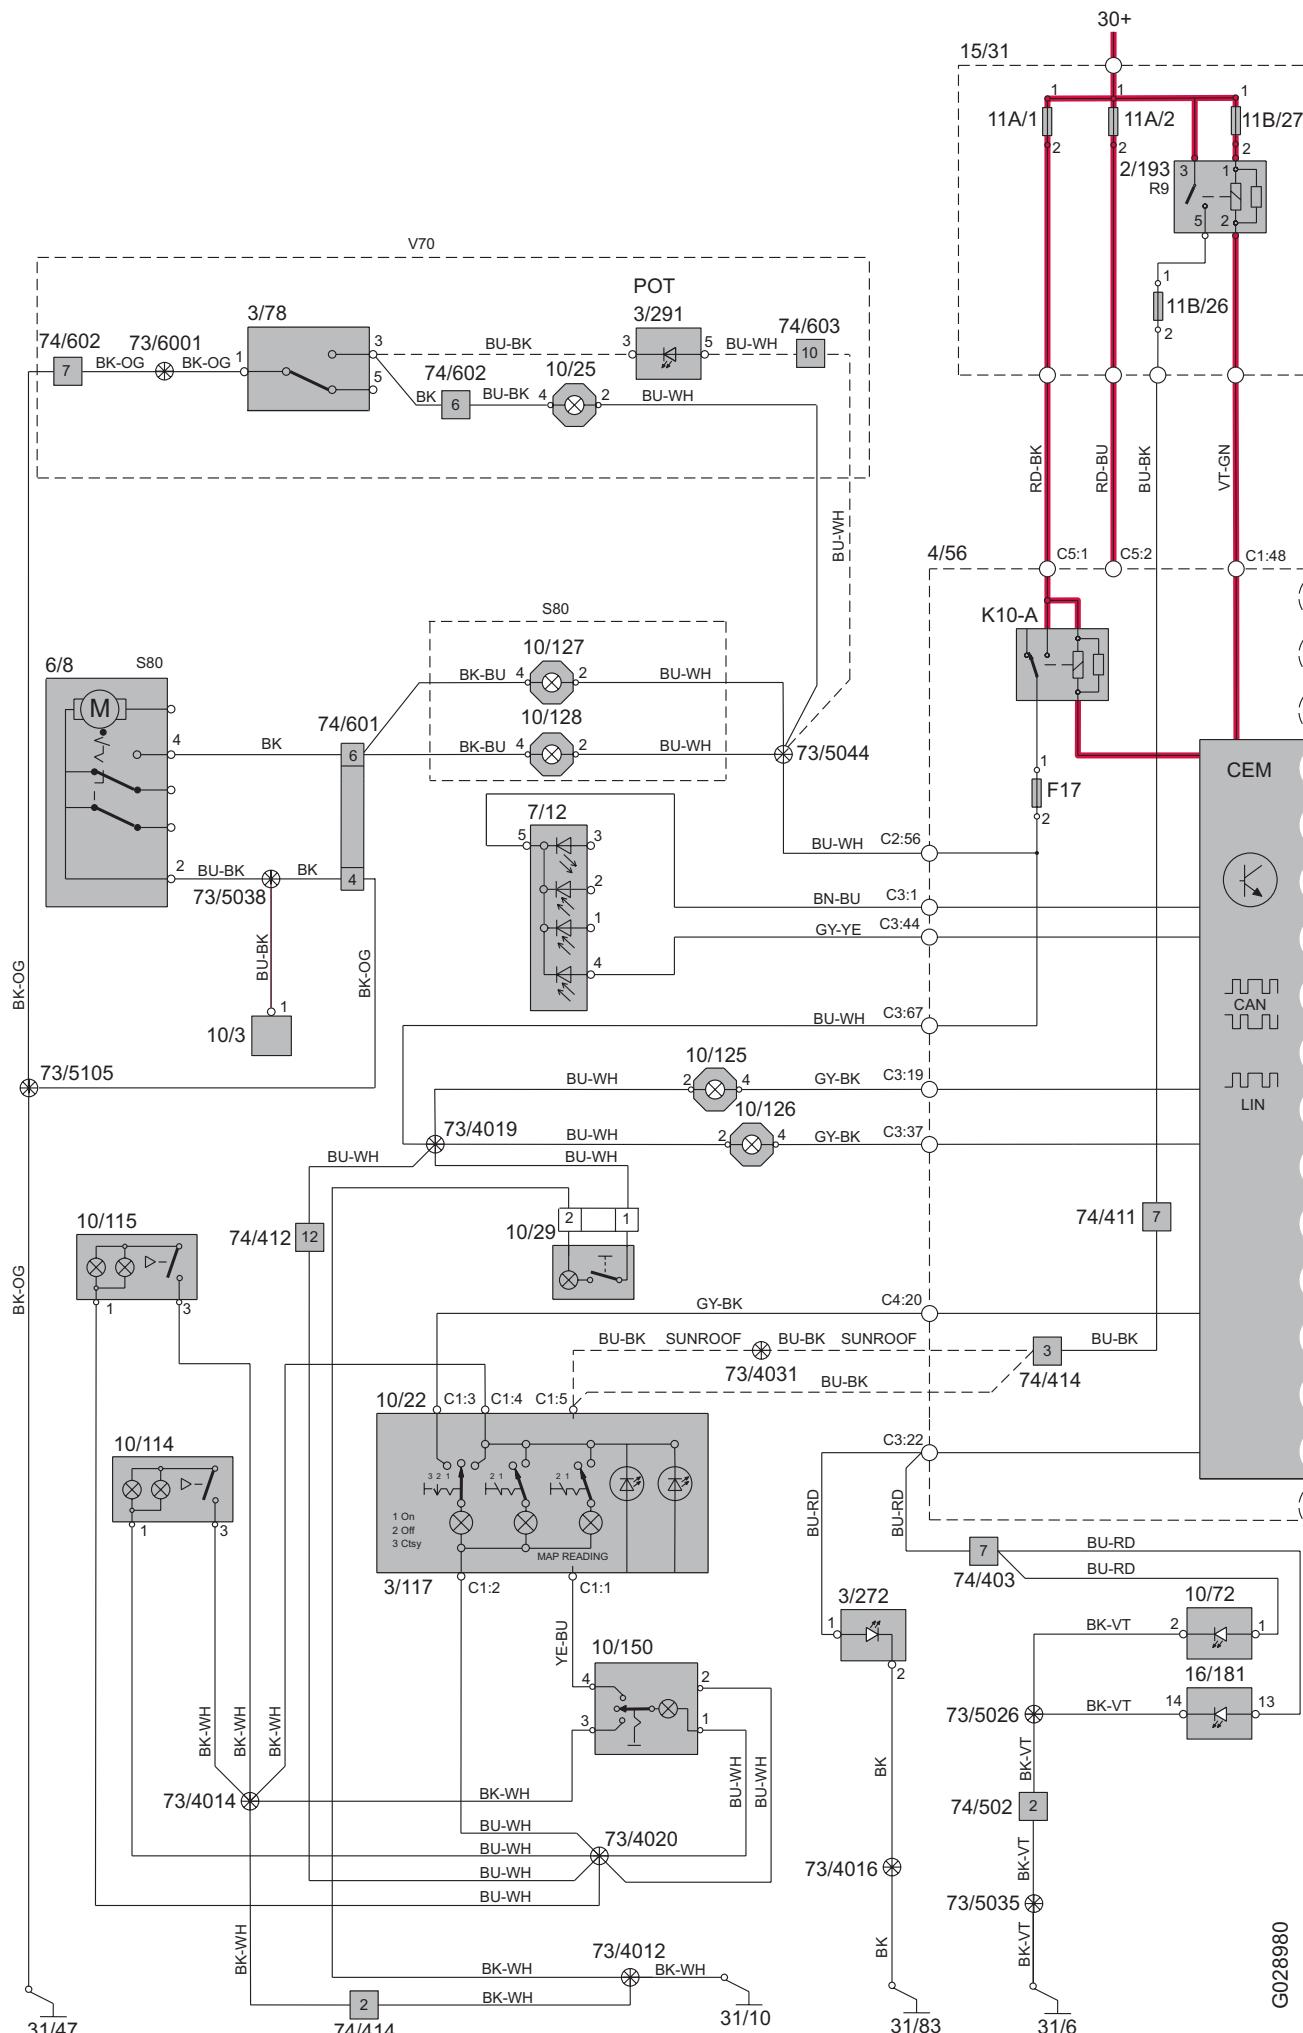


Group 35 Lighting

Interior lighting, LHD 2:2

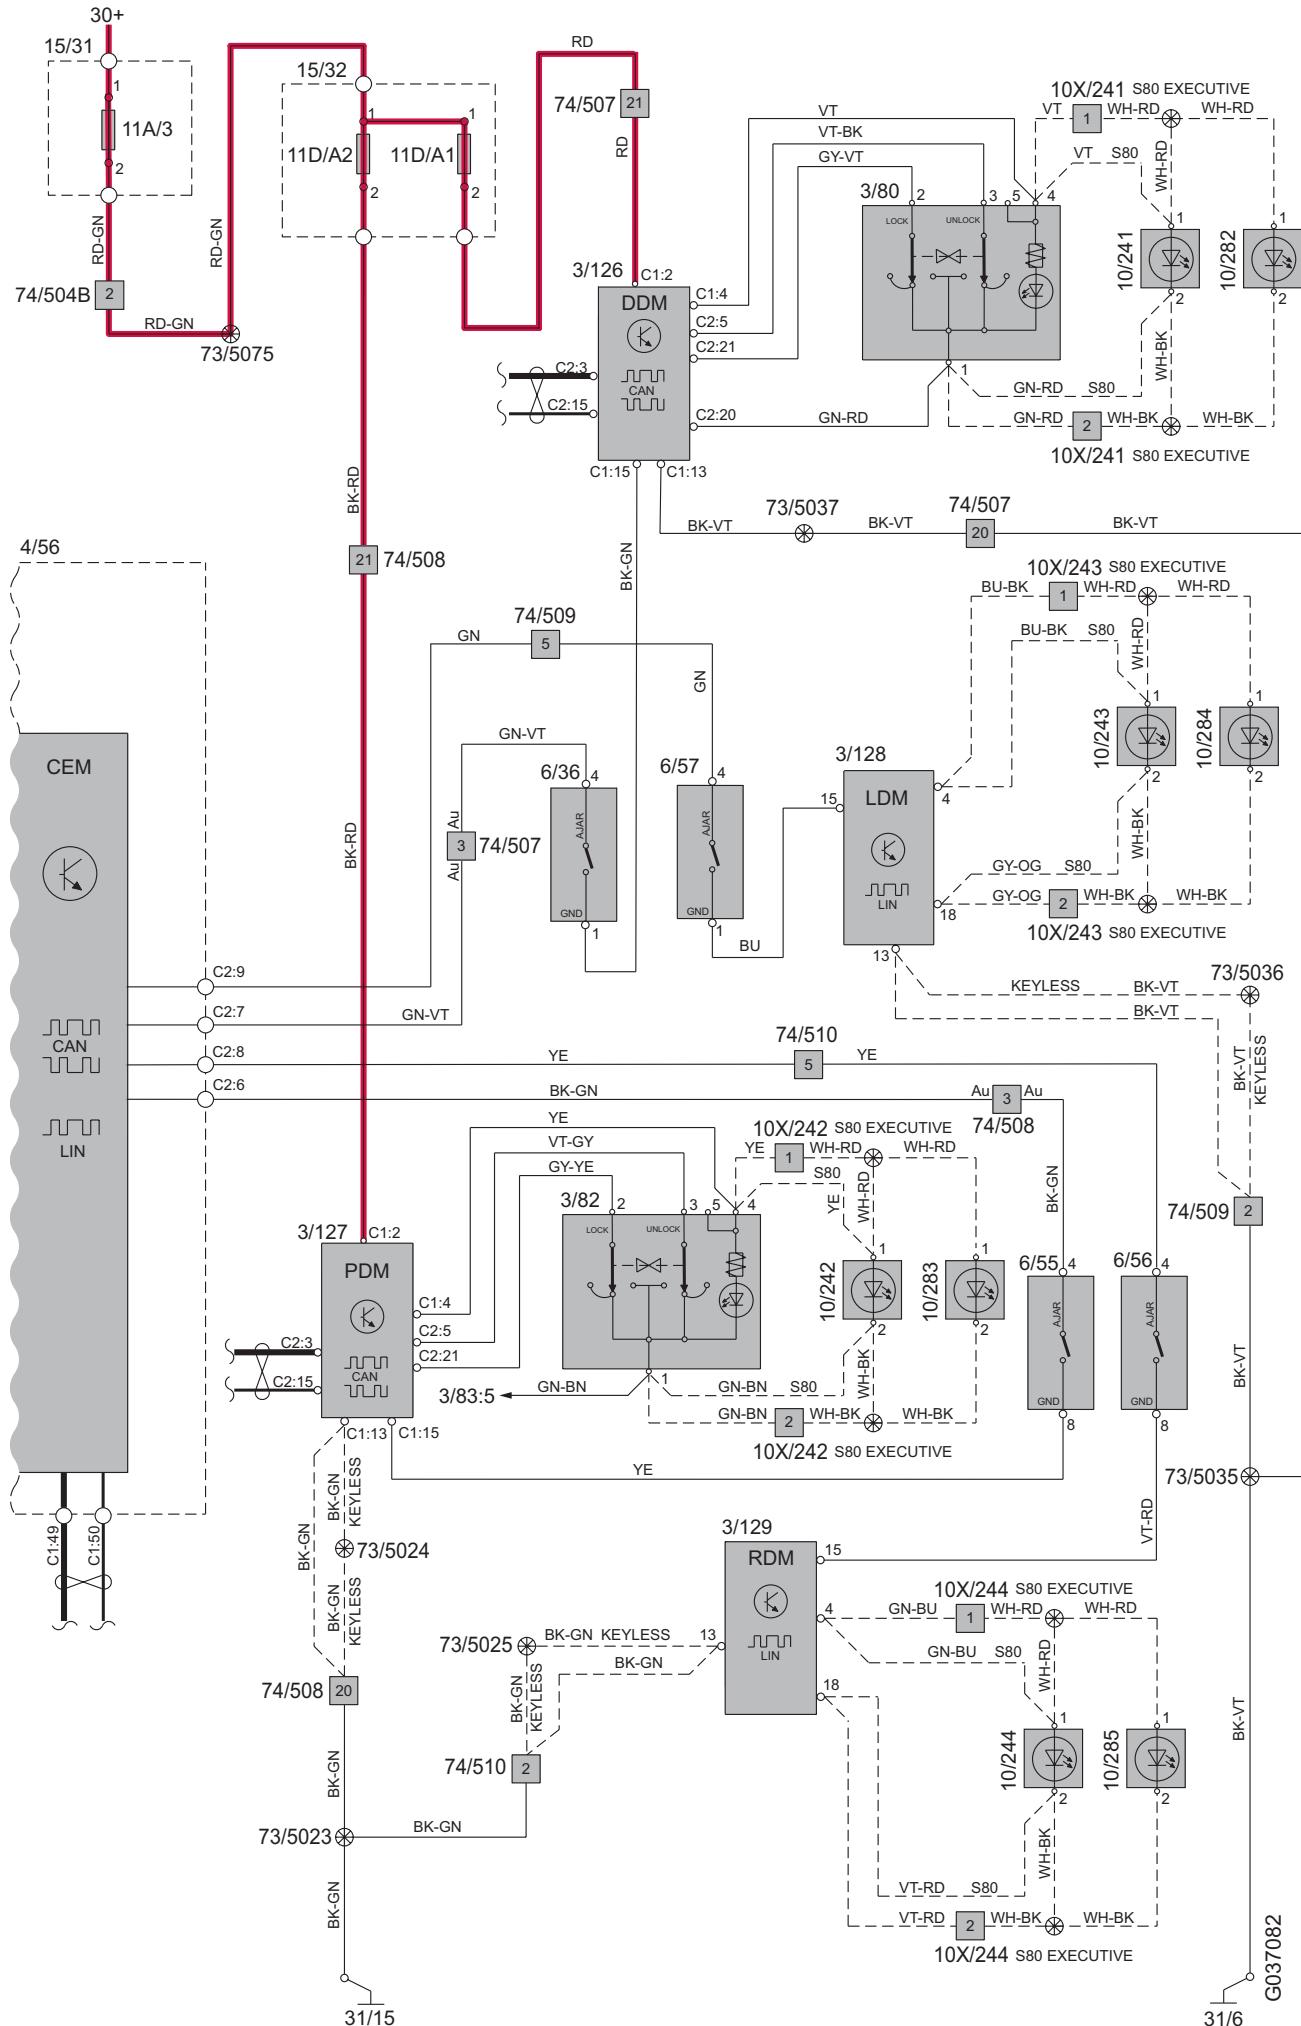


Group 35 Lighting

Interior lighting, RHD 1:2

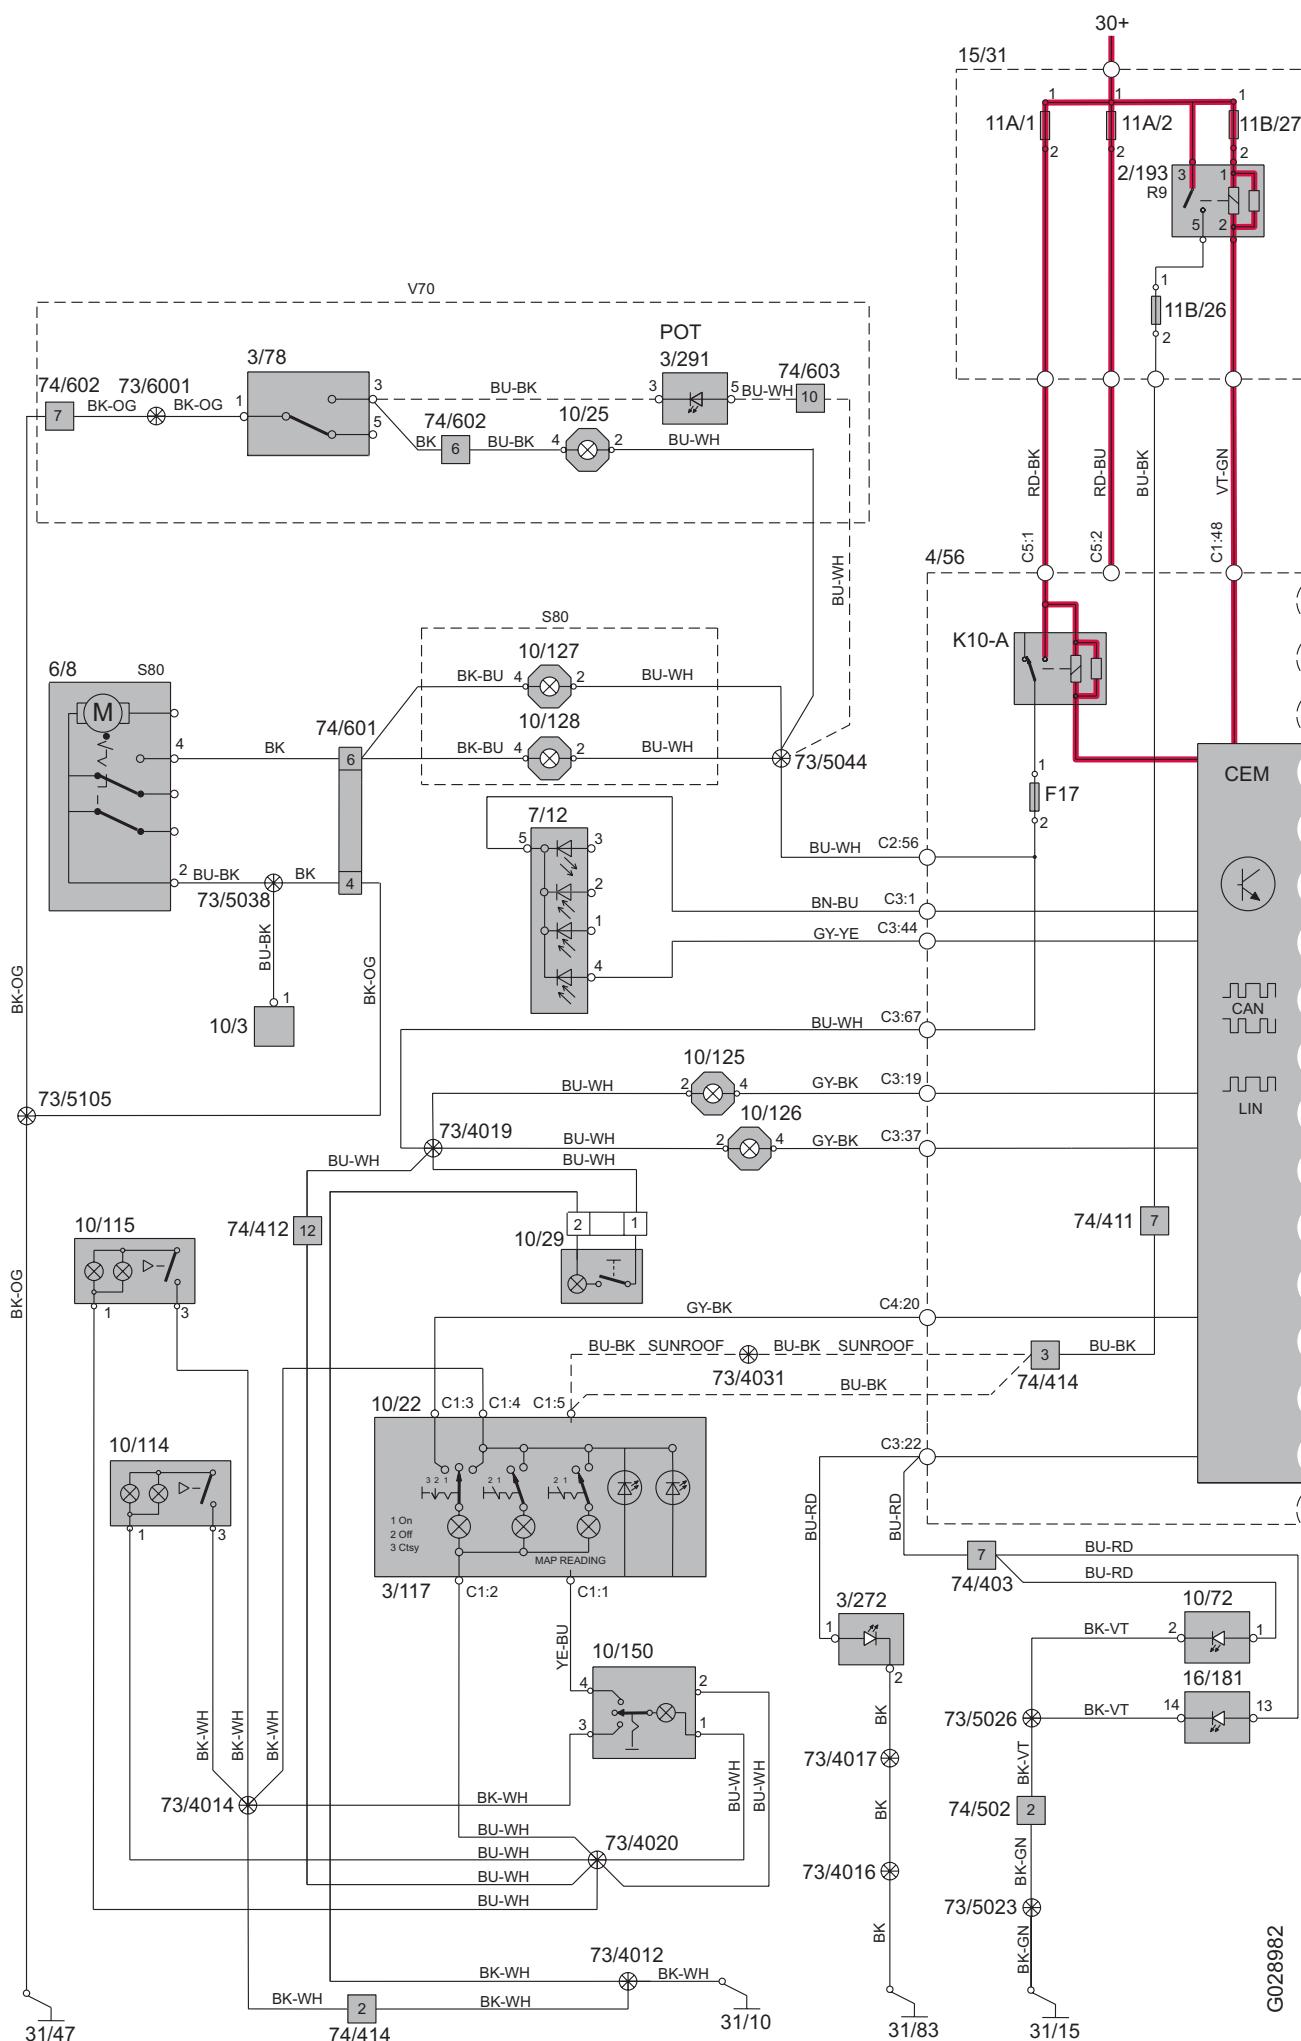


Group 35 Lighting

Interior lighting, RHD 2:2

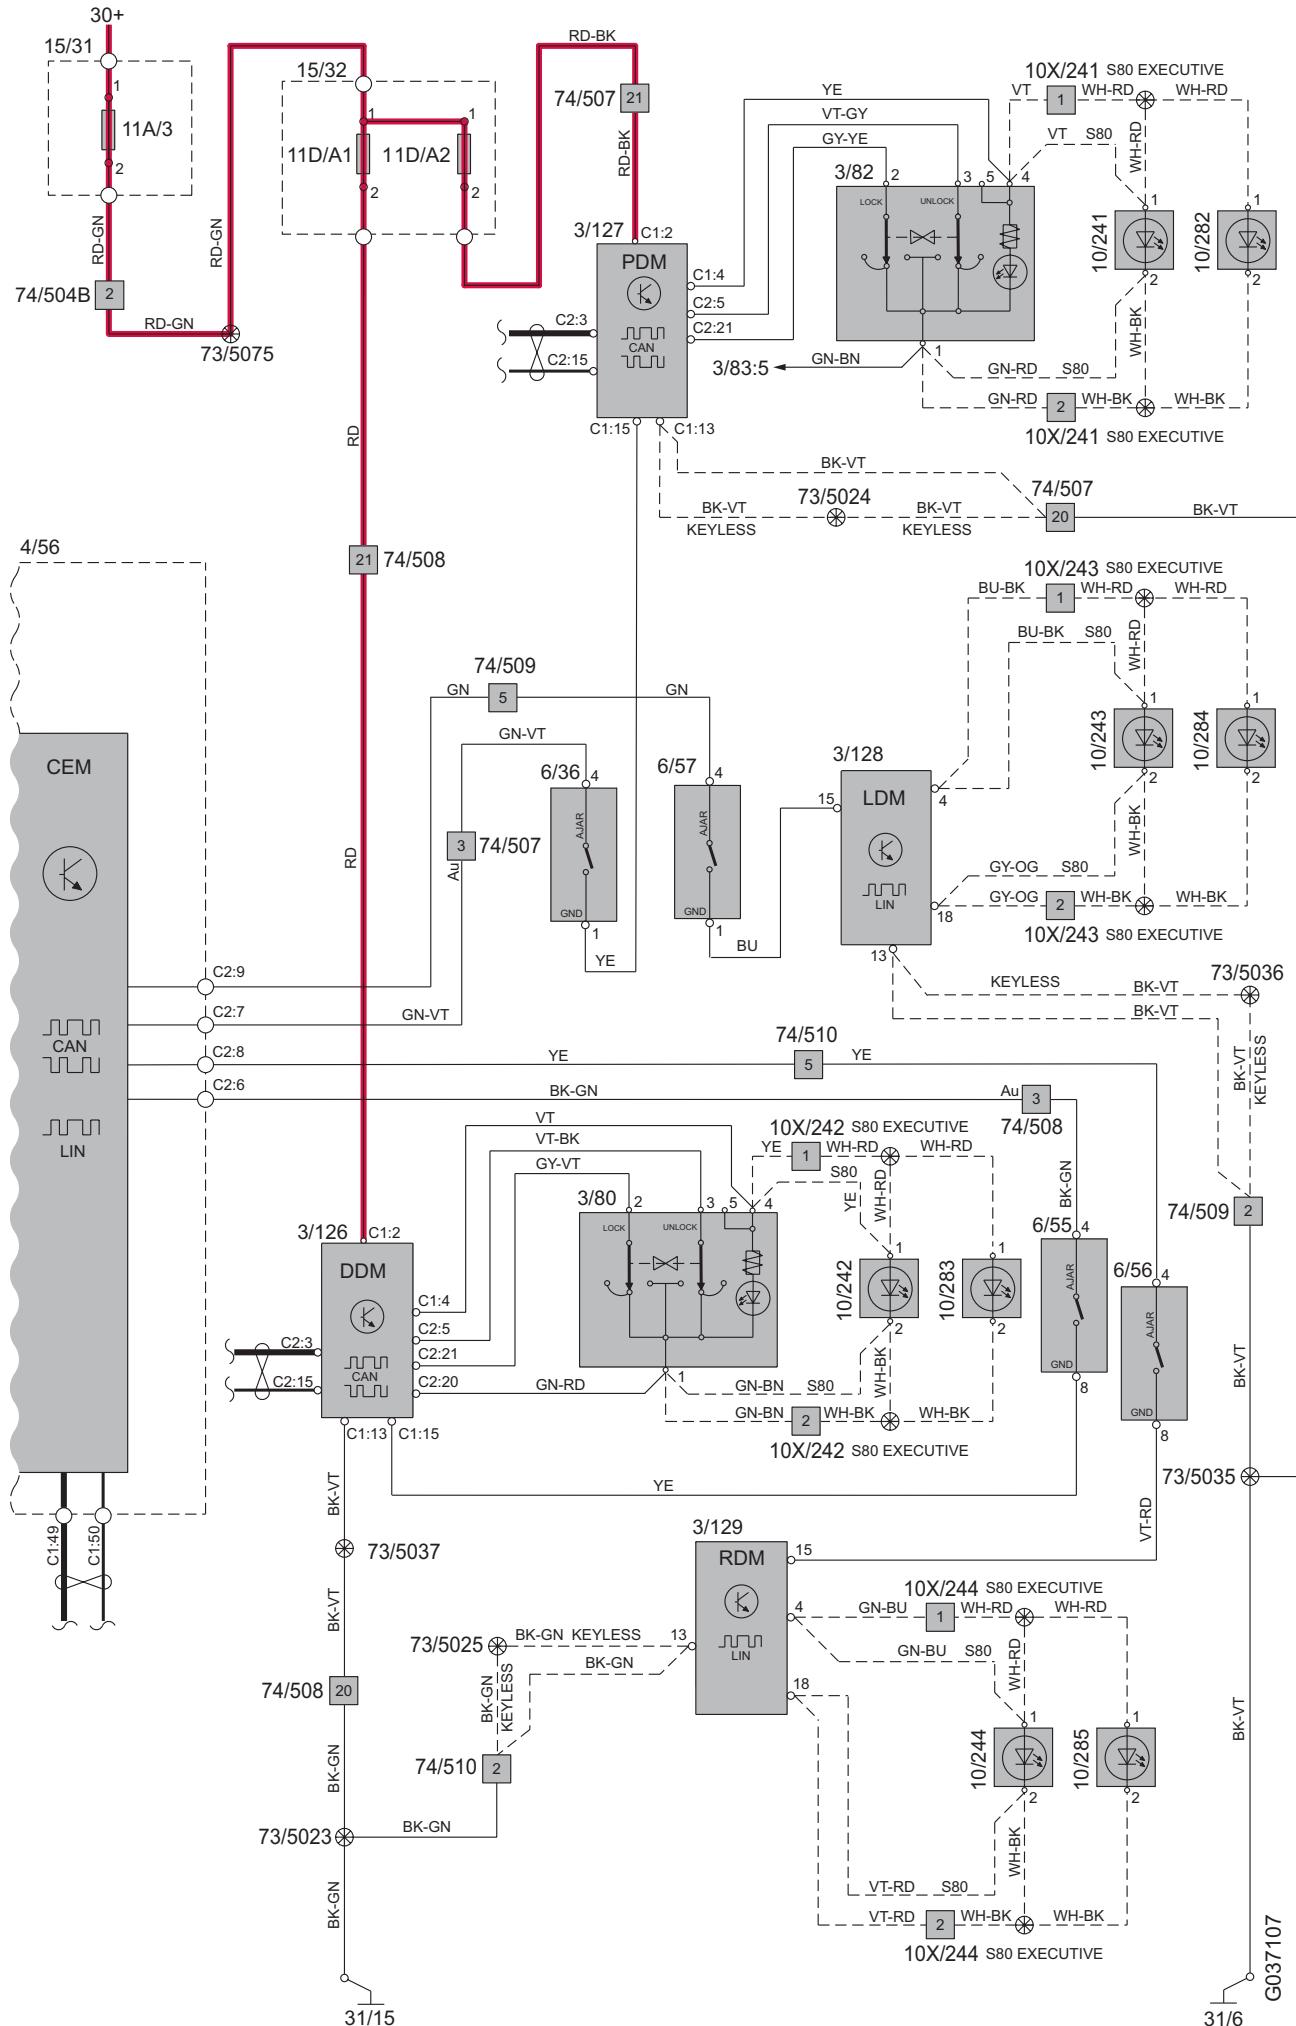


Group 35 Lighting

Active headlight

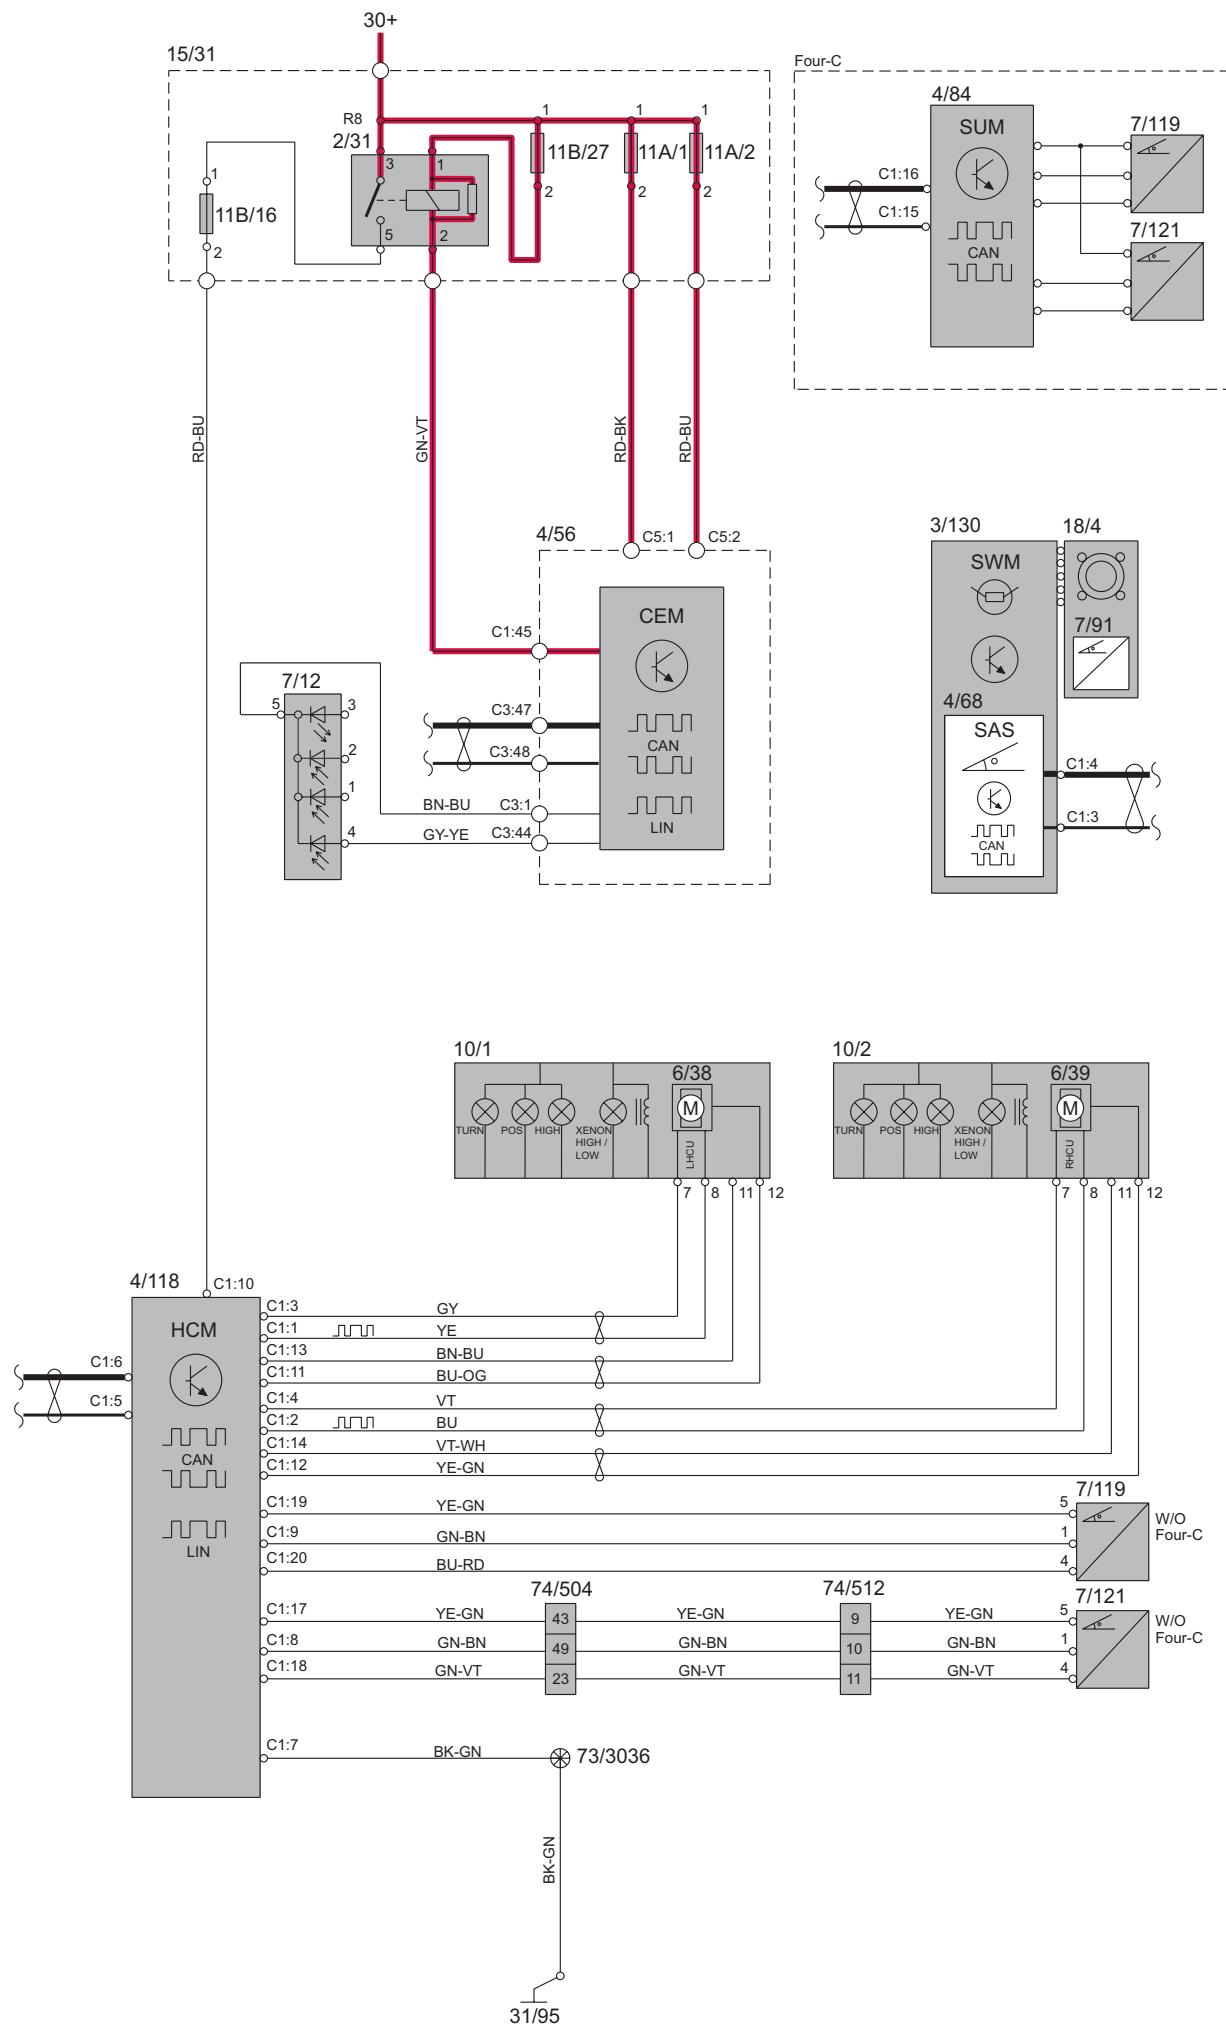

Group 35 Lighting, Accessories


Lighting in door sill trims

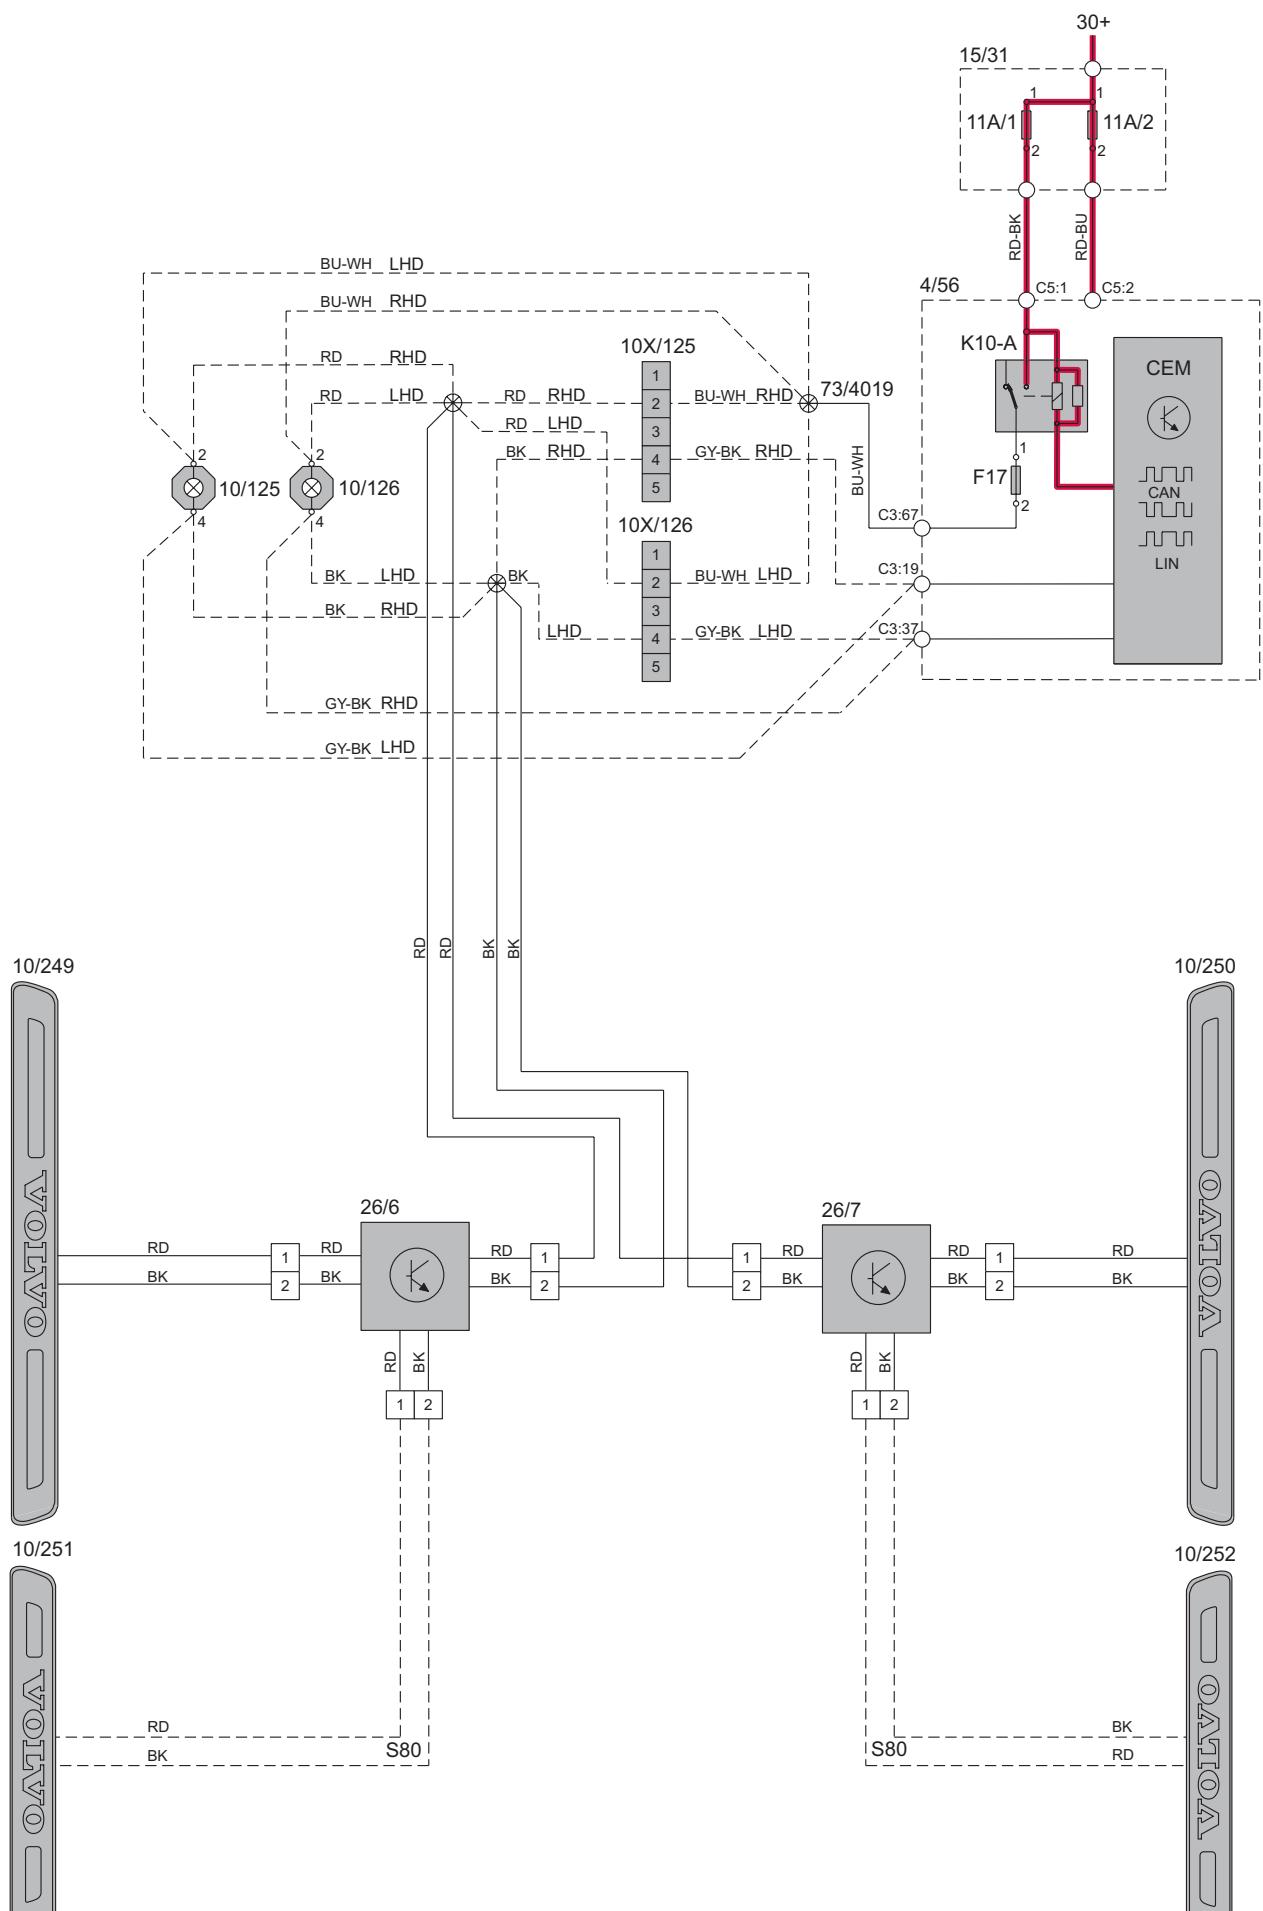

G028986

Group 35 Lighting, Accessories


Auxiliary lights

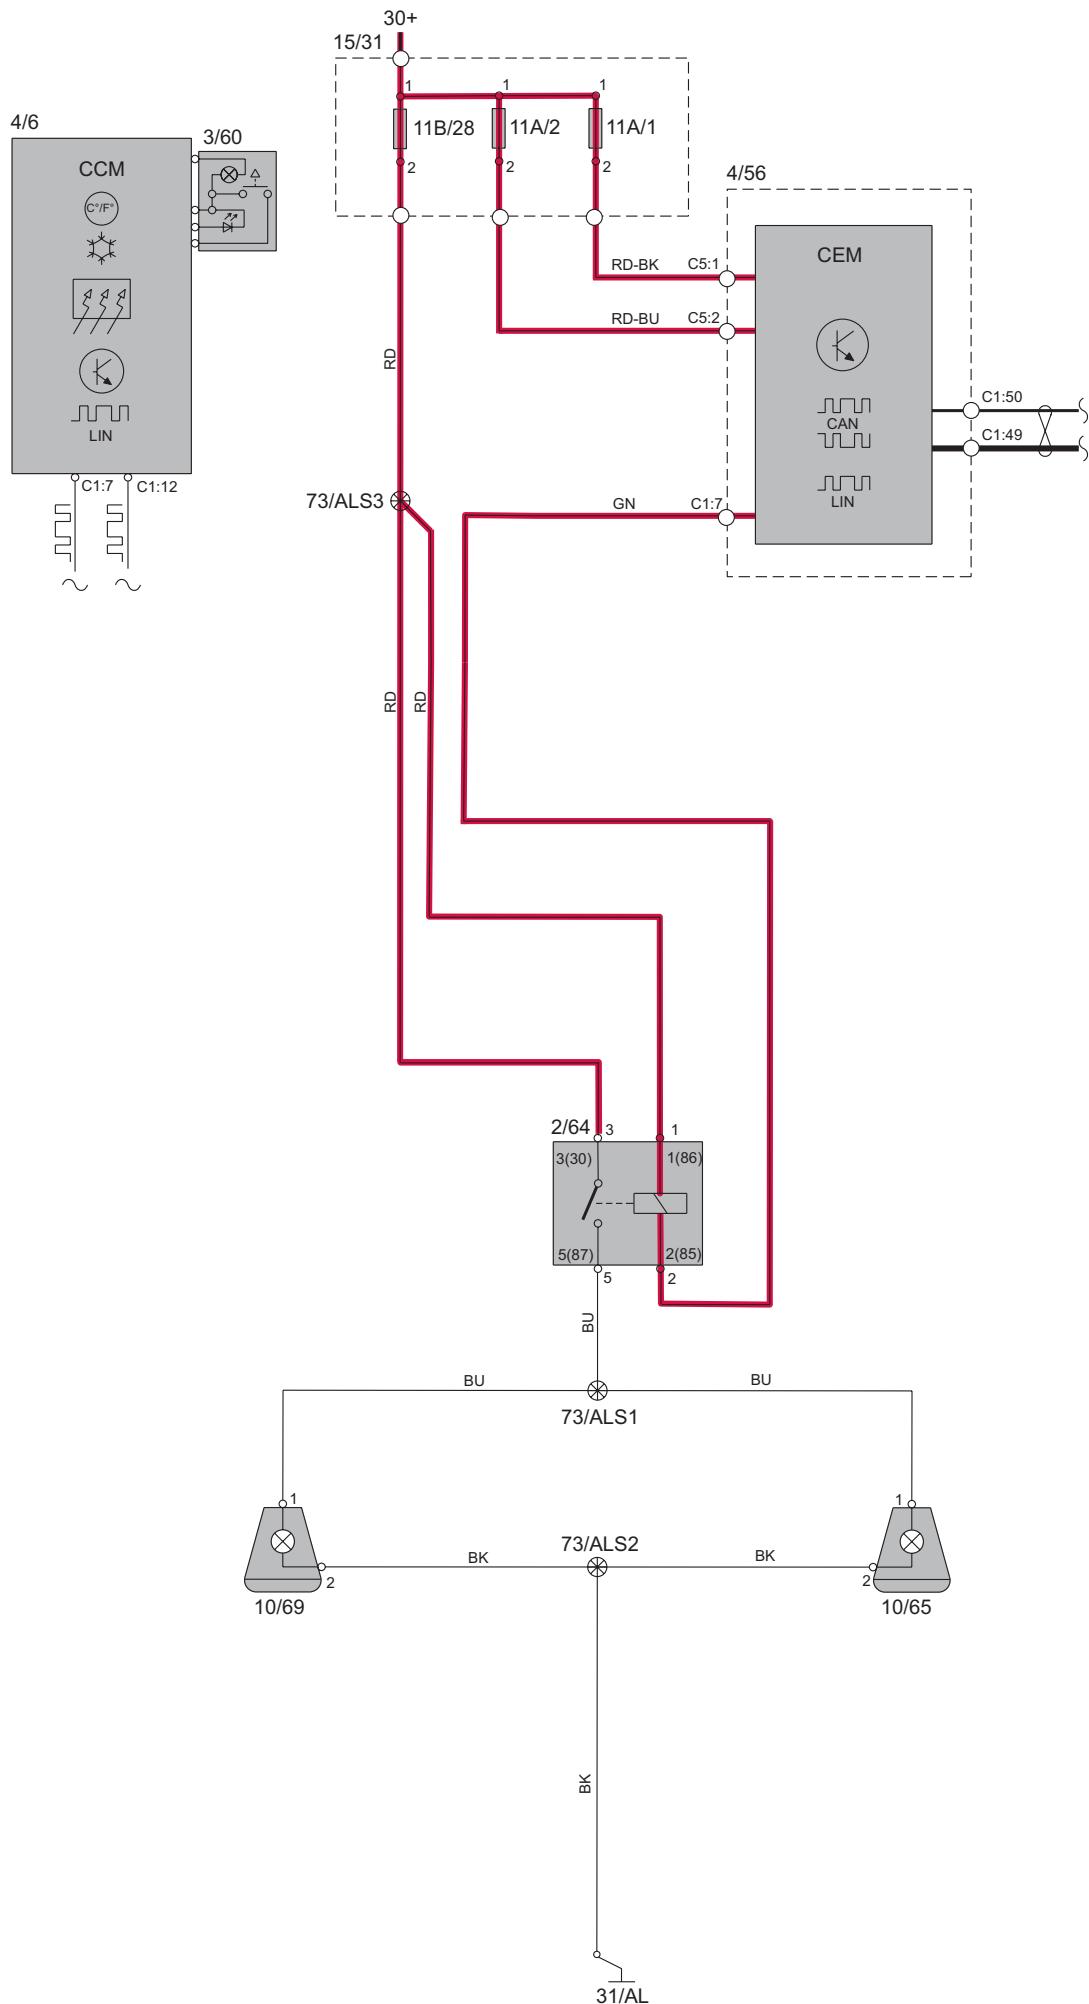

G028987


Group 35 Lighting

Lighting mug holder and floor

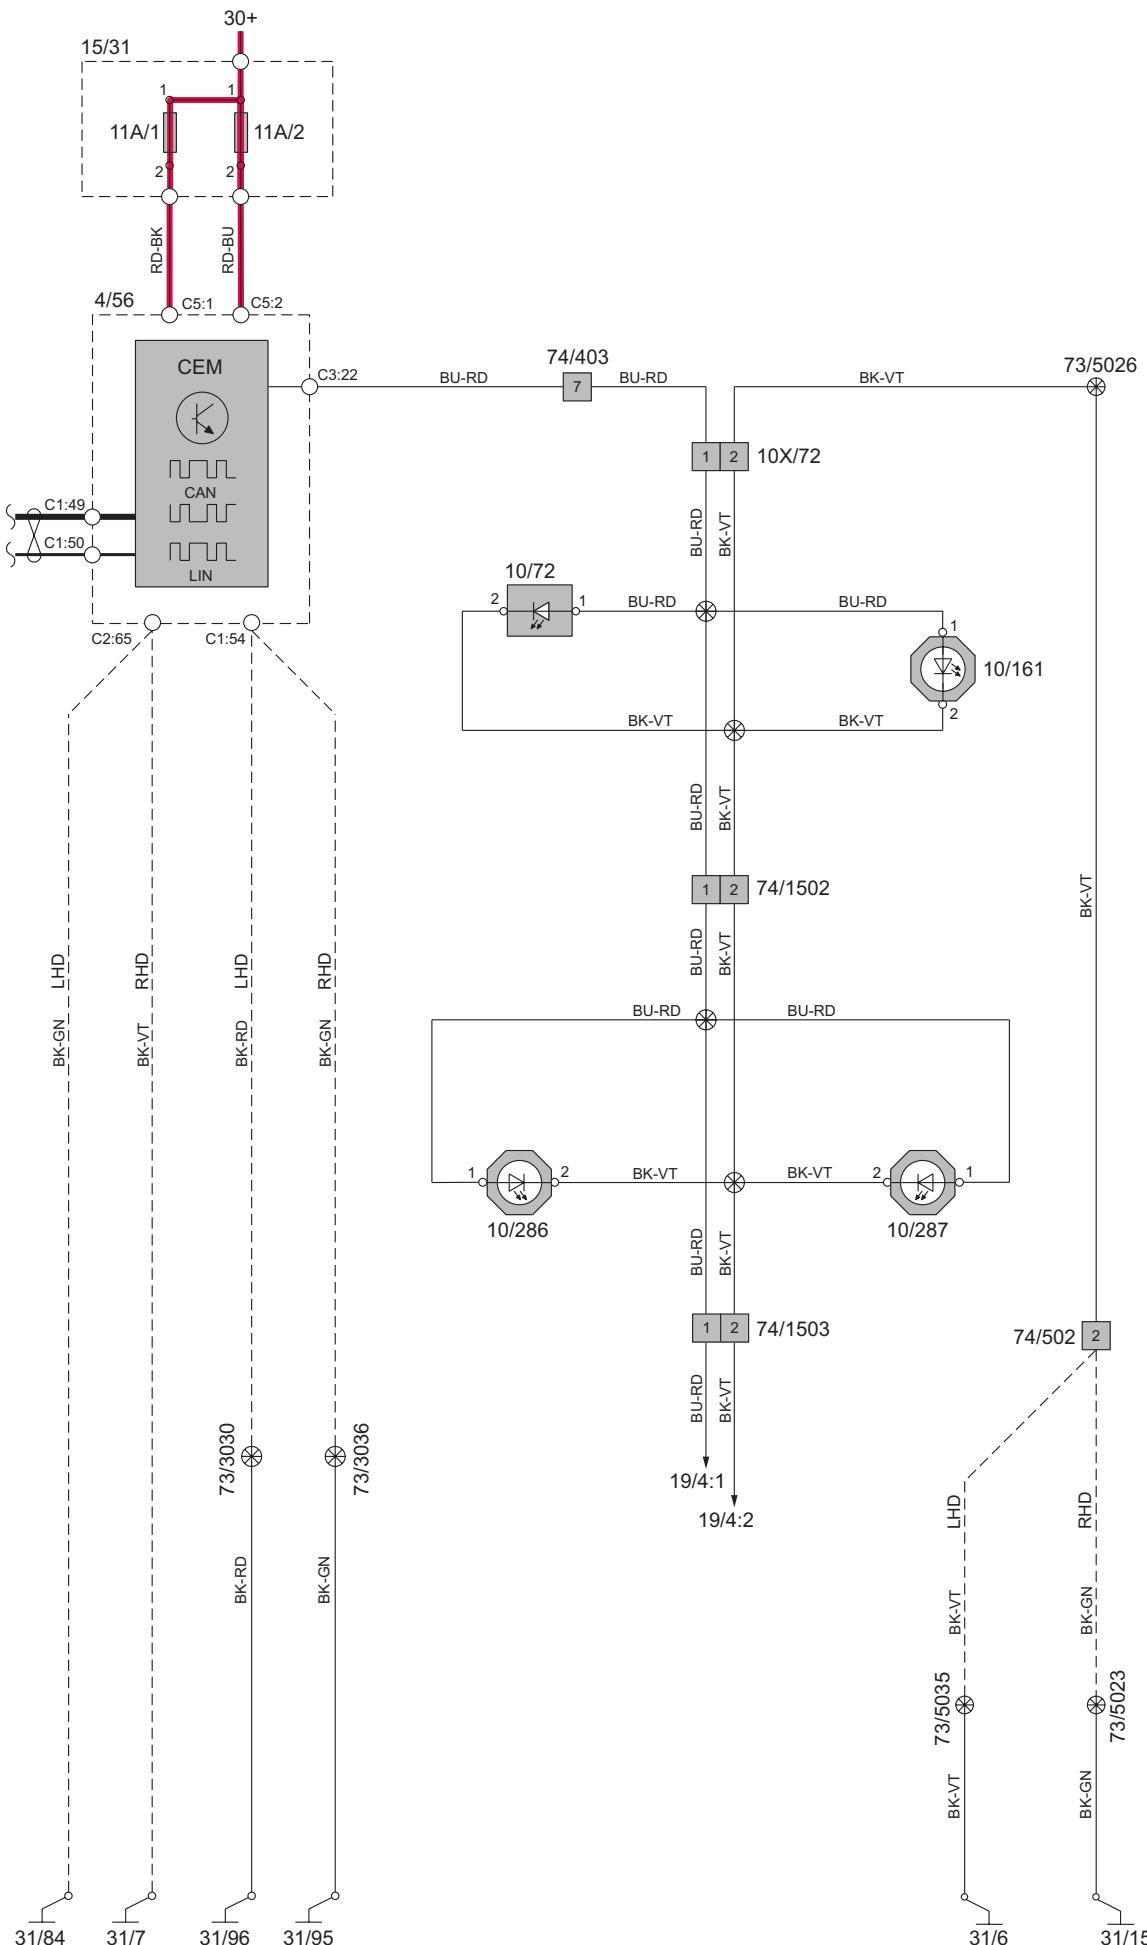


Group 36 Additional electrical equipment

Rain sensor

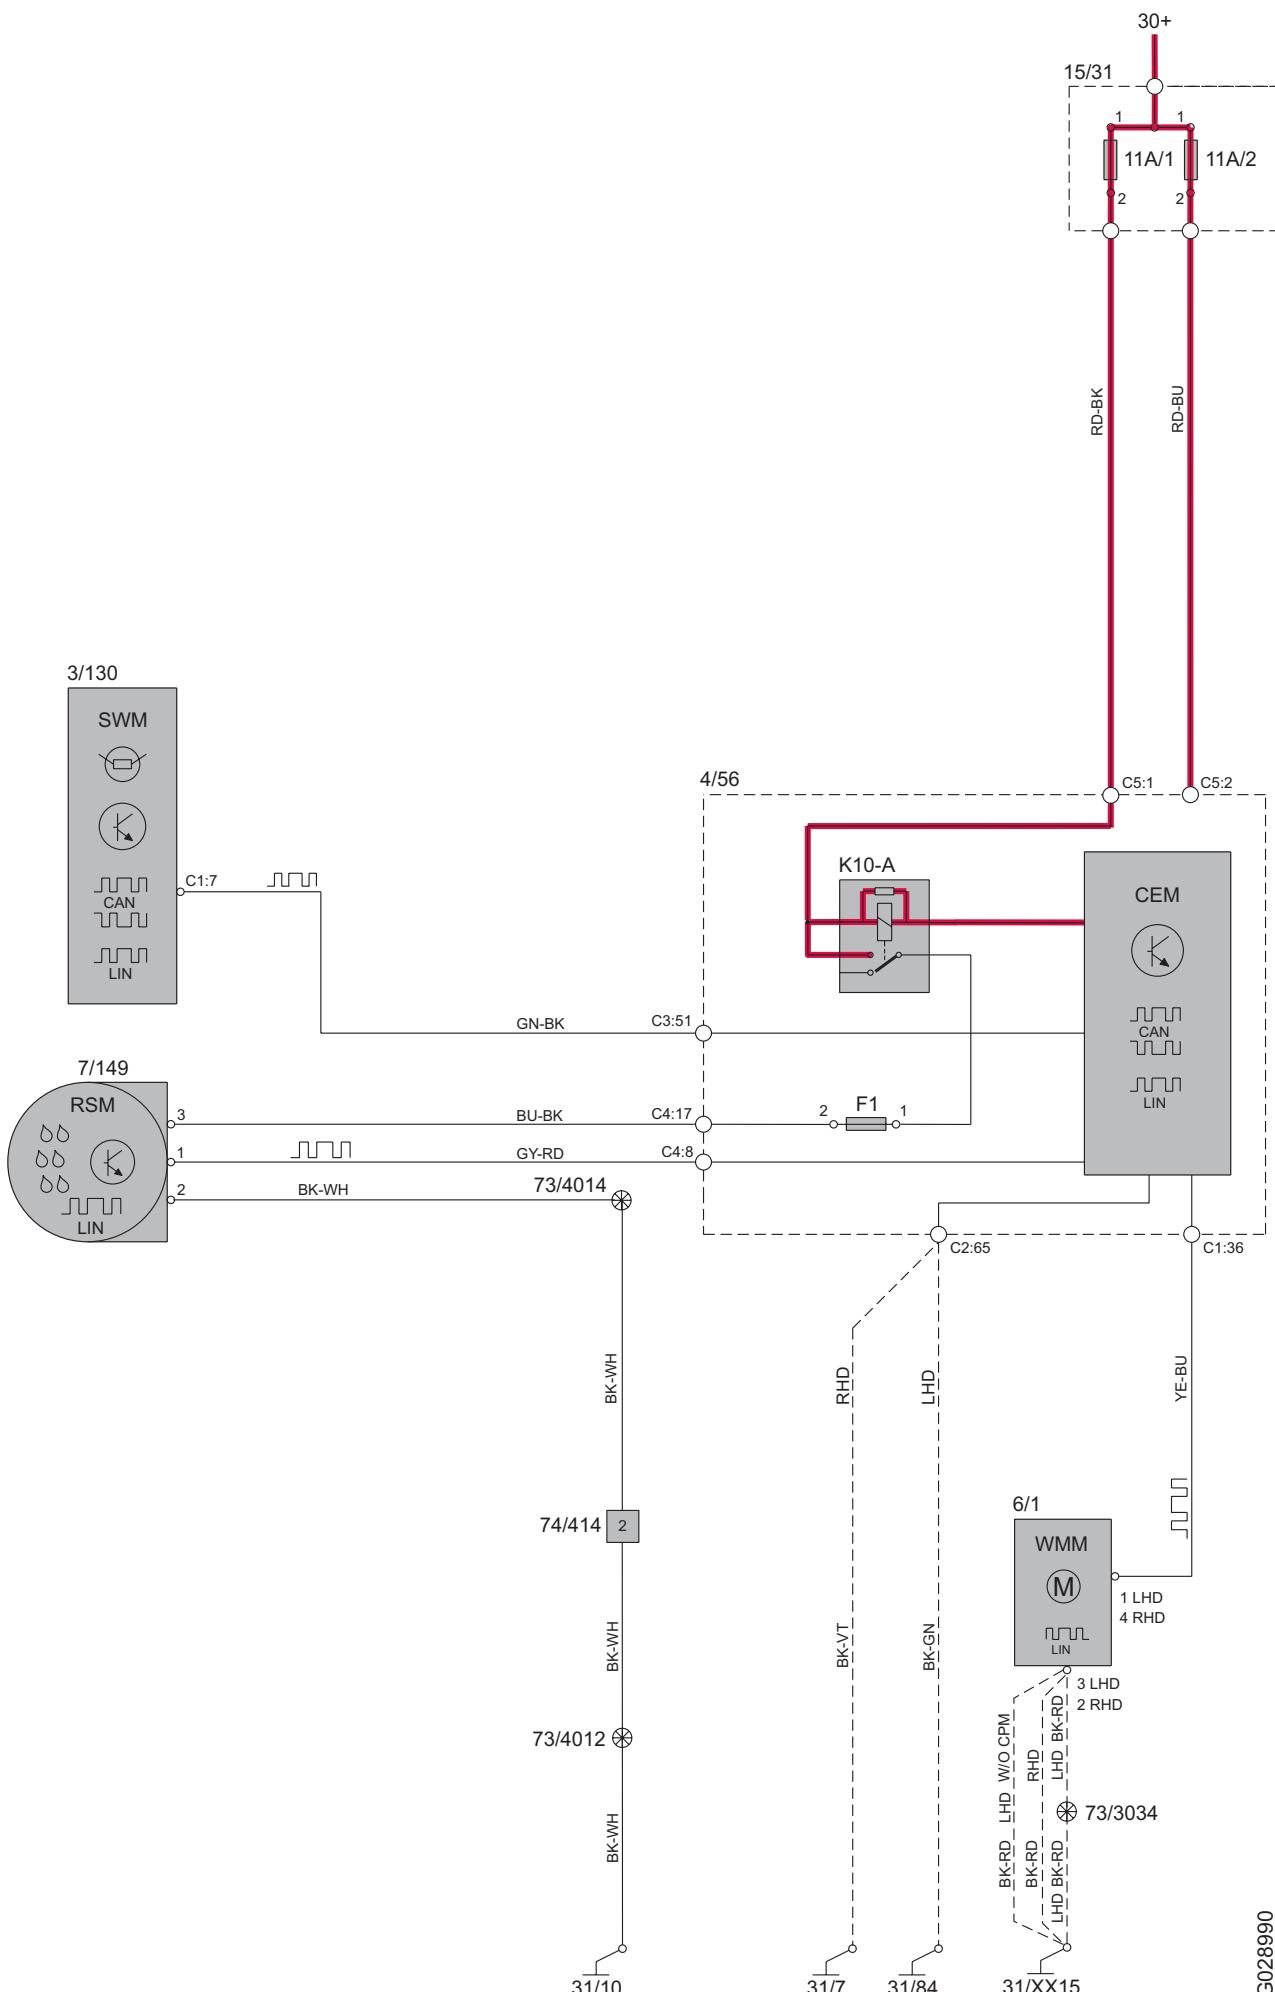


Group 36 Additional electrical equipment

Direction indicator and hazard warning flashers LHD V70

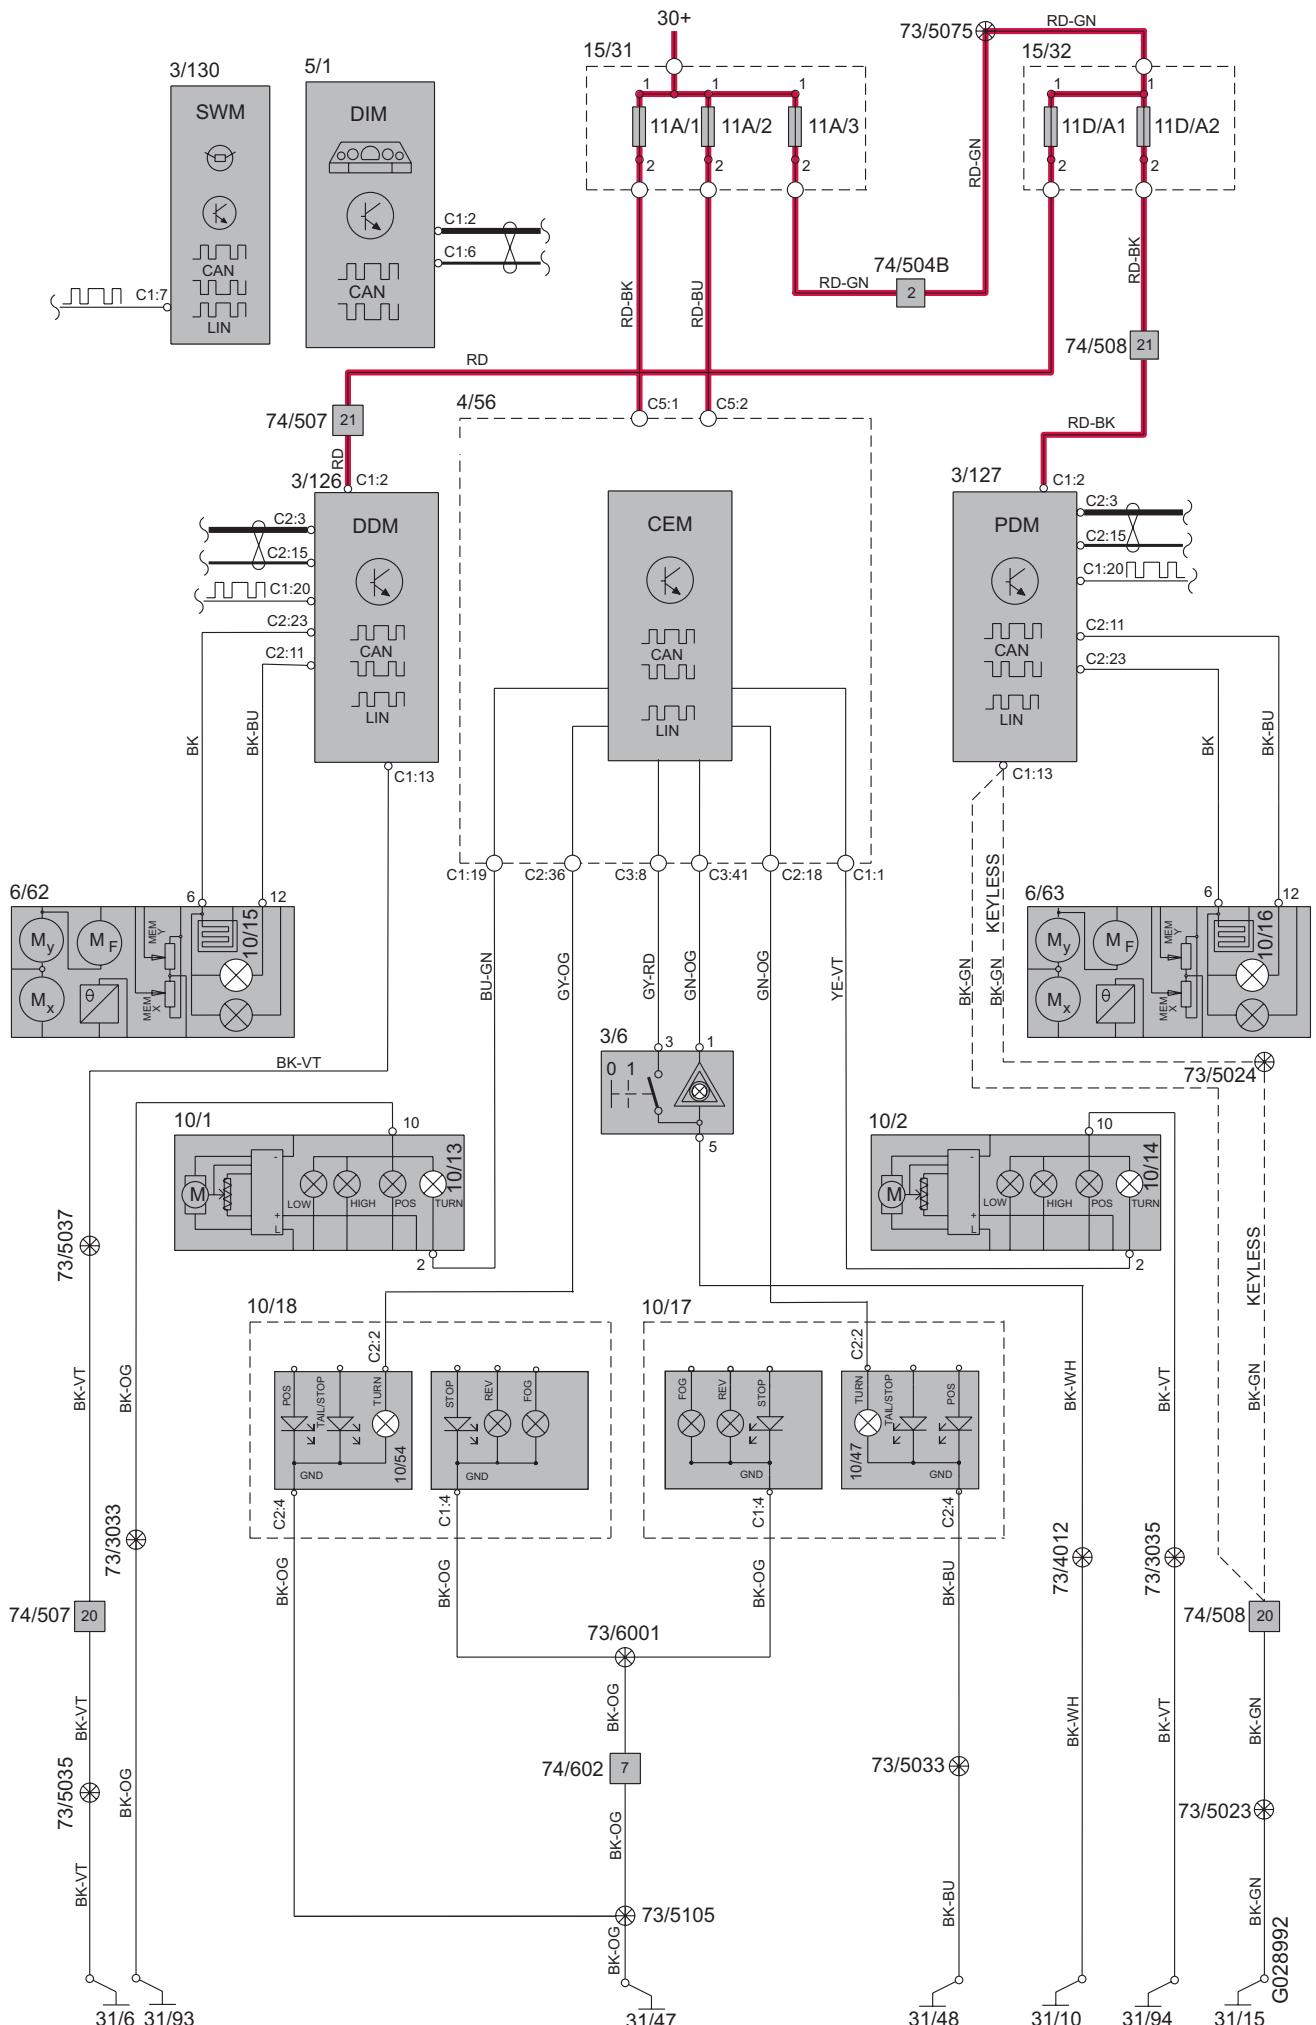


Group 36 Additional electrical equipment Direction indicator and hazard warning flashers LHD S80

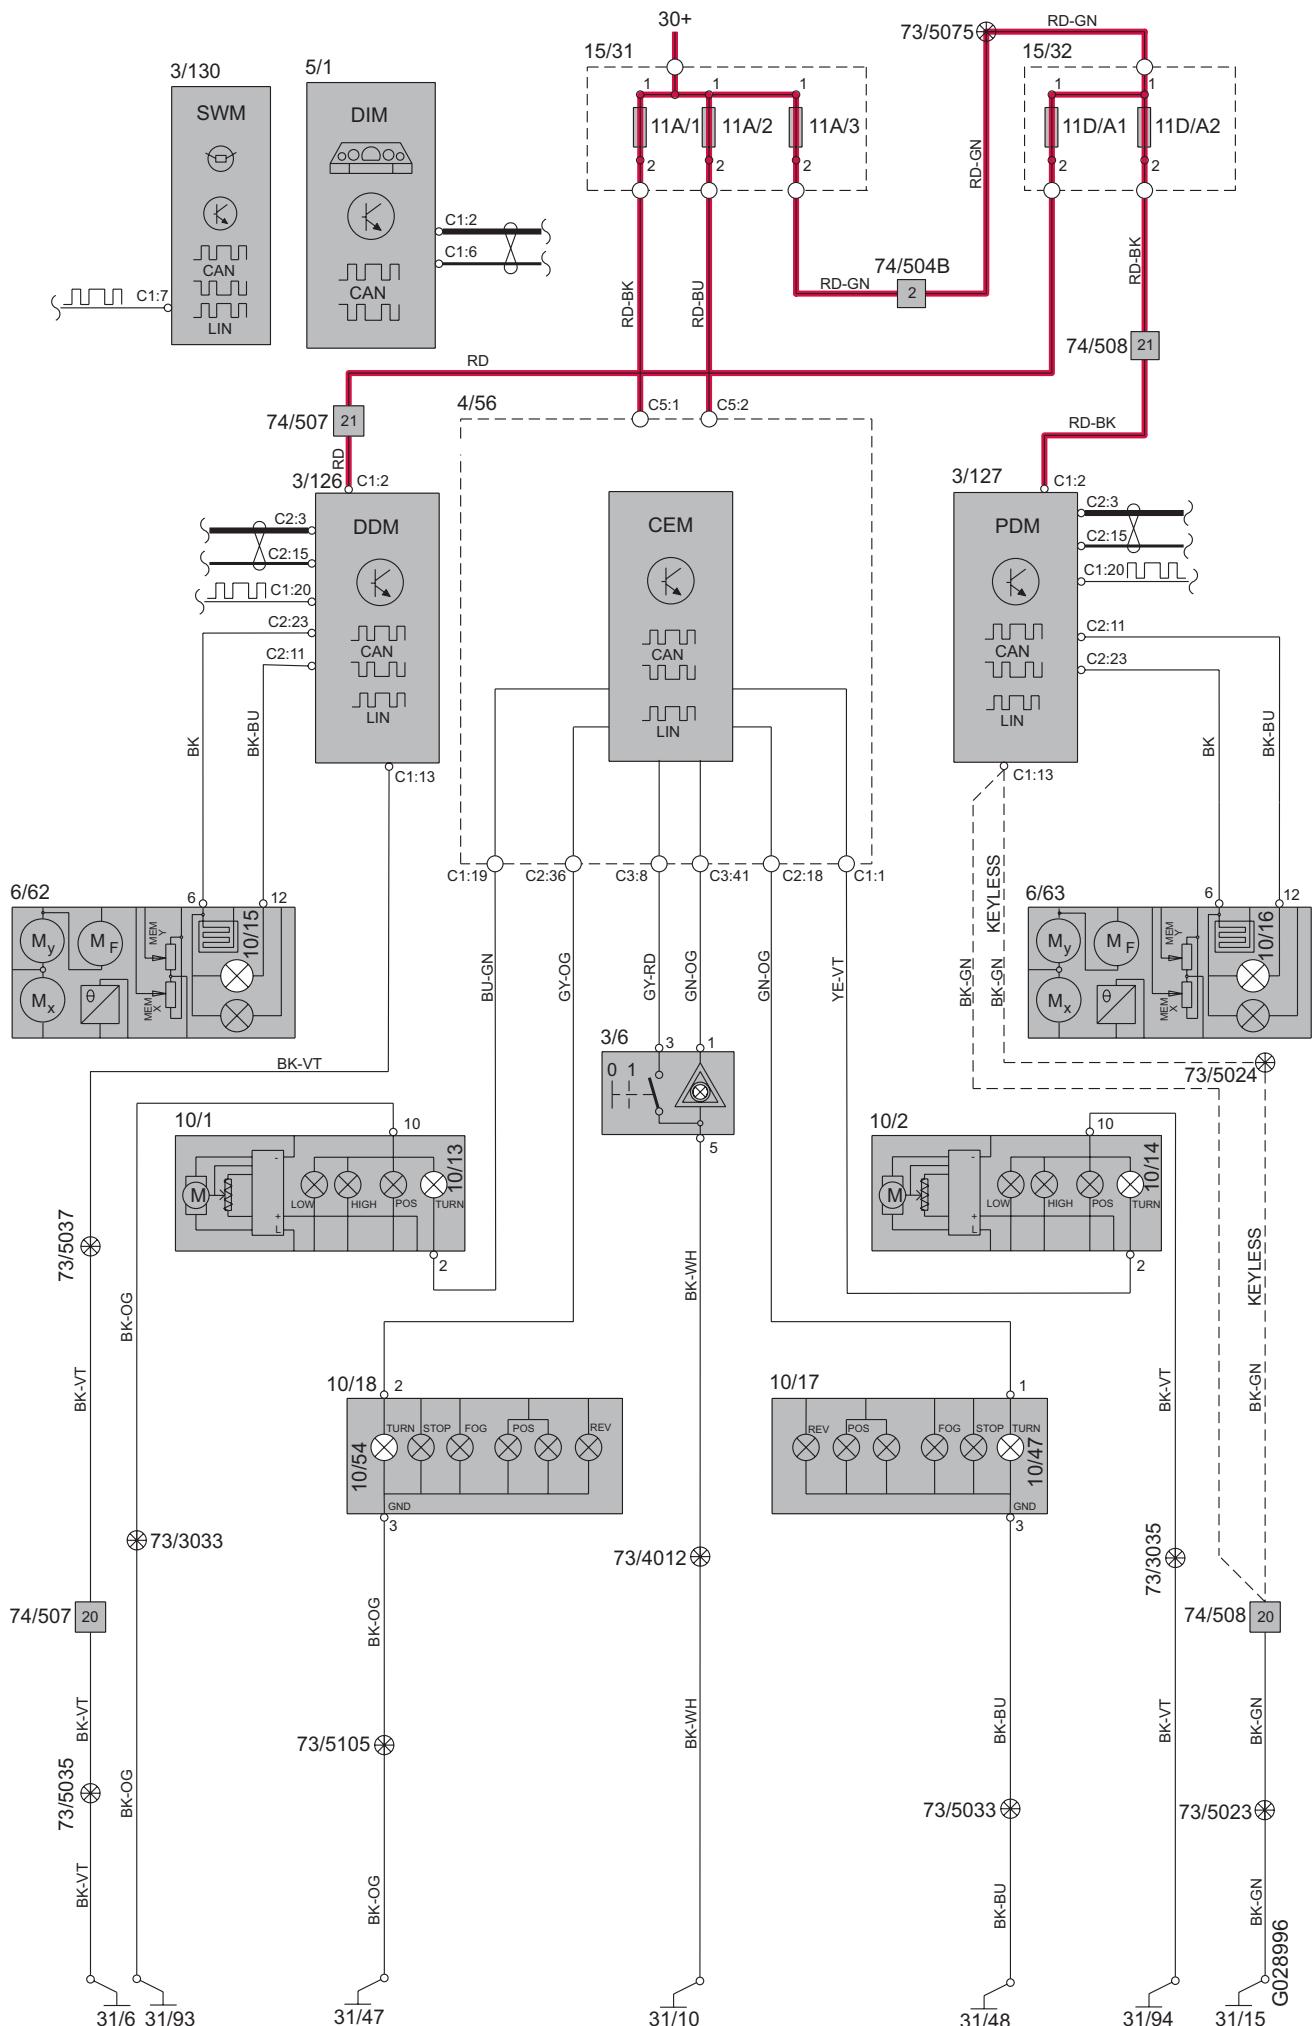


Group 36 Additional electrical equipment

Direction indicator and hazard warning flashers RHD V70

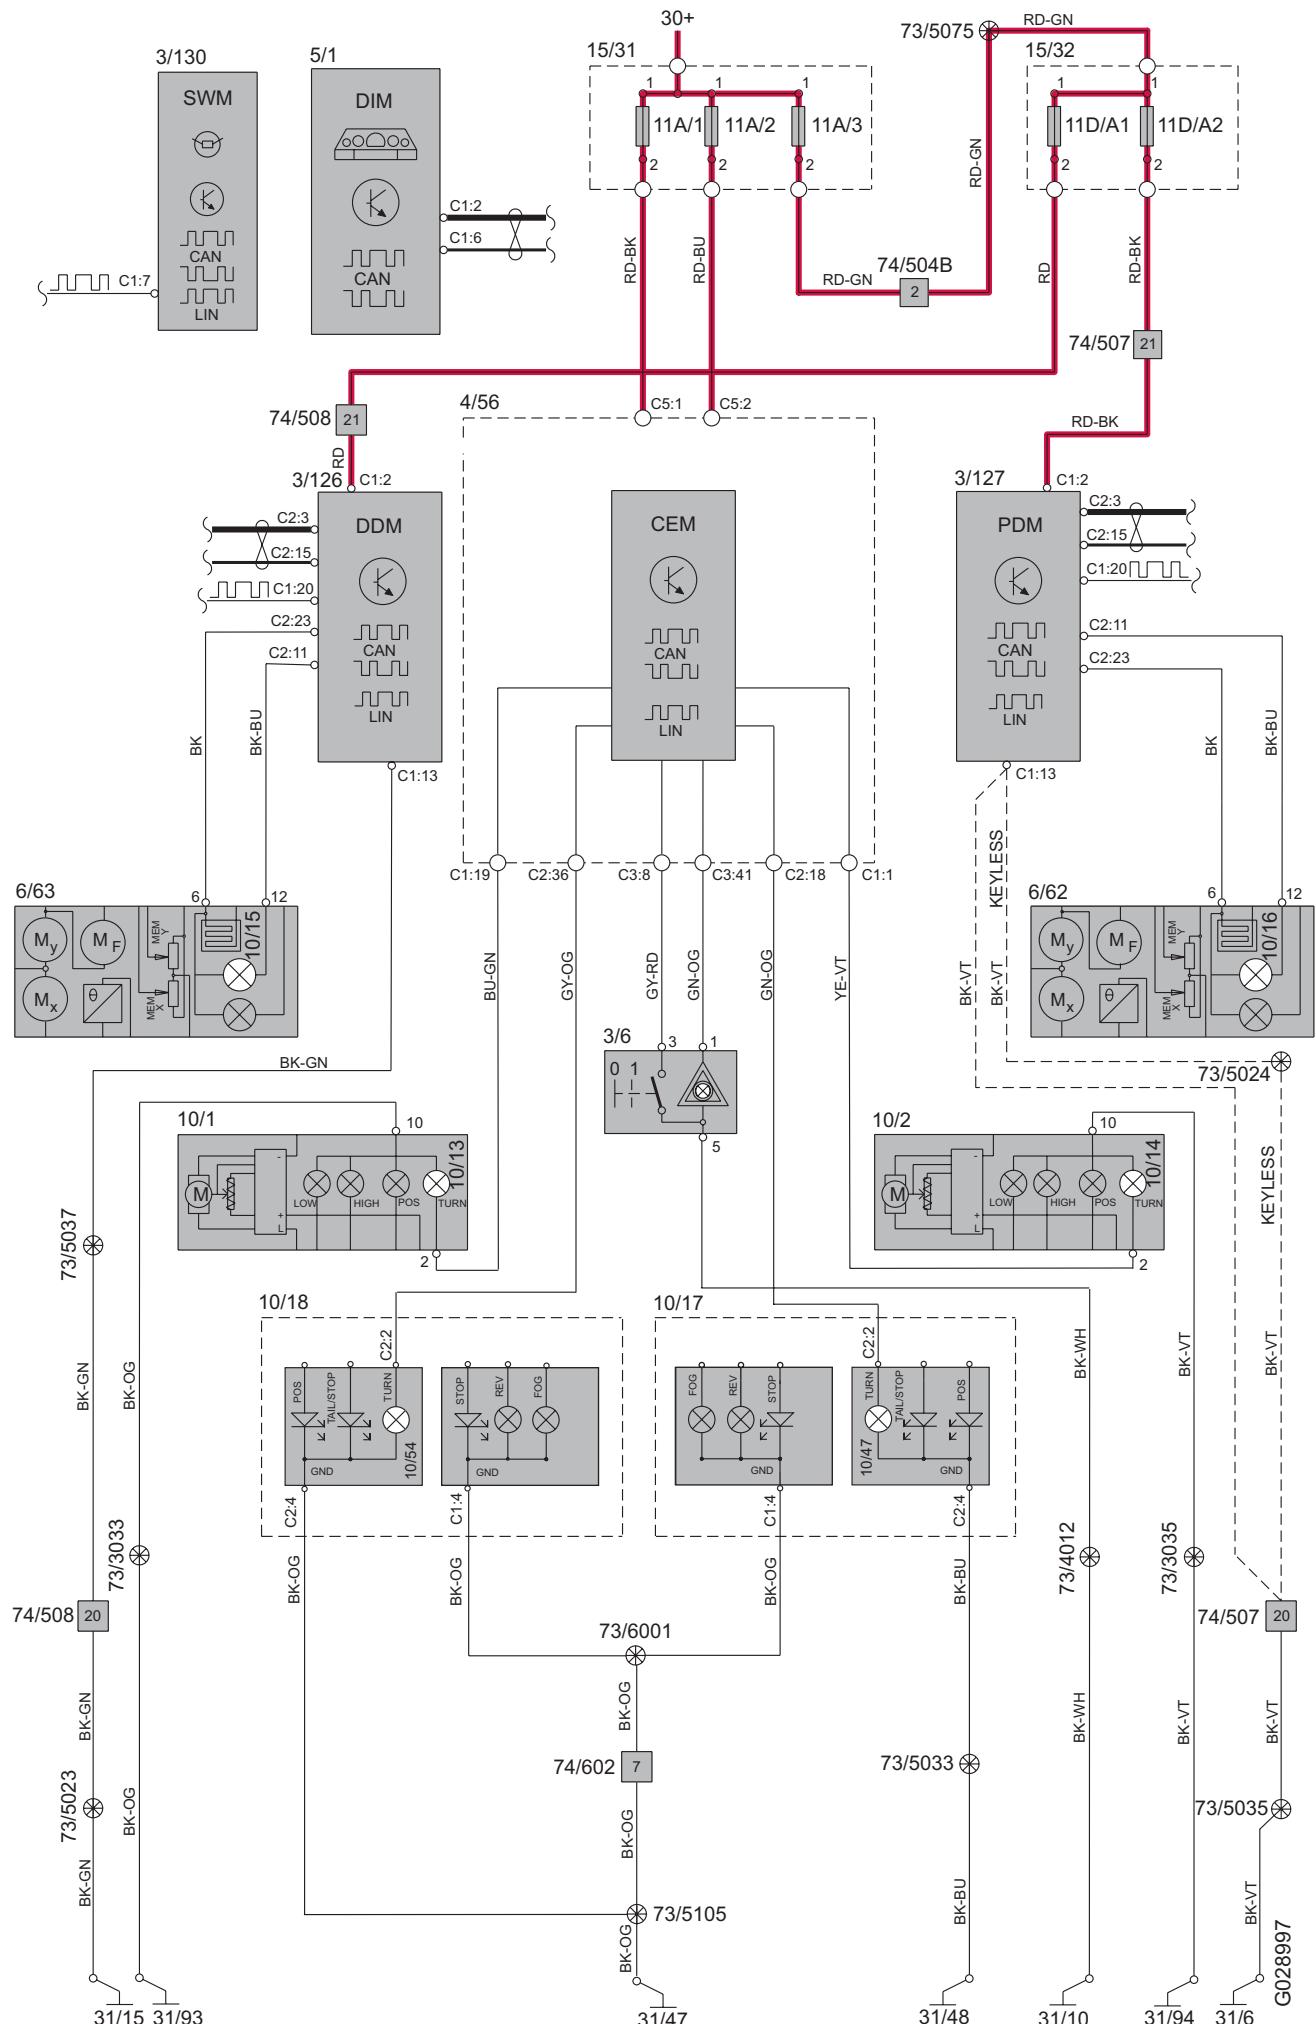


Group 36 Additional electrical equipment

Direction indicator and hazard warning flashers RHD S80

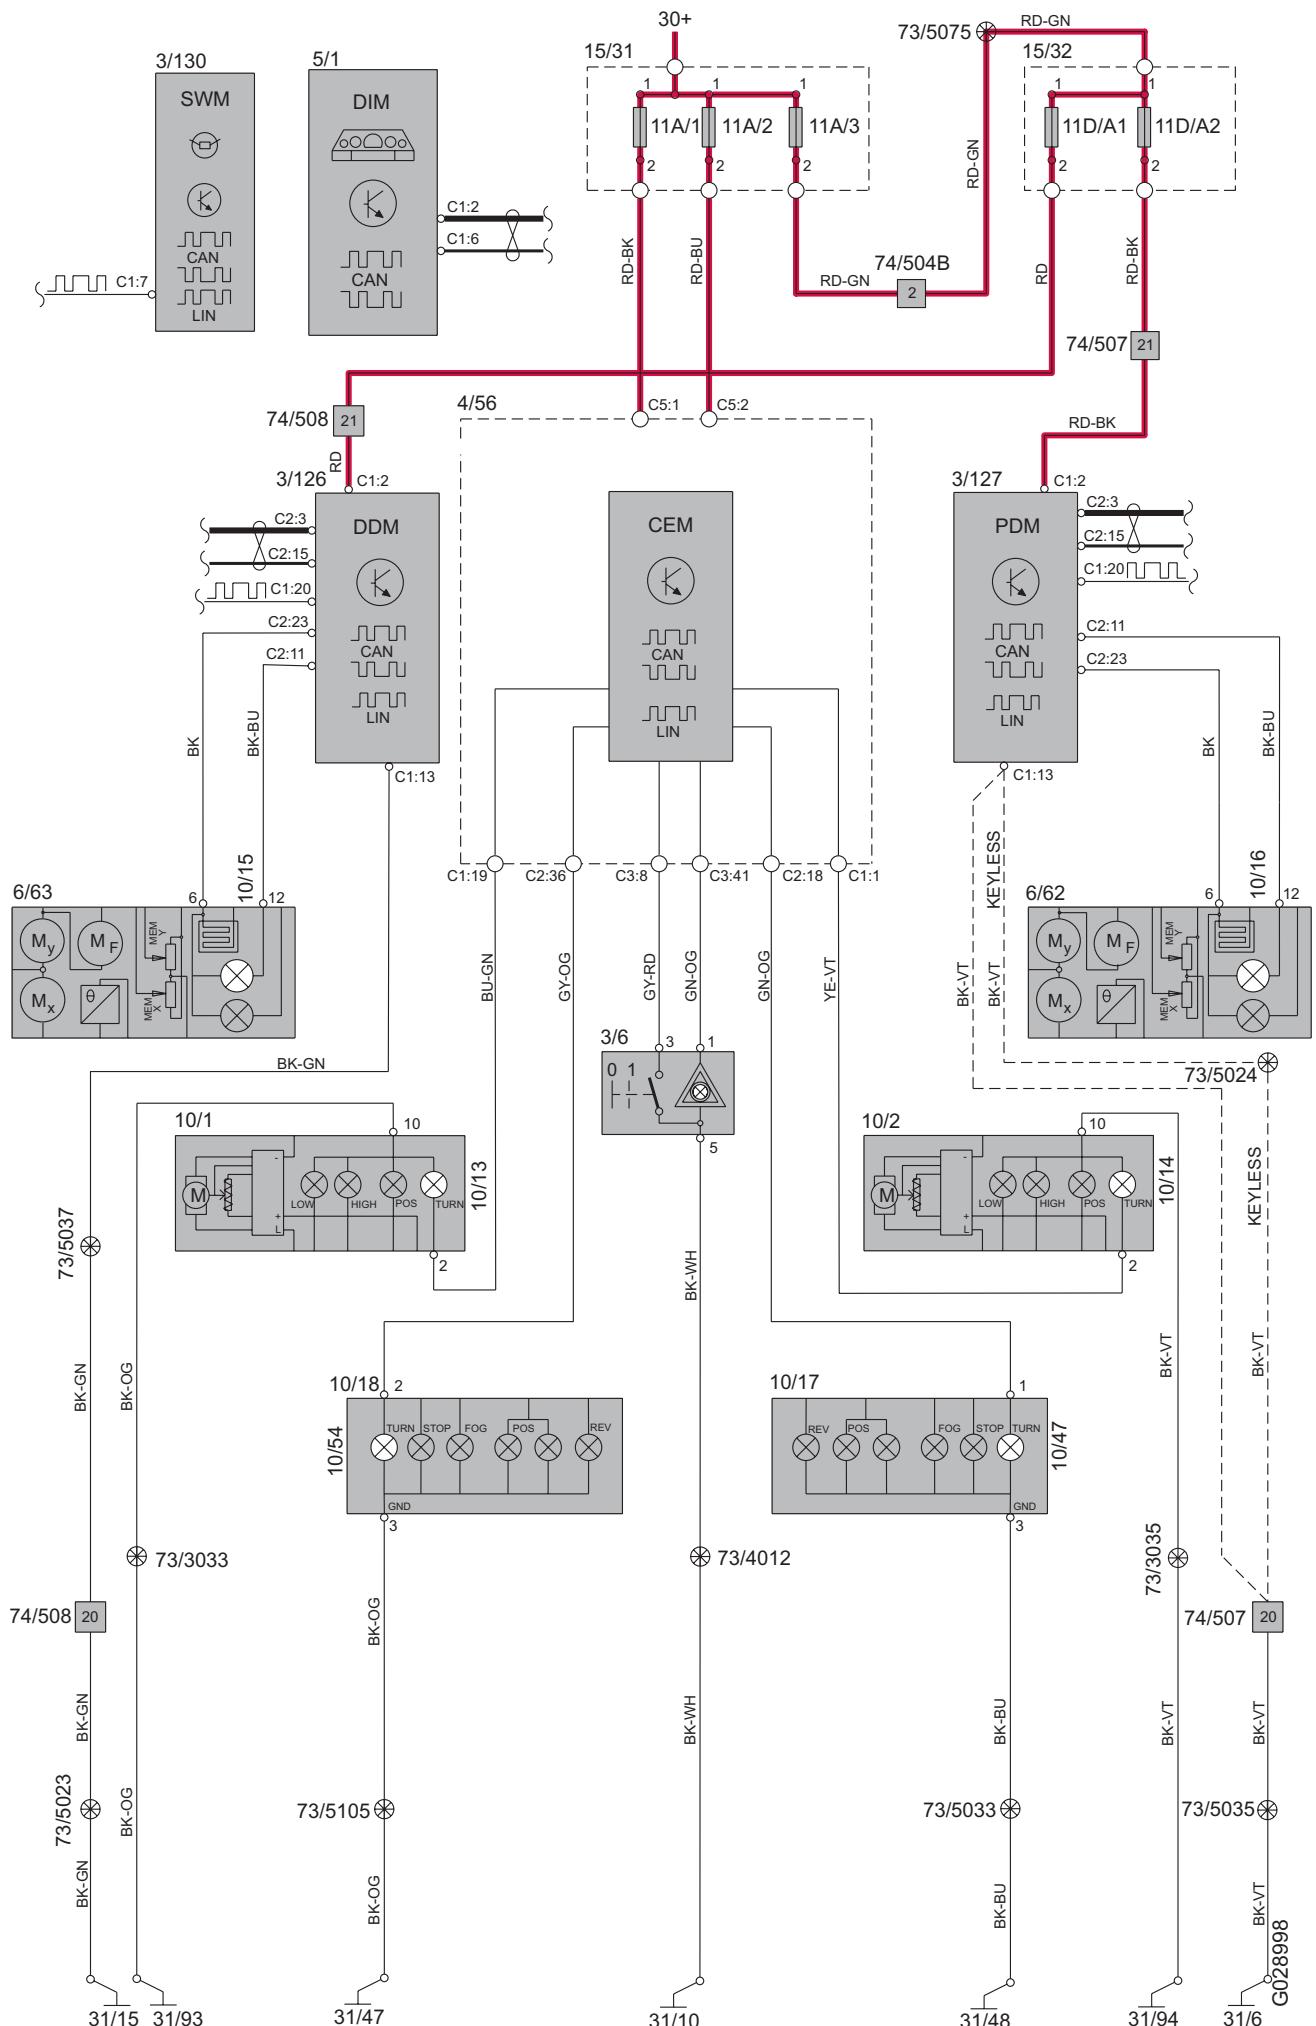


Group 36 Additional electrical equipment Wiper/washer windshield

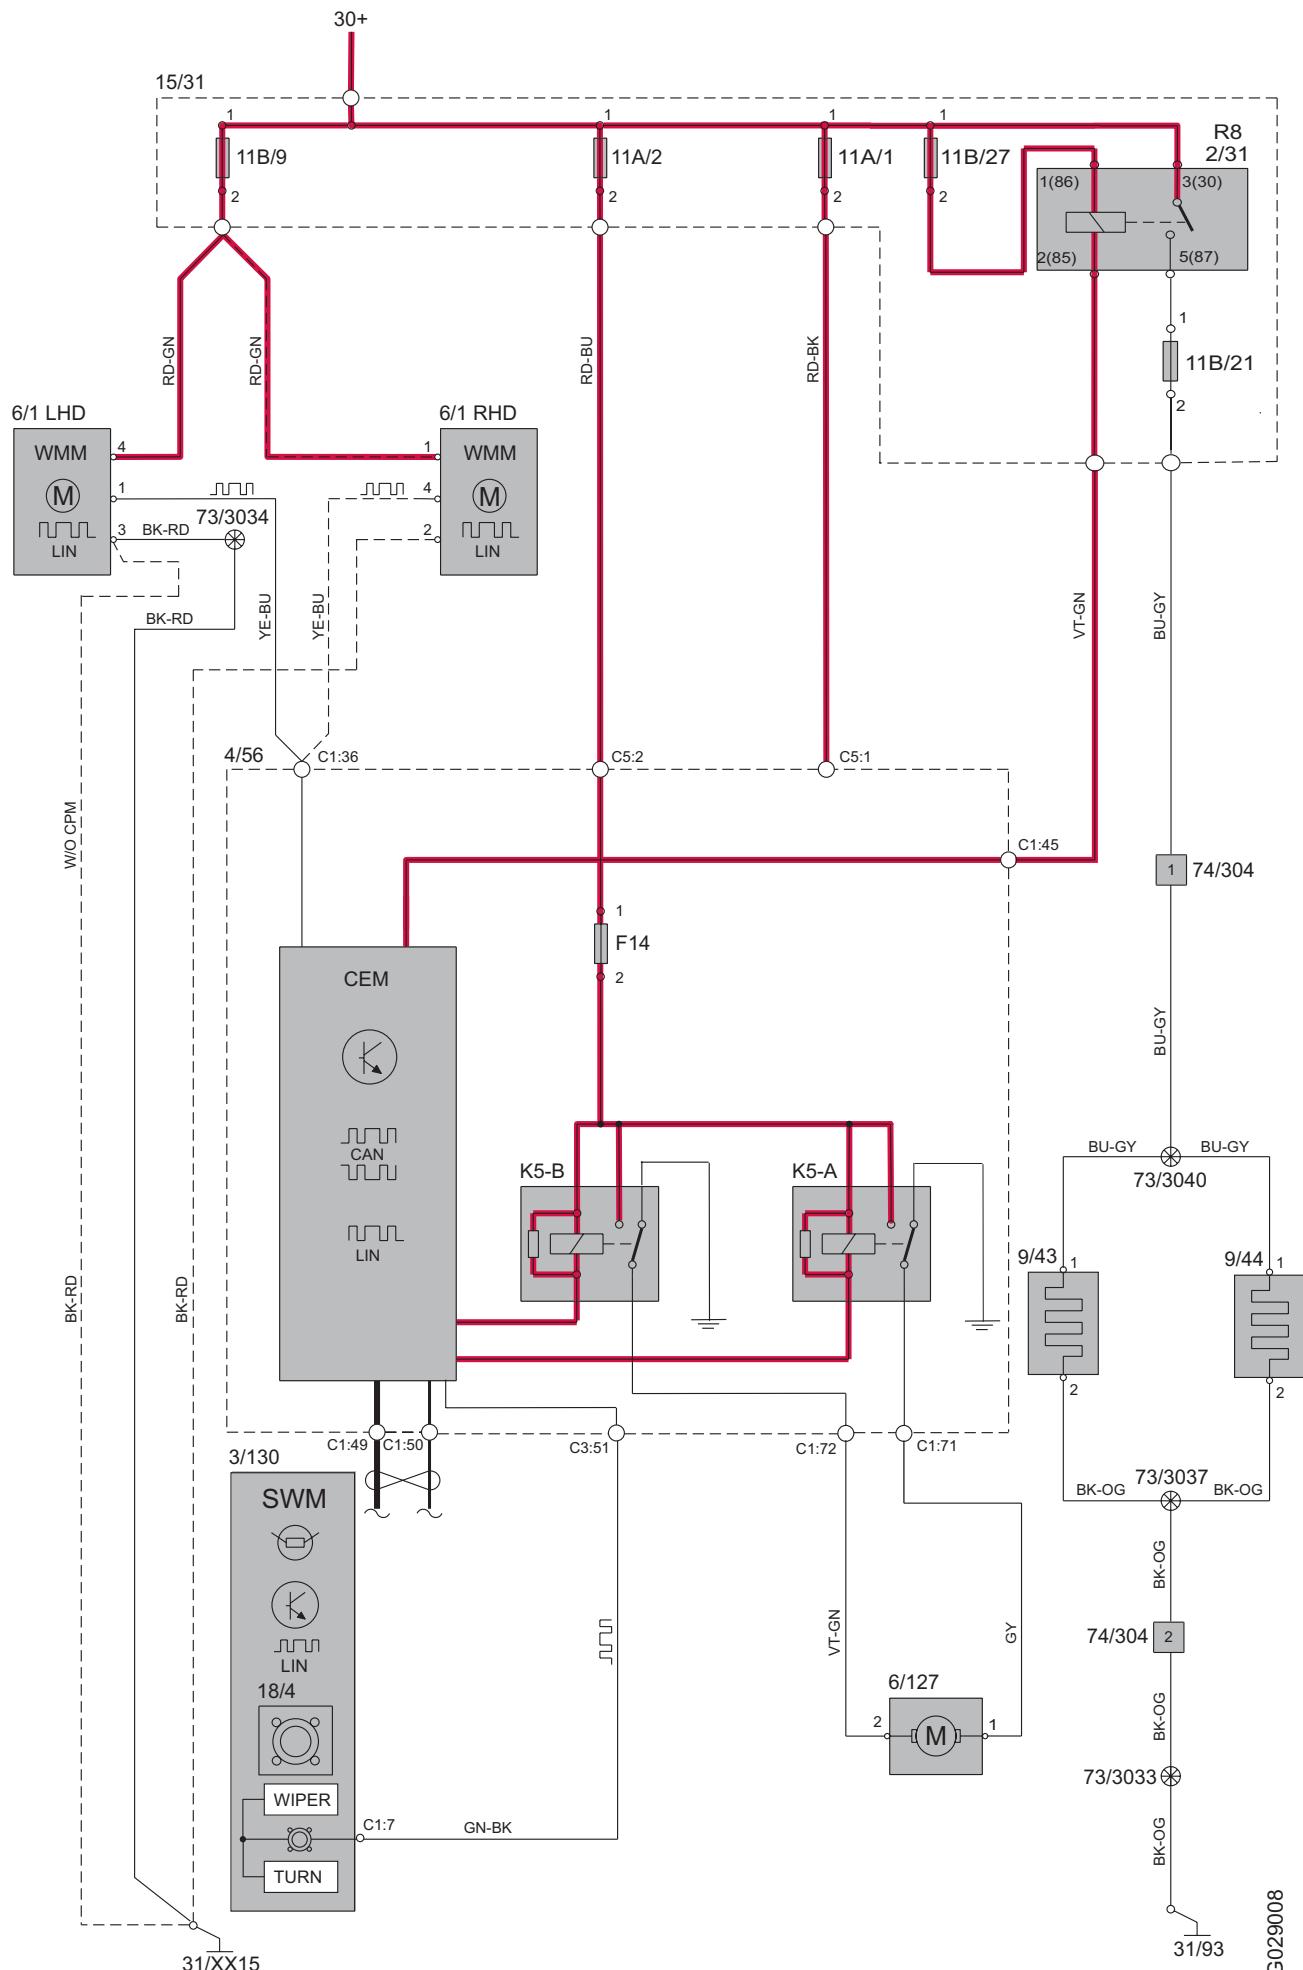


Group 36 Additional electrical equipment

High pressure headlight washer

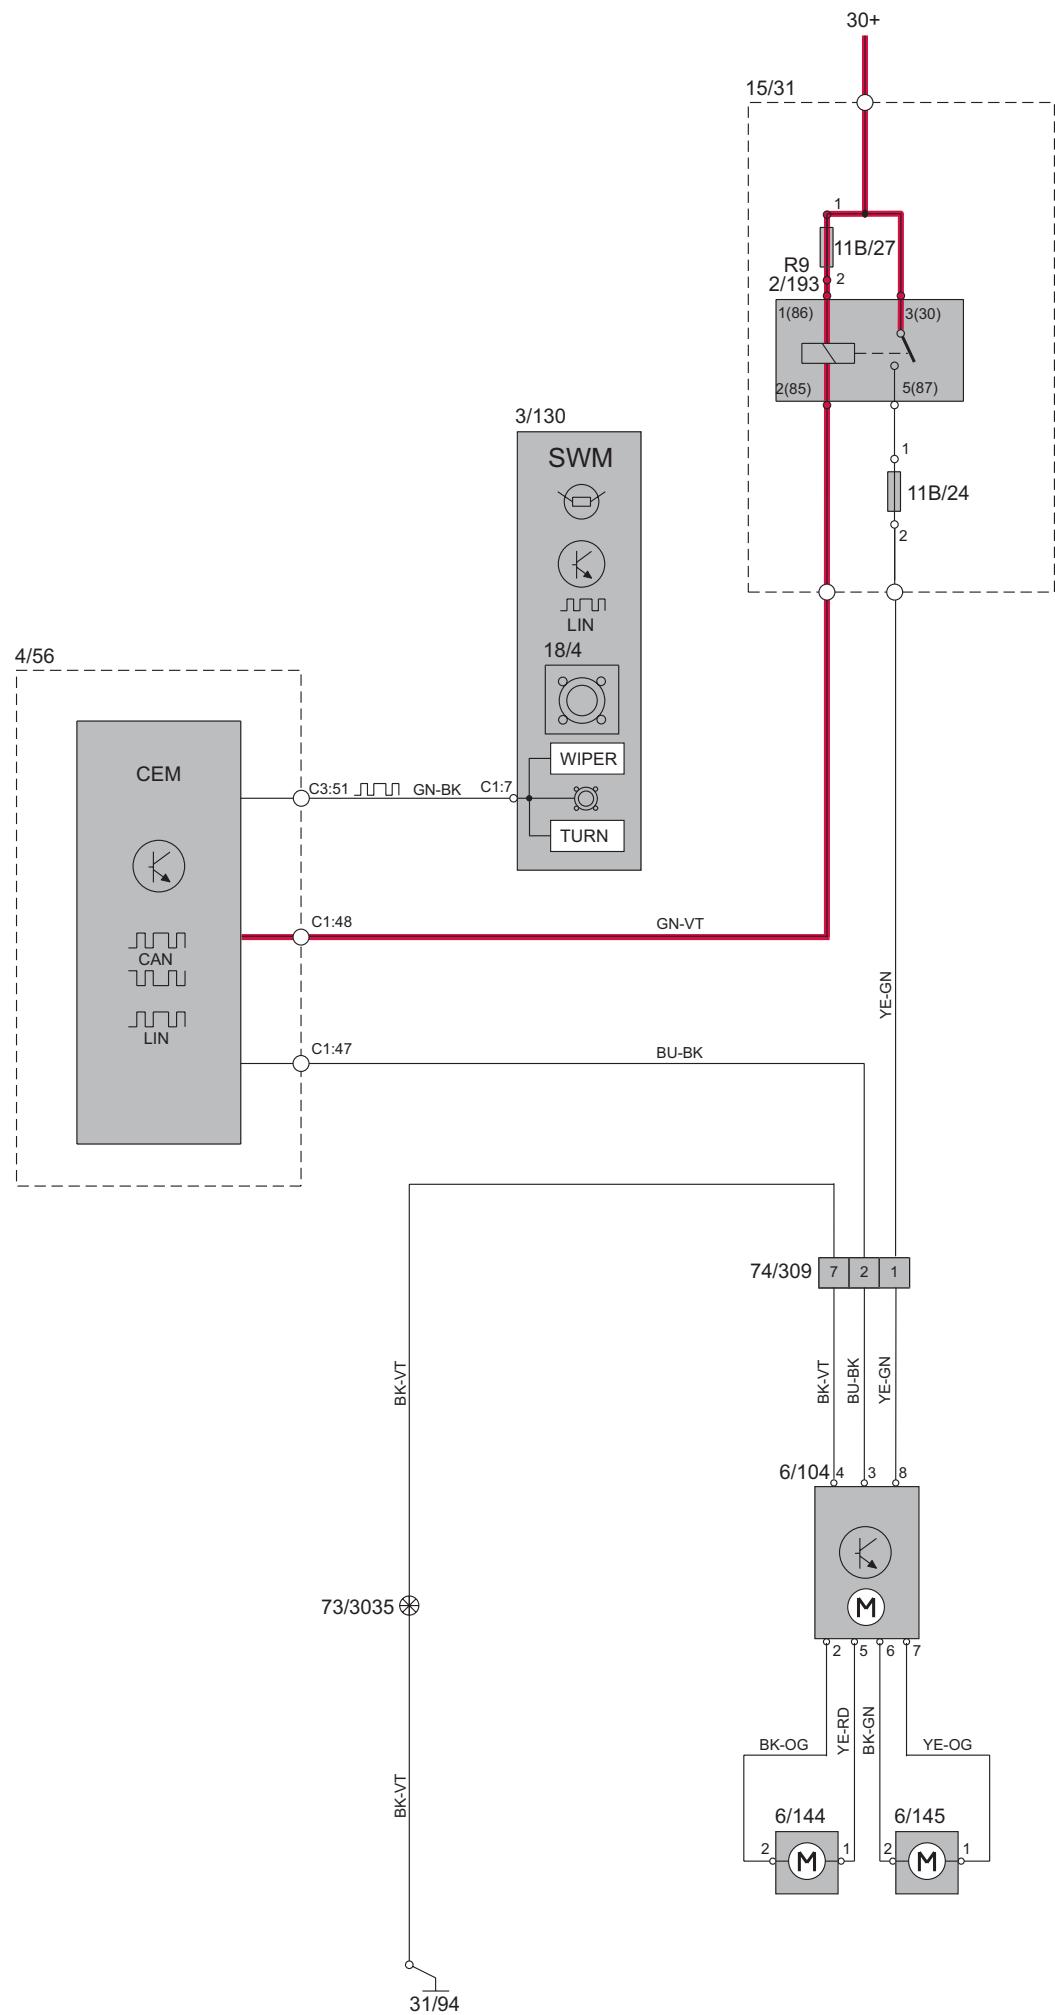


G029009

Group 36 Additional electrical equipment Wiper/Washer rear window

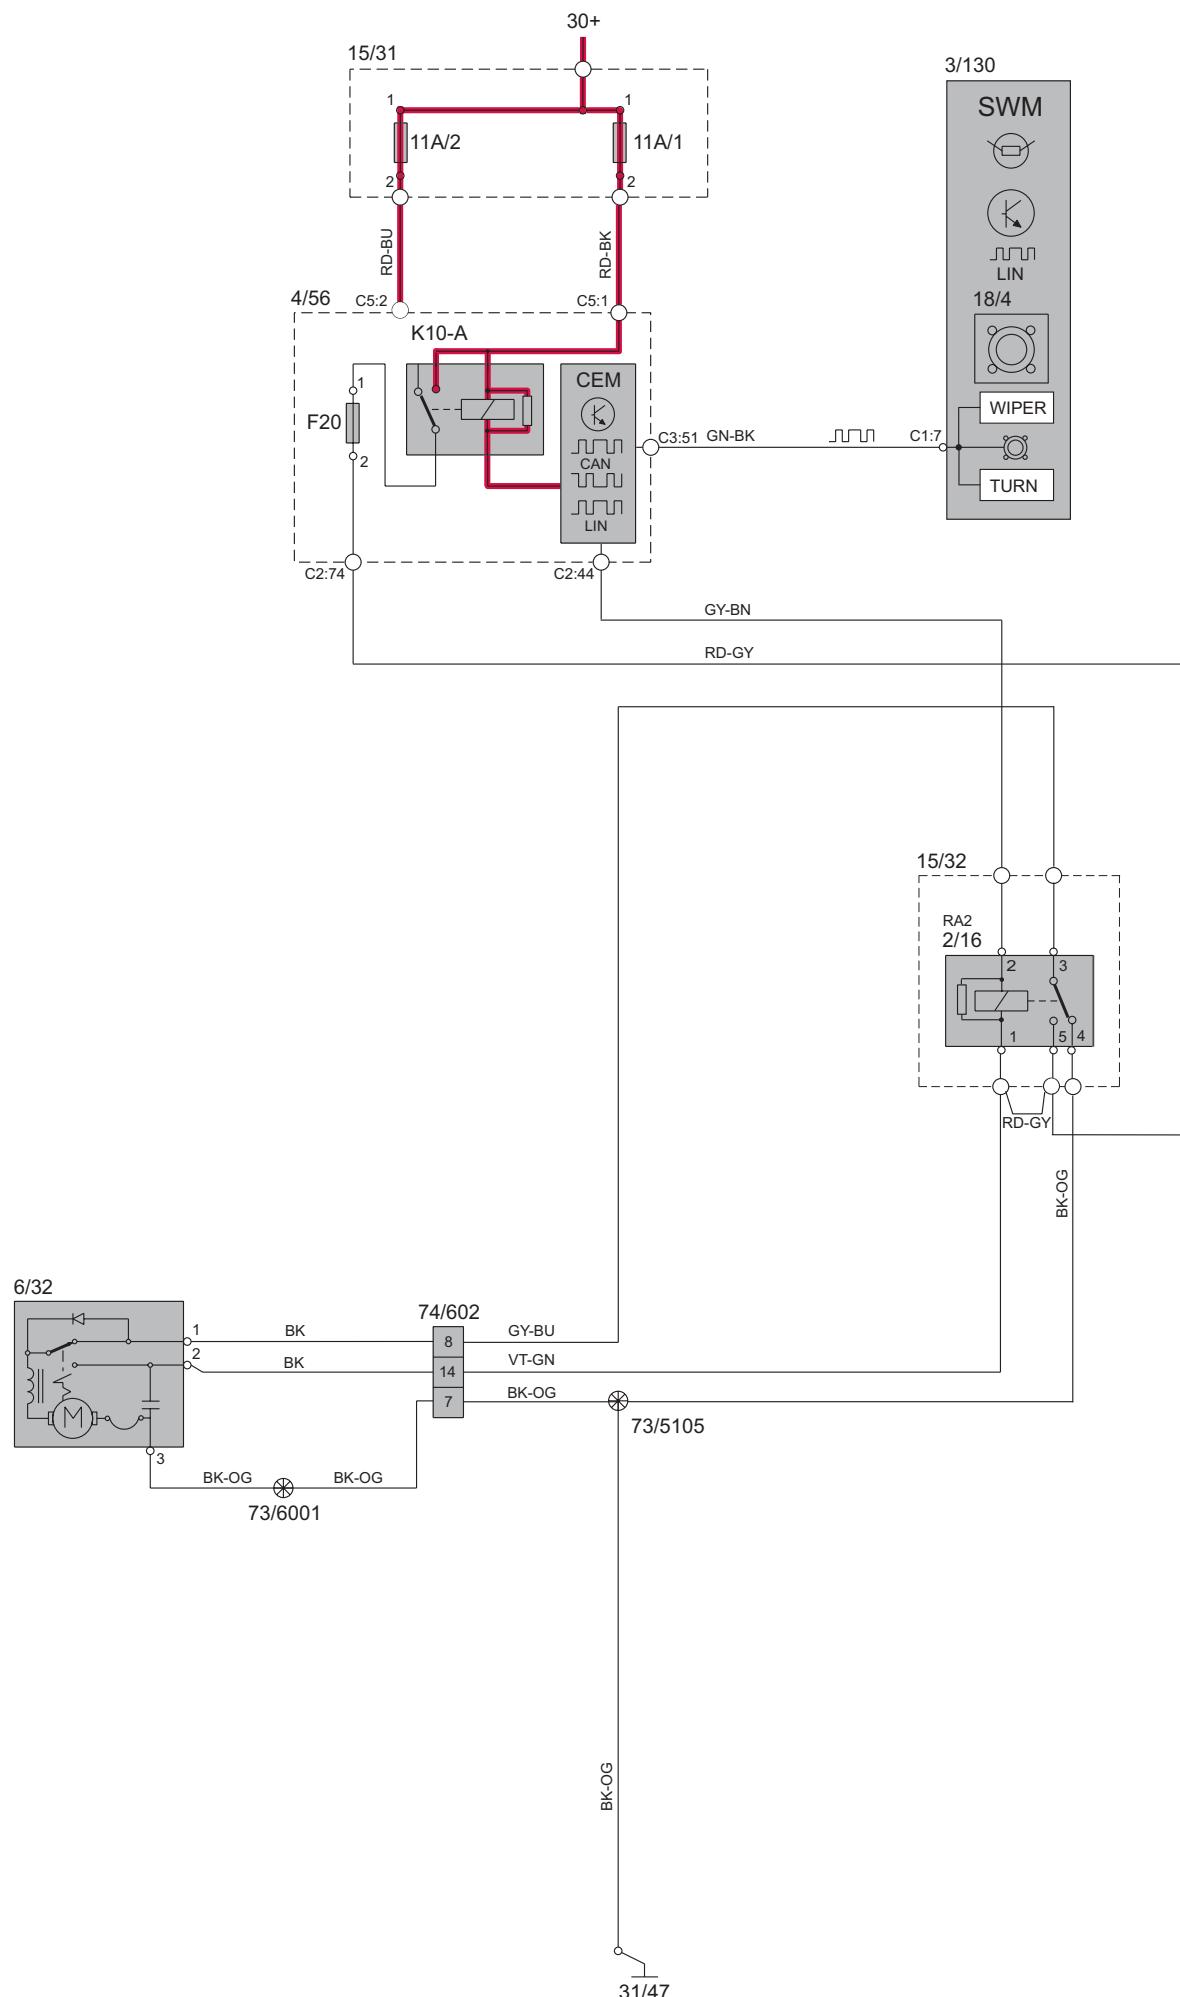


Group 36 Additional electrical equipment

Horn

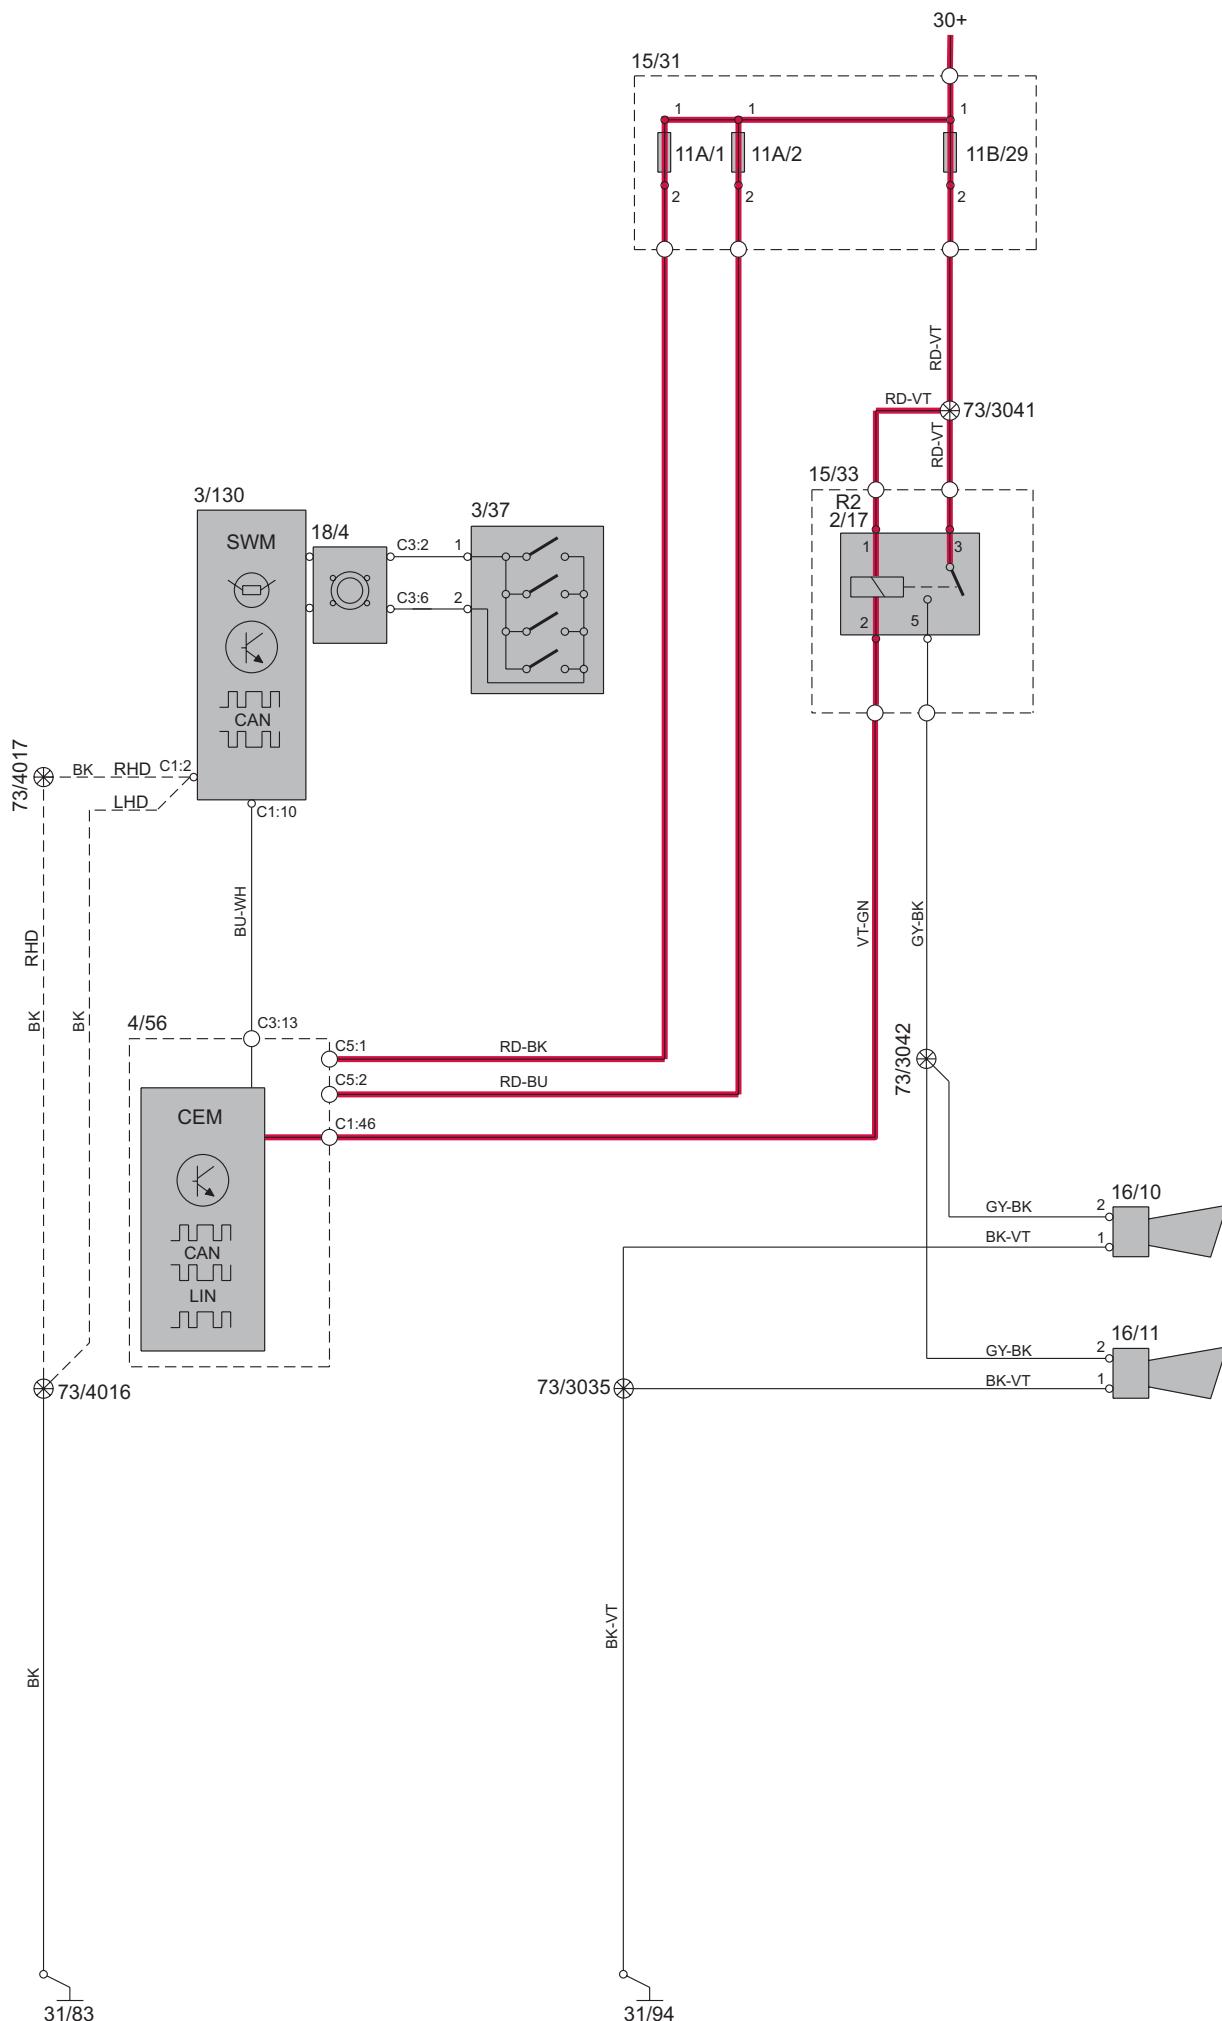


Group 36 Additional electrical equipment

Keyless vehicle 1:2

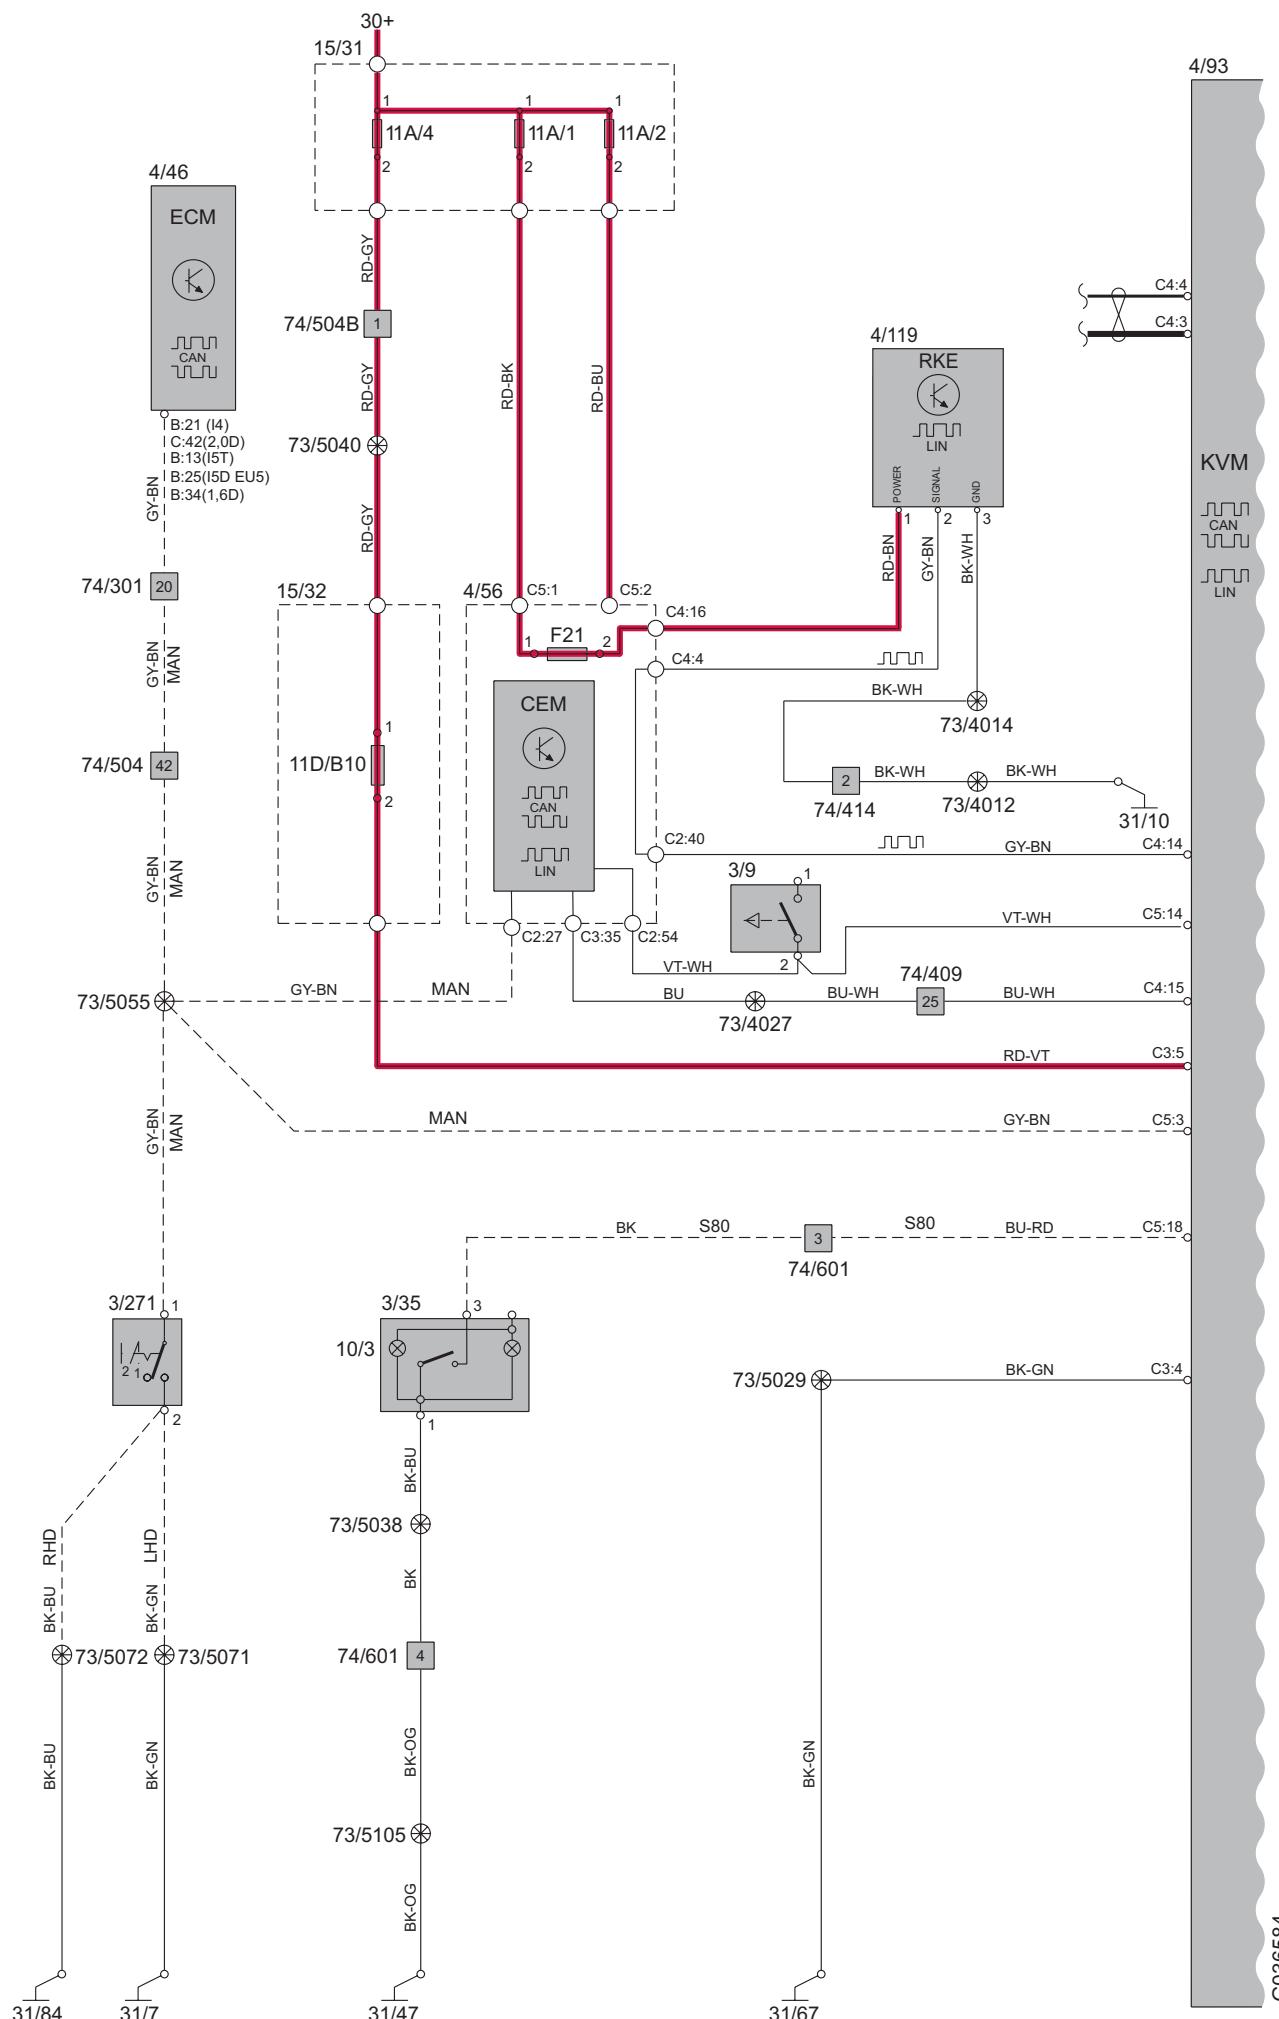


G036584

Group 36 Additional electrical equipment Keyless vehicle 2:2

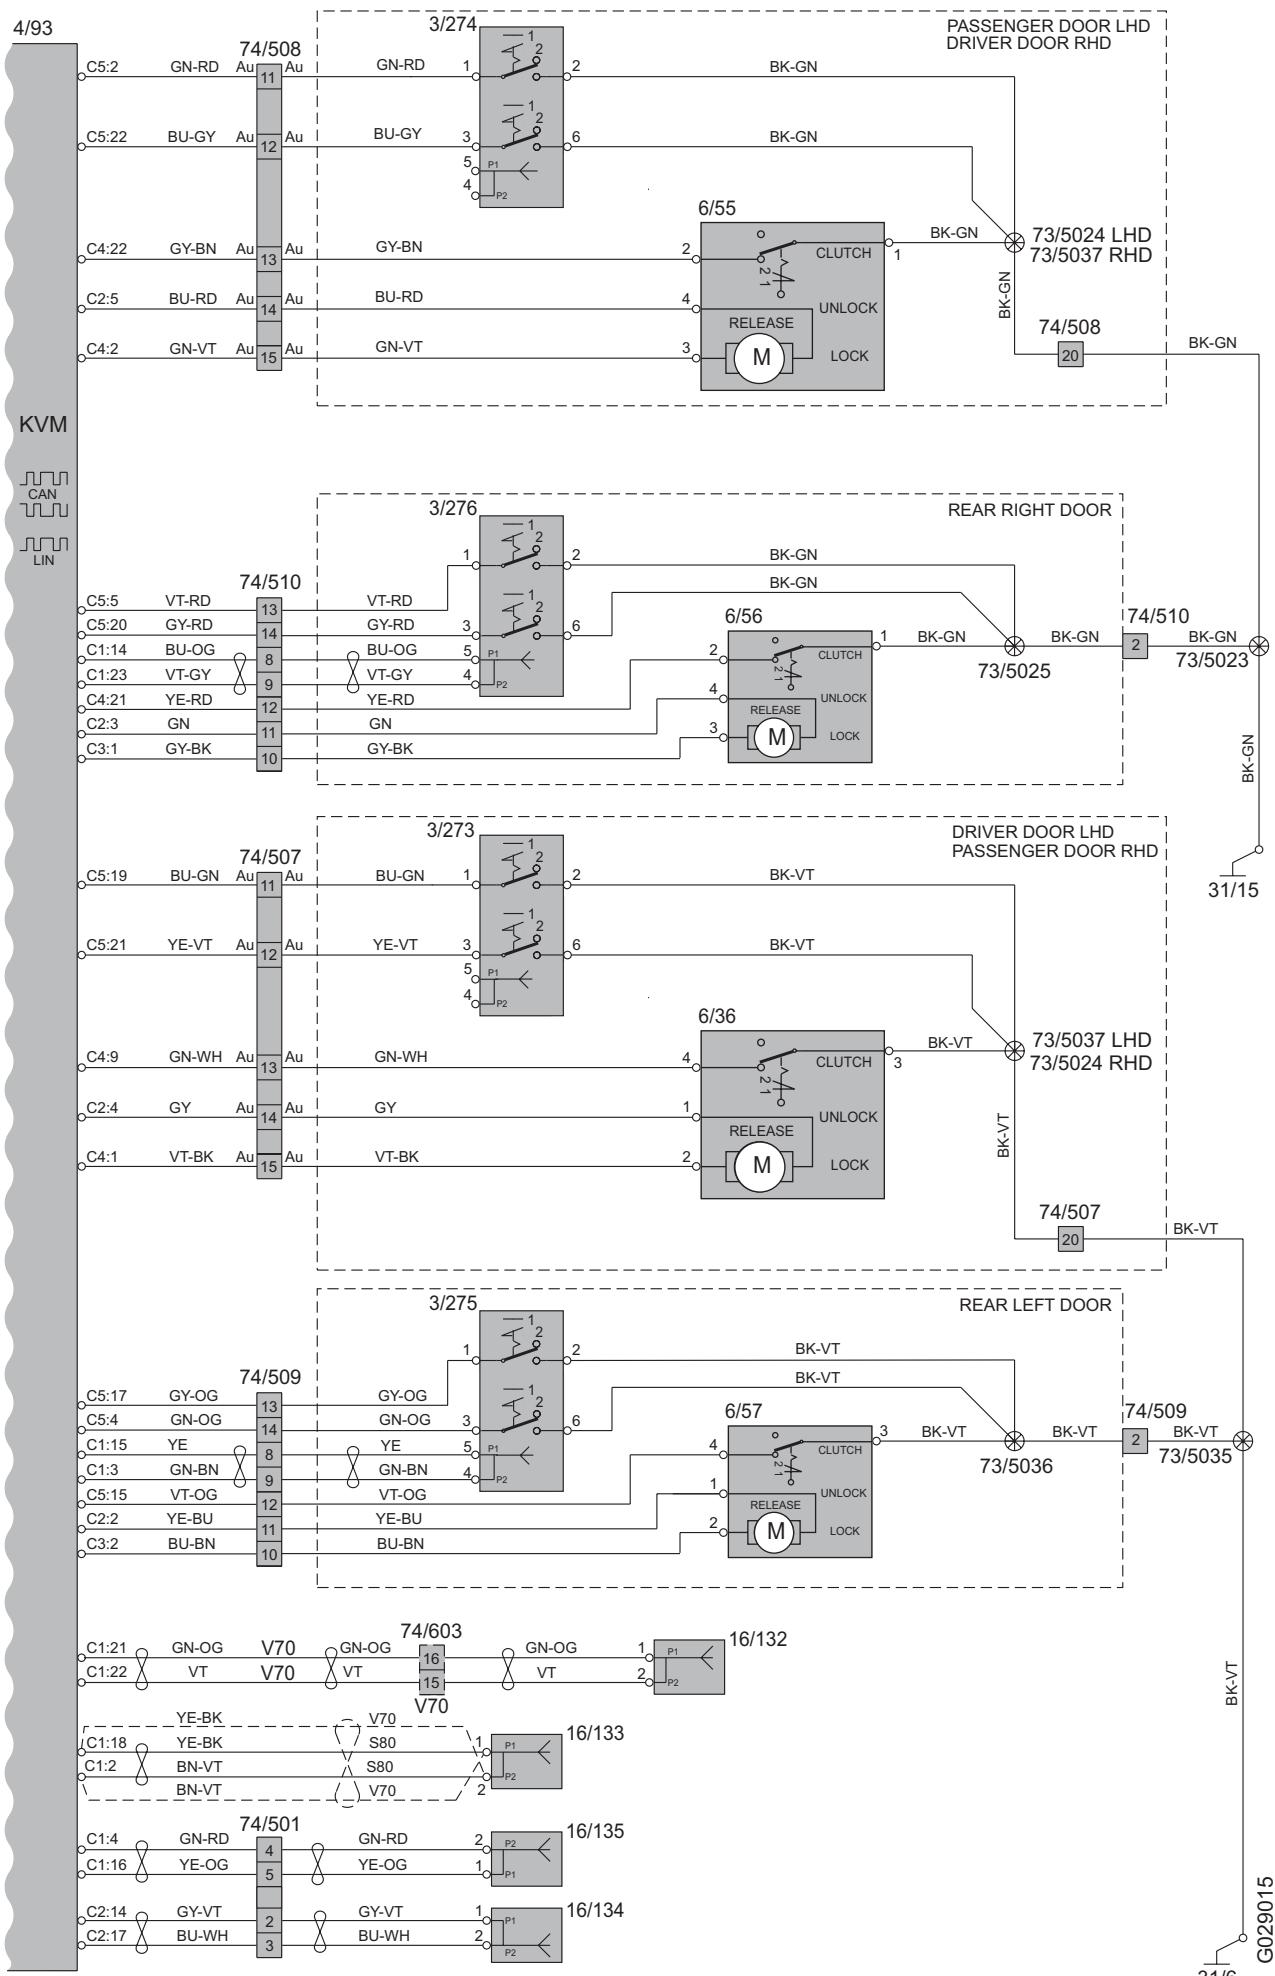


Group 36 Additional electrical equipment

Anti-theft alarm

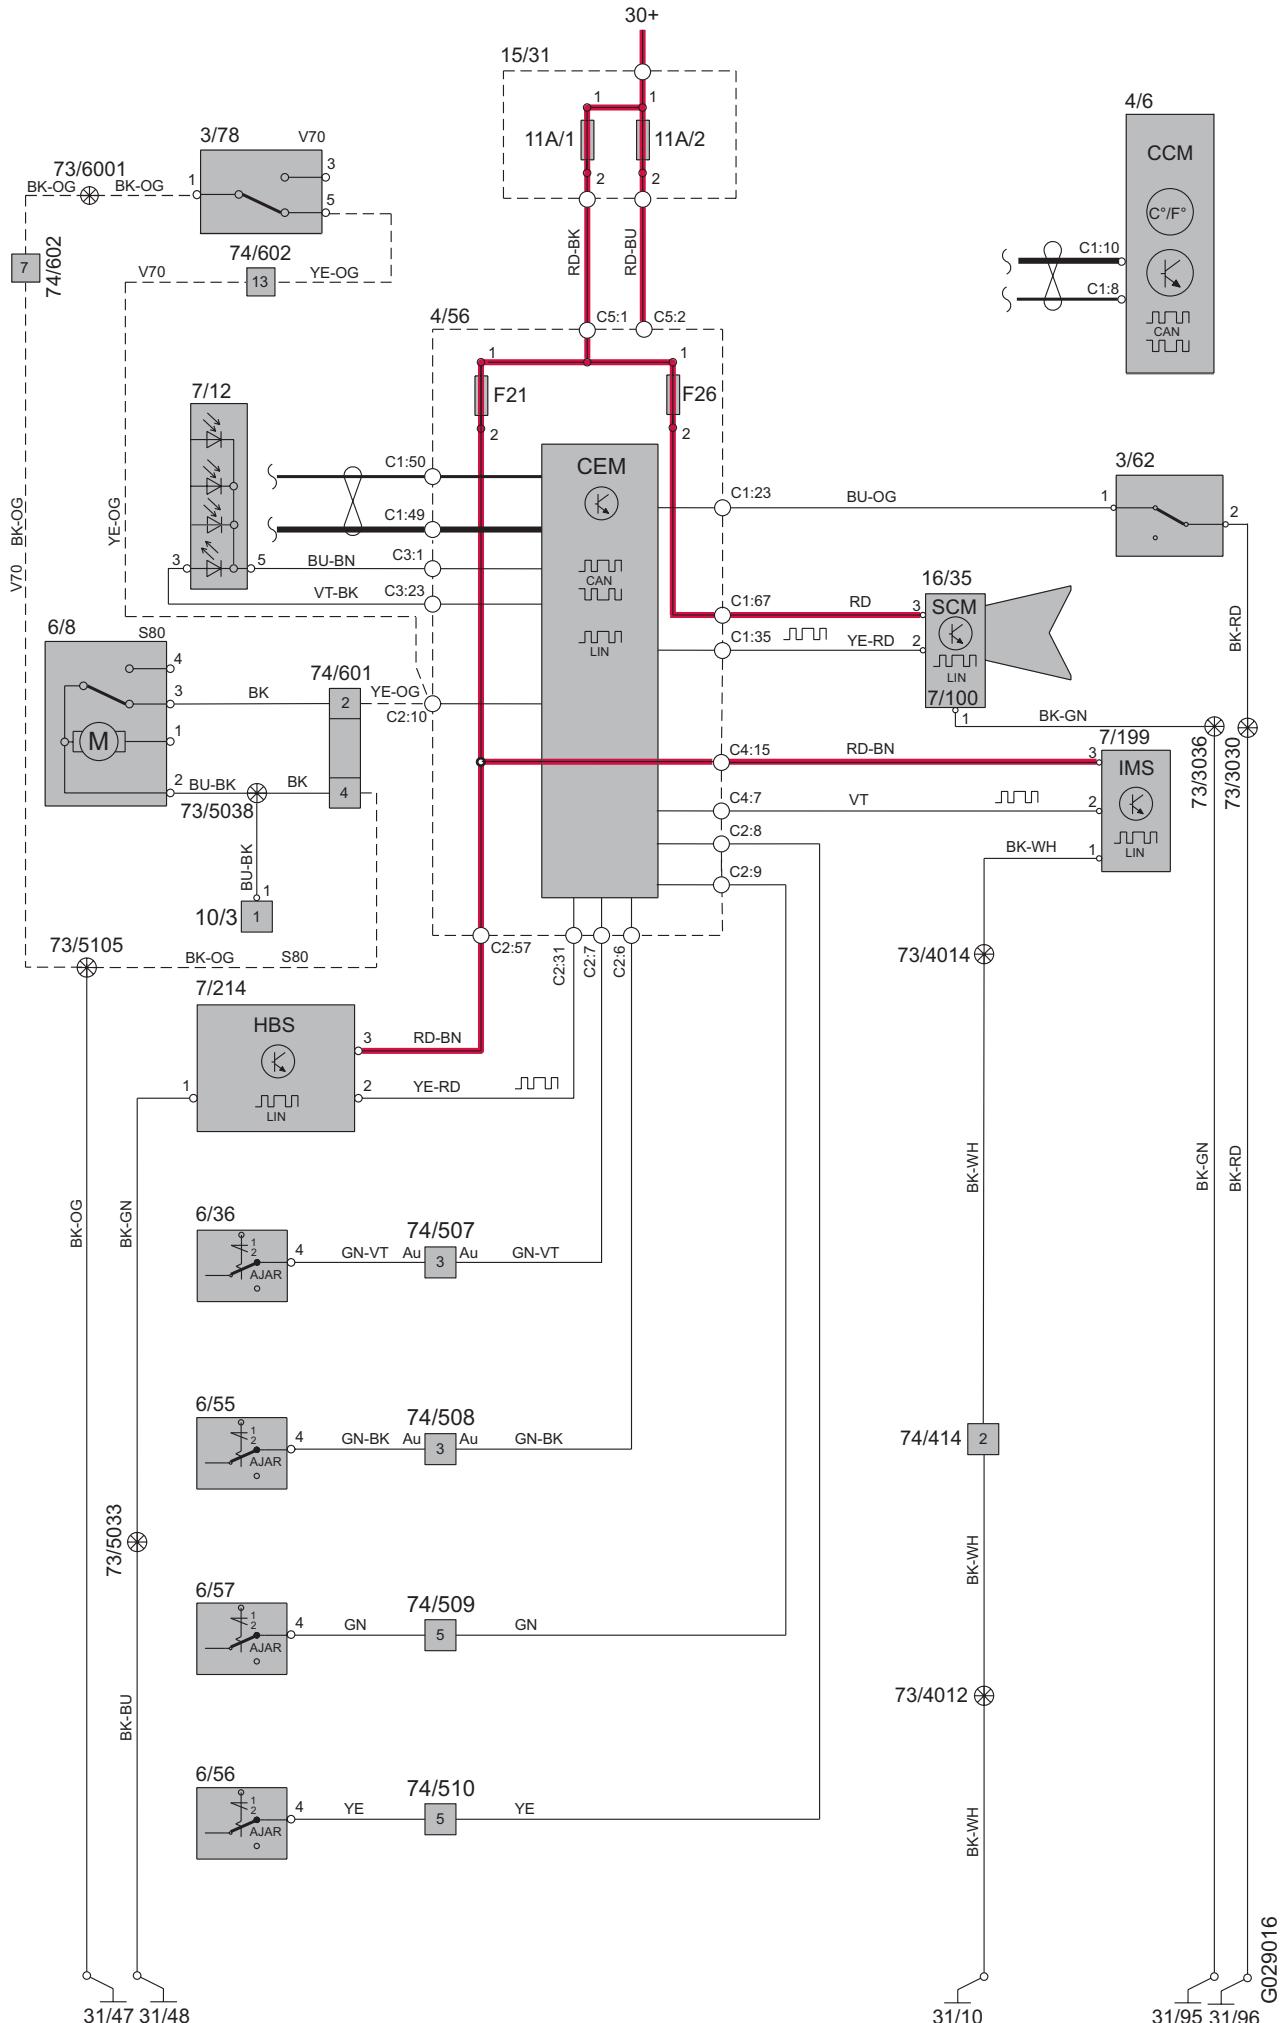


Group 36 Additional electrical equipment

Parking assistance

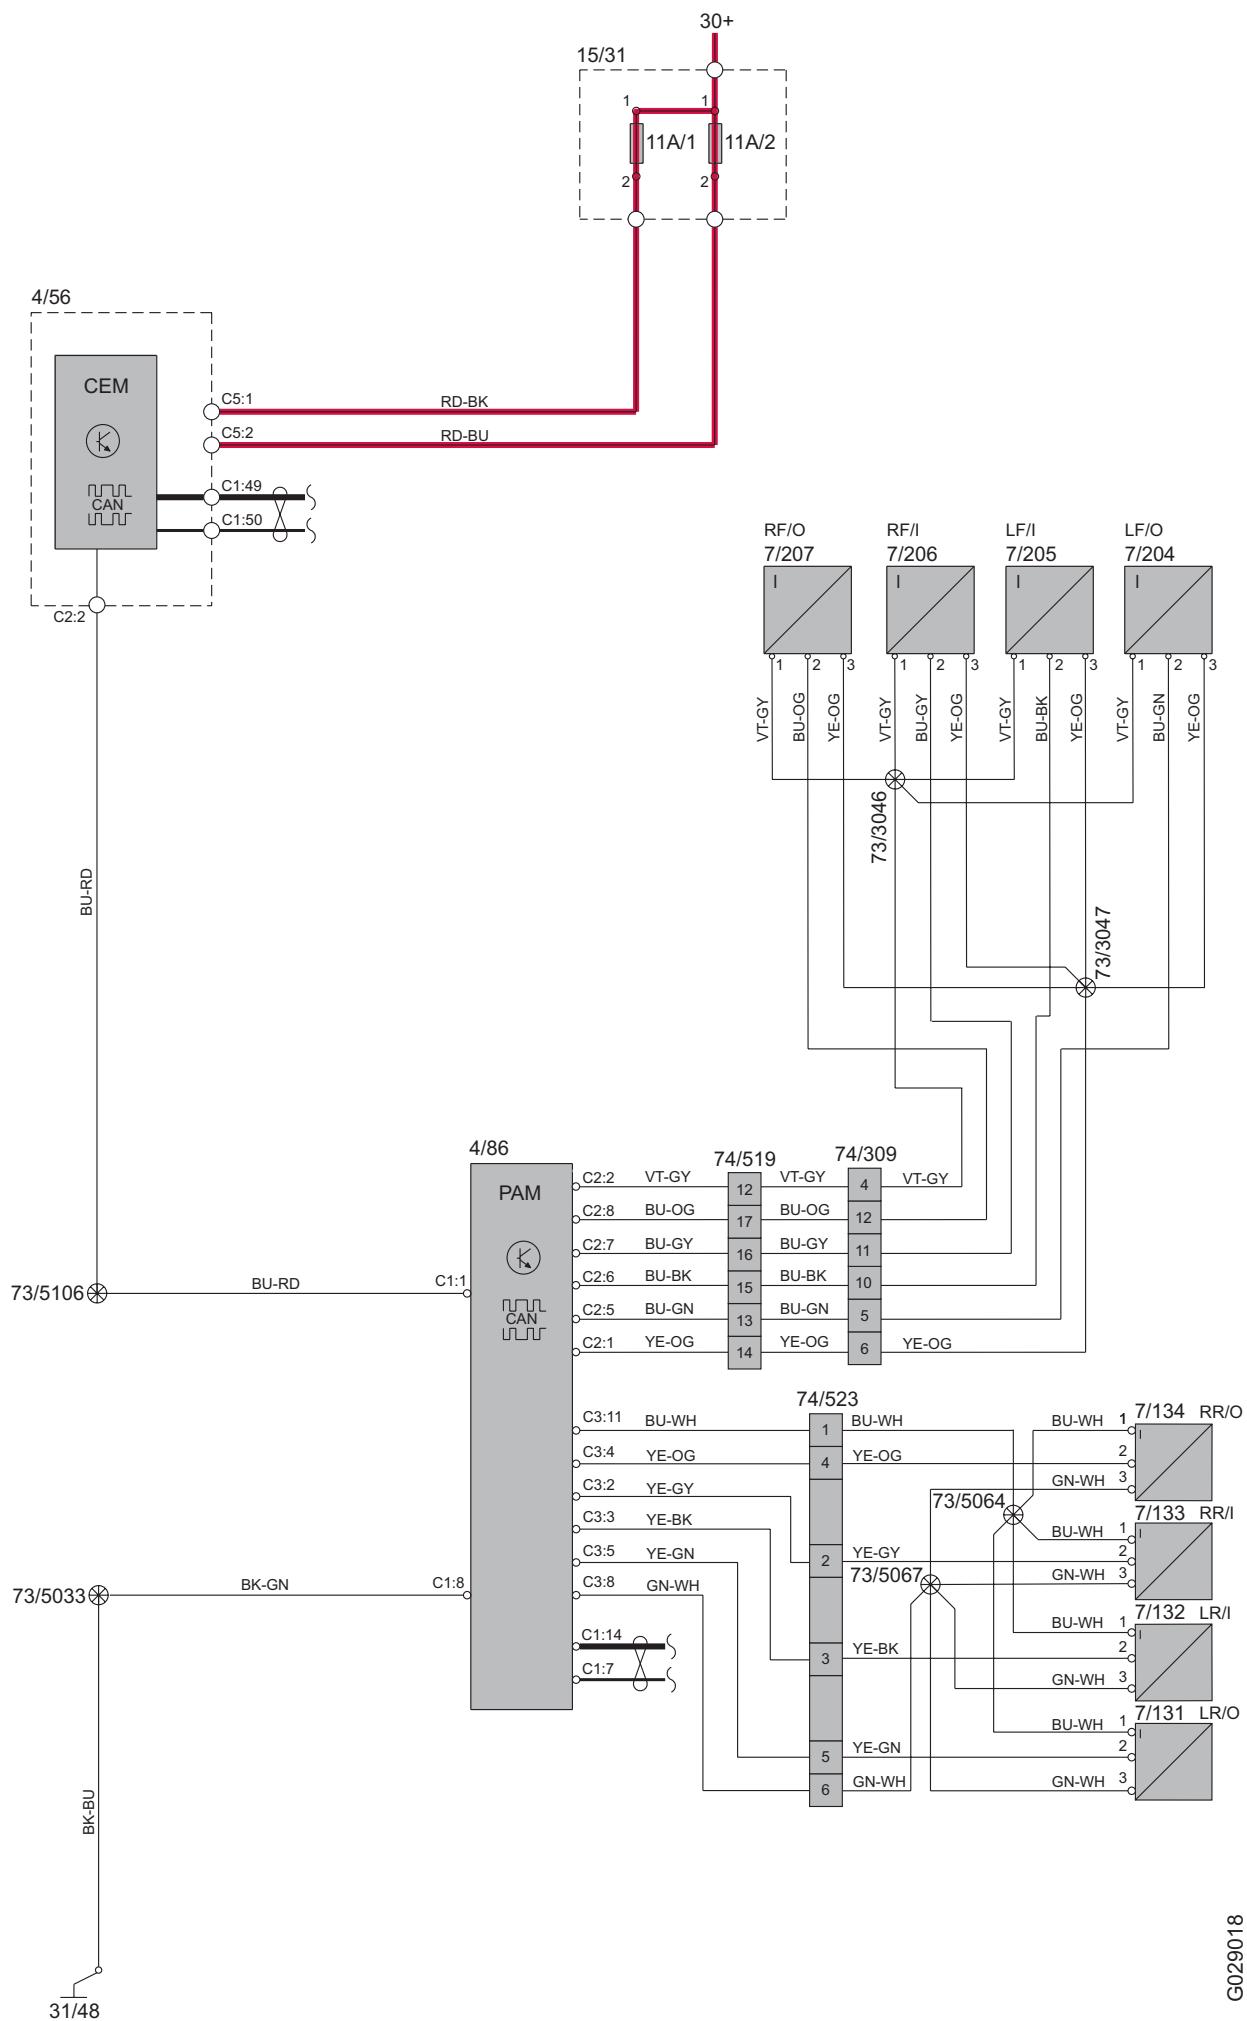


Group 36 Additional electrical equipment

Collision warning with power brake booster

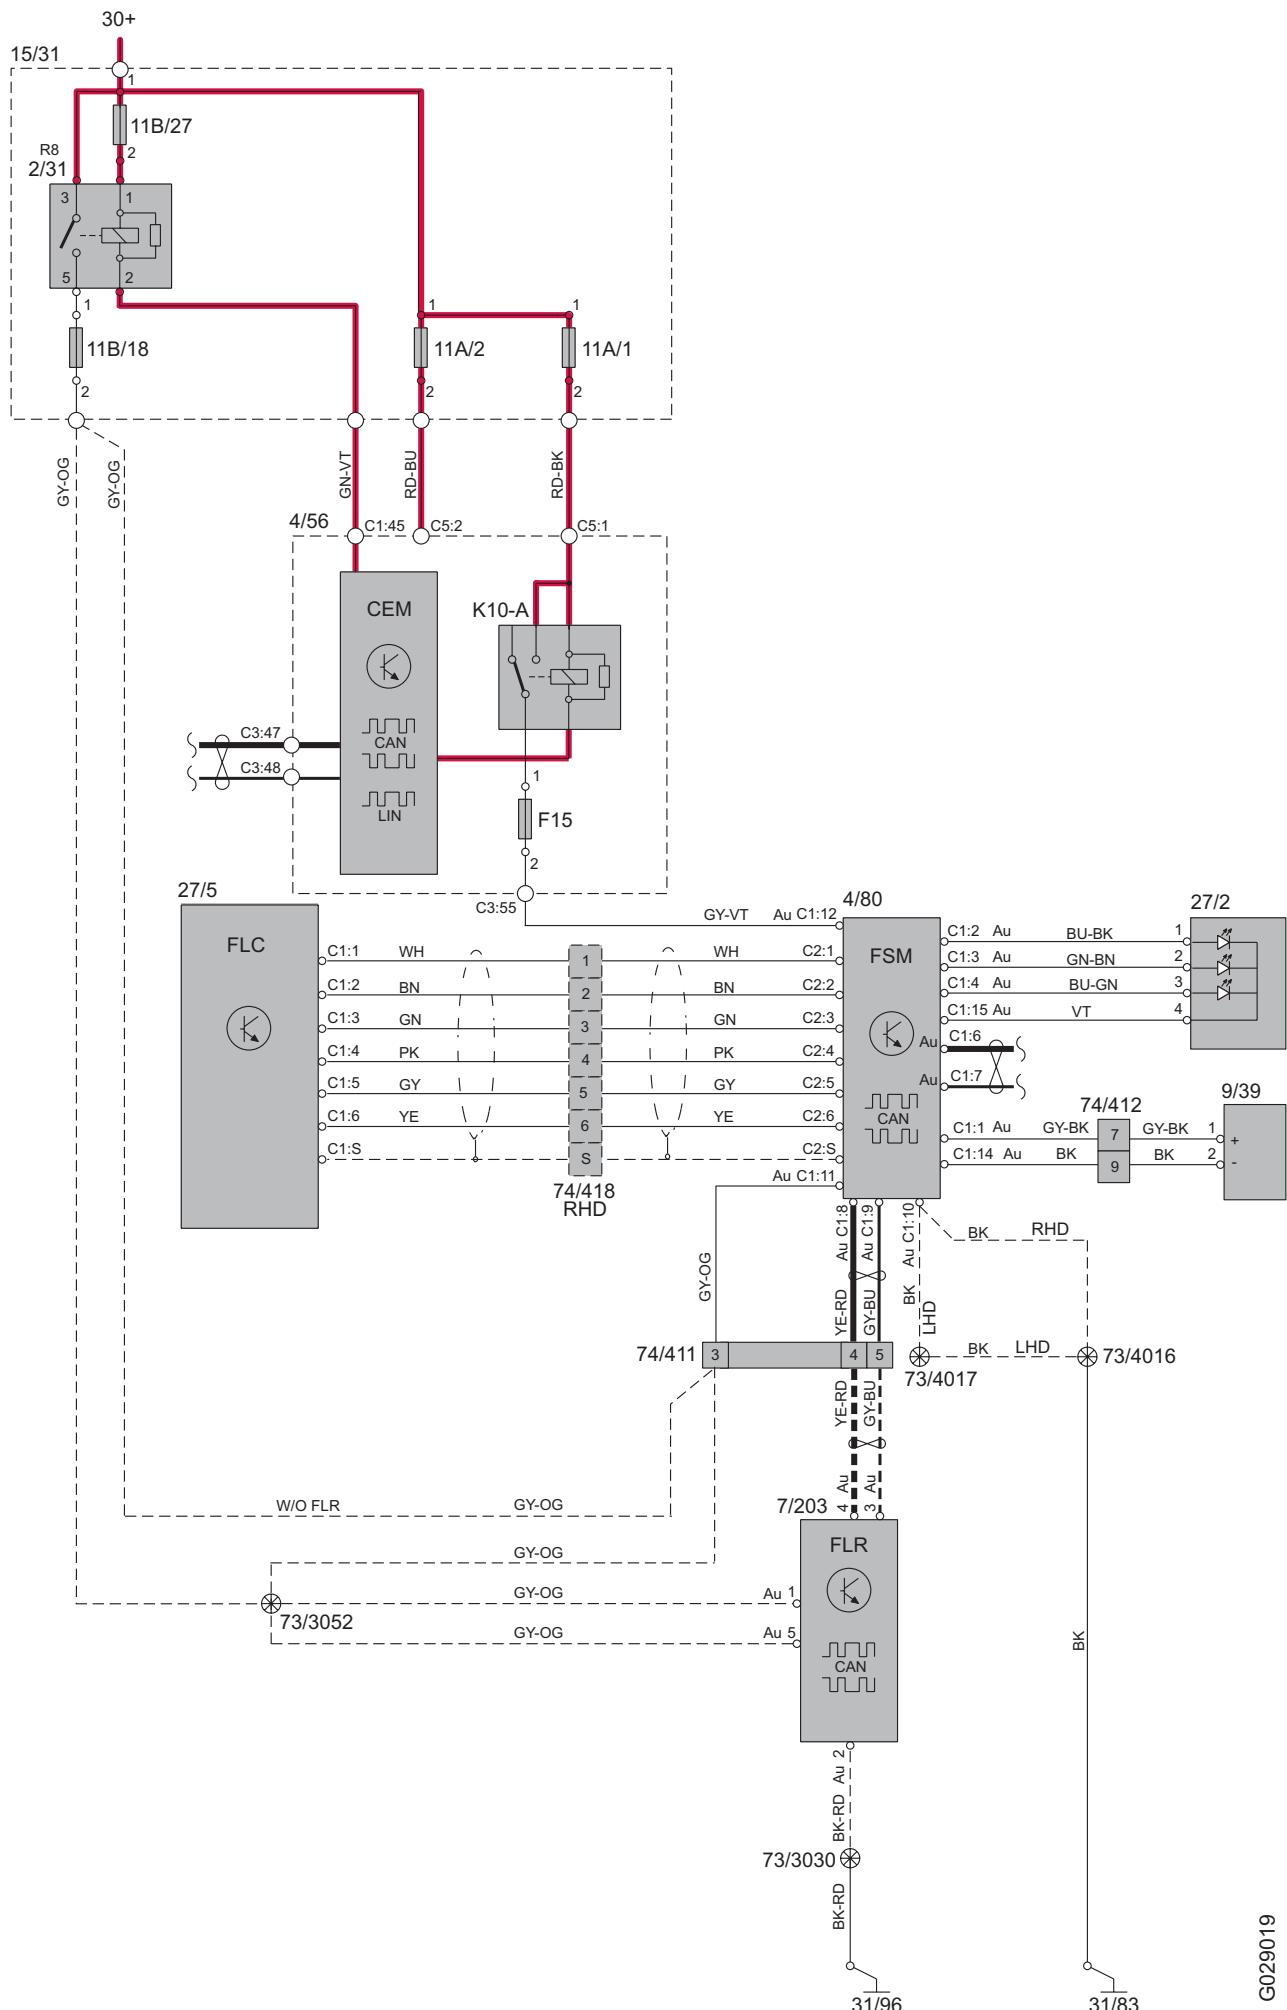


Group 36 Additional electrical equipment

Tire pressure monitoring system (TPMS)

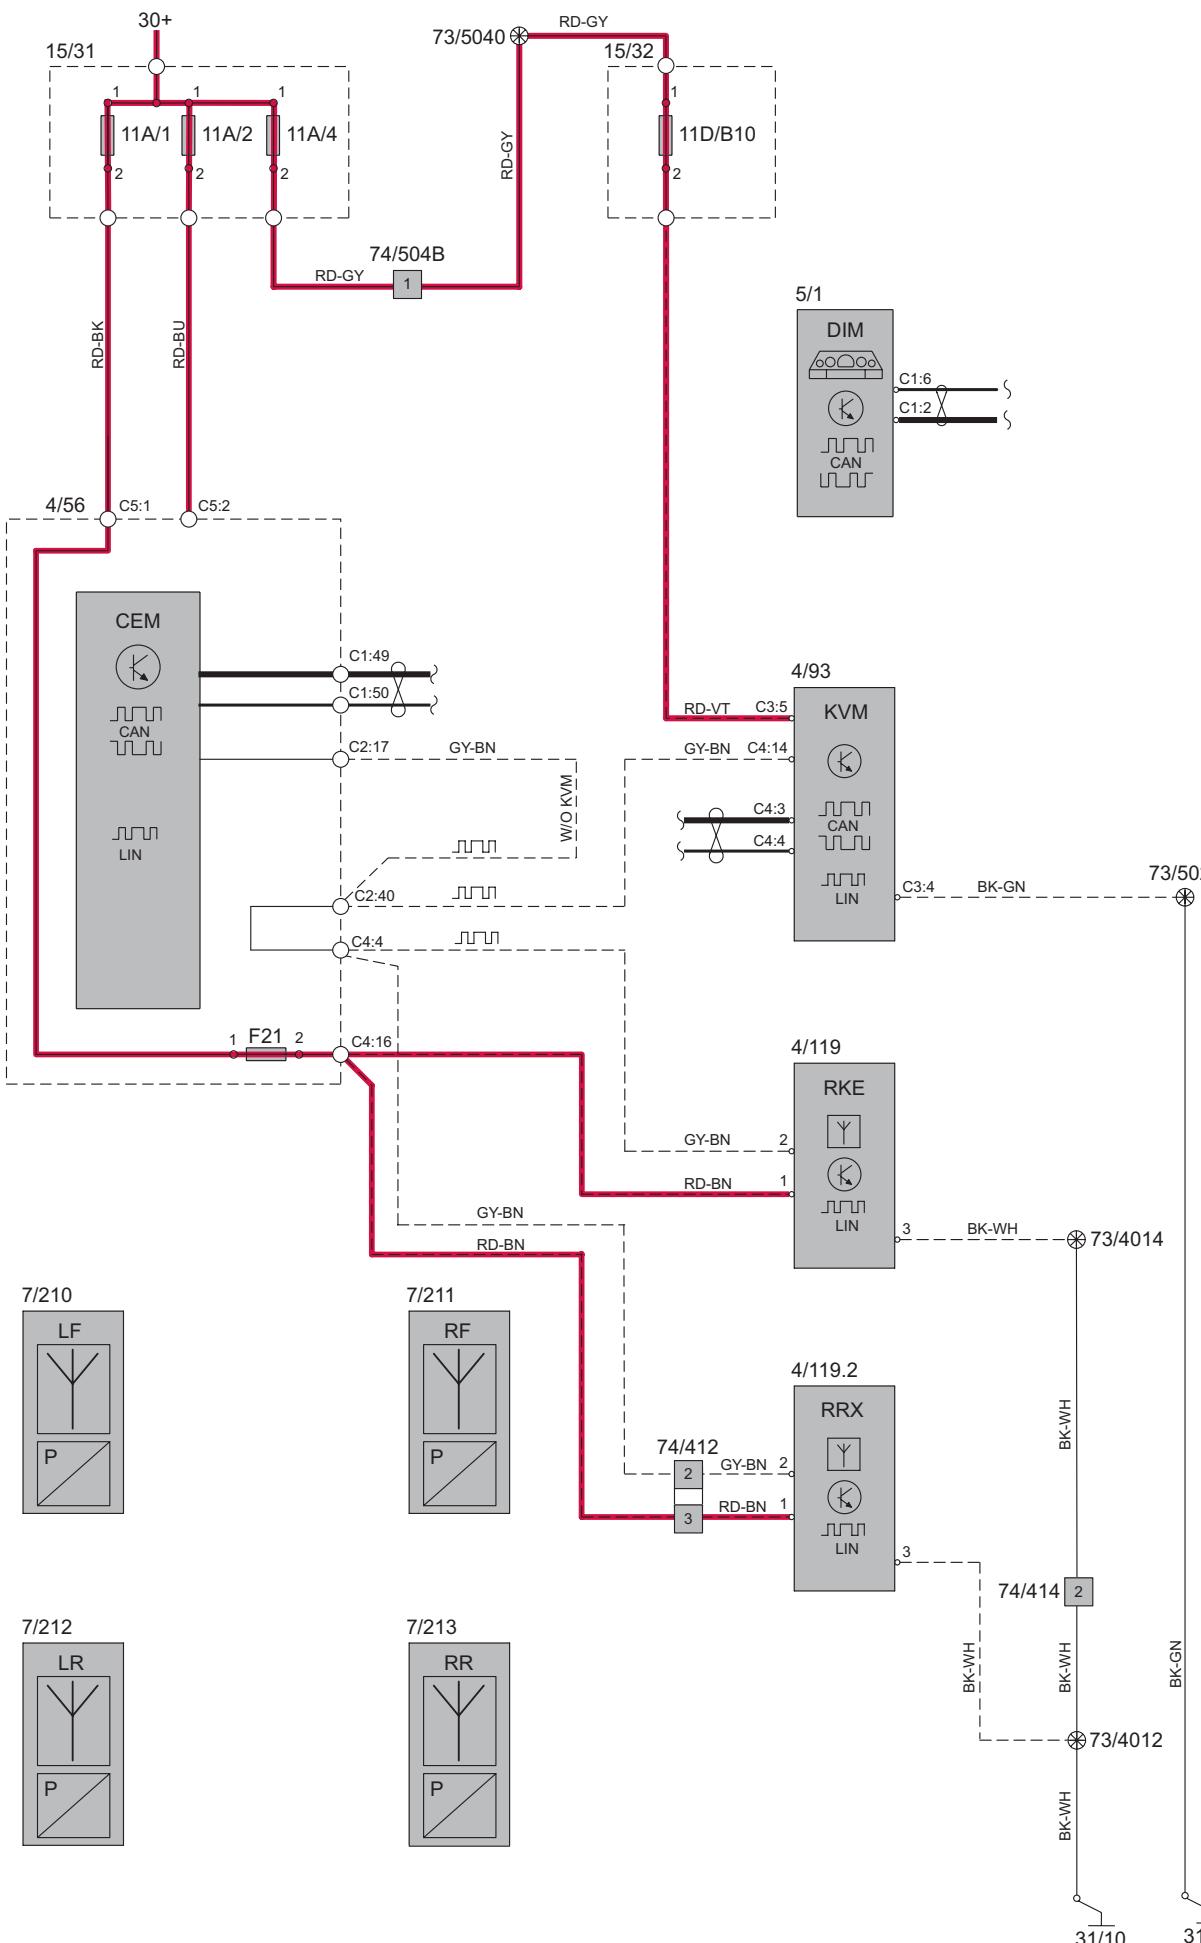

Group 36 Additional electrical equipment, Accessories


Alcohol lock

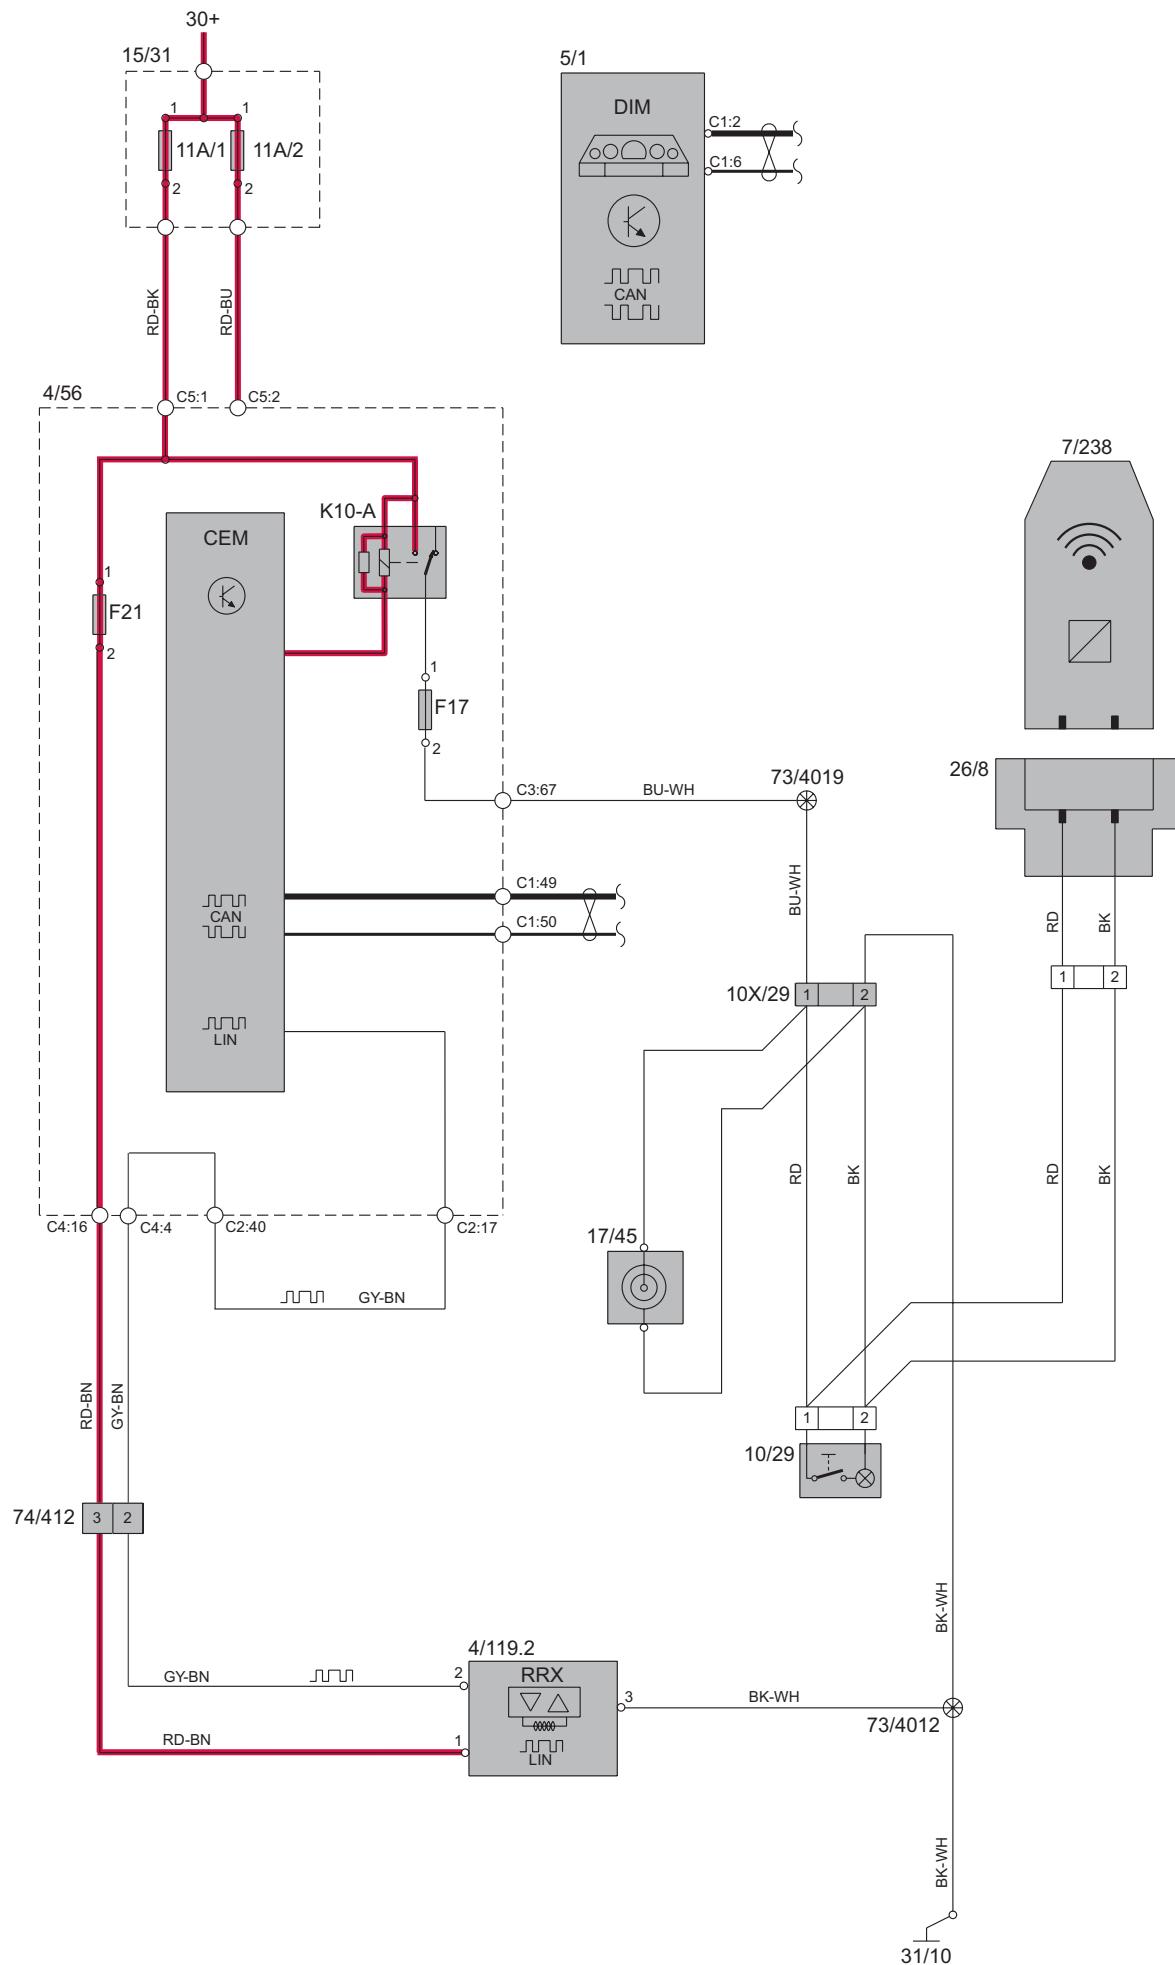

G029580


Group 37 Wiring and fuses

Diagnostics system

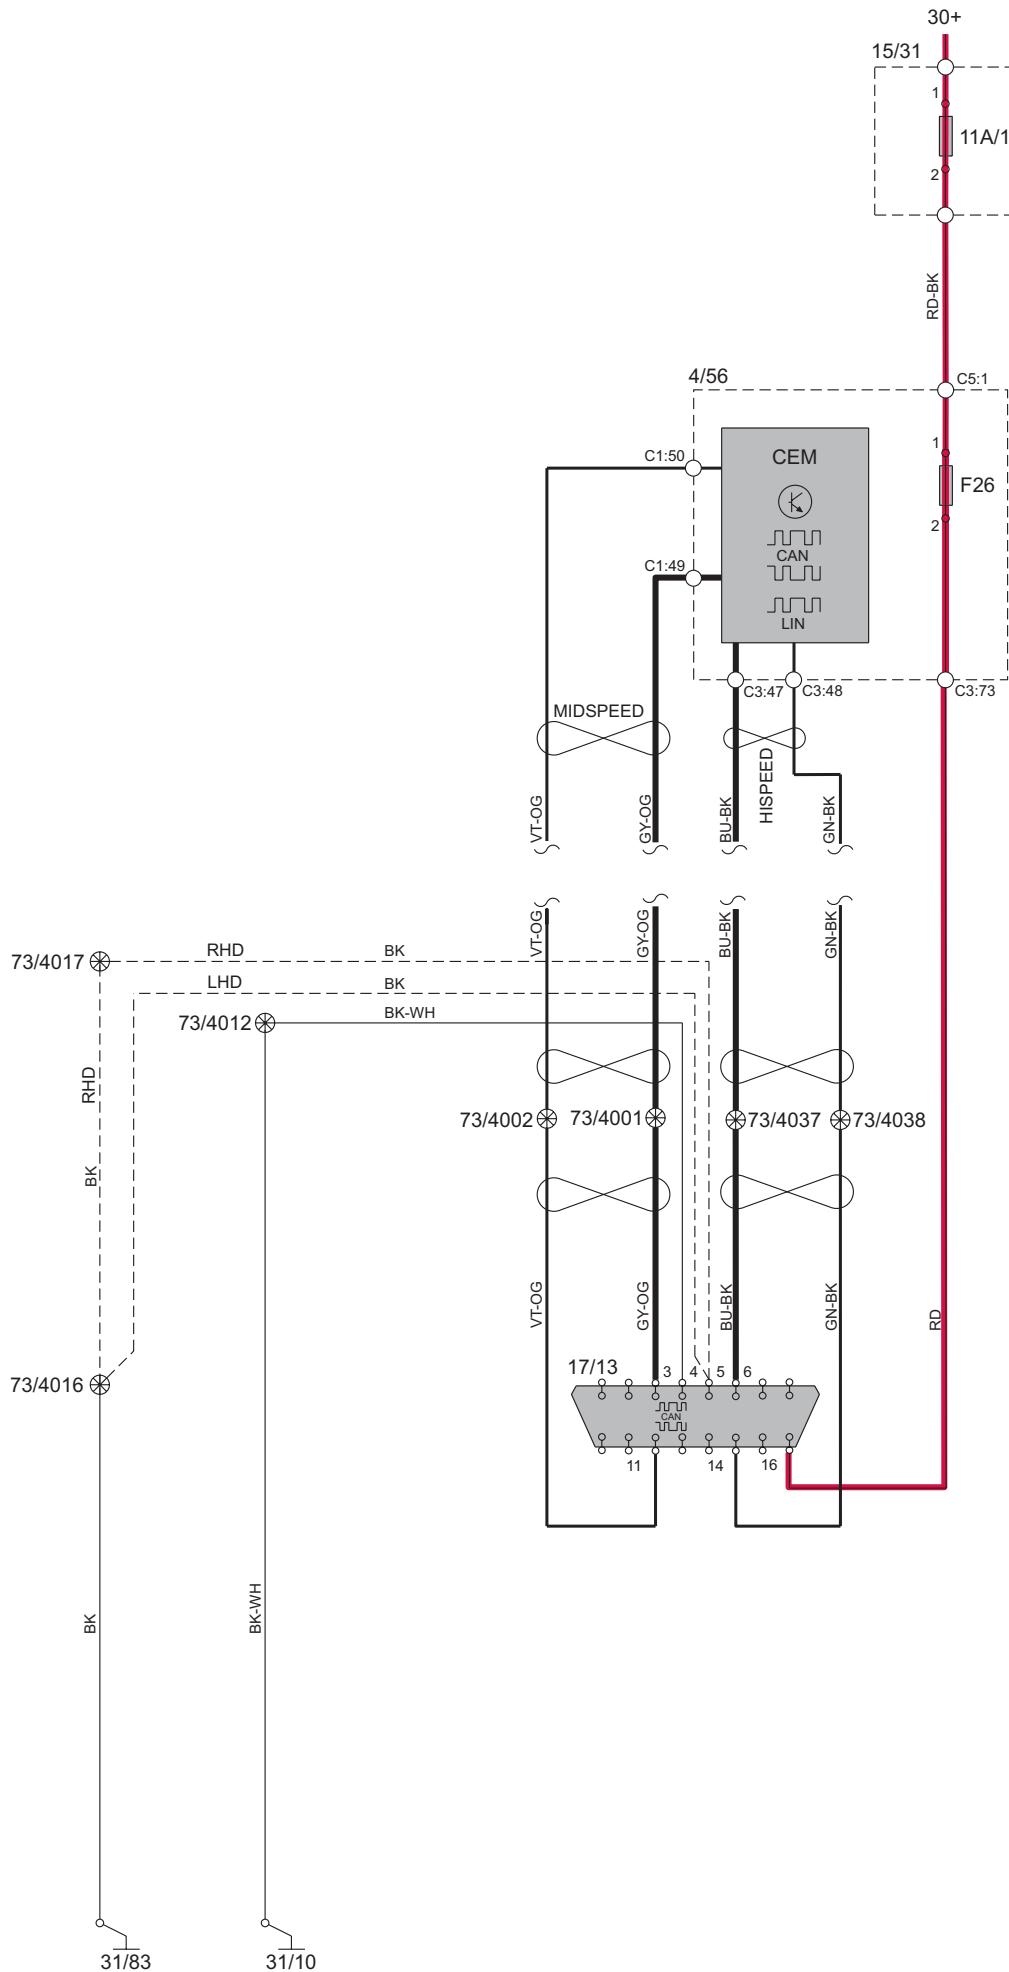


Group 37 Wiring and fuses

Outlet 12V

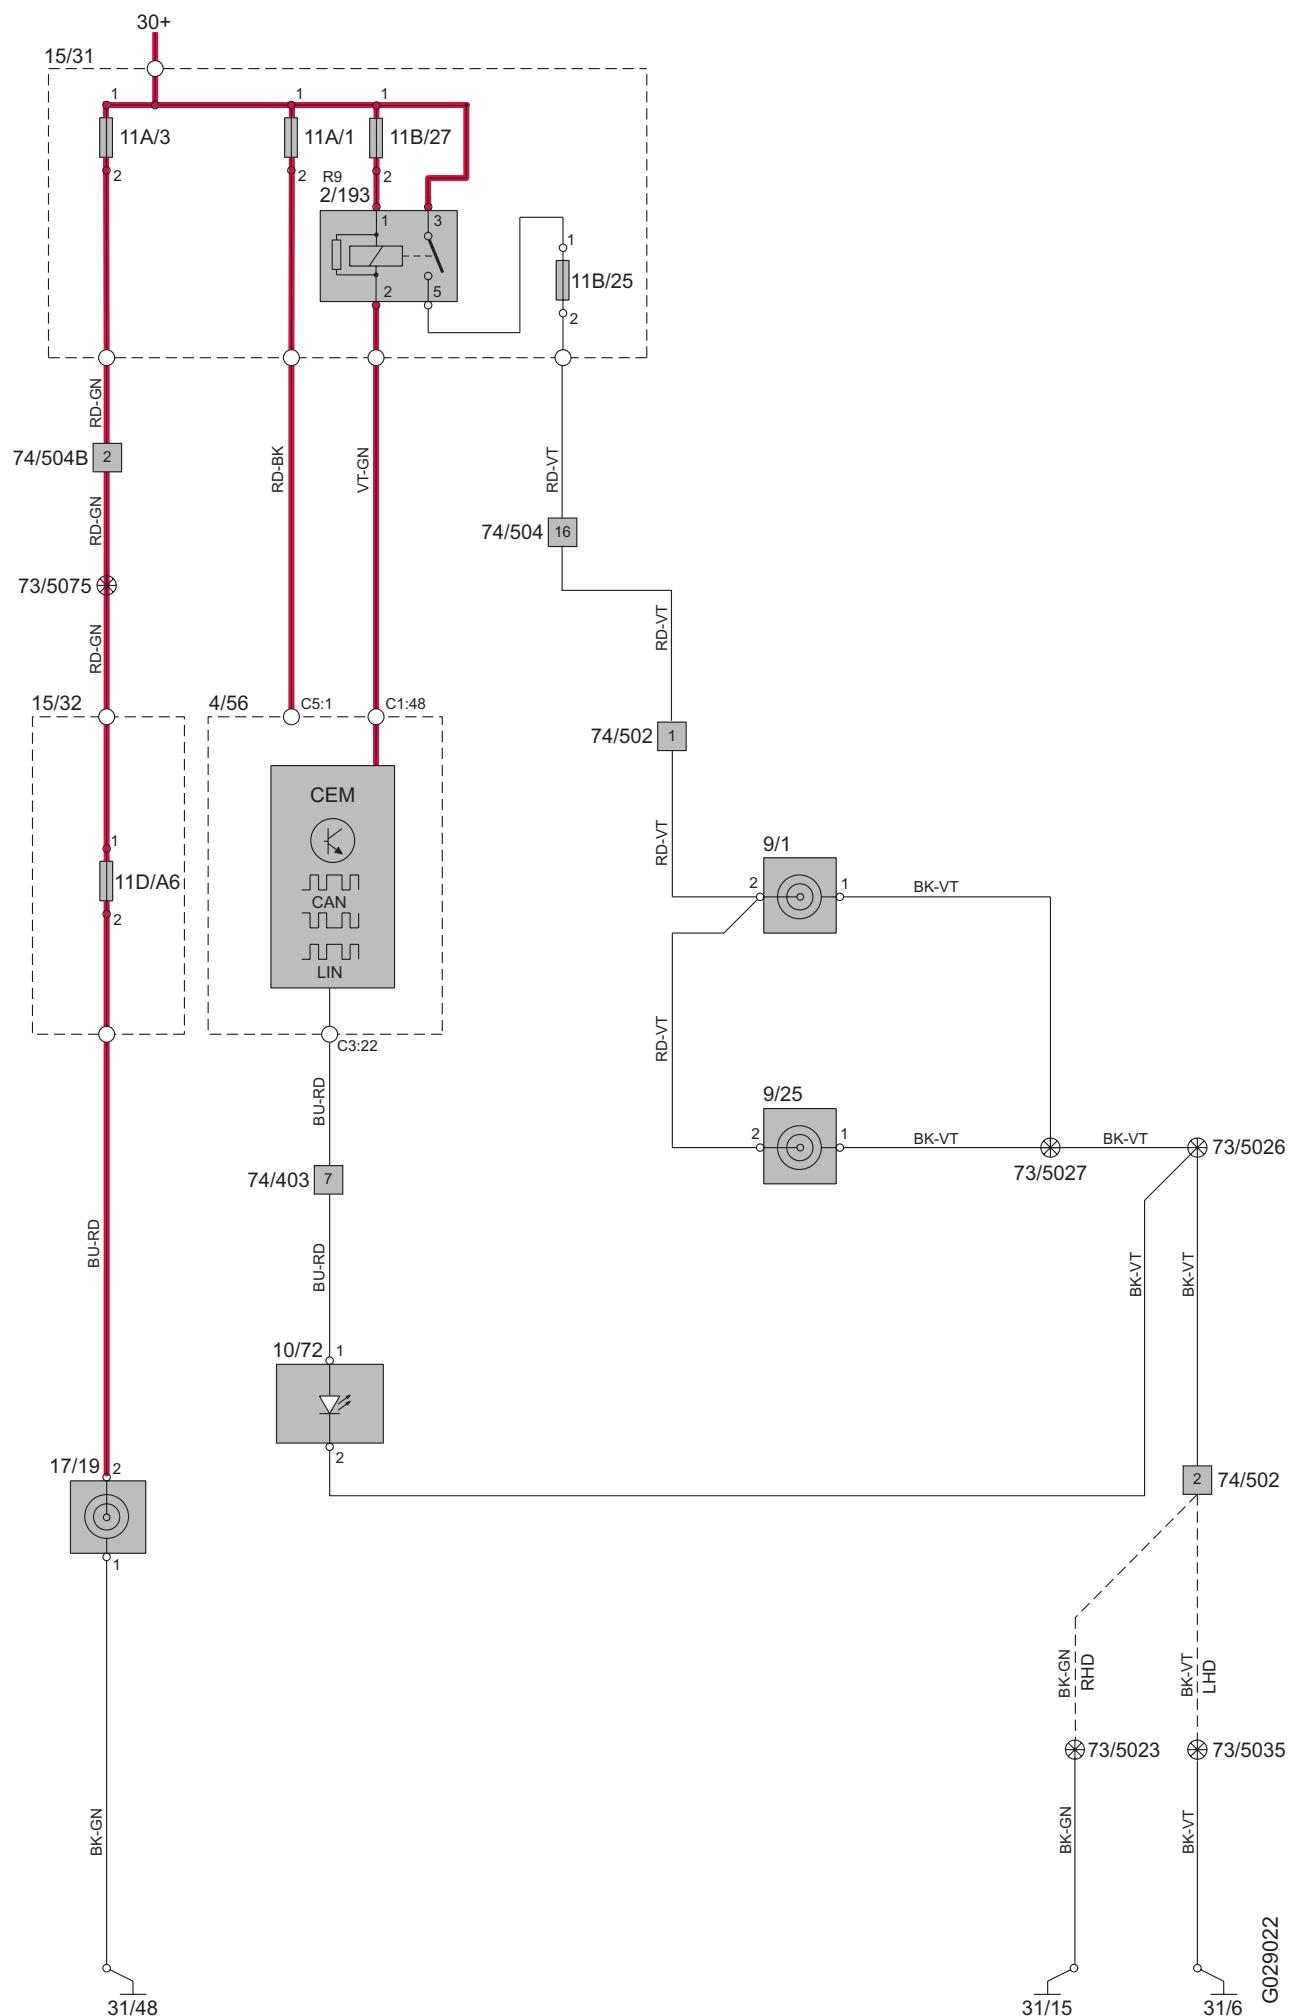


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 4-pin V70

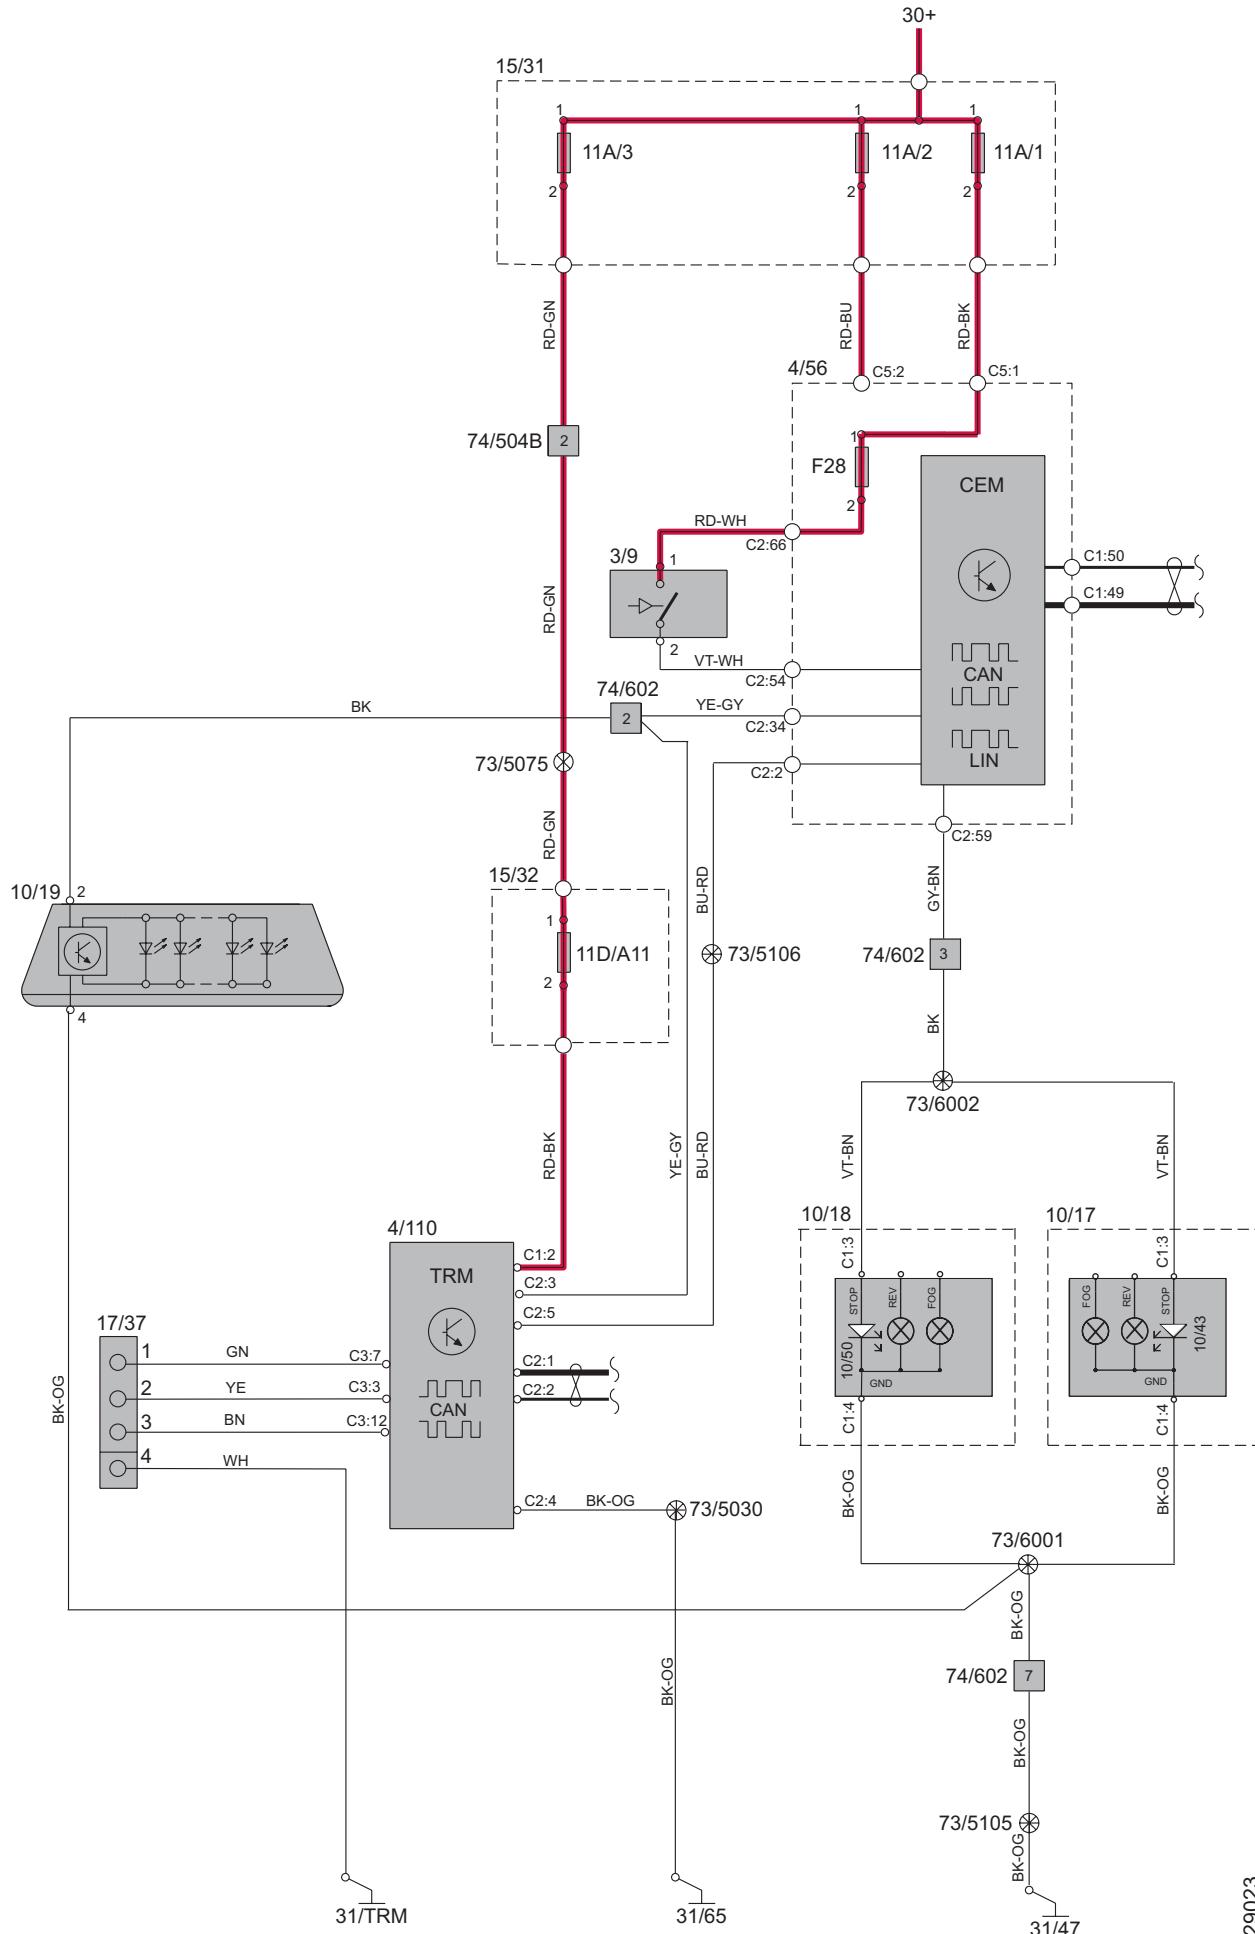


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 4-pin S80

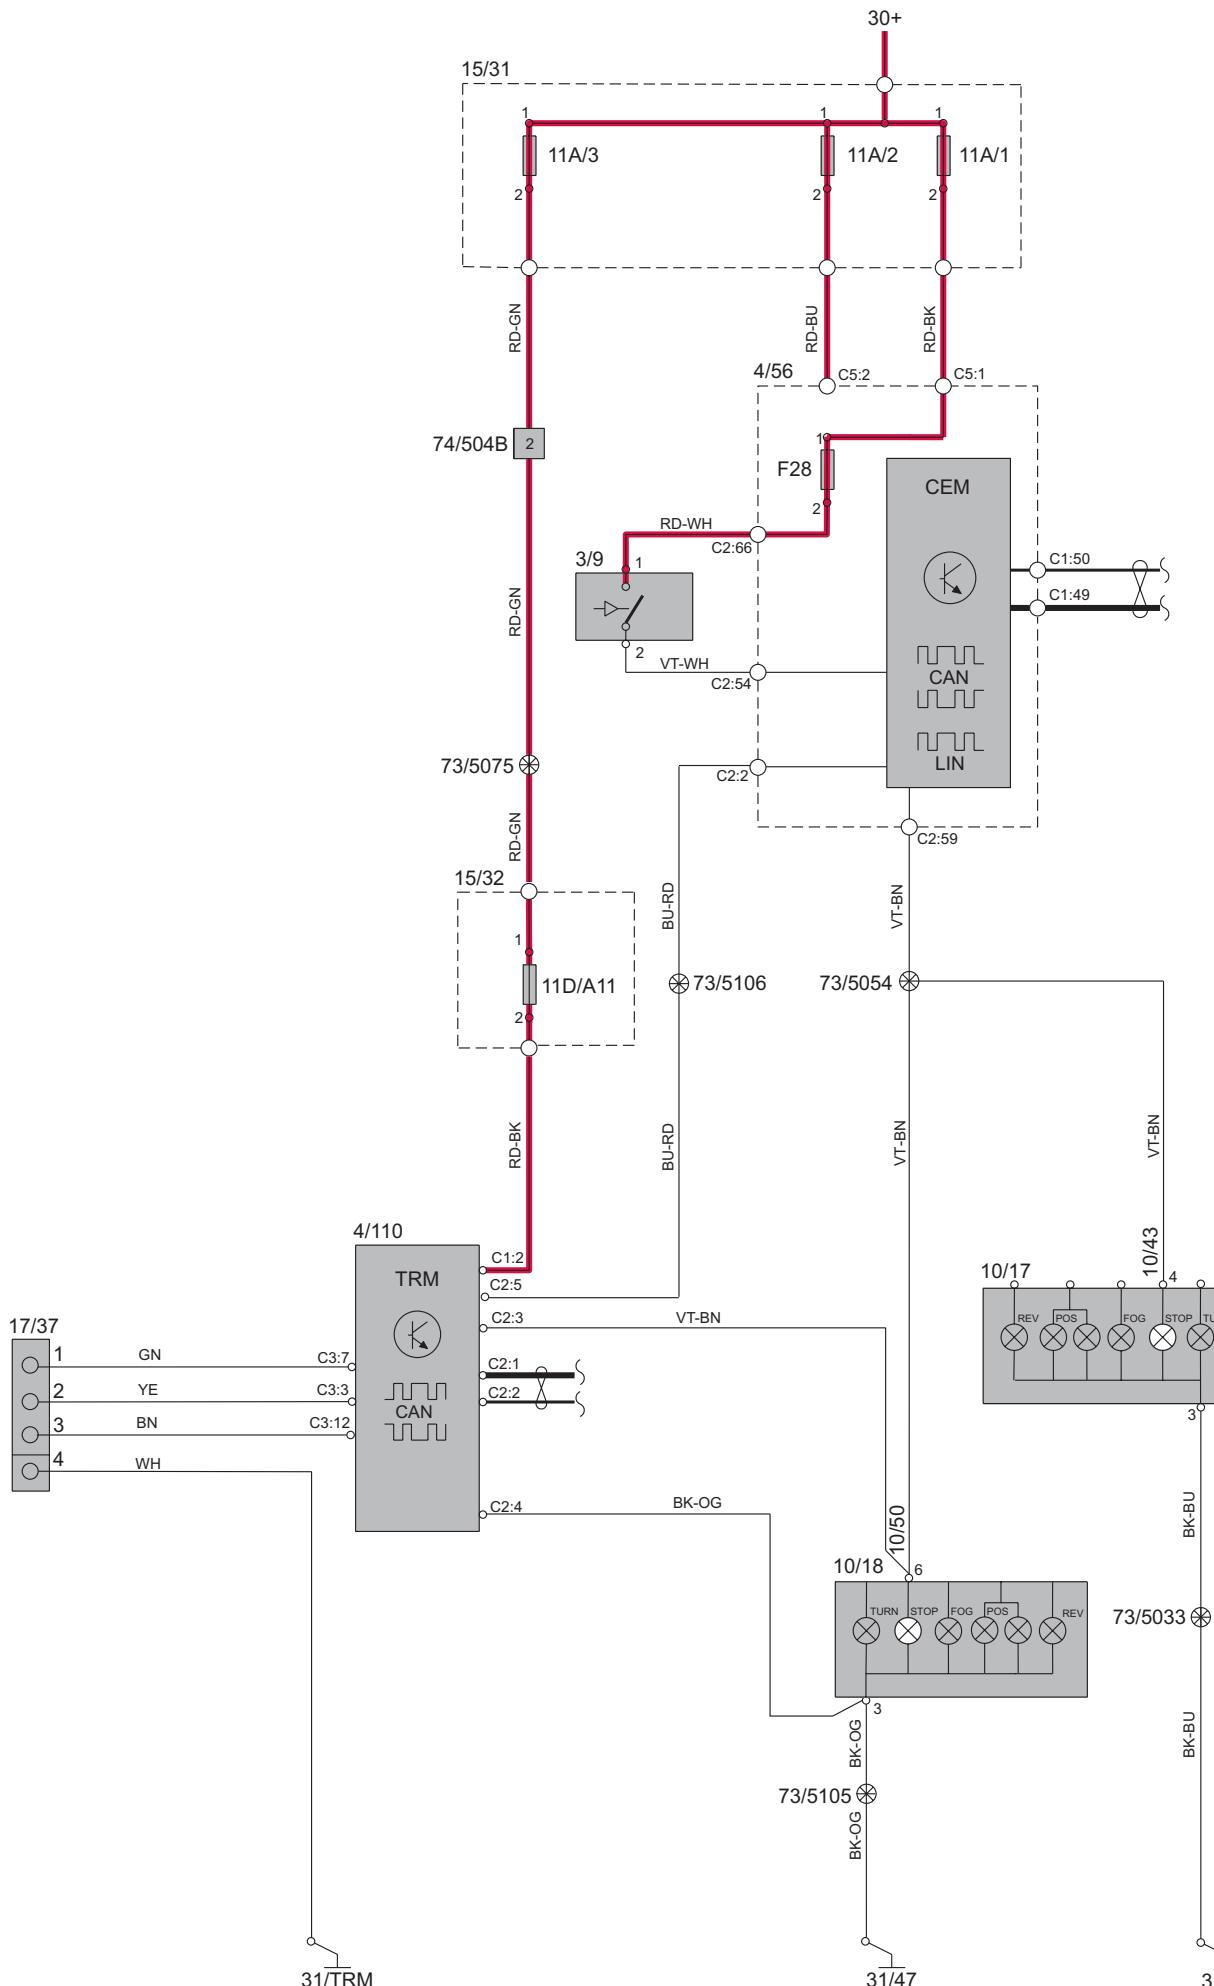


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 7-pin V70

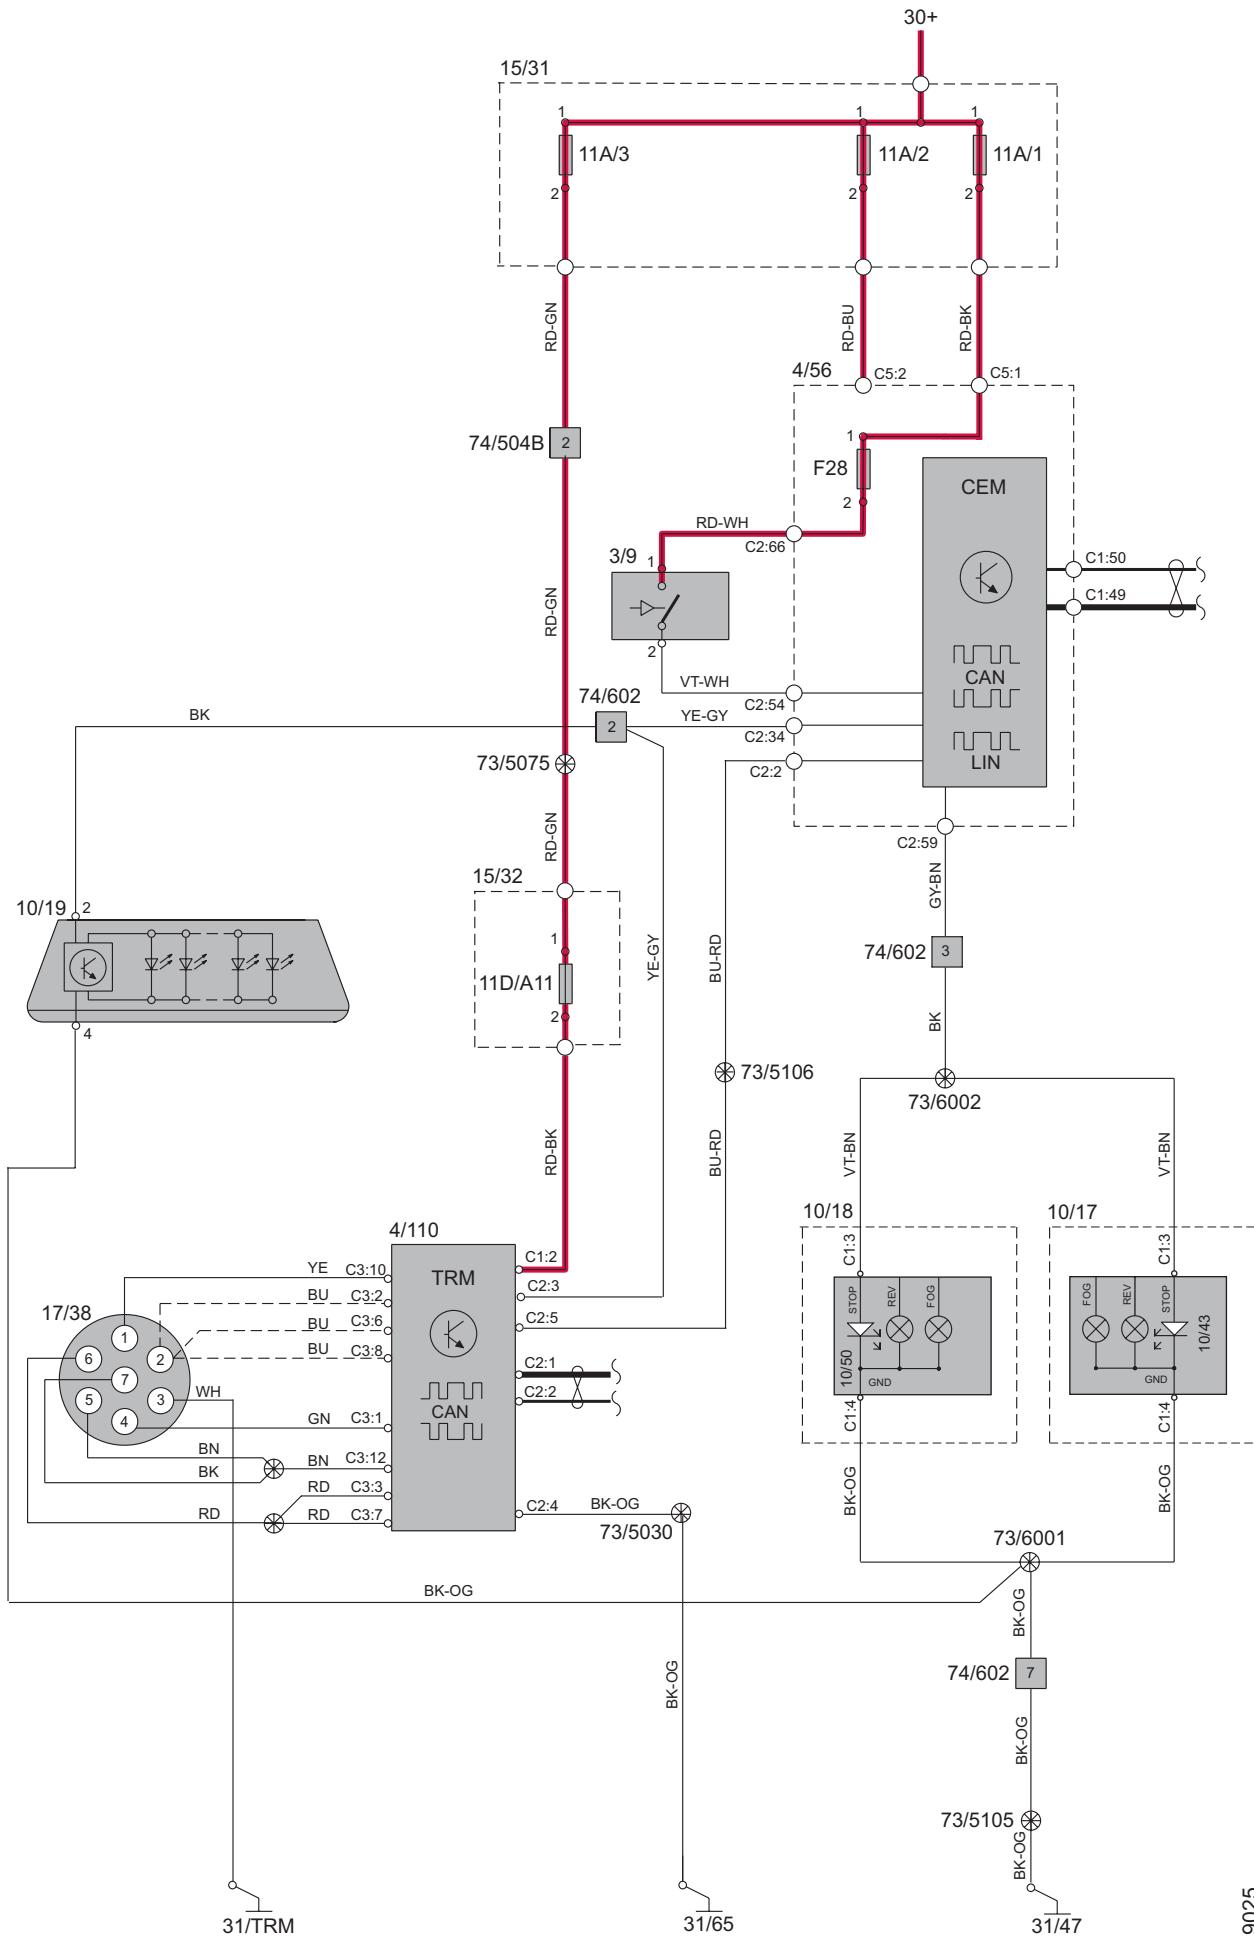


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 7-pin S80

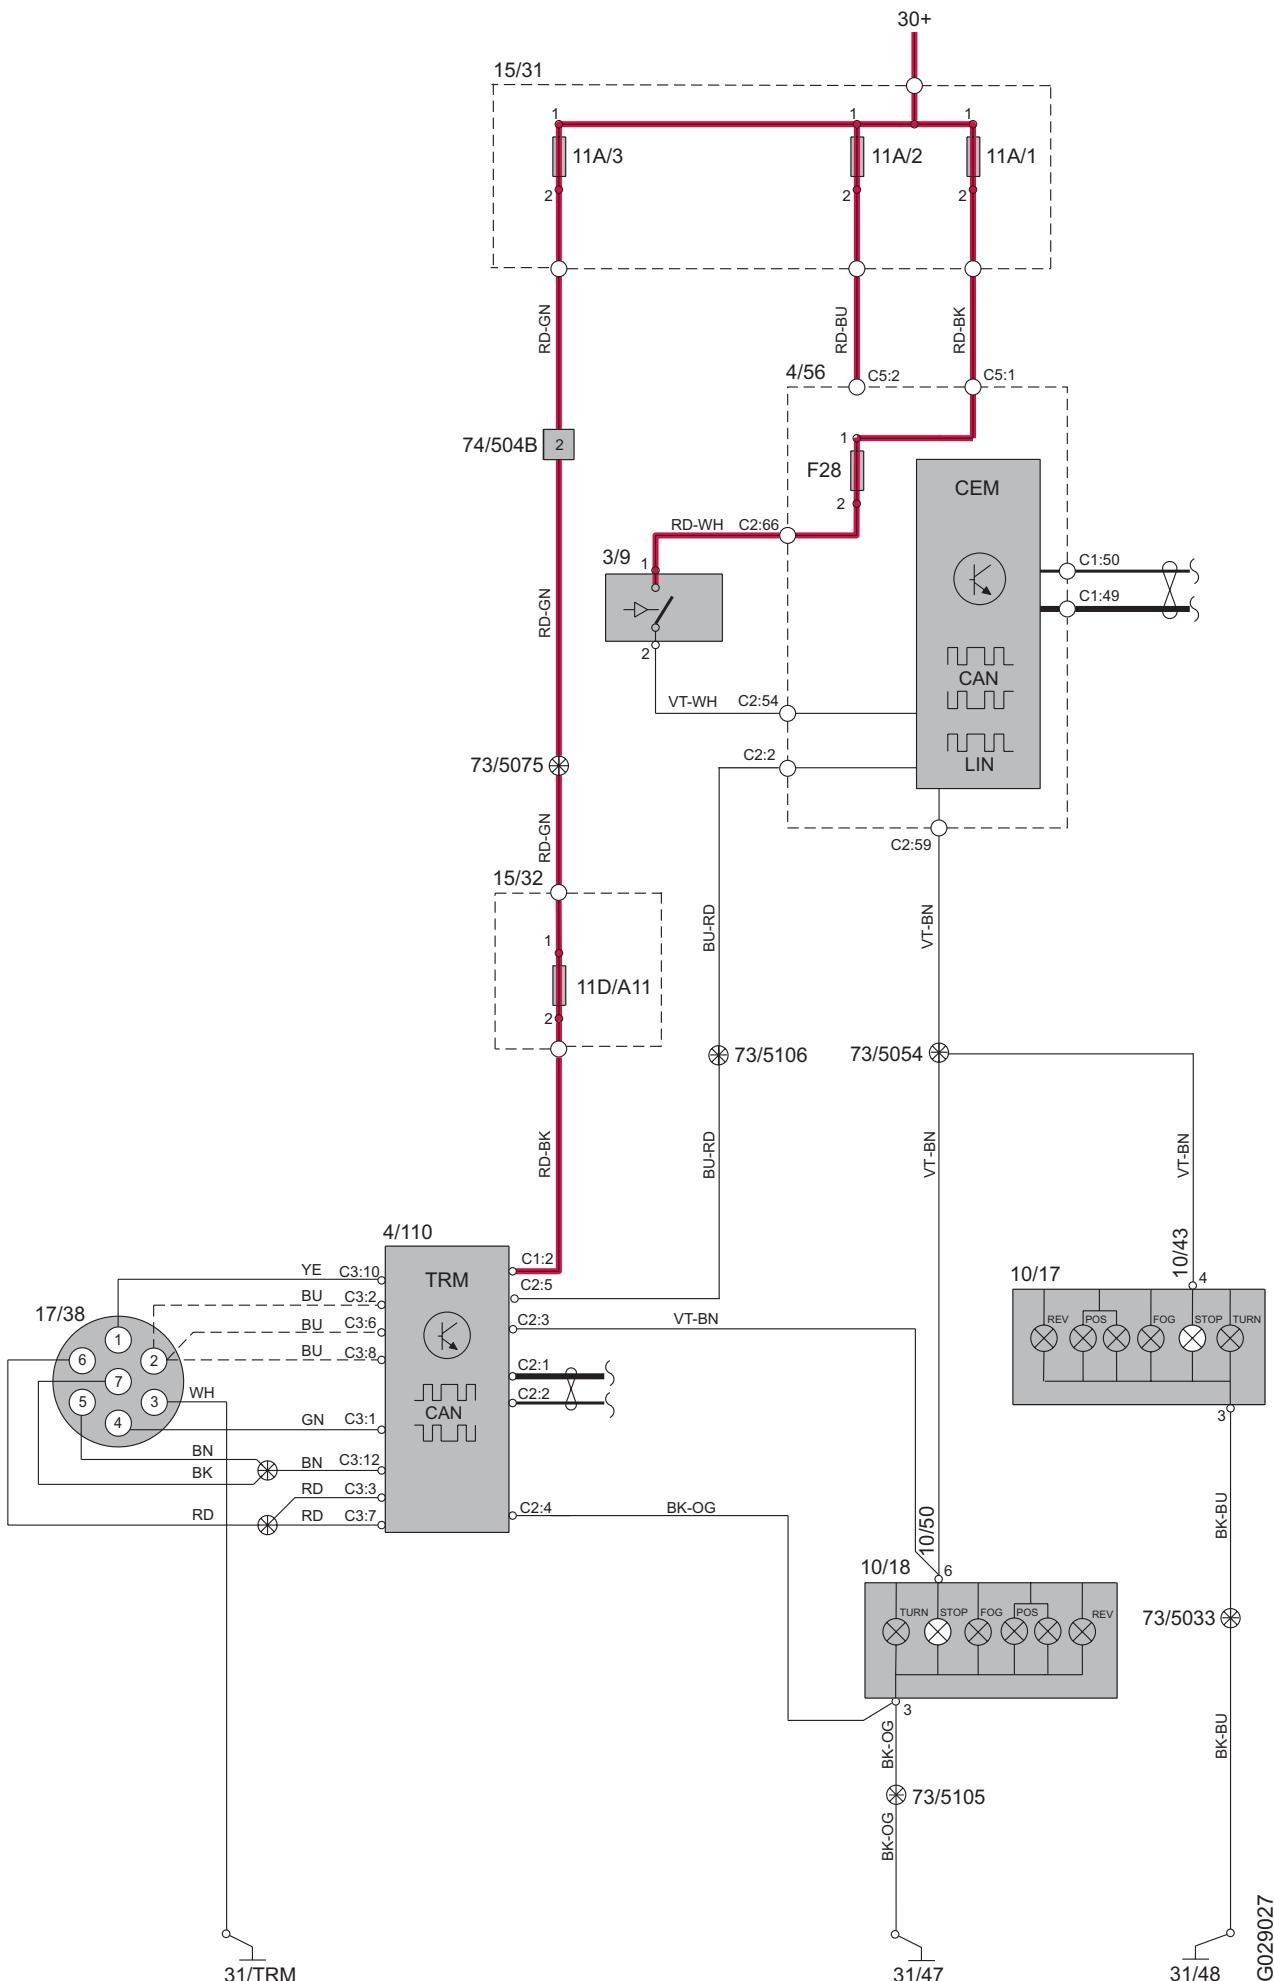


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin V70

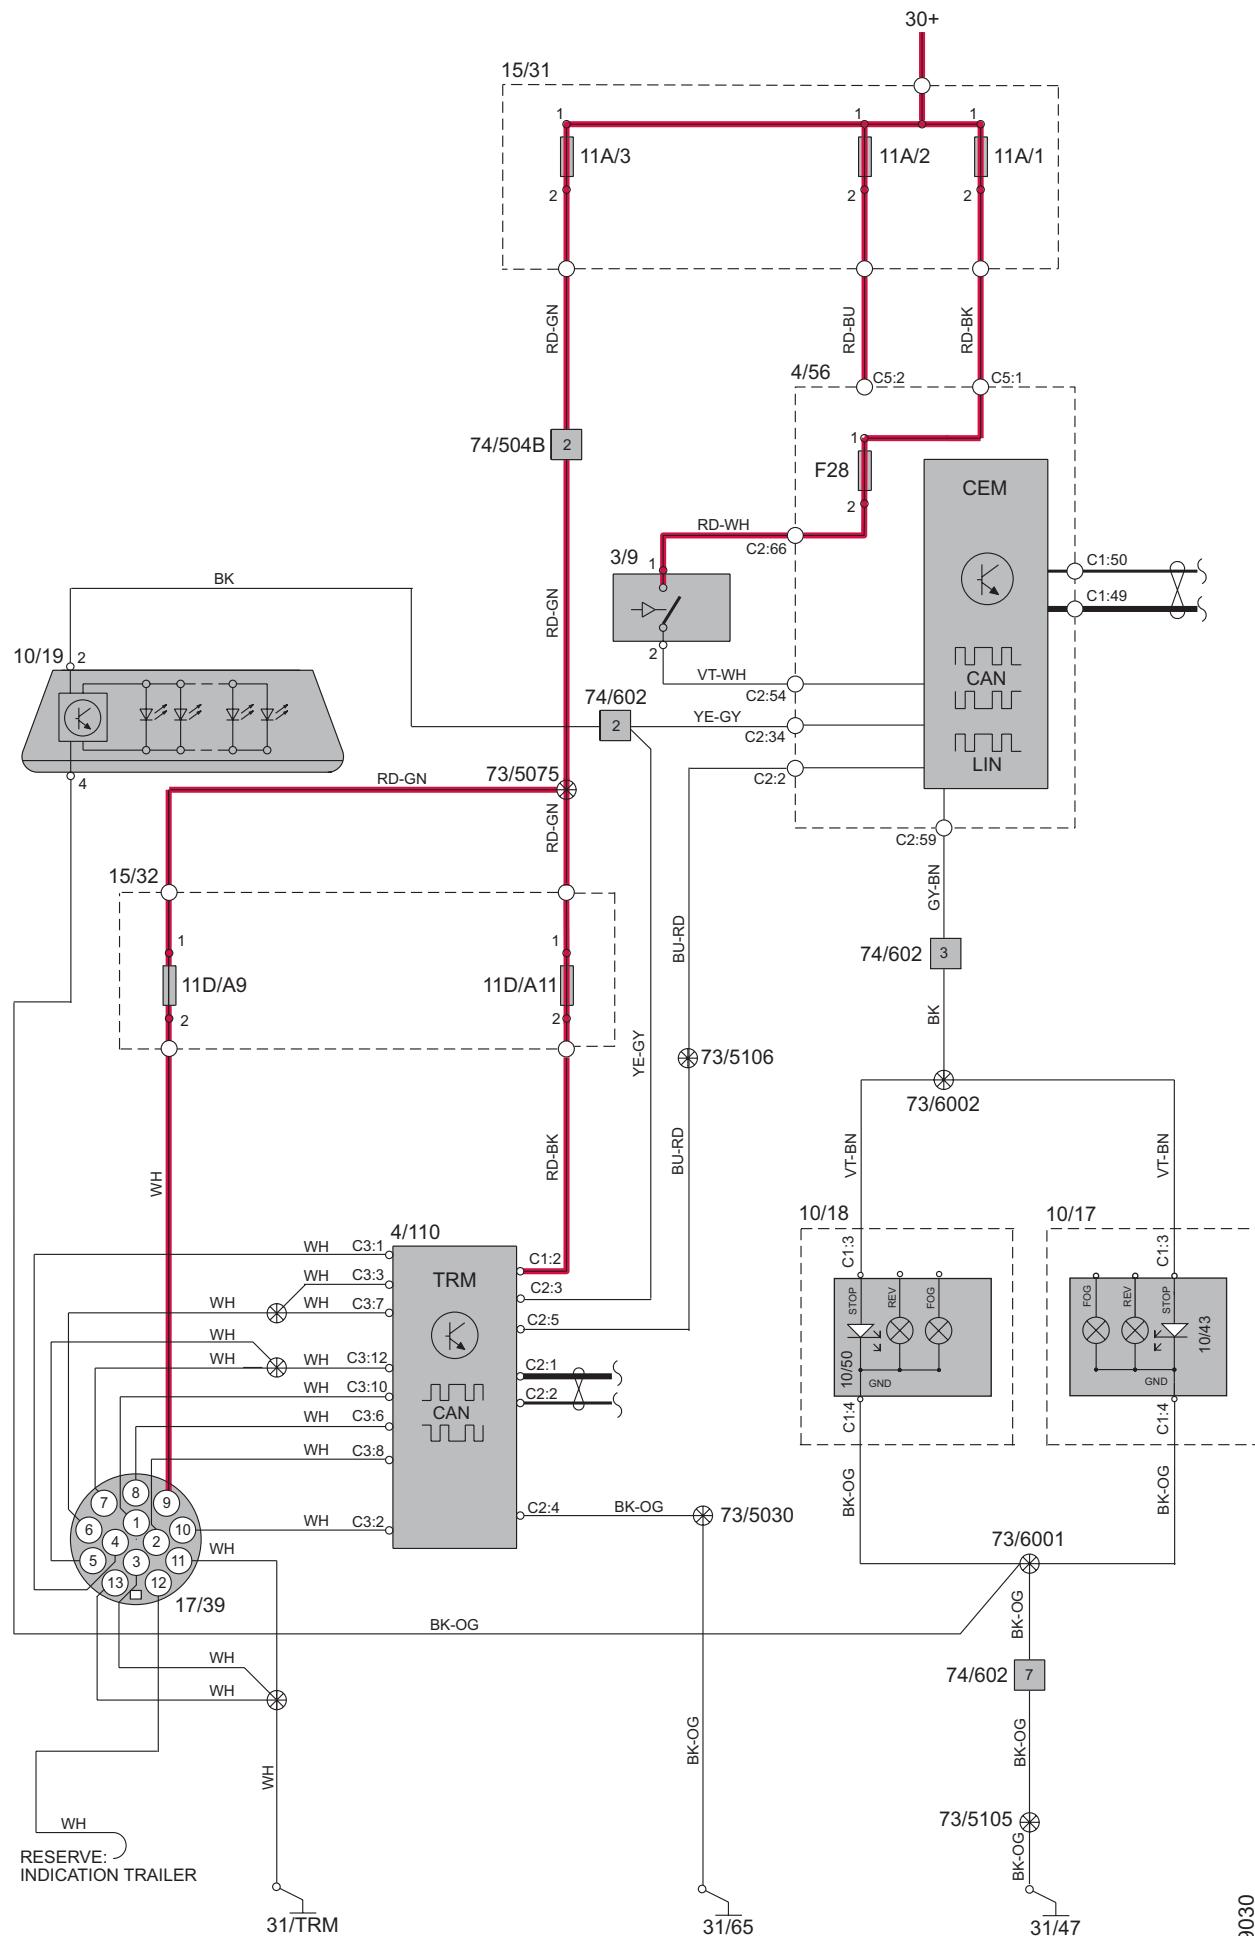


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin S80

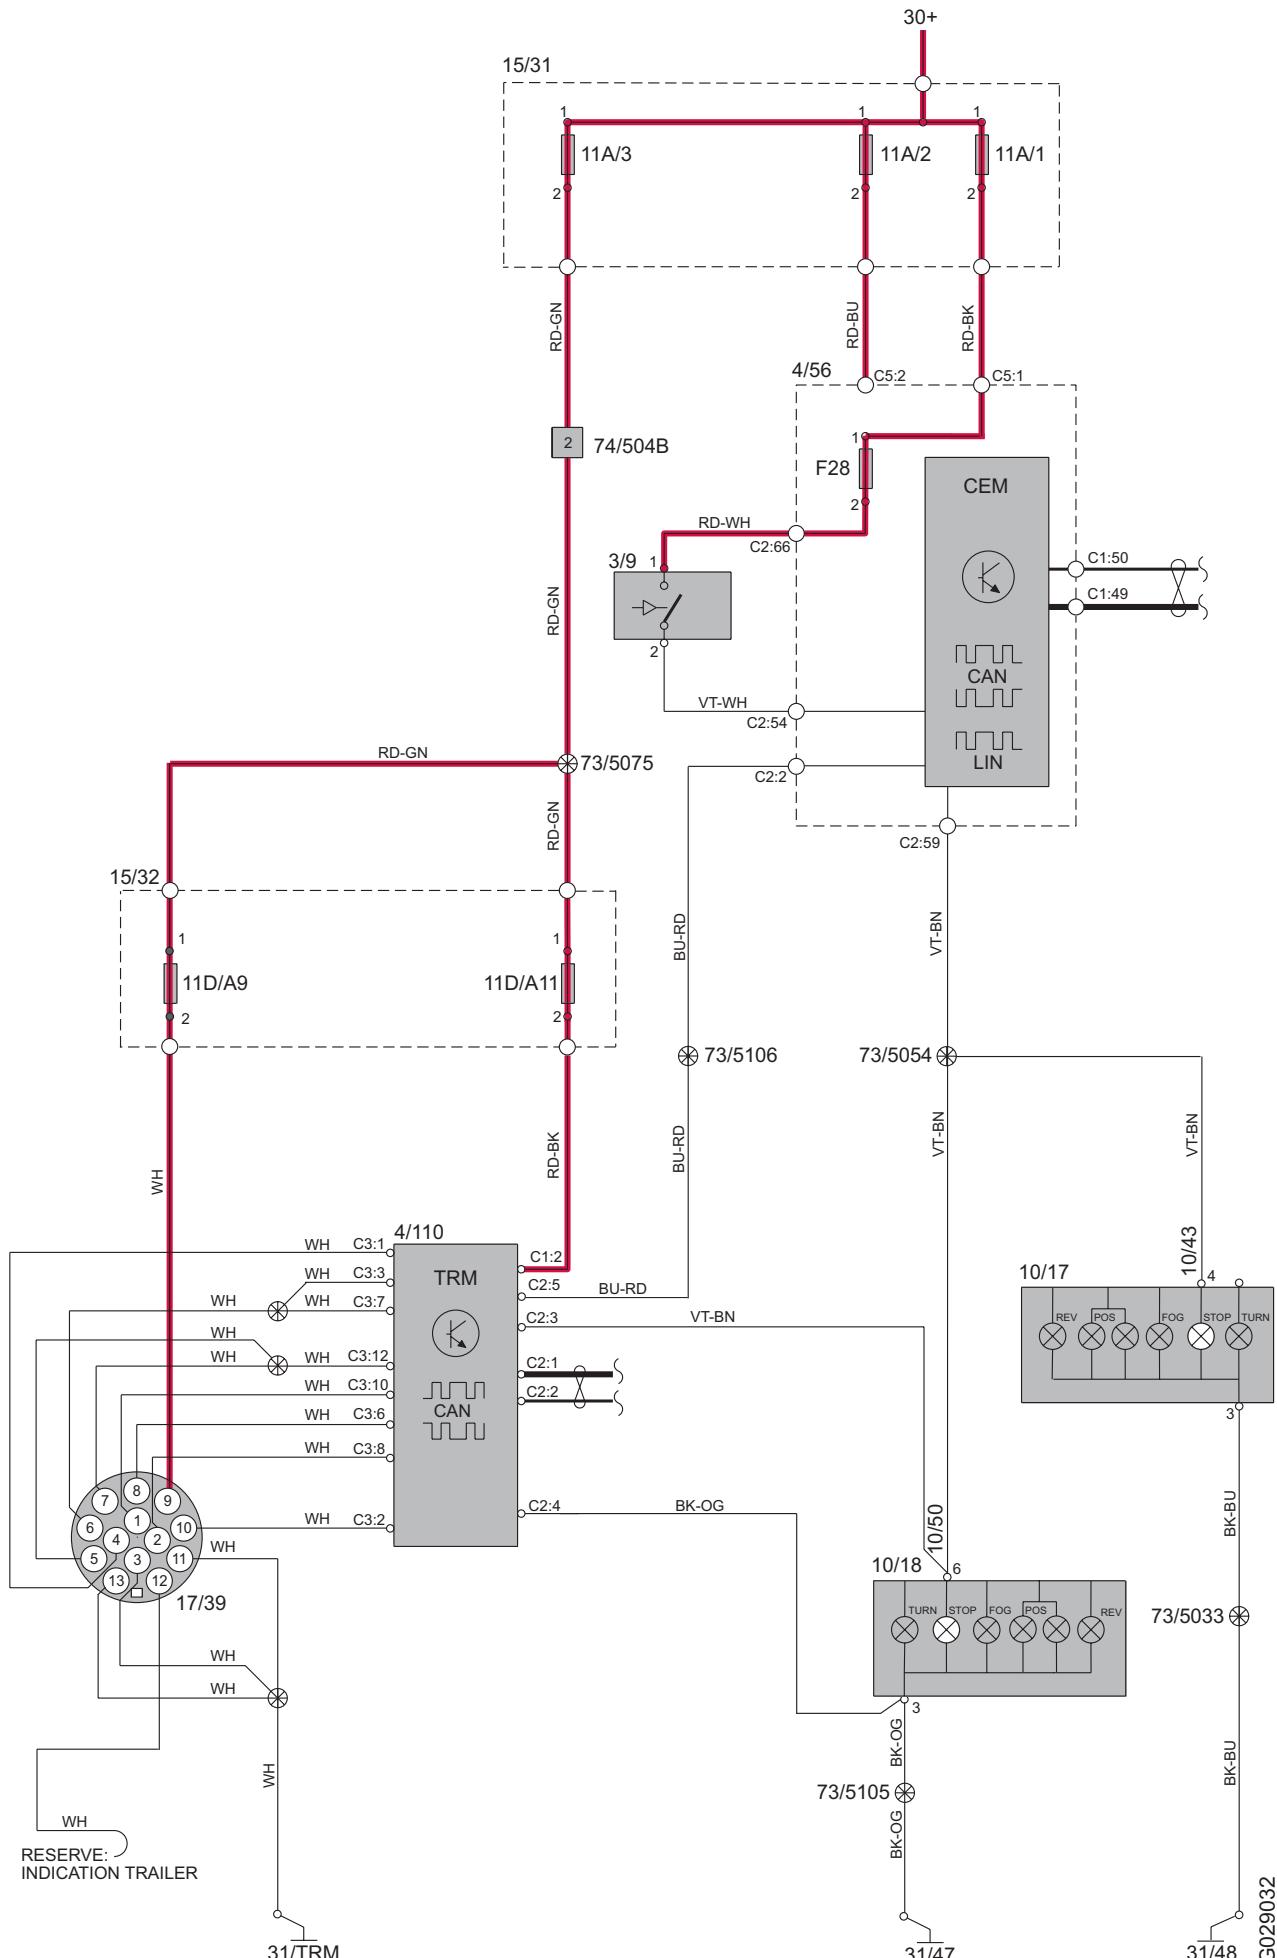


Group 37 Wiring and fuses, Accessories

Accessory USB unit (AUU)

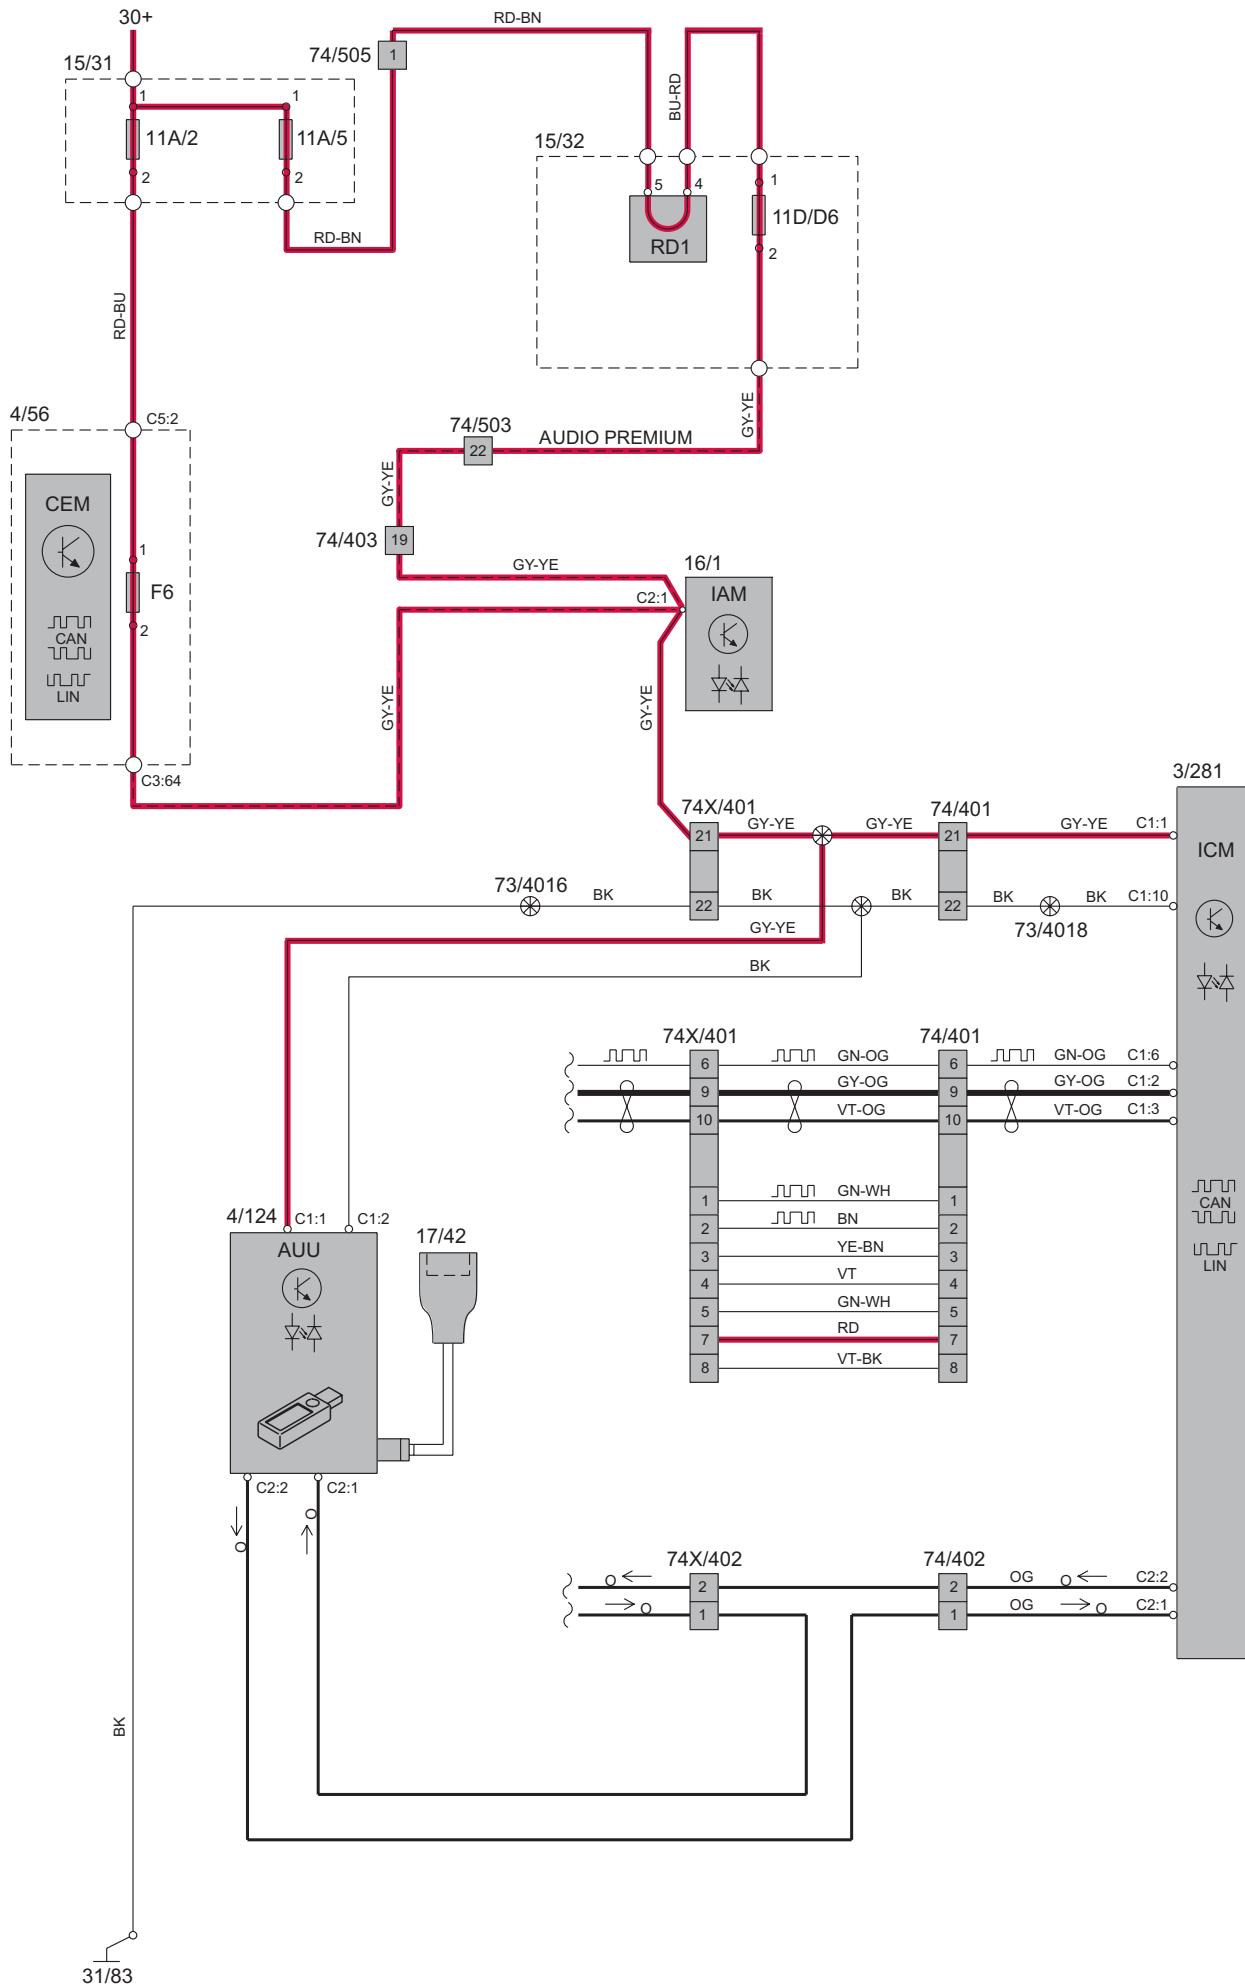


Group 38 Instruments

Seat belt reminder

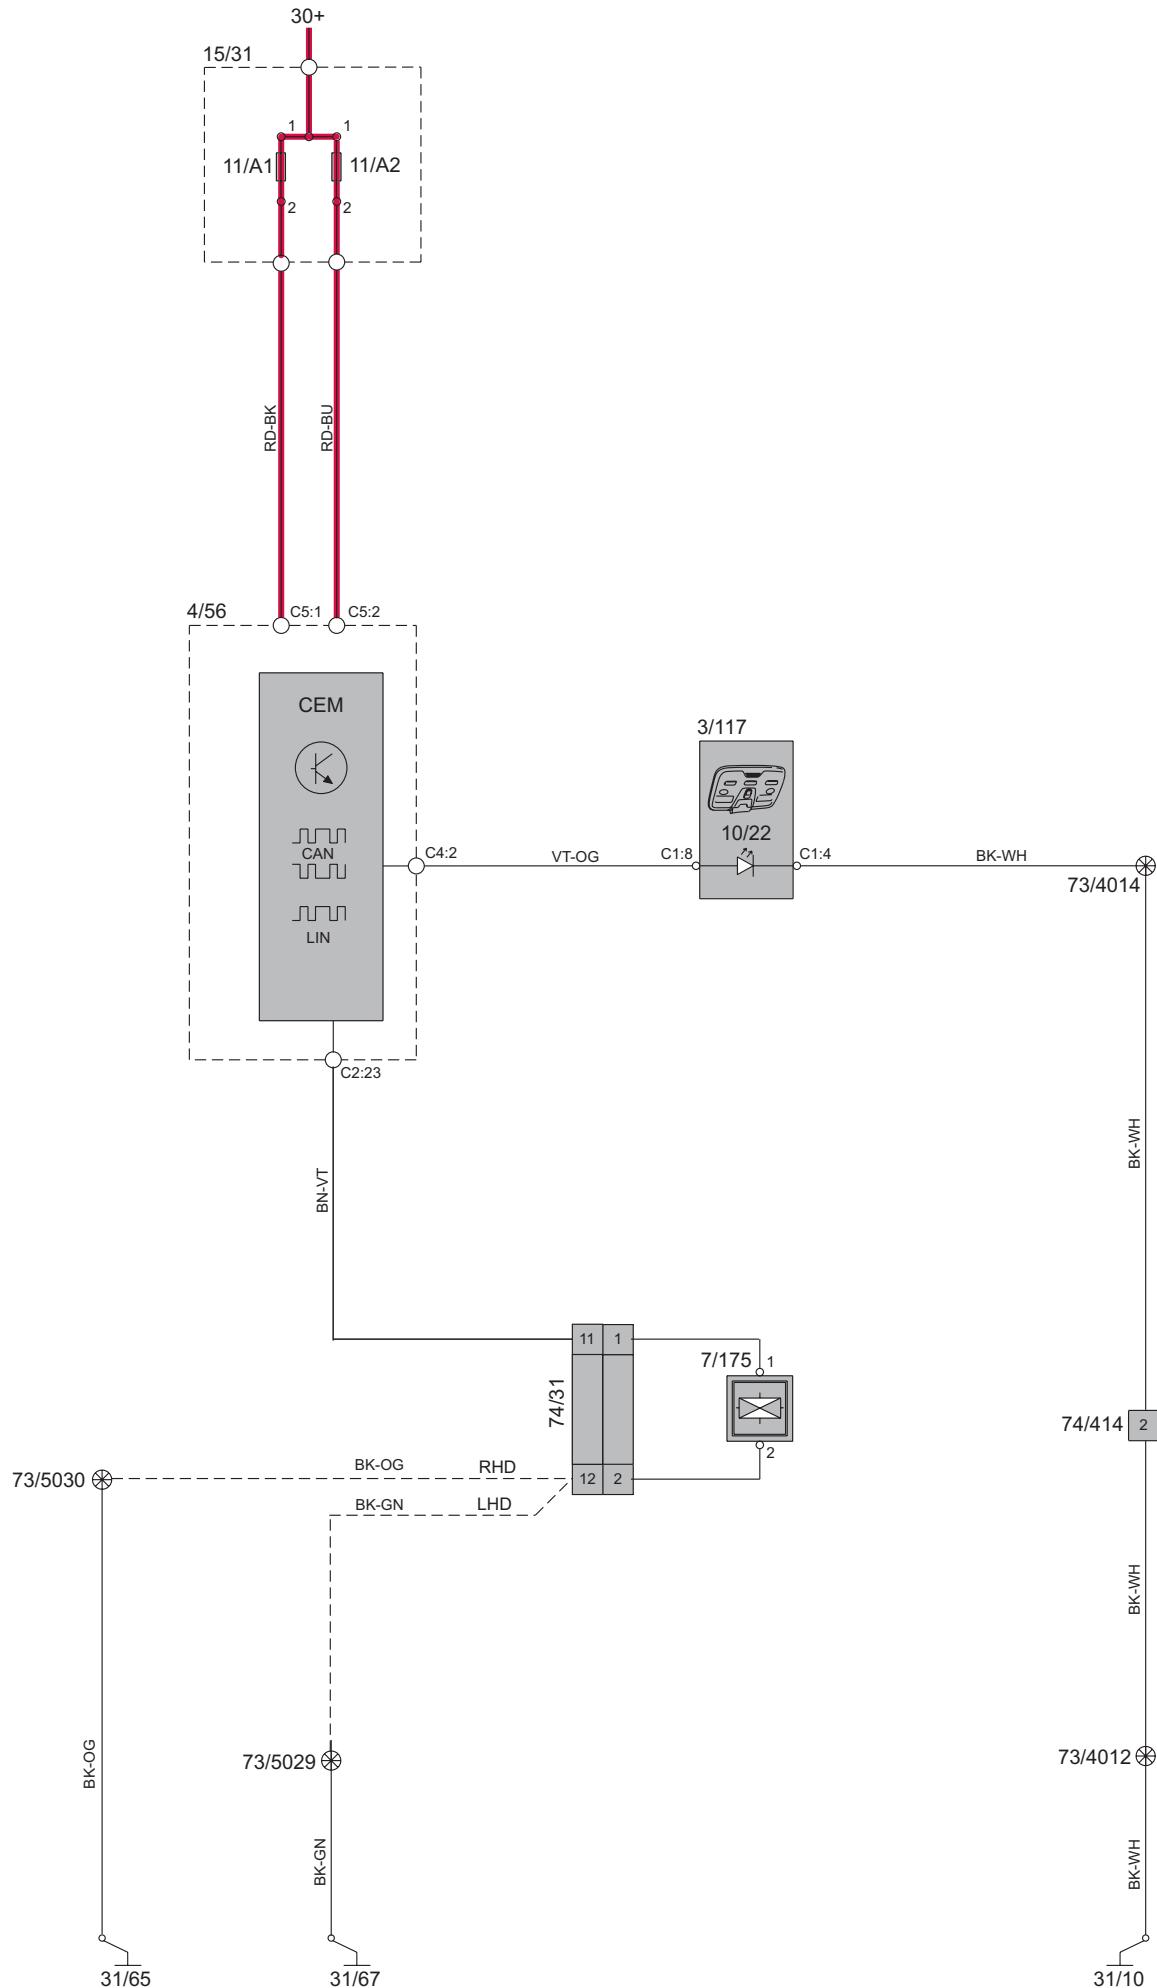

Group 38 Instruments


Driver information module

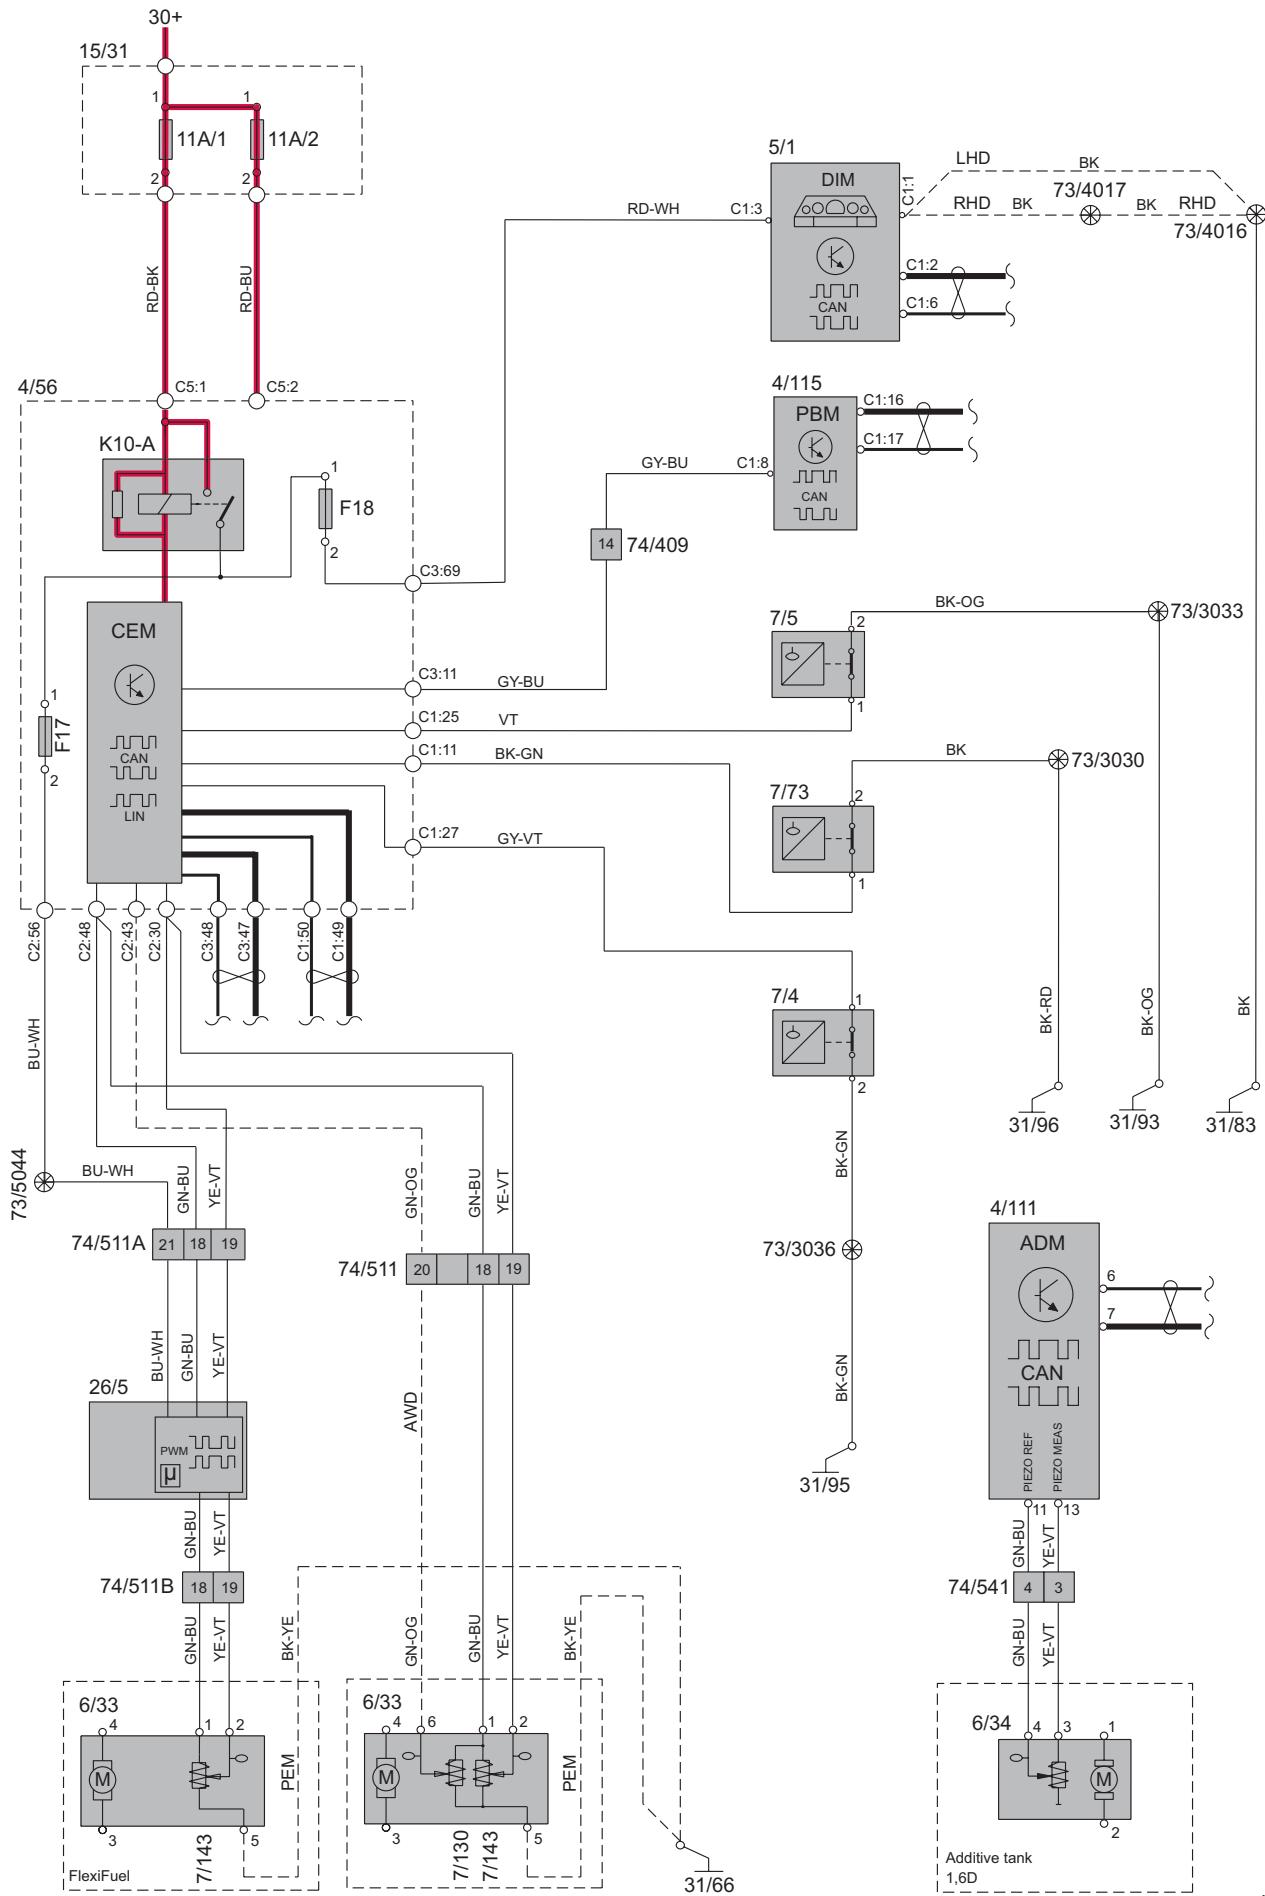

G029037


Group 38 Instruments

Analog clock

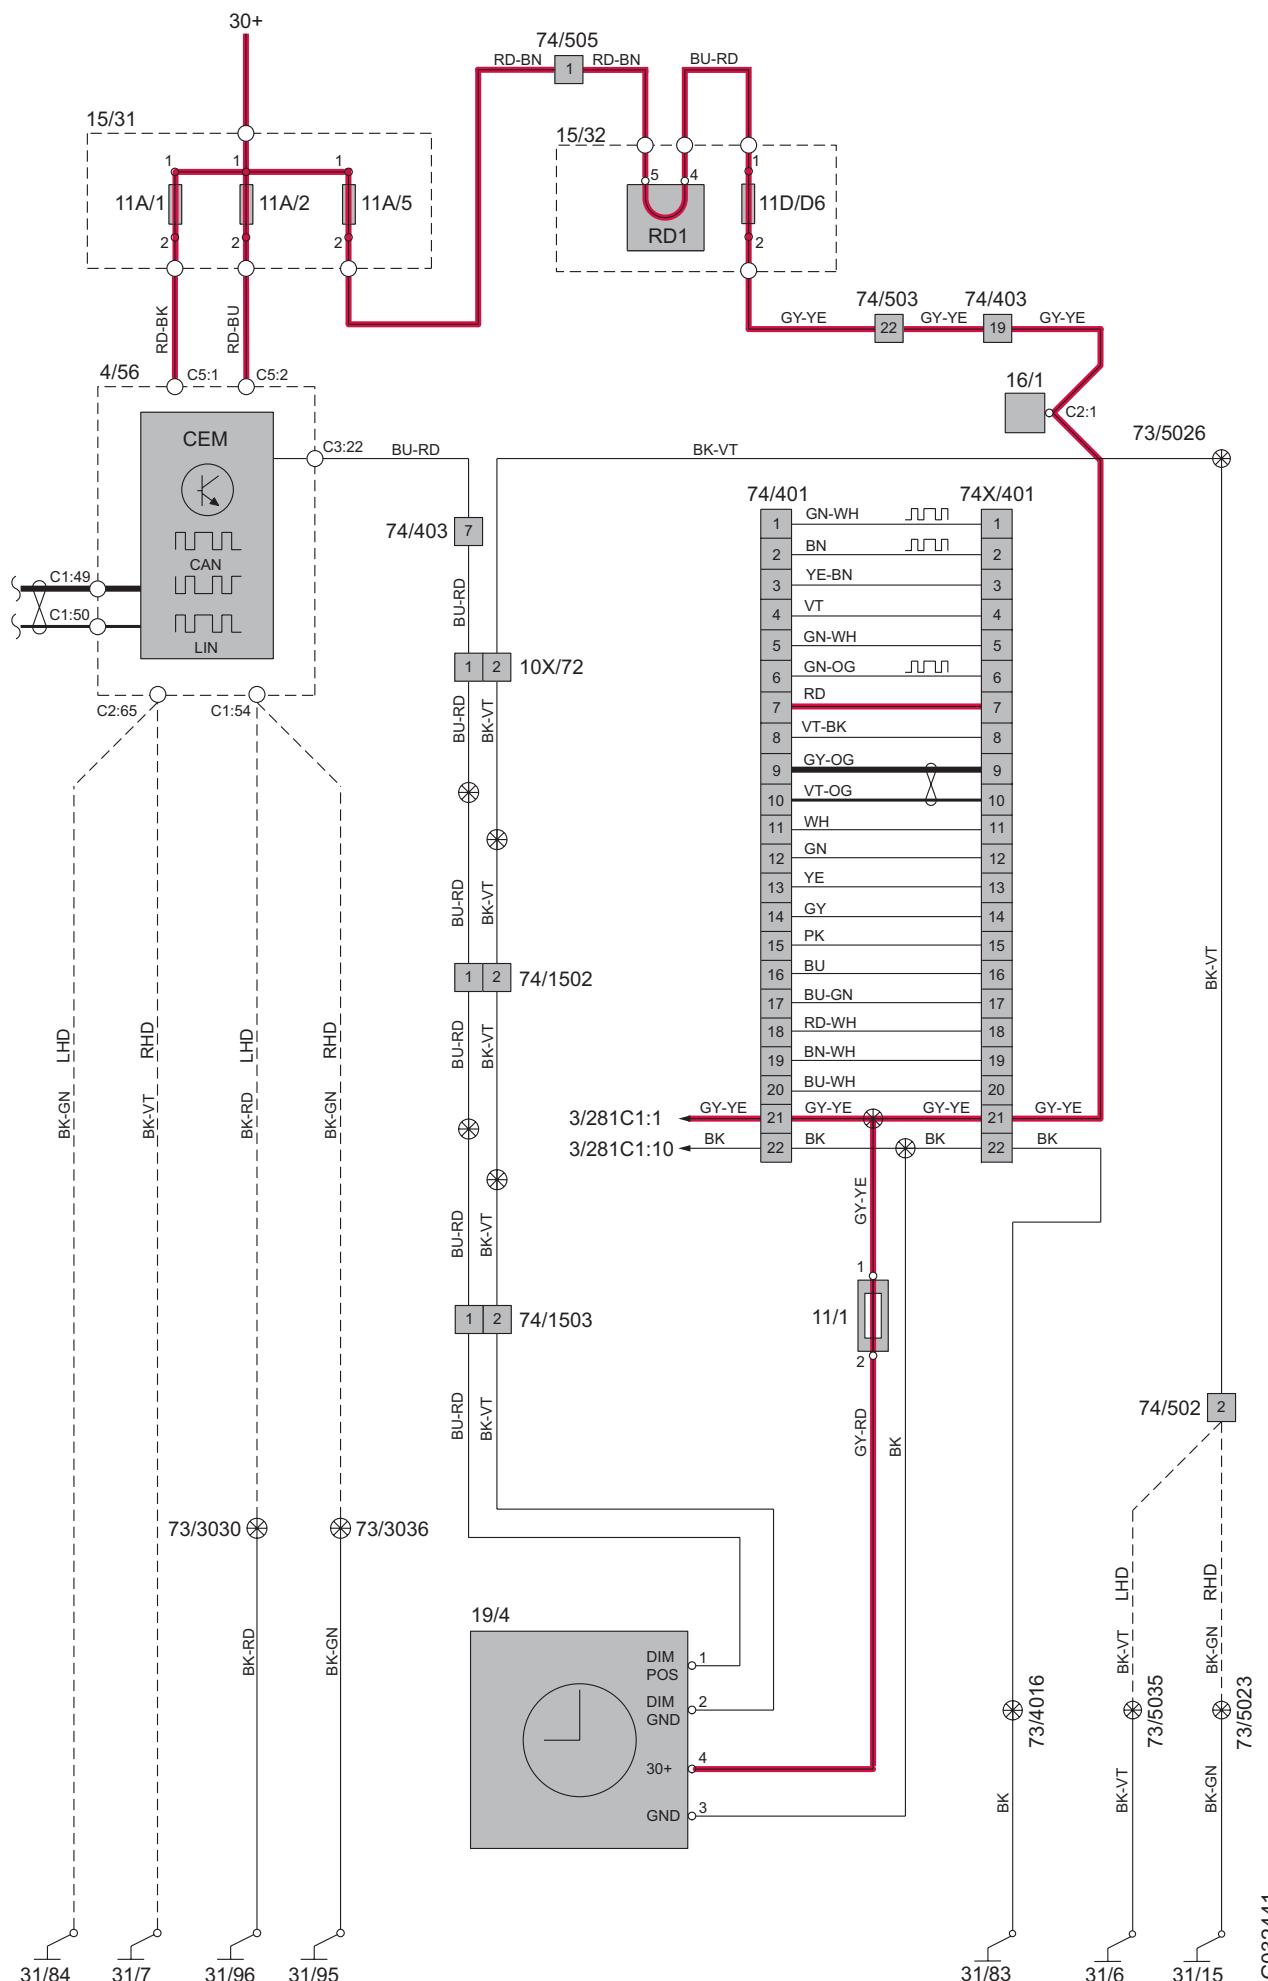


Group 39 Other

Audio Premium 1:3

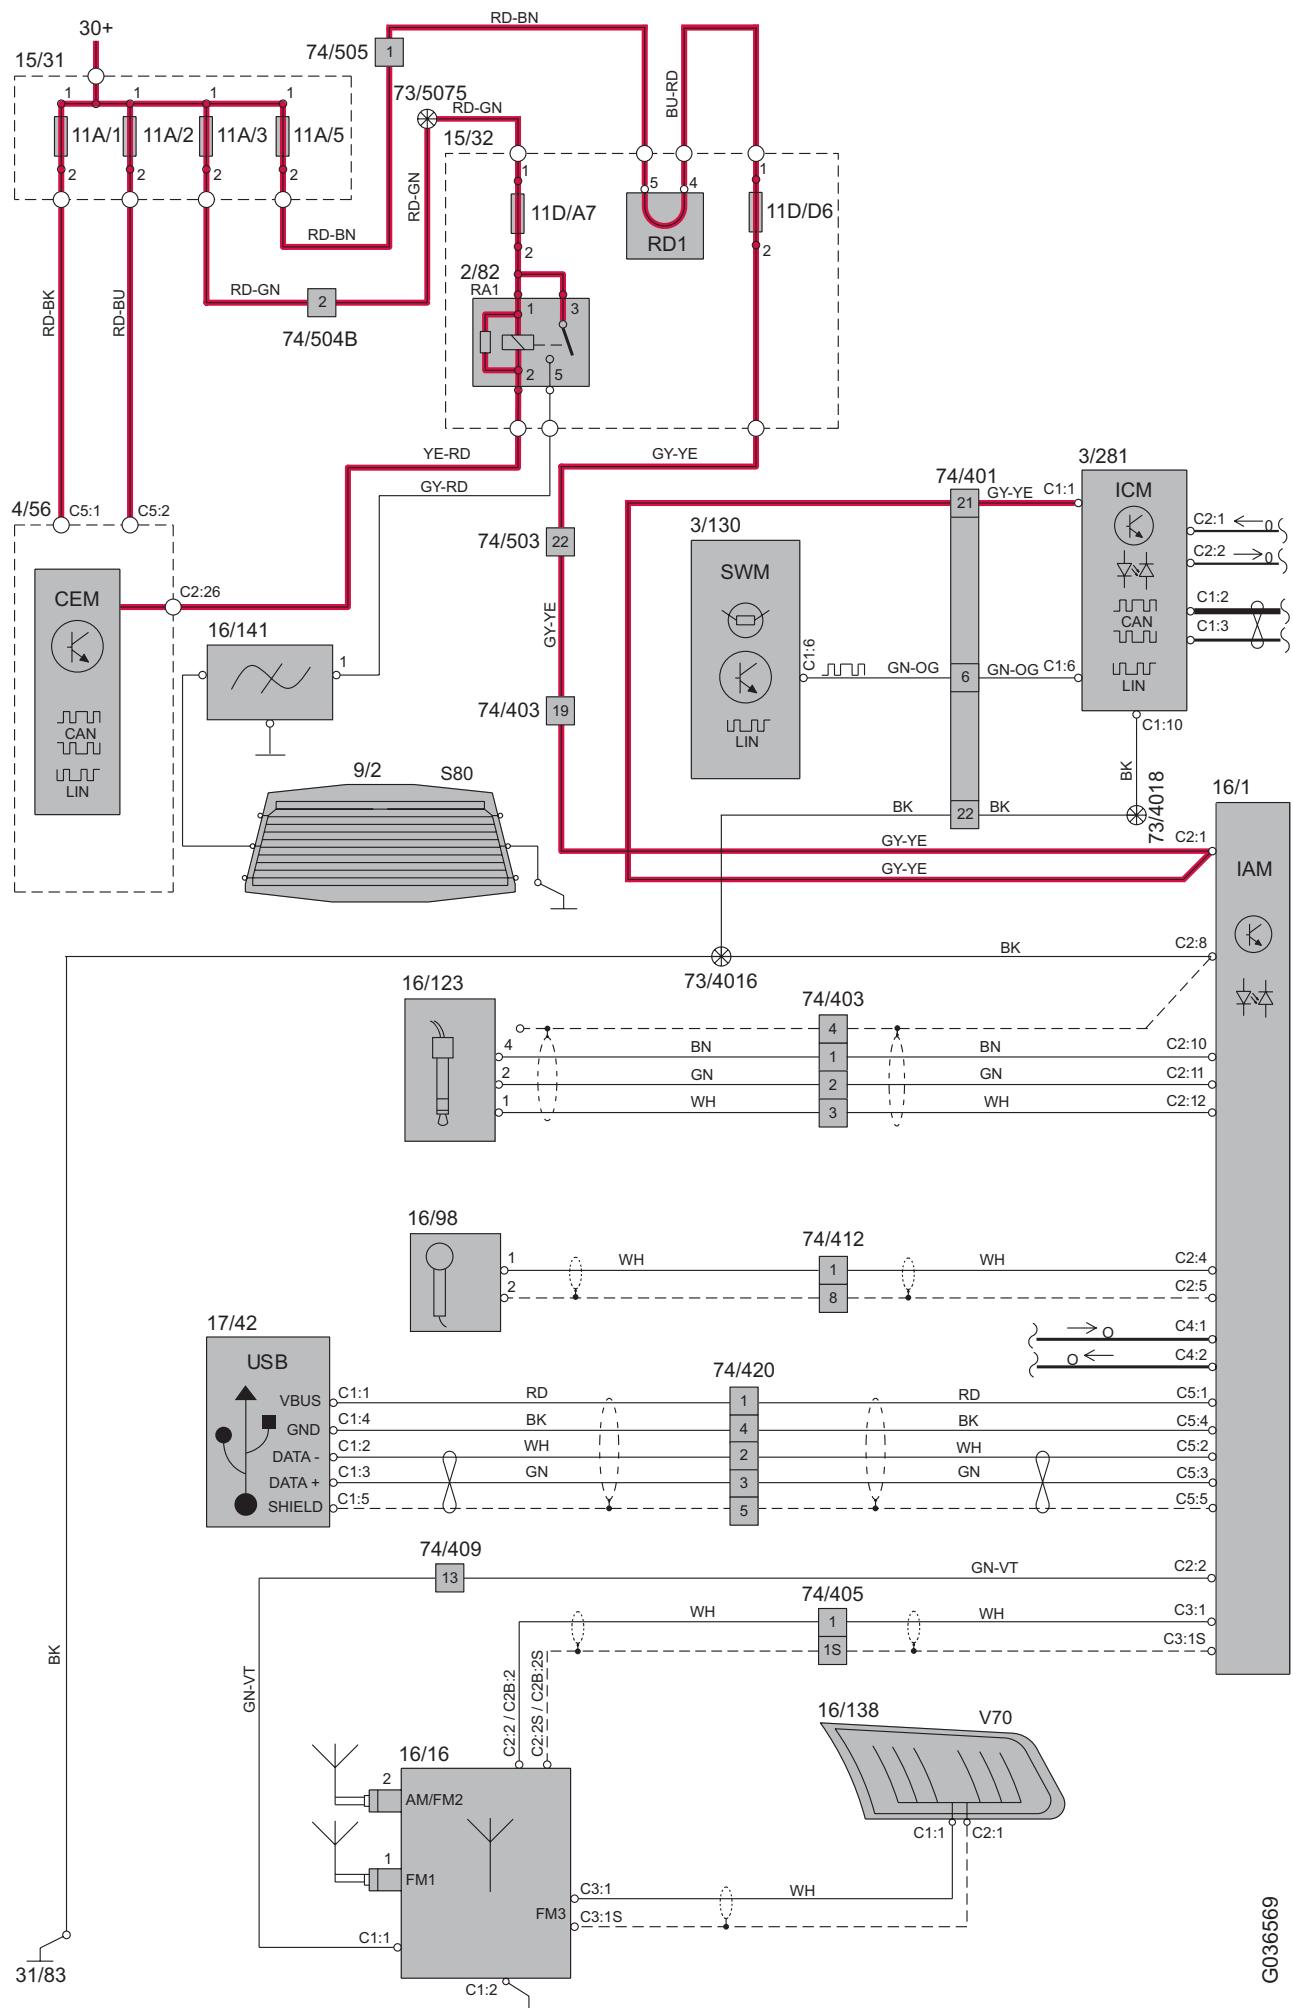


Group 39 Other

Audio Premium 2:3

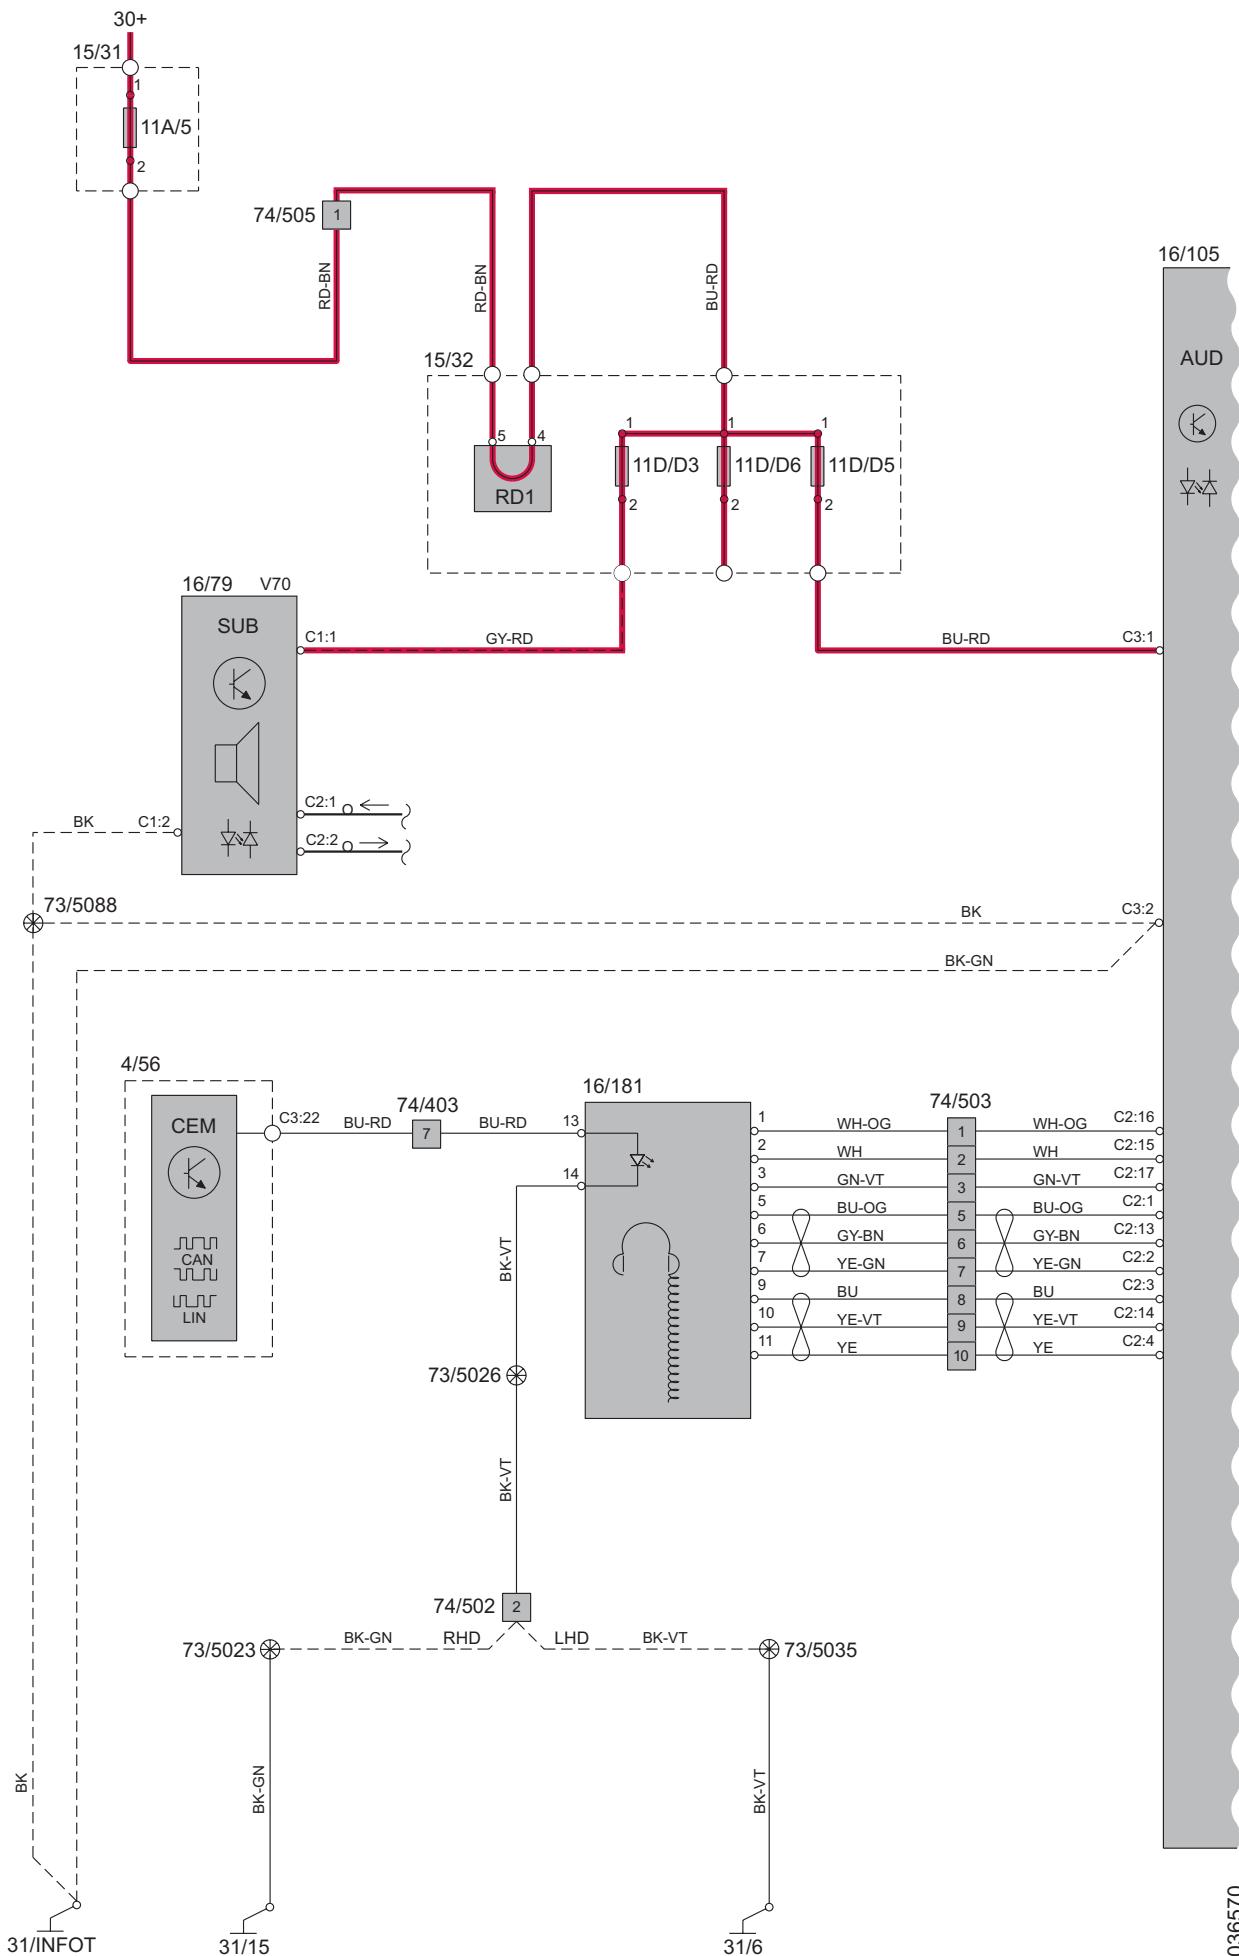


Group 39 Other

Audio Premium 3:3

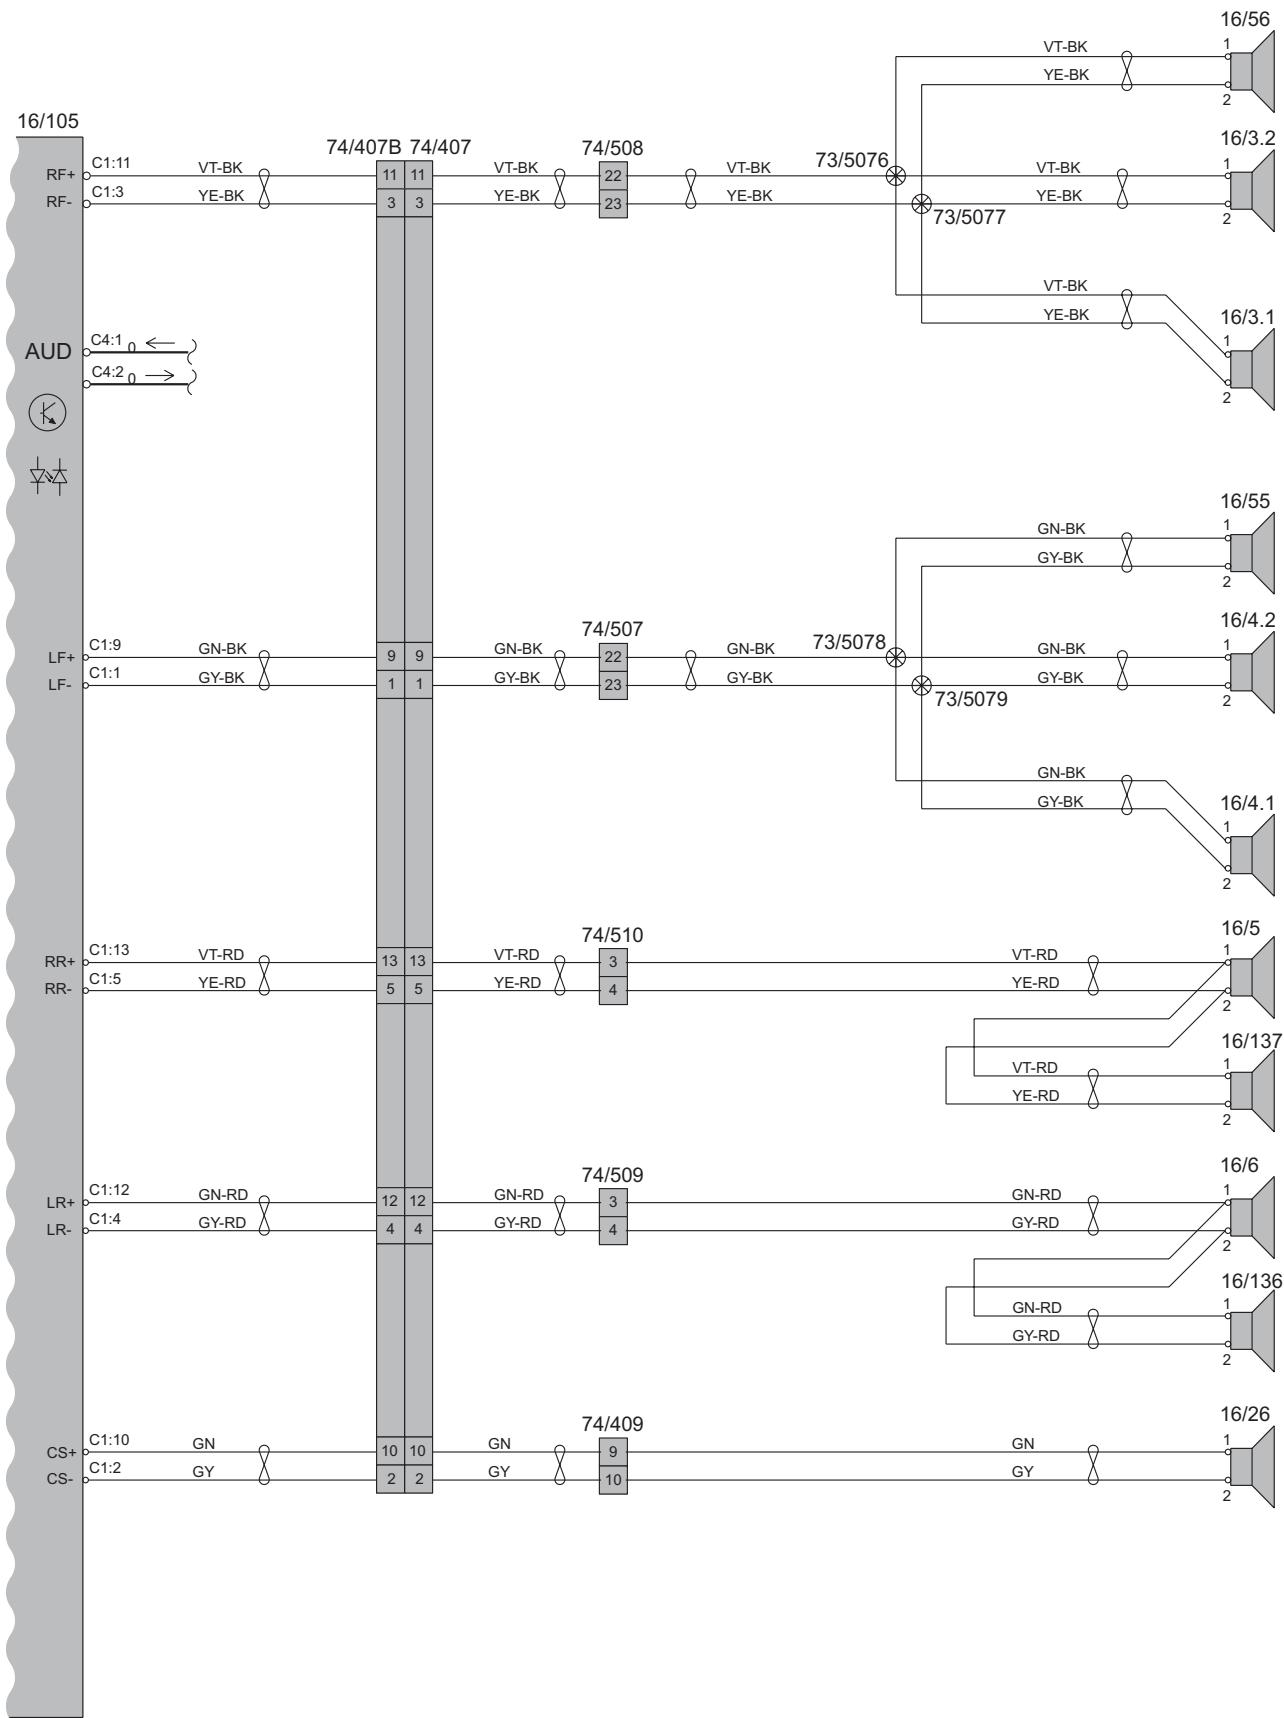


G036571

Group 39 Other Audio 1:2

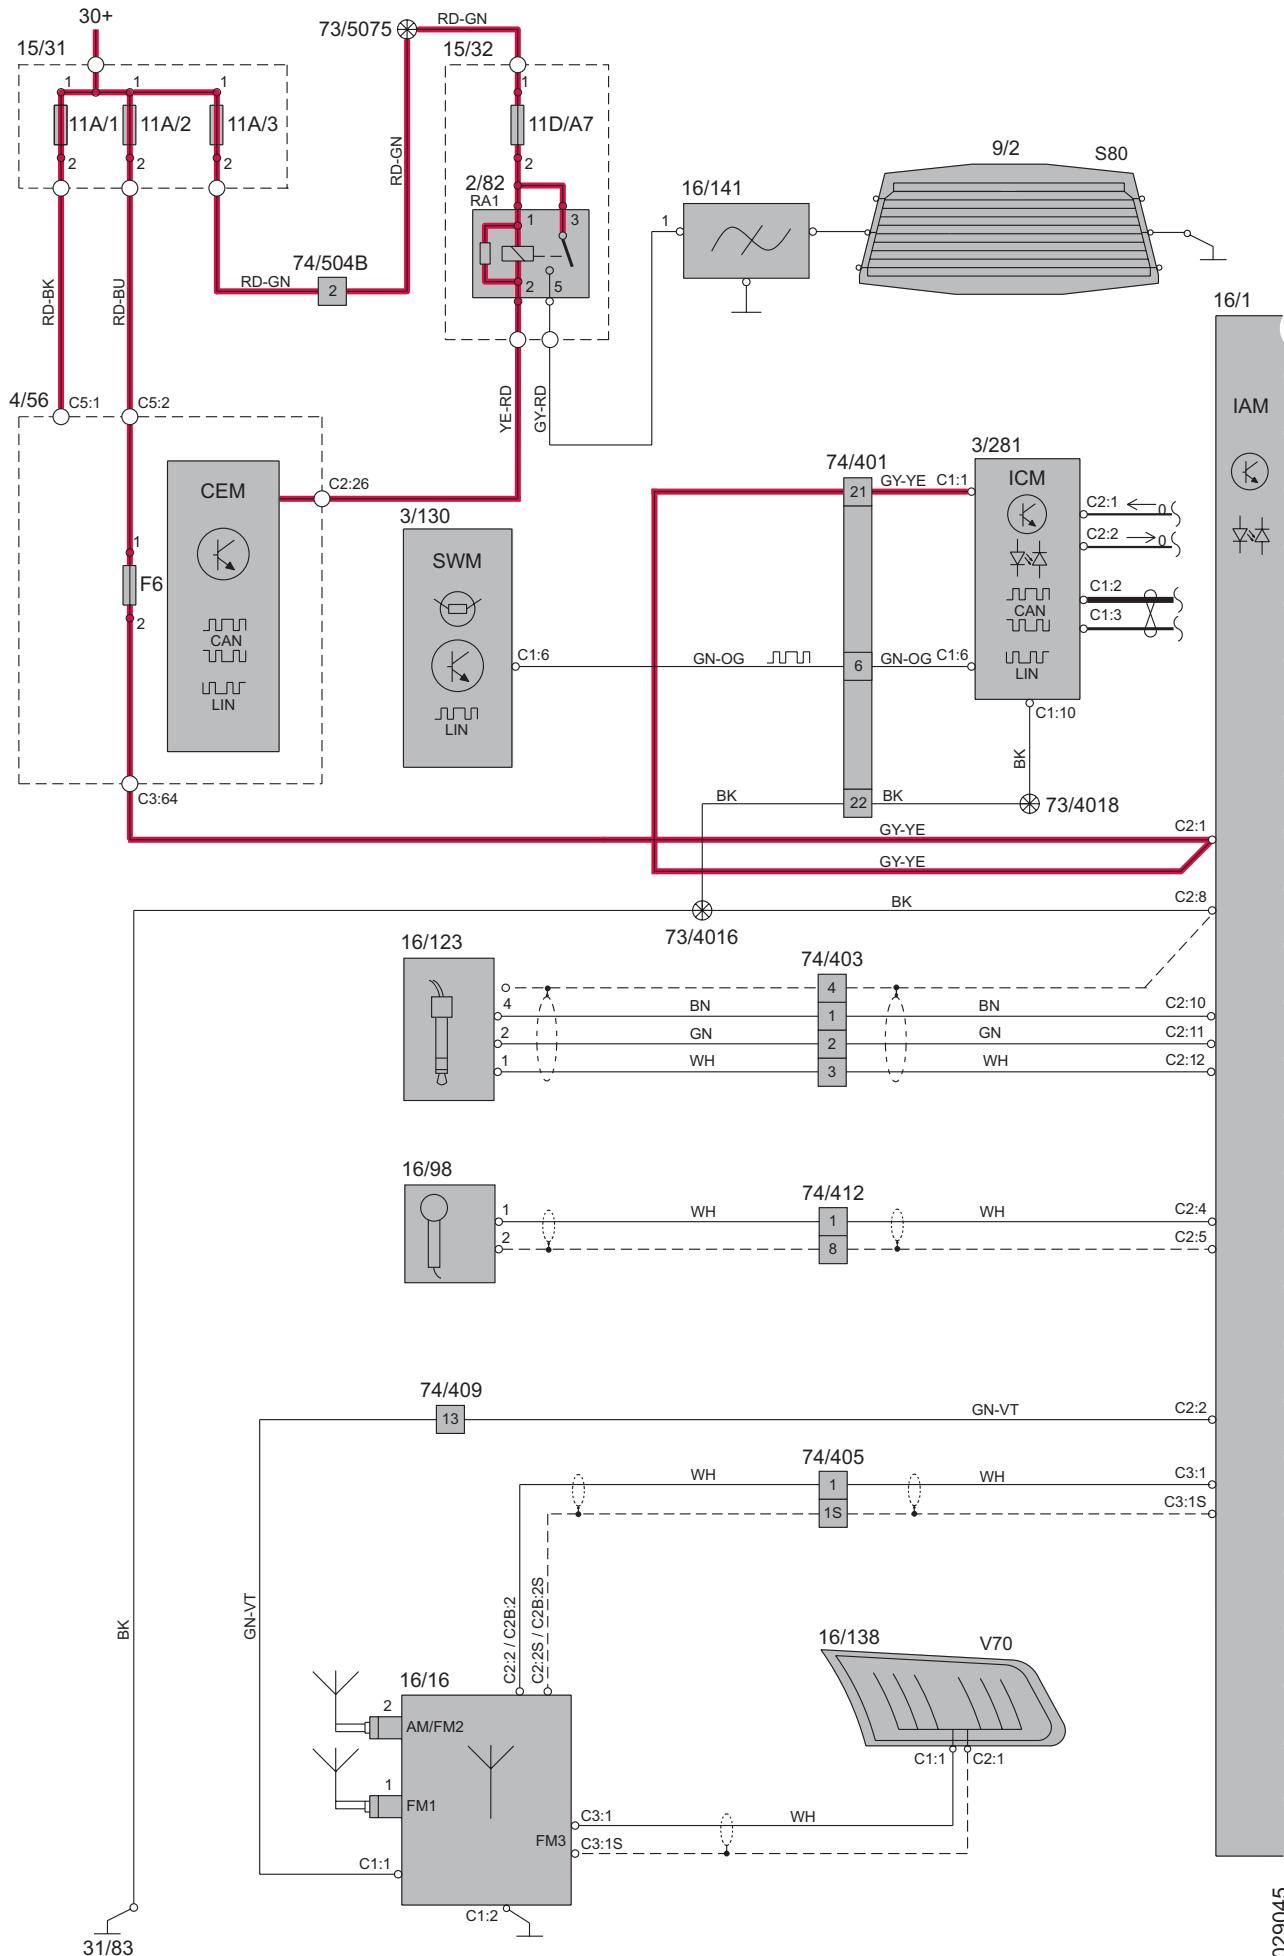


Group 39 Other Audio 2:2

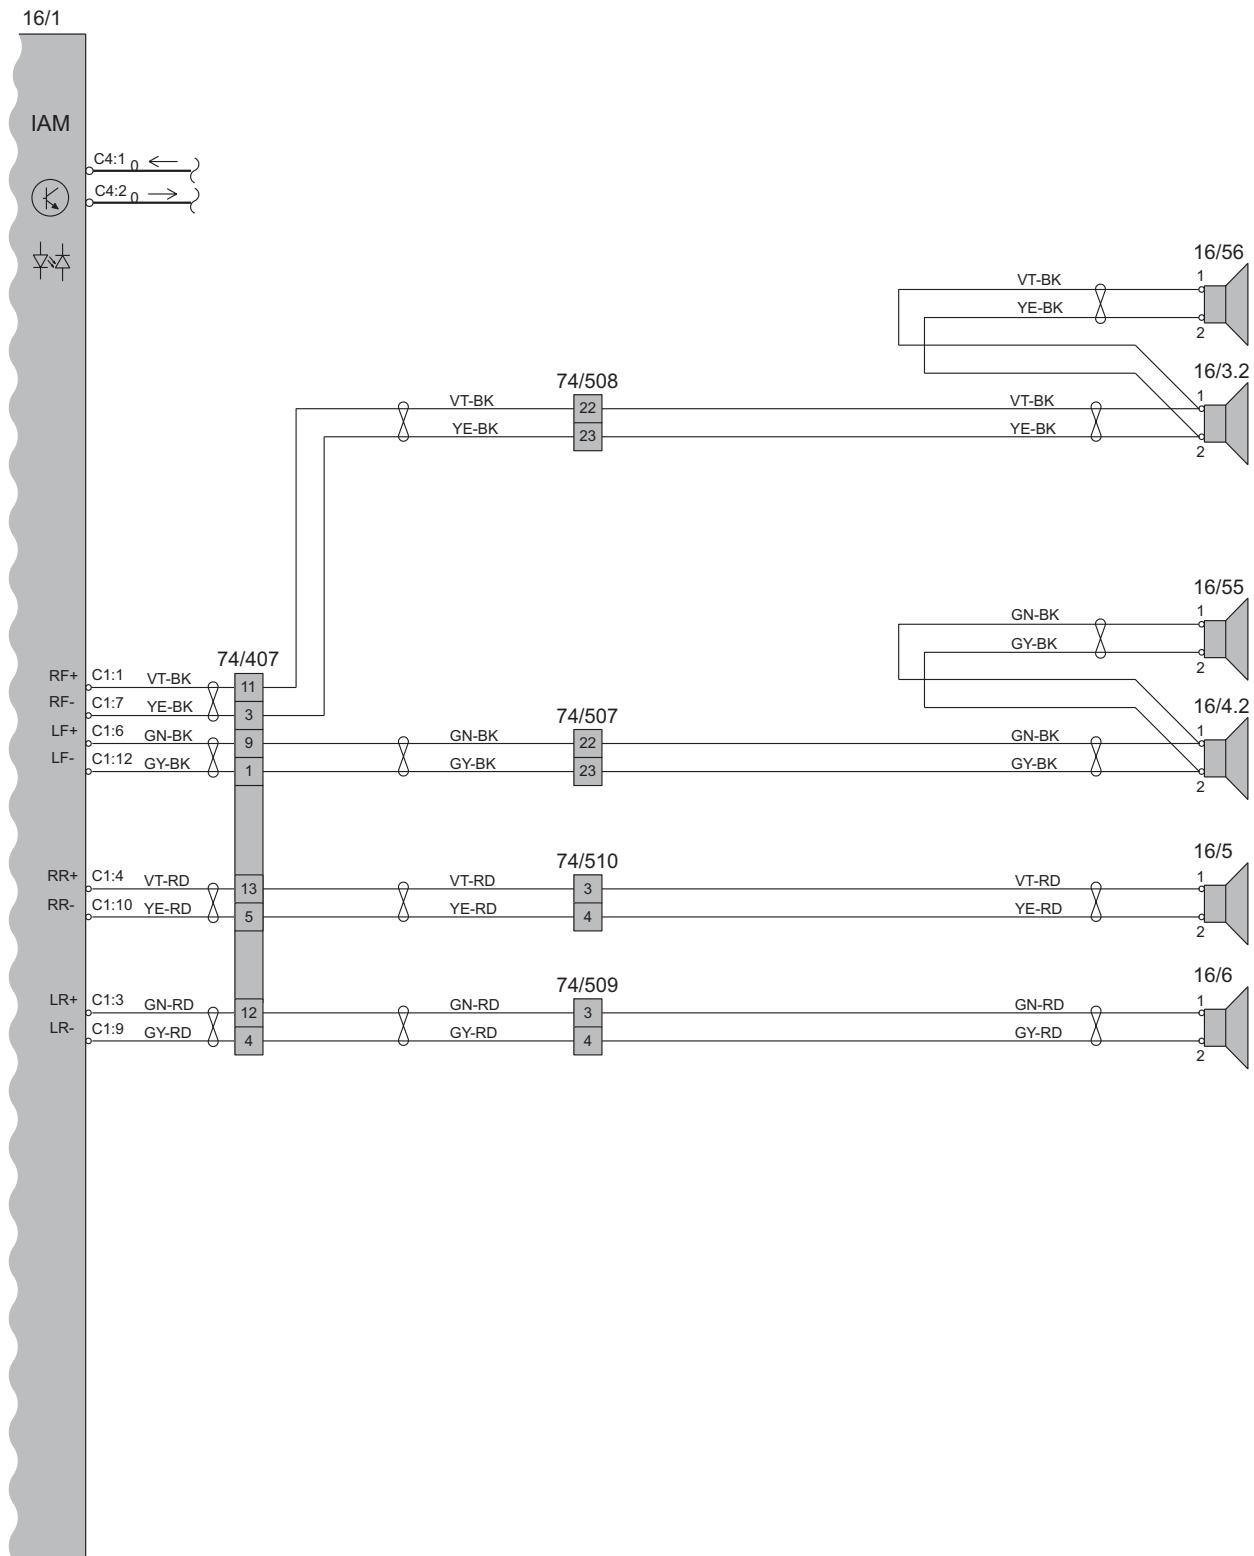


G029051

Group 39 Other Cellular phone 1:2

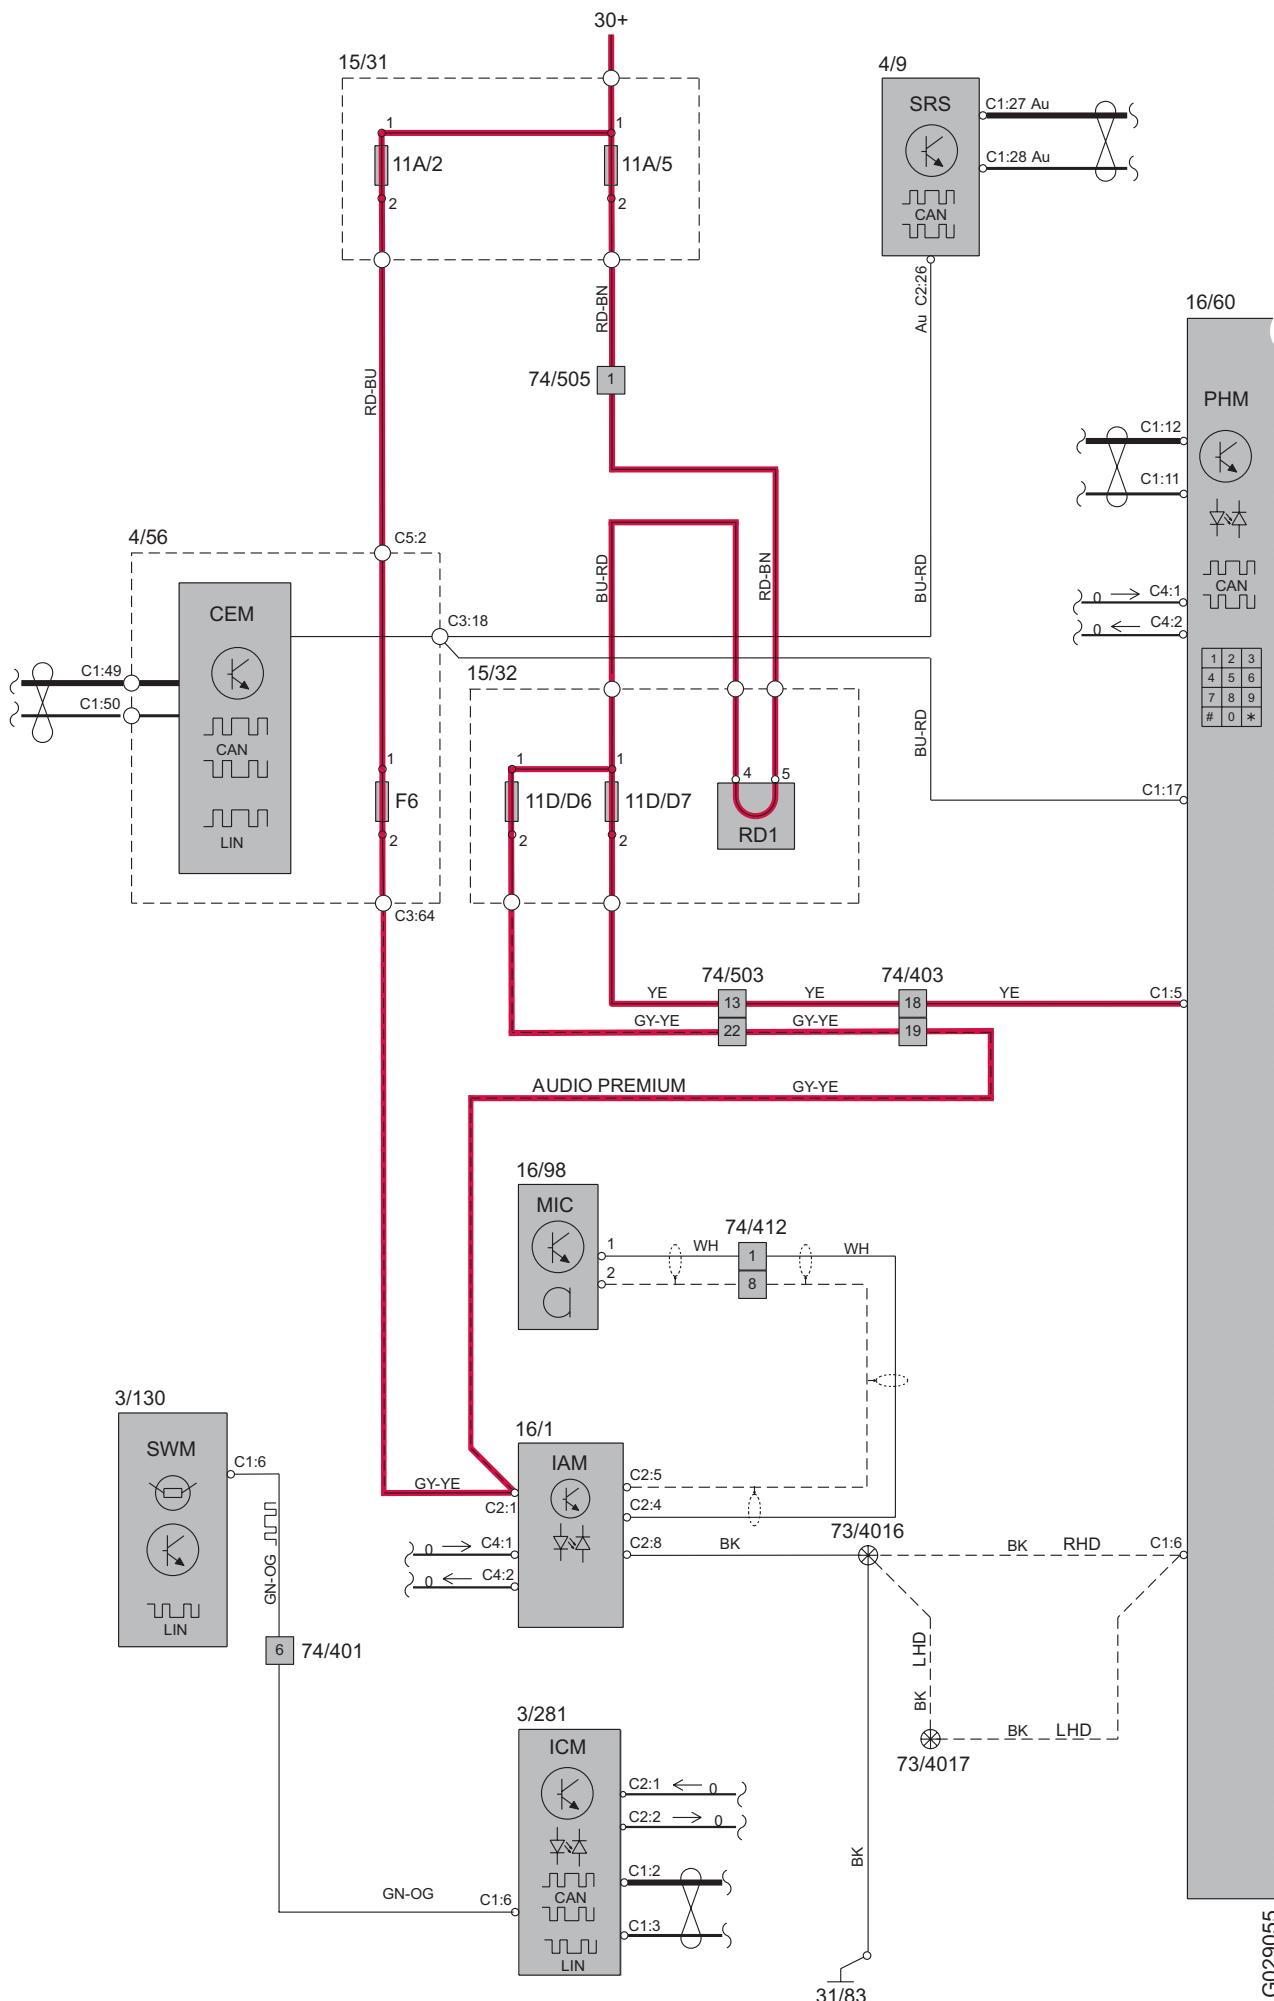


Group 39 Other Cellular phone 2:2

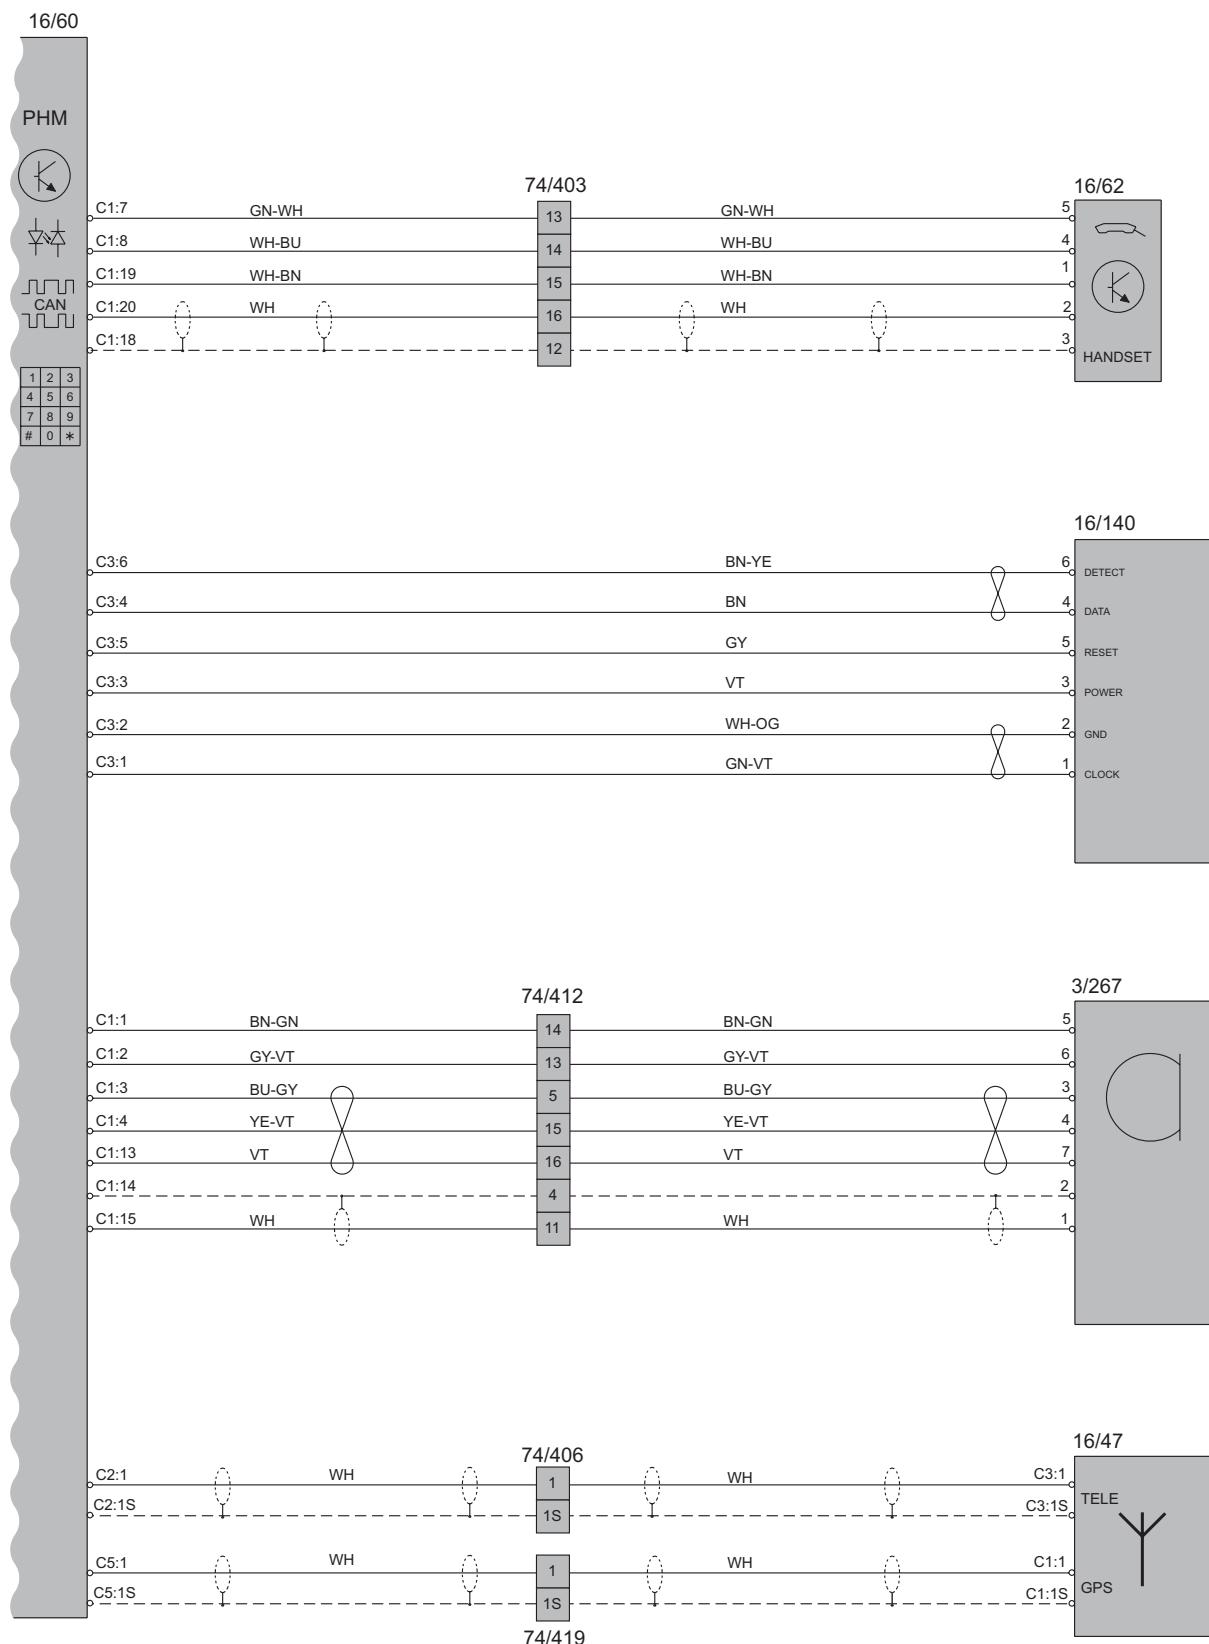

G029056

Group 39 Other, Accessories


DAB Radio

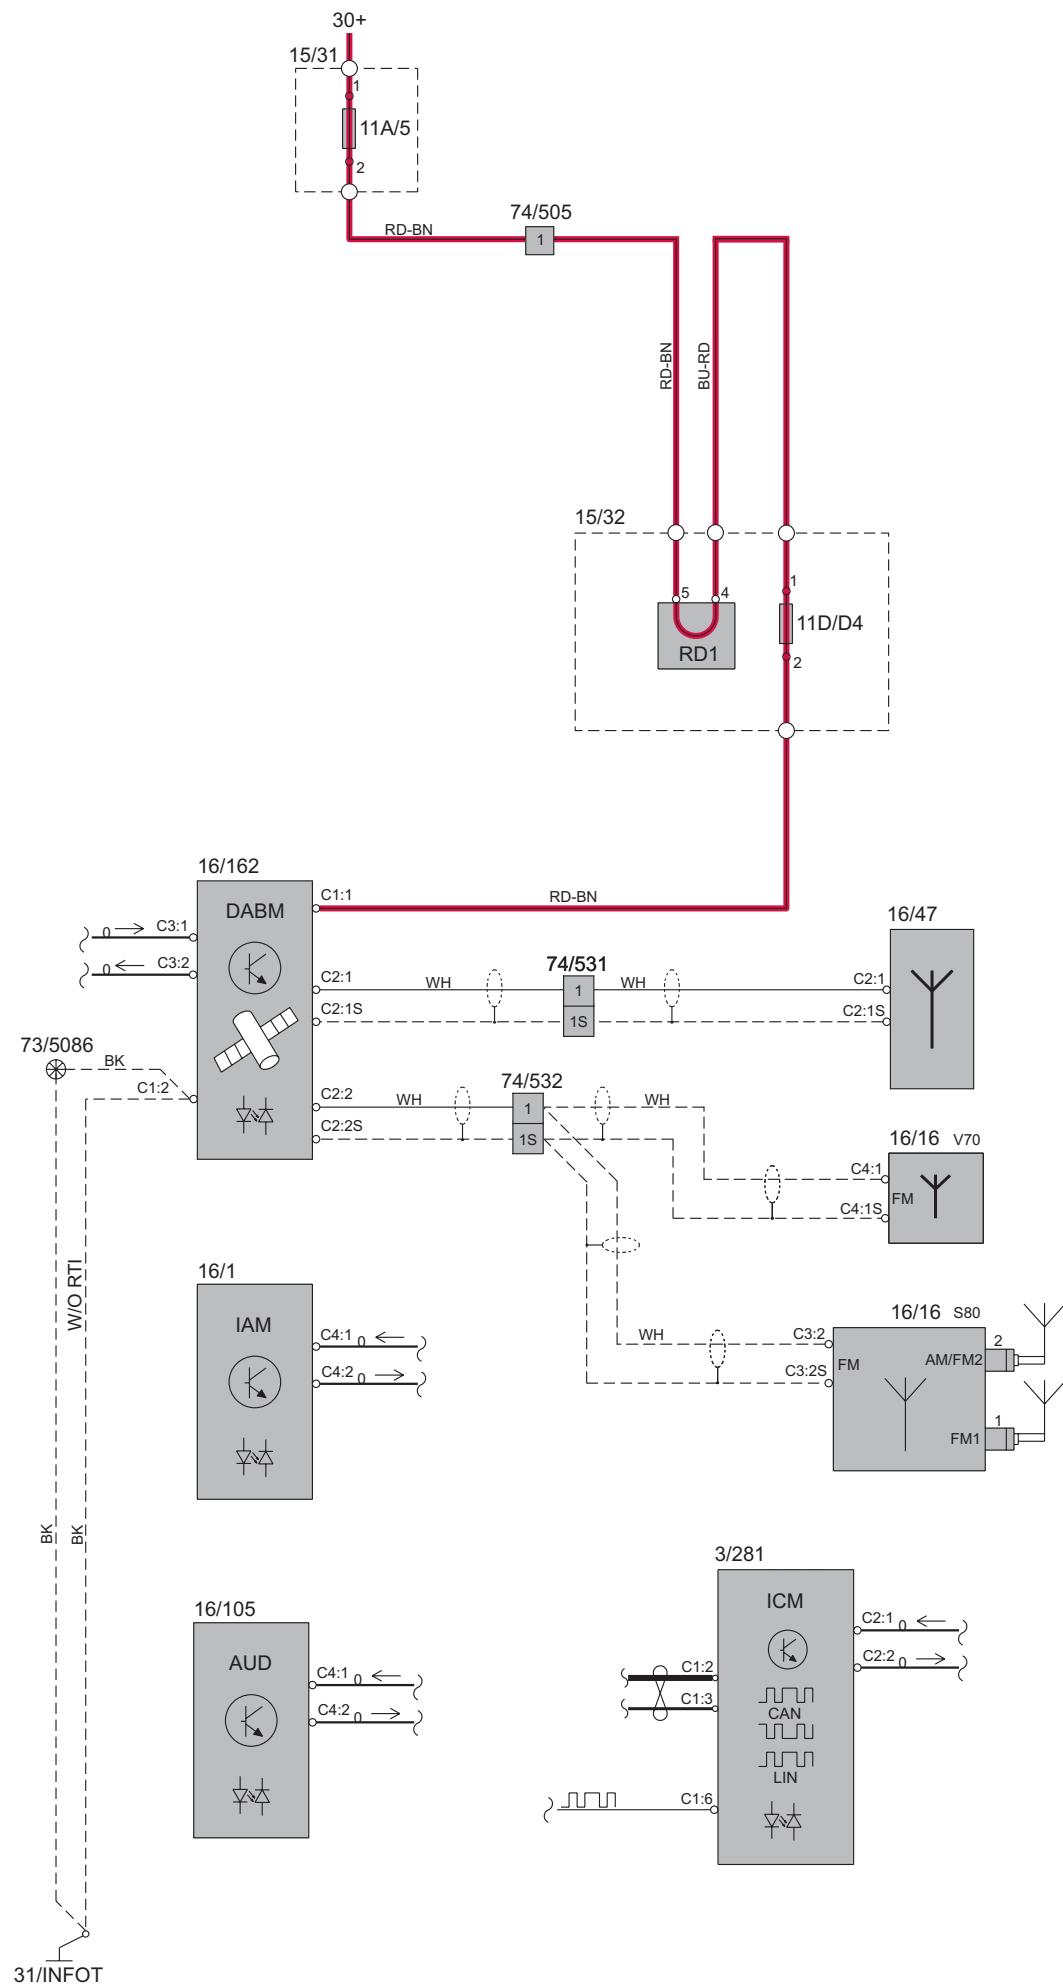

G031242

Group 39 Other


Telephone system Bluetooth

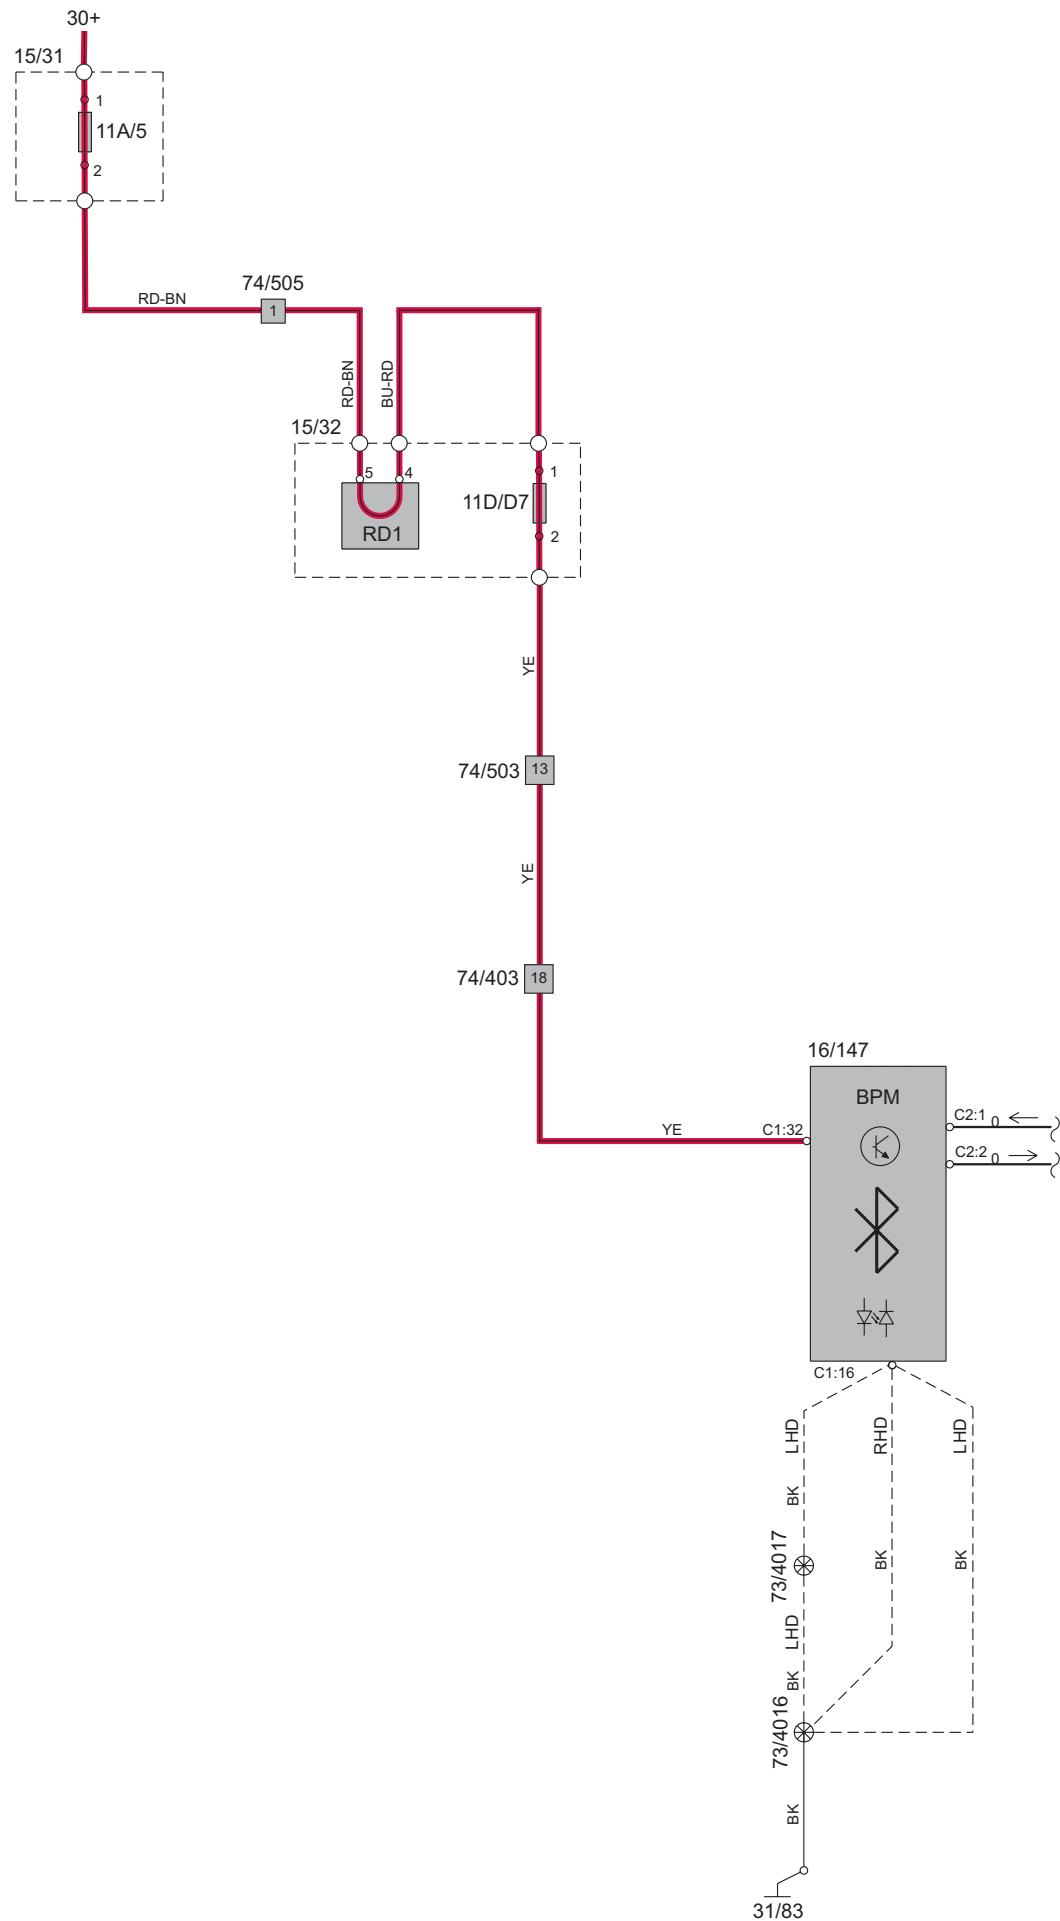

G029060


Group 39 Other, Accessories

Bluetooth Handsfree

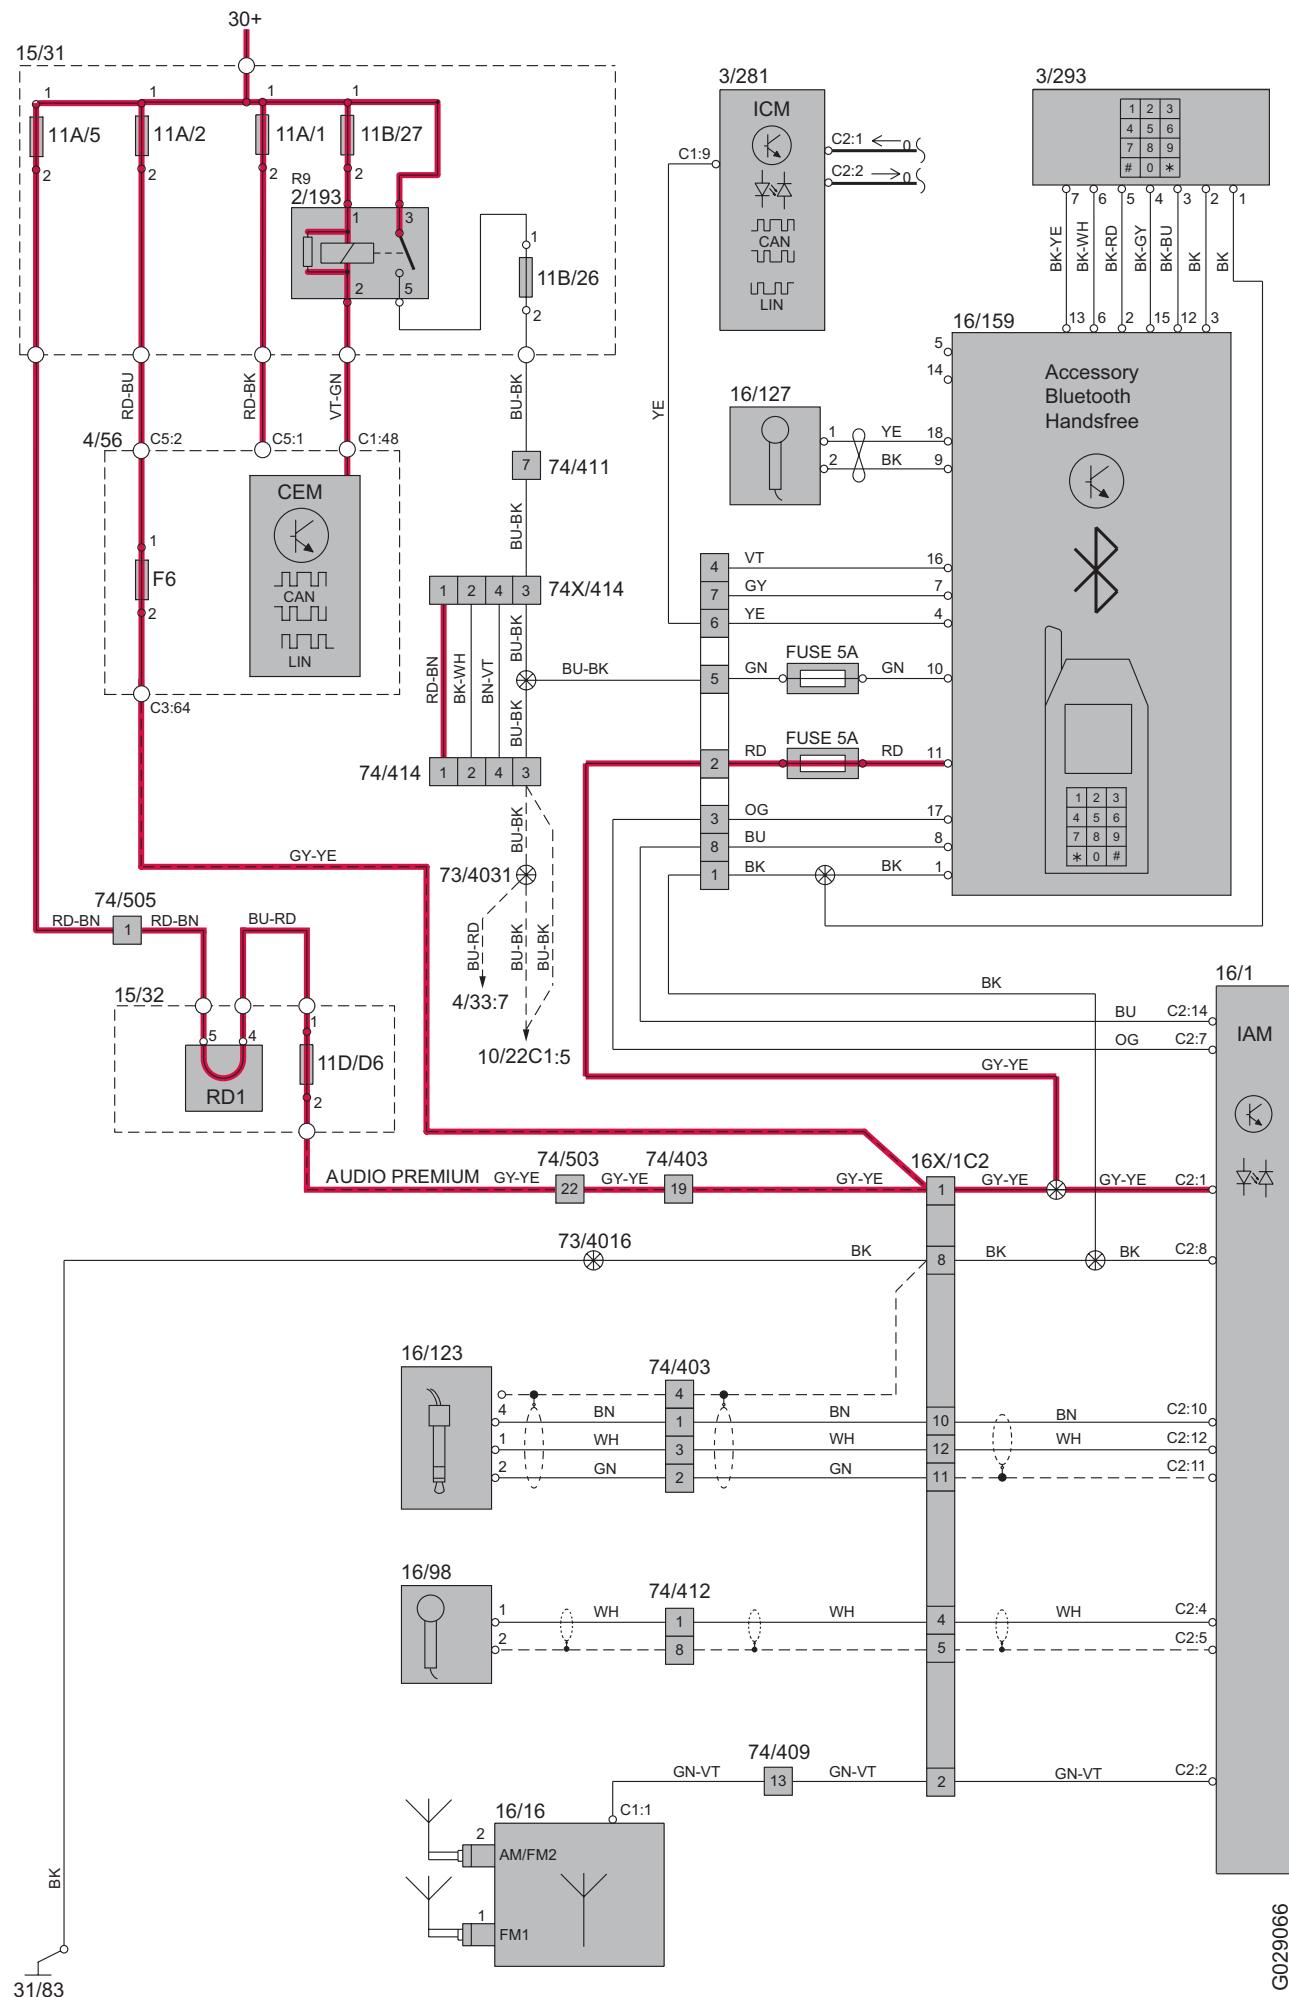


Group 39 Other

Multimedia & Traffic information

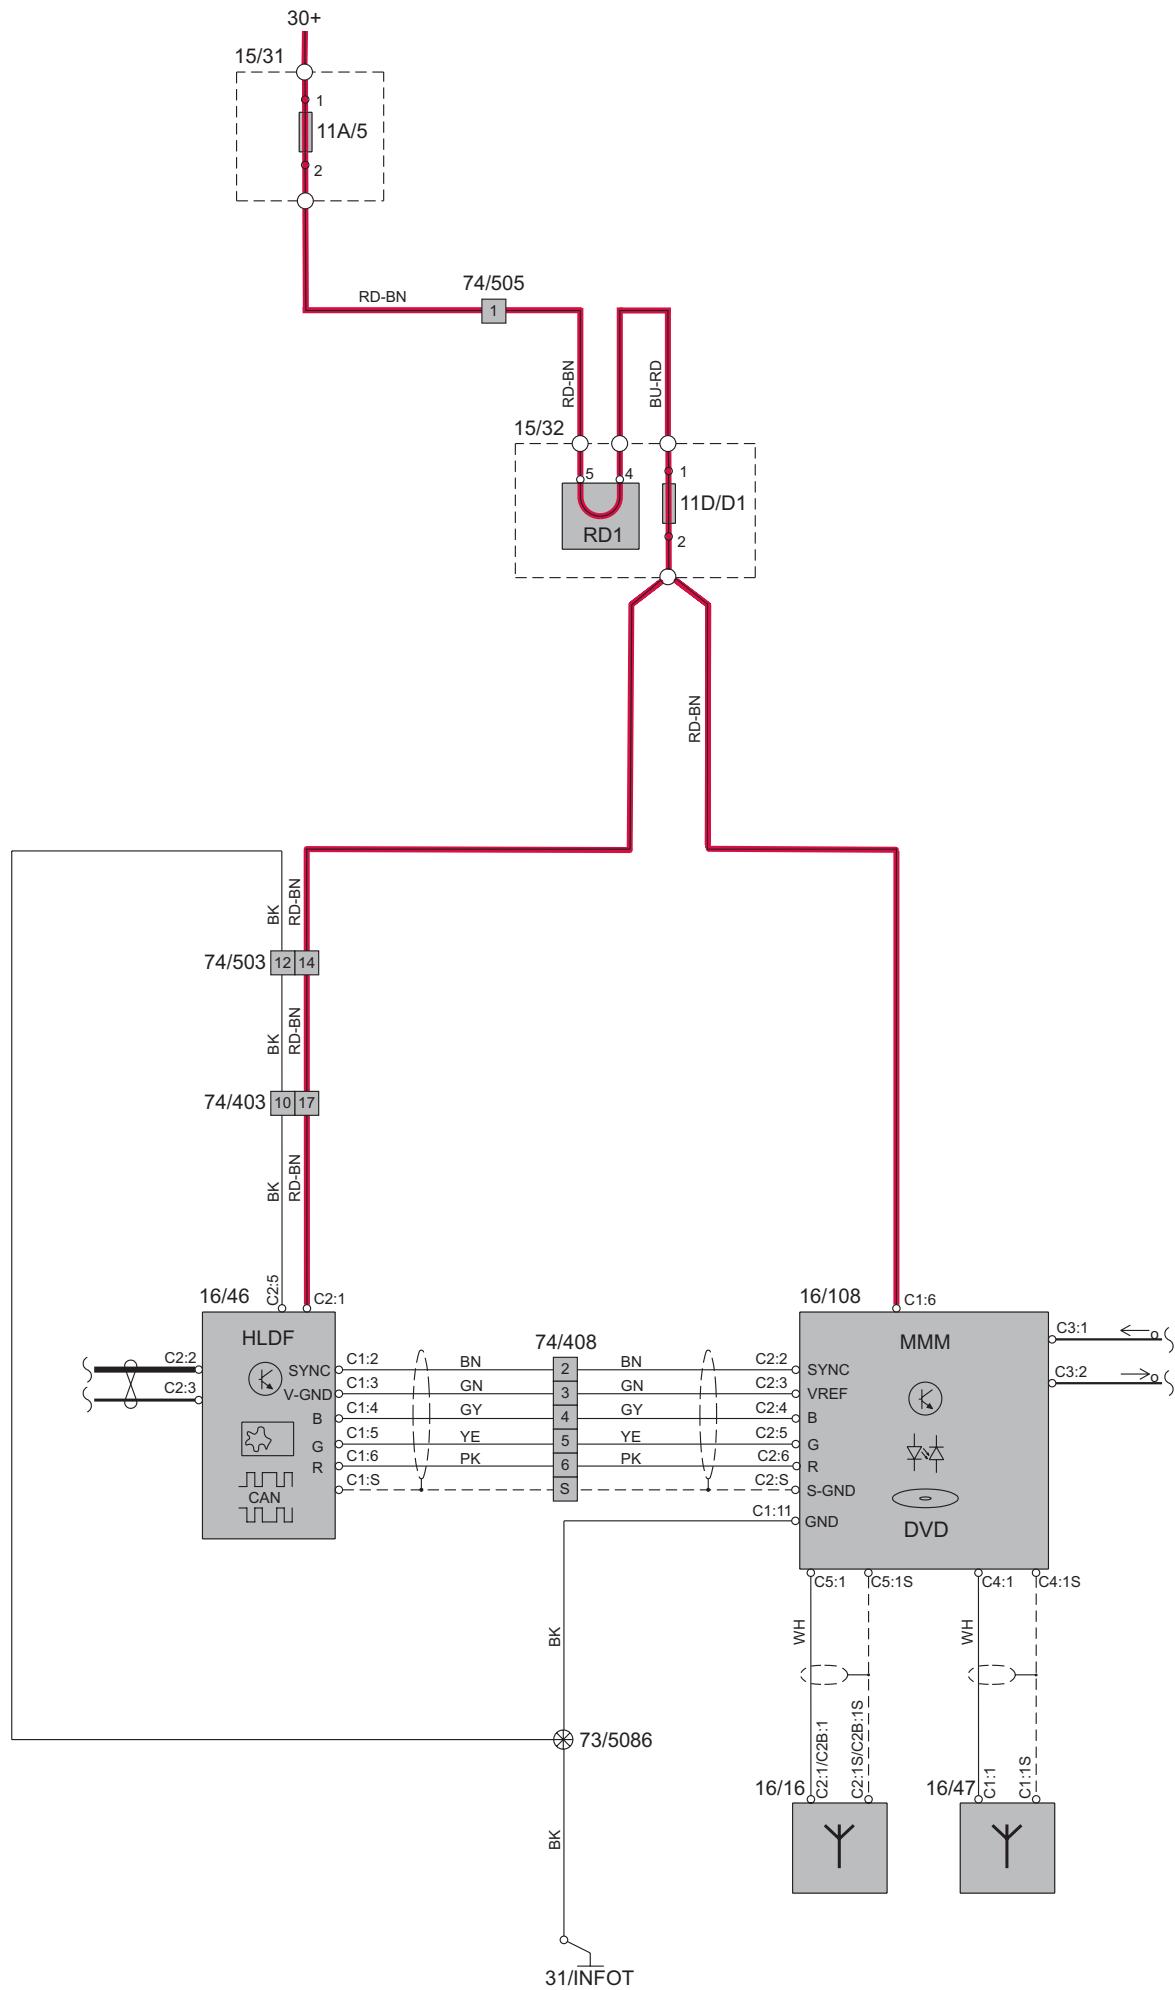


Group 39 Other

Rear seat entertainment

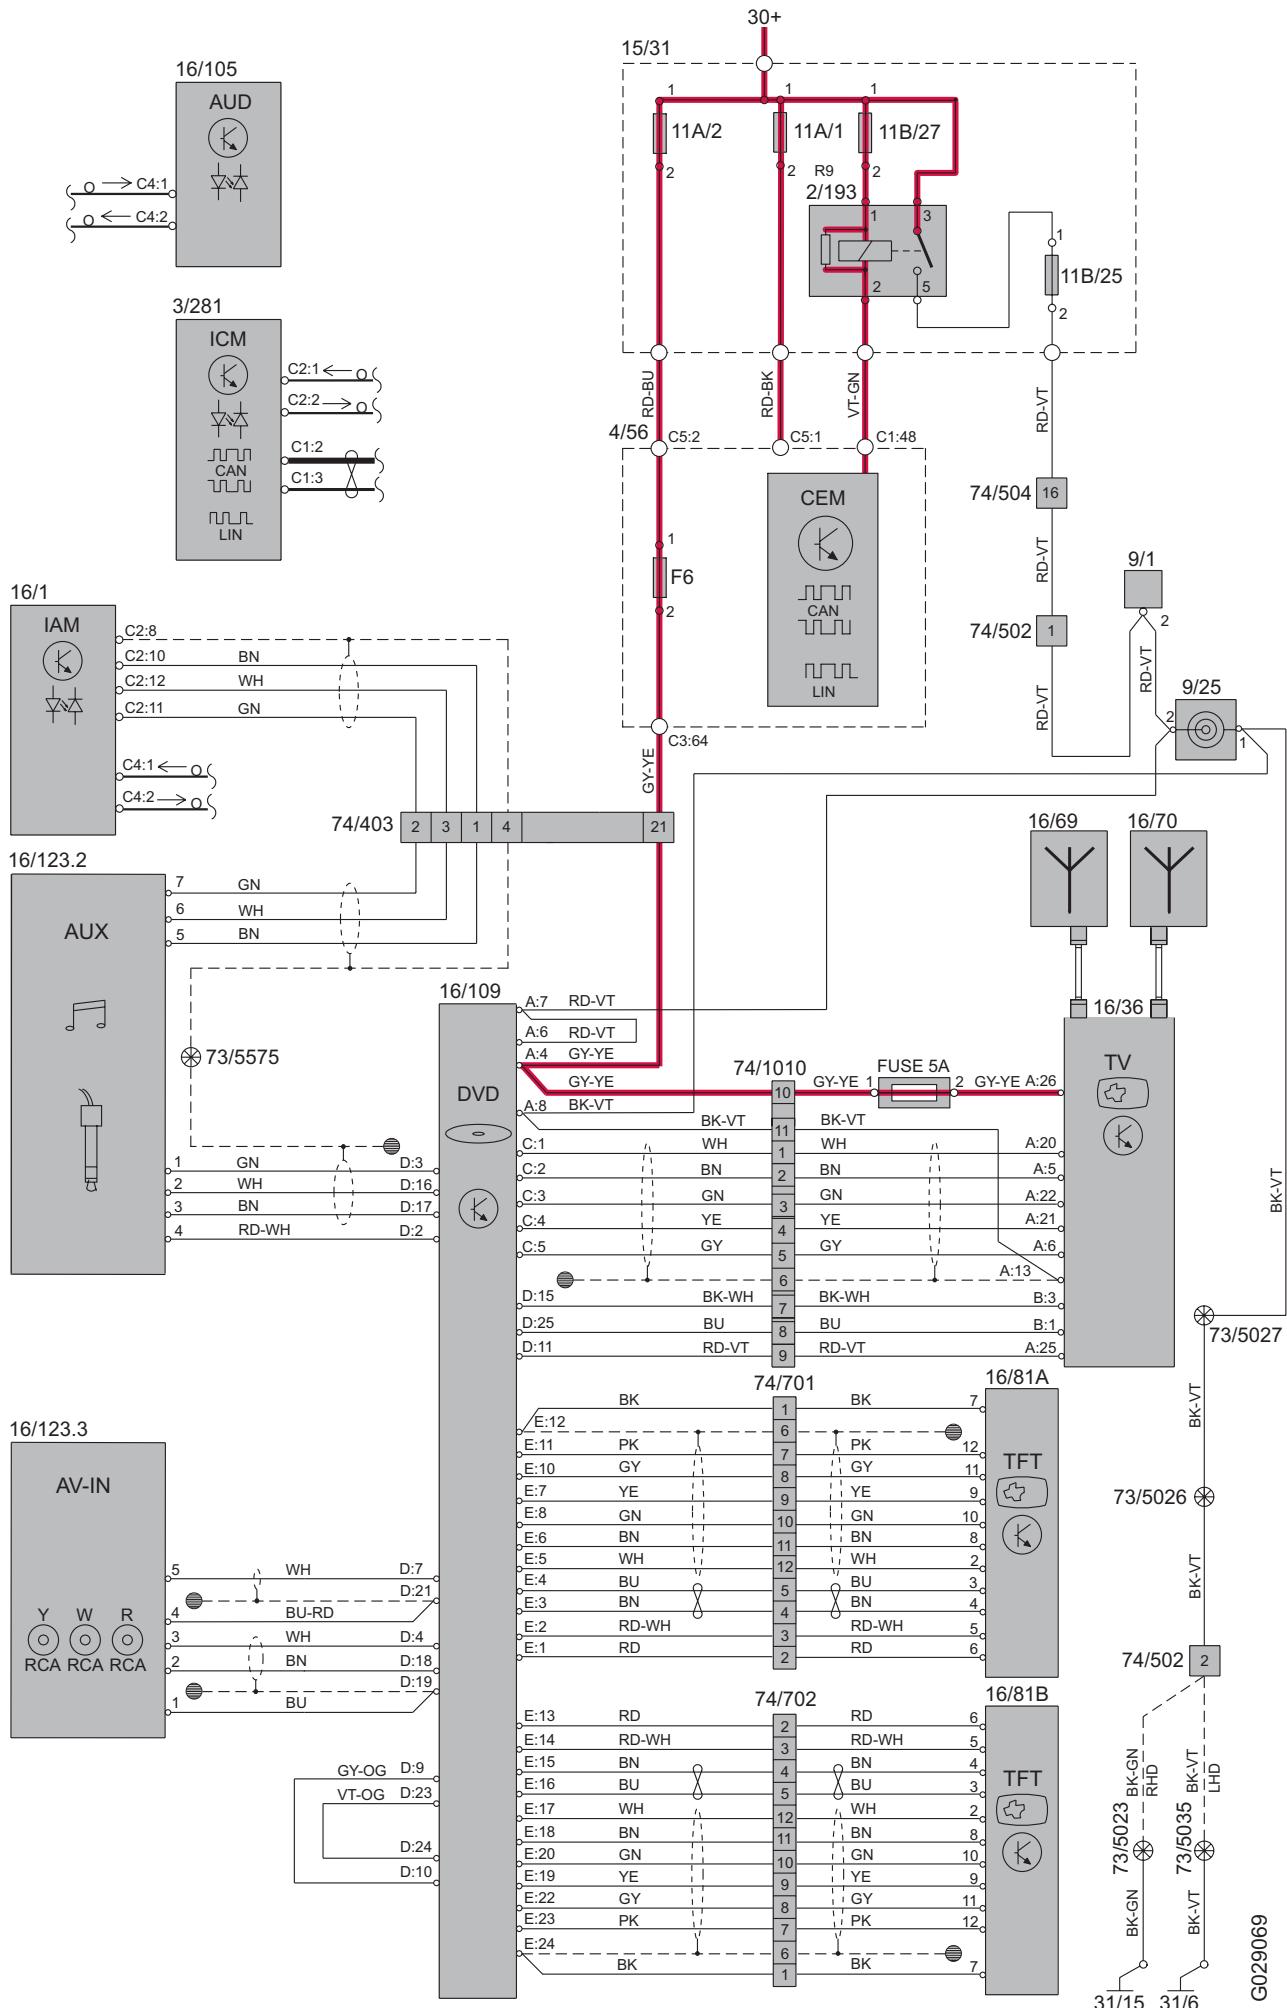


Group 39 Other, Accessories

Satellite radio

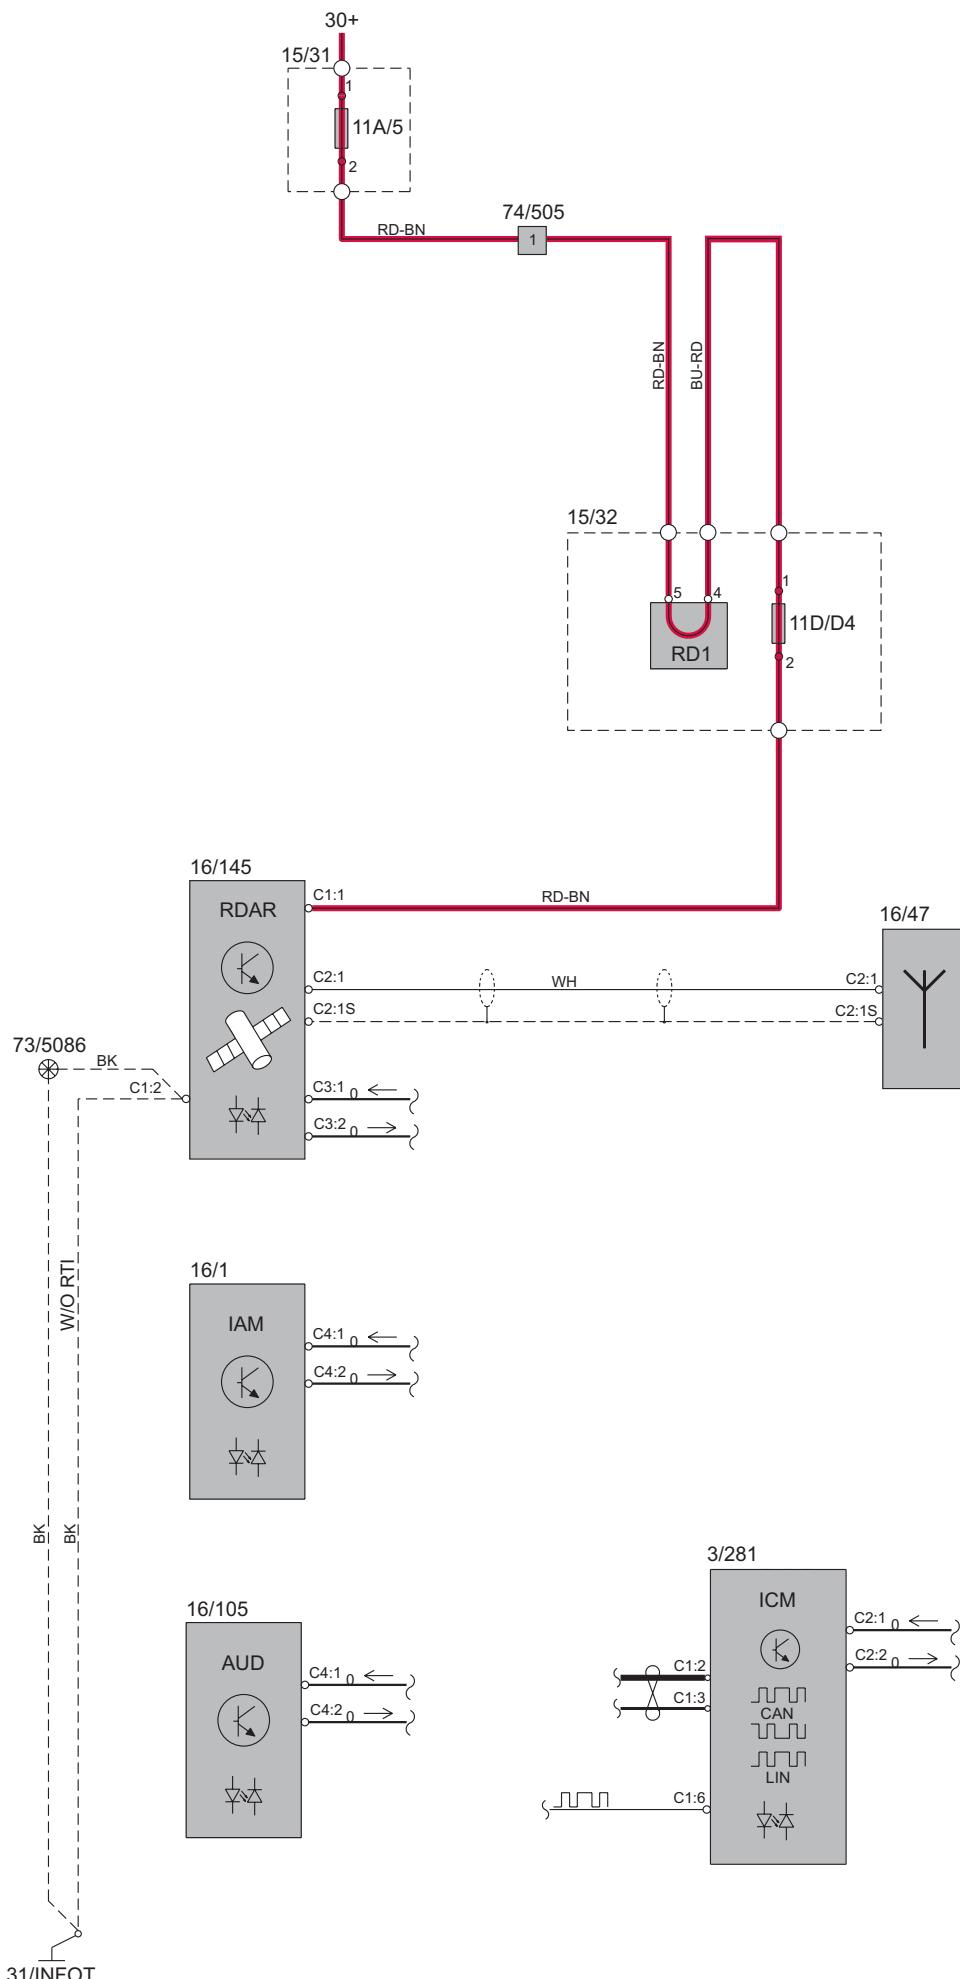


Group 39 Other, Accessories

Parking camera

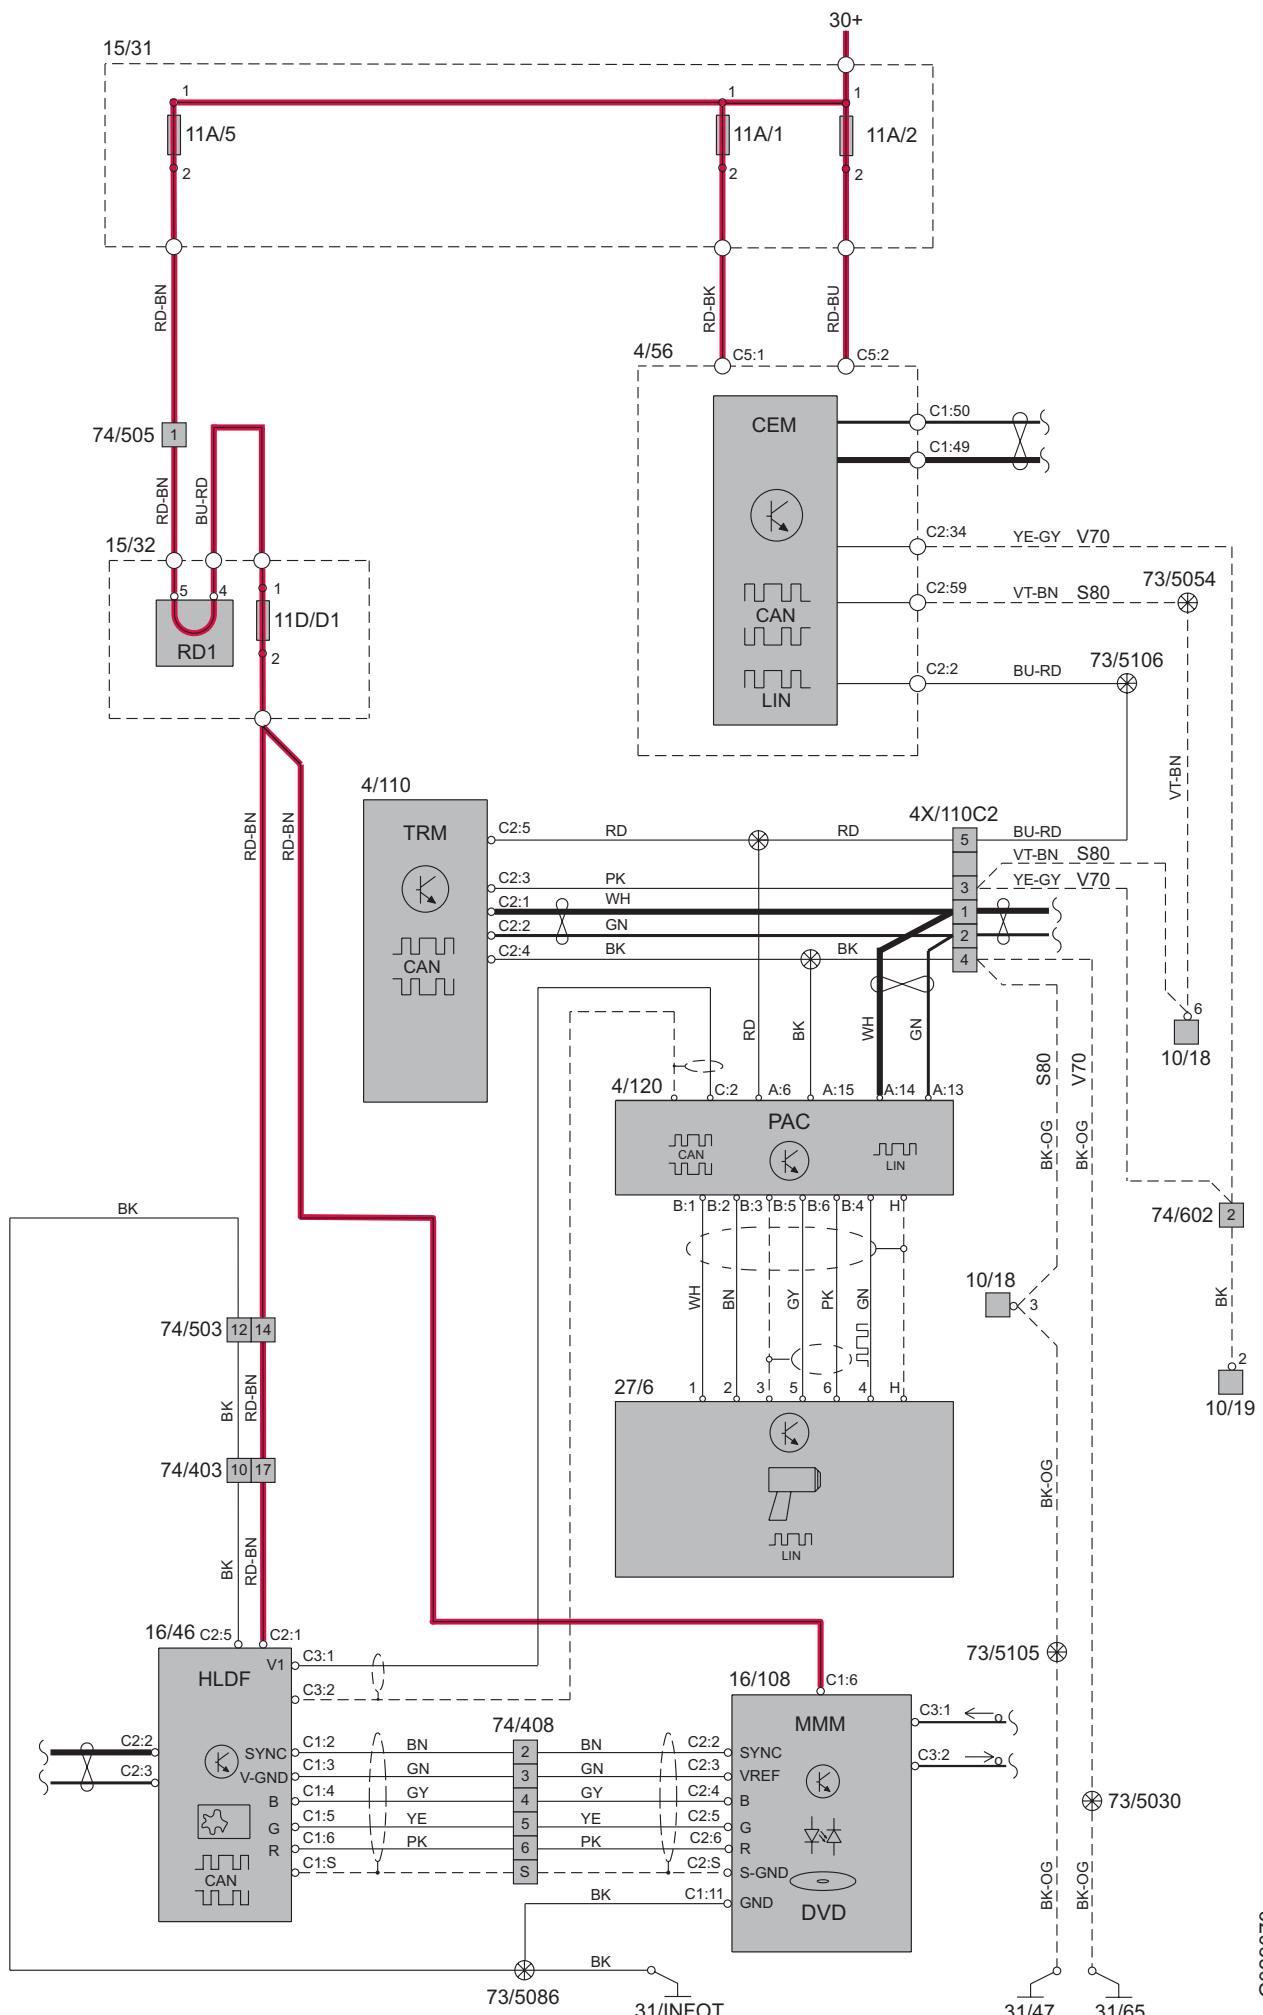


Group 39 Other, Accessories

Navigation system, portable

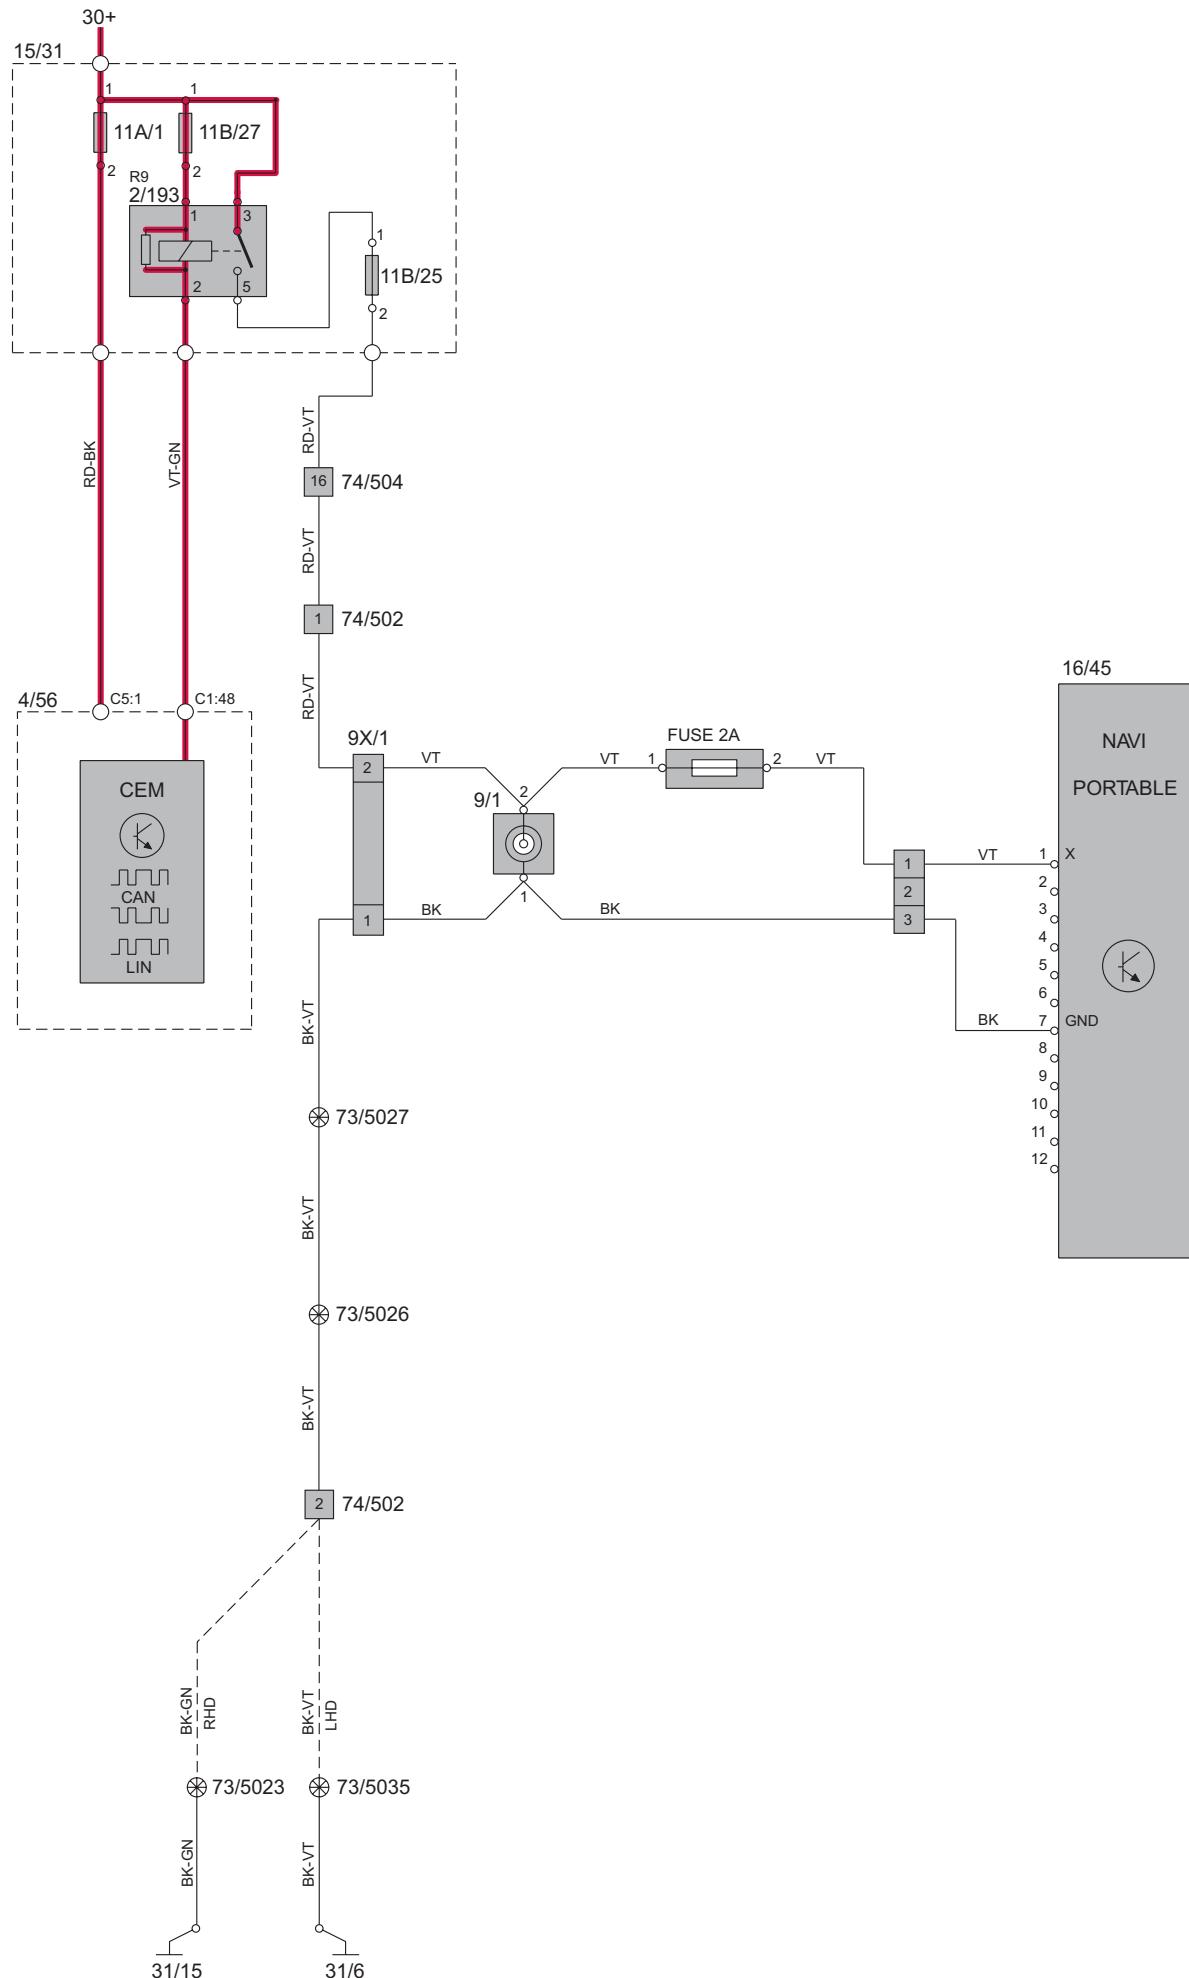

Group 43 Transmission


Transmission M66

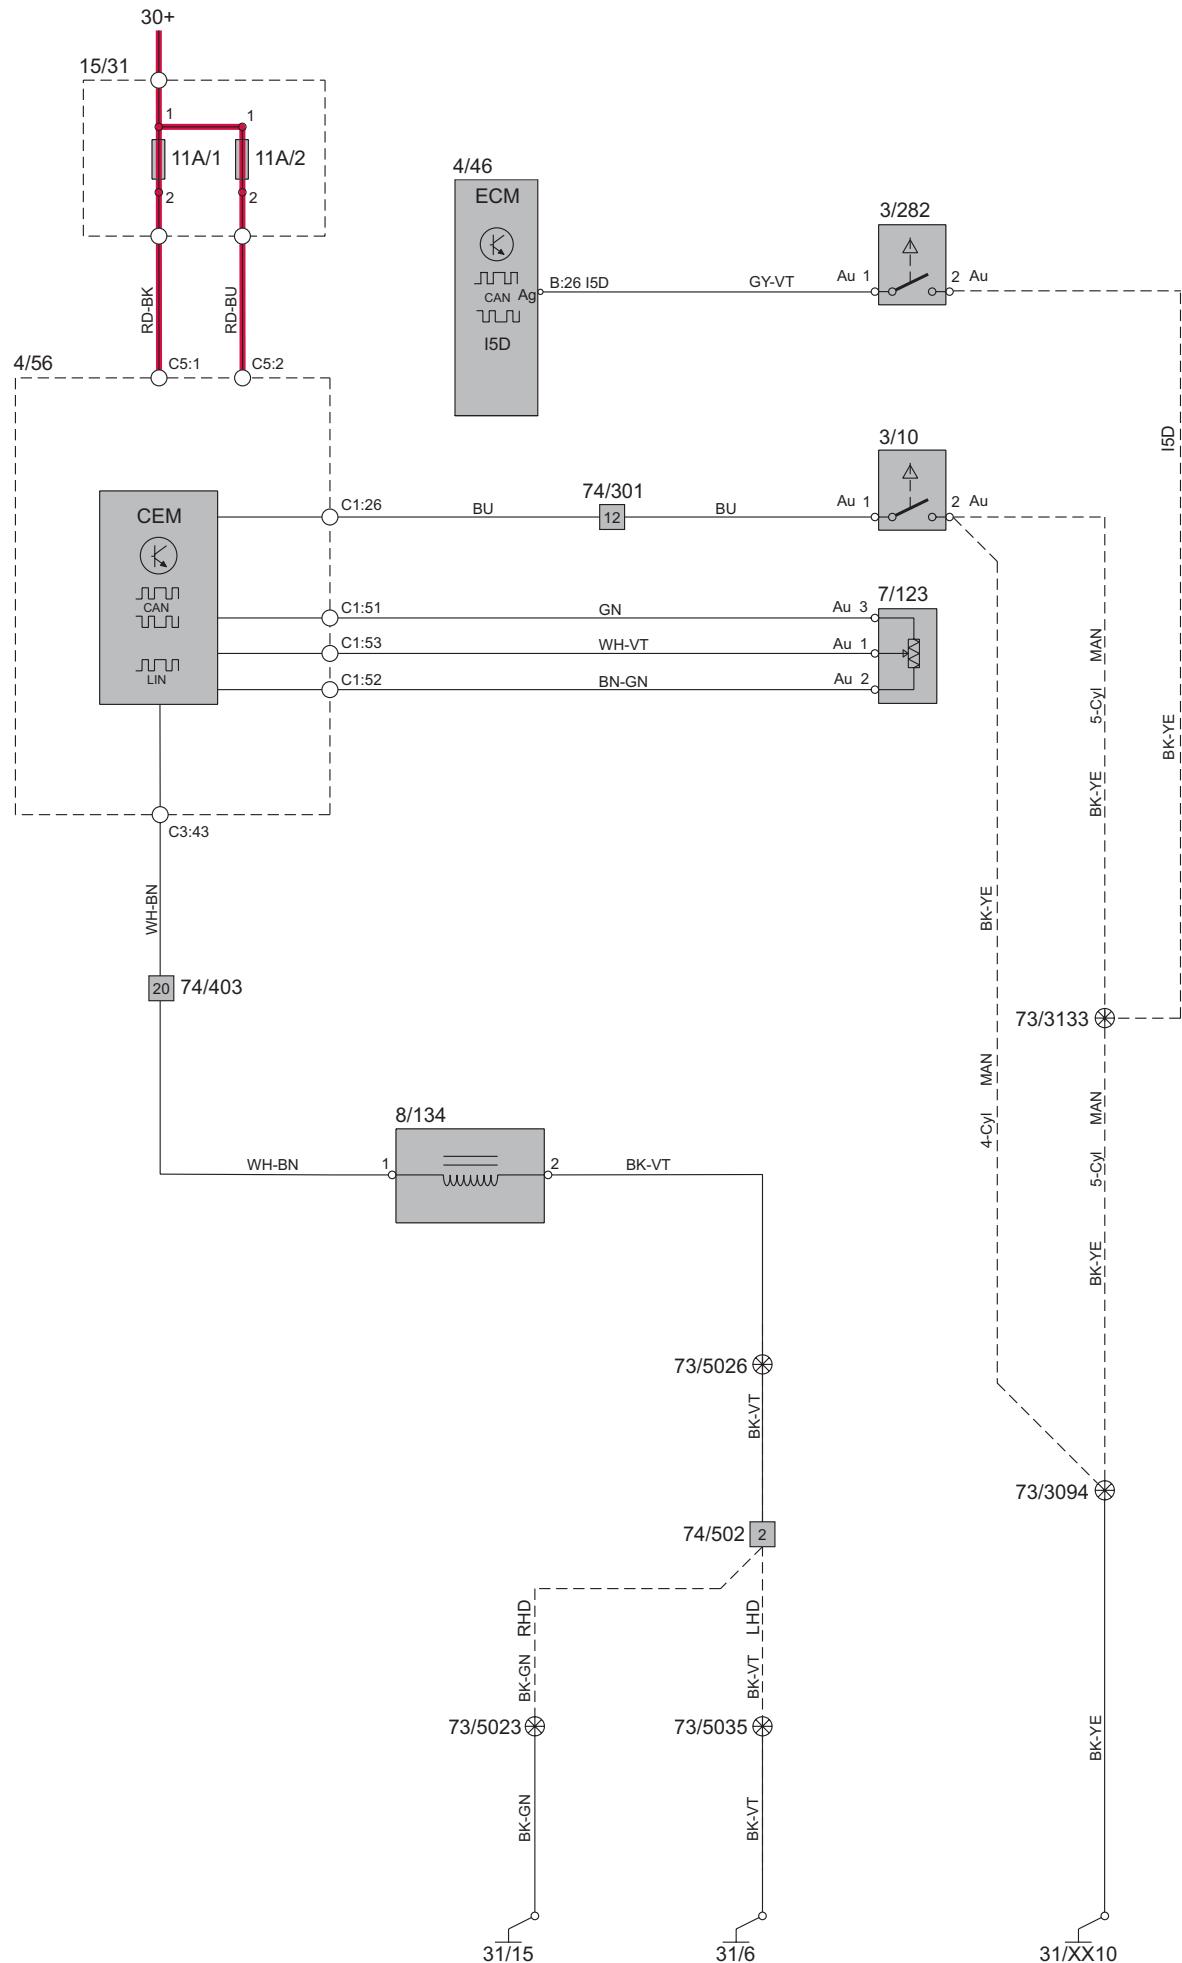

G036589


Group 43 Transmission

Automatic transmission, TF-80SC AWD

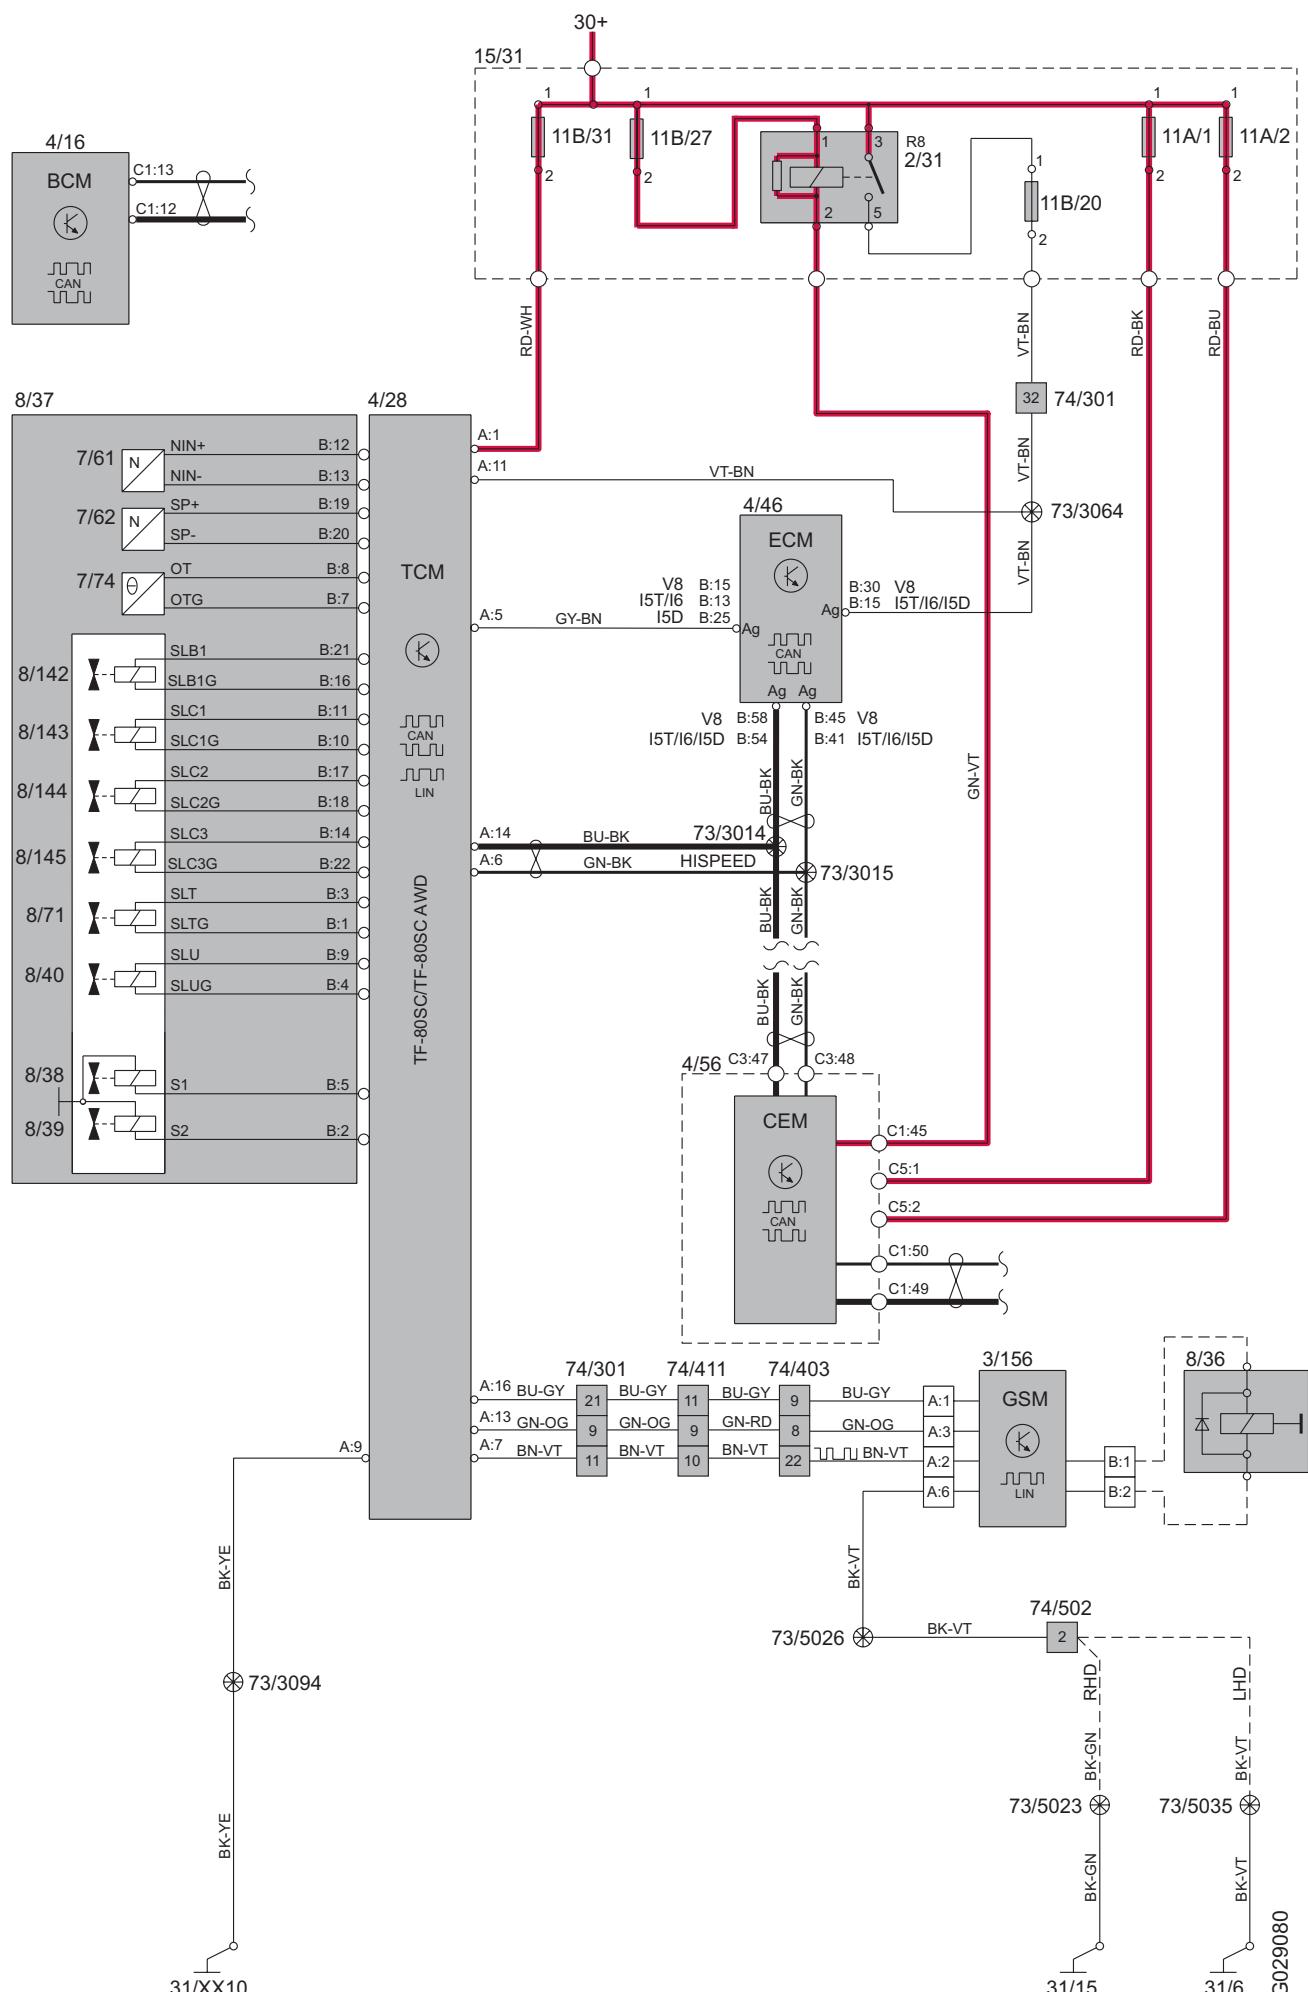


Group 43 Transmission

Automatic transmission MPS6

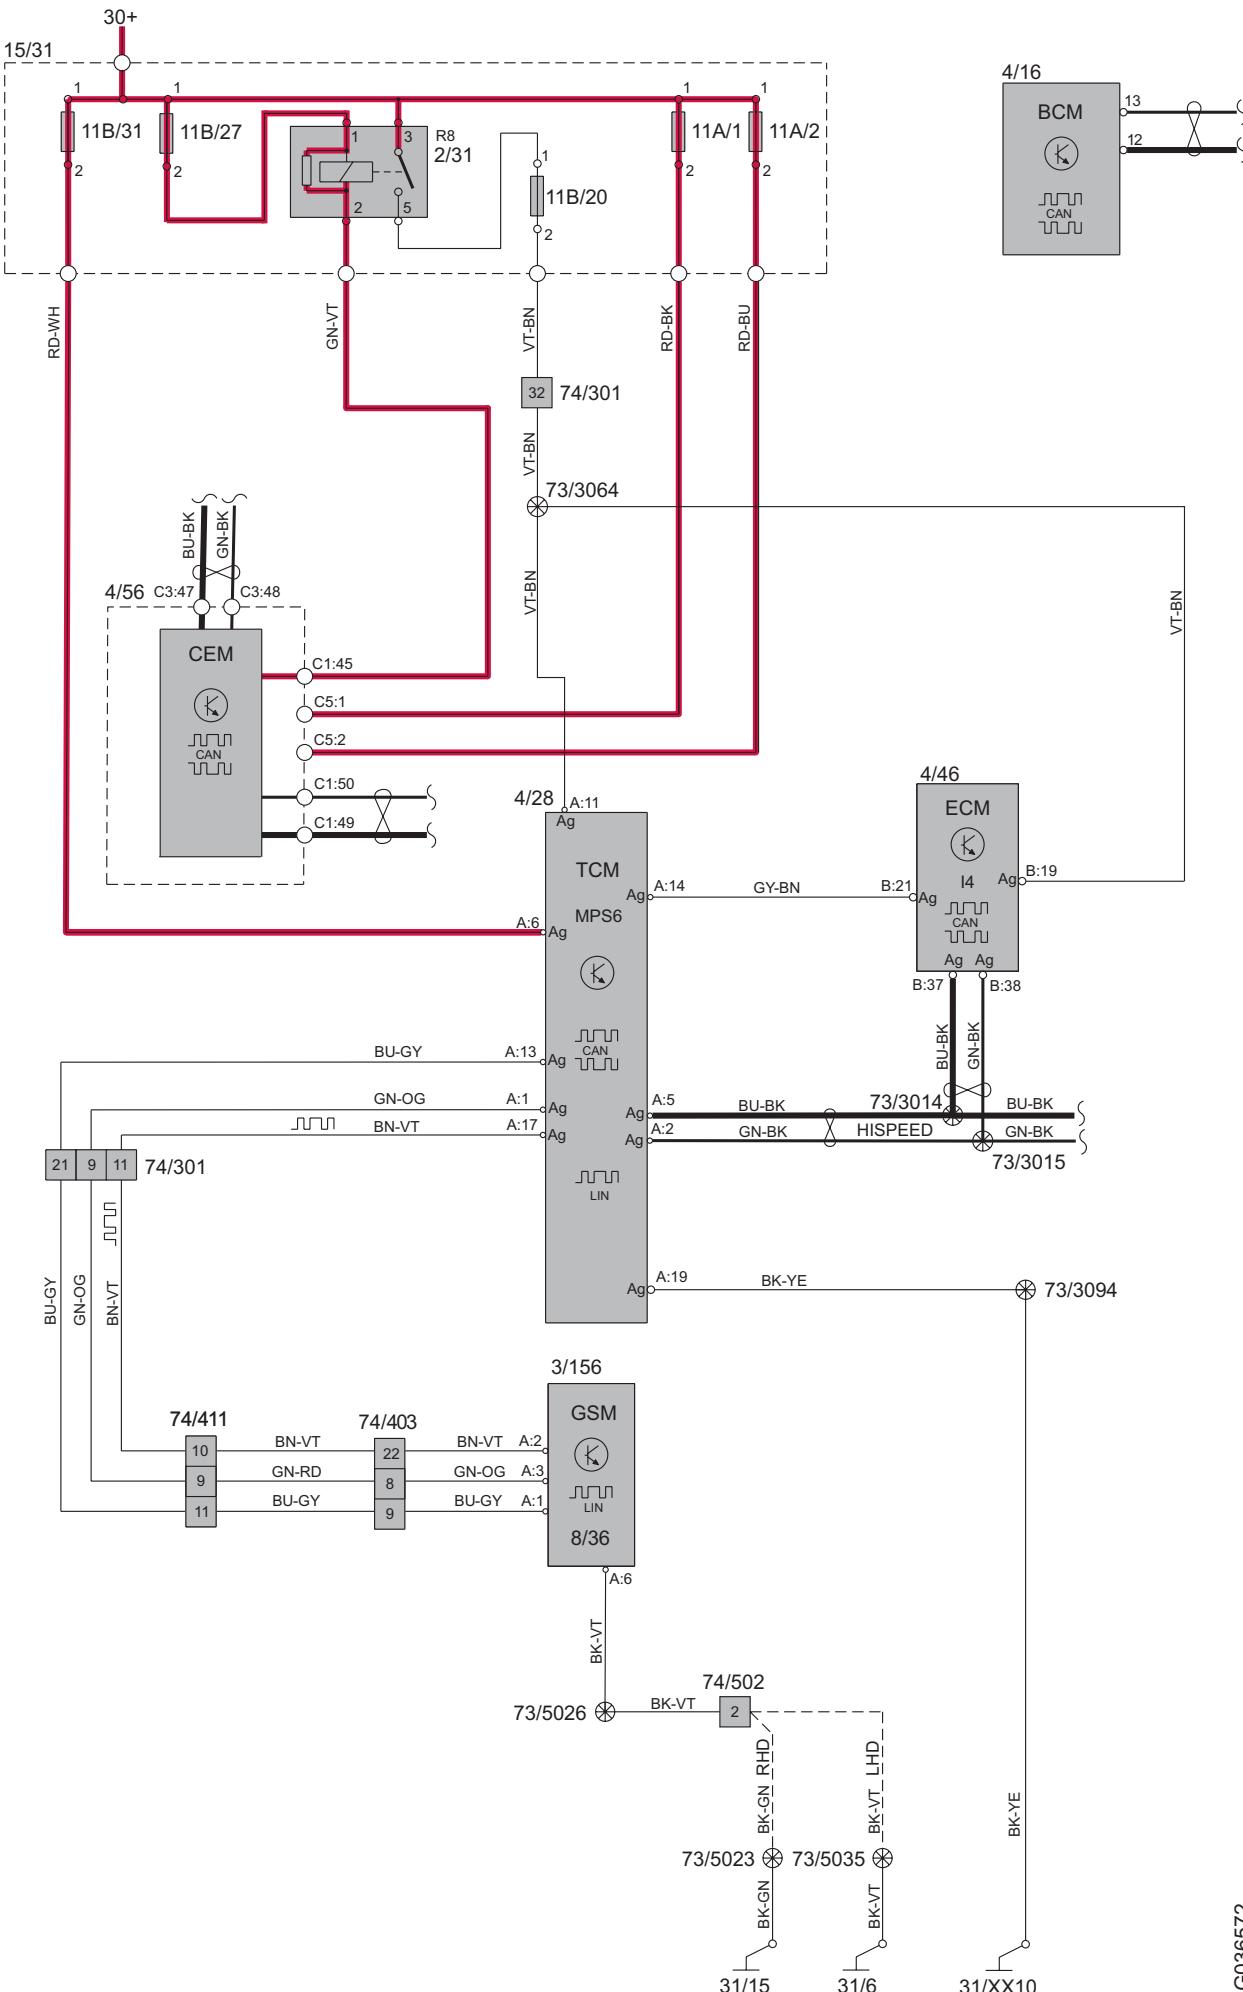

Group 43 Transmission


Differential Electronic Module (DEM)

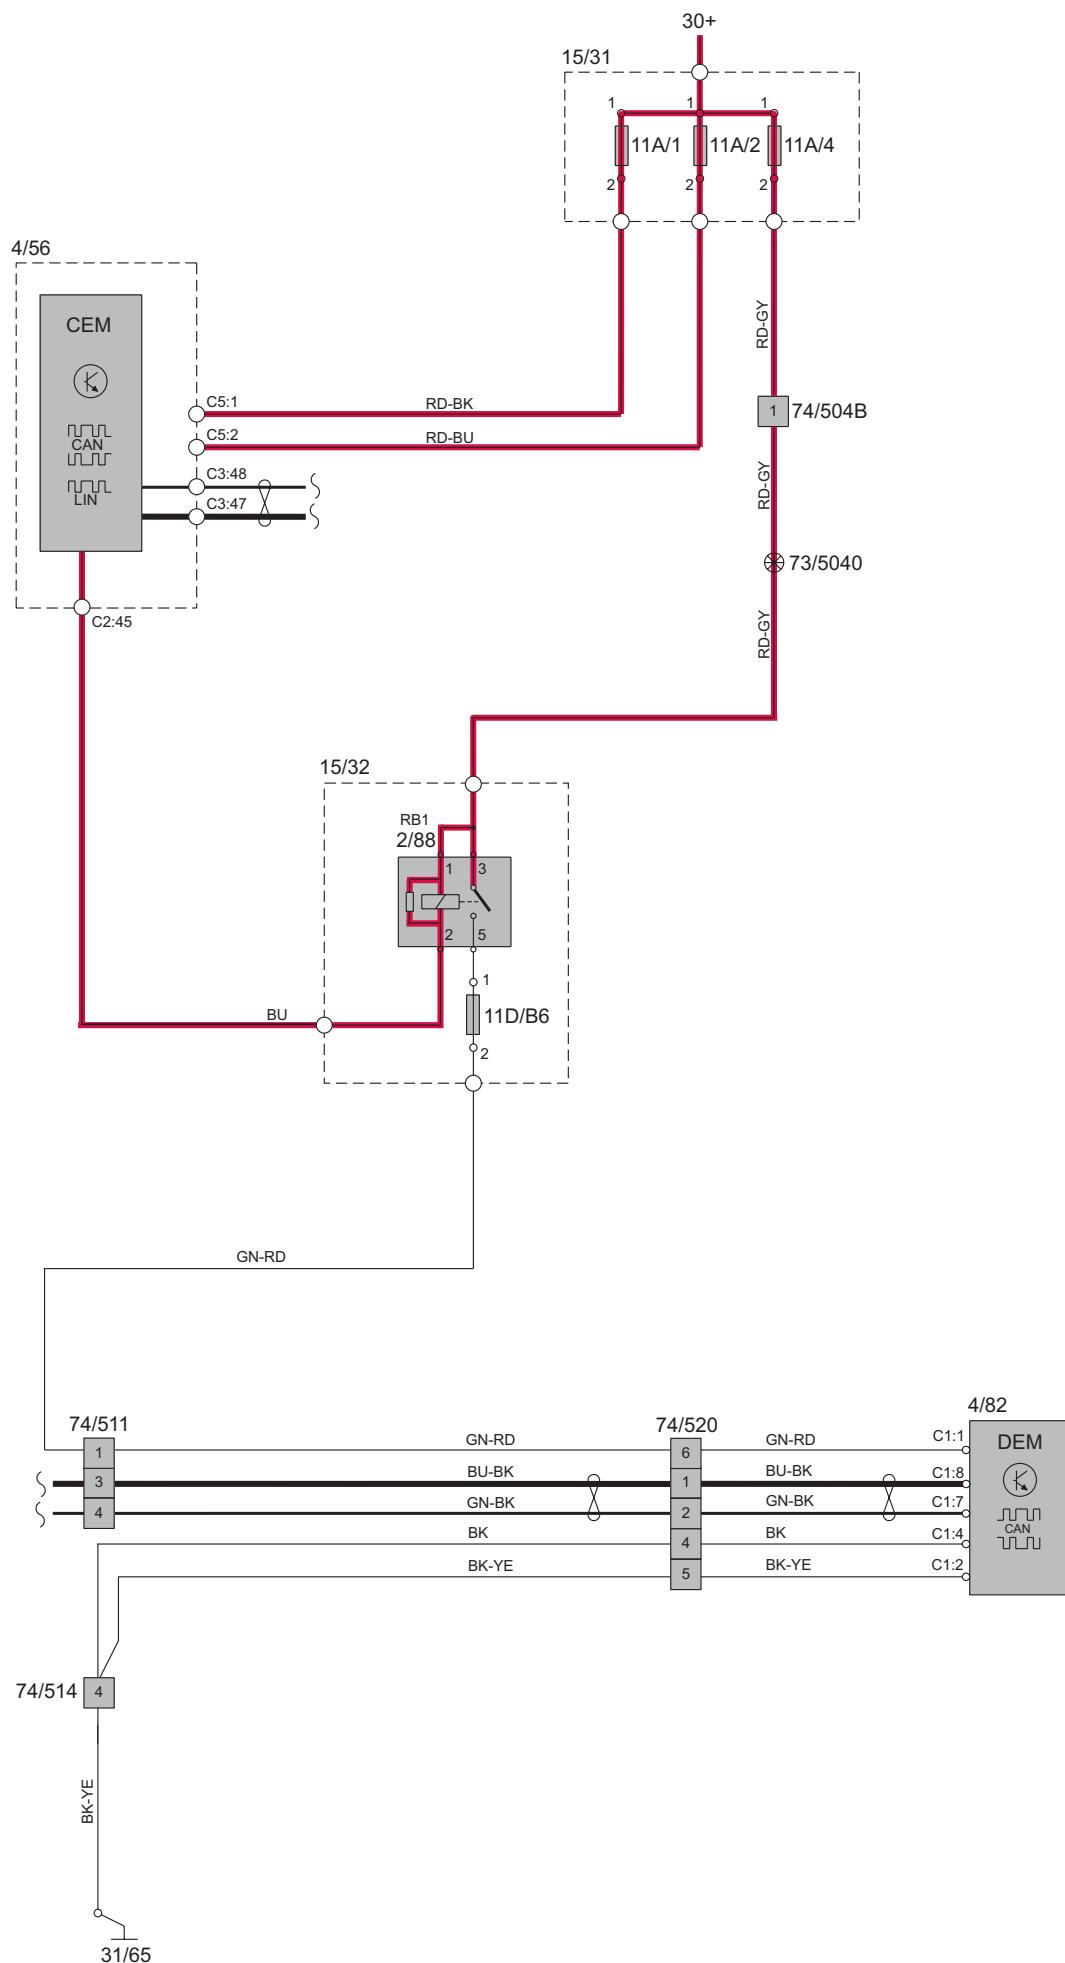

G029081


Group 55 Parking brake

Electric parking brake

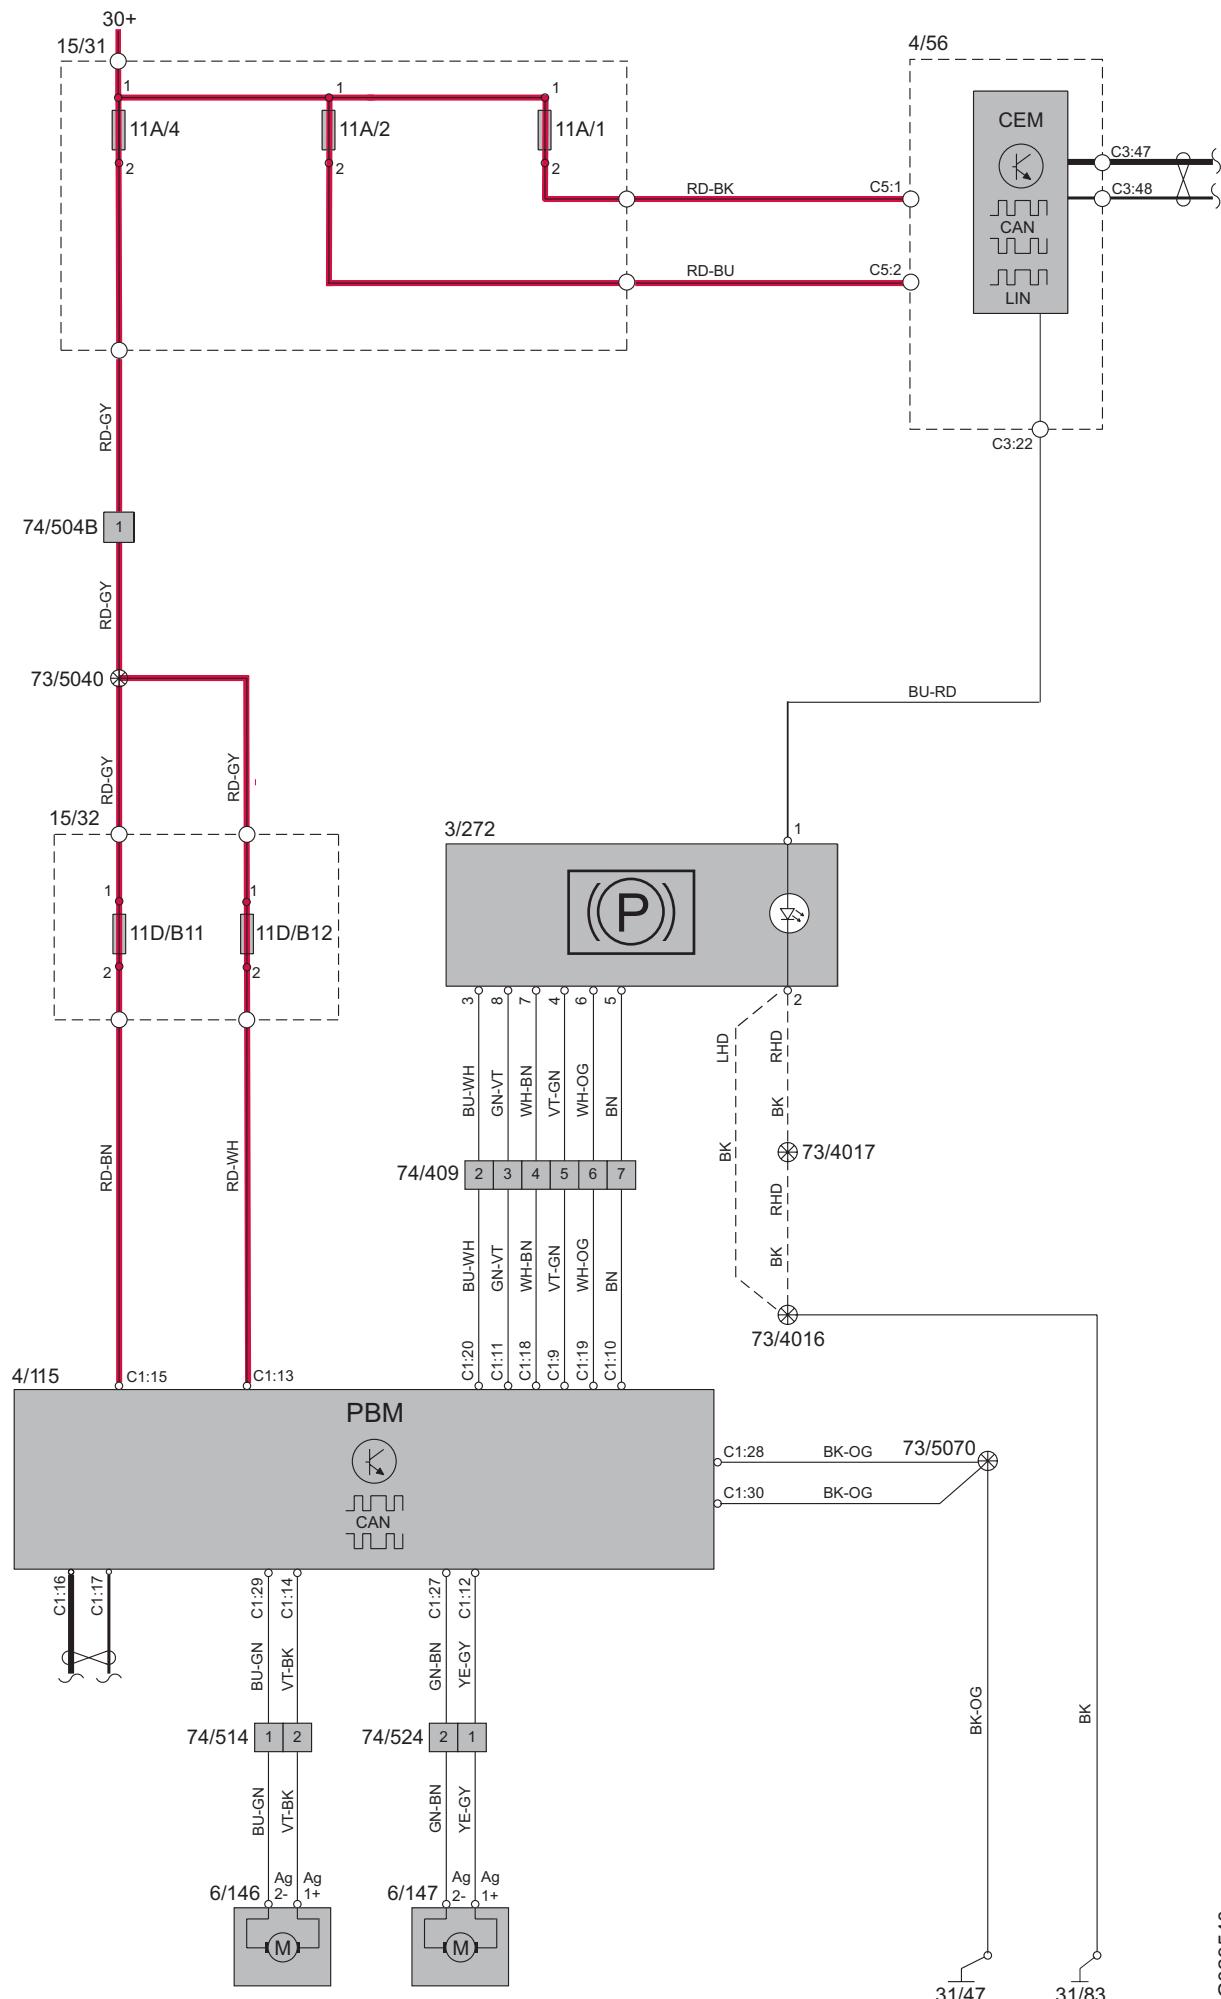


G029540

Group 59 Brake system Brake control system & DSTC

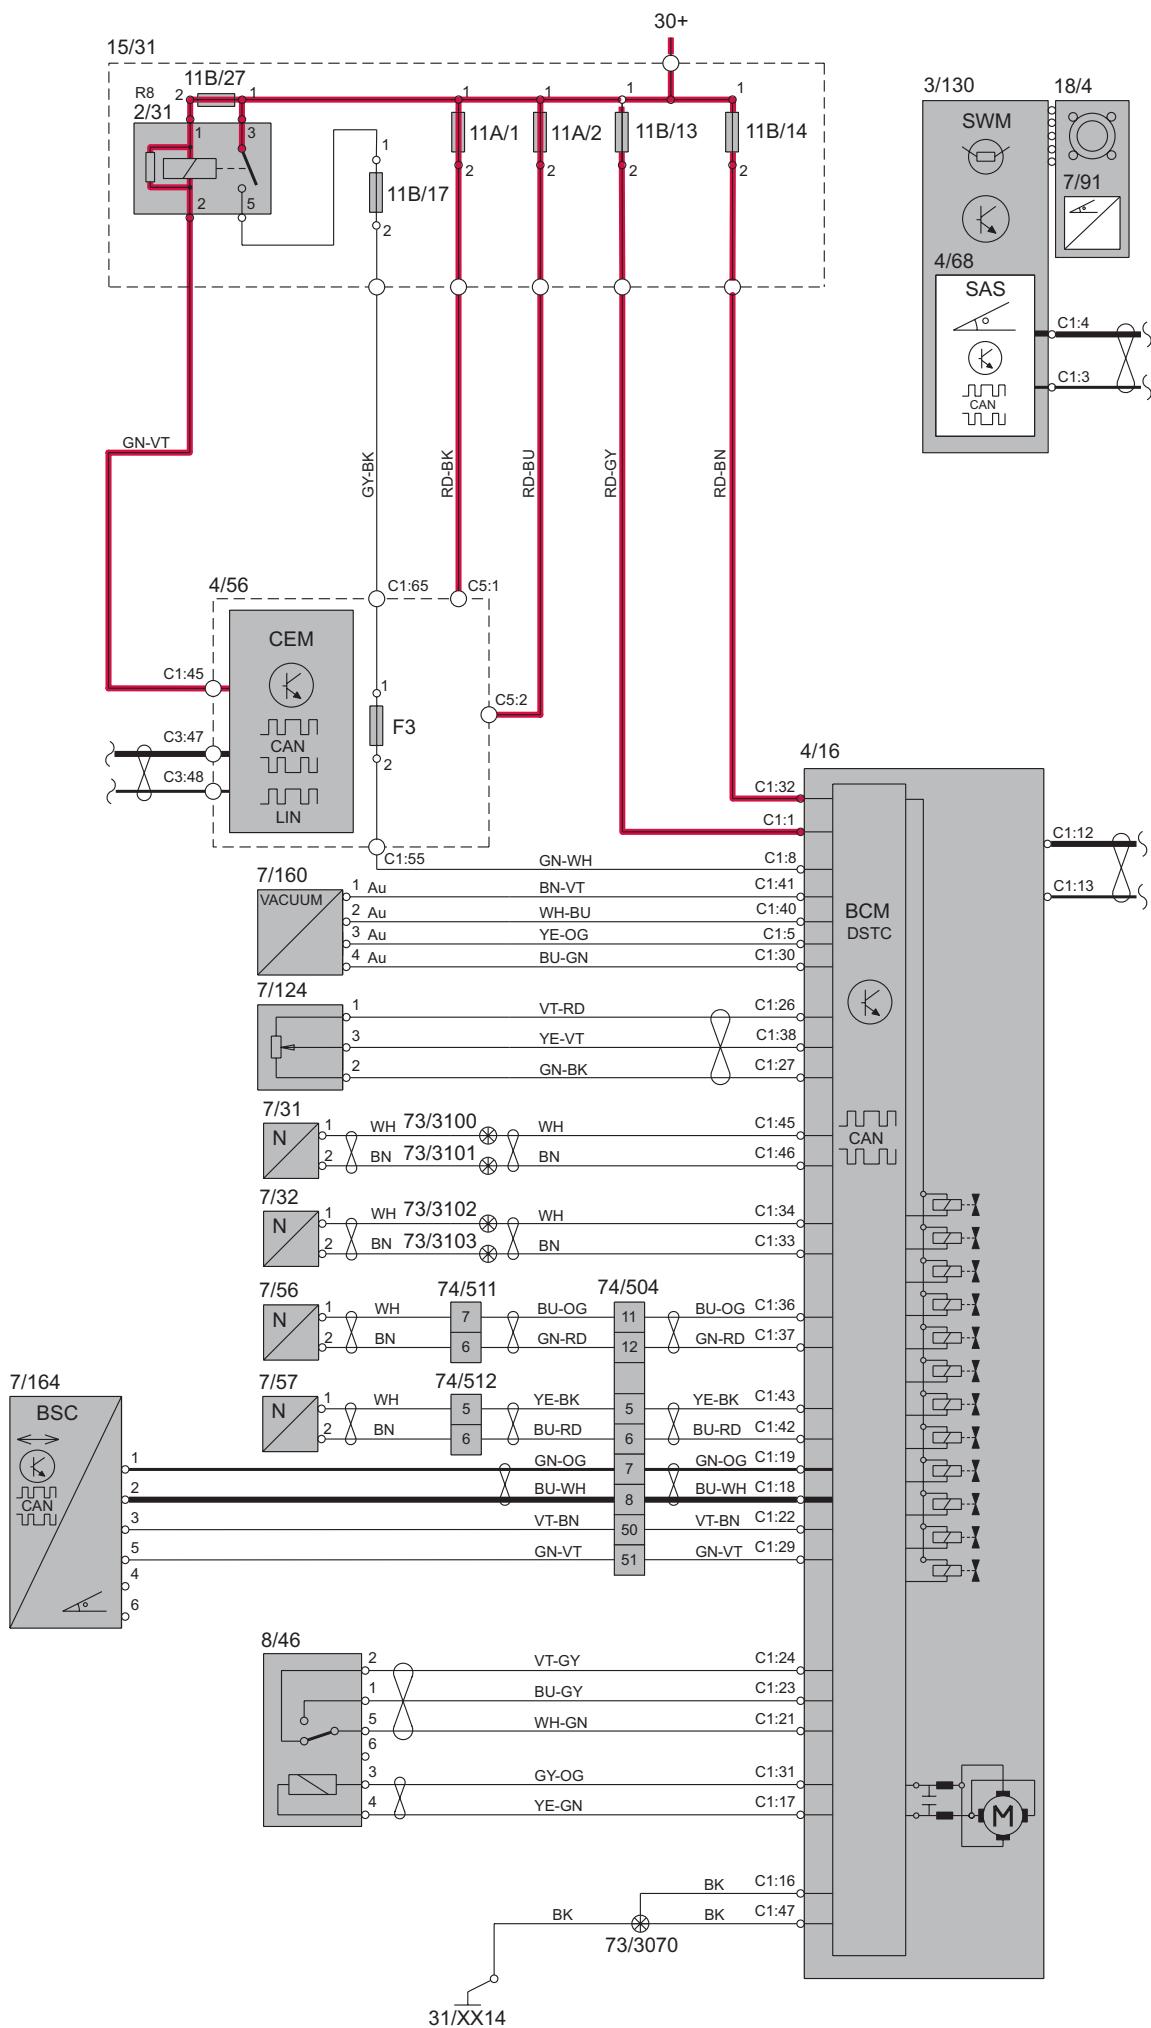


Group 64 Steering

Speed dependent power steering

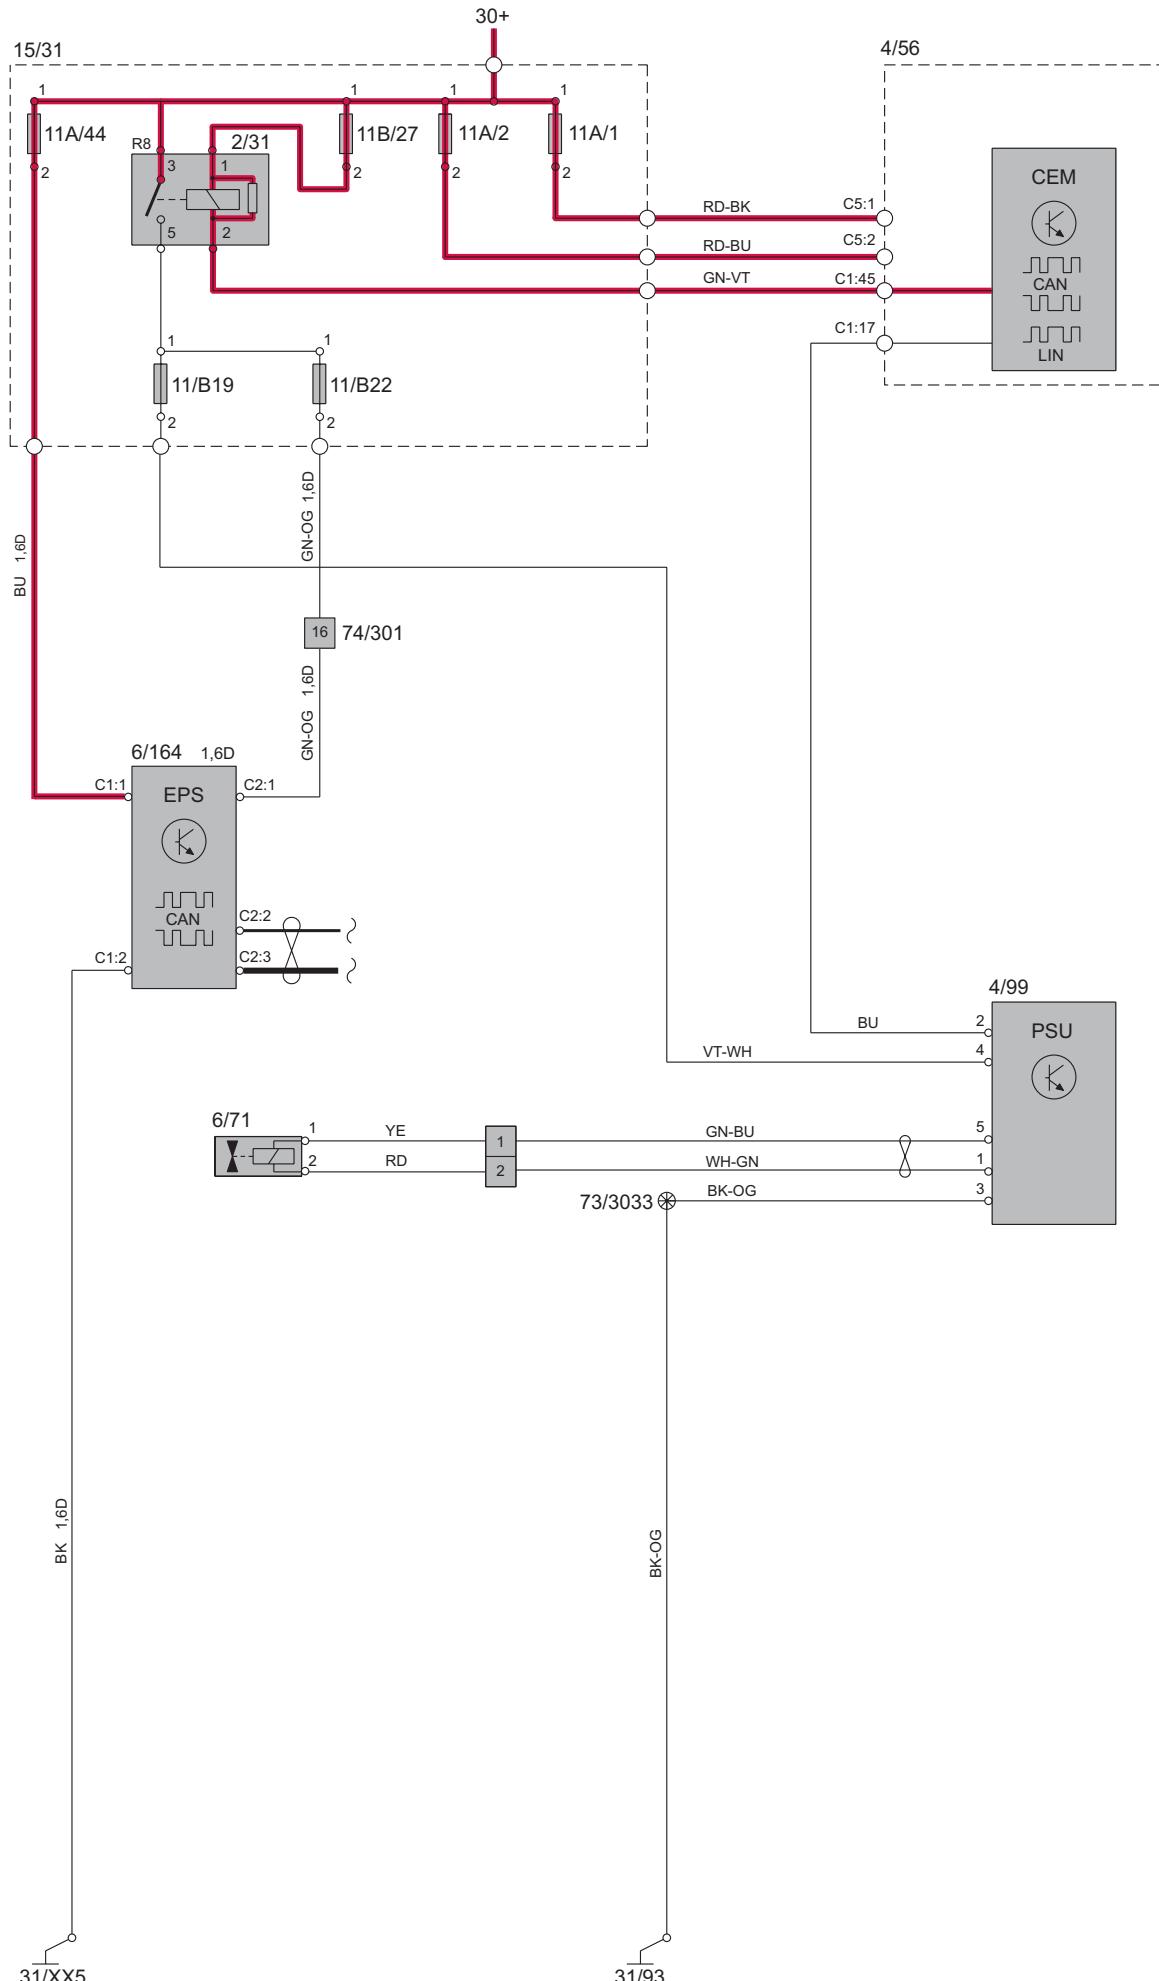

Group 76 Shock absorbers

Four-C

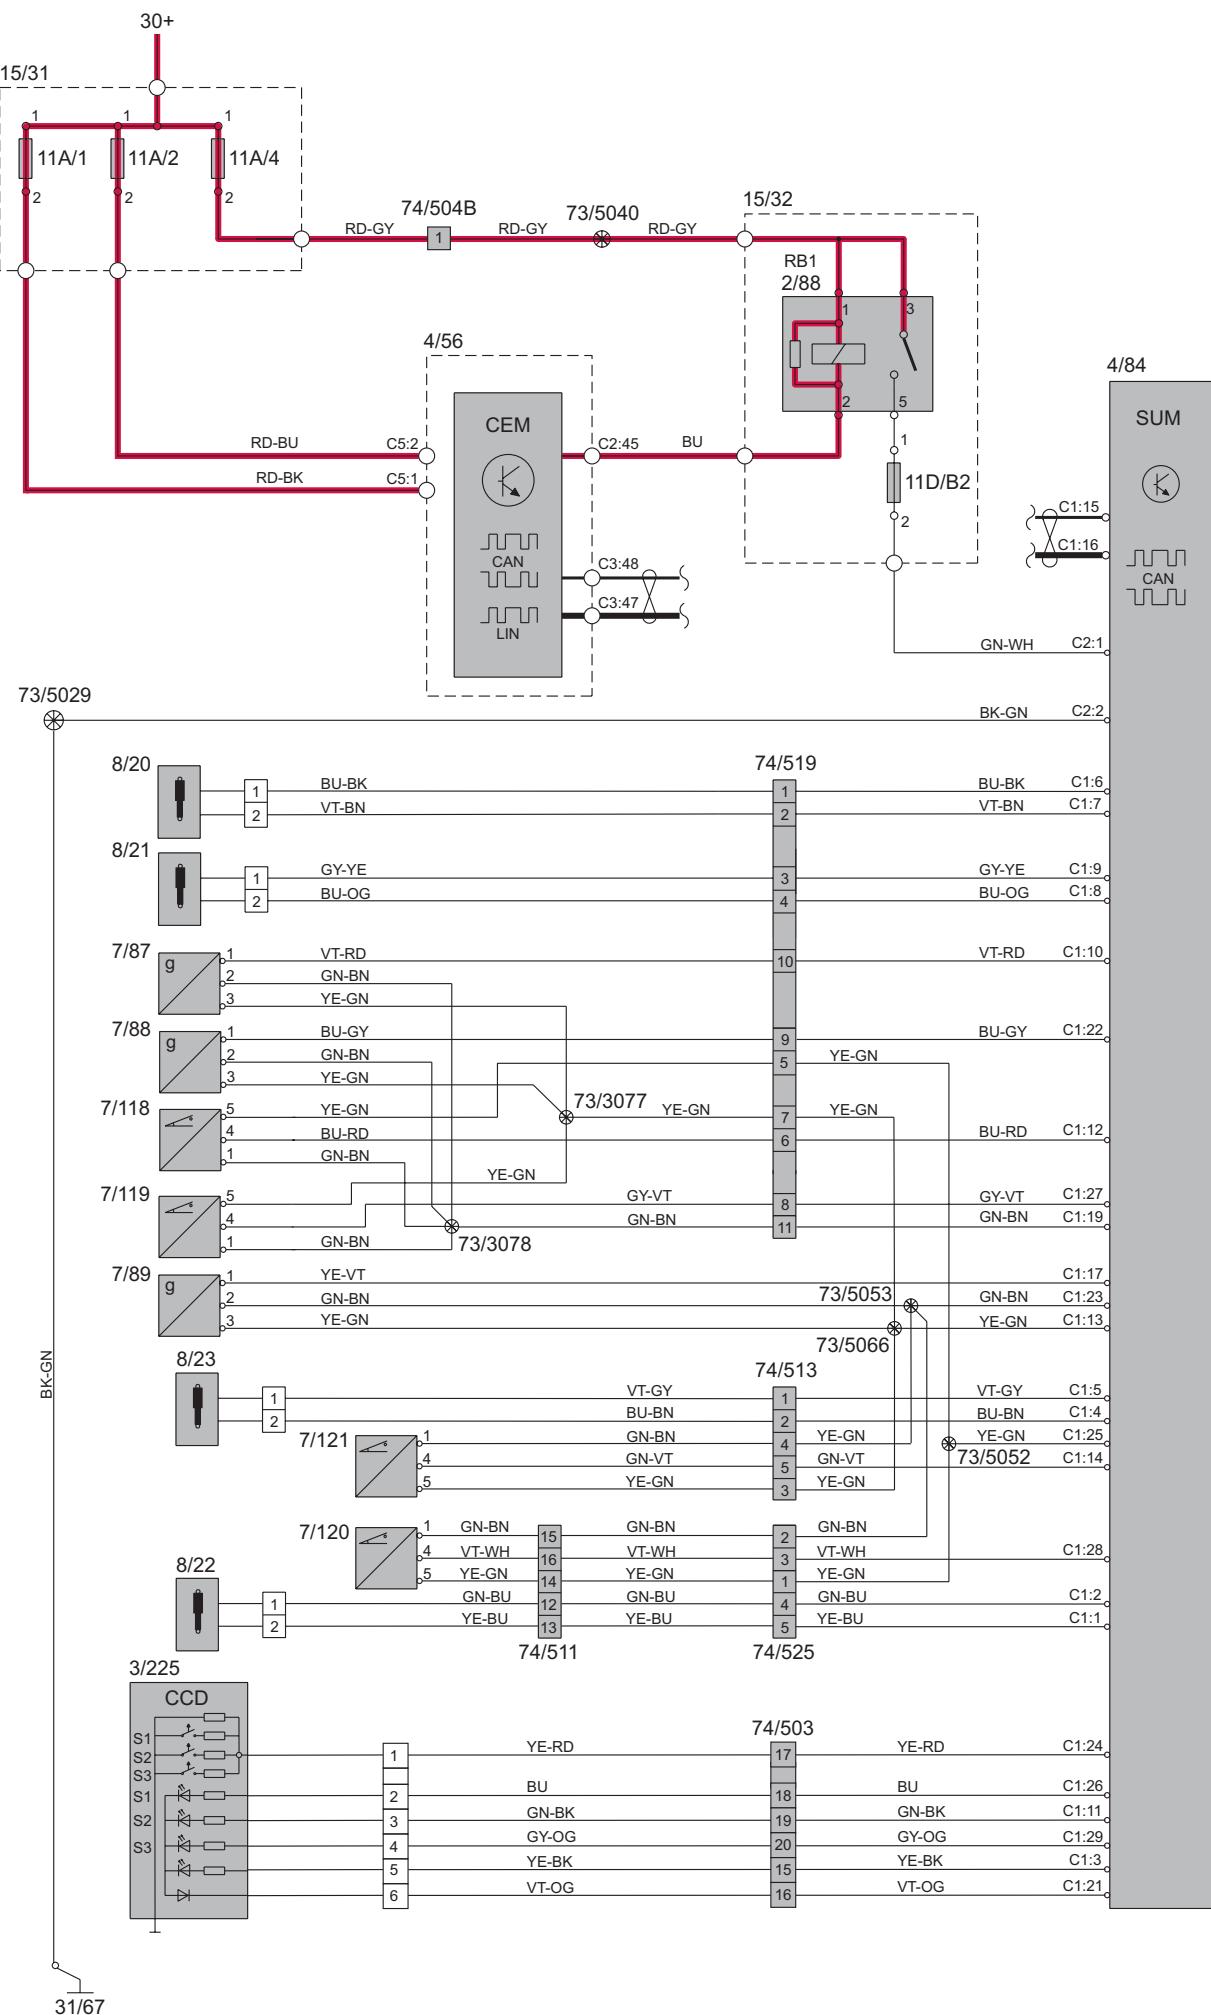


G029086

31/67


Group 83 Doors and openings

Central locking front doors LHD

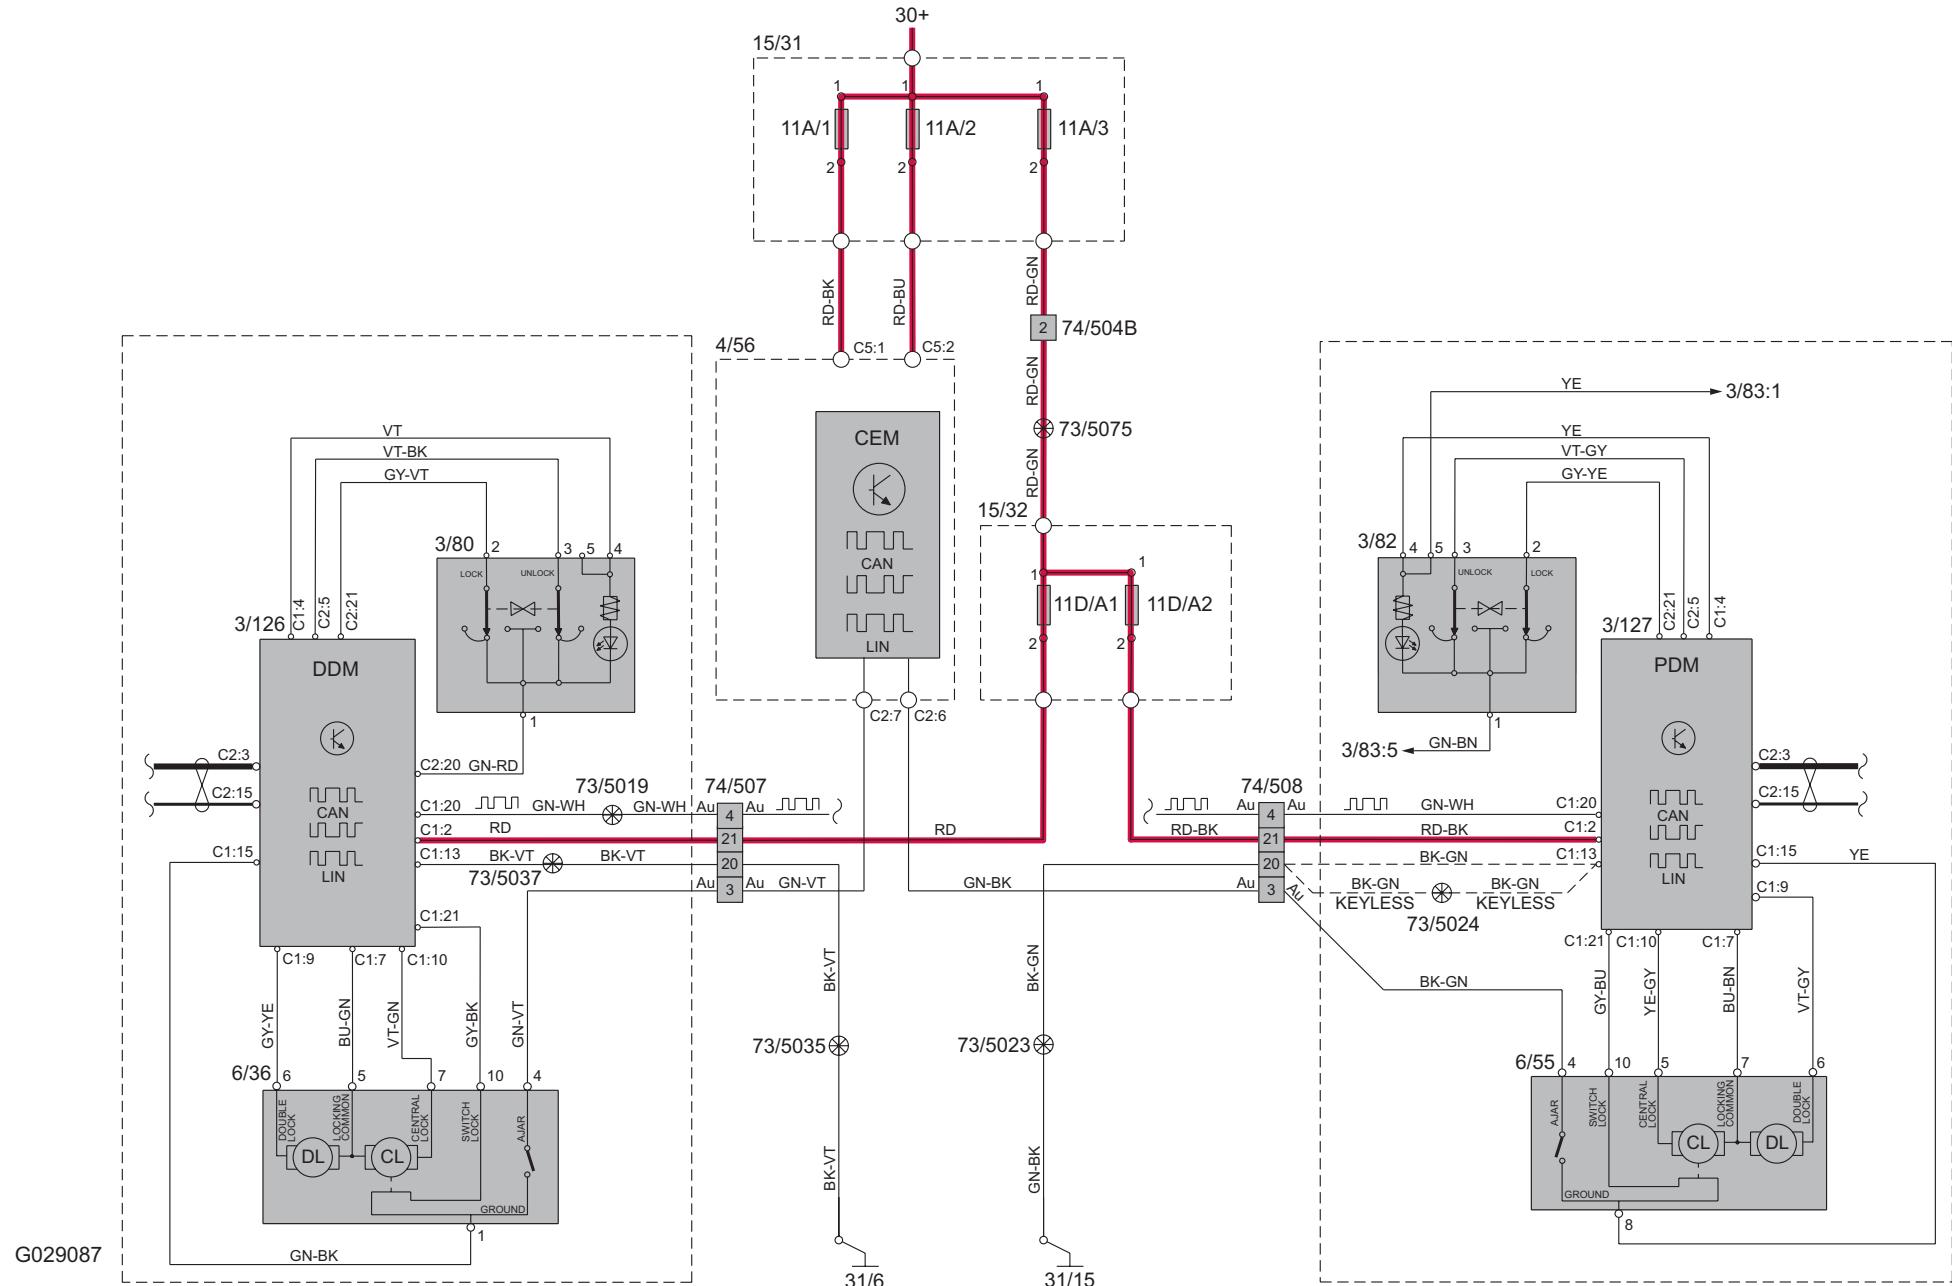


Group 83 Doors and openings


Central locking front doors RHD

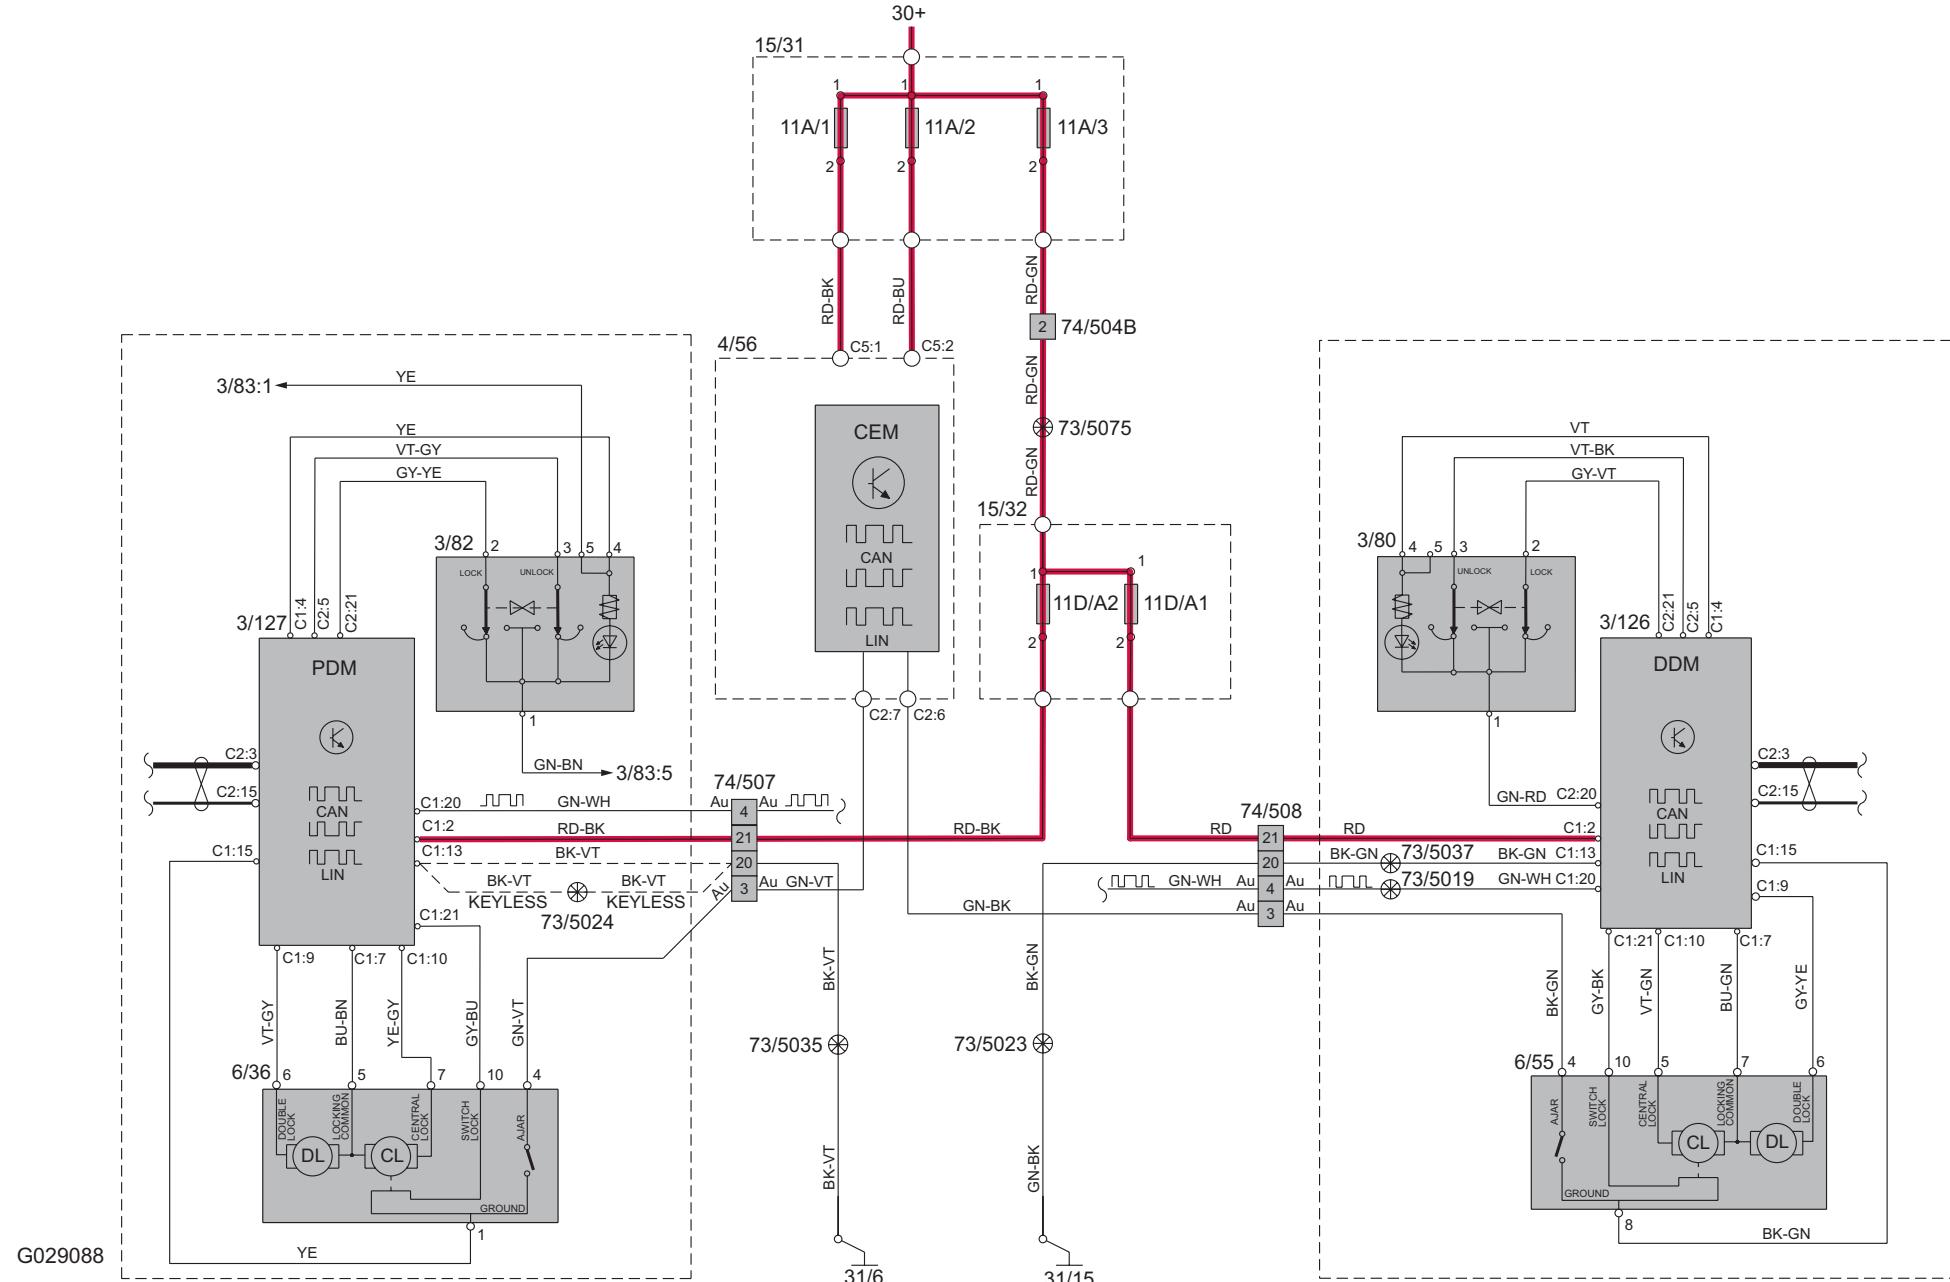

Group 83 Doors and openings Central locking rear doors

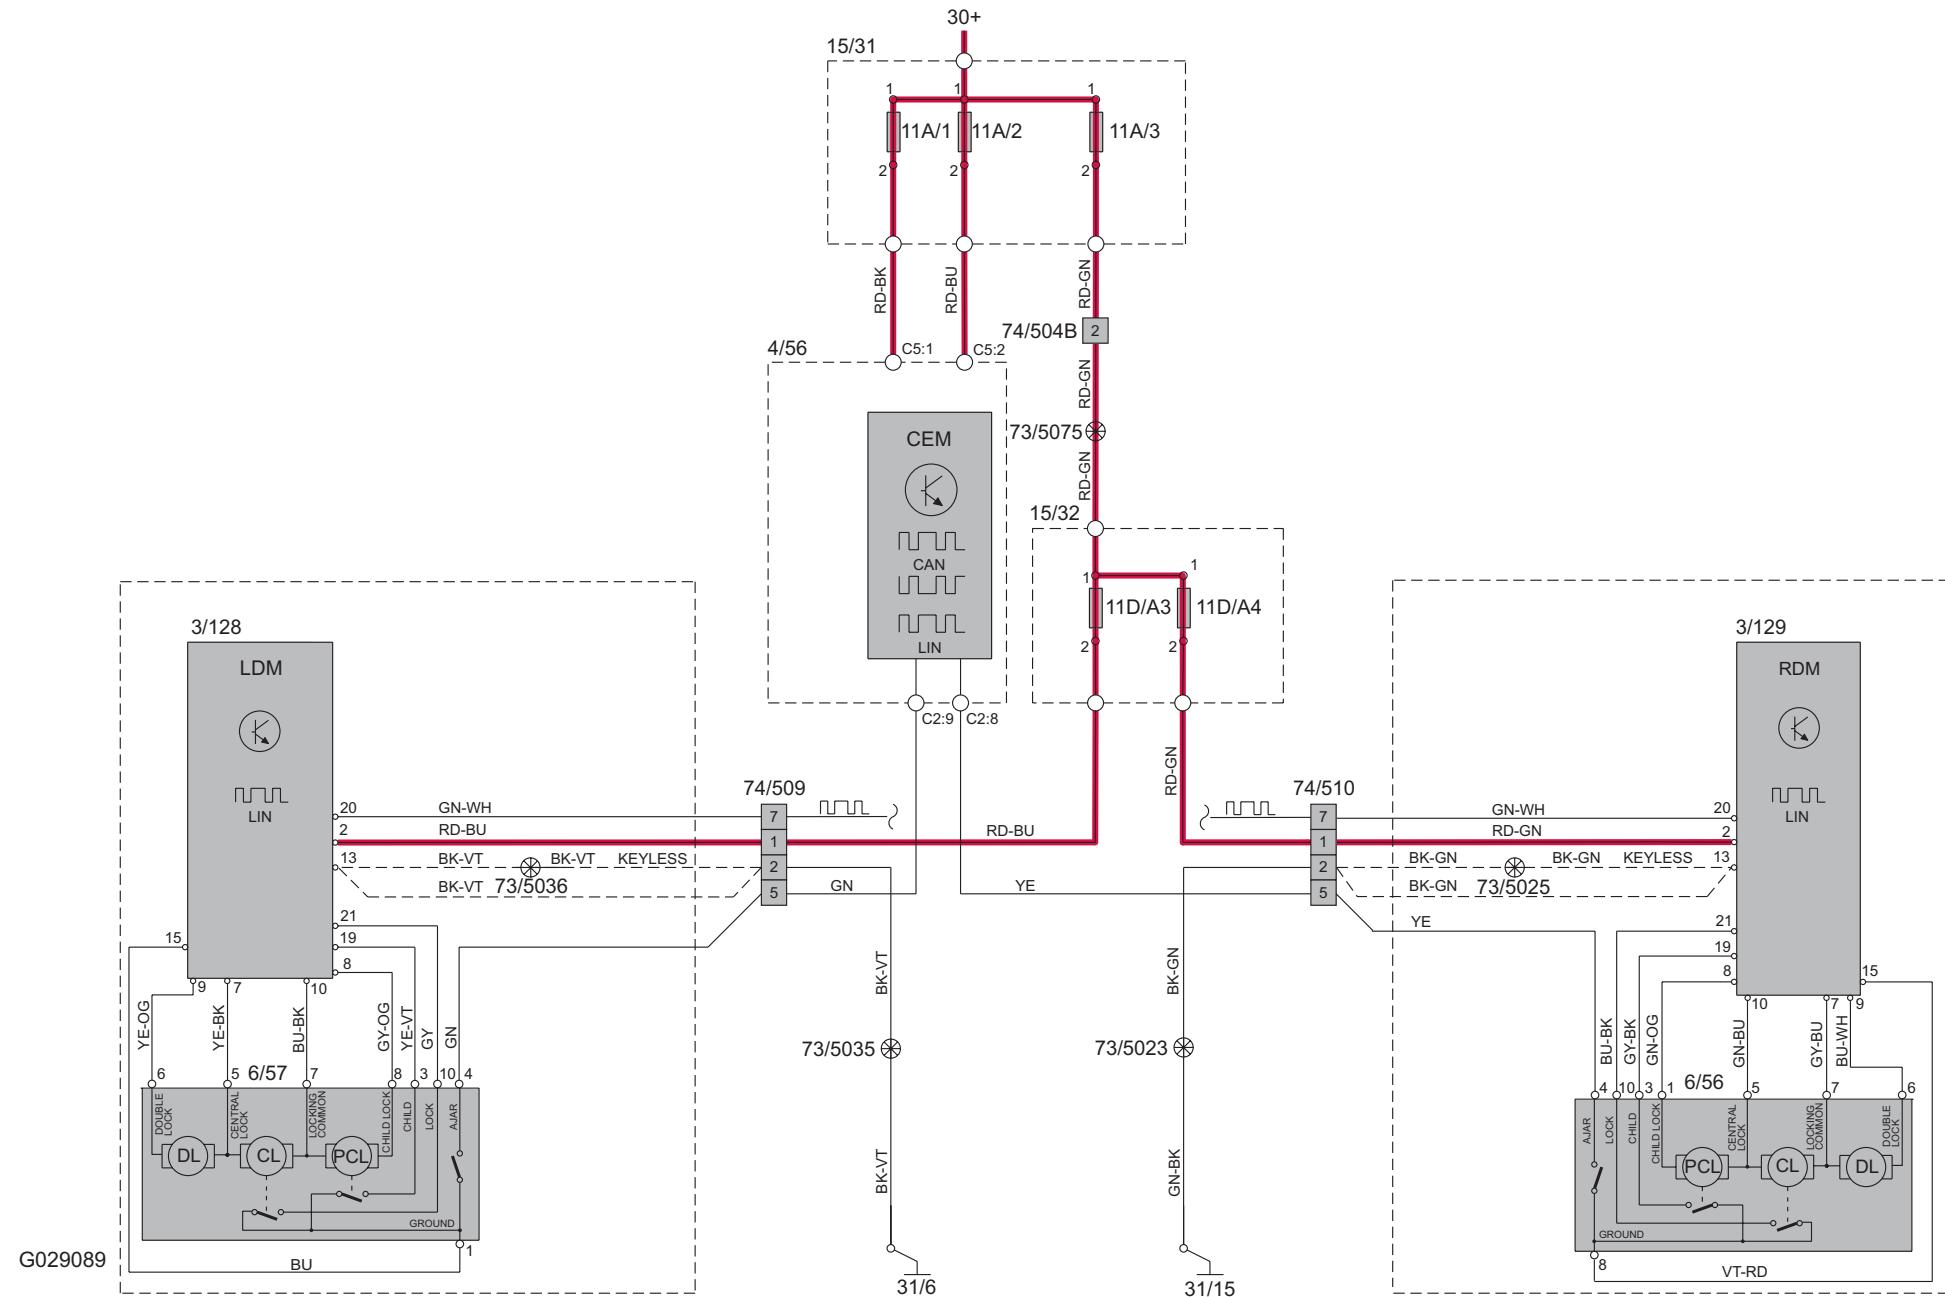


Group 83 Doors and openings Central locking trunk lid/tailgate V70

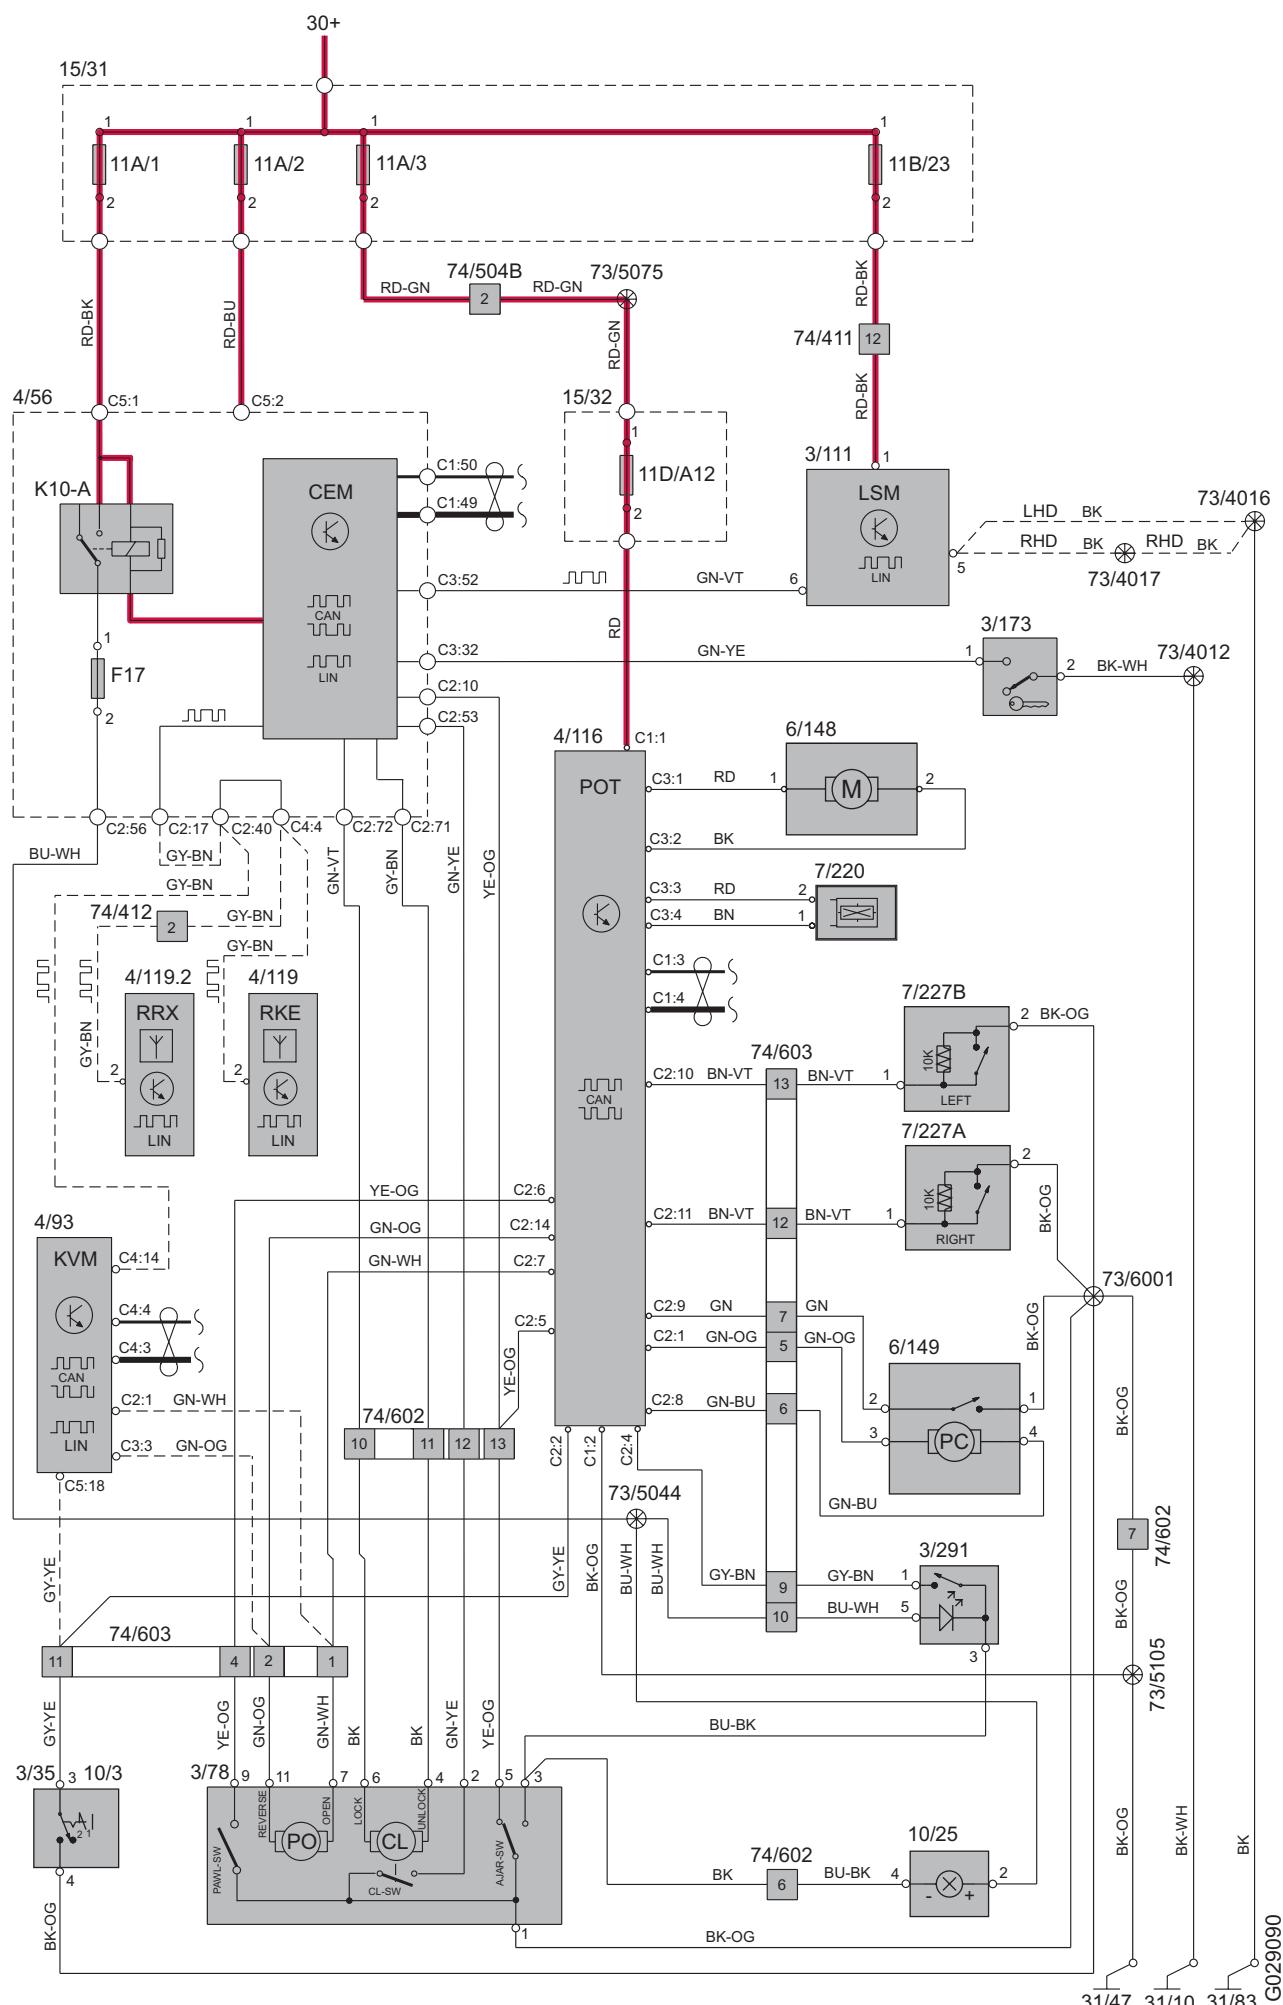


Group 83 Doors and openings

Central locking trunk lid/tailgate S80

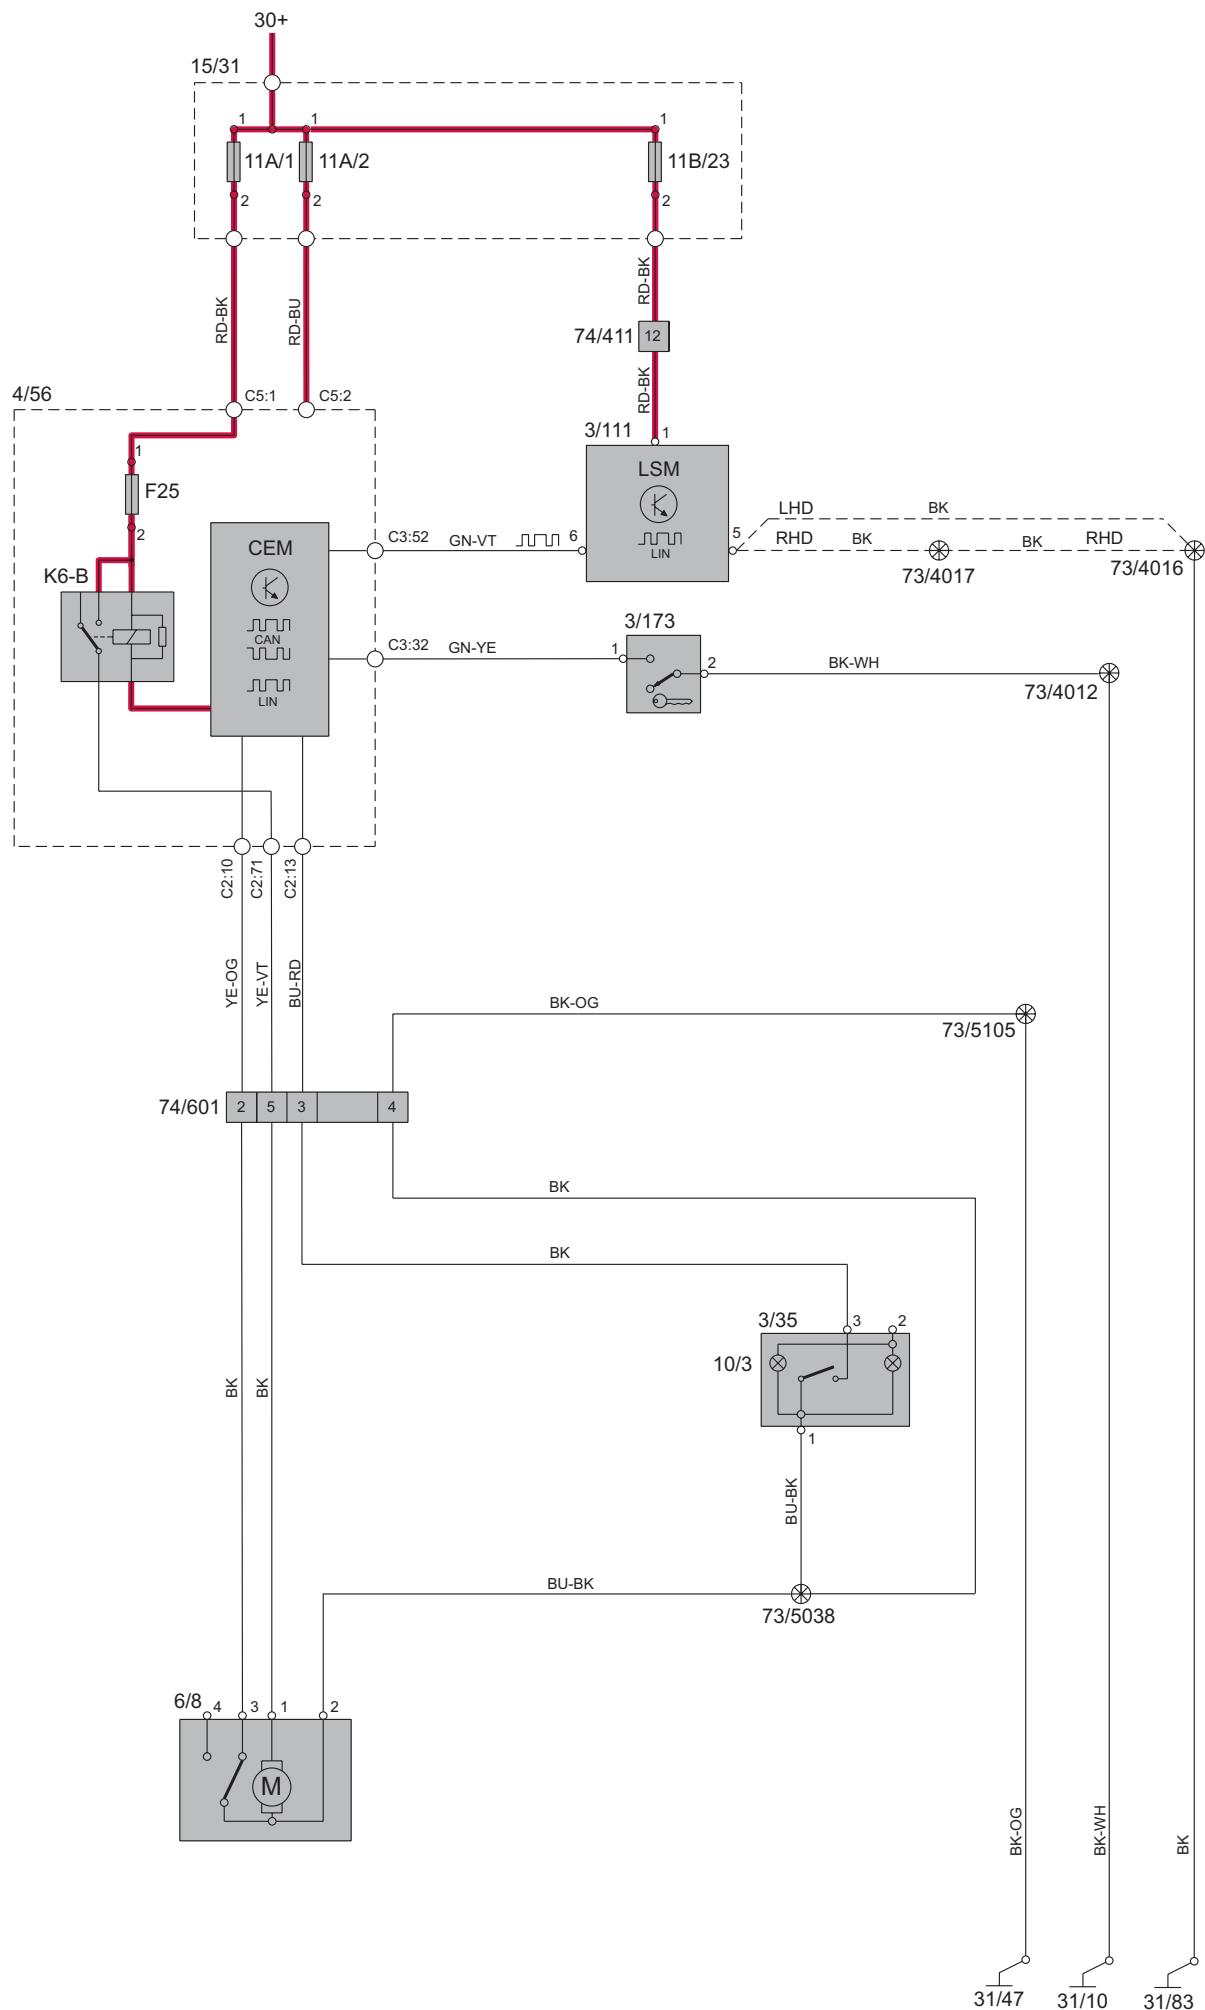


Group 83 Doors and openings

Central locking fuel filler flap

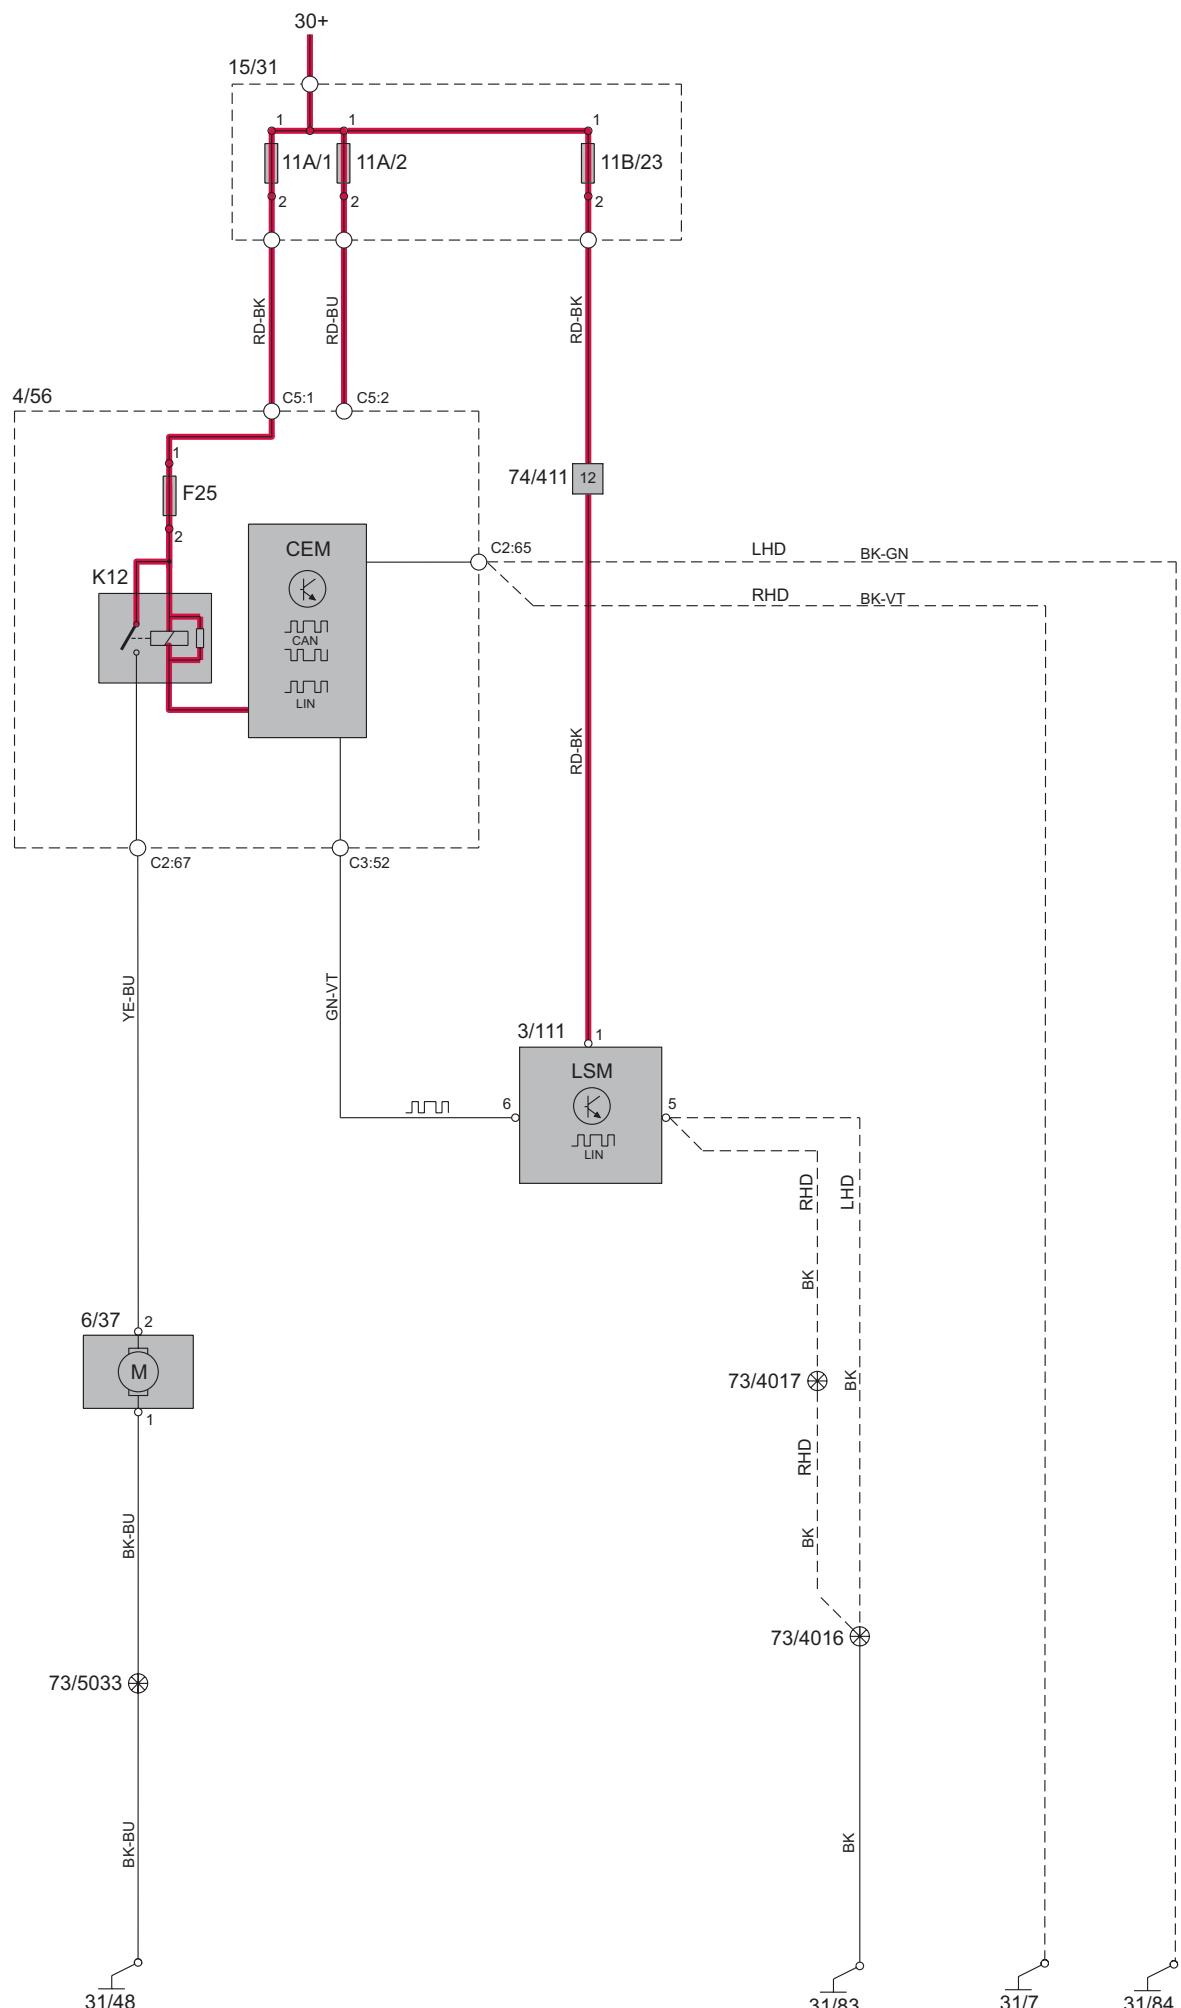


Group 83 Doors and openings

Signal receiver central locking

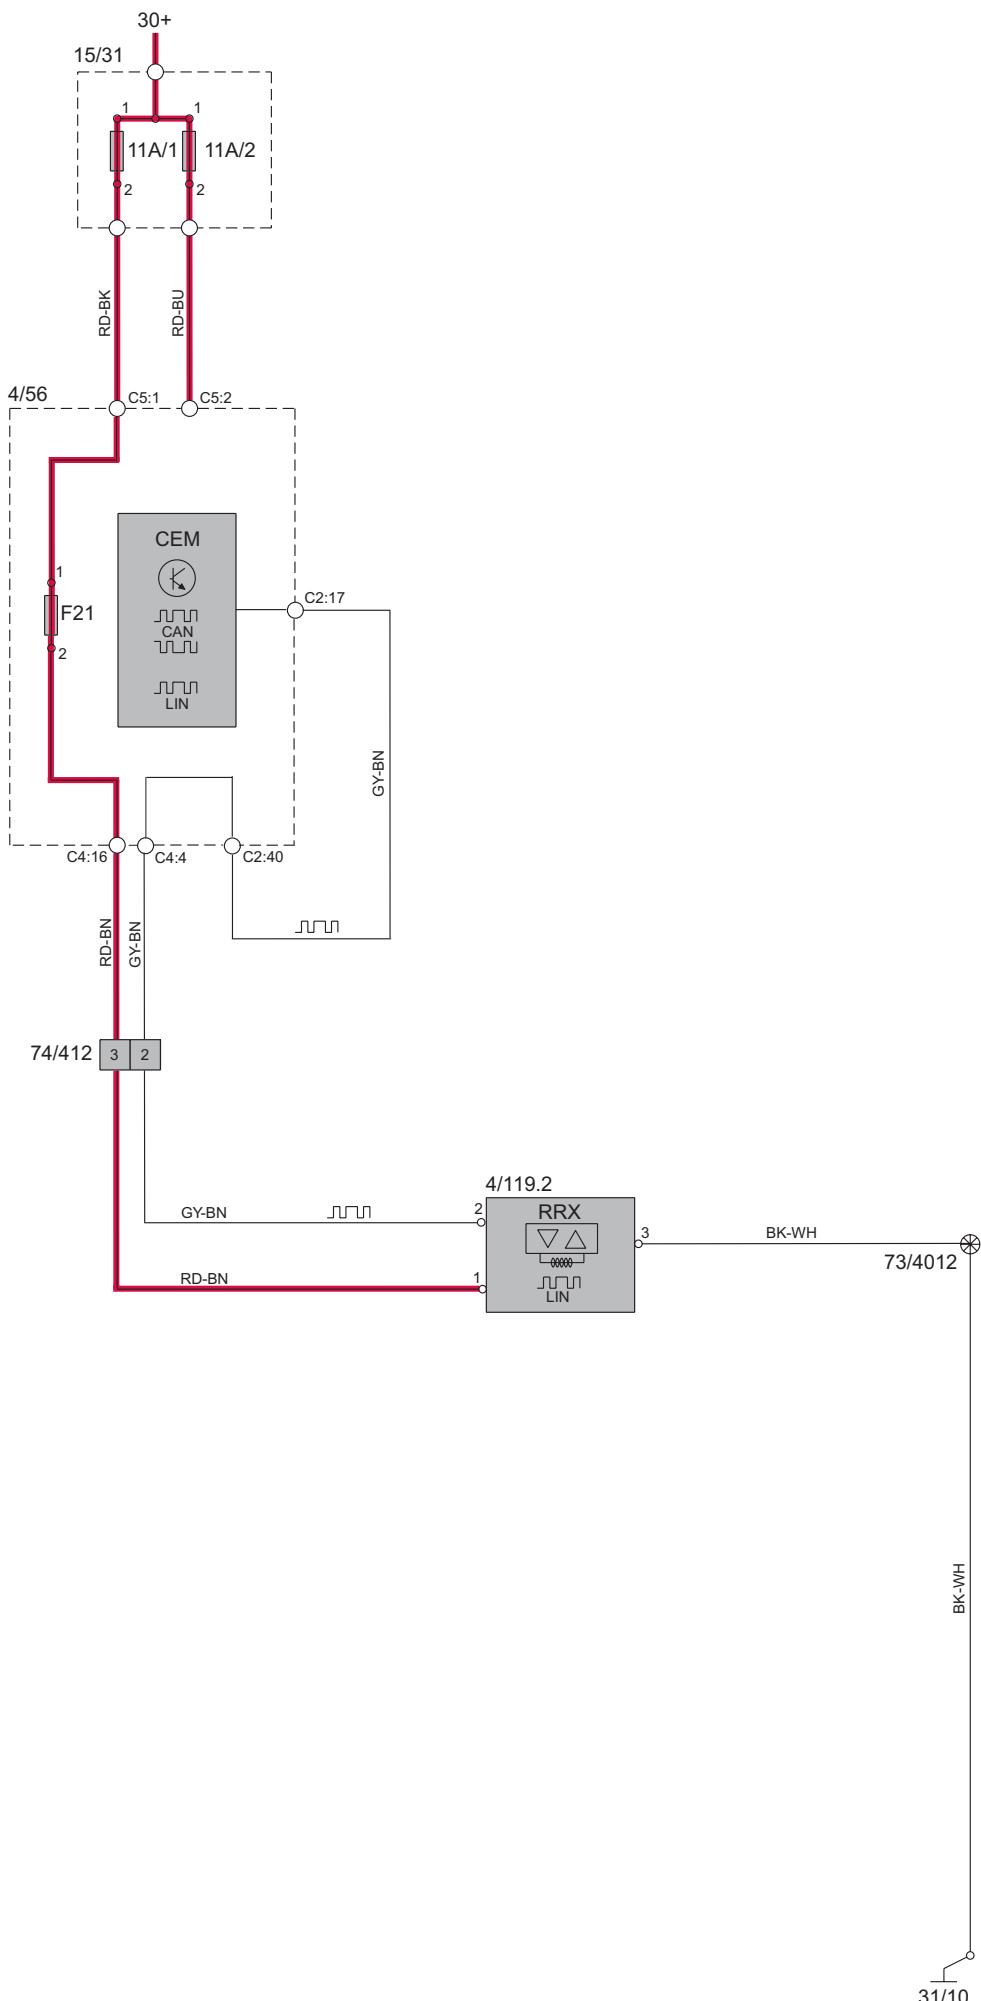


G029094

Group 83 Doors and openings Power windows front doors LHD

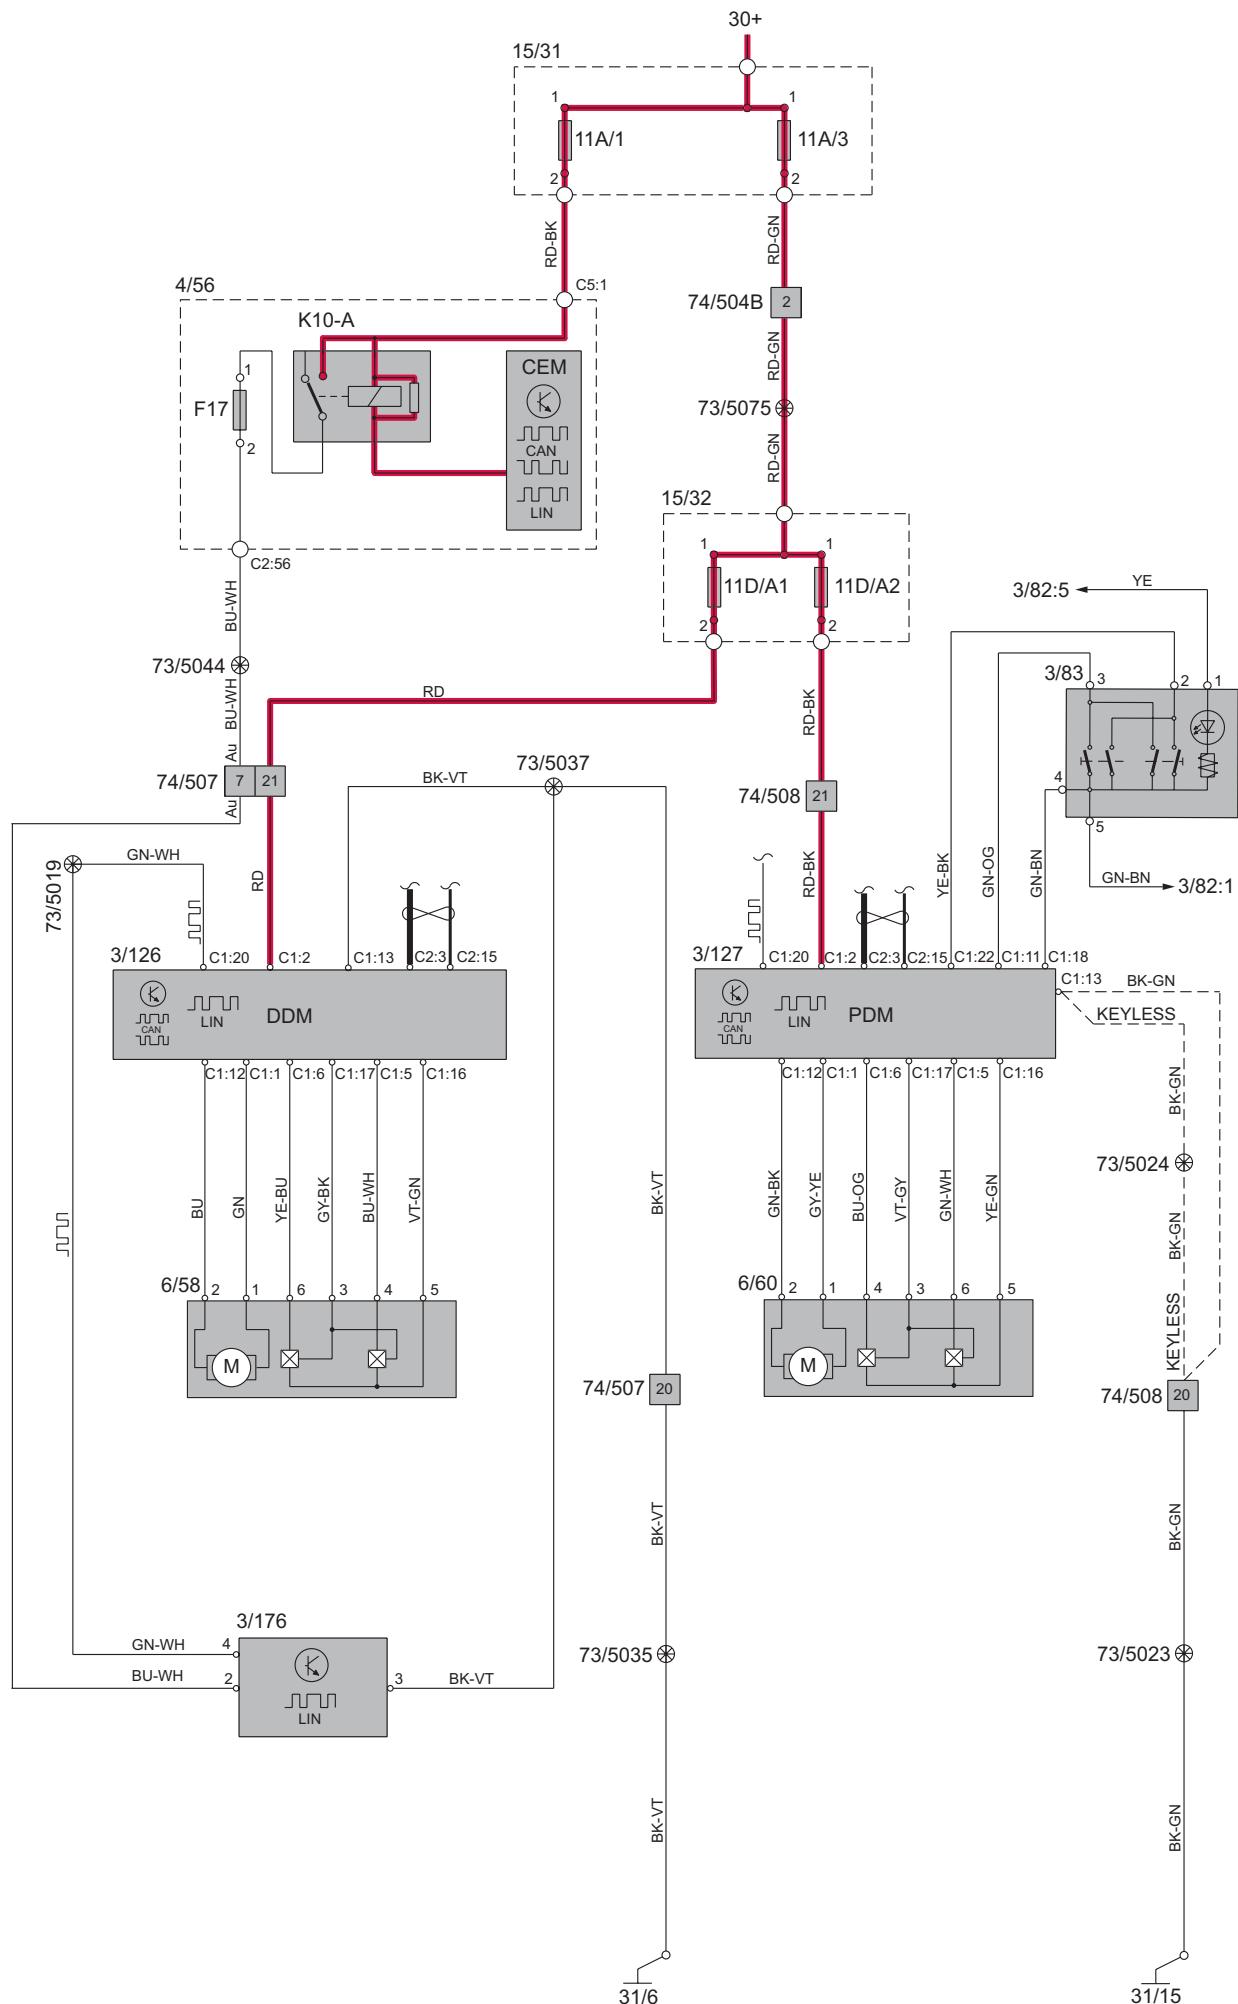


Group 83 Doors and openings Power windows front doors RHD

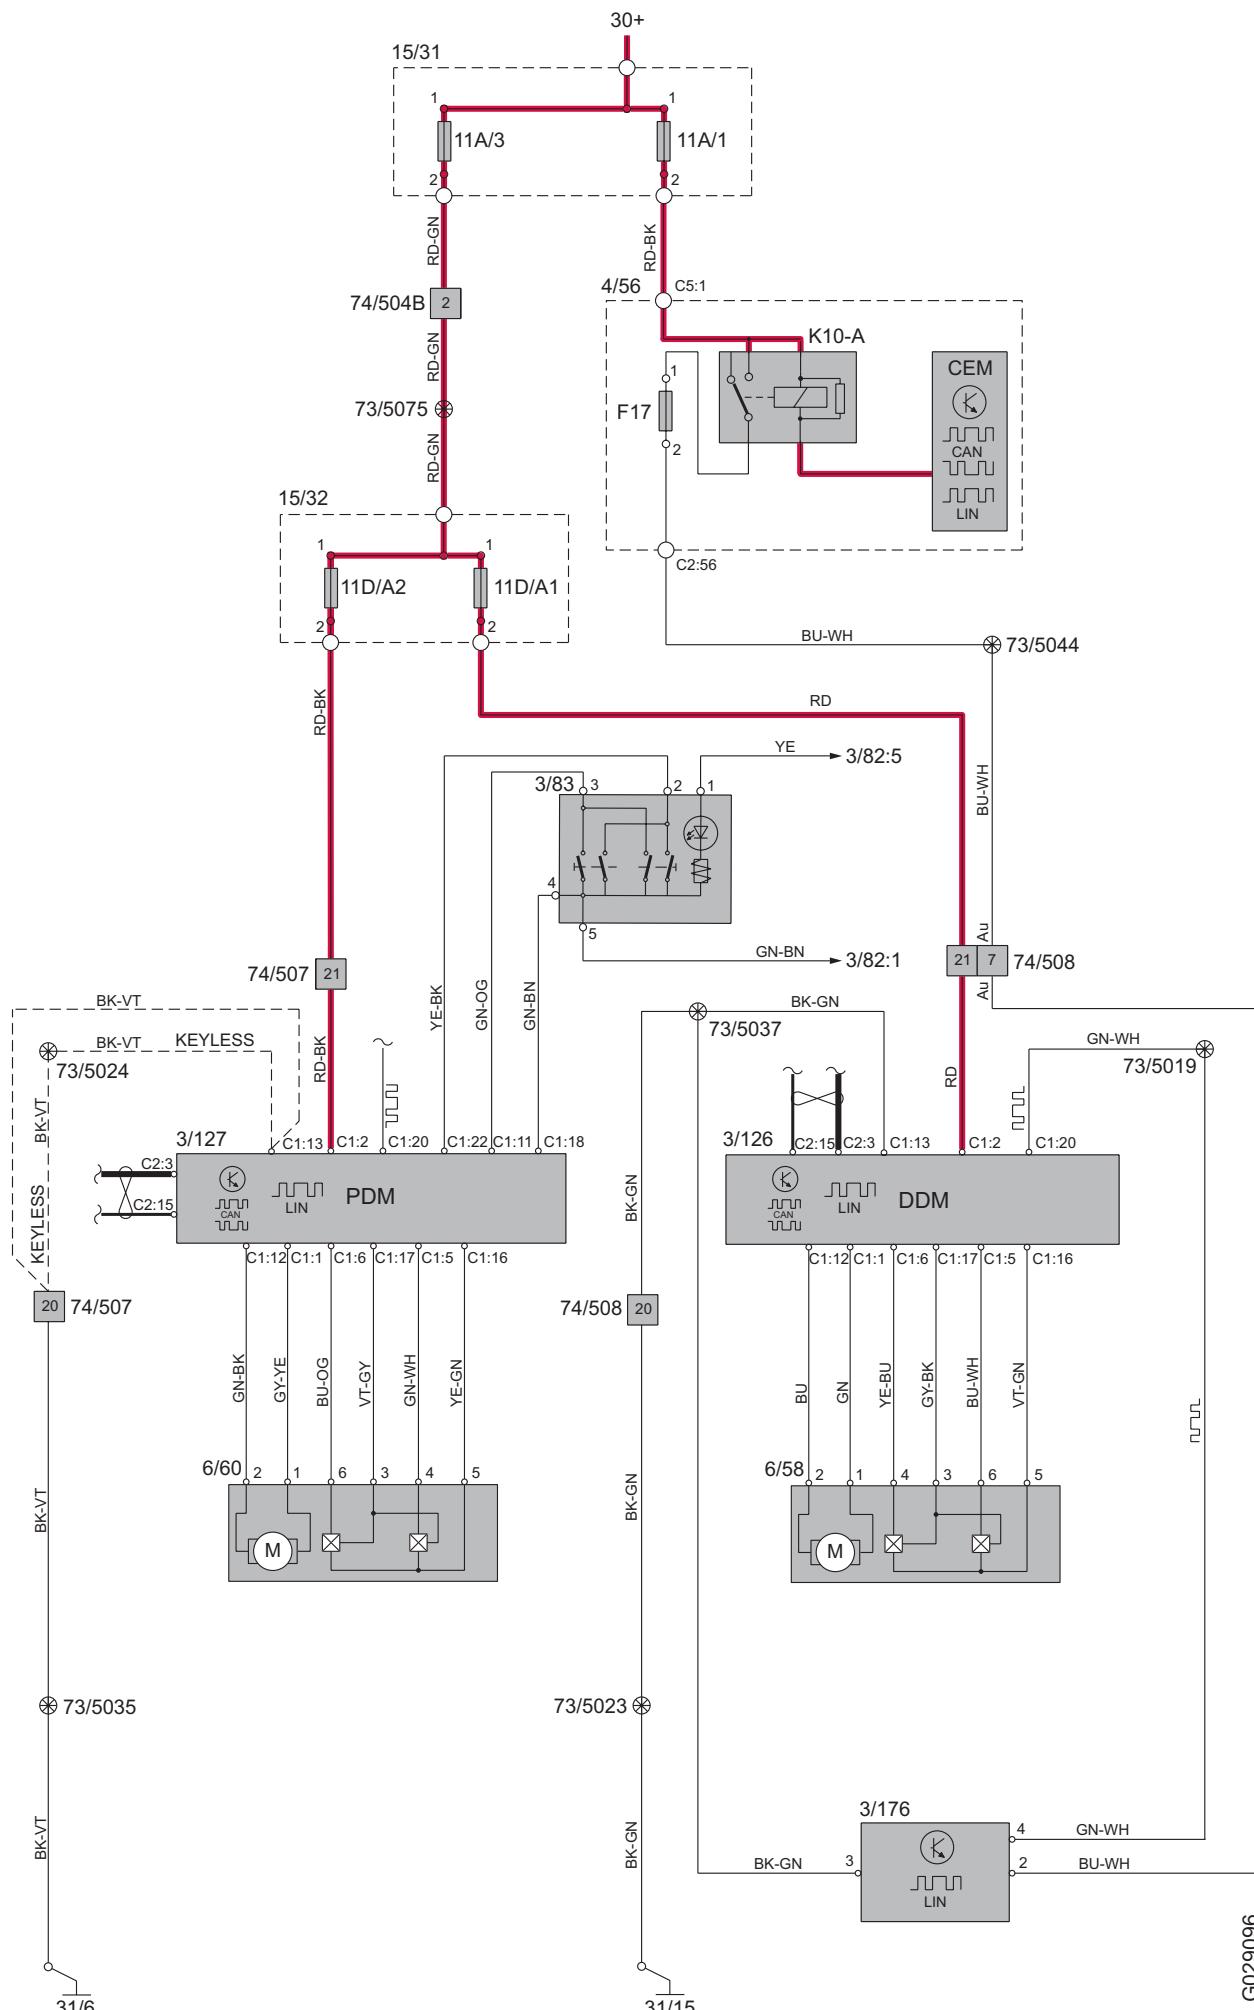


Group 83 Doors and openings

Power windows rear doors

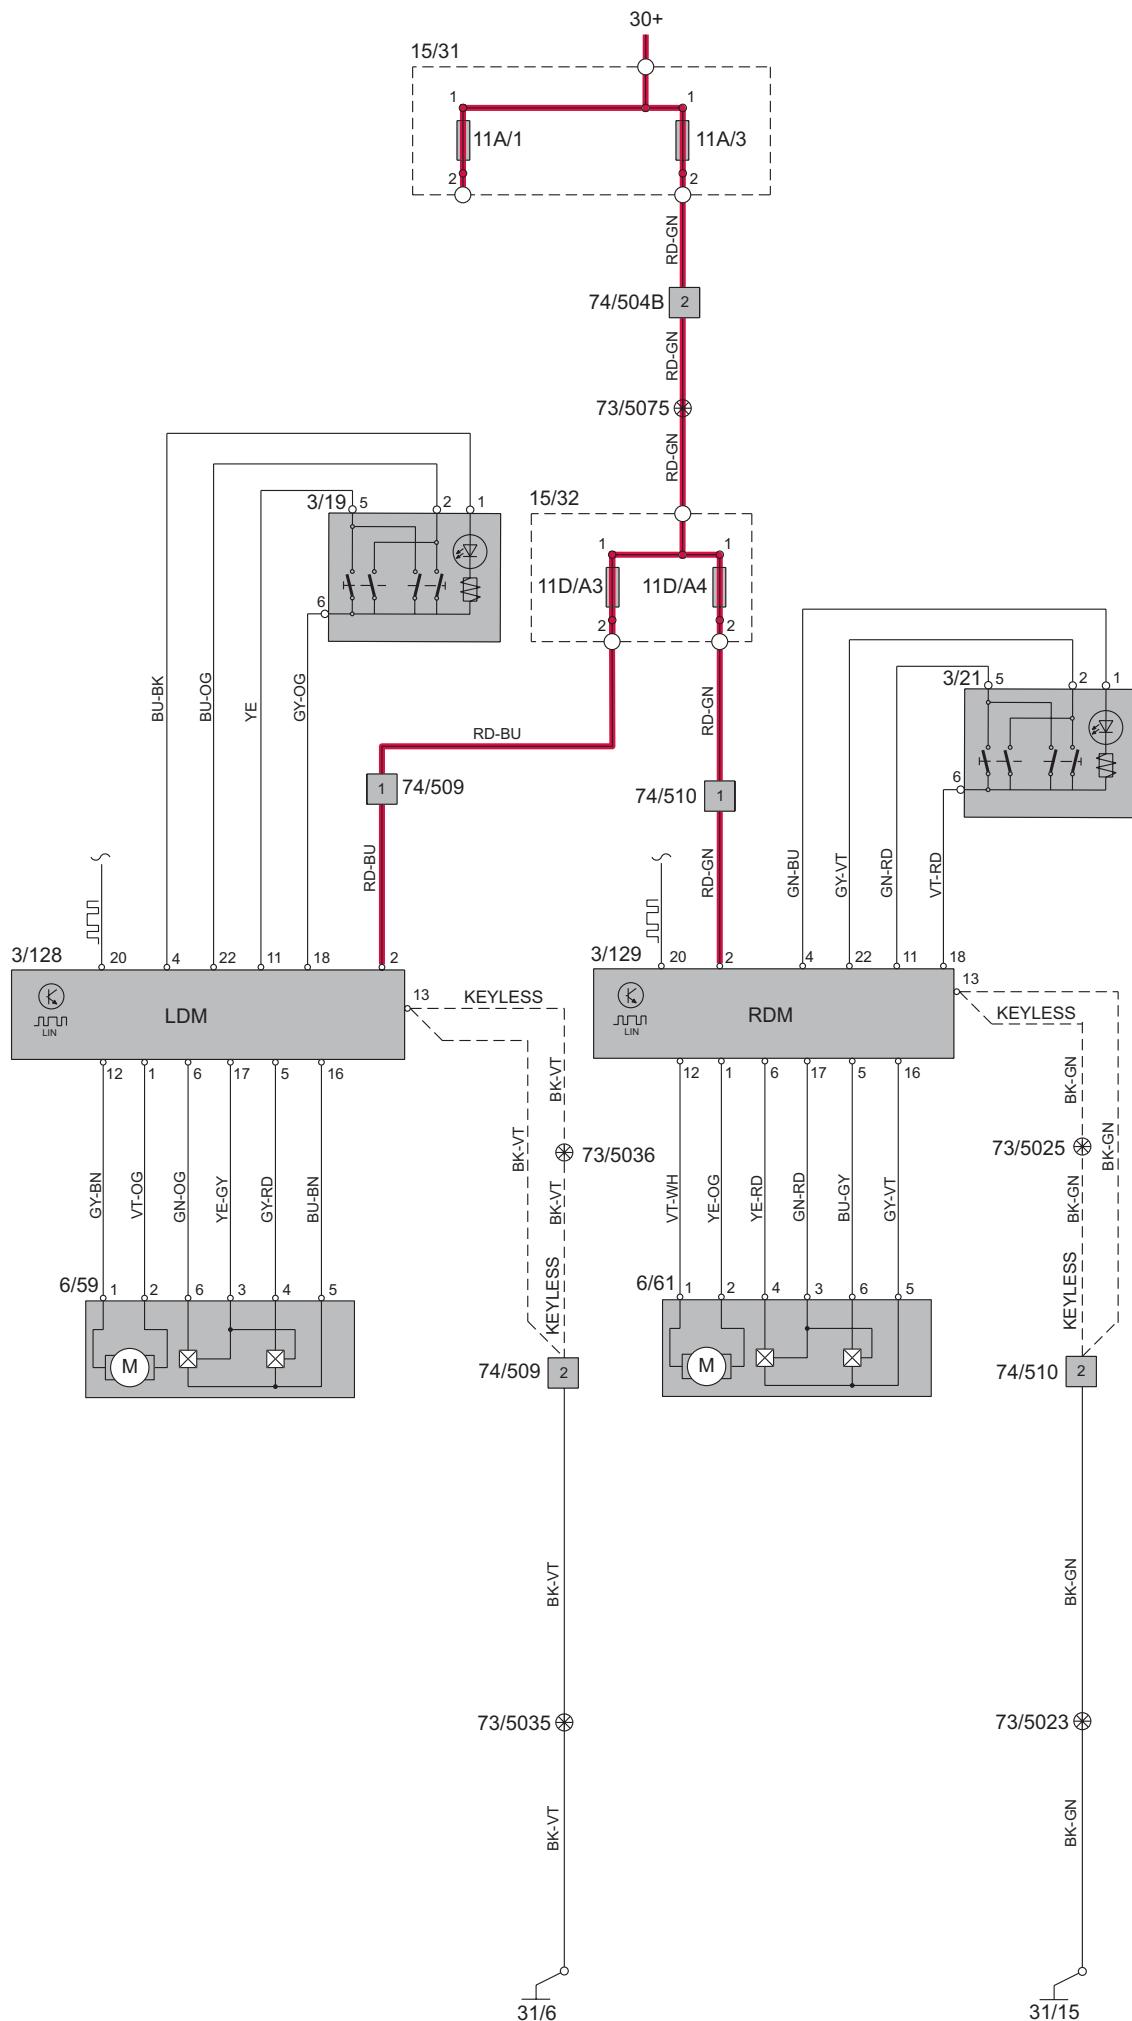


Group 83 Doors and openings

Power sunroof

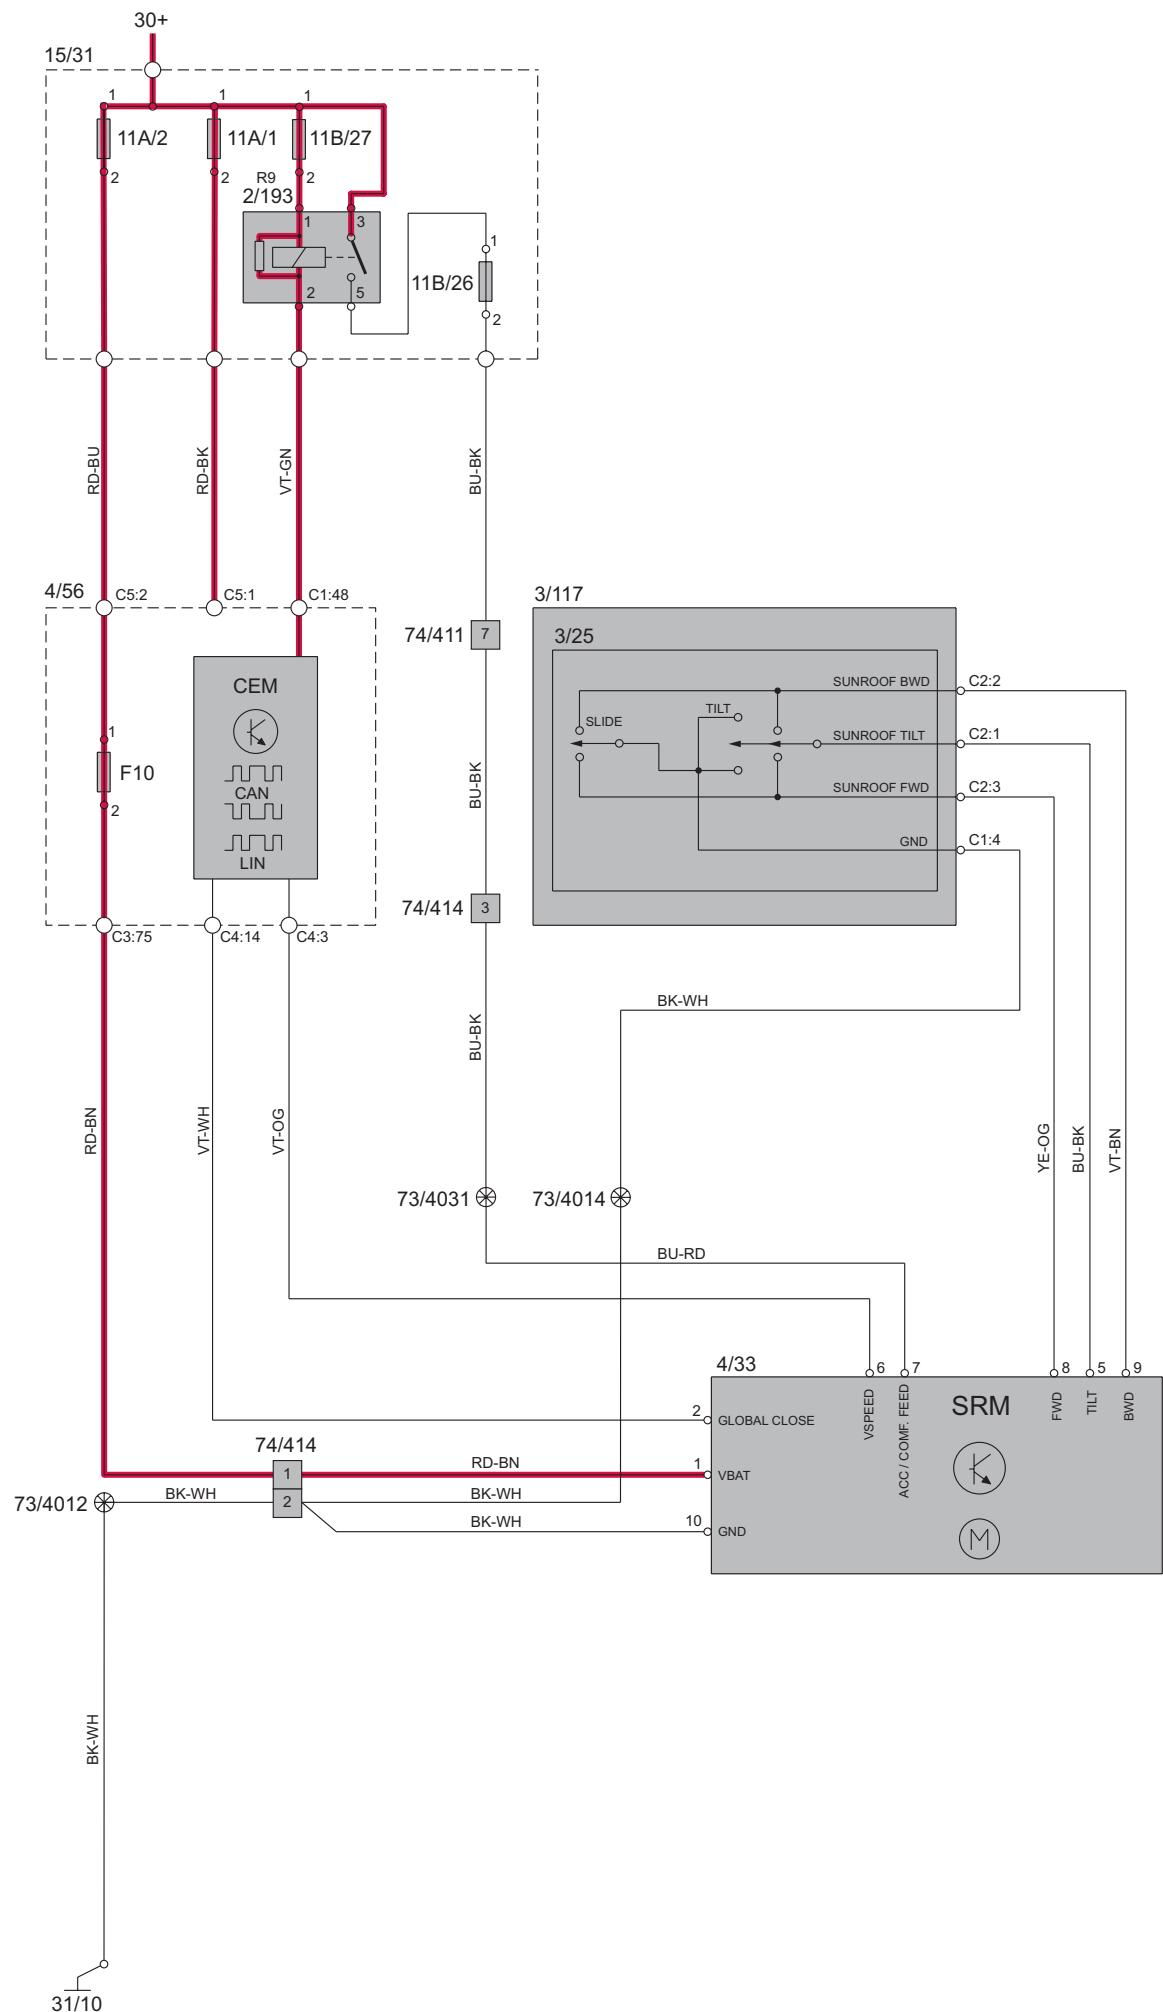


Group 84 Exterior decorative elements, etc.

Power door mirrors LHD

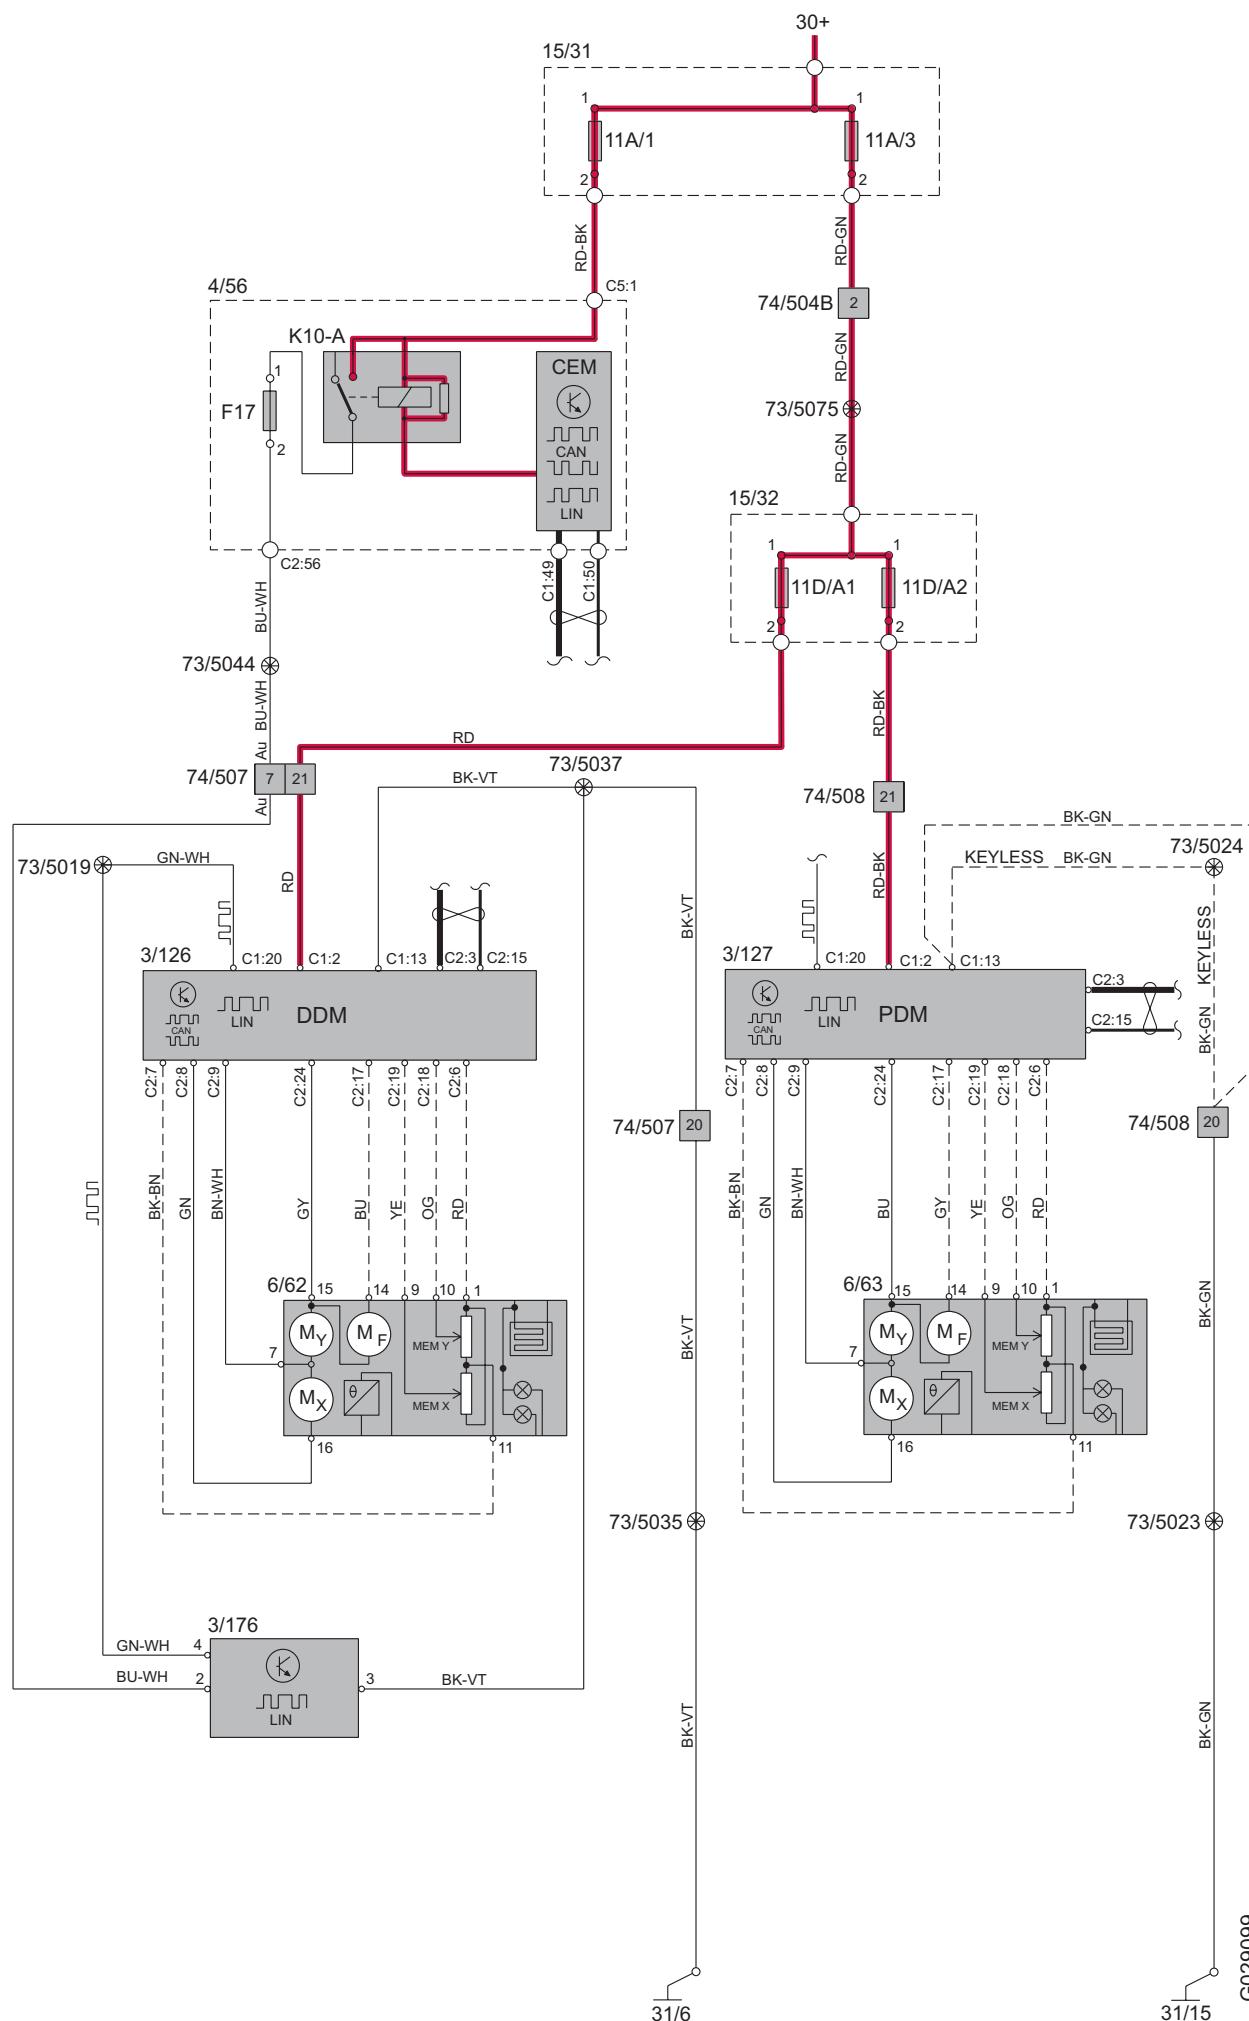


Group 84 Exterior decorative elements, etc.

Power door mirrors RHD

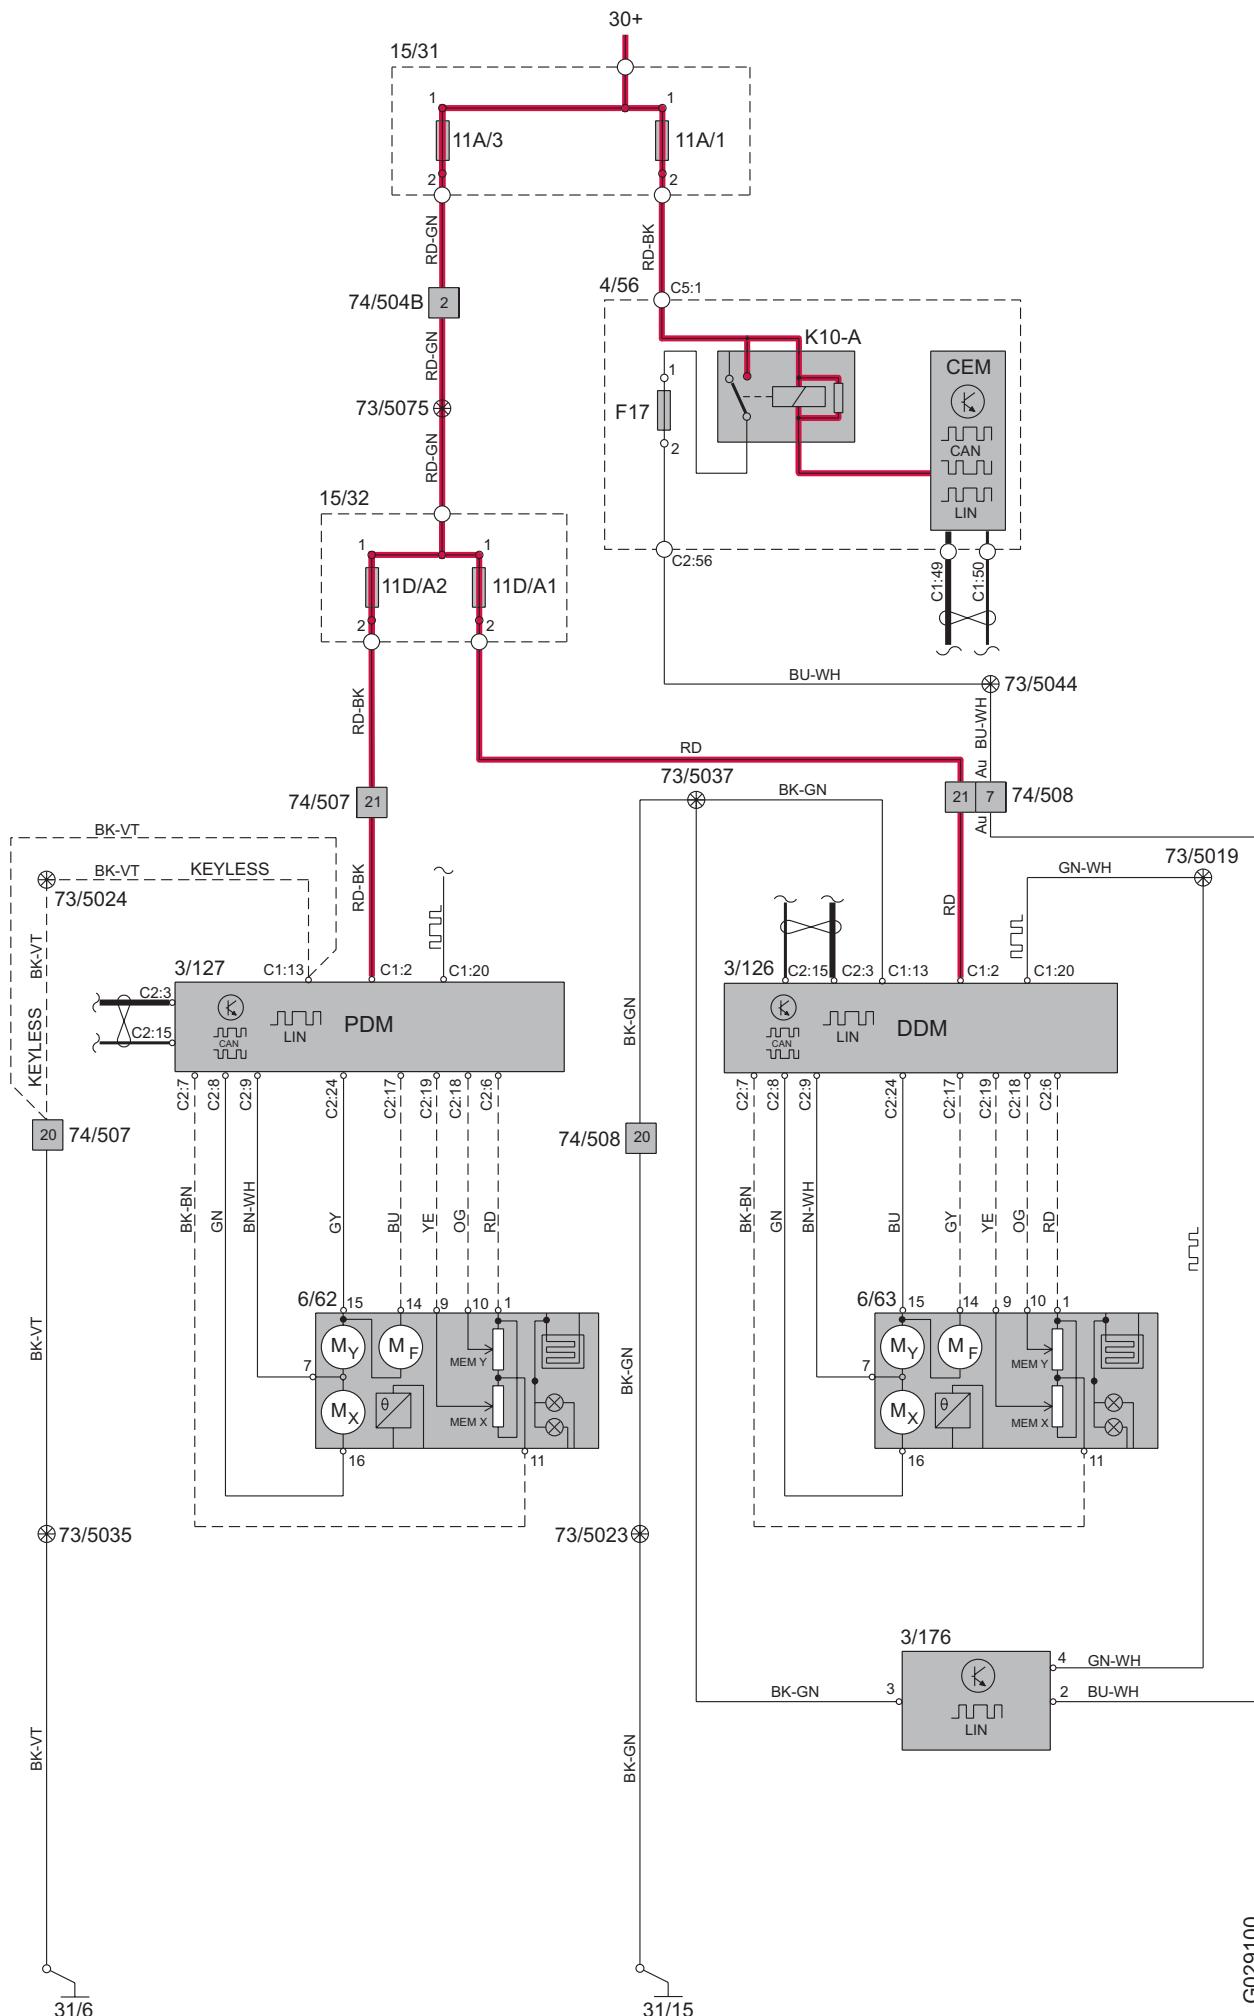


G029100

Group 84 Exterior decorative elements, etc. Heated door mirrors LHD

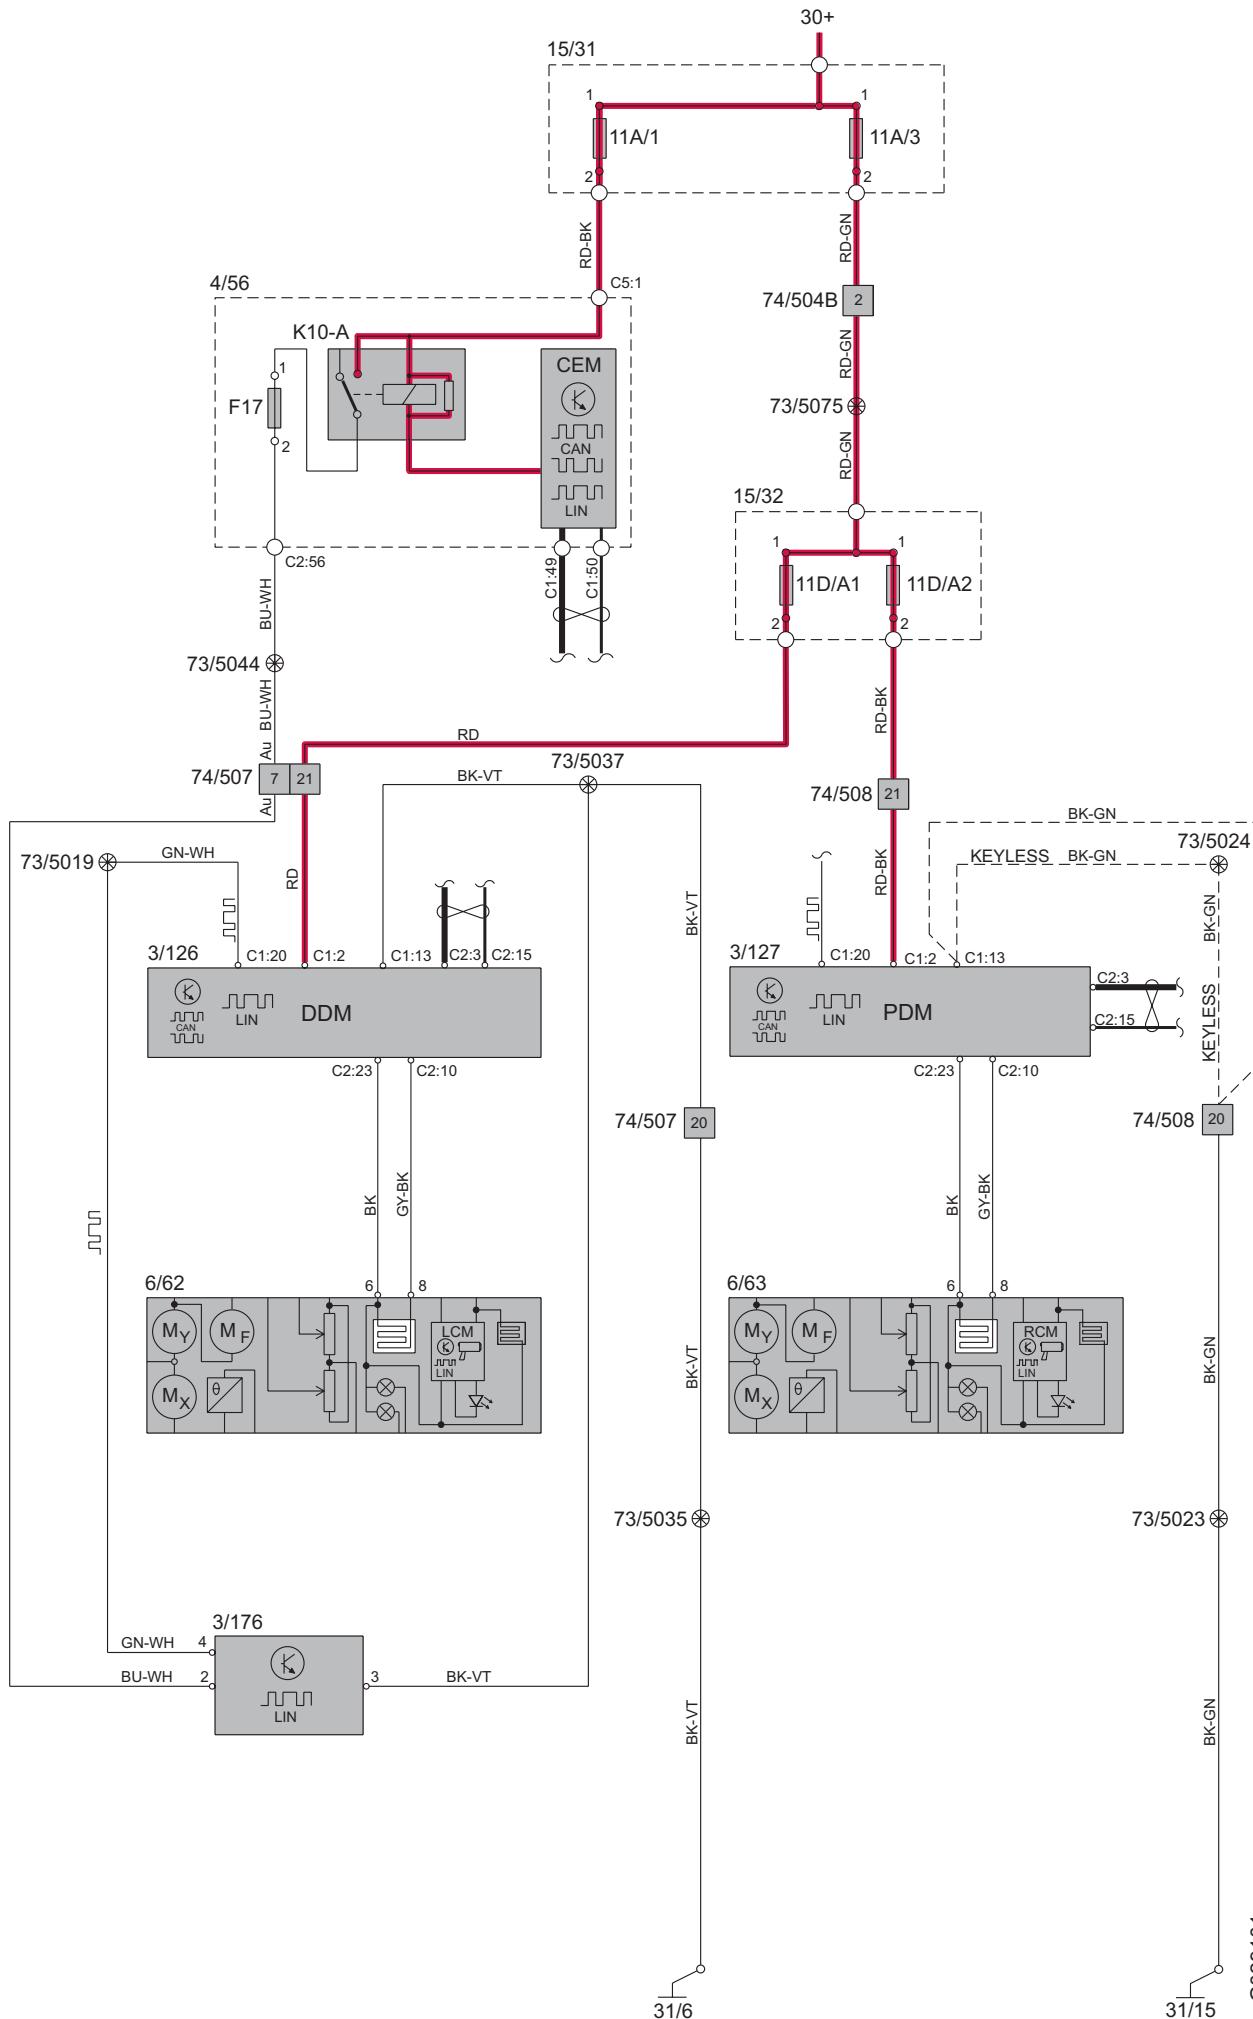


Group 84 Exterior decorative elements, etc.

Heated door mirrors RHD

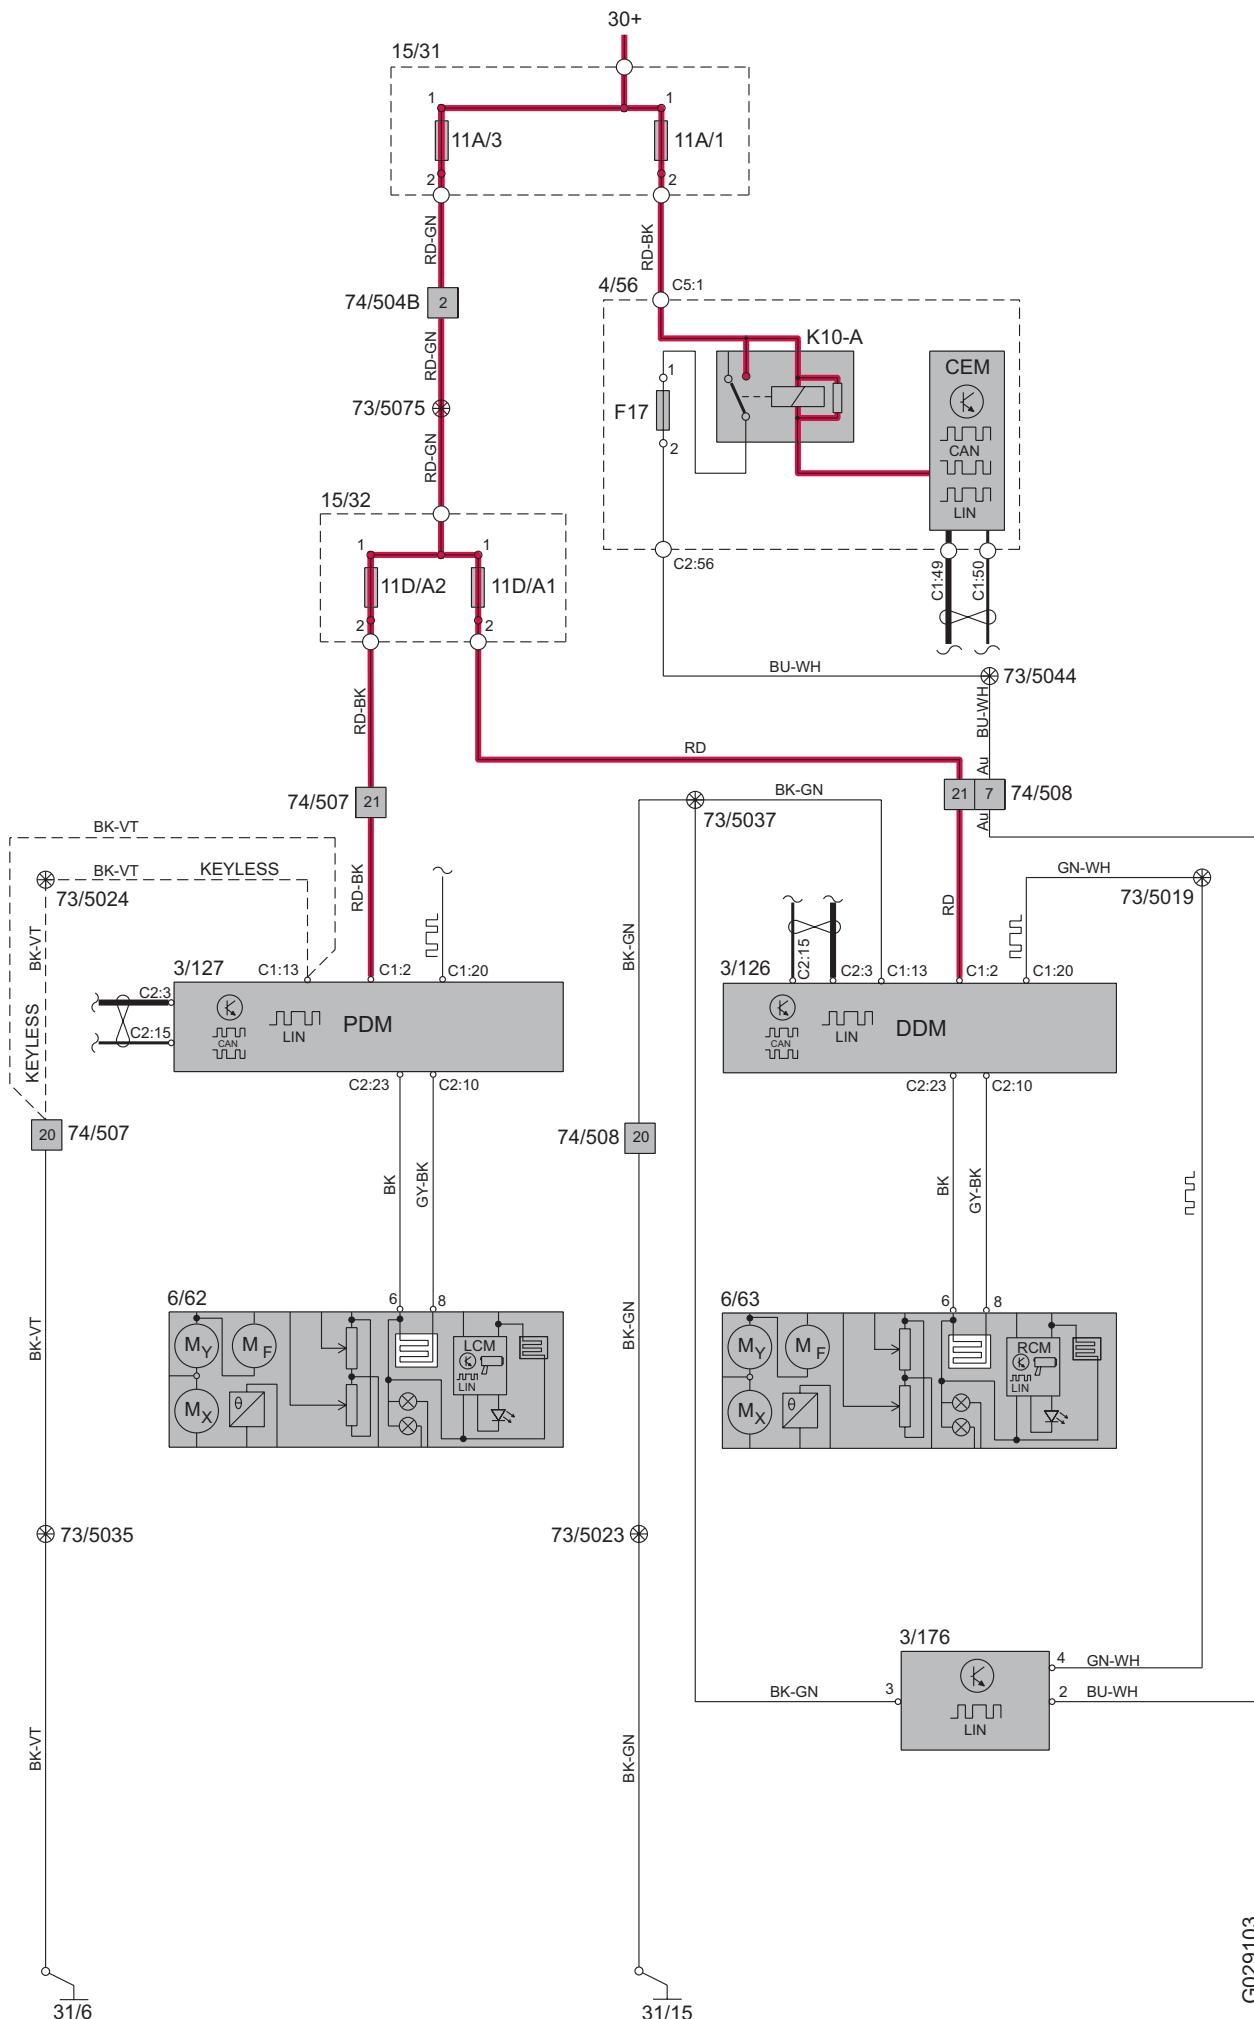


Group 84 Exterior decorative elements, etc.

Blind spot information system LHD

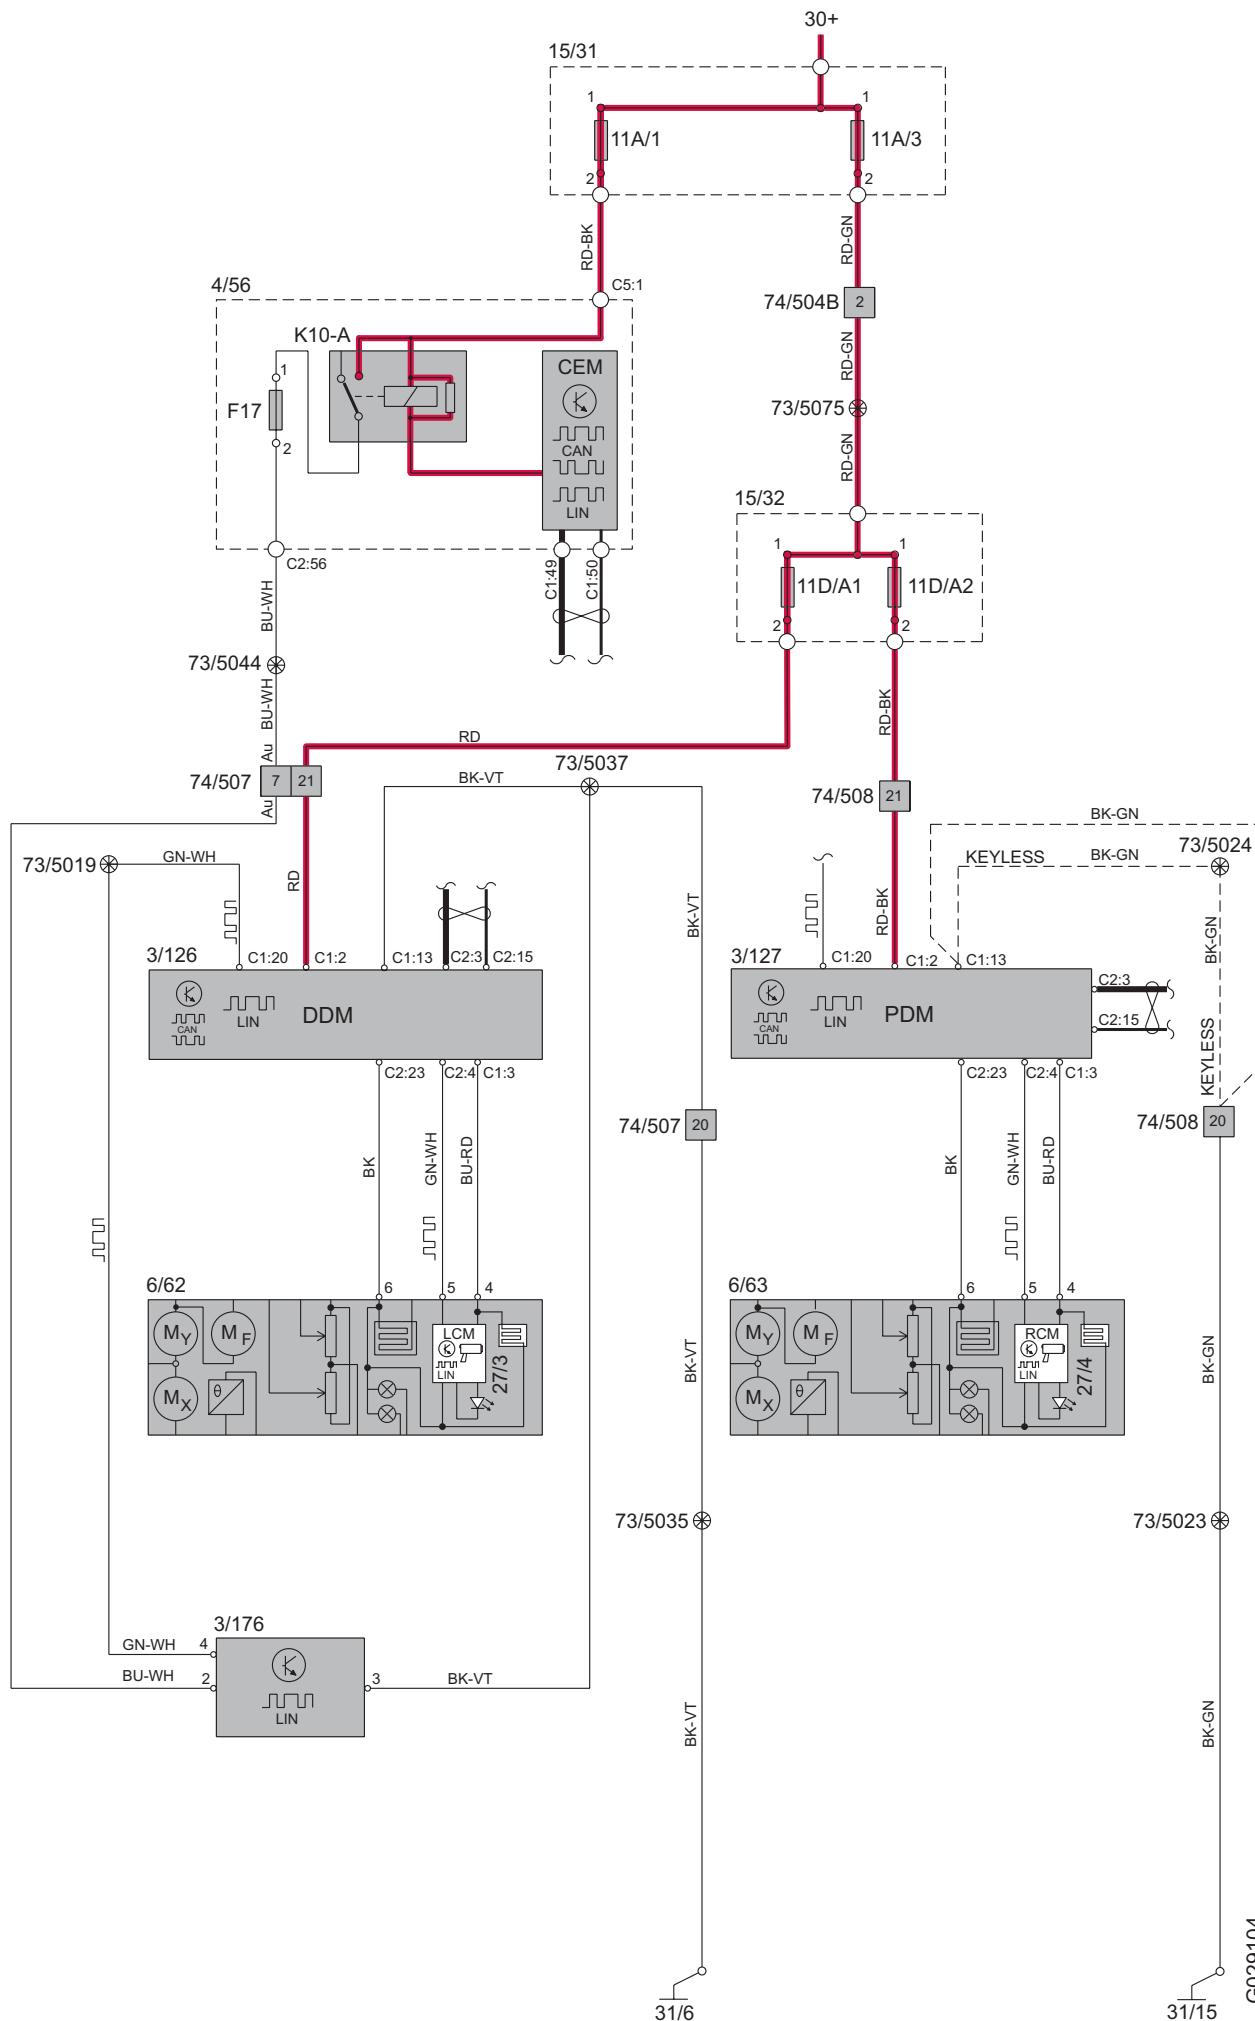


Group 84 Exterior decorative elements, etc.

Blind spot information system RHD

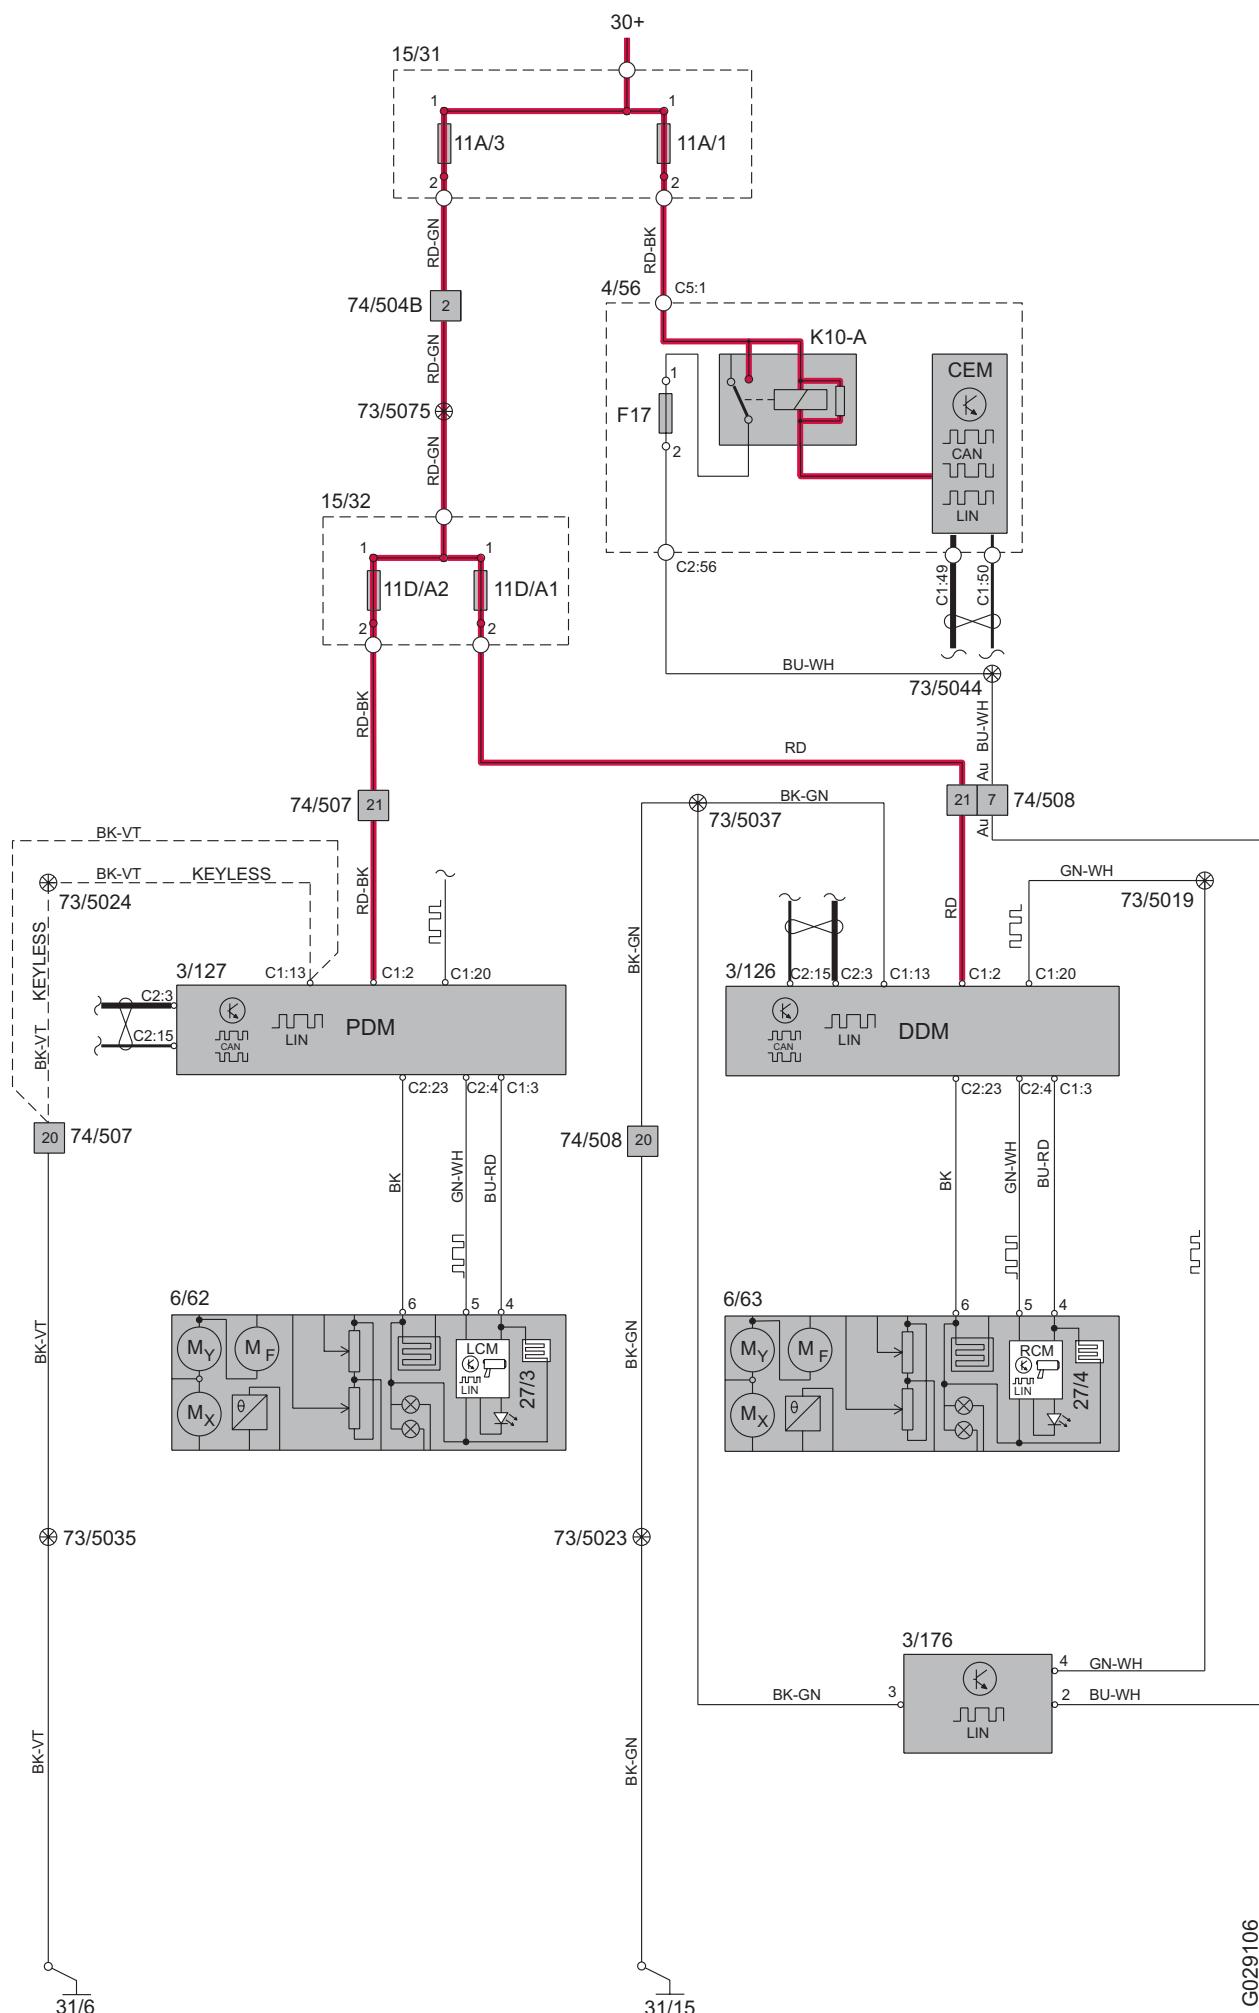


Group 84 Exterior decorative elements, etc.

Heated rear window

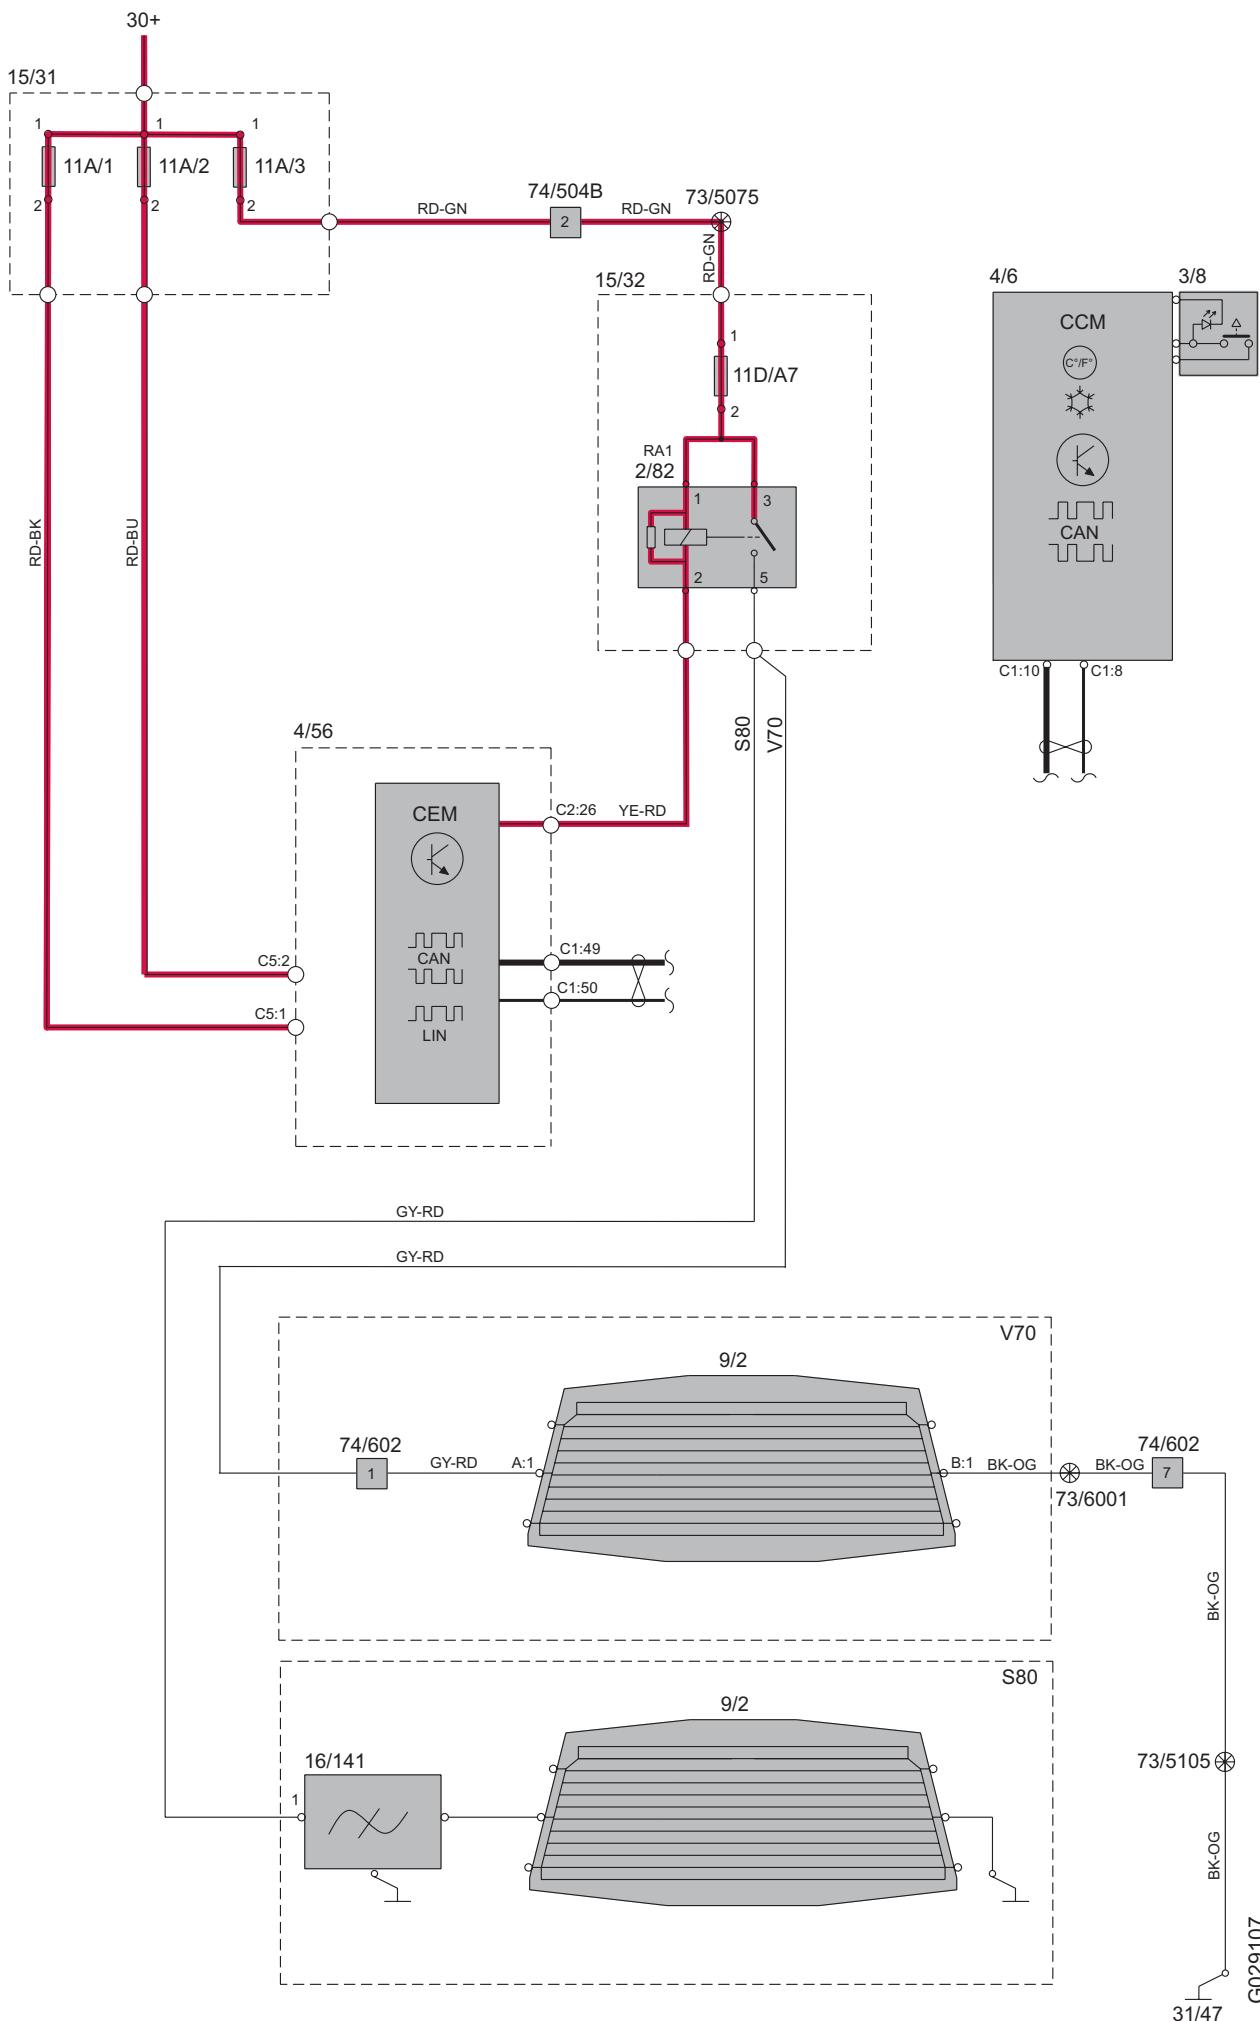

Group 85 Interior equipment


Power driver's seat with memory function, LHD

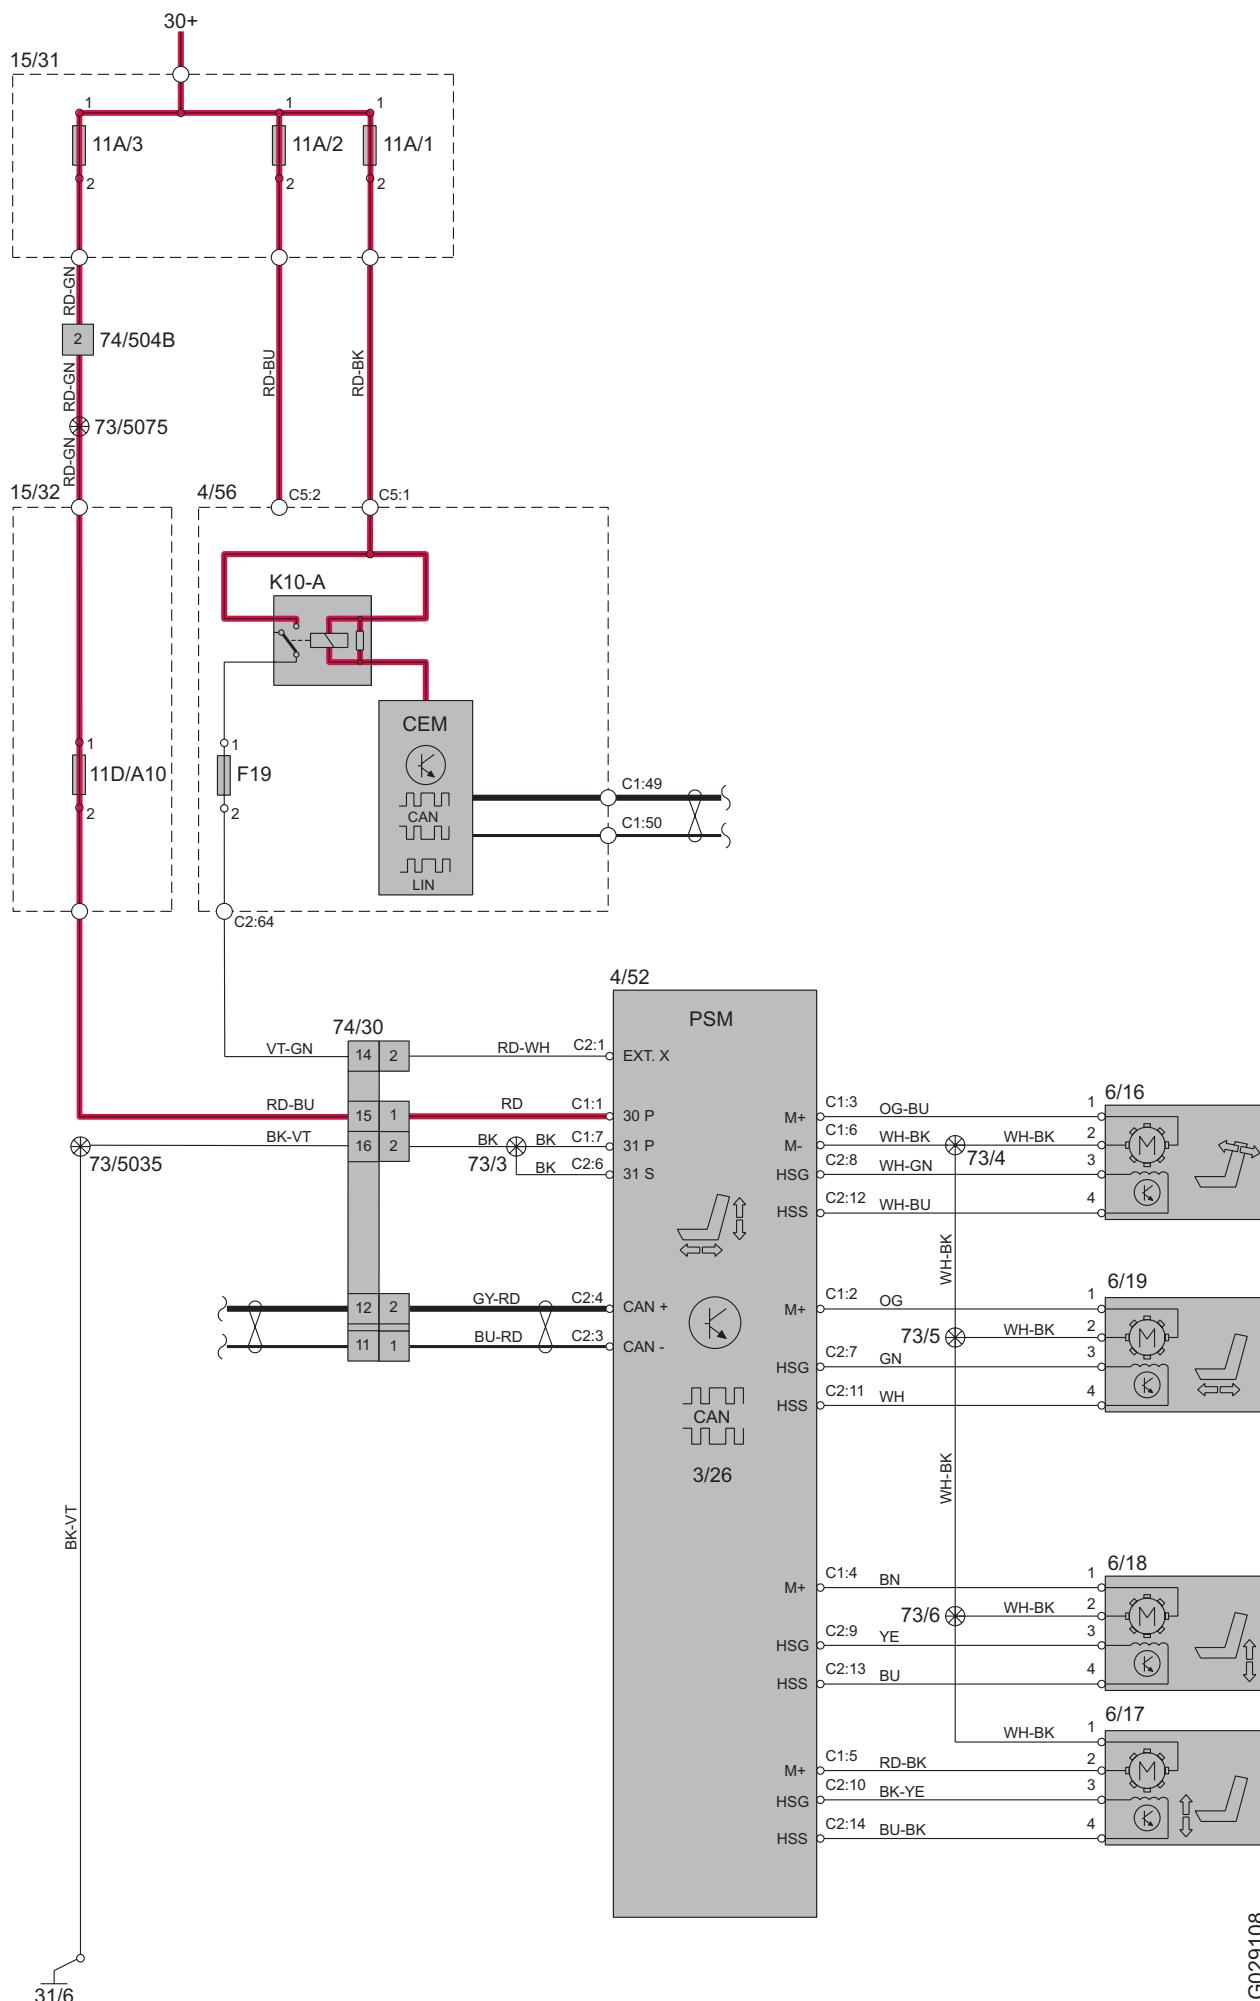

G029108


Group 85 Interior equipment

Power driver's seat with memory function, RHD

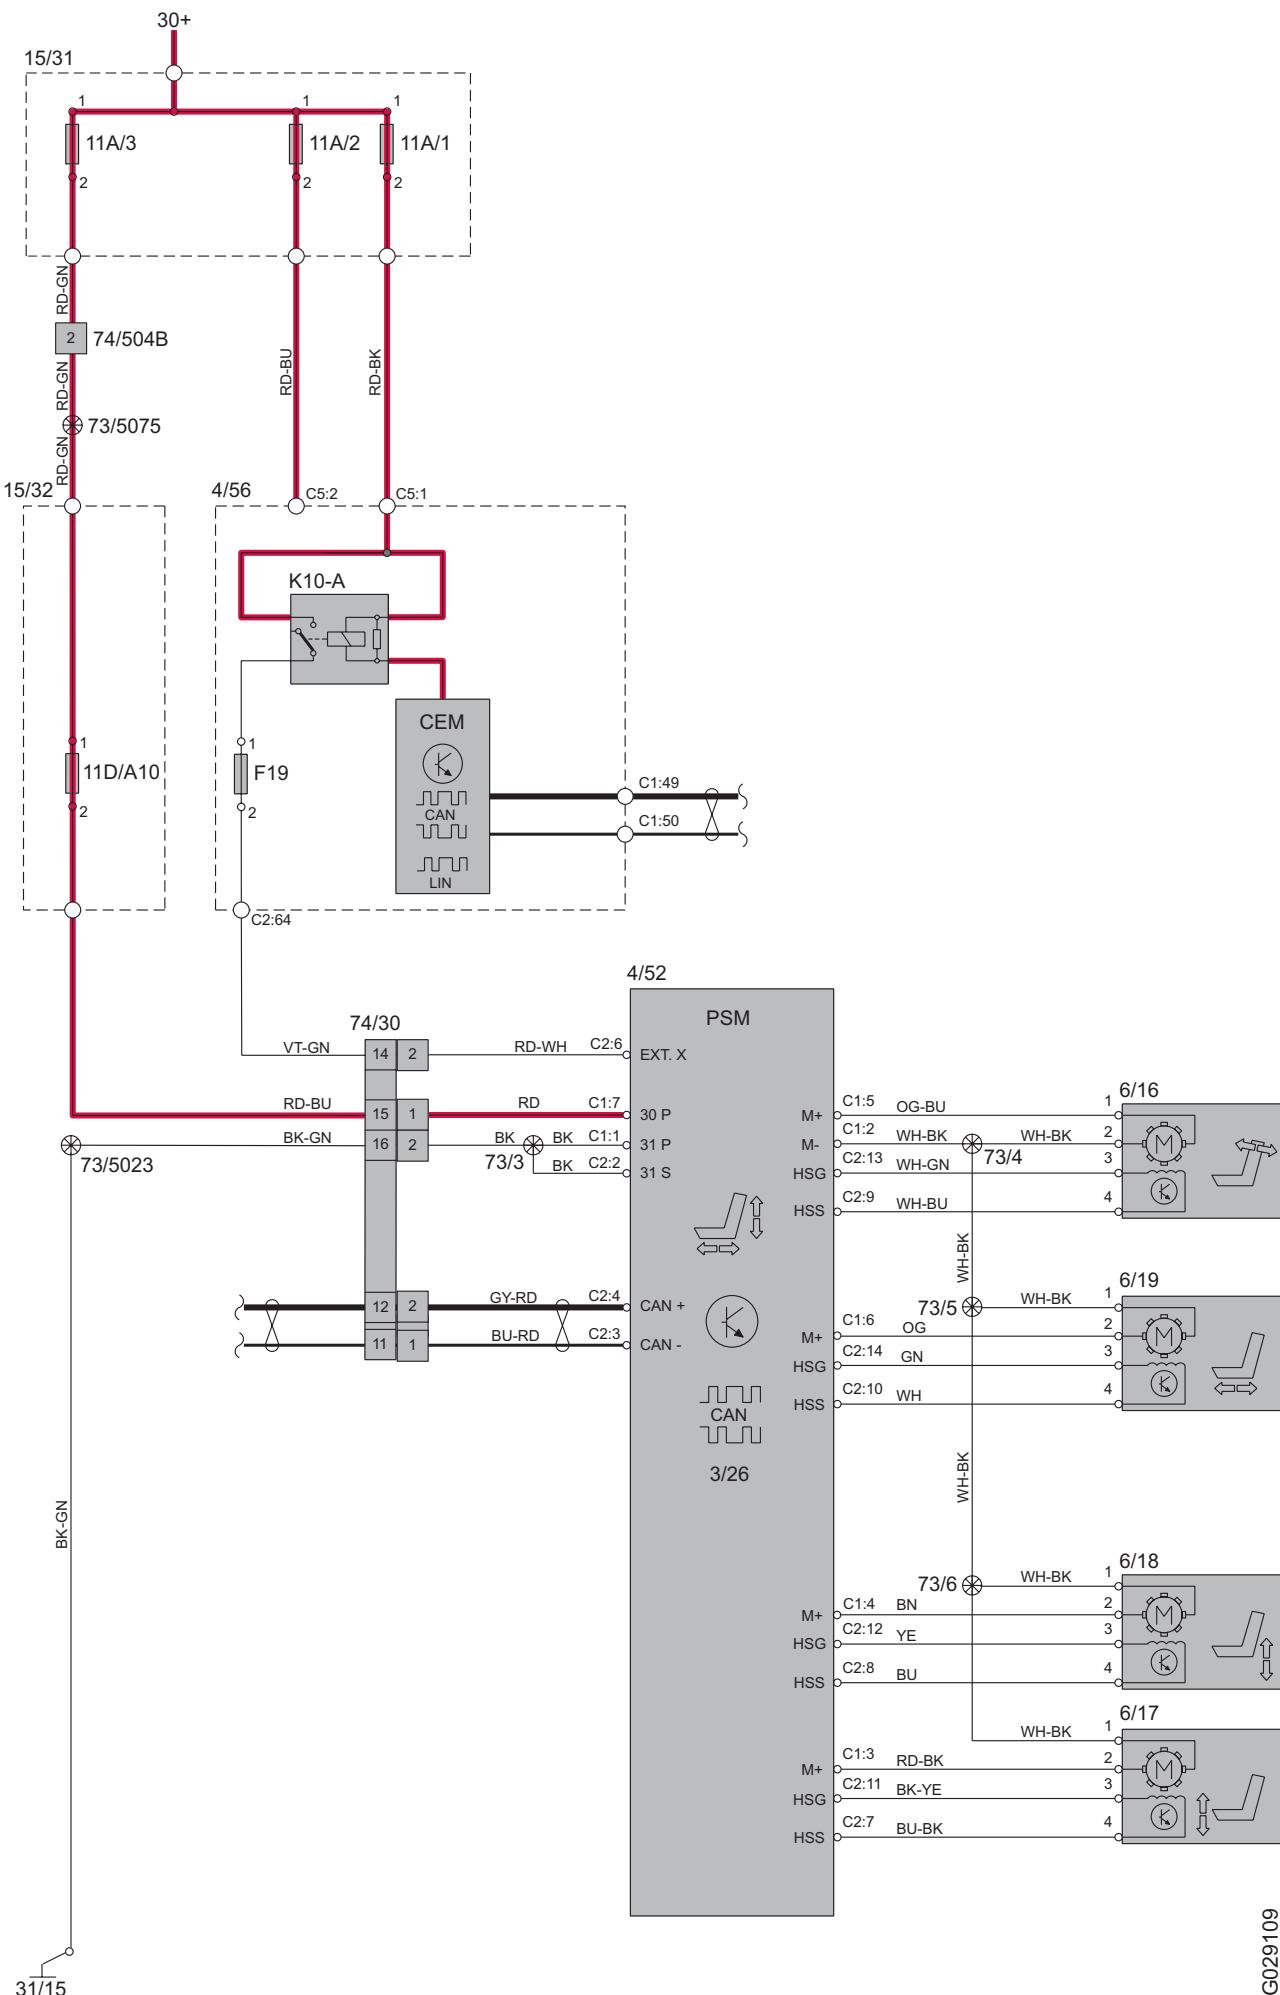

Group 85 Interior equipment



Power passenger seat, LHD

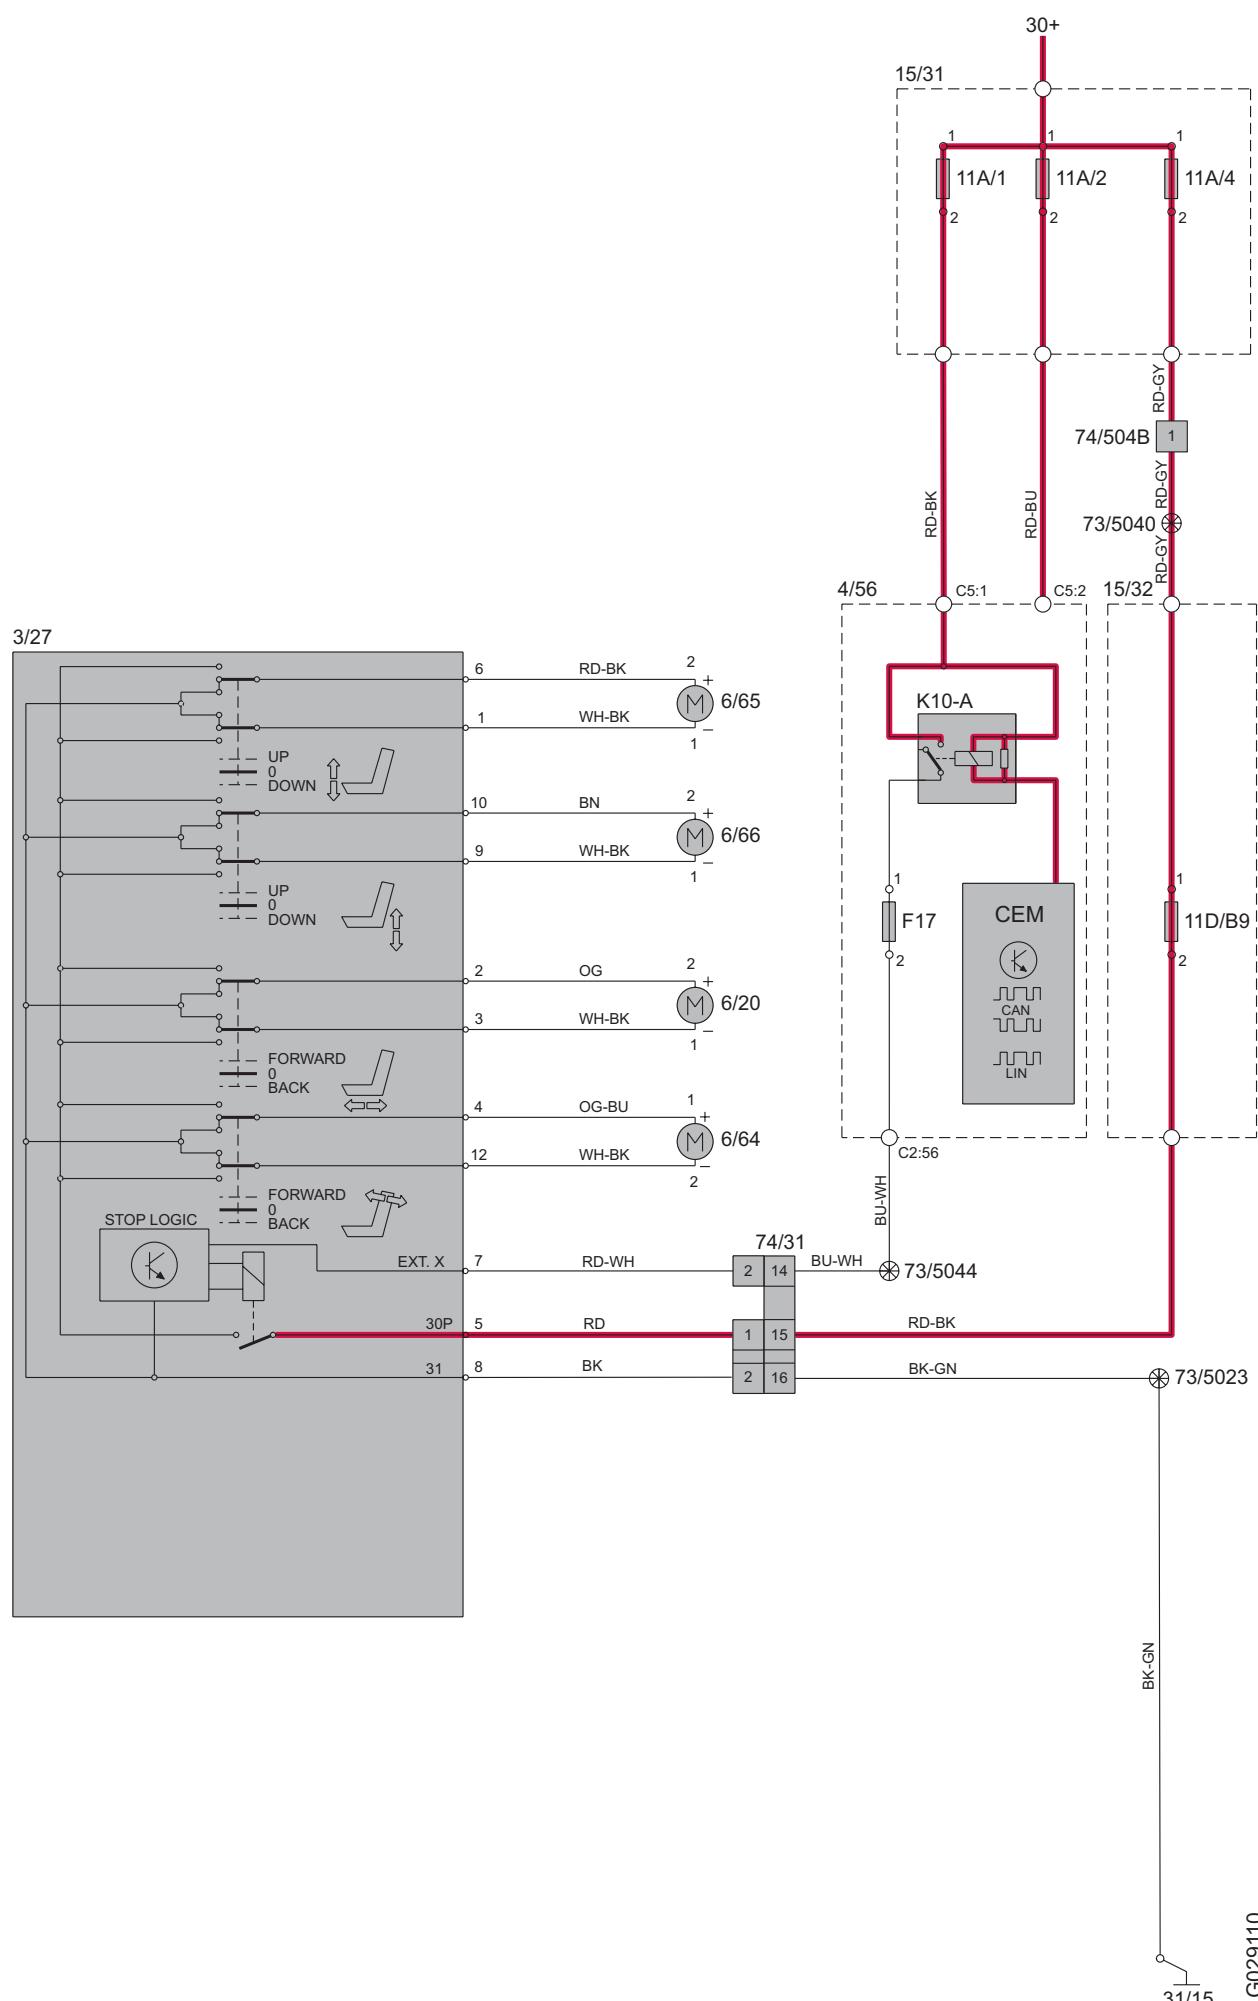

Group 85 Interior equipment


Power passenger seat, RHD

3/27

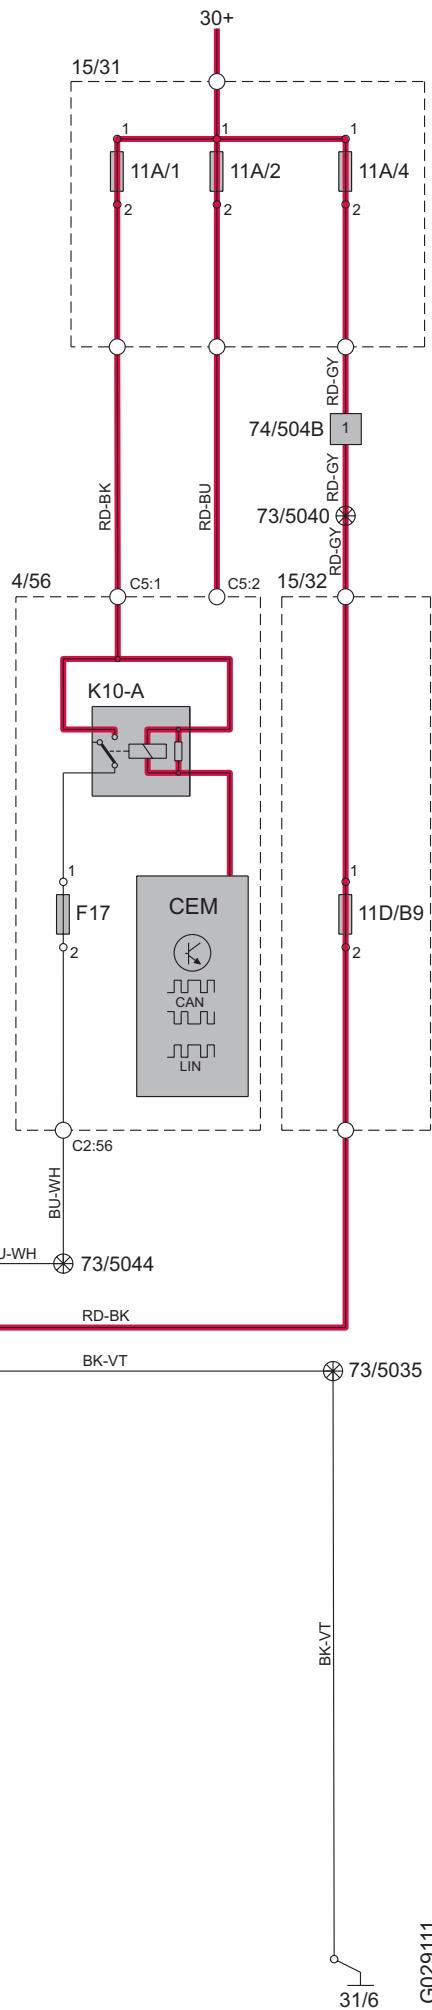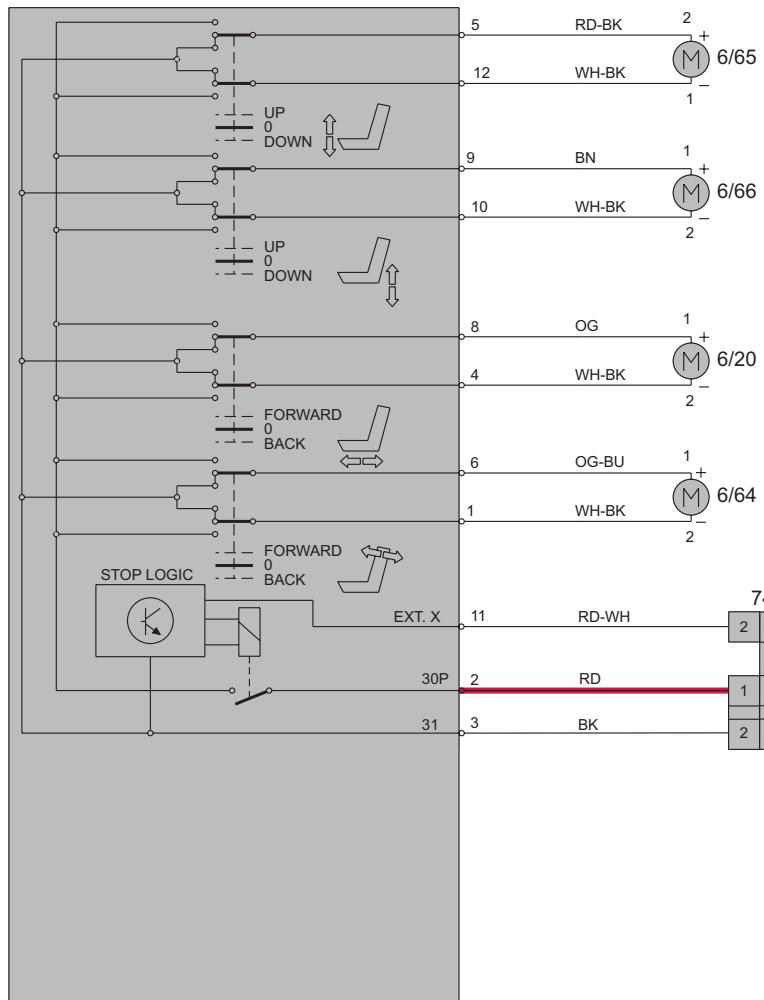


Group 85 Interior equipment

Heated front seats with fans

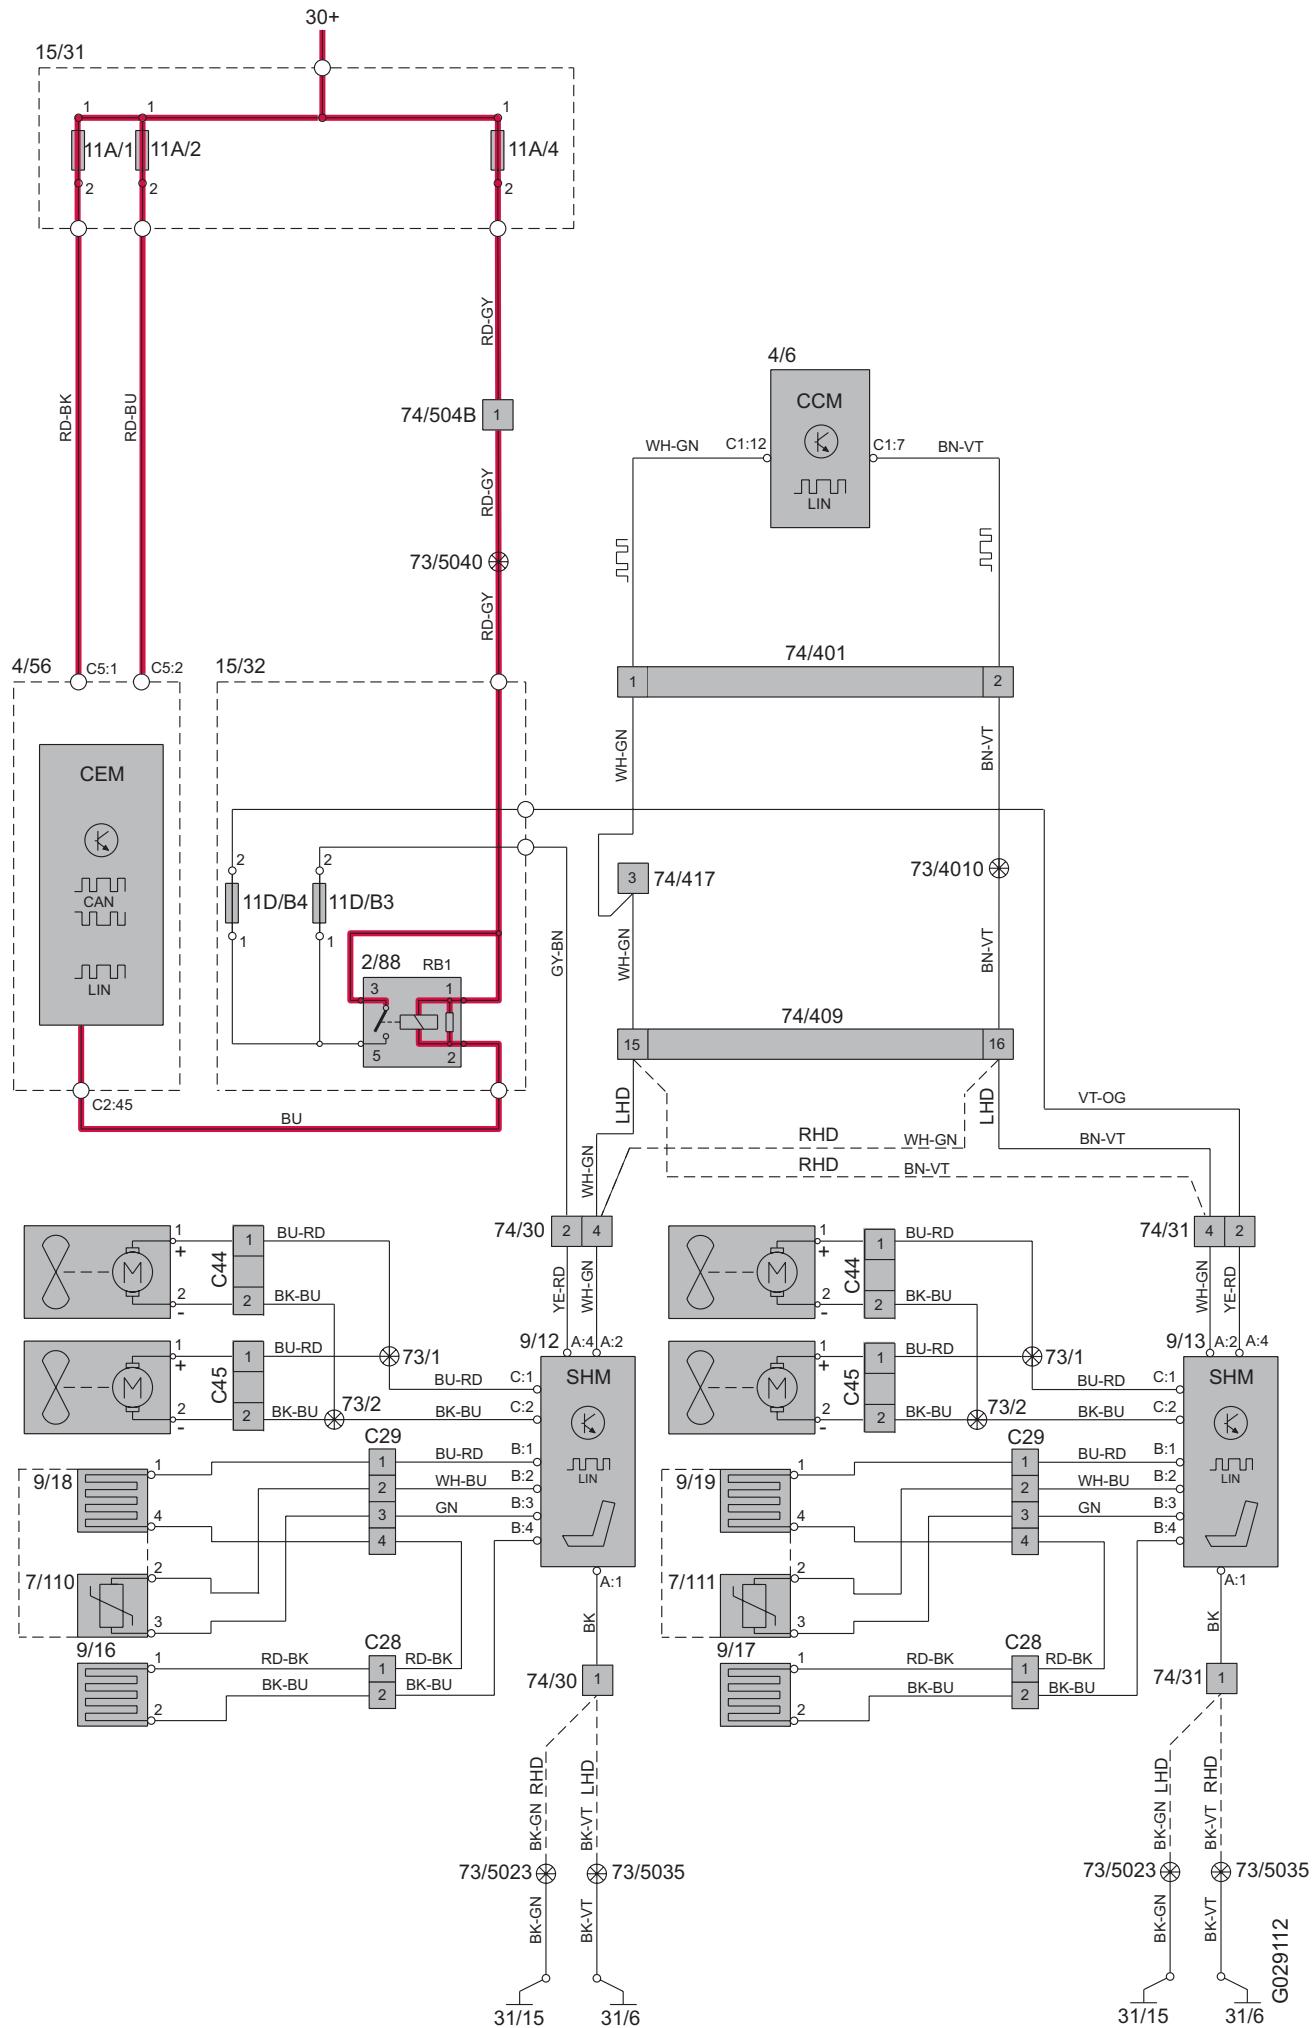


Group 85 Interior equipment Heated front seats without fans

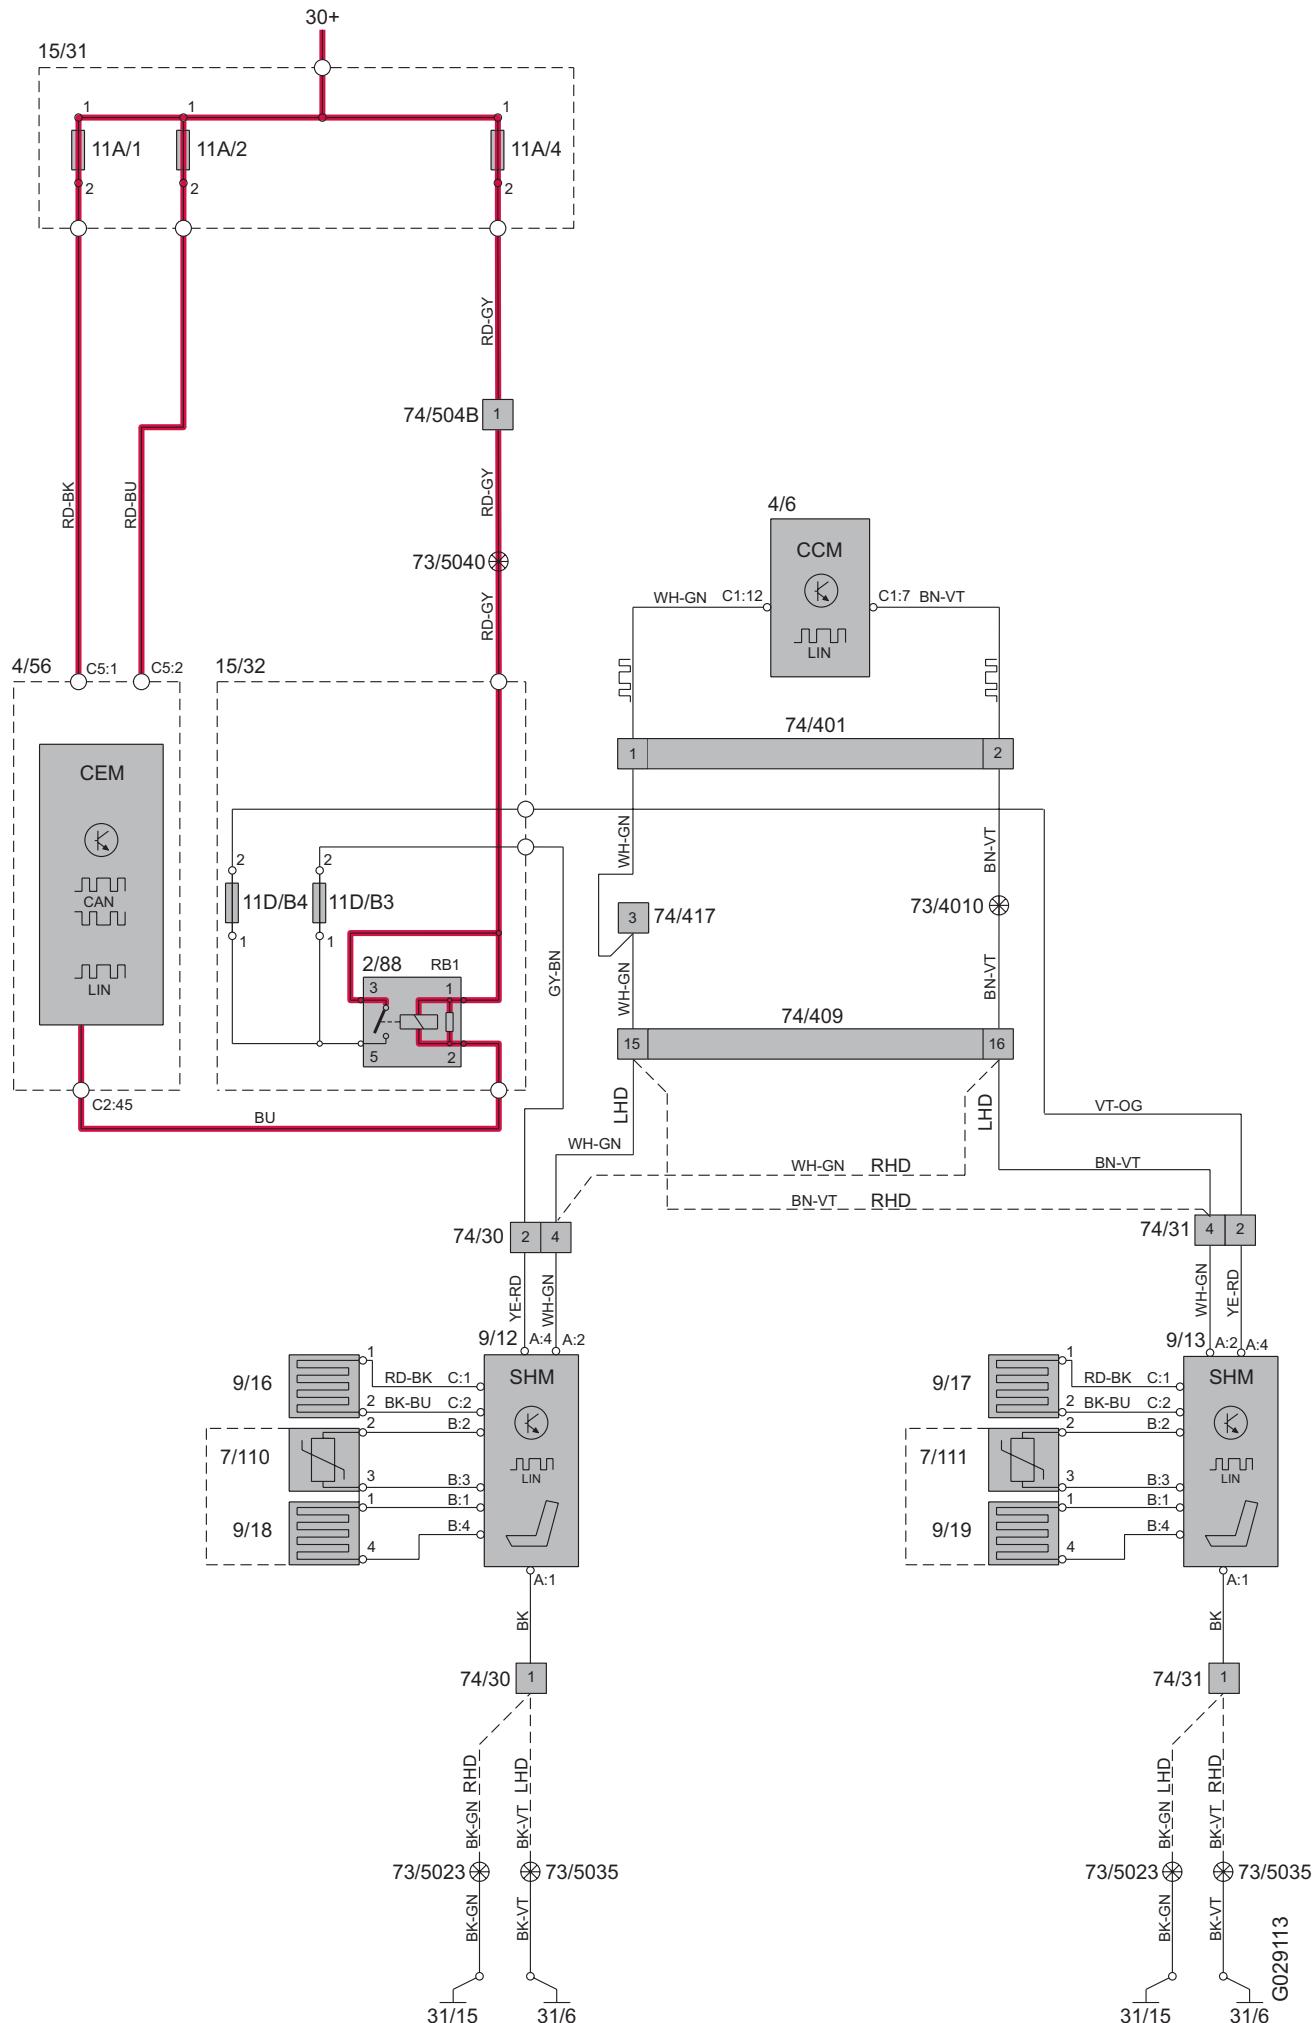


Group 85 Interior equipment

Heated rear seat

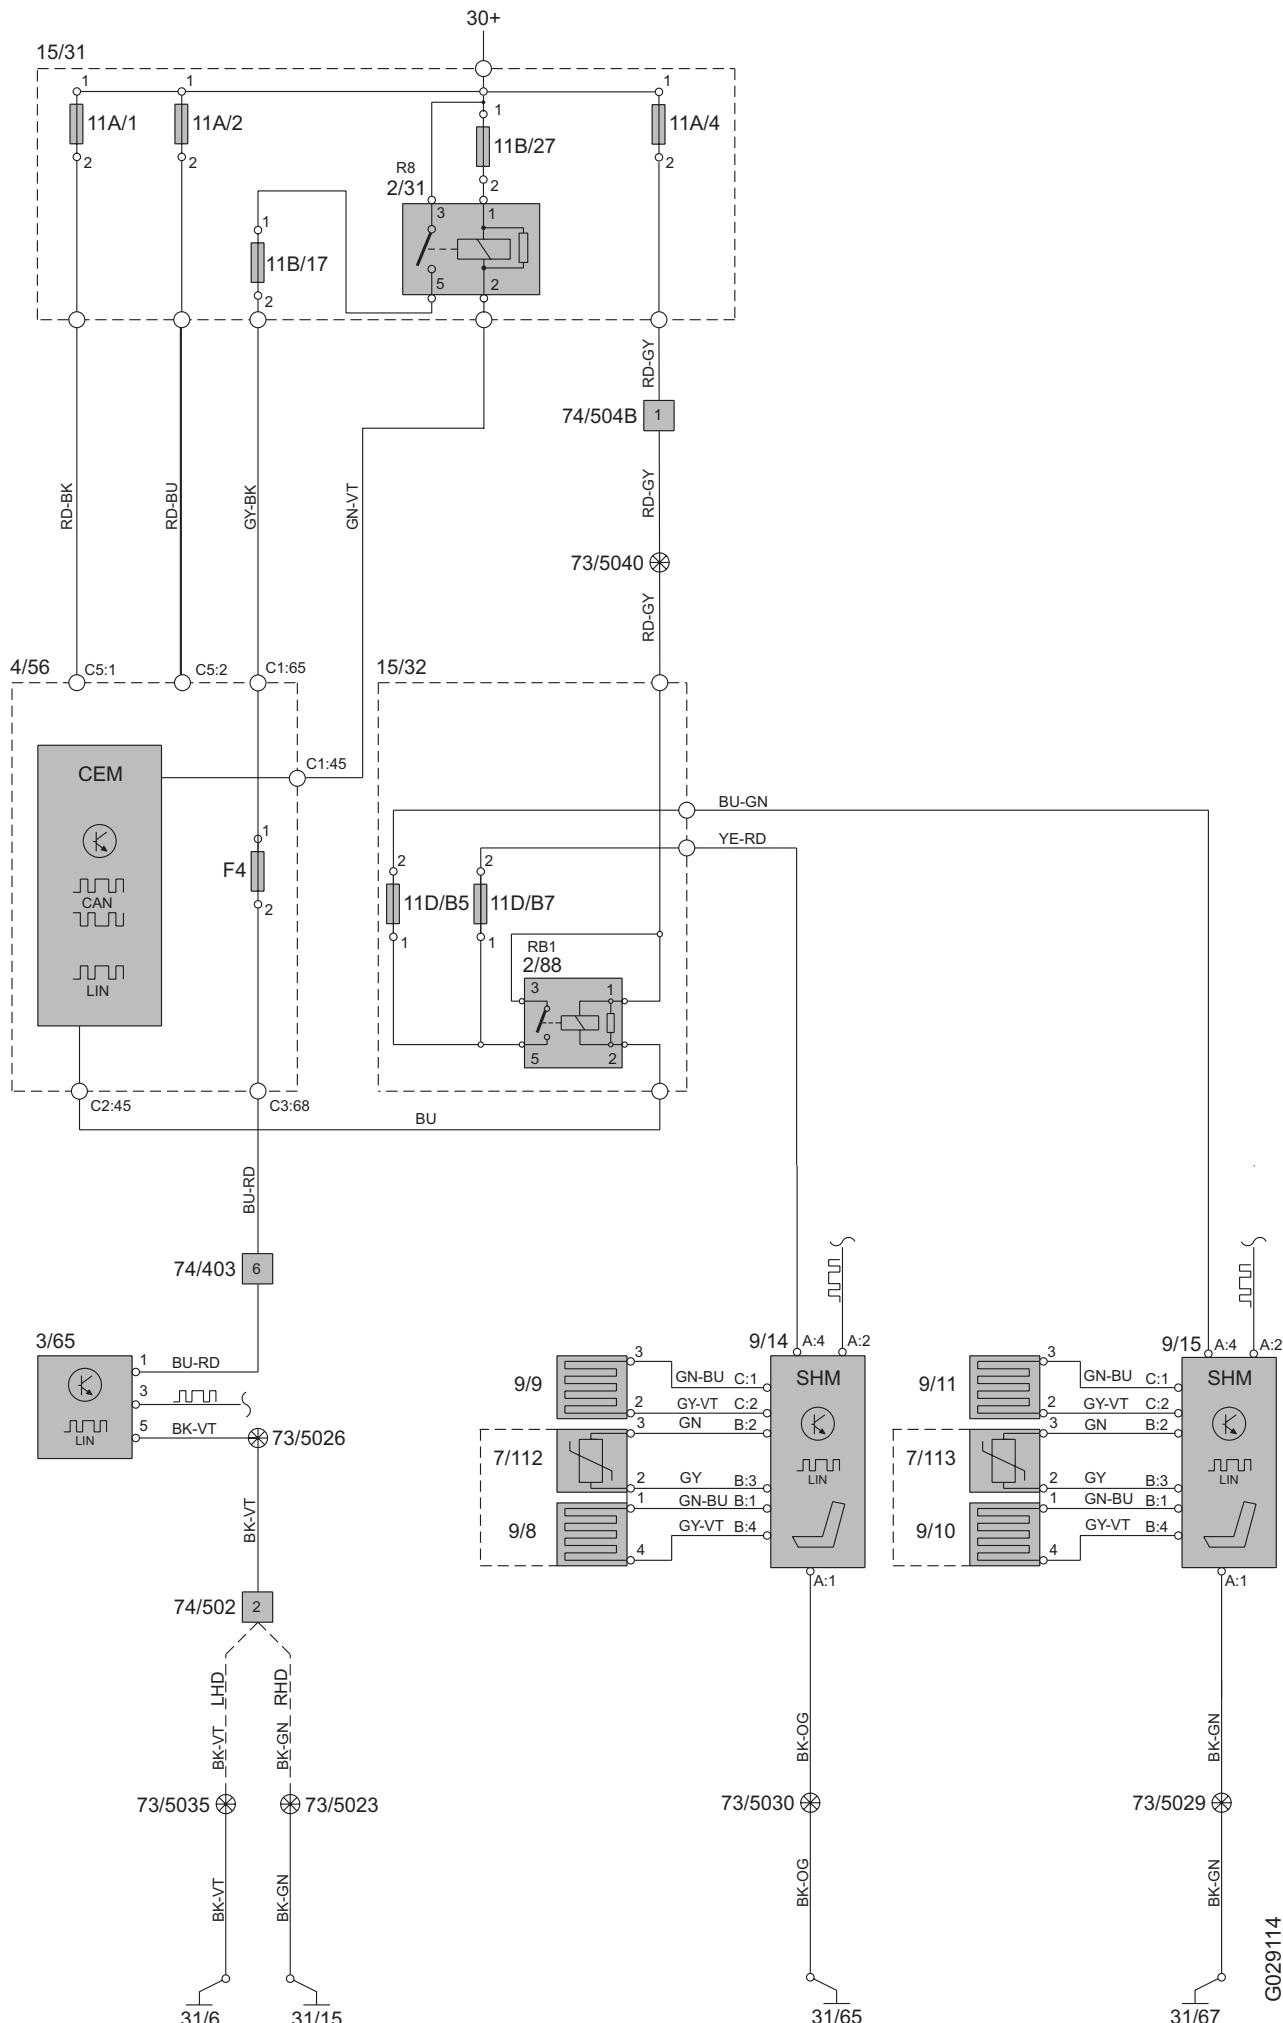

Group 85 Interior equipment


Massage seats

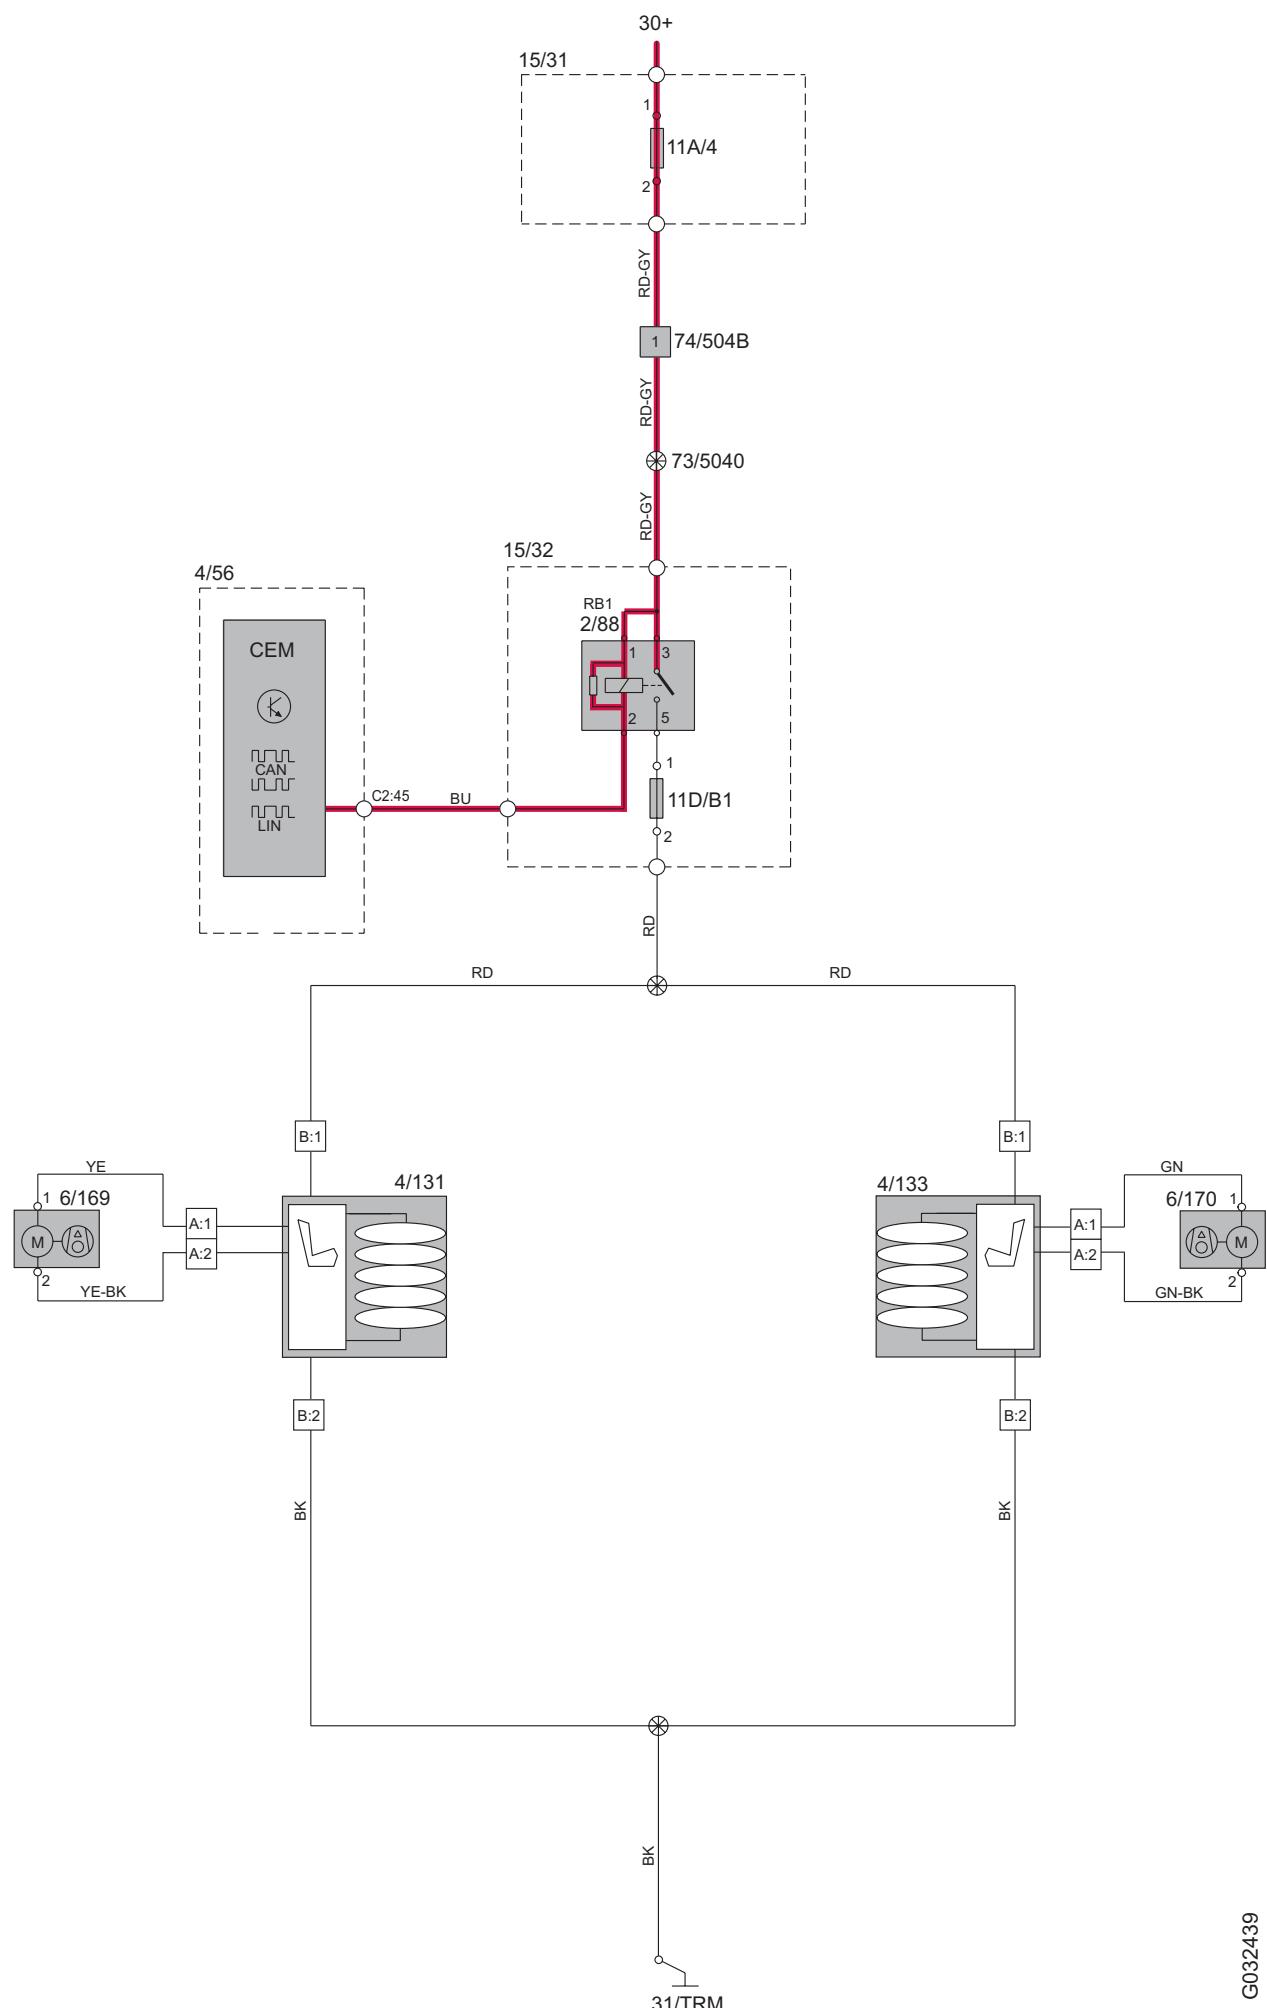

G032439


Group 87 Climate control system

Climate control system PTC-element

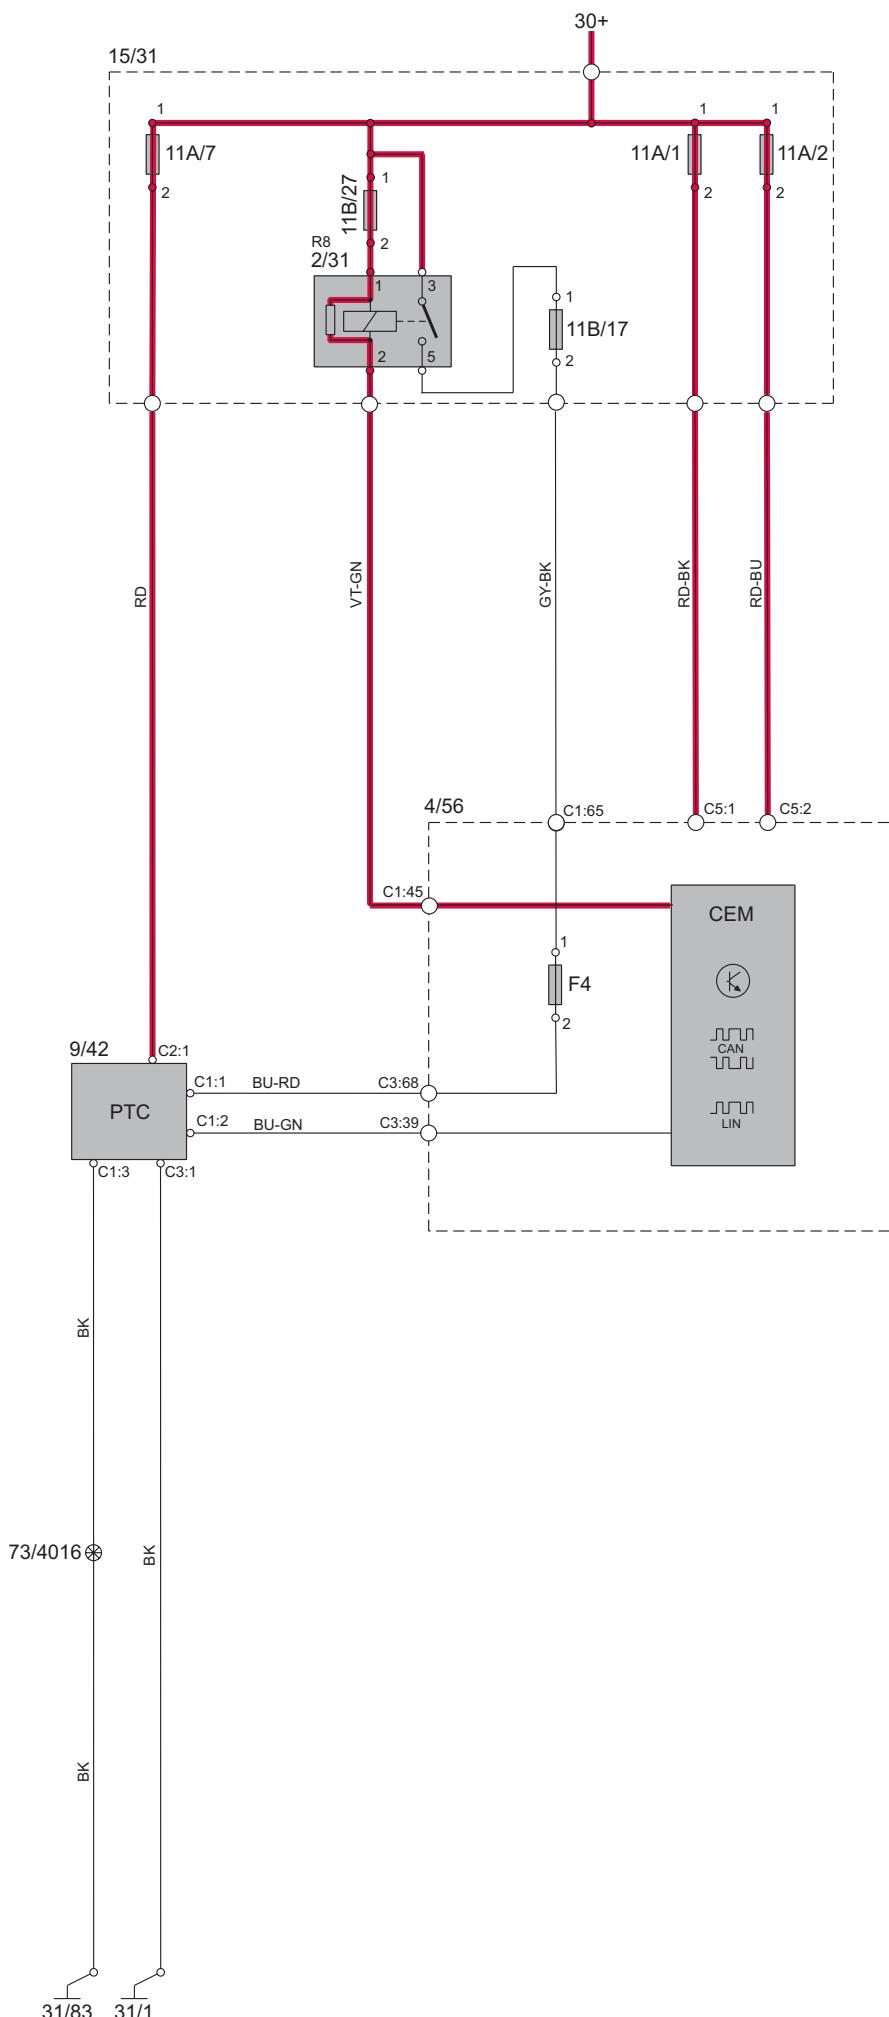


G029115

Group 87 Climate control system Climate control system, 4-Cyl. 1:2

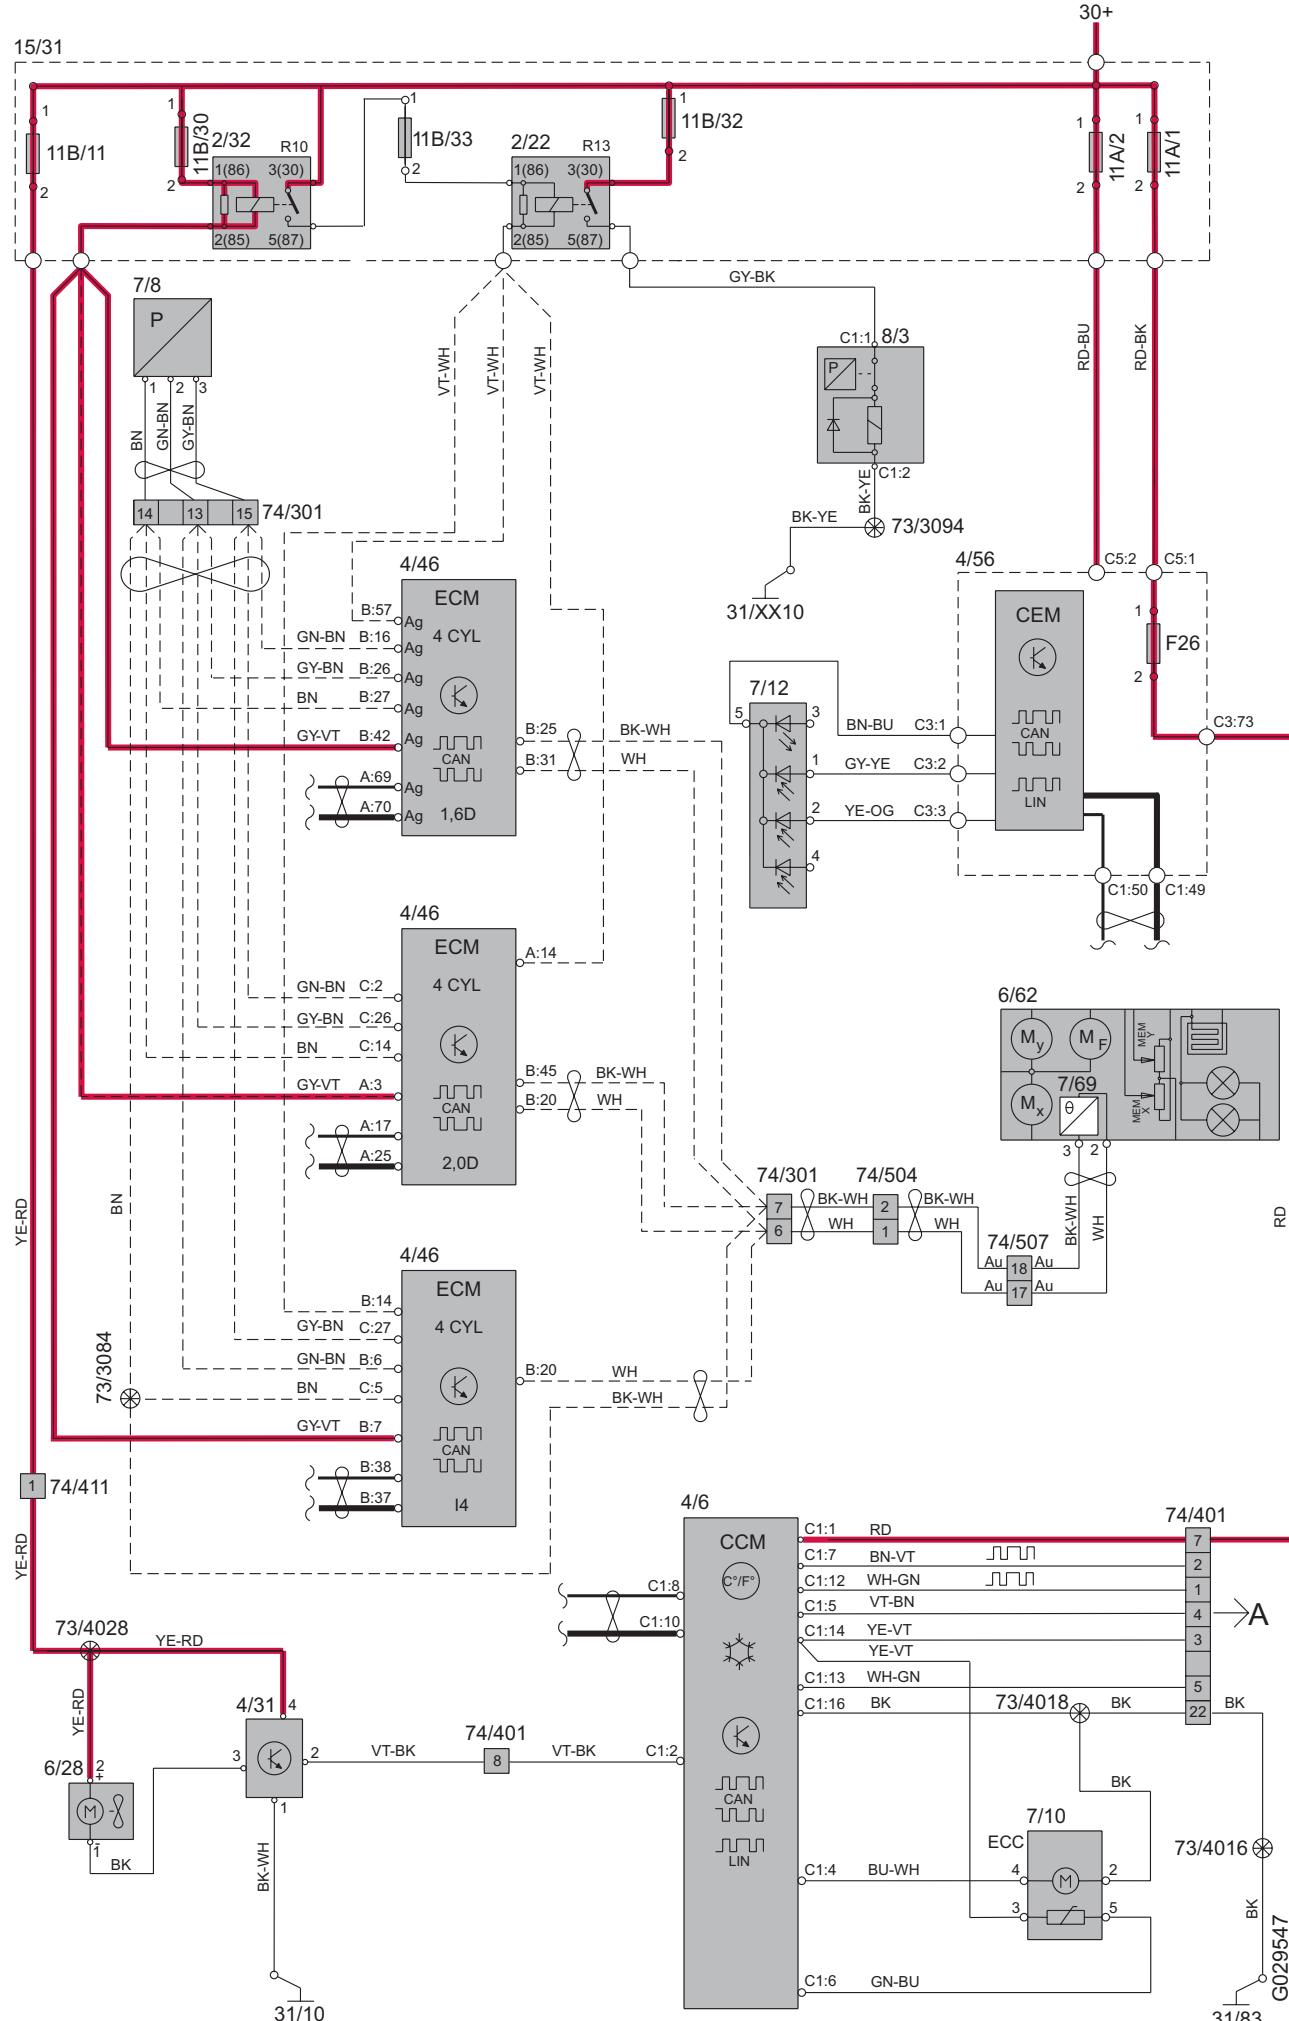

Group 87 Climate control system


Climate control system, 4-Cyl. 2:2

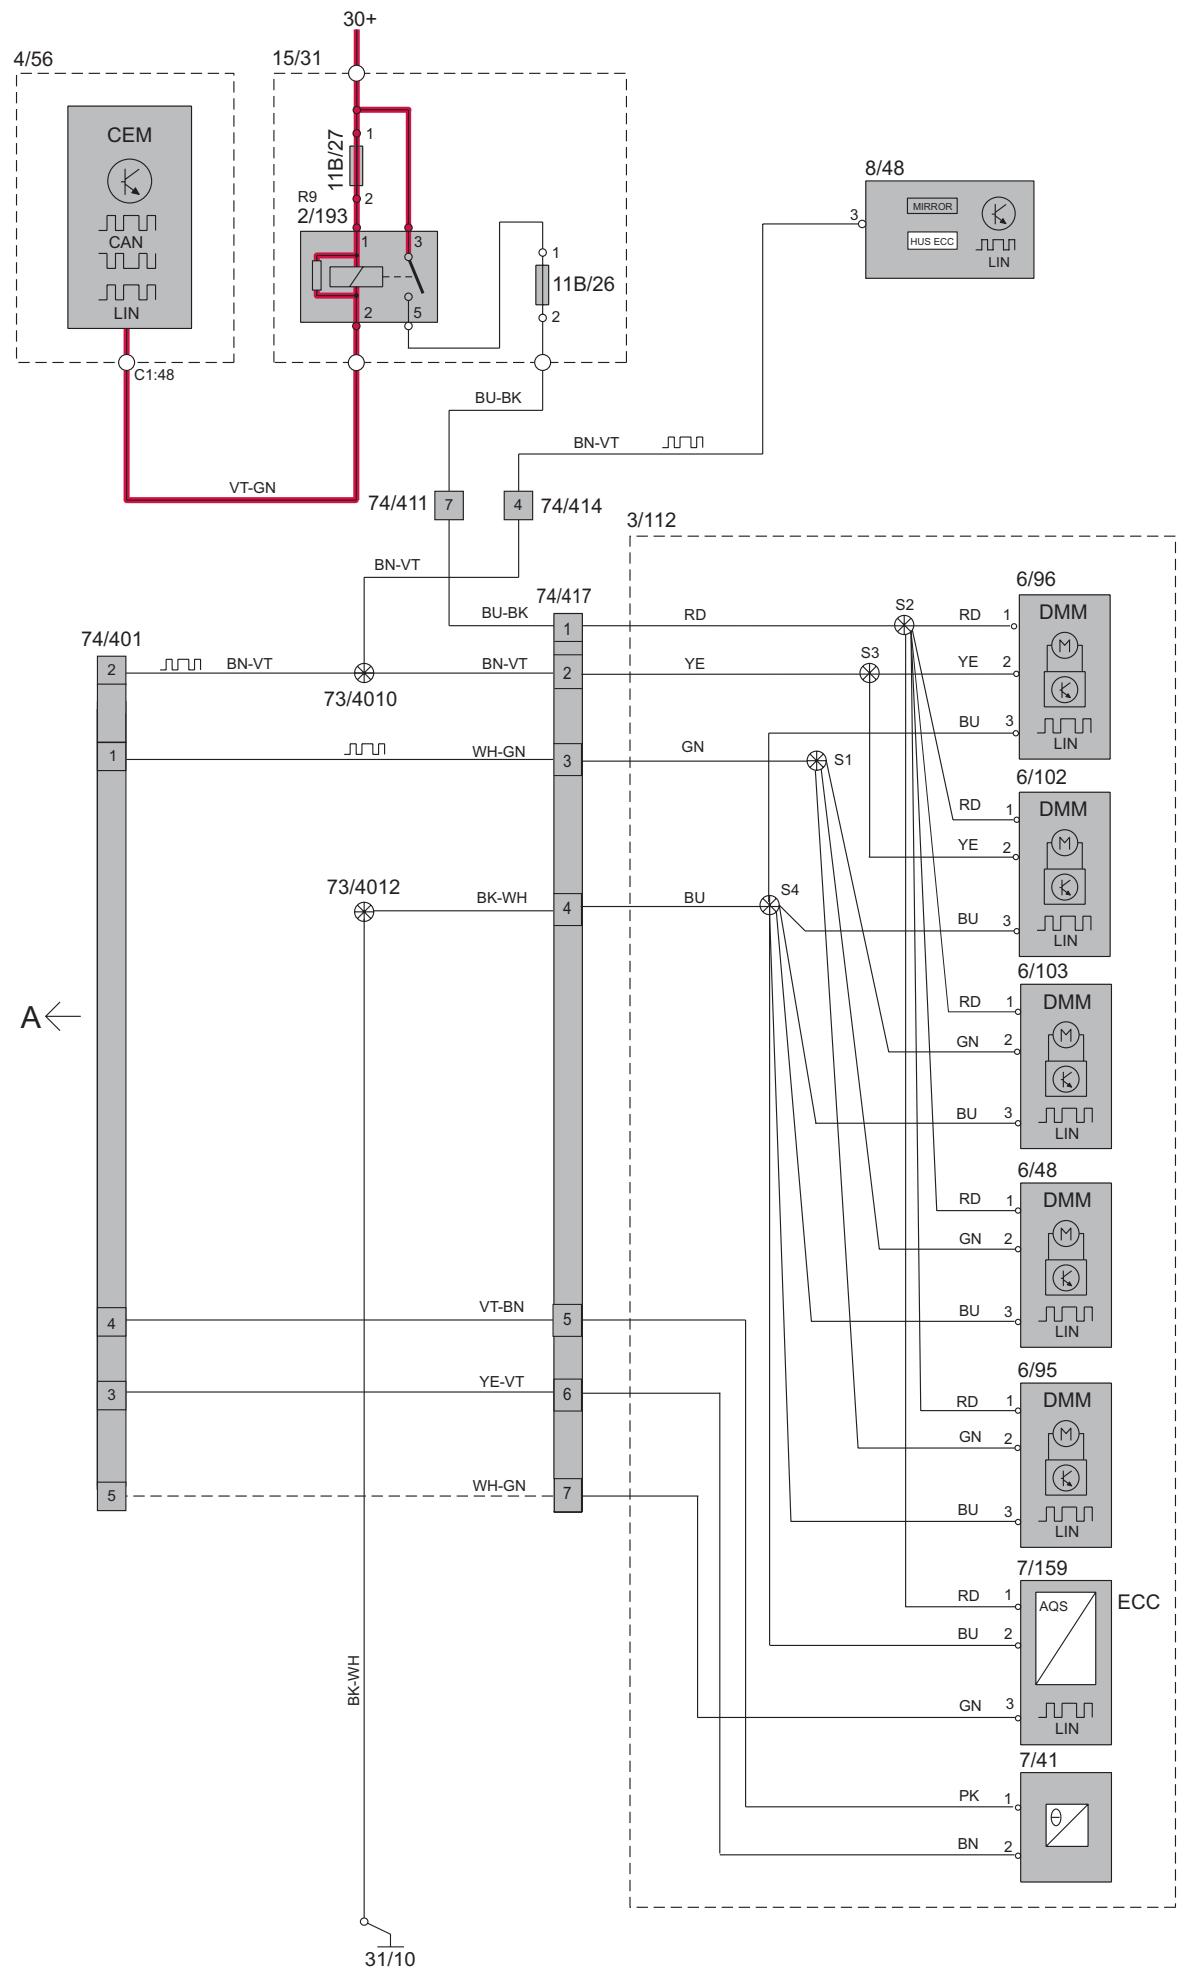

G029548


Group 87 Climate control system

Climate control system, 5-, 6- & 8-Cyl. 1:2

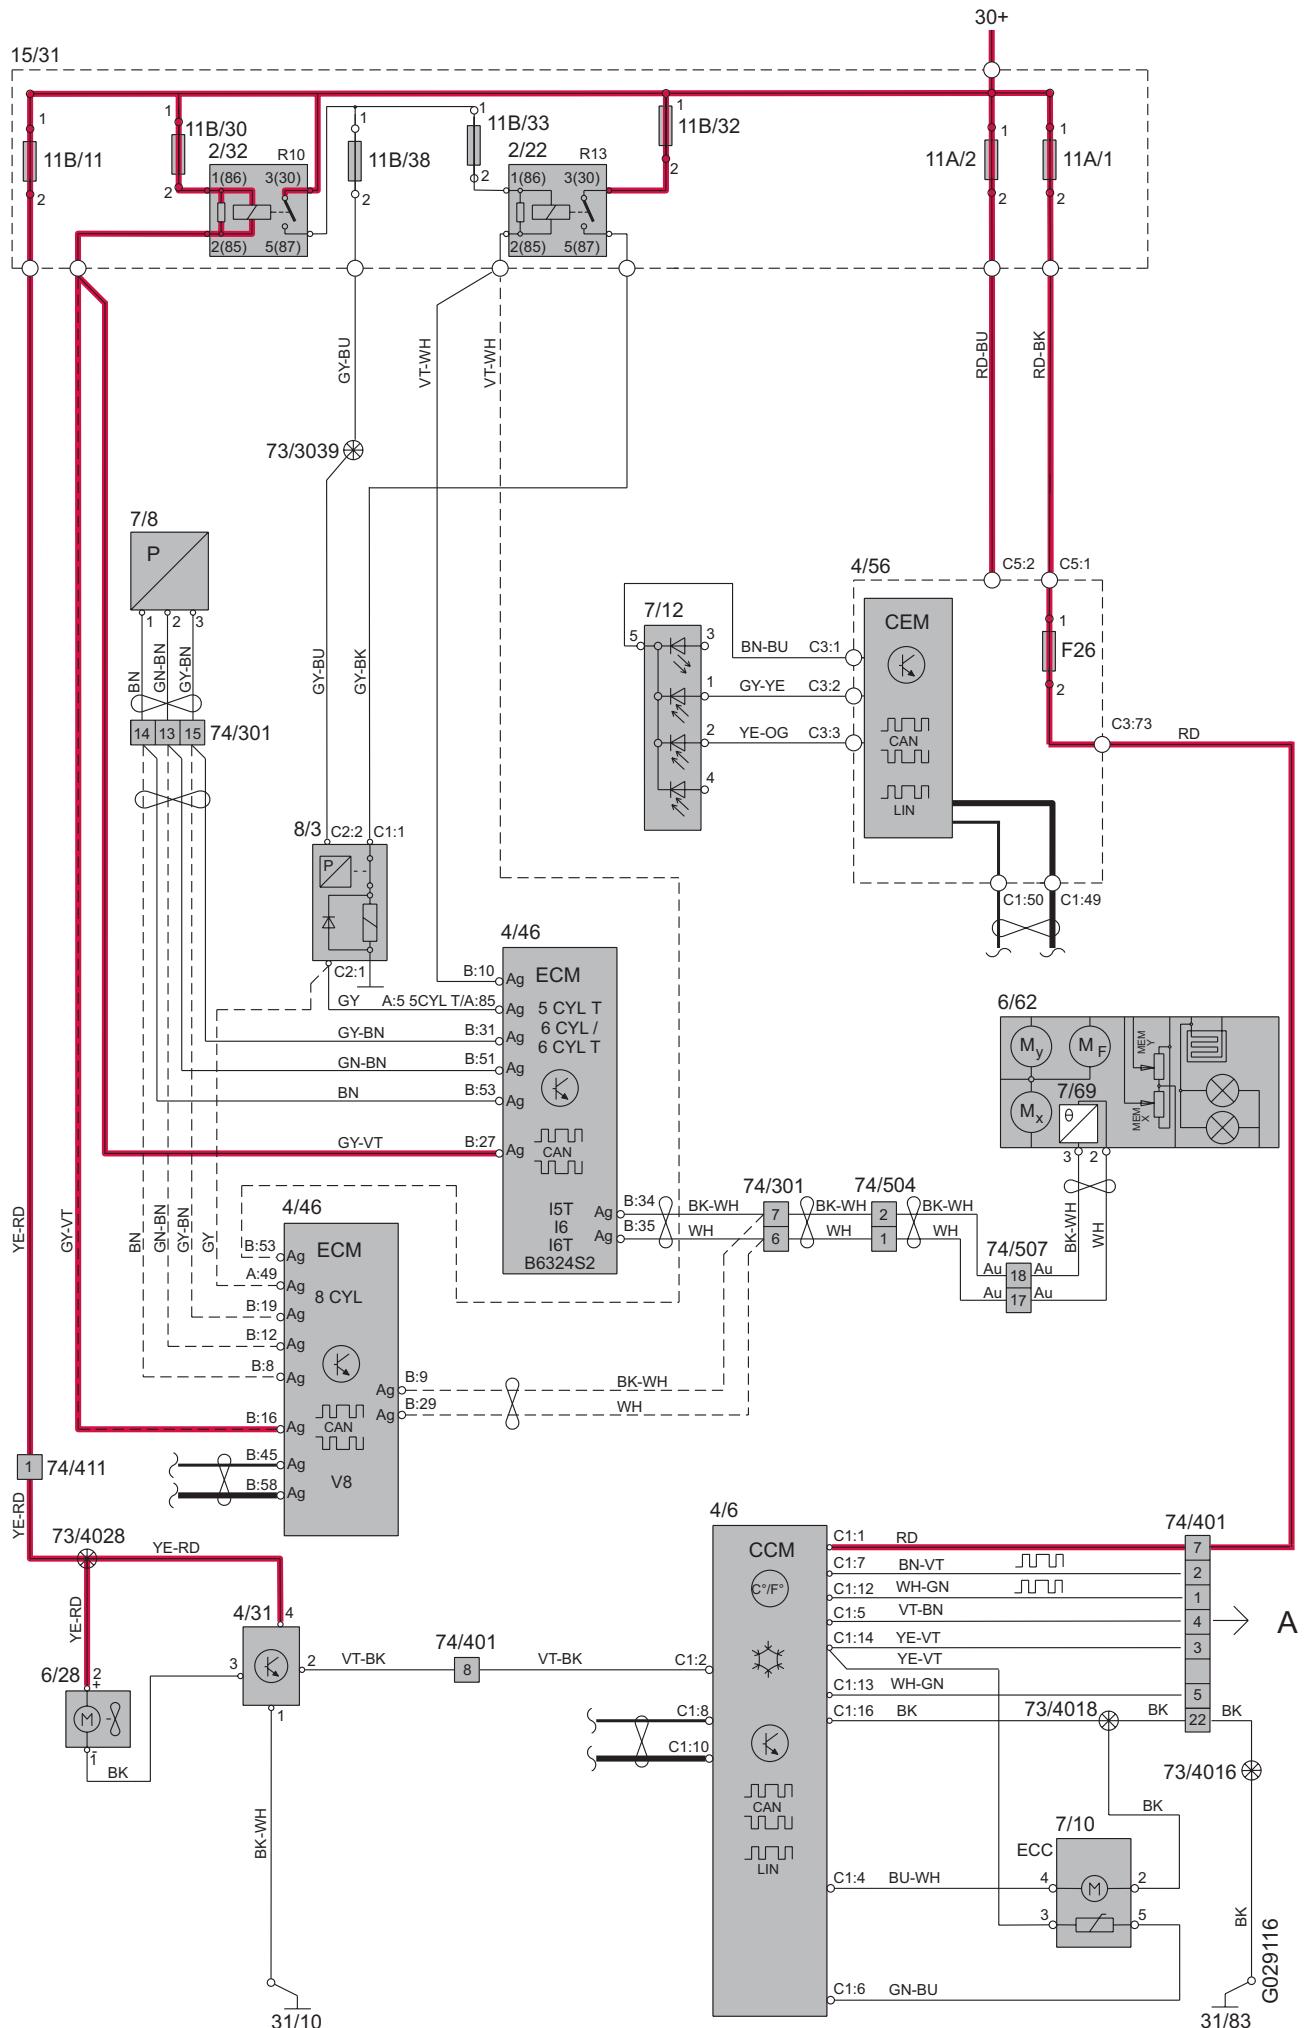

Group 87 Climate control system


Climate control system, 5-, 6- & 8-Cyl. 2:2

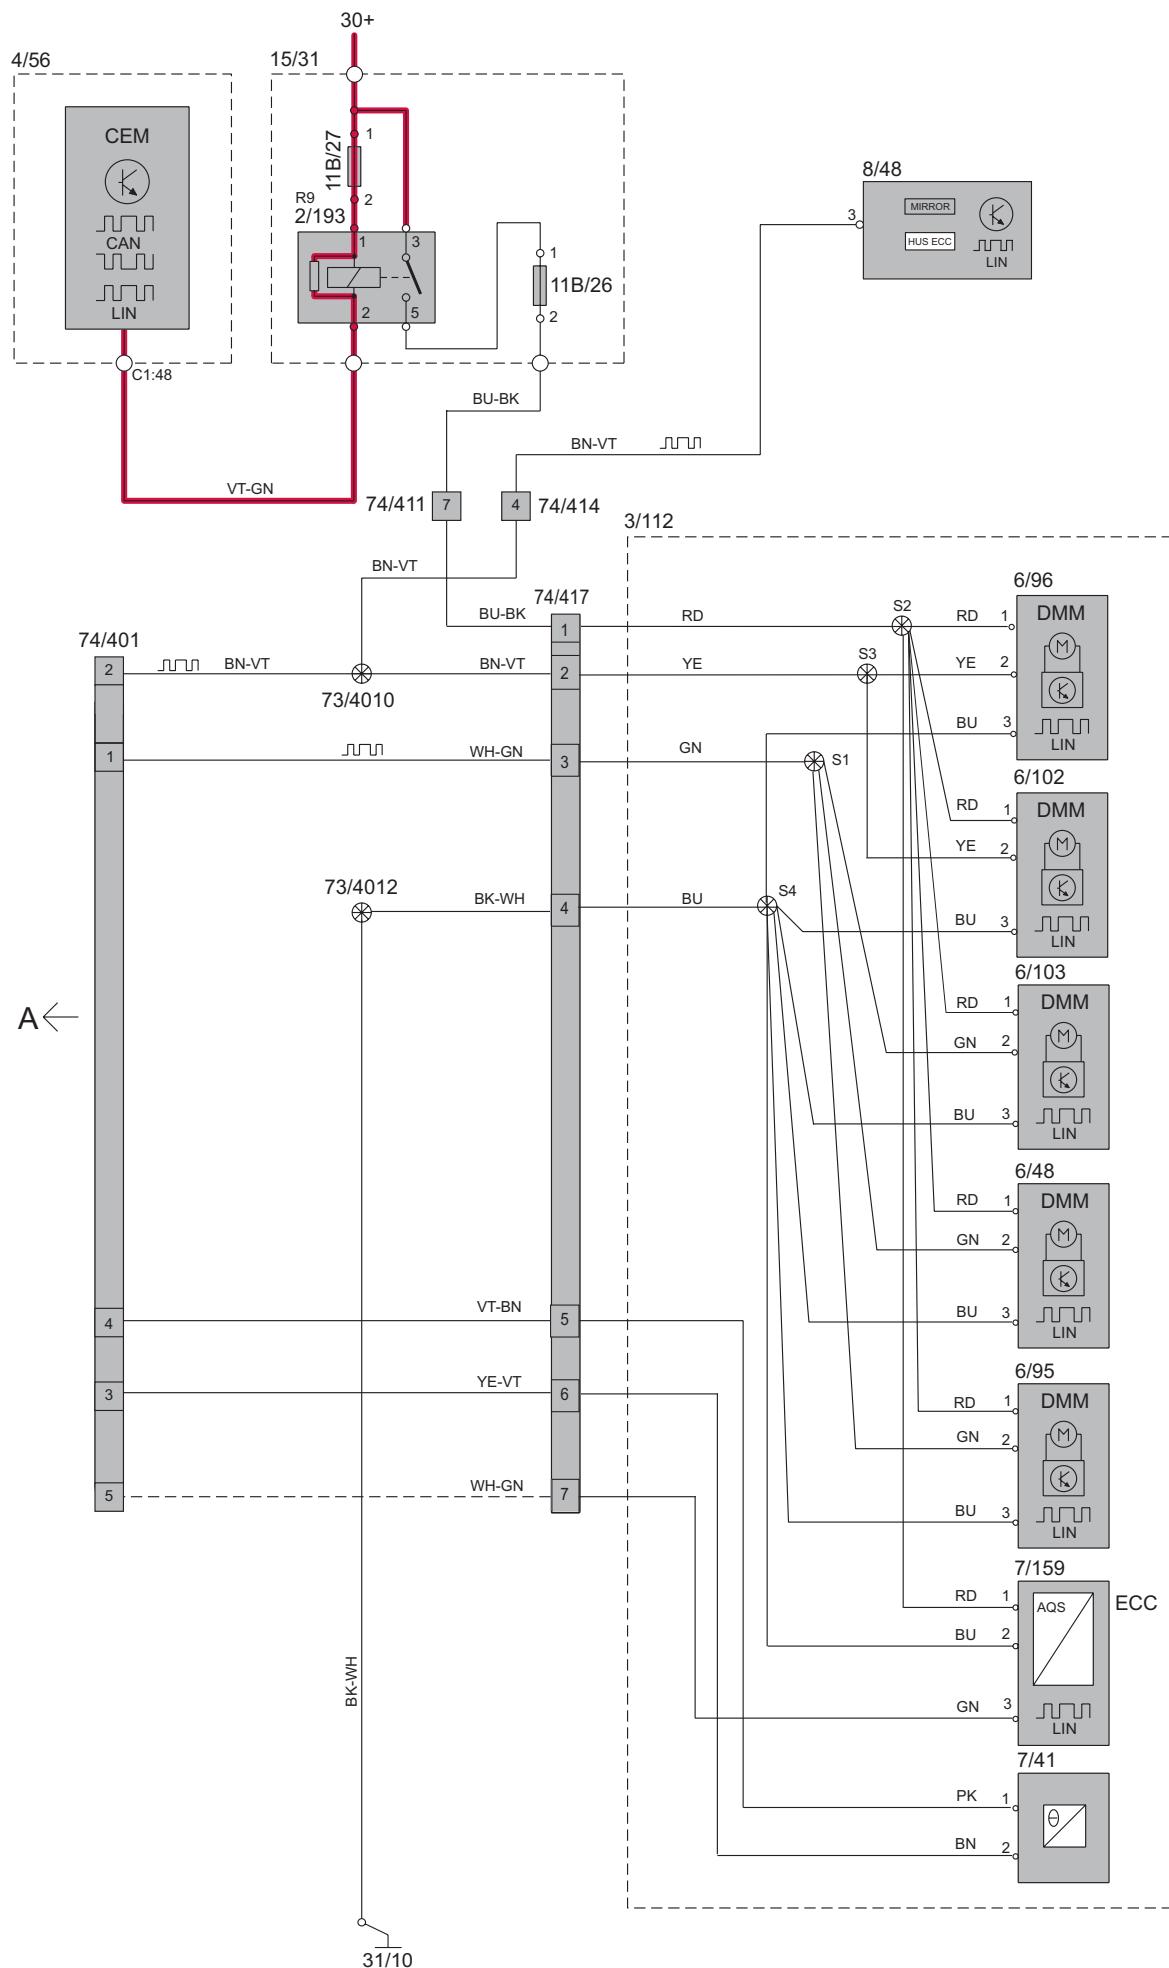

G029119


Group 87 Climate control system

Climate control system 5-Cyl. Diesel 1:2

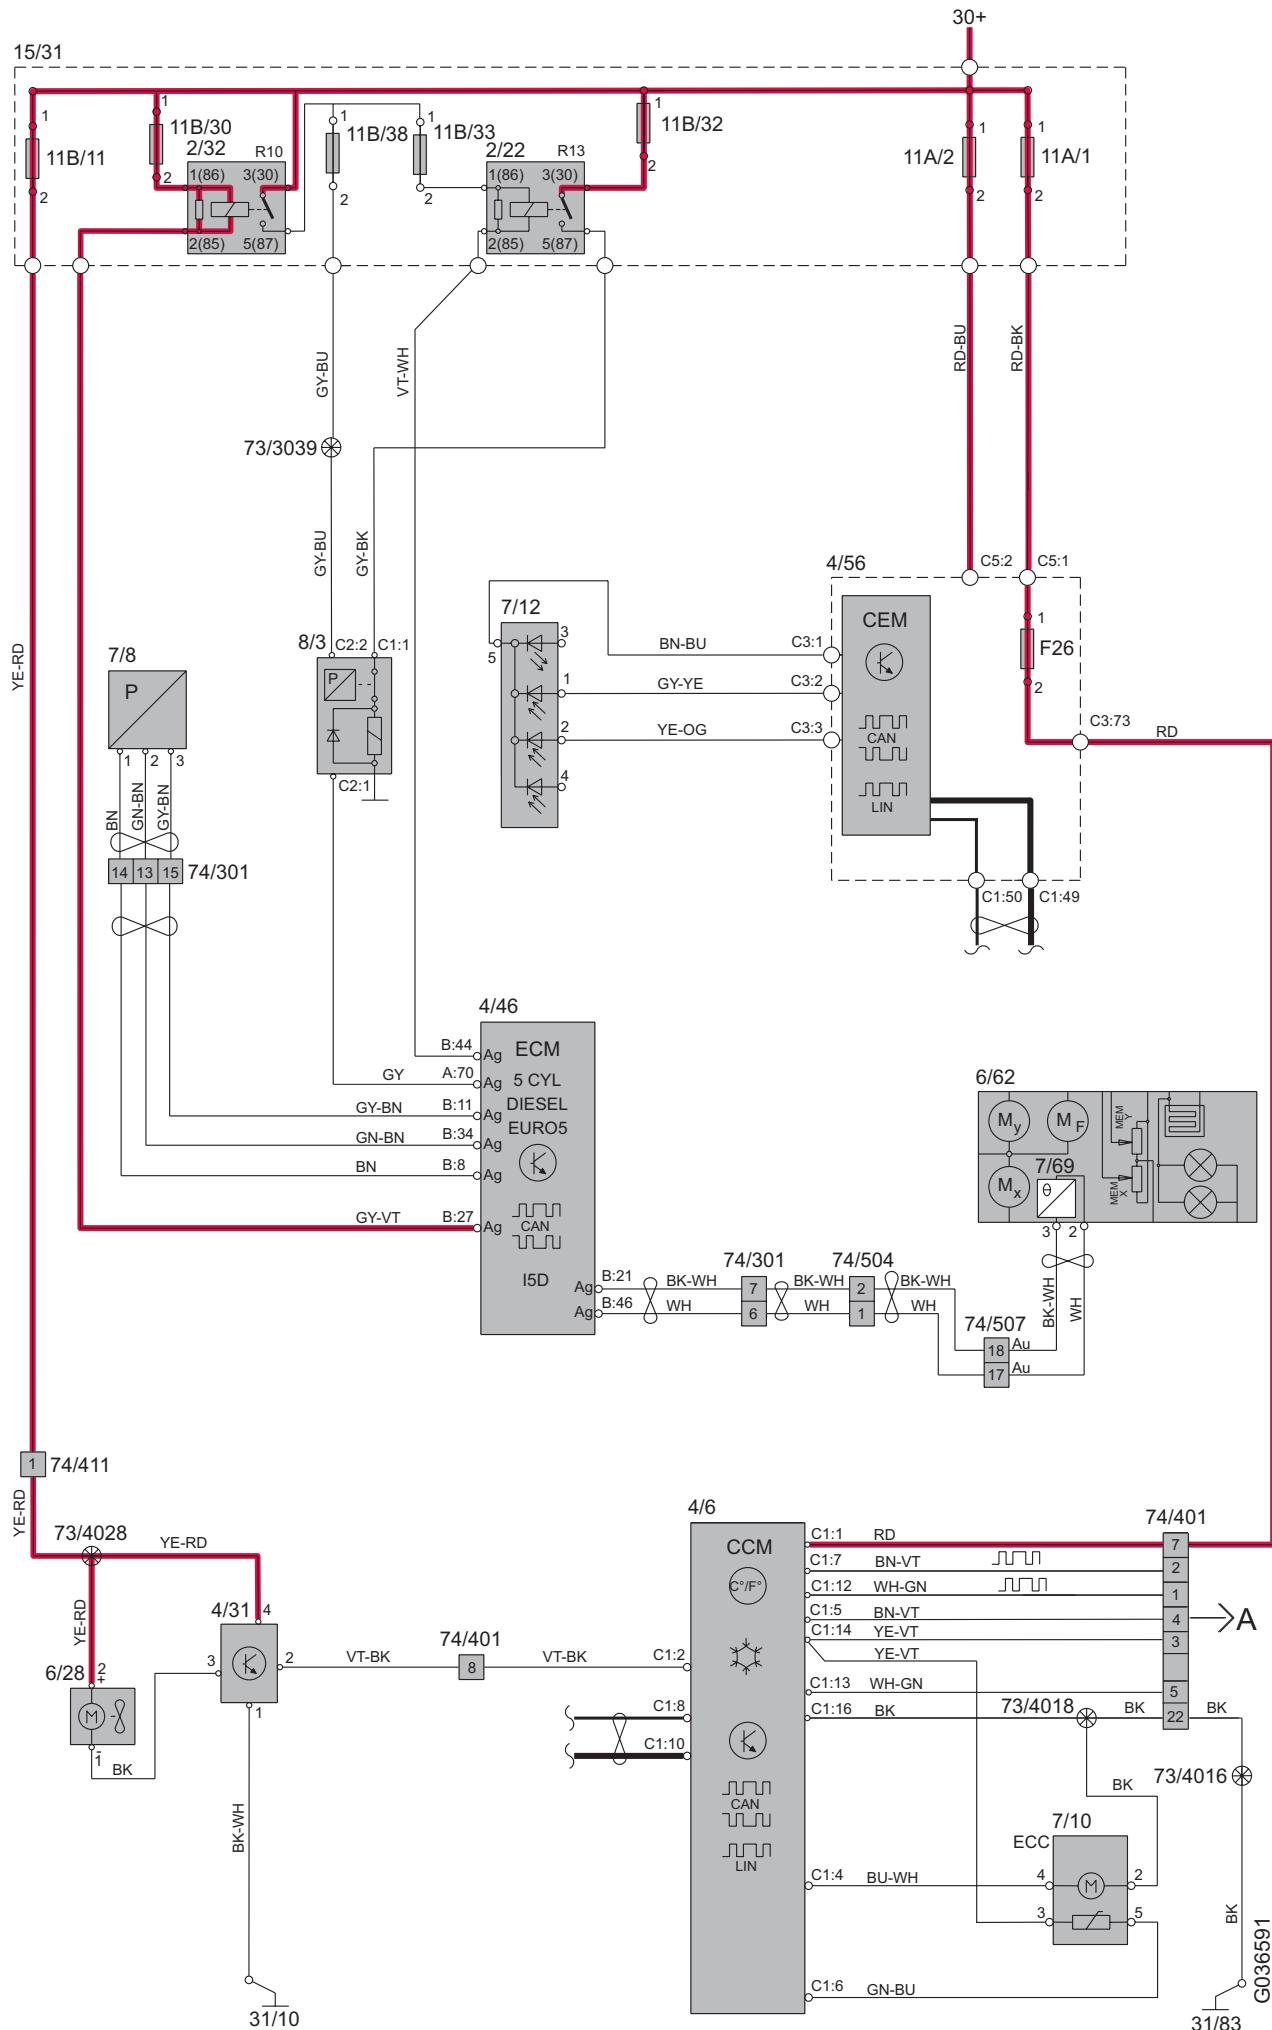


Group 87 Climate control system

Climate control system 5-Cyl. Diesel 2:2

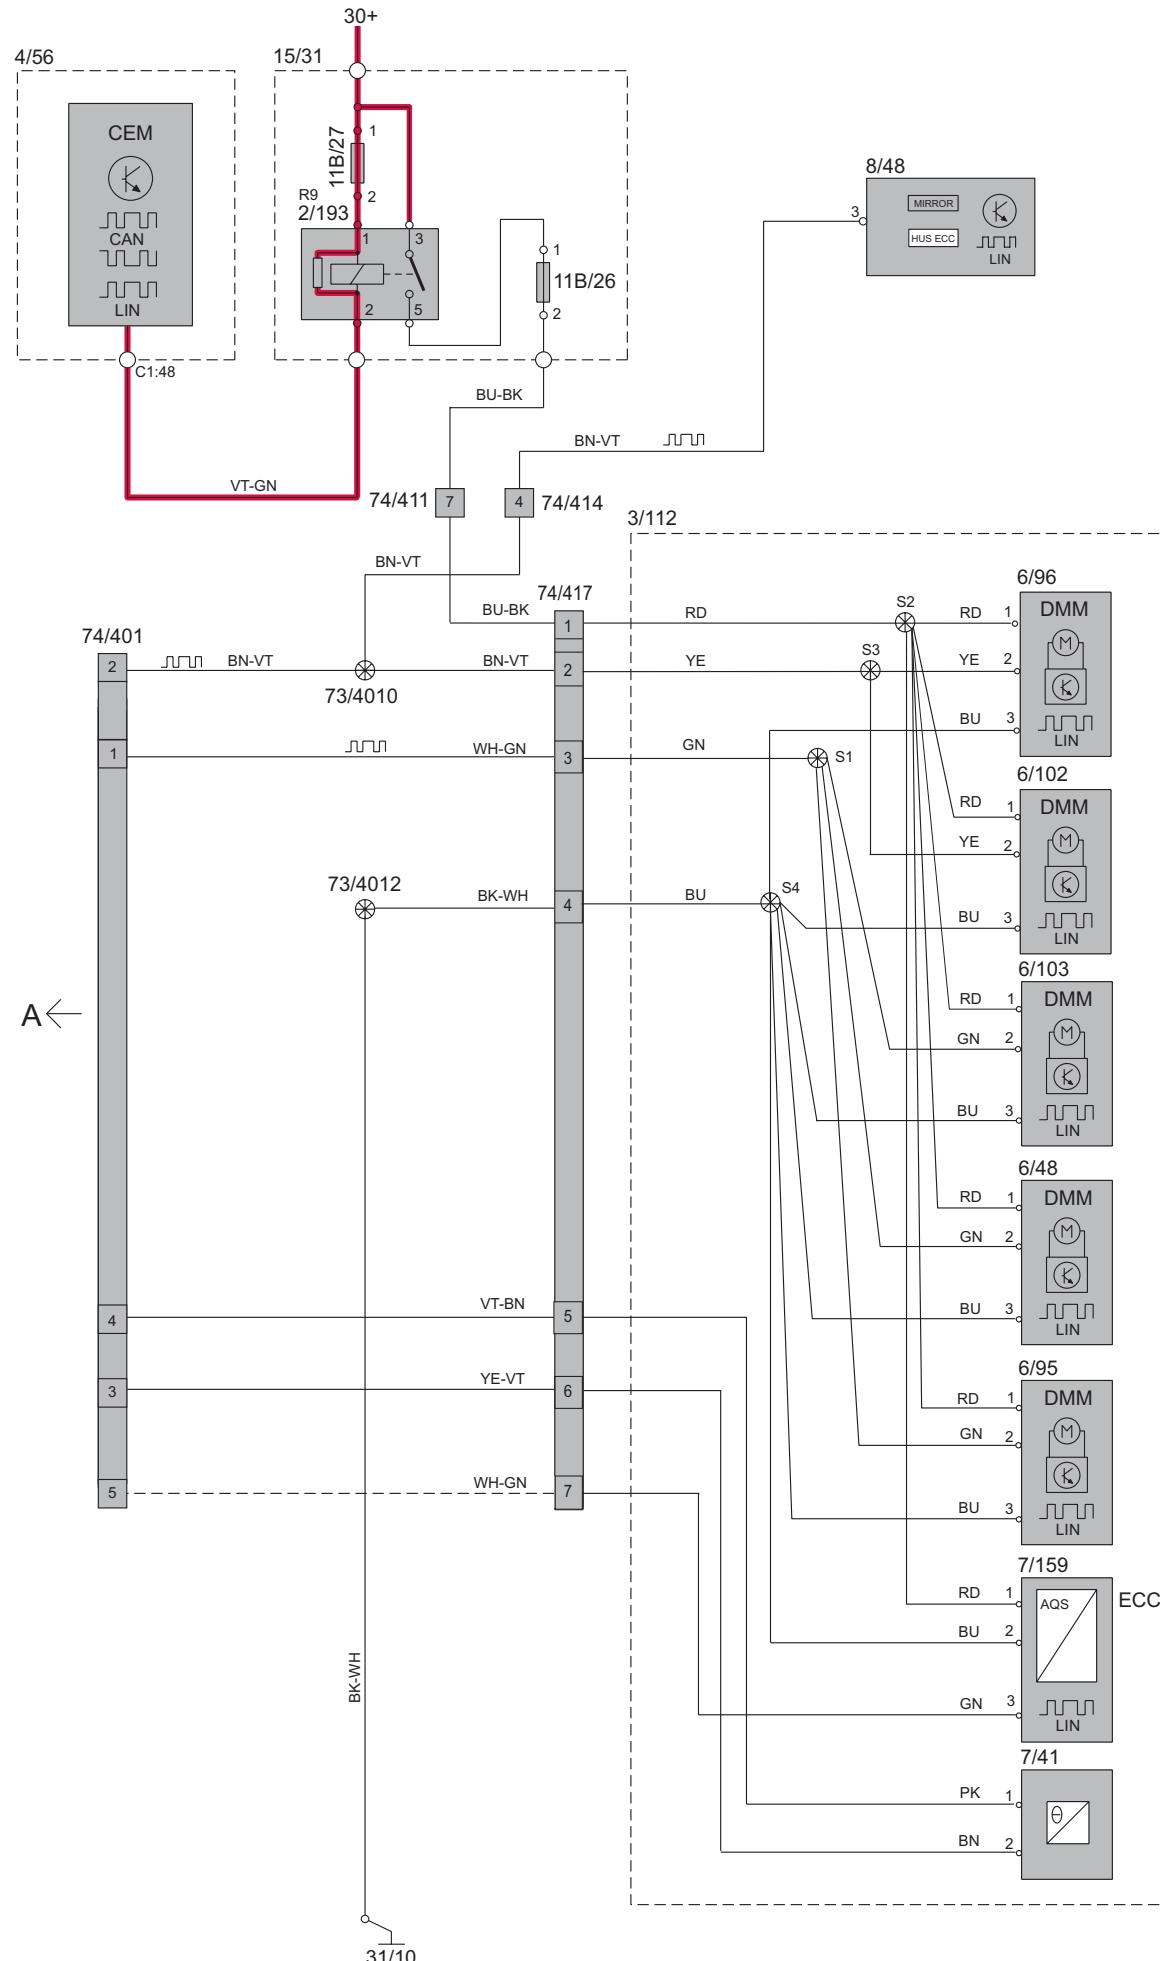


Group 87 Climate control system

Parking heater, auxiliary heater

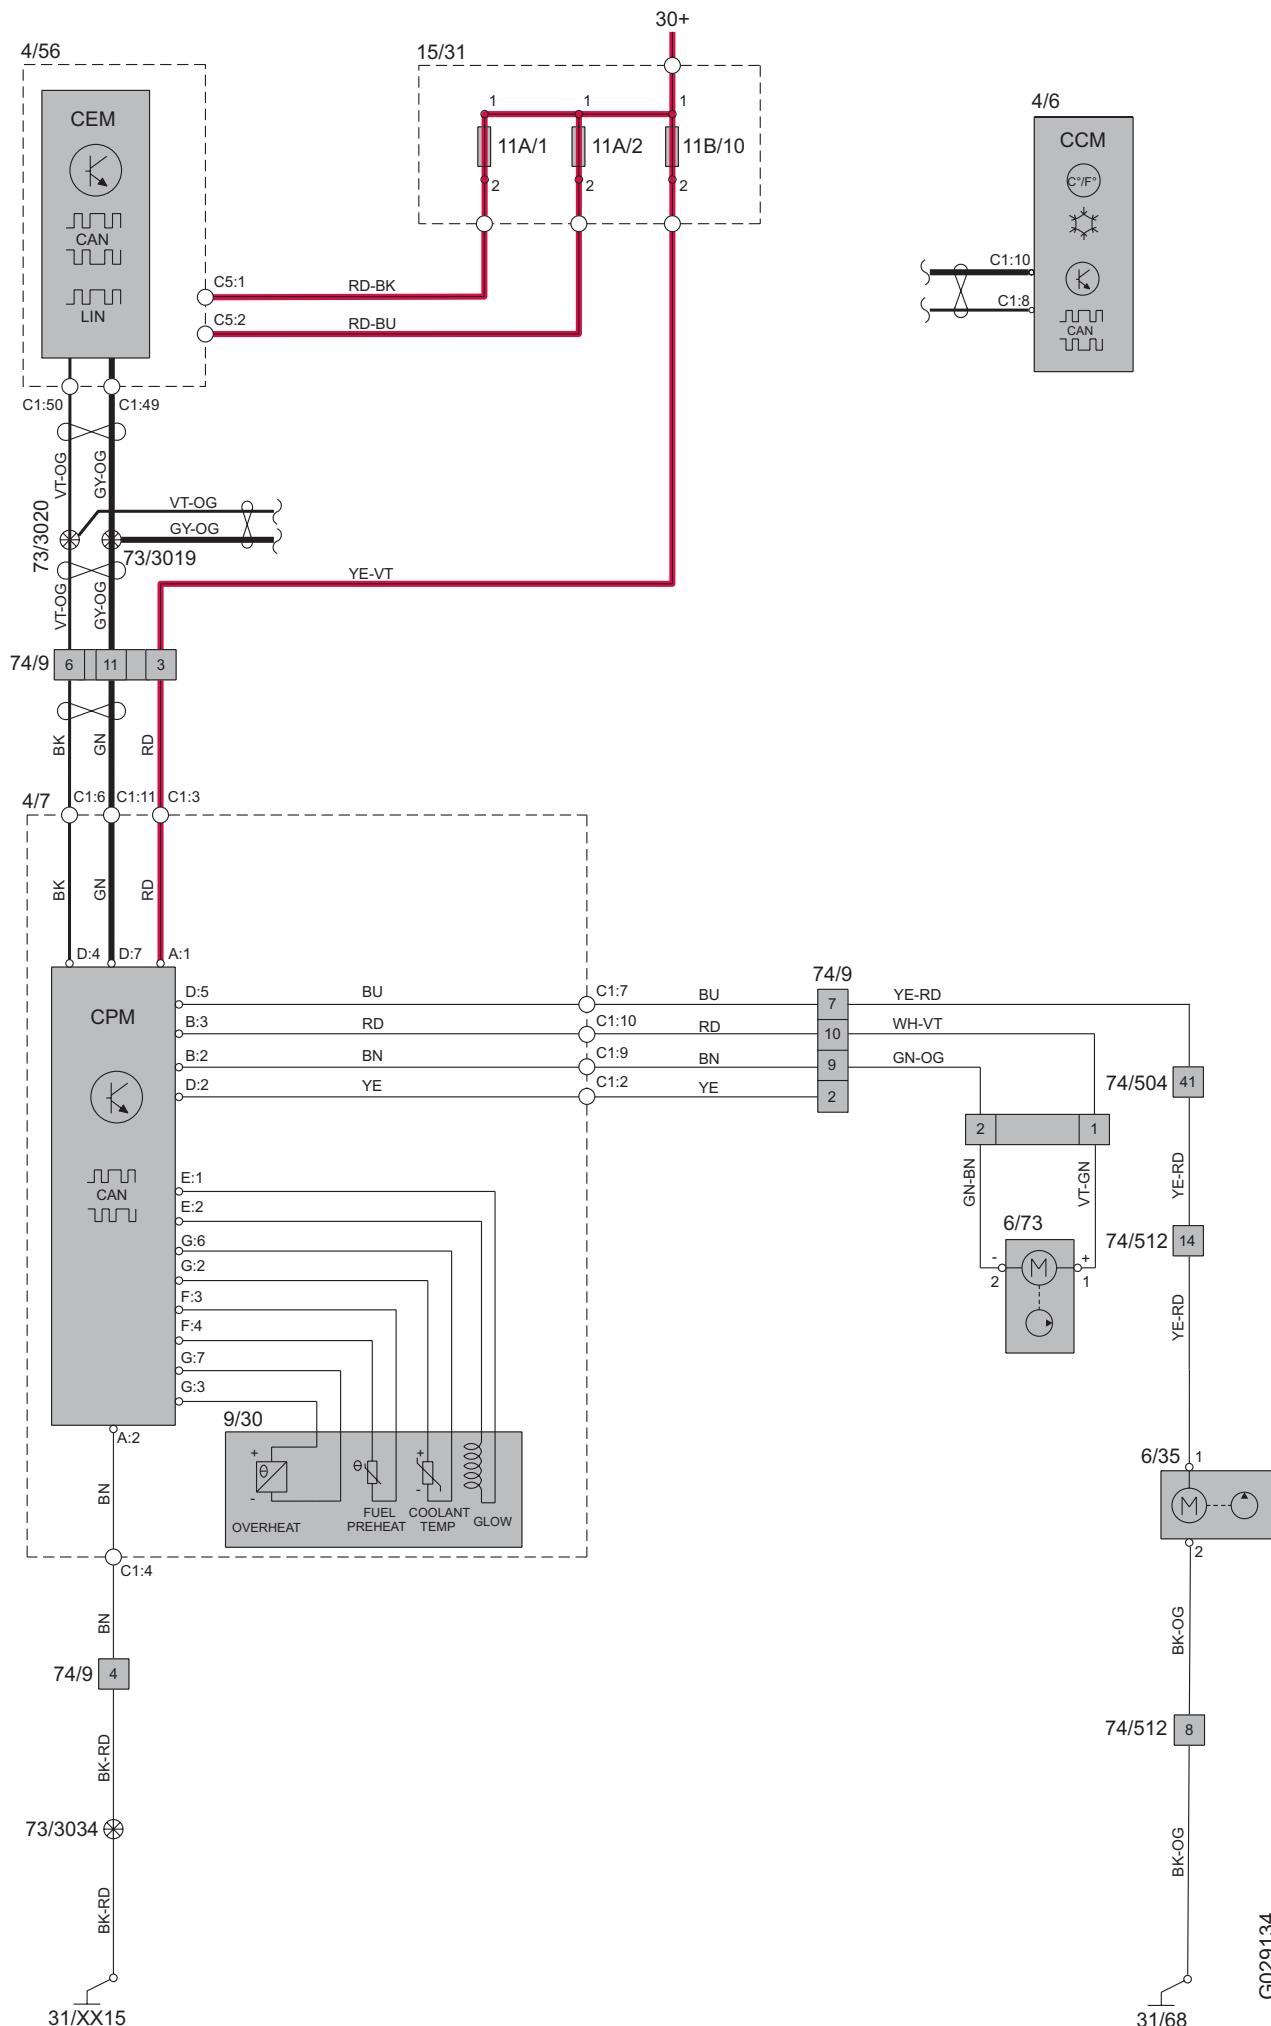


Group 87 Climate control system, Accessories

Parking heater, remote start

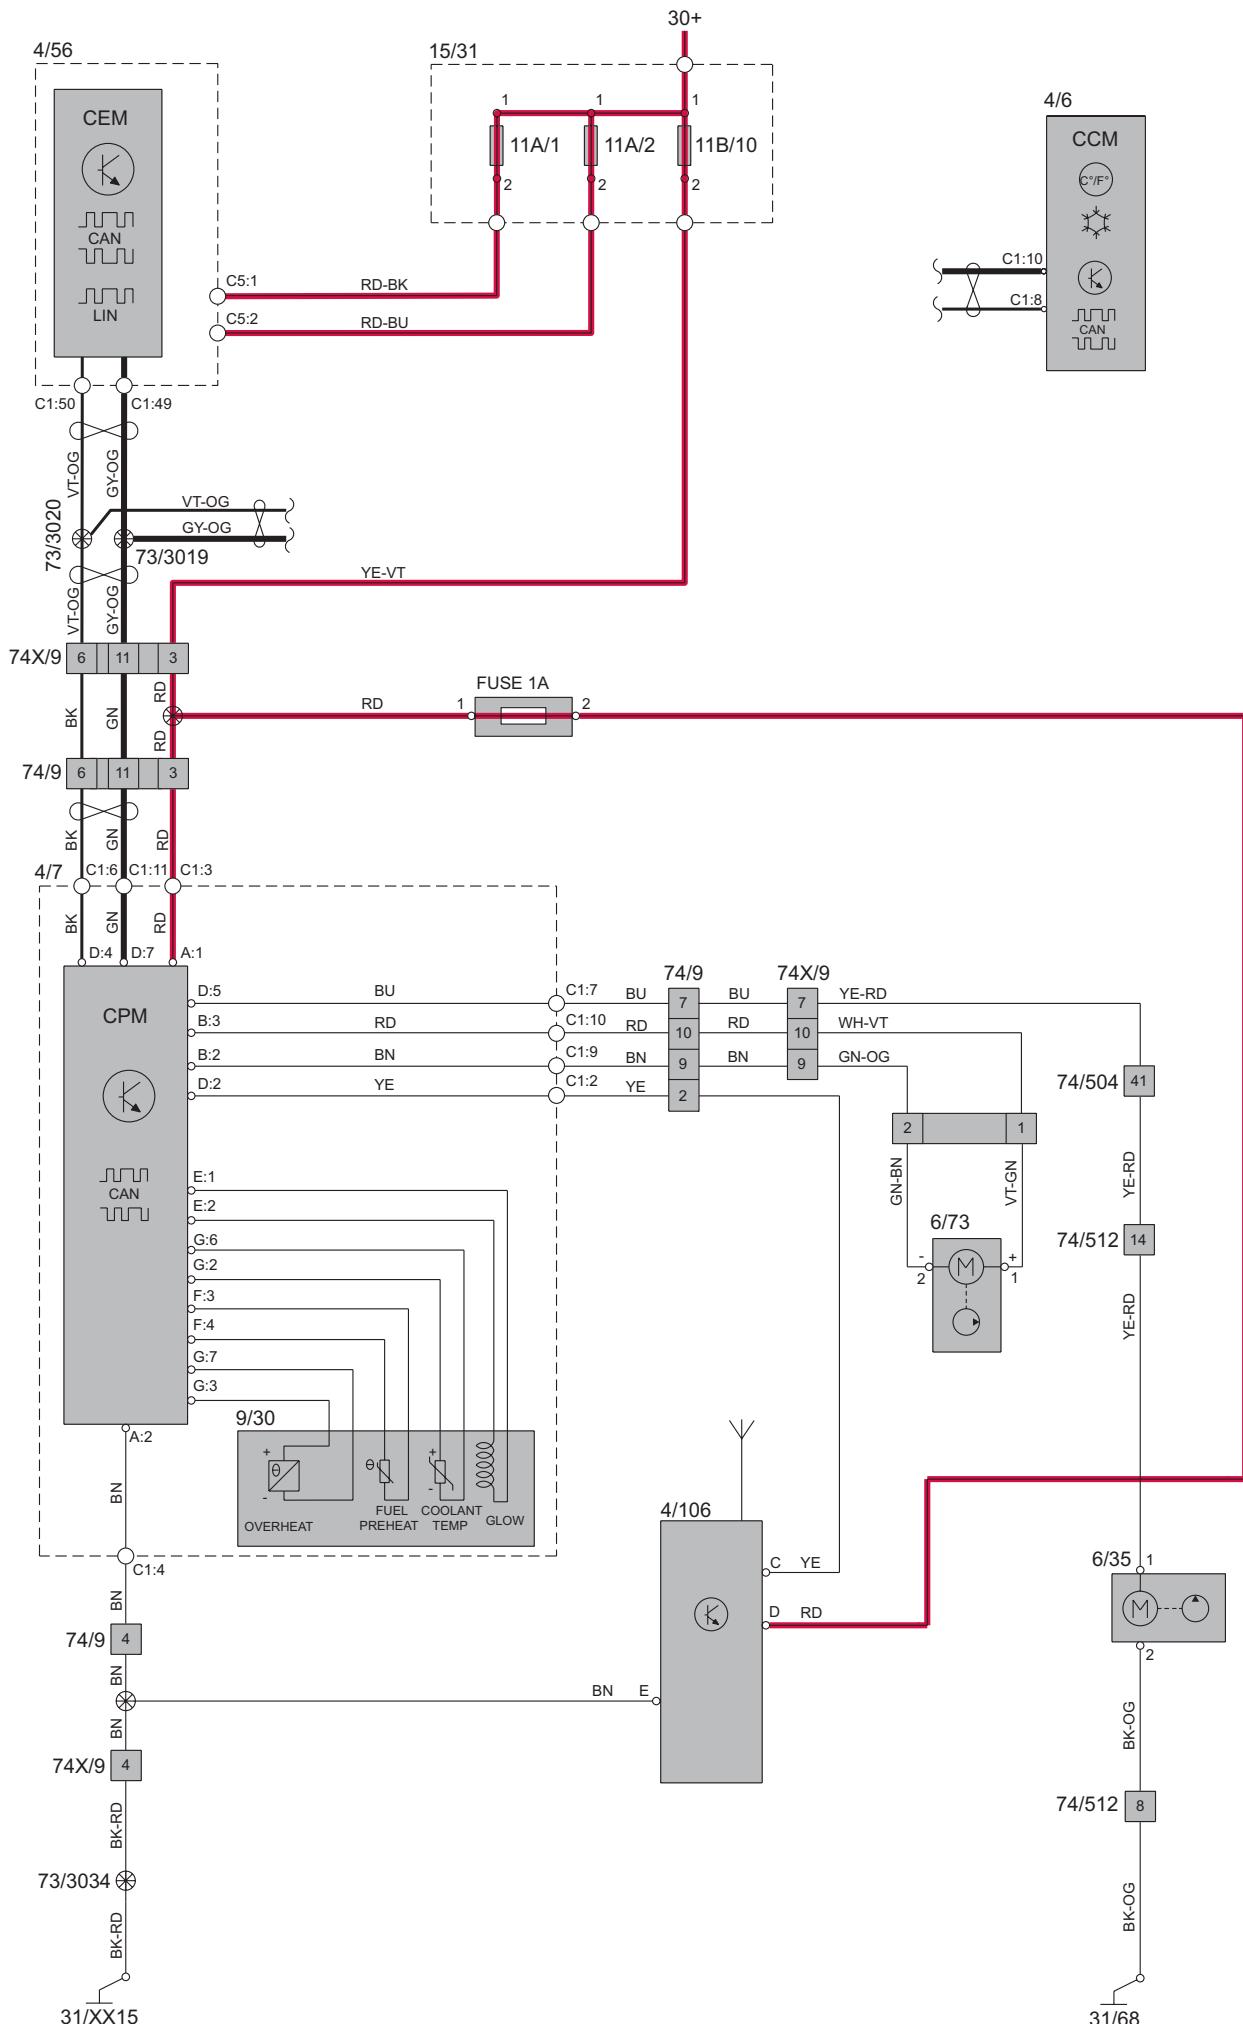


Group 87 Climate control system

Refrigeration box rear seat

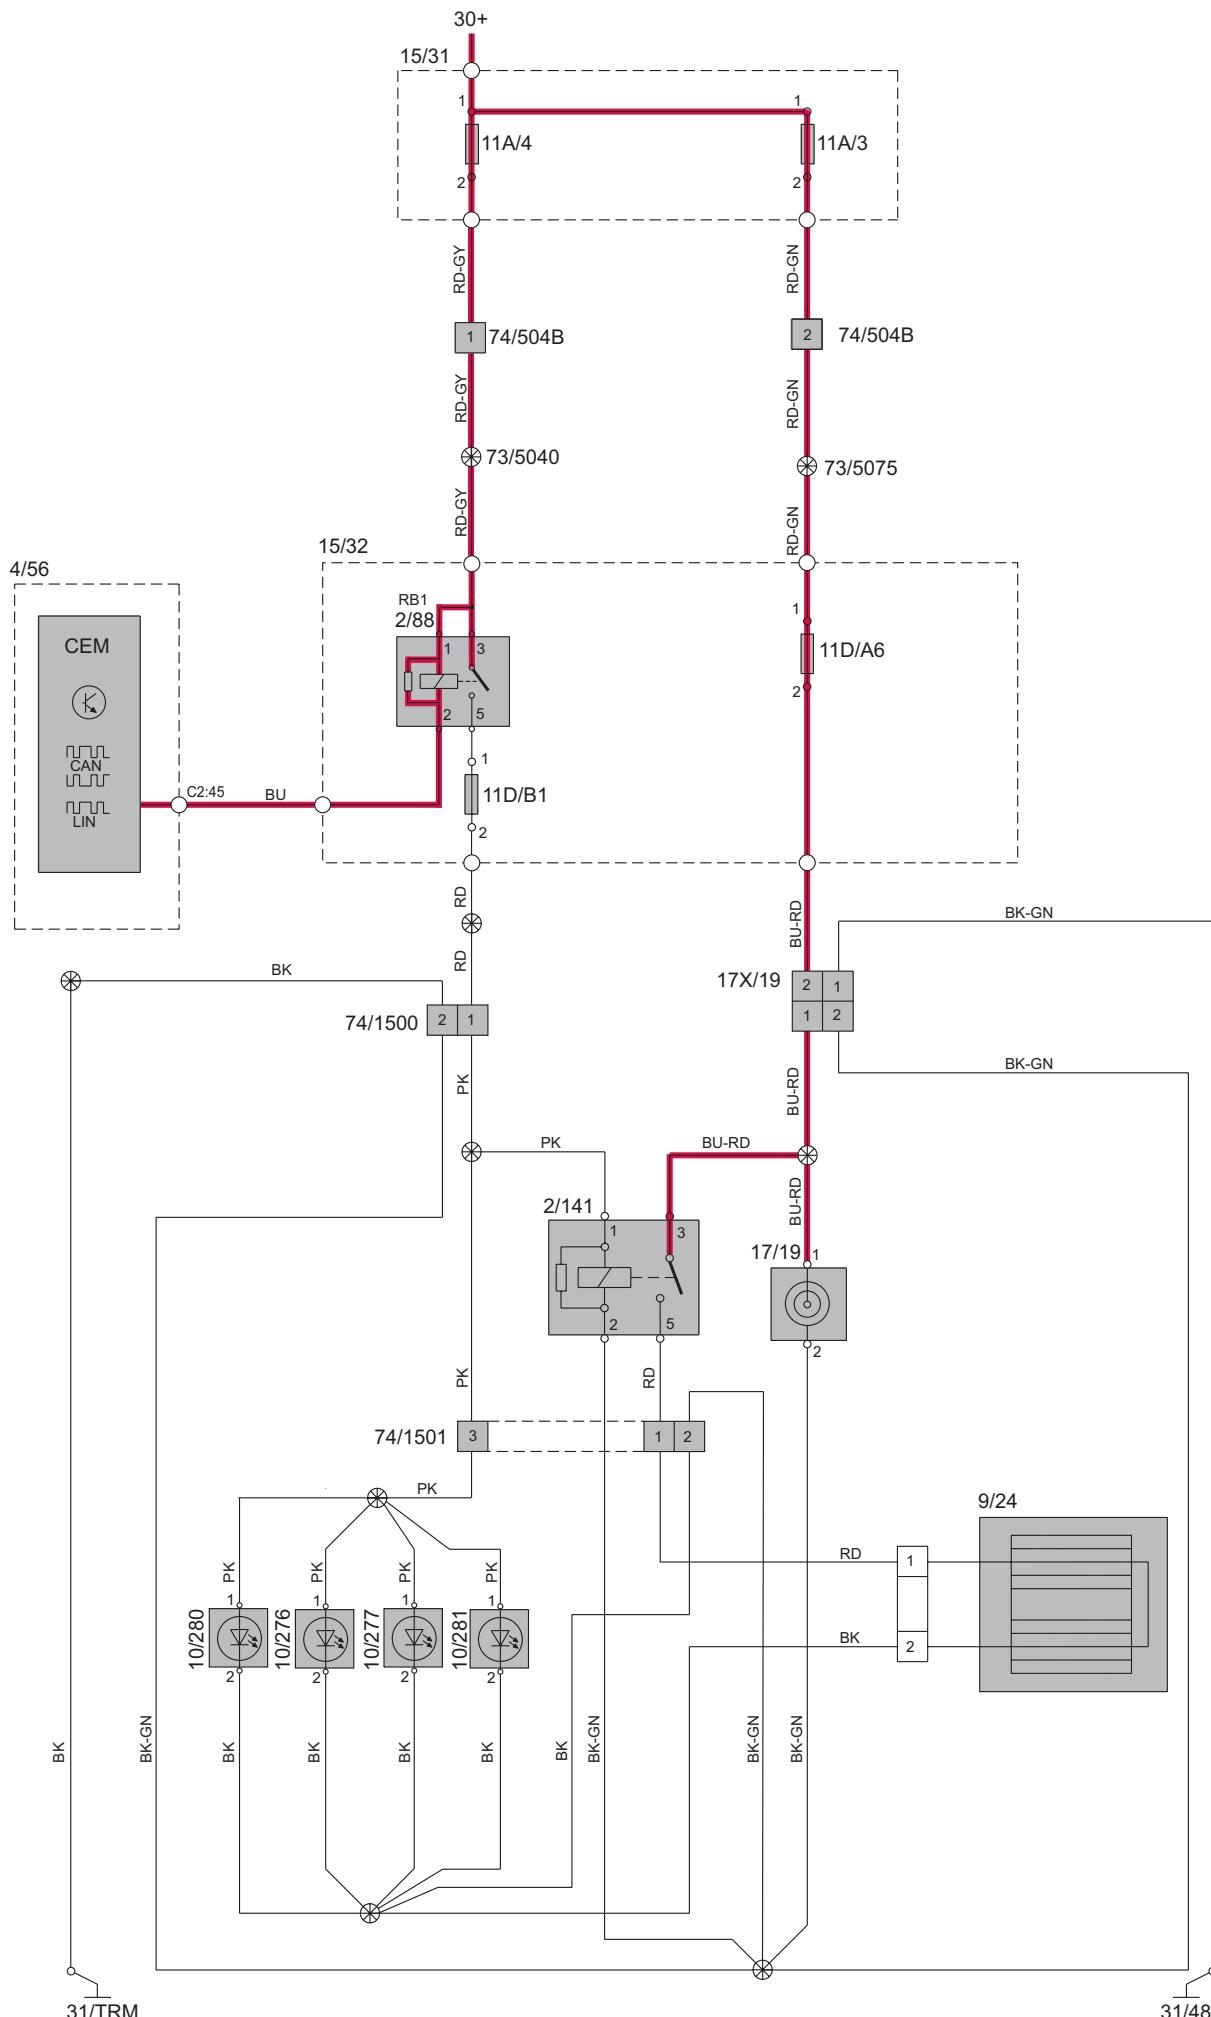

Group 88 Internal equipment


Rear-view mirror with automatic dimming

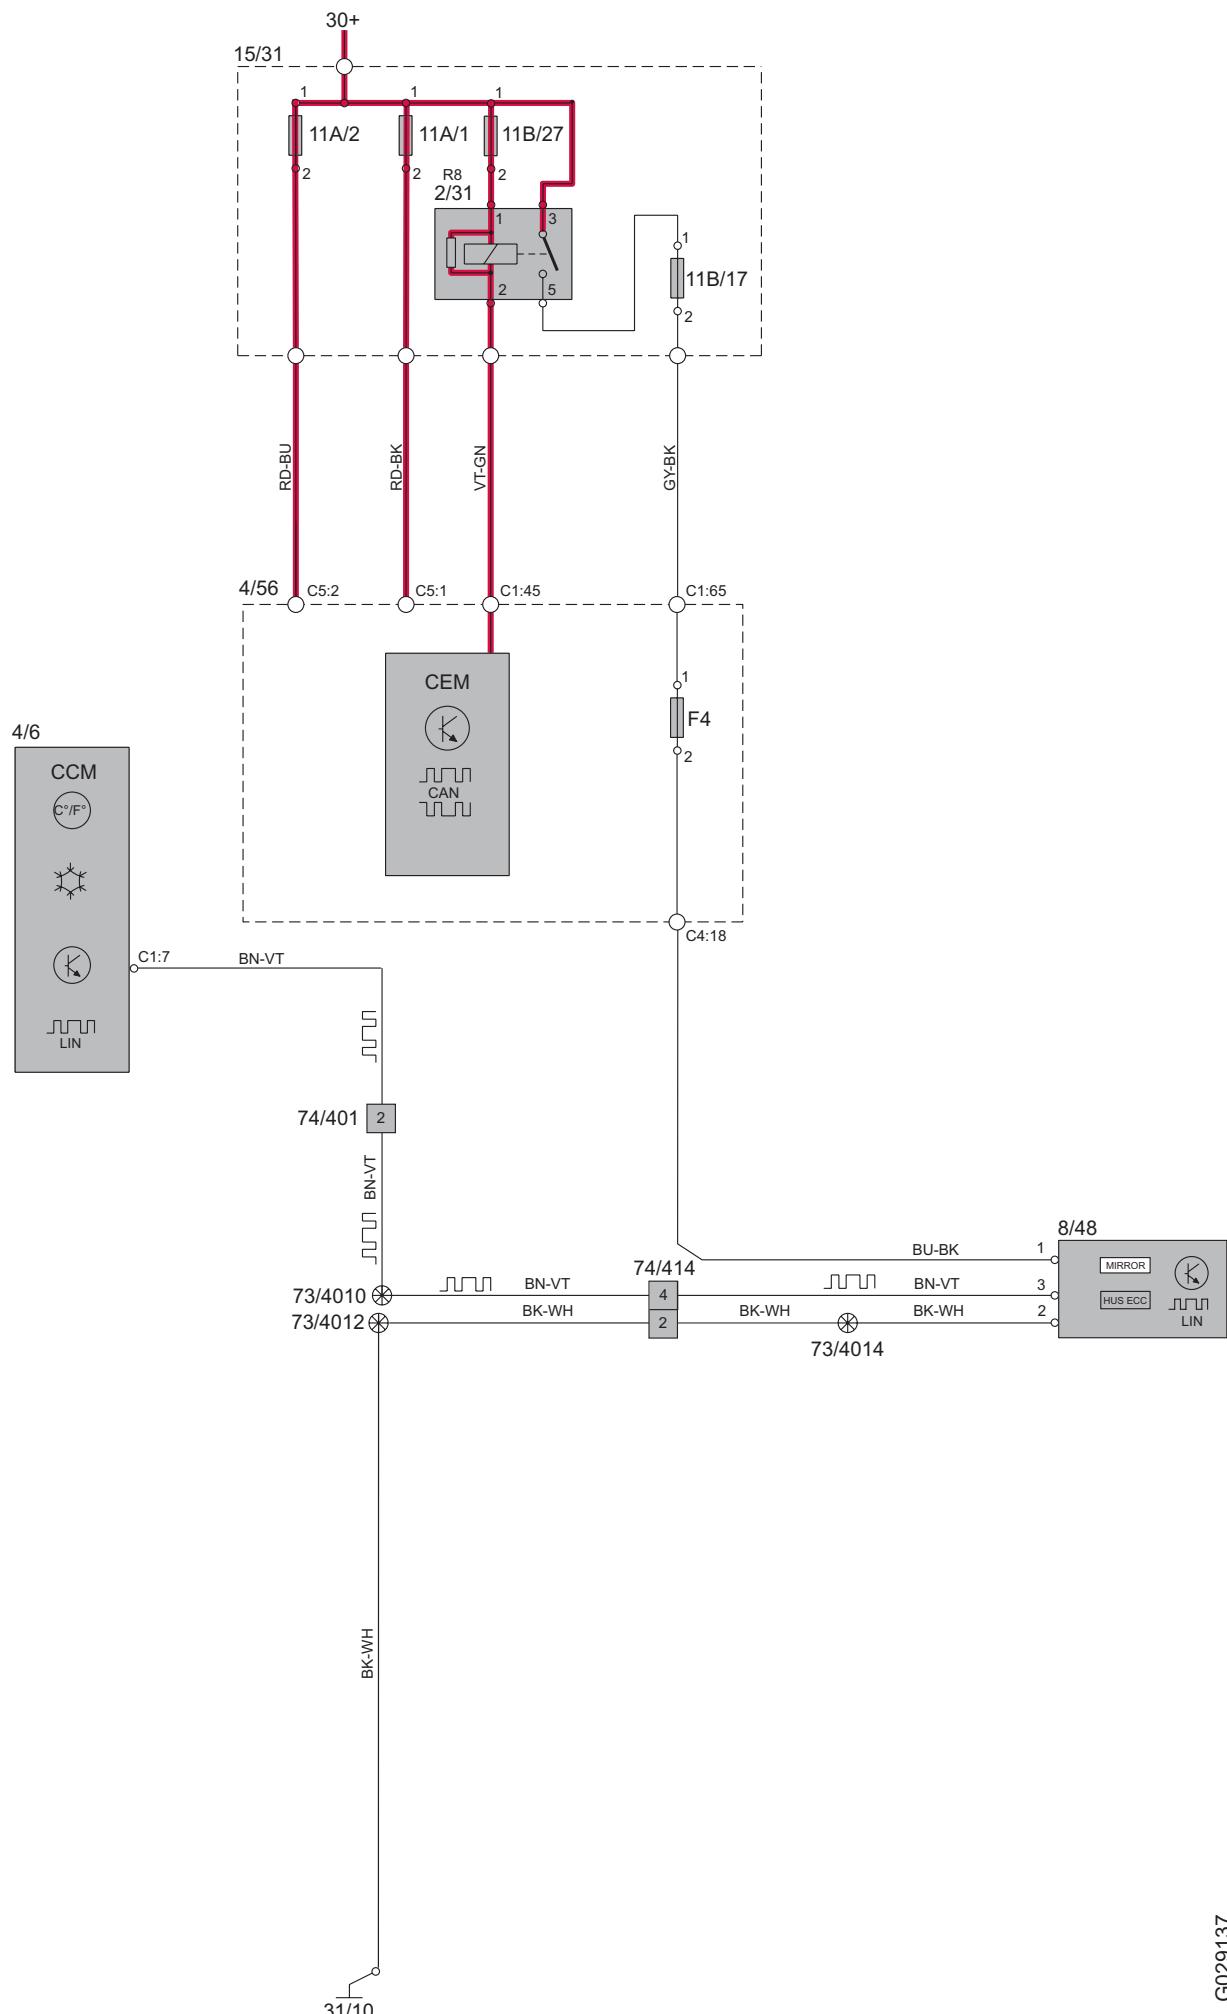


G029137

Group 88 Internal equipment

Supplemental restraint system 1:2

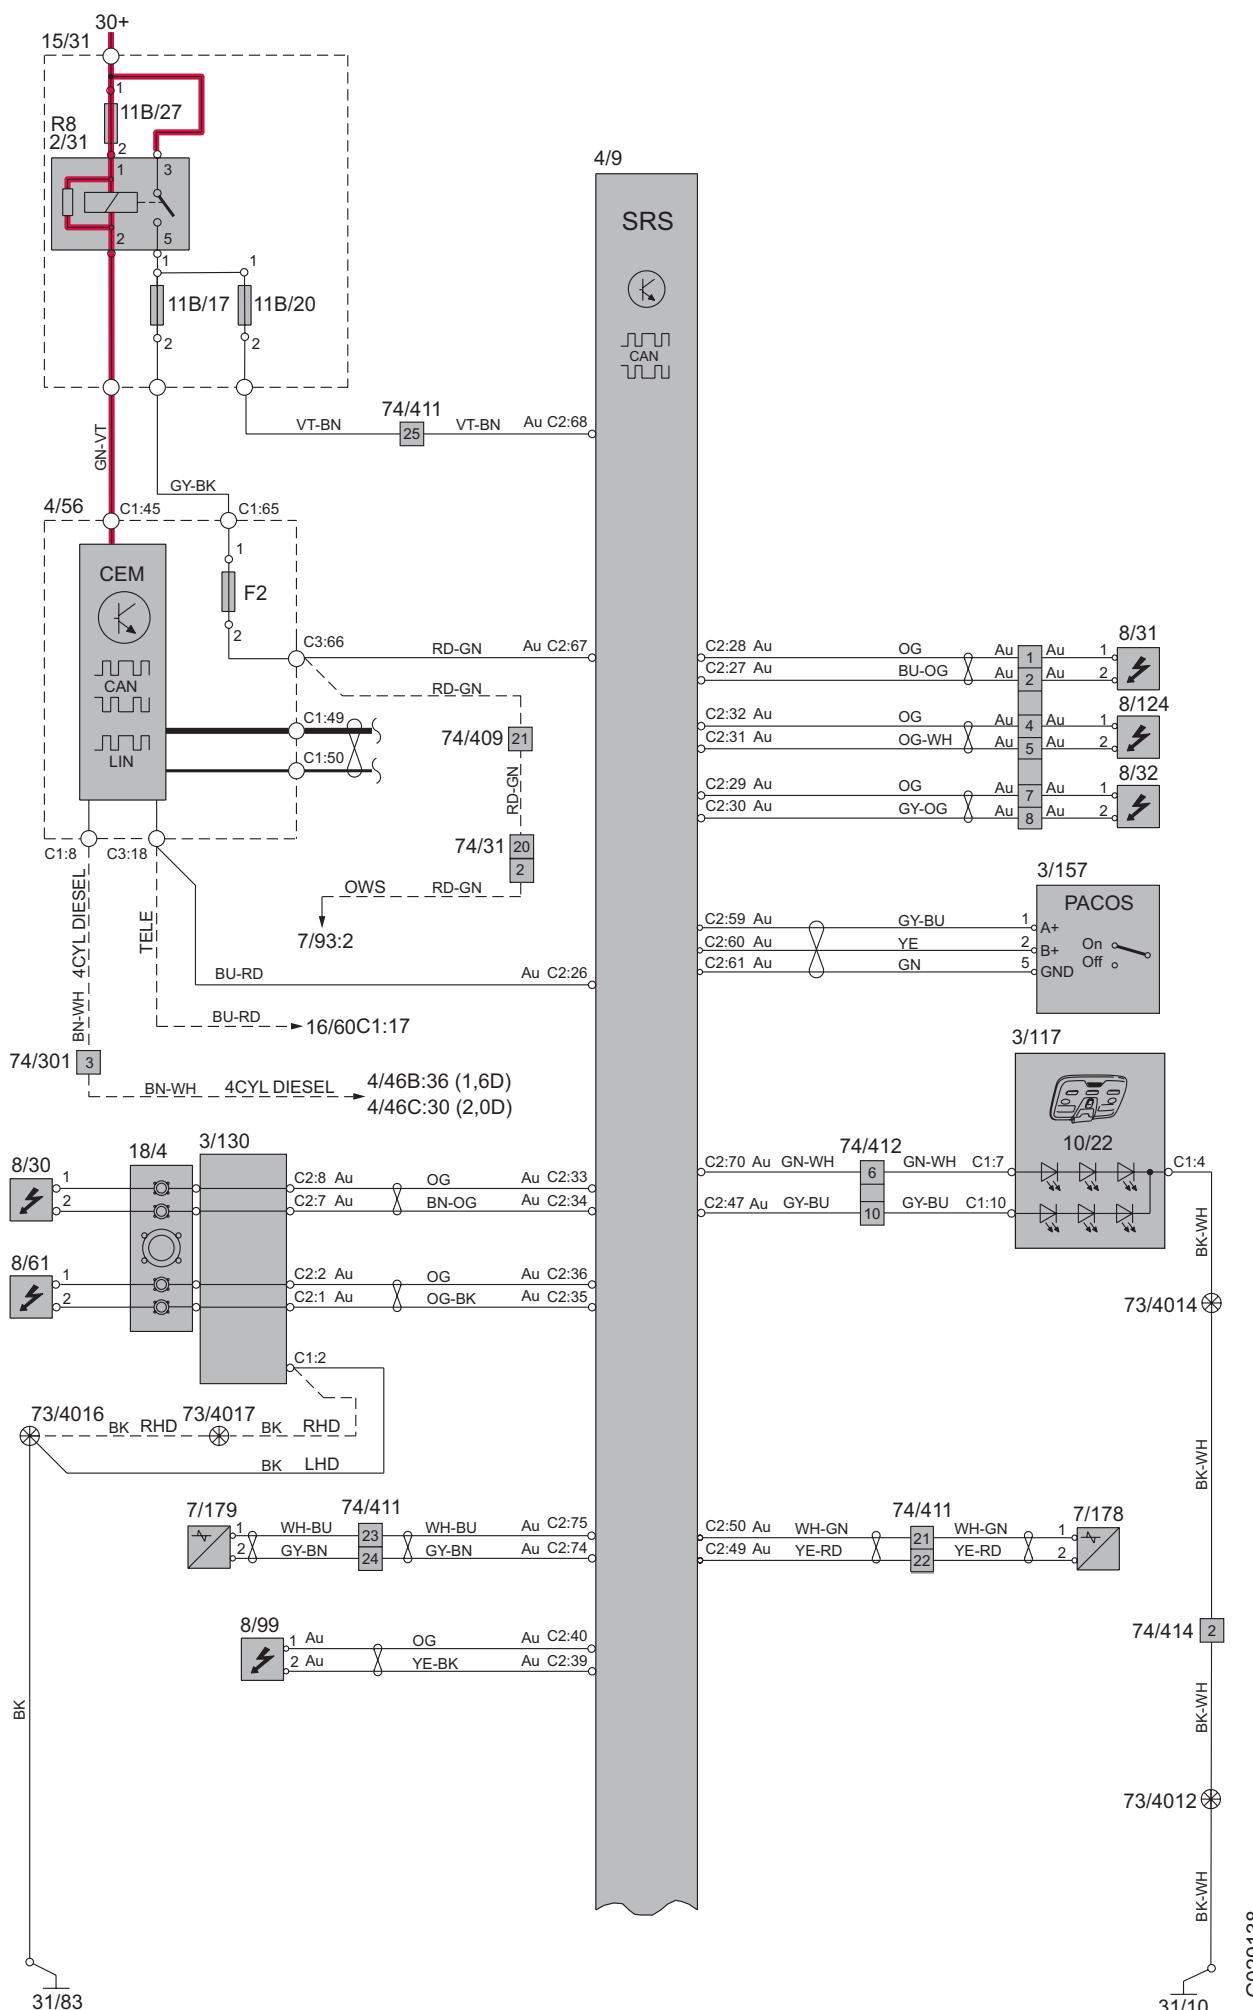


Group 88 Internal equipment Supplemental restraint system 2:2

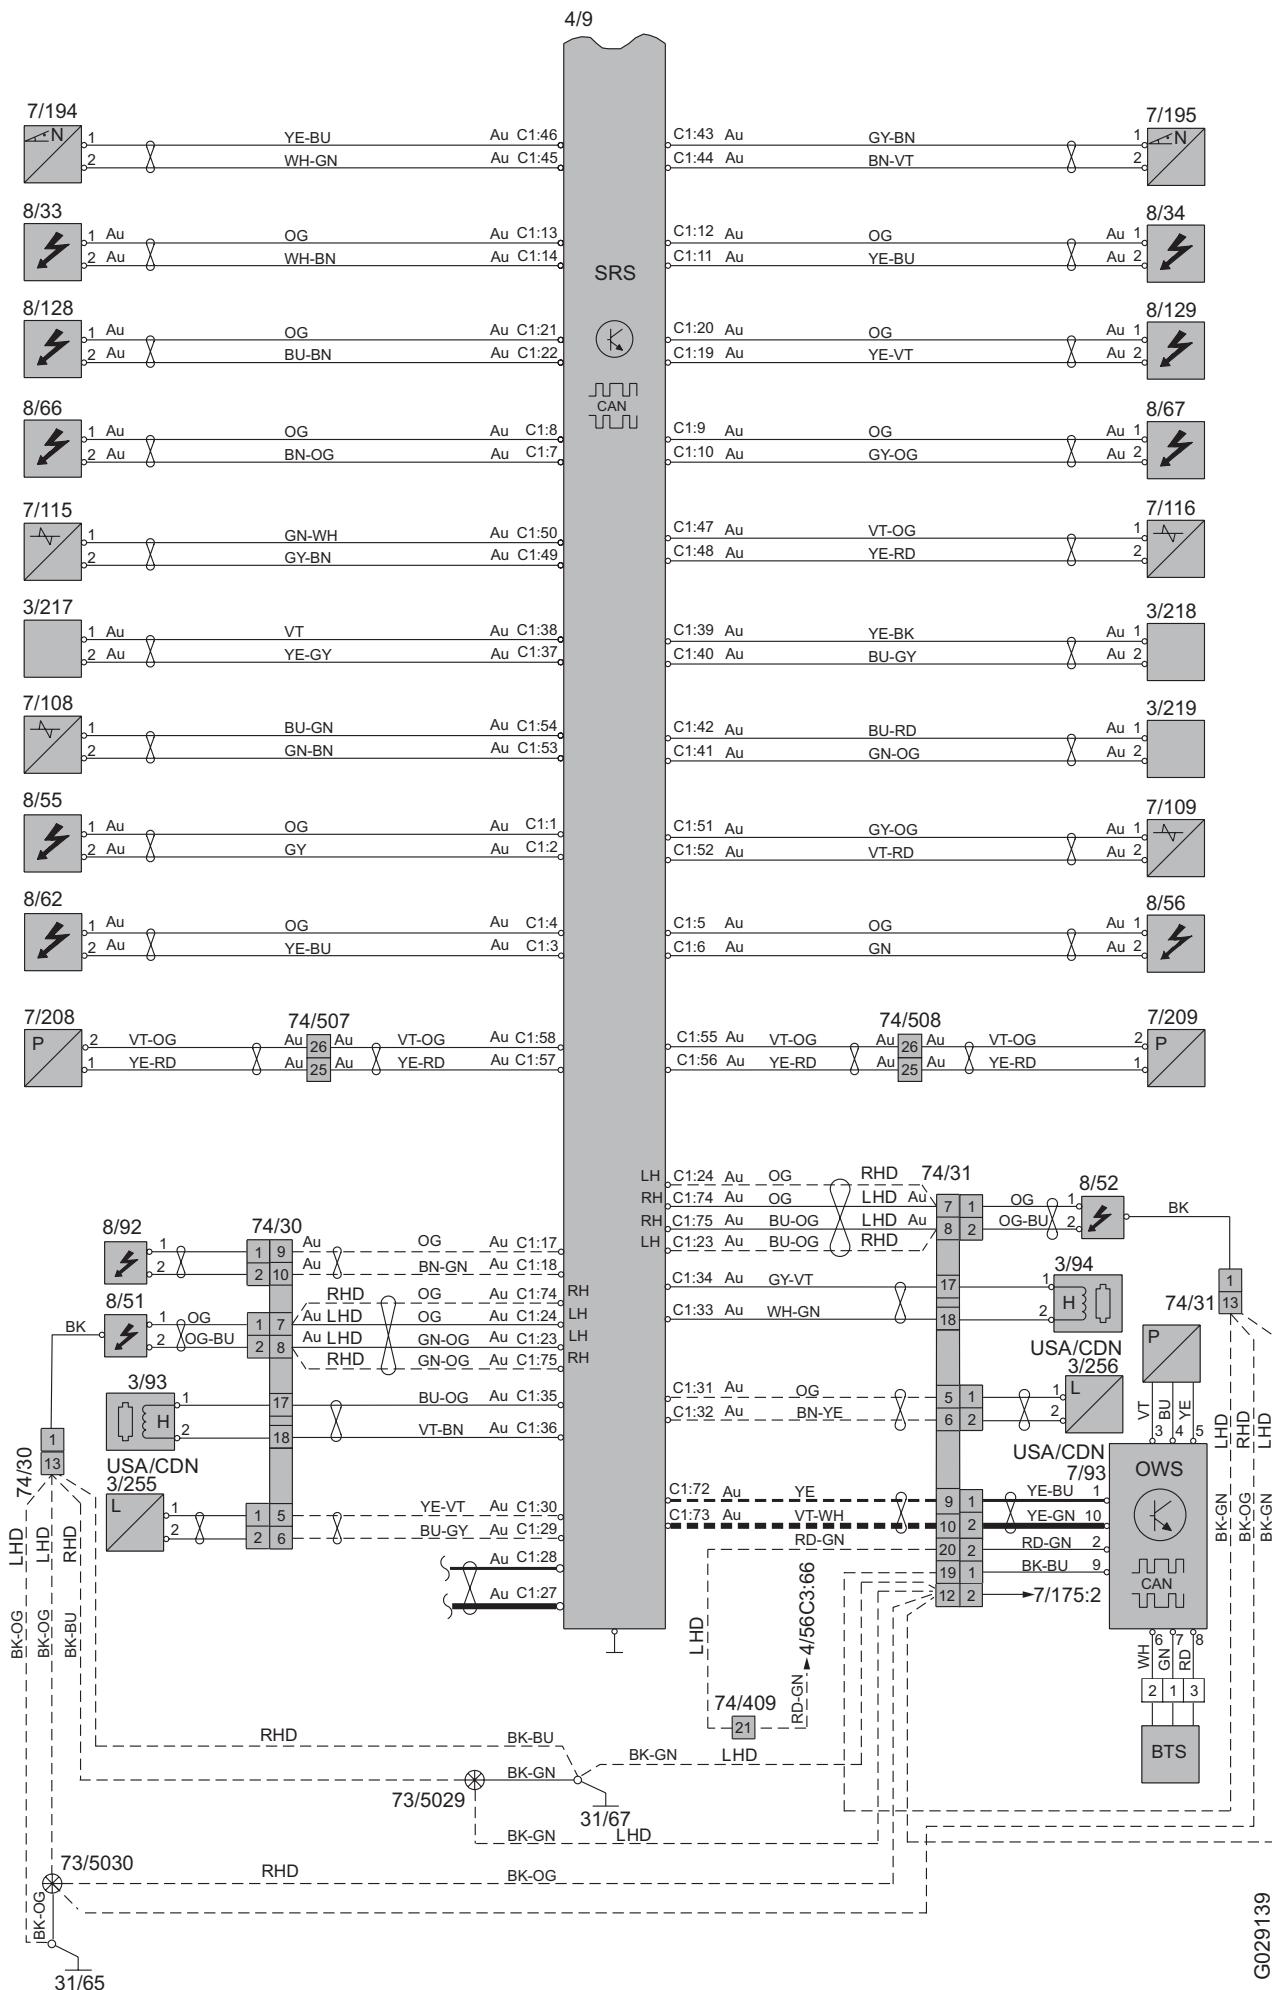


Group 88 Internal equipment

Power folding headrest

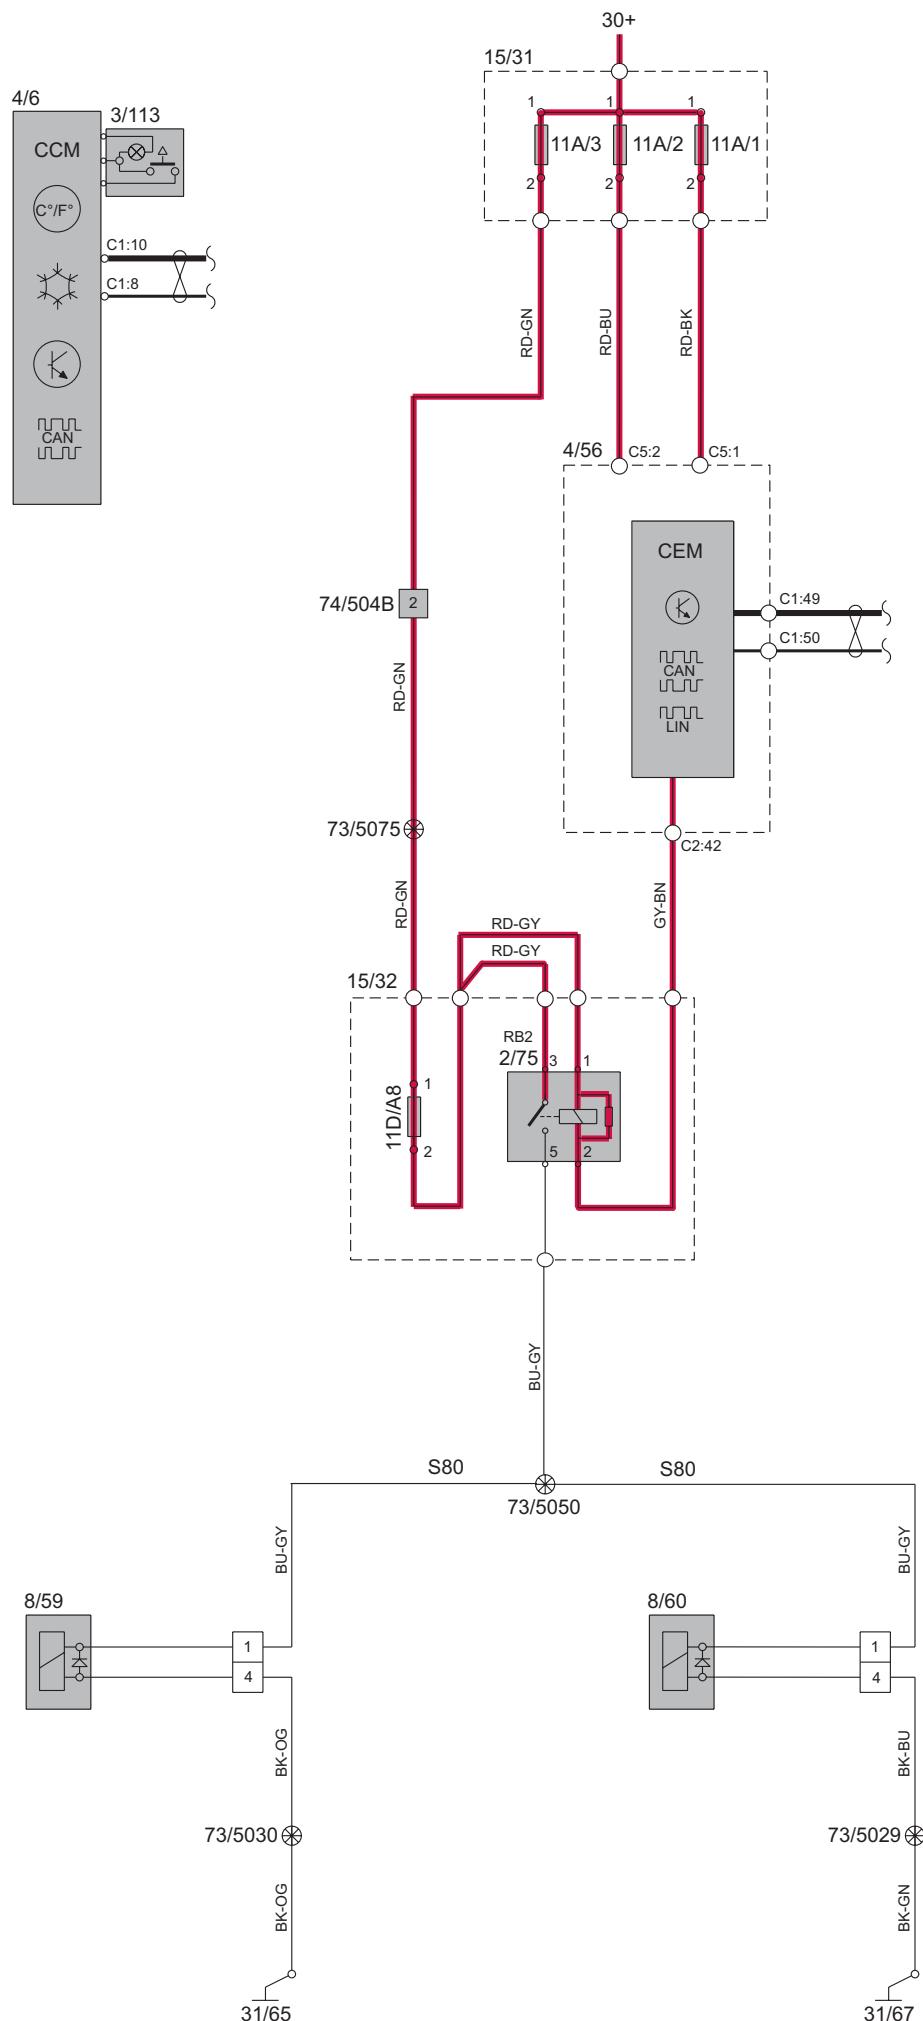

Group 88 Internal equipment

Remote controlled garage opening

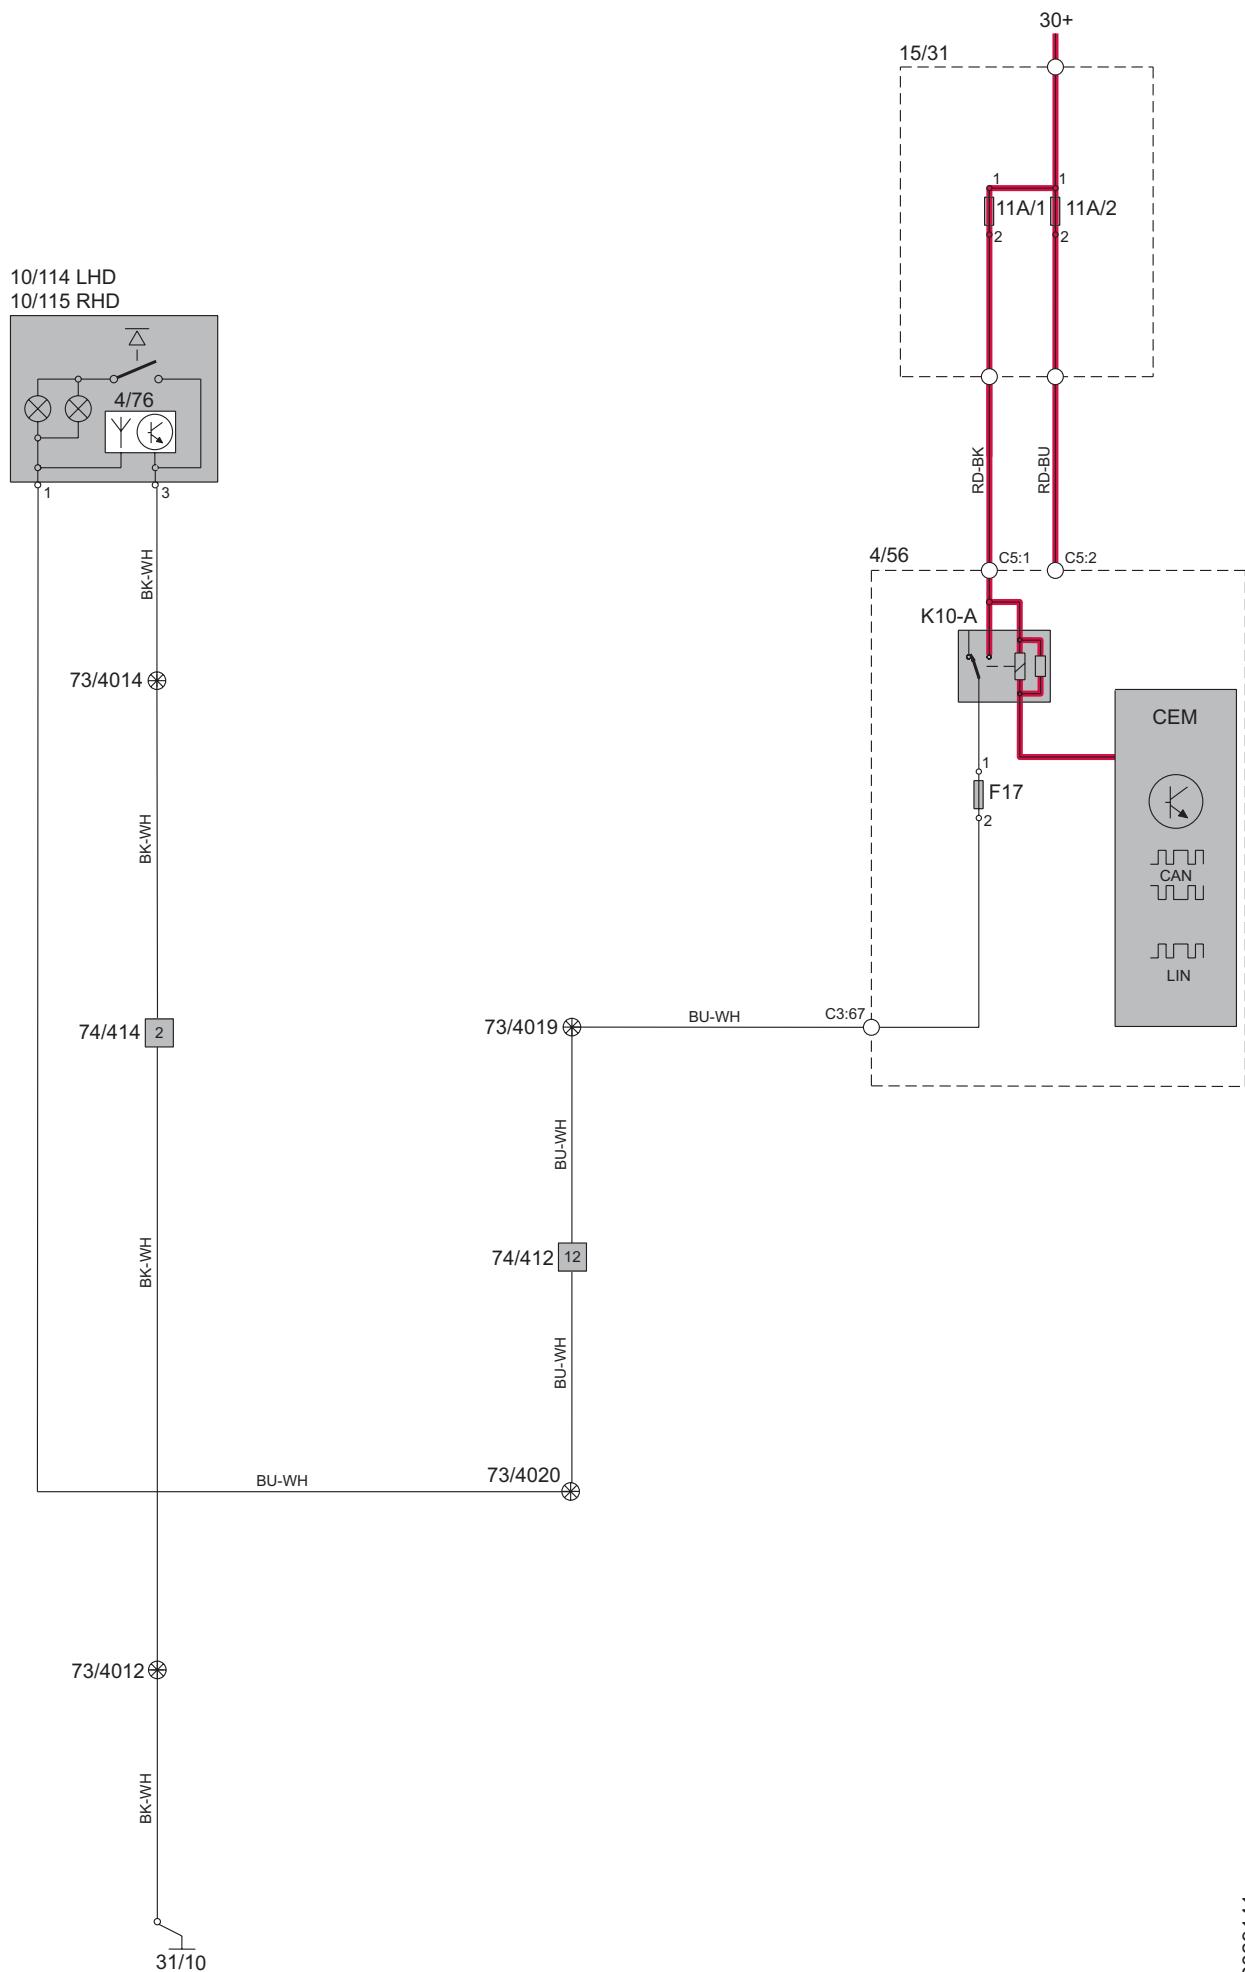

G029141

Connectors

74/9 - 74/30:1-8

74/9

12-pin black

| No. | Engine compartment harness | | | Heater harness | | |
|-----|----------------------------|--|---------|-----------------------------------|-----------------------------------|----|
| 1 | - | - | - | - | - | - |
| 2 | - | - | 4/7C1:2 | Combustion Preheater Module (CPM) | YE | |
| 3 | 11B/10:2 | Fuses in the engine compartment fuse box | YE-VT | 4/7C1:3 | Combustion Preheater Module (CPM) | RD |
| 4 | 73/3034 | Branching point | BK-RD | 4/7C1:4 | Combustion Preheater Module (CPM) | BN |
| 5 | - | - | - | - | - | - |
| 6 | 73/3020 | Branching point | VT-OG | 4/7C1:6 | Combustion Preheater Module (CPM) | BK |
| 7 | 74/504:41 | Connector | YE-RD | 4/7C1:7 | Combustion Preheater Module (CPM) | BU |
| 8 | - | - | - | - | - | - |
| 9 | 6/73:2 | Coolant pump | GN-OG | 4/7C1:9 | Combustion Preheater Module (CPM) | BN |
| 10 | 6/73:1 | Coolant pump | WH-VT | 4/7C1:10 | Combustion Preheater Module (CPM) | RD |
| 11 | 73/3019 | Branching point | GY-OG | 4/7C1:11 | Combustion Preheater Module (CPM) | GN |
| 12 | - | - | - | - | - | - |

74/30

20-pin black

| No. | Floor harness | | | Harness driver's seat | | |
|-----------|------------------------|--|----------------|-----------------------|---|-------|
| 1 | 73/5035 73/5023 | Branching point, LHD Branching point, RHD | BK-VT BK-GN | 9/12A:1 | Seat Heating Module (SHM), driver's side | BK |
| 2 | 11D/B3:2 | Fuse, Distribution box in cargo compartment | GY-BN | 9/12A:4 | Seat Heating Module (SHM), driver's side | YE-RD |
| 3 | - | - | - | - | - | - |
| 4 | 74/409:15 74/409:16 | Connector, LHD Connector, RHD | WH-GN | 9/12A:2 | Seat Heating Module (SHM), driver's side | WH-GN |
| 5 | 4/9C1:30 | Supplemental Restraint System Module (SRS) | YE-VT | 3/255:1 | Position sensor driver's seat USA/CDN | - |
| 6 | 4/9C1:29 | Supplemental Restraint System Module (SRS) | BU-GY | 3/255:2 | Position sensor driver's seat USA/CDN | - |
| 7 | 4/9C1:24 4/9C1:74 | Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD | OG | 8/51:1 | Front left side airbag igniter | OG |
| 8 | 4/9C1:23 4/9C1:75 | Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD | GN-OG | 8/51:2 | Front left side airbag igniter | OG-BU |
| continues | | | | | | |

Connectors

74/30:9-20 74/31:1-6

74/30

12-pin black

| No. | Floor harness | | | Harness driver's seat | | |
|-----|--------------------|--|----------------|-----------------------|--|-------|
| 9 | 4/9C1:17 | Supplemental Restraint System Module (SRS) | OG | 8/92:1 | Lap belt tensioner, driver | - |
| 10 | 4/9C1:18 | Supplemental Restraint System Module (SRS) | BN-GN | 8/92:2 | Lap belt tensioner, driver | - |
| 11 | 73/5004 | Branching point | VT-OG | 4/52C2:3 | Power Seat Module (PSM) | BU-RD |
| 12 | 73/5003 | Branching point | GY-OG | 4/52C2:4 | Power Seat Module (PSM) | GY-RD |
| 13 | 31/65 73/5030 | Ground connection, LHD Branching point, LHD | BK-OG | 8/51 | Front left side airbag igniter | BK |
| | 31/67 73/5029 | Ground connection, RHD Branching point, RHD | BK-BU | | | |
| 14 | 4/56C2:64 | Central Electronic Module (CEM) | VT-GN | 4/52C2:1 4/52C2:6 | Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD | RD-WH |
| 15 | 11D/A10:2 | Fuse, Distribution box in cargo compartment | RD-BU | 4/52C1:1 4/52C1:7 | Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD | RD |
| 16 | 73/5035 73/5023 | Branching point, LHD Branching point, RHD | BK-VT BK-GN | 73/3 | Branching point | BK |
| 17 | 4/9C1:35 | Supplemental Restraint System Module (SRS) | BU-OG | 3/93:1 | Contact, driver's seat belt buckle | - |
| 18 | 4/9C1:36 | Supplemental Restraint System Module (SRS) | VT-BN | 3/93:2 | Contact, driver's seat belt buckle | - |
| 19 | - | - | - | - | - | - |
| 20 | - | - | - | - | - | - |

74/31

20-pin black

| No. | Floor harness | | | Harness passenger seat | | |
|-----------|------------------------|--|----------------|------------------------|--|-------|
| 1 | 73/5023 73/5035 | Branching point, LHD Branching point, RHD | BK-GN BK-VT | 9/13A:1 | Seat Heating Module (SHM), passenger side | BK |
| 2 | 11D/B4:2 | Fuse, Distribution box in cargo compartment | VT-OG | 9/13A:4 | Seat Heating Module (SHM), passenger side | YE-RD |
| 3 | - | - | - | - | - | - |
| 4 | 74/409:16 74/409:15 | Connector, LHD Connector, RHD | BN-VT | 9/13A:2 | Seat Heating Module (SHM), passenger side | WH-GN |
| 5 | 4/9C1:31 | Supplemental Restraint System Module (SRS) | OG | 3/256:1 | Position sensor passenger seat USA/CDN | - |
| 6 | 4/9C1:32 | Supplemental Restraint System Module (SRS) | BN-YE | 3/256:2 | Position sensor passenger seat USA/CDN | - |
| continues | | | | | | |

Connectors

74/31:7-20

74/31

20-pin black

| No. | Floor harness | | | Harness passenger seat | | |
|-----|---|--|----------------|------------------------|--|-------|
| 7 | 4/9C1:74 4/9C1:24 | Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD | OG | 8/52:1 | Igniter side airbag front right | OG |
| 8 | 4/9C1:75 4/9C1:23 | Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD | BU-OG | 8/52:2 | Igniter side airbag front right | OG-BU |
| 9 | 4/9C1:72 | Supplemental Restraint System Module (SRS) | YE | 7/93:1 | Occupant weight sensor (OWS) USA/CDN | YE-BU |
| 10 | 4/9C1:73 | Supplemental Restraint System Module (SRS) | VT-WH | 7/93:10 | Occupant weight sensor (OWS) USA/CDN | YE-GN |
| 11 | 4/56C2:23 | Central Electronic Module (CEM) | BN-VT | 7/175:1 | Occupant weight sensor, seat belt reminder | - |
| 12 | 31/67 73/5029 73/5030 74/31:13 | Ground connection, LHD Branching point, LHD Branching point, RHD Connector, RHD | BK-GN BK-OG | 7/175:2 | Occupant weight sensor, seat belt reminder | - |
| 13 | 73/5030 74/31:12 74/31:19 | Branching point Connector, LHD Connector, LHD | BK-OG BK-GN | 8/52 | Igniter side airbag front right | BK |
| 14 | 73/5044 | Branching point | BU-WH | 3/27:7 3/27:11 | Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD | RD-WH |
| 15 | 11D/B9:2 | Fuse, Distribution box in cargo compartment | RD-BK | 3/27:5 3:27:2 | Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD | RD |
| 16 | 73/5023 73/5035 | Branching point, LHD Branching point, RHD | BK-GN BK-VT | 3/27:8 3/27:3 | Switch unit, power passenger seat Switch unit, power passenger seat | BK |
| 17 | 4/9C1:34 | Supplemental Restraint System Module (SRS) | GY-VT | 3/94:1 | Contact, passenger seat belt buckle | - |
| 18 | 4/9C1:33 | Supplemental Restraint System Module (SRS) | WH-GN | 3/94:2 | Contact, passenger seat belt buckle | - |
| 19 | 74/31:13 | Connector, LHD | BK-GN | 7/93:9 | Occupant weight sensor (OWS) USA/CDN | BK-BU |
| 20 | 74/409:21 | Connector, LHD | RD-GN | 7/93:2 | Occupant weight sensor (OWS) USA/CDN | RD-GN |

Connectors

74/53 - 74/99:1-6

**74/53, 8-Cyl.
4-pin black**

| No. | Engine harness | | | Engine harness | | |
|-----|----------------|-----------------------------|-------|----------------|--------------------|-------|
| 1 | 4/46A:19 | Engine Control Module (ECM) | GY-BK | 7/24:1 | Front knock sensor | GY-BK |
| 2 | 4/46A:42 | Engine Control Module (ECM) | VT-OG | 7/24:2 | Front knock sensor | VT-OG |
| 3 | 4/46A:20 | Engine Control Module (ECM) | GN-RD | 7/23:1 | Rear knock sensor | GN-RD |
| 4 | 4/46A:43 | Engine Control Module (ECM) | YE-RD | 7/23:2 | Rear knock sensor | YE-RD |

**74/86, 8-Cyl.
8-pin gray**

| No. | Engine harness | | | Engine harness | | |
|-----|----------------|-----------------------------|-------|----------------|---|-------|
| 1 | 4/46A:34 | Engine Control Module (ECM) | YE-RD | 7/172:3 | Intake camshaft position sensor, bank 2, 8-Cyl. | YE-RD |
| 2 | 73/3061 | Branching point | VT | 7/172:2 | Intake camshaft position sensor, bank 2, 8-Cyl. | VT |
| 3 | 4/46A:71 | Engine Control Module (ECM) | BU-BN | 7/156:4 | Pressure and temperature sensor, fuel | BU-BN |
| 4 | 73/3060 | Branching point | GY | 7/156:3 | Pressure and temperature sensor, fuel | GY |
| 5 | 73/3059 | Branching point | GN-BN | 7/172:1 | Intake camshaft position sensor, bank 2, 8-Cyl. | GN-BN |
| 6 | - | - | - | - | - | - |
| 7 | 4/46A:46 | Engine Control Module (ECM) | GY-BU | 7/156:2 | Pressure and temperature sensor, fuel | GY-BU |
| 8 | 4/46A:14 | Engine Control Module (ECM) | BU-BN | 7/156:1 | Pressure and temperature sensor, fuel | BU-BN |

**74/99, 8-Cyl.
12-pin black**

| No. | Engine harness | | | Engine harness | | |
|-----------|----------------|-----------------------------|-------|----------------|--|-------|
| 1 | 4/46A:69 | Engine Control Module (ECM) | BU-GN | 7/81:1 | Pressure sensor, intake manifold, 8-Cyl. | BU-GN |
| 2 | 4/46A:15 | Engine Control Module (ECM) | WH-BN | 7/81:2 | Pressure sensor, intake manifold, 8-Cyl. | WH-BN |
| 3 | 4/46A:48 | Engine Control Module (ECM) | BU | 7/81:3 | Pressure sensor, intake manifold, 8-Cyl. | BU |
| 4 | 4/46A:78 | Engine Control Module (ECM) | GN-BU | 8/6:1 | Injector | GN-BU |
| 5 | 4/46A:79 | Engine Control Module (ECM) | GY-YE | 8/7:1 | Injector | GY-YE |
| 6 | 4/46A:80 | Engine Control Module (ECM) | VT-GY | 8/8:1 | Injector | VT-GY |
| continues | | | | | | |

Connectors

74/99:7-12 - 74/301:1-5

**74/99, 8-Cyl.
12-pin black**

| No. | Engine harness | | | Engine harness | | |
|-----|----------------|-----------------------------|-------|----------------|------------------|-------|
| 7 | 4/46A:81 | Engine Control Module (ECM) | YE-OG | 8/9:1 | Injector | YE-OG |
| 8 | 4/46A:83 | Engine Control Module (ECM) | GN-WH | 8/11:1 | Injector | GN-WH |
| 9 | 4/46A:84 | Engine Control Module (ECM) | GY-BN | 8/115:1 | Injector | GY-BN |
| 10 | 4/46A:85 | Engine Control Module (ECM) | VT-OG | 8/116:1 | Injector | VT-OG |
| 11 | 73/5053 | Branching point | WH | 73/3074 | Branching point | WH |
| 12 | 4/46A:82 | Engine Control Module (ECM) | BU-RD | 8/10:1 | Injector, 8-Cyl. | BU-RD |

**74/133, 8-Cyl.
3-pin black**

| No. | Engine harness | | | Engine harness | | |
|-----|----------------|-----------------------------|-------|----------------|------------------|-------|
| 1 | 4/46A:63 | Engine Control Module (ECM) | BU-OG | 7/35:1 | Oil level sensor | BU-OG |
| 2 | 4/46A:17 | Engine Control Module (ECM) | GY-YE | 7/35:2 | Oil level sensor | GY-YE |
| 3 | 73/3060 | Branching point | GY | 7/35:3 | Oil level sensor | GY |

**74/301
34-pin black**

| No. | Engine harness | | | Engine compartment harness | | |
|-----------|--|--|-------|----------------------------|---------------------------------|-------|
| 1 | 4/46A:25 4/46B:37 4/46B:54 73/3014 73/3139 | Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 4-Cyl. MAN Engine Control Module (ECM), 5-Cyl. MAN Branching point Branching point | BU-BK | 73/3021 | Branching point | BU-BK |
| 2 | 4/46A:17 4/46B:38 4/46B:41 73/3015 73/3140 | Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. MAN Engine Control Module (ECM), 5 & 6-Cyl. Branching point Branching point | GN-BK | 73/3022 | Branching point | GN-BK |
| 3 | 4/46B:36 | Engine control module (ECM), 1.6L Diesel | BN-WH | 4/56C1:8 | Central Electronic Module (CEM) | BN-WH |
| 4 | - | - | - | - | - | - |
| 5 | - | - | - | - | - | - |
| continues | | | | | | |

Connectors

74/301:6-14

74/301 34-pin black

| No. | Engine harness | | | Engine compartment harness | |
|-----|--|--|-------|---|-------|
| 6 | 4/46B:20 4/46B:35 4/46B:29 4/46B:31 | Engine control module (ECM), 4-Cyl. 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | WH | 74/504:1 Connector | WH |
| 7 | 4/46B:45 4/46B:34 4/46B:9 4/46B:25 73/3084 | Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel Branching point | BK-WH | 74/504:2 Connector | BK-WH |
| 8 | - | - | - | - | - |
| 9 | 4/28A:13 4/28A:1 | Transmission Control Module (TCM) Transmission Control Module (TCM), MPS6 | GN-OG | 74/411:9 Connector | GN-OG |
| 10 | 4/46B:31 4/46A:30 4/46B:14 4/46B:27 4/46B:38 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | VT-OG | 4/56C1:44 Central Electronic Module (CEM) | VT-OG |
| 11 | 4/28A:7 4/28A:17 | Transmission Control Module (TCM) Transmission Control Module (TCM), MPS6 | BN-VT | 74/411:10 Connector | BN-VT |
| 12 | 3/10:1 | Reversing light contact, Man | BU | 4/56C1:26 Central Electronic Module (CEM) | BU |
| 13 | 4/46B:6 4/46C:20 4/46B:51 4/46B:12 4/46B:26 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | GN-BN | 7/8:2 Pressure sensor, climate control system | GN-BN |
| 14 | 4/46C:14 4/46B:53 4/46B:8 4/46B:27 73/3084 | Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel Branching point | BN | 7/8:1 Pressure sensor, climate control system | BN |

continues

Connectors

74/301:15-23

74/301 34-pin black

| No. | Engine harness | | | Engine compartment harness | | |
|-----|--|---|-------|----------------------------|--|-------|
| 15 | 4/46C:27 4/46C:2 4/46B:31 4/46B:19 4/46B:16 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | GY-BN | 7/8:3 | Pressure sensor, climate control system | GY-BN |
| 16 | 2/133:3 6/164C2:1 | Relay vacuum pump, 5-Cyl. Turbo Electrical power steering module (EPS), 1.6L Diesel | GN-OG | 11B/22:2 | Fuse, Distribution box in engine compartment | GN-OG |
| 17 | 11B/41:2 73/3131 | Fuse, distribution box in engine compartment, petrol Branching point, Diesel | BU | 74/504:21 | Connector | BU |
| 18 | 4/46B:29 4/46C:42 4/46B:30 4/46B:41 4/46B:48 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | VT-BN | 4/56C1:37 | Central Electronic Module (CEM) | VT-BN |
| 19 | 4/46B:16 4/46C:29 4/46B:26 4/46B:28 4/46B:47 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. Engine control module (ECM), 1.6L Diesel | BU-WH | 74/504:17 | Connector | BU-WH |
| 20 | 4/46B:21 4/46C:42 4/46B:13 4/46B:34 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine Control Module (ECM), 5-Cyl. Engine control module (ECM), 1.6L Diesel | GY-BN | 74/504:42 | Connector | GY-BN |
| 21 | 4/28A:16 4/28A:13 | Transmission Control Module (TCM) Transmission Control Module (TCM), MPS6 | BU-GY | 74/411:11 | Connector | BU-GY |
| 22 | 4/46B:9 4/46C:38 4/46B:17 4/46B:33 | Engine Control Module (ECM), 4-Cyl. Engine control module (ECM), 2.0L Diesel Engine control module (ECM), 5-Cyl. Turbo, 6-Cyl, 8C-Cyl Engine control module (ECM), 1.6L Diesel | BU-WH | 74/411:2 | Connector | BU-WH |
| 23 | - | | - | - | | - |

continues

Connectors

74/301:24-34 - 74/302

74/301

34-pin black

| No. | Engine harness | | | Engine compartment harness | |
|-----|---|--|-------|---|-------|
| 24 | 4/46B:45 4/46B:23 | Engine Control Module (ECM), 6-Cyl. Engine Control Module (ECM), 8-Cyl. | GN-OG | 74/504:38 Connector | GN-OG |
| 25 | - | | - | - | - |
| 26 | - | | - | - | - |
| 27 | - | | - | - | - |
| 28 | - | | - | - | - |
| 29 | 4/46B:21 4/46B:20 | Engine Control Module (ECM), 5 & 6-Cyl. Engine Control Module (ECM), 8-Cyl. | YE-OG | 74/504:18 Connector | YE-OG |
| 30 | - | | - | - | - |
| 31 | 4/46B:46 4/46B:48 | Engine Control Module (ECM), 6-Cyl. Engine Control Module (ECM), 8-Cyl. | BU-GY | 74/504:39 Connector | BU-GY |
| 32 | 4/46A:19 4/46B:19 4/46B:15 4/46B:41 73/3064 | Engine control module (ECM), 2.0L Diesel, Man Engine Control Module (ECM), 4-Cyl. Man Engine Control Module (ECM), Man EURO 5 Engine control module (ECM), 1.6L Diesel Branching point, Auto | VT-BN | 11B/20:2 Fuse, Distribution box in engine compartment | VT-BN |
| 33 | 4/46B:23 4/46B:33 | Engine Control Module (ECM), 6-Cyl. Engine Control Module (ECM), 8-Cyl. | VT-OG | 74/504:37 Connector | VT-OG |
| 34 | - | | - | - | - |

74/302, 4-Cyl.

1-pin black

| No. | Engine harness | | Harness Starter motor | | |
|-----|----------------|----------------------|-----------------------|---------------------------|-------|
| 1 | 2/35:5 | Relay, starter motor | BU-WH | 6/25C2:1 Starter motor | BU-WH |

Connectors

74/304 - 74/309

74/304

2-pin black

| No. | Engine compartment harness | | | Harness washer nozzle | | |
|-----|----------------------------|--|-------|-----------------------|-----------------|-------|
| 1 | 11B/21:2 | Fuse, Distribution box in engine compartment | BU-GY | 73/3040 | Branching point | BU-GY |
| 2 | 73/3033 | Branching point | BK-OG | 73/3037 | Branching point | BK-OG |

74/307, 4-Cyl. Diesel

4-pin black

| No. | Engine harness | | | Glow plug | | |
|-----|----------------|-----------------|----|-----------|-----------|----|
| 1 | 73/3081 | Branching point | VT | 20/22:1 | Glow plug | VT |
| 2 | 73/3081 | Branching point | VT | 20/23:1 | Glow plug | VT |
| 3 | 73/3081 | Branching point | VT | 20/24:1 | Glow plug | VT |
| 4 | 37/3081 | Branching point | VT | 20/25:1 | Glow plug | VT |

74/309

12-pin gray

| No. | Engine compartment harness | | | Harness bumper, front | | |
|-----|----------------------------|--|-------|-----------------------|--------------------------------------|-------|
| 1 | 11B/24:2 | Fuses in the engine compartment fuse box | YE-GN | 6/104:8 | High pressure headlight washer motor | YE-GN |
| 2 | 4/56C1:47 | Central Electronic Module (CEM) | BU-BK | 6/104:3 | High pressure headlight washer motor | BU-BK |
| 3 | - | - | - | - | - | - |
| 4 | 74/519:12 | Connector | VT-GY | 73/3046 | Branching point | VT-GY |
| 5 | 74/519:13 | Connector | BU-GN | 7/204:2 | Front parking assistance sensor | BU-GN |
| 6 | 74/519:14 | Connector | YE-OG | 73/3047 | - | YE-OG |
| 7 | 73/3035 | Branching point | BK-VT | 6/104:4 | High pressure headlight washer motor | BK-VT |
| 8 | - | - | - | - | - | - |
| 9 | - | - | - | - | - | - |
| 10 | 74/519:15 | Connector | BU-BK | 7/205:2 | Front parking assistance sensor | BU-BK |
| 11 | 74/519:16 | Connector | BU-GY | 7/206:2 | Front parking assistance sensor | BU-GY |
| 12 | 74/519:17 | Connector | BU-OG | 7/207:2 | Front parking assistance sensor | BU-OG |

Connectors

74/401 - 74/402

74/401

22-pin gray

| No. | Center console harness | | | Dashboard harness | | |
|-------|------------------------|---|-------|---------------------------------|---|-------|
| 1 | 4/6C1:12 | Climate Control Module (CCM) | WH-GN | 74/417:3 | Connector | WH-GN |
| 2 | 4/6C1:7 | Climate Control Module (CCM) | BN-VT | 73/4010 | Branching point | BN-VT |
| 3 | 4/6C1:14 | Climate Control Module (CCM) | YE-VT | 74/417:6 | Connector | YE-VT |
| 4 | 4/6C1:5 | Climate Control Module (CCM) | VT-BN | 74/417:5 | Connector | VT-BN |
| 5 | 4/6C1:13 | Climate Control Module (CCM) | WH-GN | 74/417:7 | Connector | WH-GN |
| 6 | 3/281C1:6 | Infotainment Control Module (ICM) | GN-OG | 3/130C1:6 | Steering Wheel Module (SWM) | GN-OG |
| 7 | 4/6C1:1 | Climate Control Module (CCM) | RD | 4/56C3:73 | Central Electronic Module (CEM) | RD |
| 8 | 4/6C1:2 | Climate Control Module (CCM) | VT-BK | 4/31:2 | Passenger compartment fan control module | VT-BK |
| 9 | 3/281C1:2 4/6C1:10 | Infotainment Control Module (ICM) Climate Control Module (CCM) | GY-OG | 73/4001 73/4034 74/409:19 | Branching point Branching point Connector | GY-OG |
| 10 | 3/281C1:3 4/6C1:8 | Infotainment Control Module (ICM) Climate Control Module (CCM) | VT-OG | 73/4002 73/4035 74/409:20 | Branching point Branching point Connector | VT-OG |
| 11-20 | - | - | - | - | - | - |
| 21 | 3/281C1:1 | Infotainment Control Module (ICM) | GY-YE | 16/1C2:1 | Integrated Audio Module (IAM) | GY-YE |
| 22 | 73/4018 | Branching point | BK | 73/4016 | Branching point | BK |

74/402

2-pin black

| No. | Center console harness | | | Dashboard harness | | |
|-----|------------------------|-----------------------------------|----|---|--|----|
| 1 | 3/281C2:1 | Infotainment Control Module (ICM) | OG | 16/1C4:2 | Integrated Audio Module (IAM) | OG |
| 2 | 3/281C2:2 | Infotainment Control Module (ICM) | OG | 16/1C4:1 16/60C4:1 16/147C2:1 74/404:2 | Integrated Audio Module (IAM) Phone Module (PHM) Bluetooth Phone Module (BPM) Connector | OG |

Connectors

74/403

74/403

22-pin gray

| No. | Dashboard harness | | | Tunnel harness | | |
|-----|-------------------|---------------------------------|-------|----------------|-------------------------------------|-------|
| 1 | 16/1C2:10 | Integrated Audio Module (IAM) | BN | 16/123:4 | Auxiliary equipment input (AUX) | BN |
| | | | | 16/123:2:5 | Auxiliary equipment input (AUX) | |
| 2 | 16/1C2:11 | Integrated Audio Module (IAM) | GN | 16/123:2 | Auxiliary equipment input (AUX) | GN |
| | | | | 16/123:2:7 | Auxiliary equipment input (AUX) | |
| 3 | 16/1C2:12 | Integrated Audio Module (IAM) | WH | 16/123:1 | Auxiliary equipment input (AUX) | WH |
| | | | | 16/123:2:6 | Auxiliary equipment input (AUX) | |
| 4 | 16/1C2:8 | Integrated Audio Module (IAM) | - | - | - | - |
| 5 | - | | - | - | - | - |
| 6 | 4/56C3:68 | Central Electronic Module (CEM) | BU-RD | 3/65:1 | Switch, heated rear seat | BU-RD |
| 7 | 4/56C3:22 | Central Electronic Module (CEM) | BU-RD | 16/181:13 | Rear headphone sockets | BU-RD |
| | | | | 10/72:1 | Front ashtray lighting | |
| 8 | 74/411:9 | Connector | GN-RD | 3/156A:3 | Gear Selector Module (GSM) | GN-OG |
| 9 | 74/411:11 | Connector | BU-GY | 3/156A:1 | Gear Selector Module (GSM) | BU-GY |
| 10 | 16/46C2:5 | High Level Display Front (HLDF) | BK | 74/503:12 | Connector | BK |
| 11 | - | | - | - | - | - |
| 12 | 16/60C1:18 | Phone Module (PHM) | - | 16/62:3 | Hand unit, mobile phone | - |
| 13 | 16/60C1:7 | Phone Module (PHM) | GN-WH | 16/62:5 | Hand unit, mobile phone | GN-WH |
| 14 | 16/60C1:8 | Phone Module (PHM) | WH-BU | 16/62:4 | Hand unit, mobile phone | WH-BU |
| 15 | 16/60C1:19 | Phone Module (PHM) | WH-BN | 16/62:1 | Hand unit, mobile phone | WH-BN |
| 16 | 16/60C1:20 | Phone Module (PHM) | WH | 16/62:2 | Hand unit, mobile phone | WH |
| 17 | 16/46C2:1 | High Level Display Front (HLDF) | RD-BN | 74/503:14 | Connector | RD-BN |
| 18 | 16/60C1:5 | Phone Module (PHM) | YE | 74/503:13 | Connector | YE |
| | 16/147C1:32 | Bluetooth Phone Module (BPM) | | | | |
| 19 | 16/1C2:1 | Integrated Audio Module (IAM) | GY-YE | 74/503:22 | Connector | GY-YE |
| 20 | 4/56C3:43 | Central Electronic Module (CEM) | WH-BN | 8/134:1 | Solenoid, reverse interlock, manual | WH-BN |
| 21 | 4/56C3:64 | Central Electronic Module (CEM) | GY-YE | 16/109A:4 | DVD player/control module | GY-YE |
| 22 | 74/411:10 | Connector | BN-VT | 3/156A:2 | Gear Selector Module (GSM) | BN-VT |

Connectors

74/404 - 74/406

74/404

2-pin black

| No. | Dashboard harness | | Infotainment harness | |
|-----|---|----|---|----|
| 1 | 16/1C4:1 Integrated Audio Module (AIM) | OG | 16/105C4:2 Audio module (AUD) 16/108C3:2 Multimedia Module (MMM) 74/529:2 Connector | OG |
| 2 | 16/60C4:2 Phone Module (PHM) 16/147C2:2 Bluetooth Phone Module (BPM) 74/402:2 Connector | OG | 16/105C4:1 Audio module (AUD) 16/108C3:1 Multimedia Module (MMM) | OG |

74/405

2-pin black

| No. | Dashboard harness | | Floor harness | |
|-----|---|----|---|----|
| 1 | 16/1C3:1 Integrated Audio Module (IAM) | WH | 16/16C2:2 Window antenna amplifier 16/16C2B:2 Window antenna amplifier | WH |
| 1S | 16/1C3:1S Integrated Audio Module (IAM) | - | 16/16C2:2S Window antenna amplifier 16/16C2B:2S Window antenna amplifier | - |

74/406

2-pin violet

| No. | Dashboard harness | | Infotainment harness | |
|-----|-------------------------------|----|---------------------------------|----|
| 1 | 16/60C2:1 Phone Module (PHM) | WH | 16/47C3:1 Antenna GSM/GPS/RDAR | WH |
| 1S | 16/60C2:1S Phone Module (PHM) | - | 16/47C3:1S Antenna GSM/GPS/RDAR | - |

Connectors

74/407 Alt. 1 - 74/407 Alt. 2

74/407 Alternative 1

16-pin green

| No. | Dashboard harness | | Floor harness | | |
|-------|-------------------|-------------------------------|---------------|-----------|-----------|
| 1 | 16/1C1:12 | Integrated Audio Module (IAM) | GY-BK | 74/507:23 | Connector |
| 2 | - | | - | | - |
| 3 | 16/1C1:7 | Integrated Audio Module (IAM) | YE-BK | 74/508:23 | Connector |
| 4 | 16/1C1:9 | Integrated Audio Module (IAM) | GY-RD | 74/509:4 | Connector |
| 5 | 16/1C1:10 | Integrated Audio Module (IAM) | YE-RD | 74/510:4 | Connector |
| 6 | - | | - | | - |
| 7 | - | | - | | - |
| 8 | - | | - | | - |
| 9 | 16/1C1:6 | Integrated Audio Module (IAM) | GN-BK | 74/507:22 | Connector |
| 10 | - | | - | | - |
| 11 | 16/1C1:1 | Integrated Audio Module (IAM) | VT-BK | 74/508:22 | Connector |
| 12 | 16/1C1:3 | Integrated Audio Module (IAM) | GN-RD | 74/509:3 | Connector |
| 13 | 16/1C1:4 | Integrated Audio Module (IAM) | VT-RD | 74/510:3 | Connector |
| 14-16 | - | | - | | - |

74/407 Alternative 2

16-pin green

| No. | Infotainment harness | | Floor harness | | |
|-------|----------------------|-----------|---------------|-----------|-----------|
| 1 | 74/407B:1 | Connector | GY-BK | 74/507:23 | Connector |
| 2 | 74/407B:2 | Connector | GY | 74/409:10 | Connector |
| 3 | 74/407B:3 | Connector | YE-BK | 74/508:23 | Connector |
| 4 | 74/407B:4 | Connector | GY-RD | 74/509:4 | Connector |
| 5 | 74/407B:5 | Connector | YE-RD | 74/510:4 | Connector |
| 6-8 | - | | - | | - |
| 9 | 74/407B:9 | Connector | GN-BK | 74/507:22 | Connector |
| 10 | 74/407B:10 | Connector | GN | 74/409:9 | Connector |
| 11 | 74/407B:11 | Connector | VT-BK | 74/508:22 | Connector |
| 12 | 74/407B:12 | Connector | GN-RD | 74/509:3 | Connector |
| 13 | 74/407B:13 | Connector | VT-RD | 74/510:3 | Connector |
| 14-16 | - | | - | | - |

Connectors

74/407B - 74/408

74/407B 16-pin green

| No. | Infotainment harness | | Floor harness | | |
|-----|----------------------|--------------------|---------------|-----------|-----------|
| 1 | 16/105C1:1 | Audio module (AUD) | GY-BK | 74/407:1 | Connector |
| 2 | 16/105C1:2 | Audio module (AUD) | GY | 74/407:2 | Connector |
| 3 | 16/105C1:3 | Audio module (AUD) | YE-BK | 74/407:3 | Connector |
| 4 | 16/105C1:4 | Audio module (AUD) | GY-RD | 74/407:4 | Connector |
| 5 | 16/105C1:5 | Audio module (AUD) | YE-RD | 74/407:5 | Connector |
| 6 | - | - | - | - | - |
| 7 | - | - | - | - | - |
| 8 | - | - | - | - | - |
| 9 | 16/105C1:9 | Audio module (AUD) | GN-BK | 74/407:9 | Connector |
| 10 | 16/105C1:10 | Audio module (AUD) | GN | 74/407:10 | Connector |
| 11 | 16/105C1:11 | Audio module (AUD) | VT-BK | 74/407:11 | Connector |
| 12 | 16/105C1:12 | Audio module (AUD) | GN-RD | 74/407:12 | Connector |
| 13 | 16/105C1:13 | Audio module (AUD) | VT-RD | 74/407:13 | Connector |
| 14 | - | - | - | - | - |
| 15 | - | - | - | - | - |
| 16 | - | - | - | - | - |

74/408 6-pin gray

| No. | Dashboard harness | | Infotainment harness | | |
|-----|-------------------|---------------------------------|----------------------|------------|-------------------------|
| S | 16/46C1:S | High Level Display Front (HLDF) | - | 16/108C2:S | Multimedia Module (MMM) |
| 2 | 16/46C1:2 | High Level Display Front (HLDF) | BN | 16/108C2:2 | Multimedia Module (MMM) |
| 3 | 16/46C1:3 | High Level Display Front (HLDF) | GN | 16/108C2:3 | Multimedia Module (MMM) |
| 4 | 16/46C1:4 | High Level Display Front (HLDF) | GY | 16/108C2:4 | Multimedia Module (MMM) |
| 5 | 16/46C1:5 | High Level Display Front (HLDF) | YE | 16/108C2:5 | Multimedia Module (MMM) |
| 6 | 16/46C1:6 | High Level Display Front (HLDF) | PK | 16/108C2:6 | Multimedia Module (MMM) |

Connectors
74/409:1-18

74/409
26-pin green

| No. | Dashboard harness | | Floor harness | | |
|-----------|-------------------|---------------------------------|---------------|-------------------------------|---|
| 1 | - | - | - | - | - |
| 2 | 3/272:3 | Switch, parking brake | BU-WH | 4/115C1:20 | Park Brake Module (PBM) |
| 3 | 3/272:8 | Switch, parking brake | GN-VT | 4/115C1:11 | Park Brake Module (PBM) |
| 4 | 3/272:7 | Switch, parking brake | WH-BN | 4/115C1:18 | Park Brake Module (PBM) |
| 5 | 3/272:4 | Switch, parking brake | VT-GN | 4/115C1:9 | Park Brake Module (PBM) |
| 6 | 3/272:6 | Switch, parking brake | WH-OG | 4/115C1:19 | Park Brake Module (PBM) |
| 7 | 3/272:5 | Switch, parking brake | BN | 4/115C1:10 | Park Brake Module (PBM) |
| 8 | - | - | - | - | - |
| 9 | 16/26:1 | Center dashboard speaker | GN | 74/407:10 | Connector |
| 10 | 16/26:2 | Center dashboard speaker | GY | 74/407:2 | Connector |
| 11 | - | - | - | - | - |
| 12 | - | - | - | - | - |
| 13 | 16/1C2:2 | Integrated Audio Module (IAM) | GN-VT | 16/16C1:1 | Window antenna amplifier |
| 14 | 4/56C3:11 | Central Electronic Module (CEM) | GY-BU | 4/115C1:8 | Park Brake Module (PBM) |
| 15 | 74/417:3 | Connector | WH-GN | 73/5021 74/30:4 74/31:4 | Branching point Connector, LHD Connector, RHD |
| 16 | 73/4010 | Branching point | BN-VT | 74/30:4 9/15A:2 74/31:4 | Connector, RHD Control module, RH rear seat heater Connector, LHD |
| 17 | - | - | - | - | - |
| 18 | - | - | - | - | - |
| continues | | | | | |

Connectors

74/409:19-26 - 74/411:1-12

74/409

26-pin green

| No. | Dashboard harness | | | Floor harness | | |
|-----|----------------------|---------------------------------|-------|---------------------|------------------------------------|-------|
| 19 | 73/4034 74/401:9 | Branching point Connector | GY-OG | 73/5005 73/5009 | Branching point Branching point | GY-OG |
| 20 | 73/4035 74/401:10 | Branching point Connector | VT-OG | 73/5006 73/5010 | Branching point Branching point | VT-OG |
| 21 | 4/56C3:66 | Central Electronic Module (CEM) | RD-GN | 74/31:20 | Connector | RD-GN |
| 22 | 73/4038 | Branching point | GN-BK | 74/518:2 73/5016 | Connector Branching point | GN-BK |
| 23 | 73/4037 | Branching point | BU-BK | 74/518:1 73/5015 | Connector Branching point | BU-BK |
| 24 | - | | - | - | - | - |
| 25 | 73/4027 | Branching point | BU-WH | 4/93C4:15 | Keyless Vehicle Module (KVM) | BU-WH |
| 26 | - | | - | - | - | - |

74/411

26-pin gray

| No. | Engine compartment harness | | | Dashboard harness | | |
|-----|----------------------------|---|-------|----------------------|---|-------|
| 1 | 11B/11:2 | Fuse, Distribution box in engine compartment | YE-RD | 73/4028 | Branching point | YE-RD |
| 2 | 74/301:22 | Connector | BU-WH | 73/4027 | Branching point | BU |
| 3 | 73/3052 11B/18:2 | Branching point Fuses in the engine compartment fuse box | GY-OG | 4/80C1:11 | Forward Sensing Module (FSM) | GY-OG |
| 4 | 7/203:4 | Forward-aimed radar (FLR) | YE-RD | 4/80C1:8 | Forward Sensing Module (FSM) | YE-RD |
| 5 | 7/203:3 | Forward-aimed radar (FLR) | GY-BU | 4/80C1:9 | Forward Sensing Module (FSM) | GY-BU |
| 6 | 10/1:8 10/2:8 | Lamp housing, front left Lamp housing, front right | BK | 73/4017 73/4016 | Branching point, LHD Branching point | BK |
| 7 | 11B/26:2 | Fuse, Distribution box in engine compartment | BU-BK | 74/414:3 74/417:1 | Connector Connector | BU-BK |
| 8 | - | | - | - | - | - |
| 9 | 74/301:9 | Connector | GN-OG | 74/403:8 | Connector | GN-RD |
| 10 | 74/301:11 | Connector | BN-VT | 74/403:22 | Connector | BN-VT |
| 11 | 74/301:21 | Connector | BU-GY | 74/403:9 | Connector | BU-GY |
| 12 | 11B/23:2 | Fuse, Distribution box in engine compartment | RD-BK | 3/111:1 | Light Switch Module (LSM) | RD-BK |

continues

Connector

74/411:13-26 - 74/412:1-9

74/411

26-pin gray

| No. | Engine compartment harness | | | Dashboard harness | | |
|-------|----------------------------|---|-------|-------------------|--|-------|
| 13 | 10/1:12 10/2:12 | Lamp housing, front left Lamp housing, front right | VT-GN | 3/111:4 | Light Switch Module (LSM) | VT-GN |
| 14-20 | - | - | - | - | - | - |
| 21 | 7/178:1 | Front impact sensor, right | WH-GN | 4/9C2:50 | Supplemental Restraint System Module (SRS) | WH-GN |
| 22 | 7/178:2 | Front impact sensor, right | YE-RD | 4/9C2:49 | Supplemental Restraint System Module (SRS) | YE-RD |
| 23 | 7/179:1 | Front impact sensor, left | WH-BU | 4/9C2:75 | Supplemental Restraint System Module (SRS) | WH-BU |
| 24 | 7/179:2 | Front impact sensor, left | GY-BN | 4/9C2:74 | Supplemental Restraint System Module (SRS) | GY-BN |
| 25 | 11B/20:2 | Fuse, Distribution box in engine compartment | VT-BN | 4/9C2:68 | Supplemental Restraint System Module (SRS) | VT-BN |
| 26 | - | - | - | - | - | - |

74/412

16-pin green

| No. | Dashboard harness | | | Roof harness | | |
|-----|-------------------|--|-------|--------------|---------------------------------|-------|
| 1 | 16/1C2:4 | Integrated Audio Module (IAM) | WH | 16/98:1 | Microphone | WH |
| 2 | 4/119.2:2 | Remote Receiver Module (RRX) | GY-BN | 4/56C4:4 | Central Electronic Module (CEM) | GY-BN |
| 3 | 4/119.2:1 | Remote Receiver Module (RRX) | RD-BN | 4/56C4:16 | Central Electronic Module (CEM) | RD-BN |
| 4 | 16/60C1:14 | Phone Module (PHM) | - | 3/267:2 | Switch unit, telematics | - |
| 5 | 16/60C1:3 | Phone Module (PHM) | BU-GY | 3/267:3 | Switch unit, telematics | BU-GY |
| 6 | 4/9C2:70 | Supplemental Restraint System Module (SRS) | GN-WH | 3/117C1:7 | Switch unit, ceiling light | GN-WH |
| 7 | 4/80C1:1 | Forward Sensing Module (FSM) | GY-BK | 9/39:1 | Heating element camera | GY-BK |
| 8 | 16/1C2:5 | Integrated Audio Module (IAM) | - | 16/98:2 | Microphone | - |
| 9 | 4/80C1:14 | Forward Sensing Module (FSM) | BK | 9/39:2 | Heating element camera | BK |

continues

Connector

74/412:10-16 - 74/414

74/412

16-pin green

| No. | Dashboard harness | | | Roof harness | | |
|-----|-------------------|--|-------|--------------|----------------------------|-------|
| 10 | 4/9C2:47 | Supplemental Restraint System Module (SRS) | GY-BU | 3/117C1:10 | Switch unit, ceiling light | GY-BU |
| 11 | 16/60C1:15 | Phone Module (PHM) | WH | 3/267:1 | Switch unit, telematics | WH |
| 12 | 73/4019 | Branching point | BU-WH | 73/4020 | Branching point | BU-WH |
| 13 | 16/60C1:2 | Phone Module (PHM) | GY-VT | 3/267:6 | Switch unit, telematics | GY-VT |
| 14 | 16/60C1:1 | Phone Module (PHM) | BN-GN | 3/267:5 | Switch unit, telematics | BN-GN |
| 15 | 16/60C1:4 | Phone Module (PHM) | YE-VT | 3/267:4 | Switch unit, telematics | YE-VT |
| 16 | 16/60C1:13 | Phone Module (PHM) | VT | 3/267:7 | Switch unit, telematics | VT |

74/413

6-pin green

| No. | Dashboard harness | | | Harness Start Control Module (SCU) | | |
|-----|-------------------|---------------------------------|-------|------------------------------------|----------------------------|-------|
| 1 | 4/56C3:74 | Central Electronic Module (CEM) | RD-VT | 3/132:1 | Start Control Module (SCU) | RD-VT |
| 2 | 73/4016 | Branching point | BK | 3/132:2 | Start Control Module (SCU) | BK |
| 3 | 4/56C3:50 | Central Electronic Module (CEM) | GY | 3/132:3 | Start Control Module (SCU) | GY |
| 4 | - | | - | - | - | - |
| 5 | 73/4027 | Branching point | BU | 3/132:5 | Start Control Module (SCU) | BU-WH |
| 6 | - | | - | - | - | - |

74/414

4-pin gray

| No. | Dashboard harness | | | Roof harness | | |
|-----|-------------------|---------------------------------|-------|----------------------|---|-------|
| 1 | 4/56C3:75 | Central Electronic Module (CEM) | RD-BN | 4/33:1 | Sunroof control module | RD-BN |
| 2 | 73/4012 | Branching point | BK-WH | 4/33:10 73/4014 | Sunroof Module (SRM) Branching point | BK-WH |
| 3 | 74/411:7 | Connector | BU-BK | 10/22C1:5 73/4031 | Ceiling light Branching point | BU-BK |
| 4 | 73/4010 | Branching point | BK-VT | 8/48:3 | Auto-dimming rearview mirror | BK-VT |

**Connector
74/417 - 74/419**

**74/417
7-pin green**

| No. | Dashboard harness | | Climate control system harness | | |
|-----|-----------------------|------------------------|--------------------------------|-------|------------------------|
| 1 | 74/411:7 | Connector | BU-BK | 3/112 | Climate control system |
| 2 | 73/4010 | Branching point | BN-VT | 3/112 | Climate control system |
| 3 | 74/401:1 74/409:15 | Connector Connector | WH-GN | 3/112 | Climate control system |
| 4 | 73/4012 | Branching point | BK-WH | 3/112 | Climate control system |
| 5 | 74/401:4 | Connector | VT-BN | 3/112 | Climate control system |
| 6 | 74/401:3 | Connector | YE-VT | 3/112 | Climate control system |
| 7 | 74/401:5 | Connector | WH-GN | 3/112 | Climate control system |

**74/418 RHD
6-pin gray**

| No. | Harness FLC | | FLC Adapter harness | | |
|-----|-------------|------------------------|---------------------|----------|------------------------------|
| 1 | 27/5C1:1 | Forward looking camera | WH | 4/80C2:1 | Forward Sensing Module (FSM) |
| 2 | 27/5C1:2 | Forward looking camera | BN | 4/80C2:2 | Forward Sensing Module (FSM) |
| 3 | 27/5C1:3 | Forward looking camera | GN | 4/80C2:3 | Forward Sensing Module (FSM) |
| 4 | 27/5C1:4 | Forward looking camera | PK | 4/80C2:4 | Forward Sensing Module (FSM) |
| 5 | 27/5C1:5 | Forward looking camera | GY | 4/80C2:5 | Forward Sensing Module (FSM) |
| 6 | 27/5C1:6 | Forward looking camera | YE | 4/80C2:6 | Forward Sensing Module (FSM) |
| S | 27/5C1:S | Forward looking camera | - | 4/80C2:S | Forward Sensing Module (FSM) |

**74/419
2-pin blue**

| No. | Dashboard harness | | Infotainment harness | |
|-----|-------------------|--------------------|----------------------|---------------------------------|
| 1 | 16/60C5:1 | Phone Module (PHM) | WH | 16/47C1:1 Antenna GSM/GPS/RDAR |
| 1S | 16/60C5:1S | Phone Module (PHM) | - | 16/47C1:1S Antenna GSM/GPS/RDAR |

Connector

74/420 - 74/502

74/420 5-pin gray

| No. | Dashboard harness | | | Tunnel harness | | |
|-----|-------------------|-------------------------------|----|----------------|----------|----|
| 1 | 16/1C5:1 | Integrated Audio Module (IAM) | RD | 17/42C1:1 | USB-port | RD |
| 2 | 16/1C5:2 | Integrated Audio Module (IAM) | WH | 17/42C1:2 | USB-port | WH |
| 3 | 16/1C5:3 | Integrated Audio Module (IAM) | GN | 17/42C1:3 | USB-port | GN |
| 4 | 16/1C5:4 | Integrated Audio Module (IAM) | BK | 17/42C1:4 | USB-port | BK |
| 5 | 16/1C5:5 | Integrated Audio Module (IAM) | - | 17/42C1:5 | USB-port | - |

74/501 5-pin green

| No. | Floor harness | | | Tunnel harness | | |
|-----|---------------|------------------------------|-------|----------------|---|-------|
| 1 | 73/5021 | Branching point | BN-VT | 3/65:3 | Switch, heated rear seat | BN-VT |
| 2 | 4/93C2:14 | Keyless Vehicle Module (KVM) | GY-VT | 16/134:1 | Antenna, door lock, passenger compartment 2 | GY-VT |
| 3 | 4/93C2:17 | Keyless Vehicle Module (KVM) | BU-WH | 16/134:2 | Antenna, door lock, passenger compartment 2 | BU-WH |
| 4 | 4/93C1:4 | Keyless Vehicle Module (KVM) | GN-RD | 16/135:2 | Antenna, door lock, passenger compartment 3 | GN-RD |
| 5 | 4/93C1:16 | Keyless Vehicle Module (KVM) | YE-OG | 16/135:1 | Antenna, door lock, passenger compartment 3 | YE-OG |

74/502 2-pin gray

| No. | Floor harness | | | Tunnel harness | | |
|-----|---------------|----------------------|-------|----------------|------------------|-------|
| 1 | 74/504:16 | Connector | RD-VT | 9/1:2 | Outlet 12V front | RD-VT |
| 2 | 73/5035 | Branching point, LHD | BK-VT | 73/5026 | Branching point | BK-VT |
| | 73/5023 | Branching point, RHD | BK-GN | | | |

Connector

74/503

74/503
22-pin gray

| No. | Infotainment harness | | Tunnel harness | | |
|-----|----------------------|---|----------------|-----------|--|
| 1 | 16/105C2:16 | Audio module (AUD) | WH-OG | 16/181:1 | Rear headphone sockets |
| 2 | 16/105C2:15 | Audio module (AUD) | WH | 16/181:2 | Rear headphone sockets |
| 3 | 16/105C2:17 | Audio module (AUD) | GN-VT | 16/181:3 | Rear headphone sockets |
| 4 | - | | - | - | - |
| 5 | 16/105C2:1 | Audio module (AUD) | BU-OG | 16/181:5 | Rear headphone sockets |
| 6 | 16/105C2:13 | Audio module (AUD) | GY-BN | 16/181:6 | Rear headphone sockets |
| 7 | 16/105C2:2 | Audio module (AUD) | YE-GN | 16/181:7 | Rear headphone sockets |
| 8 | 16/105C2:3 | Audio module (AUD) | BU | 16/181:9 | Rear headphone sockets |
| 9 | 16/105C2:14 | Audio module (AUD) | YE-VT | 16/181:10 | Rear headphone sockets |
| 10 | 16/105C2:4 | Audio module (AUD) | YE | 16/181:11 | Rear headphone sockets |
| 11 | - | | - | - | - |
| 12 | 73/5086 | Branching point | BK | 74/403:10 | Connector |
| 13 | 11D/D7:2 | Fuse, Distribution box in cargo compartment | YE | 74/403:18 | Connector |
| 14 | 11D/D1:2 | Fuses in cargo compartment fuse box | RD-BN | 74/403:17 | Connector |
| 15 | 4/84C1:3 | Suspension Module (SUM) | YE-BK | 3/225:5 | Switch unit, Continuously Controlled Damping (CCD) |
| 16 | 4/84C1:21 | Suspension Module (SUM) | VT-OG | 3225:6 | Switch unit, Continuously Controlled Damping (CCD) |
| 17 | 4/84C1:24 | Suspension Module (SUM) | YE-RD | 3/225:1 | Switch unit, Continuously Controlled Damping (CCD) |
| 18 | 4/84C1:26 | Suspension Module (SUM) | BU | 3/225:2 | Switch unit, Continuously Controlled Damping (CCD) |
| 19 | 4/84C1:11 | Suspension Module (SUM) | GN-BK | 3/225:3 | Switch unit, Continuously Controlled Damping (CCD) |
| 20 | 4/84C1:29 | Suspension Module (SUM) | GY-OG | 3/225:4 | Switch unit, Continuously Controlled Damping (CCD) |
| 21 | - | | - | - | - |
| 22 | 11D/D6:2 | Fuse, Distribution box in cargo compartment | GY-YE | 74/403:19 | Connector |

**Connector
74/504:1- 44**

**74/504
57-pin natural**

| No. | Engine compartment harness | | Floor harness | | |
|-------|----------------------------|--|---------------|---------------------|--|
| 1 | 74/301:6 | Connector | WH | 74/507:17 | Connector |
| 2 | 74/301:7 | Connector | BK-WH | 74/507:18 | Connector |
| 3 | - | | - | - | - |
| 4 | - | | - | - | - |
| 5 | 4/16C1:43 | Brake Control Module (BCM) | YE-BK | 74/512:5 | Connector |
| 6 | 4/16C1:42 | Brake Control Module (BCM) | BU-RD | 74/512:6 | Connector |
| 7 | 4/16C1:19 | Brake Control Module (BCM) | GN-OG | 7/164:1 | Body Sensor Cluster Stability Sensor (BSC) |
| 8 | 4/16C1:18 | Brake Control Module (BCM) | BU-WH | 7/164:2 | Body Sensor Cluster Stability Sensor (BSC) |
| 9-10 | - | | - | - | - |
| 11 | 4/16C1:36 | Brake Control Module (BCM) | BU-OG | 74/511:7 | Connector |
| 12 | 4/16C1:37 | Brake Control Module (BCM) | GN-RD | 74/511:6 | Connector |
| 13-15 | - | | - | - | - |
| 16 | 11B/25:2 | Fuse, Distribution box in engine compartment | RD-VT | 74/502:1 | Connector |
| 17 | 74/301:19 | Connector | BU-WH | 7/51:5 | Accelerator pedal sensor |
| 18 | 74/301:29 | Connector, Gasoline | YE-OG | 74/511:17 | Connector |
| 19-20 | - | | - | - | - |
| 21 | 74/301:17 | Connector | BU | 74/512:7 | Connector |
| 21 | 74/301:17 | Connector | BU | 74/512:7 | Connector |
| 22 | - | | - | - | - |
| 23 | 4/118C1:18 | Headlamp Control Module (HCM) | GN-VT | 74/512:11 | Connector |
| 24-36 | - | | - | - | - |
| 37 | 74/301:33 | Connector | VT-OG | 74/512:2 | Connector |
| 38 | 74/301:24 | Connector | GN-OG | 74/512:3 | Connector |
| 39 | 74/301:31 | Connector | BU-GY | 74/512:4 | Connector |
| 40 | - | | - | - | - |
| 41 | 74/9:7 | Connector | YE-RD | 74/512:14 | Connector |
| 42 | 74/301:20 | Connector, Man | GY-BN | 73/5055 | Branching point |
| 43 | 4/118C1:17 | Headlamp Control Module (HCM) | YE-GN | 74/512:9 | Connector |
| 44 | 73/3021 | Branching point | BU-BK | 73/5015 74/511:3 | Branching point Connector |

continues

Connector

74/504:45 - 74/505

74/504 57-pin natural

| No. | Engine compartment harness | | Floor harness | | |
|-------|----------------------------|--|---------------|---------------------|--|
| 45 | 73/3022 | Branching point | GN-BK | 73/5016 74/511:4 | Branching point Connector |
| 46-48 | - | | - | - | - |
| 49 | 4/118C1:8 | Headlamp Control Module (HCM) | GN-BN | 74/512:10 | Connector |
| 50 | 4/16C1:22 | Brake Control Module (BCM) | VT-BN | 7/164:3 | Body Sensor Cluster Stability Sensor (BSC) |
| 51 | 4/16C1:29 | Brake Control Module (BCM) | GN-VT | 7/164:5 | Body Sensor Cluster Stability Sensor (BSC) |
| 52-55 | - | | - | - | - |
| 56 | 73/3019 4/56C1:49 | Branching point Central Electronic Module (CEM) | GY-OG | 73/5005 73/5009 | Branching point Branching point |
| 57 | 73/3020 4/56C1:50 | Branching point Central Electronic Module (CEM) | VT-OG | 73/5006 73/5010 | Branching point Branching point |

74/504B 2-pin red

| No. | Engine compartment harness | | Floor harness | | |
|-----|----------------------------|--|---------------|---------|-----------------|
| 1 | 11A/4:2 | Fuse, Distribution box in engine compartment | RD-GY | 73/5040 | Branching point |
| 2 | 11A/3:2 | Fuse, Distribution box in engine compartment | RD-GN | 73/5075 | Branching point |

74/505 2-pin black

| No. | Engine compartment harness | | Infotainment harness | | |
|-----|----------------------------|--|----------------------|-------|---|
| 1 | 11A/5:2 | Fuse, Distribution box in engine compartment | RD-BN | RD1:5 | Bracket in distribution box cargo compartment |
| 2 | - | | - | - | - |

**Connector
74/507:1-20**

**74/507
26-pin black**

| No. | Harness front door, left | | Floor harness | | |
|-----|---|-------|---------------|---------------------------------|-------|
| 1 | 3/126C2:3 Driver Door Module (DDM) 3/127C2:3 Passenger Door Module (PDM) | GY-OG | 73/5005 | Branching point | GY-OG |
| 2 | 3/126C2:15 Driver Door Module (DDM) 3/127C2:15 Passenger Door Module (PDM) | VT-OG | 73/5006 | Branching point | VT-OG |
| 3 | 6/36:4 Lock motor, central locking, LH front door | GN-VT | 4/56C2:7 | Central Electronic Module (CEM) | GN-VT |
| 4 | 3/127C1:20 Passenger Door Module (PDM), RHD 73/5019 Branching point, LHD | GN-WH | 74/509:7 | Connector | GN-WH |
| 5 | - | - | - | - | - |
| 6 | - | - | - | - | - |
| 7 | 3/176:2 Switch, driver's door power window, LHD | BU-WH | 73/5044 | Branching point, LHD | BU-WH |
| 8 | - | - | - | - | - |
| 9 | - | - | - | - | - |
| 10 | - | - | - | - | - |
| 11 | 3/273:1 Lock contact, LH front door | BU-GN | 4/93C5:19 | Keyless Vehicle Module (KVM) | BU-GN |
| 12 | 3/273:3 Lock contact, LH front door | YE-VT | 4/93C5:21 | Keyless Vehicle Module (KVM) | YE-VT |
| 13 | 6/36:4 Lock motor, central locking, LH front door | GN-WH | 4/93C4:9 | Keyless Vehicle Module (KVM) | GN-WH |
| 14 | 6/36:1 Lock motor, central locking, LH front door | GY | 4/93C2:4 | Keyless Vehicle Module (KVM) | GY |
| 15 | 6/36:2 Lock motor, central locking, LH front door | VT-BK | 4/93C4:1 | Keyless Vehicle Module (KVM) | VT-BK |
| 16 | - | - | - | - | - |
| 17 | 6/62:2 Power door mirror, left | WH | 74/504:1 | Connector | WH |
| 18 | 6/62:3 Power door mirror, left | BK-WH | 74/504:2 | Connector | BK-WH |
| 19 | - | - | - | - | - |
| 20 | 3/127C1:13 Passenger Door Module (PDM), RHD 73/5037 Branching point, LHD 73/5024 Branching point, RHD | BK-VT | 73/5035 | Branching point | BK-VT |

continues

Connector

74/507:21 - 74/508:14

74/507

26-pin black

| No. | Harness front door, left | | | Floor harness | | |
|-----|--------------------------|---|-------|---------------|--|-------|
| 21 | 3/126C1:2 | Driver Door Module (DDM), LHD | RD | 11D/A1:2 | Fuses in cargo compartment fuse box, LHD | RD |
| | 3/127C1:2 | Passenger Door Module (PDM), RHD | RD-BK | 11D/A2:2 | Fuses in cargo compartment fuse box, RHD | RD-BK |
| 22 | 16/4.2:1 73/5078 | Left-hand front door speaker Branching point | GN-BK | 74/407:9 | Connector | GN-BK |
| 23 | 16/4.2:2 73/5079 | Left-hand front door speaker Branching point | GY-BK | 74/407:1 | Connector | GY-BK |
| 24 | - | - | - | - | - | - |
| 25 | 7/208:1 | Pressure sensor front door left | YE-RD | 4/9C1:57 | Supplemental Restraint System Module (SRS) | YE-RD |
| 26 | 7/208:2 | Pressure sensor front door left | VT-OG | 4/9C1:58 | Supplemental Restraint System Module (SRS) | VT-OG |

74/508

26-pin black

| No. | Harness front door, right | | | Floor harness | | |
|------|---------------------------|--|-------|---------------|---------------------------------|-------|
| 1 | 3/126C2:3 3/127C2:3 | Driver Door Module (DDM) Passenger Door Module (PDM) | GY-OG | 73/5009 | Branching point | GY-OG |
| 2 | 3/126C2:15 3/127C2:15 | Driver Door Module (DDM) Passenger Door Module (PDM) | VT-OG | 73/5010 | Branching point | VT-OG |
| 3 | 6/55:4 | Lock motor, central locking, RH front door | BK-GN | 4/56C2:6 | Central Electronic Module (CEM) | BK-GN |
| 4 | 3/127C1:20 73/5019 | Passenger Door Module (PDM), LHD Branching point, RHD | GN-WH | 74/510:7 | Connector | GN-WH |
| 5-6 | - | - | - | - | - | - |
| 7 | 3/176:2 | Switch, driver's door power window, RHD | BU-WH | 73/5044 | Branching point, RHD | BU-WH |
| 8-10 | - | - | - | - | - | - |
| 11 | 3/274:1 | Lock contact, RH front door | GN-RD | 4/93C5:2 | Keyless Vehicle Module (KVM) | GN-RD |
| 12 | 3/274:3 | Lock contact, RH front door | BU-GY | 4/93C5:22 | Keyless Vehicle Module (KVM) | BU-GY |
| 13 | 6/55:2 | Lock motor, central locking, RH front door | GY-BN | 4/93C4:22 | Keyless Vehicle Module (KVM) | GY-BN |
| 14 | 6/55:4 | Lock motor, central locking, RH front door | BU-RD | 4/93C2:5 | Keyless Vehicle Module (KVM) | BU-RD |

continues

Connector

74/508:15 - 74/509:6

74/508

26-pin black

| No. | Harness front door, right | | | Floor harness | | |
|-------|----------------------------------|---|-------------|----------------------|--|-------------|
| 15 | 6/55:3 | Lock motor, central locking, RH front door | GN-VT | 4/93C4:2 | Keyless Vehicle Module (KVM) | GN-VT |
| 16-19 | - | | - | - | | - |
| 20 | 3/127C1:13 73/5024 73/5037 | Passenger Door Module (PDM), LHD Branching point, LHD Branching point, RHD | BK-GN | 73/5023 | Branching point | BK-GN |
| 21 | 3/126C1:2 3/127C1:2 | Driver Door Module (DDM), RHD Passenger Door Module (PDM), LHD | RD RD-BK | 11D/A1:2 11D/A2:2 | Fuses in cargo compartment fuse box Fuses in cargo compartment fuse box | RD RD-BK |
| 22 | 16/3.2:1 73/5076 | Right-hand front door speaker Branching point | VT-BK | 74/407:11 | Connector | VT-BK |
| 23 | 16/3.2:2 73/5077 | Right-hand front door speaker Branching point | YE-BK | 74/407:3 | Connector | YE-BK |
| 24 | - | | - | - | | - |
| 25 | 7/209:1 | Pressure sensor front door right | YE-RD | 4/9C1:56 | Supplemental Restraint System Module (SRS) | YE-RD |
| 26 | 7/209:2 | Pressure sensor front door right | VT-OG | 4/9C1:55 | Supplemental Restraint System Module (SRS) | VT-OG |

74/509

16-pin black

| No. | Harness rear door left | | | Floor harness | | |
|-----------|------------------------|--|-------|---------------|--|-------|
| 1 | 3/128:2 | Left rear door module (LDM) | RD-BU | 11D/A3:2 | Fuse, Distribution box in cargo compartment | RD-BU |
| 2 | 3/128:13 73/5036 | Left rear door module (LDM) Branching point | BK-VT | 73/5035 | Branching point | BK-VT |
| 3 | 16/6:1 | Left-hand rear door speaker | GN-RD | 74/407:12 | Connector | GN-RD |
| 4 | 16/6:2 | Left-hand rear door speaker | GY-RD | 74/407:4 | Connector | GY-RD |
| 5 | 6/57:4 | Lock motor, central locking, LH rear door | GN | 4/56C2:9 | Central Electronic Module (CEM) | GN |
| 6 | - | | - | - | | - |
| continues | | | | | | |

Connector

74/509:7 - 74/510

74/509 16-pin black

| No. | Harness rear door left | | | Floor harness | | |
|-----|------------------------|--|-------|---------------|------------------------------|-------|
| 7 | 3/128:20 | Left rear door module (LDM) | GN-WH | 74/507:4 | Connector | GN-WH |
| 8 | 3/275:5 | Lock contact, LH rear door | YE | 4/93C1:15 | Keyless Vehicle Module (KVM) | YE |
| 9 | 3/275:4 | Lock contact, LH rear door | GN-BN | 4/93C1:3 | Keyless Vehicle Module (KVM) | GN-BN |
| 10 | 6/57:2 | Lock motor, central locking, LH rear door | BU-BN | 4/93C3:2 | Keyless Vehicle Module (KVM) | BU-BN |
| 11 | 6/57:1 | Lock motor, central locking, LH rear door | YE-BU | 4/93C2:2 | Keyless Vehicle Module (KVM) | YE-BU |
| 12 | 6/57:4 | Lock motor, central locking, LH rear door | VT-OG | 4/93C5:15 | Keyless Vehicle Module (KVM) | VT-OG |
| 13 | 3/275:1 | Lock contact, LH rear door | GY-OG | 4/93C5:17 | Keyless Vehicle Module (KVM) | GY-OG |
| 14 | 3/275:3 | Lock contact, LH rear door | GN-OG | 4/93C5:4 | Keyless Vehicle Module (KVM) | GN-OG |
| 15 | - | | - | - | | - |
| 16 | - | | - | - | | - |

74/510 16-pin black

| No. | Harness rear door right | | | Floor harness | | |
|-----|-------------------------|---|-------|---------------|---|-------|
| 1 | 3/129:2 | Right rear door module (RDM) | RD-GN | 11D/A4:2 | Fuse, Distribution box in cargo compartment | RD-GN |
| 2 | 3/129:13 73/5025 | Right rear door module (RDM) Branching point | BK-GN | 73/5023 | Branching point | BK-GN |
| 3 | 16/5:1 | Right-hand rear door speaker | VT-RD | 74/407:13 | Connector | VT-RD |
| 4 | 16/5:2 | Right-hand rear door speaker | YE-RD | 74/407:5 | Connector | YE-RD |
| 5 | 6/56:4 | Lock motor, central locking, RH rear door | YE | 4/56C2:8 | Central Electronic Module (CEM) | YE |
| 6 | - | | - | - | | - |
| 7 | 3/129:20 | Right rear door module (RDM) | GN-WH | 74/508:4 | Connector | GN-WH |
| 8 | 3/276:5 | Lock contact, RH rear door | BU-OG | 4/93C1:14 | Keyless Vehicle Module (KVM) | BU-OG |
| 9 | 3/276:4 | Lock contact, RH rear door | VT-GY | 4/93C1:23 | Keyless Vehicle Module (KVM) | VT-GY |
| 10 | 6/56:3 | Lock motor, central locking, RH rear door | GY-BK | 4/93C3:1 | Keyless Vehicle Module (KVM) | GY-BK |
| 11 | 6/56:4 | Lock motor, central locking, RH rear door | GN | 4/93C2:3 | Keyless Vehicle Module (KVM) | GN |
| 12 | 6/56:2 | Lock motor, central locking, RH rear door | YE-RD | 4/93C4:21 | Keyless Vehicle Module (KVM) | YE-RD |
| 13 | 3/276:1 | Lock contact, RH rear door | VT-RD | 4/93C5:5 | Keyless Vehicle Module (KVM) | VT-RD |
| 14 | 3/276:3 | Lock contact, RH rear door | GY-RD | 4/93C5:20 | Keyless Vehicle Module (KVM) | GY-RD |
| 15 | - | | - | - | | - |
| 16 | - | | - | - | | - |

Connectors

74/511

74/511

22-pin gray

| No. | Floor harness | | | Left rear axle harness | | |
|-----|----------------------|---|-------|------------------------|---|--------|
| 1 | 11D/B6:2 | Fuse, Distribution box in cargo compartment | GN-RD | 74/520:6 | Connector | GN-RD |
| 2 | - | | - | - | | - |
| 3 | 73/5015 74/504:44 | Branching point Connector | BU-BK | 74/520:1 4/111C:7 | Connector Additive Dosing Module (ADM) | BU-BK |
| 4 | 73/5016 74/504:45 | Branching point Connector | GN-BK | 74/520:2 4/111C:7 | Connector Additive Dosing Module (ADM) | GN-BK |
| 5 | - | | - | - | | - |
| 6 | 74/504:12 | Connector | GN-RD | 7/56:2 | Sensor ABS, rear left | BN |
| 7 | 74/504:11 | Connector | BU-OG | 7/56:1 | Sensor ABS, rear left | WH |
| 8 | - | | - | - | | - |
| 9 | - | | - | - | | - |
| 10 | - | | - | - | | - |
| 11 | - | | - | - | | - |
| 12 | 74/525:4 | Connector | GN-BU | 8/22:1 | Shock absorber, Four-C, rear left | GN-BU |
| 13 | 74/525:5 | Connector | YE-BU | 8/22:2 | Shock absorber, Four-C, rear left | YE-BU |
| 14 | 74/525:1 | Connector | YE-GN | 7/120:5 | Height sensor, suspension, rear left | YE-GN |
| 15 | 74/525:2 | Connector | GN-BN | 7/120:1 | Height sensor, suspension, rear left | GN-BN |
| 16 | 74/525:3 | Connector | VT-WH | 7/120:4 | Height sensor, suspension, rear left | VT-WH |
| 17 | 74/504:18 | Connector | YE-OG | 4/83:5 | Fuel pump control module | YE-OG |
| 18 | 4/56C2:48 | Central Electronic Module (CEM) | GN-BU | 6/33:1 26/5 | Fuel pump DC/AC converter, fuel tank | GN-BU |
| 19 | 4/56C2:30 | Central Electronic Module (CEM) | YE-VT | 6/33:2 26/5 | Fuel pump DC/AC converter, fuel tank | YE-VT |
| 20 | 4/56C2:43 | Central Electronic Module (CEM) | GN-OG | 6/33:6 | Fuel pump | GN-OG |
| 21 | 73/5044 | Branching point | BU-WH | 26/5 | DC/AC converter, fuel tank | -BU-WH |
| 22 | - | | - | - | | - |

Connectors

74/512 - 74/513

74/512 14-pin gray

| No. | Floor harness | | Harness rear axle right | | |
|-----|---------------|-------------------|-------------------------|------------------|--|
| 1 | - | - | - | - | - |
| 2 | 74/504:37 | Connector | VT-OG | 6/67:1 | Pump, fuel leakage control |
| 3 | 74/504:38 | Connector | GN-OG | 6/67:2 | Pump, fuel leakage control |
| 4 | 74/504:39 | Connector | BU-GY | 6/67:3 | Pump, fuel leakage control |
| 5 | 74/504:5 | Connector | YE-BK | 7/57:1 | Right-hand rear ABS sensor |
| 6 | 74/504:6 | Connector | BU-RD | 7/57:2 | Right-hand rear ABS sensor |
| 7 | 74/504:21 | Connector | BU | 6/67:4 9/38:1 | Pump, fuel leakage control Electrically heated fuel filter |
| 8 | 31/68 | Ground connection | BK-OG | 6/35:2 9/38:2 | Fuel pump, auxiliary heater Electrically heated fuel filter |
| 9 | 74/504:43 | Connector | YE-GN | 7/121:5 | Height sensor, suspension, rear right |
| 10 | 74/504:49 | Connector | GN-BN | 7/121:1 | Height sensor, suspension, rear right |
| 11 | 74/504:23 | Connector | GN-VT | 7/121:4 | Height sensor, suspension, rear right |
| 12 | - | - | - | - | - |
| 13 | - | - | - | - | - |
| 14 | 74/504:41 | Connector | YE-RD | 6/35:1 | Fuel pump, auxiliary heater |
| | | | | | YE-RD |

74/513 5-pin green

| No. | Infotainment harness | | Harness rear axle right | | |
|-----|----------------------|-------------------------|-------------------------|---------|------------------------------------|
| 1 | 4/84C1:5 | Suspension Module (SUM) | VT-GY | 8/23:1 | Shock absorber, Four-C, rear right |
| 2 | 4/84C1:4 | Suspension Module (SUM) | BU-BN | 8/23:2 | Shock absorber, Four-C, rear right |
| 3 | 73/5066 | Branching point | YE-GN | 7/121:5 | Shock absorber, Four-C, rear right |
| 4 | 73/5053 | Branching point | YE-GN | 7/121:1 | Shock absorber, Four-C, rear right |
| 5 | 4/84C1:14 | Suspension Module (SUM) | GN-VT | 7/121:4 | Shock absorber, Four-C, rear right |

Connectors

74/514 - 74/519:1-7

74/514

4-pin gray

| No. | Floor harness | | Left rear axle harness | | |
|-----|---------------|------------------------------------|------------------------|-----------------------------|---|
| 1 | 4/115C1:29 | Park Brake Module (PBM) | BU-GN | 6/146:2 | Lock motor, rear left brake disc |
| 2 | 4/115C1:14 | Park Brake Module (PBM) | VT-BK | 6/146:1 | Lock motor, rear left brake disc |
| 3 | 4/56C2:76 | Central Electronic Module (CEM) | YE-OG | 4/83:4 6/33:4 4/111:1 | Fuel pump control module Fuel pump Additive Dosing Module (ADM) |
| 4 | 31/65 | Ground connection | BK-YE | 74/520:4 74/520:5 | Connector Connector |

74/518

2-pin gray

| No. | Infotainment harness | | Floor harness | | |
|-----|----------------------|-------------------------|---------------|----------------------|------------------------------|
| 1 | 4/84C1:16 | Suspension Module (SUM) | BU-BK | 73/5015 74/409:23 | Branching point Connector |
| 2 | 4/84C1:15 | Suspension Module (SUM) | GN-BK | 73/5016 74/409:22 | Branching point Connector |

74/519

22-pin gray

| No. | Infotainment harness | | Engine compartment harness | | |
|-----|----------------------|-------------------------|----------------------------|---------|--|
| 1 | 4/84C1:6 | Suspension Module (SUM) | BU-BK | 8/20:1 | Shock absorber, Four-C, front left |
| 2 | 4/84C1:7 | Suspension Module (SUM) | VT-BN | 8/20:2 | Shock absorber, Four-C, front left |
| 3 | 4/84C1:9 | Suspension Module (SUM) | GY-YE | 8/21:1 | Shock absorber, Four-C, front right |
| 4 | 4/84C1:8 | Suspension Module (SUM) | BU-OG | 8/21:2 | Shock absorber, Four-C, front right |
| 5 | 73/5052 | Branching point | YE-GN | 7/118:5 | Height sensor, suspension, front left |
| 6 | 4/84C1:12 | Suspension Module (SUM) | BU-RD | 7/118:4 | Height sensor, suspension, front left |
| 7 | 73/5066 | Branching point | YE-GN | 73/3077 | Branching point |

continues

Connectors

74/519:8-22 - 74/520

74/519

22-pin gray

| No. | Infotainment harness | | Engine compartment harness | | |
|-------|----------------------|---------------------------------|----------------------------|-----------|--|
| 8 | 4/84C1:27 | Suspension Module (SUM) | GY-VT | 7/119:4 | Height sensor, suspension, front right |
| 9 | 4/84C1:22 | Suspension Module (SUM) | BU-GY | 7/88:1 | Acceleration sensor, Four-C, front right |
| 10 | 4/84C1:10 | Suspension Module (SUM) | VT-RD | 7/87:1 | Acceleration sensor, Four-C, front left |
| 11 | 4/84C1:19 | Suspension Module (SUM) | GN-BN | 73/3078 | Branching point |
| 12 | 4/86C2:2 | Parking Assistance Module (PAM) | VT-GY | 74/309:4 | Connector |
| 13 | 4/86C2:5 | Parking Assistance Module (PAM) | BU-GN | 74/309:5 | Connector |
| 14 | 4/86C2:1 | Parking Assistance Module (PAM) | YE-OG | 74/309:6 | Connector |
| 15 | 4/86C2:6 | Parking Assistance Module (PAM) | BU-BK | 74/309:10 | Connector |
| 16 | 4/86C2:7 | Parking Assistance Module (PAM) | BU-GY | 74/309:11 | Connector |
| 17 | 4/86C2:8 | Parking Assistance Module (PAM) | BU-OG | 74/309:12 | Connector |
| 18-22 | - | - | - | - | - |

74/520

6-pin gray

| No. | Left rear axle harness | | All wheel drive harness | | |
|-----|------------------------|-----------|-------------------------|----------|--------------------------------------|
| 1 | 74/511:3 | Connector | BU-BK | 4/82C1:8 | Differential Electronic Module (DEM) |
| 2 | 74/511:4 | Connector | GN-BK | 4/82C1:7 | Differential Electronic Module (DEM) |
| 3 | - | - | - | - | - |
| 4 | 74/514:4 | Connector | BK | 4/82C1:4 | Differential Electronic Module (DEM) |
| 5 | 74/514:4 | Connector | BK-YE | 4/82C1:2 | Differential Electronic Module (DEM) |
| 6 | 74/511:1 | Connector | GN-RD | 4/82C1:1 | Differential Electronic Module (DEM) |

Connectors

74/523 - 74/525

74/523

6-pin gray

| No. | Harness parking assistance adp. | | Harness bumper rear | | |
|-----|---------------------------------|---------------------------------|---------------------|---------|--------------------------------|
| 1 | 4/86C3:11 | Parking Assistance Module (PAM) | BU-WH | 73/5064 | Branching point |
| 2 | 4/86C3:2 | Parking Assistance Module (PAM) | YE-GY | 7/133:2 | Rear parking assistance sensor |
| 3 | 4/86C3:3 | Parking Assistance Module (PAM) | YE-BK | 7/132:2 | Rear parking assistance sensor |
| 4 | 4/86C3:4 | Parking Assistance Module (PAM) | YE-OG | 7/134:2 | Rear parking assistance sensor |
| 5 | 4/86C3:5 | Parking Assistance Module (PAM) | YE-GN | 7/131:2 | Rear parking assistance sensor |
| 6 | 4/86C3:8 | Parking Assistance Module (PAM) | GN-WH | 73/5067 | Branching point |

74/524

2-pin gray

| No. | Harness rear axle right | | Floor harness | | |
|-----|-------------------------|-------------------------|---------------|---------|-----------------------------------|
| 1 | 4/115C1:12 | Park Brake Module (PBM) | YE-GY | 6/147:1 | Lock motor, rear right brake disc |
| 2 | 4/115C1:27 | Park Brake Module (PBM) | GN-BN | 6/147:2 | Lock motor, rear right brake disc |

74/525

6-pin green

| No. | Infotainment harness | | Floor harness | | |
|-----|----------------------|-------------------------|---------------|-----------|-----------|
| 1 | 73/5052 | Branching point | YE-GN | 74/511:14 | Connector |
| 2 | 73/5053 | Branching point | GN-BN | 74/511:15 | Connector |
| 3 | 4/84C1:28 | Suspension Module (SUM) | VT-WH | 74/511:16 | Connector |
| 4 | 4/84C1:2 | Suspension Module (SUM) | GN-BU | 74/511:12 | Connector |
| 5 | 4/84C1:1 | Suspension Module (SUM) | YE-BU | 74/511:13 | Connector |
| 6 | - | - | - | - | - |

Connectors

74/529 - 74/541

74/529

2-pin black

| No. | Infotainment harness | | Harness digital radio/SUB | | |
|-----|--|----|---|----|--|
| 1 | 16/105C4:2 Audio module (AUD), LHD 16/108C3:2 Multimedia Module (MMM) | OG | 16/145C3:1 Remote digital audio receiver (RDAR) 16/162C3:1 Digital Audio Broadcast Module (DABM) 16/79C2:1 Subwoofer Module (SUB) | OG | |
| 2 | 74/404:1 Connector | OG | 16/79C2:2 Subwoofer Module (SUB) 16/145C3:2 Remote digital audio receiver (RDAR) 16/162C3:2 Digital Audio Broadcast Module (DABM) | OG | |

74/531

2-pin gray

| No. | Infotainment harness | | DAB Adapter harness | | |
|-----|---------------------------------|----|---|----|--|
| 1 | 16/47C2:1 Antenna GSM/GPS/RDAR | WH | 16/162C2:1 Digital Audio Broadcast Module (DABM) | WH | |
| 1S | 16/47C2:1S Antenna GSM/GPS/RDAR | - | 16/162C2:1S Digital Audio Broadcast Module (DABM) | - | |

74/532

2-pin gray

| No. | Floor harness | | DAB Adapter harness | | |
|-----|--|----|---|----|--|
| 1 | 16/16C4:1 Amplifier window antenna, V70 16/16C3:2 Amplifier window antenna, S80 | WH | 16/162C2:2 Digital Audio Broadcast Module (DABM) | WH | |
| 1S | 16/16C4:1S Amplifier window antenna, V70 16/16C3:2S Amplifier window antenna, S80 | - | 16/162C2:2S Digital Audio Broadcast Module (DABM) | - | |

74/541

4-pin green

| No. | Left rear axle harness | | Harness rear axle right | | |
|-----|---------------------------------------|-------|---|-------|--|
| 1 | 4/111:9 Additive Dosing Module (ADM) | GN-BU | 6/34:1 Additive tank with pump and level sensor | GN-BU | |
| 2 | 4/111:10 Additive Dosing Module (ADM) | GY-OG | 6/34:2 Additive tank with pump and level sensor | GY-OG | |
| 3 | 4/111:13 Additive Dosing Module (ADM) | YE-VT | 6/34:3 Additive tank with pump and level sensor | YE-VT | |
| 4 | 4/111:11 Additive Dosing Module (ADM) | GN-BU | 6/34:4 Additive tank with pump and level sensor | GN-BU | |

Connectors

74/601:4-10 - 74/602

74/601

10-pin grey, S80

| No. | Trunk lid harness | | Floor harness | | |
|-----|-------------------|----------------------------------|---------------|------------------------|--|
| 1 | 10/3:2 | License plate lighting | BK | 4/56C2:52 | Central Electronic Module (CEM) YE-VT |
| 2 | 6/8:3 | Central locking motor, trunk lid | BK | 4/56C2:10 | Central Electronic Module (CEM) YE-OG |
| 3 | 10/3:3 | License plate lighting | BK | 4/56C2:13 4/93C5:18 | Central Electronic Module (CEM) Keyless Vehicle Module (KVM) BU-RD |
| 4 | 73/5038 | Branching point | BK | 73/5105 | Branching point BK-OG |
| 5 | 6/8:1 | Central locking motor, trunk lid | BK | 4/56C2:71 | Central Electronic Module (CEM) YE-VT |
| 6 | 6/8:4 | Central locking motor, trunk lid | BK | 10/127:4 10/128:4 | Lighting, cargo compartment, left-hand side Lighting, cargo compartment, right-hand side BK-BU |
| 7 | - | | - | - | - |
| 8 | - | | - | - | - |
| 9 | - | | - | - | - |
| 10 | - | | - | - | - |

74/602

14-pin gray, V70

| No. | Floor harness | | Trunk lid harness | | |
|-----|------------------------|---|-------------------|---------|--|
| 1 | 2/82:5 | Relay, heated rear window | GY-RD | 9/2A:1 | Heated rear window GY-RD |
| 2 | 4/56C2:34 4/110C2:3 | Central Electronic Module (CEM) | YE-GY | 10/19:2 | Auxiliary brake light BK |
| 3 | 4/56C2:59 | Central Electronic Module (CEM) | GY-BN | 73/6002 | Branching point BK |
| 4 | 4/56C2:73 | Central Electronic Module (CEM) | GN-BN | 73/6003 | Branching point BK |
| 5 | 4/56C2:39 | Central Electronic Module (CEM) | BN-GN | 73/6004 | Branching point BK |
| 6 | 10/25:4 | Ceiling light, cargo compartment | BU-BK | 3/78:3 | Lock unit, trunk lid/tailgate BK |
| 7 | 73/5105 | Branching point | BK-OG | 73/6001 | Branching point BK-OG |
| 8 | 2/16:3 | Relay, rear window wiper | GY-BU | 6/32:1 | Rear window wiper motor BK |
| 9 | 4/56C2:52 | Central Electronic Module (CEM) | YE-VT | 10/3:1 | License plate lighting YE-VT |
| 10 | 4/56C2:72 | Central Electronic Module (CEM) | GN-VT | 3/78:6 | Lock unit, trunk lid/tailgate BK |
| 11 | 4/56C2:71 | Central Electronic Module (CEM) | GY-BN | 3/78:4 | Lock unit, trunk lid/tailgate BK |
| 12 | 4/56C2:53 | Central Electronic Module (CEM) | GN-YE | 3/78:2 | Lock unit, trunk lid/tailgate GN-YE |
| 13 | 4/56C2:10 4/116C2:5 | Central Electronic Module (CEM) Power Operated Tailgate Module (POT) | YE-OG | 3/78:5 | Lock unit, trunk lid/tailgate YE-OG |
| 14 | 2/16:1 | Relay, rear window wiper | VT-GN | 6/32:2 | Rear window wiper motor BK |

Connectors

74/603

74/603

22-pin gray, V70

| No. | Floor harness | | Trunk lid harness | | |
|-------|--|-------|-------------------|--------------------------------------|-------|
| 1 | 4/116C2:7 Power Operated Tailgate Module (POT) 4/93C2:1 Keyless Vehicle Module (KVM) | GN-WH | 3/78:7 | Lock unit, trunk lid/tailgate | GN-WH |
| 2 | 4/93C3:3 Keyless Vehicle Module (KVM) 4/116C2:14 Power Operated Tailgate Module (POT) | GN-OG | 3/78:11 | Lock unit, trunk lid/tailgate | GN-OG |
| 3 | - | - | - | - | - |
| 4 | 4/116C2:6 Power Operated Tailgate Module (POT) | YE-OG | 3/78:9 | Lock unit, trunk lid/tailgate | YE-OG |
| 5 | 4/116C2:1 Power Operated Tailgate Module (POT) | GN-OG | 6/149:3 | Tailgate closing motor | GN-OG |
| 6 | 4/116C2:8 Power Operated Tailgate Module (POT) | GN-BU | 6/149:4 | Tailgate closing motor | GN-BU |
| 7 | 4/116C2:9 Power Operated Tailgate Module (POT) | GN | 6/149:2 | Tailgate closing motor | GN |
| 8 | - | - | - | - | - |
| 9 | 4/116C2:4 Power Operated Tailgate Module (POT) | GY-BN | 3/291:1 | Tailgate closing switch | GY-BN |
| 10 | 73/5044 Branching point | BU-WH | 3/291:5 | Tailgate closing switch | BU-WH |
| 11 | 4/116C2:2 Power Operated Tailgate Module (POT) 4/93C5:18 Keyless Vehicle Module (KVM) | GY-YE | 3/35:3 | Switch, handle, trunk lid/tailgate | GY-YE |
| 12 | 4/116C2:11 Power Operated Tailgate Module (POT) | BN-VT | 7/227A:1 | Tailgate pinch sensor, right | BN-VT |
| 13 | 4/116C2:10 Power Operated Tailgate Module (POT) | BN-VT | 7/227B:1 | Tailgate pinch sensor, left | BN-VT |
| 14 | - | - | - | - | - |
| 15 | 4/93C1:22 Keyless Vehicle Module (KVM) | VT | 16/132:2 | Antenna door lock trunk lid/tailgate | VT |
| 16 | 4/93C1:21 Keyless Vehicle Module (KVM) | GN-OG | 16/132:1 | Antenna door lock trunk lid/tailgate | GN-OG |
| 17-22 | - | - | - | - | - |

Connectors

74/701 - 74/702

74/701

12-pin gray

| No. | Tunnel harness | | Harness RSE backrest left | | |
|-----|--------------------------------------|-------|---------------------------|---------------------------|-------|
| 1 | 16/109E:12 DVD player/control module | BK | 16/81A:7 | Screen, LH head restraint | BK |
| 2 | 16/109E:1 DVD player/control module | RD | 16/81A:6 | Screen, LH head restraint | RD |
| 3 | 16/109E:2 DVD player/control module | RD-WH | 16/81A:5 | Screen, LH head restraint | RD-WH |
| 4 | 16/109E:3 DVD player/control module | BN | 16/81A:4 | Screen, LH head restraint | BN |
| 5 | 16/109E:4 DVD player/control module | BU | 16/81A:3 | Screen, LH head restraint | BU |
| 6 | 16/109E:12 DVD player/control module | - | - | - | - |
| 7 | 16/109E:11 DVD player/control module | PK | 16/81A:12 | Screen, LH head restraint | PK |
| 8 | 16/109E:10 DVD player/control module | GY | 16/81A:11 | Screen, LH head restraint | GY |
| 9 | 16/109E:7 DVD player/control module | YE | 16/81A:9 | Screen, LH head restraint | YE |
| 10 | 16/109E:8 DVD player/control module | GN | 16/81A:10 | Screen, LH head restraint | GN |
| 11 | 16/109E:6 DVD player/control module | BN | 16/81A:8 | Screen, LH head restraint | BN |
| 12 | 16/109E:5 DVD player/control module | WH | 16/81A:2 | Screen, LH head restraint | WH |

74/702

12-pin gray

| No. | Tunnel harness | | Harness RSE backrest right | | |
|-----|--------------------------------------|-------|----------------------------|---------------------------|-------|
| 1 | 16/109E:24 DVD player/control module | BK | 16/81B:7 | Screen, RH head restraint | BK |
| 2 | 16/109E:13 DVD player/control module | RD | 16/81B:6 | Screen, RH head restraint | RD |
| 3 | 16/109E:14 DVD player/control module | RD-WH | 16/81B:5 | Screen, RH head restraint | RD-WH |
| 4 | 16/109E:15 DVD player/control module | BN | 16/81B:4 | Screen, RH head restraint | BN |
| 5 | 16/109E:16 DVD player/control module | BU | 16/81B:3 | Screen, RH head restraint | BU |
| 6 | 16/109E:24 DVD player/control module | - | - | - | - |
| 7 | 16/109E:23 DVD player/control module | PK | 16/81B:12 | Screen, RH head restraint | PK |
| 8 | 16/109E:22 DVD player/control module | GY | 16/81B:11 | Screen, RH head restraint | GY |
| 9 | 16/109E:19 DVD player/control module | YE | 16/81B:9 | Screen, RH head restraint | YE |
| 10 | 16/109E:20 DVD player/control module | GN | 16/81B:10 | Screen, RH head restraint | GN |
| 11 | 16/109E:18 DVD player/control module | BN | 16/81B:8 | Screen, RH head restraint | BN |
| 12 | 16/109E:17 DVD player/control module | WH | 16/81B:2 | Screen, RH head restraint | WH |

Connectors

74/1010 - 74/1501

74/1010 12-pin black

| No. | Harness TV receiver | | Tunnel harness | |
|-----|---------------------|-------------|----------------|--------------------------------------|
| 1 | 16/36A:20 | TV receiver | WH | 16/109C:1 DVD player/control module |
| 2 | 16/36A:5 | TV receiver | BN | 16/109C:2 DVD player/control module |
| 3 | 16/36A:22 | TV receiver | GN | 16/109C:3 DVD player/control module |
| 4 | 16/36A:21 | TV receiver | YE | 16/109C:4 DVD player/control module |
| 5 | 16/36A:6 | TV receiver | GY | 16/109C:5 DVD player/control module |
| 6 | 16/36A:13 | TV receiver | - | - |
| 7 | 16/36B:3 | TV receiver | BK-WH | 16/109D:15 DVD player/control module |
| 8 | 16/36B:1 | TV receiver | BU | 16/109D:25 DVD player/control module |
| 9 | 16/36A:25 | TV receiver | RD-VT | 16/109D:11 DVD player/control module |
| 10 | 16/36A:26 | TV receiver | GY-YE | 16/109A:4 DVD player/control module |
| 11 | 16/36A:13 | TV receiver | BK-VT | 16/109A:8 DVD player/control module |
| 12 | - | - | - | - |

74/1500 2-pin gray gray

| No. | Harness massage seats | | Harness supply refrigeration box | | |
|-----|-----------------------|-------------------------------------|----------------------------------|--|-------|
| 1 | 11D/B1:2 | Fuses in cargo compartment fuse box | RD | 74/5001:3 Connector 2/141:1 Refrigeration box relay | PK |
| 2 | 31/TRM | Ground connection, Accessories | BK | 2/141:2 Refrigeration box relay 17/19:2 12V outlet, cargo compartment 31/48 Ground connection 74/5001:2 Connector | BK-GN |

74/1501 3-pin gray

| No. | Harness supply refrigeration box | | Harness refrigeration box | | |
|-----|----------------------------------|-----------------------------------|---------------------------|---|-------|
| 1 | 2/141:5 | Refrigeration box relay | RD | 9/24:1 Refrigeration box | RD |
| 2 | 9/24:2 | Refrigeration box | BK | 17/19:2 12V outlet, cargo compartment 2/141:2 Refrigeration box relay 74/5000:2 Connector | BK-GN |
| | 10/276:2 | Lighting center armrest rear 1 | | | |
| | 10/277:2 | Lighting center armrest rear 2 | | | |
| | 10/280:2 | Lighting cooler compartment left | | | |
| | 10/281:2 | Lighting cooler compartment right | | | |
| 3 | 74/5000:1 | Connector | PK | 10/276:1 Lighting center armrest rear 1 | PK |
| | 2/141:1 | Refrigeration box relay | | 10/277:1 Lighting center armrest rear 2 | |
| | | | | 10/280:1 Lighting cooler compartment left | |
| | | | | 10/281:1 Lighting cooler compartment right | |

Connectors

74/1502 - 74/1503

74/1502

2-pin green


| No. | Harness lighting mug holder | | | Harness lighting floor | | |
|-----|---------------------------------|--|-------|-----------------------------------|--|-------|
| 1 | 74/403:7 10/72:1 10/161:1 | Connector Front ashtray lighting Lighting mug holder | BU-RD | 74/1503:1 10/286:1 10/287:1 | Connector Lighting floor driver's side Lighting floor passenger side | BU-RD |
| 2 | 73/5026 10/72:2 10/161:2 | Branching point Front ashtray lighting Lighting mug holder | BK-VT | 74/1503:2 10/286:2 10/287:2 | Connector Lighting floor driver's side Lighting floor passenger side | BK-VT |

74/1503


2-pin green

| No. | Harness analog clock | | | Harness lighting floor | | |
|-----|----------------------|--------------|-------|-----------------------------------|--|-------|
| 1 | 19/4:1 | Analog clock | BU-RD | 74/1502:1 10/286:1 10/287:1 | Connector Lighting floor driver's side Lighting floor passenger side | BU-RD |
| 2 | 19/4:2 | Analog clock | BK-VT | 74/1502:2 10/286:2 10/287:2 | Connector Lighting floor driver's side Lighting floor passenger side | BK-VT |


Cable harness routing in vehicle Engine harness 4-Cyl.

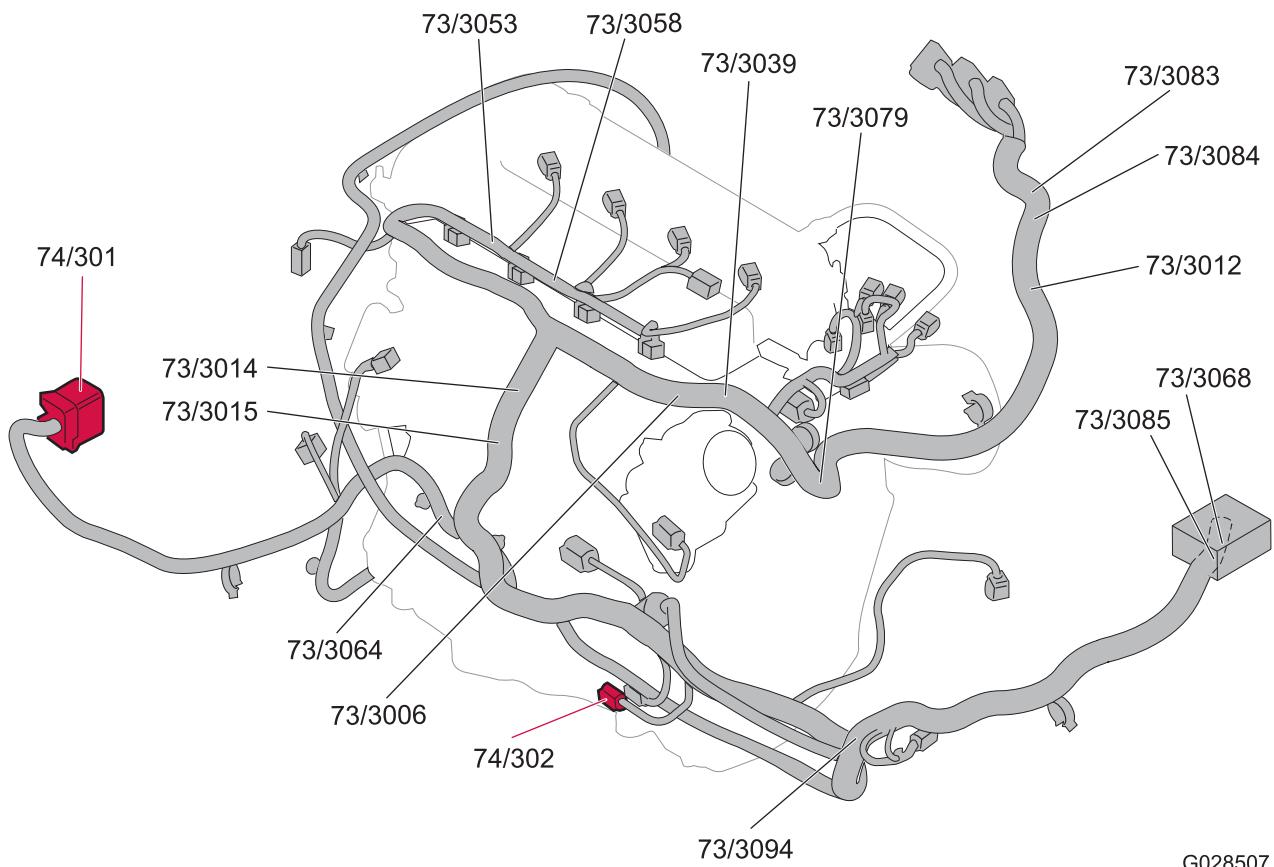


Cable harness routing in vehicle Engine harness, 5-Cyl.

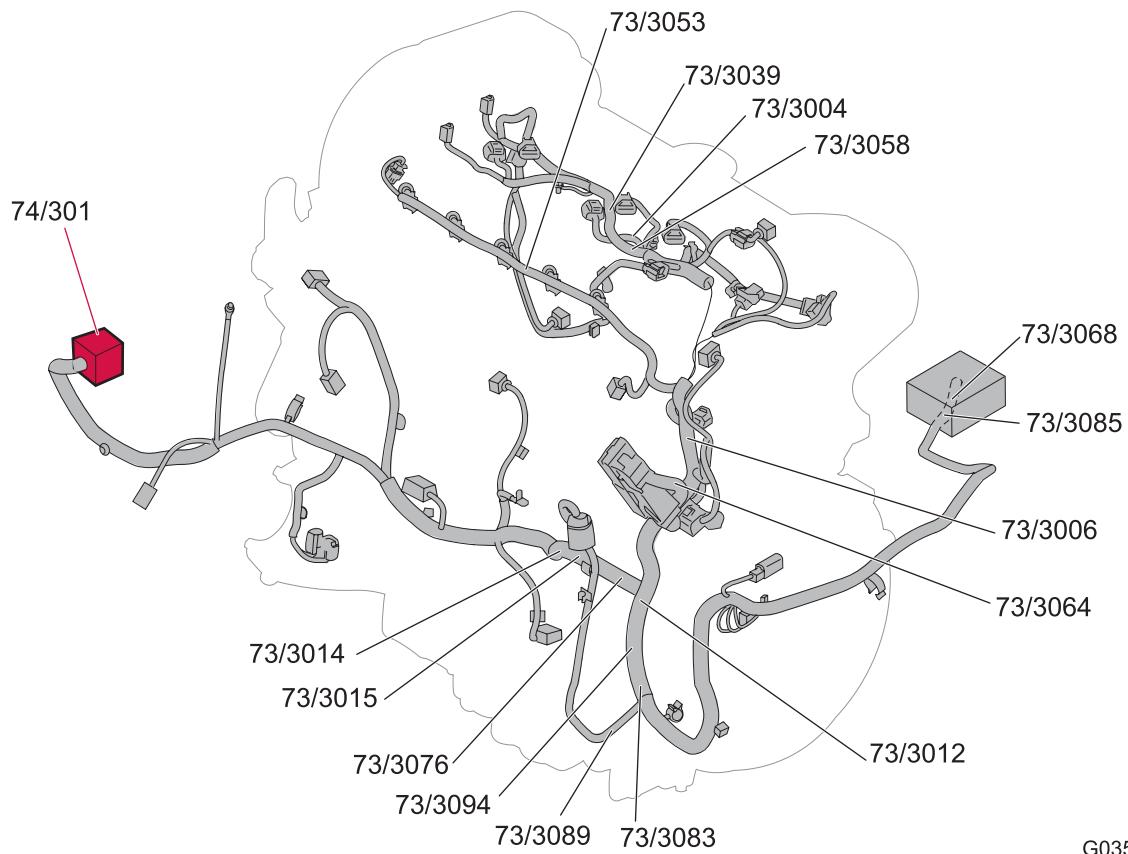


Cable harness routing in vehicle Engine harness, 6-Cyl.

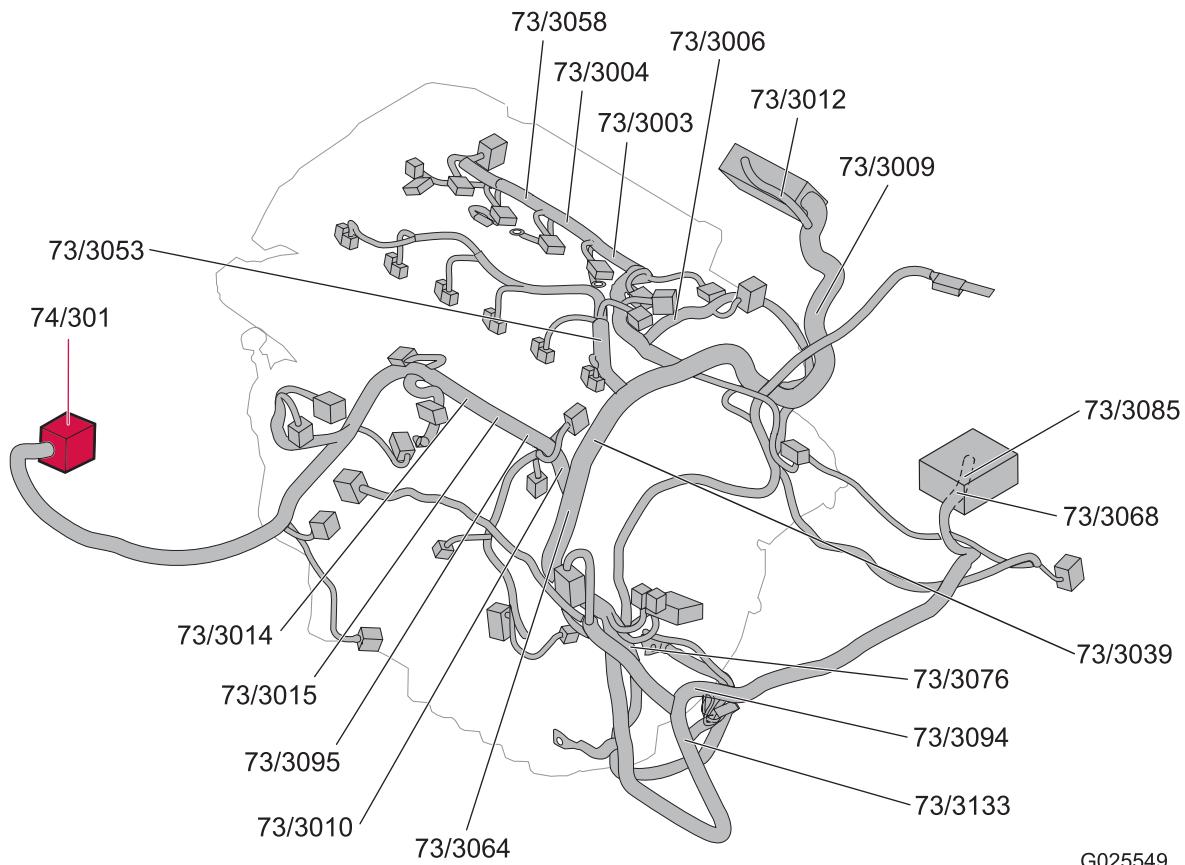

Cable harness routing in vehicle Harness engine, 6-Cyl. Turbo

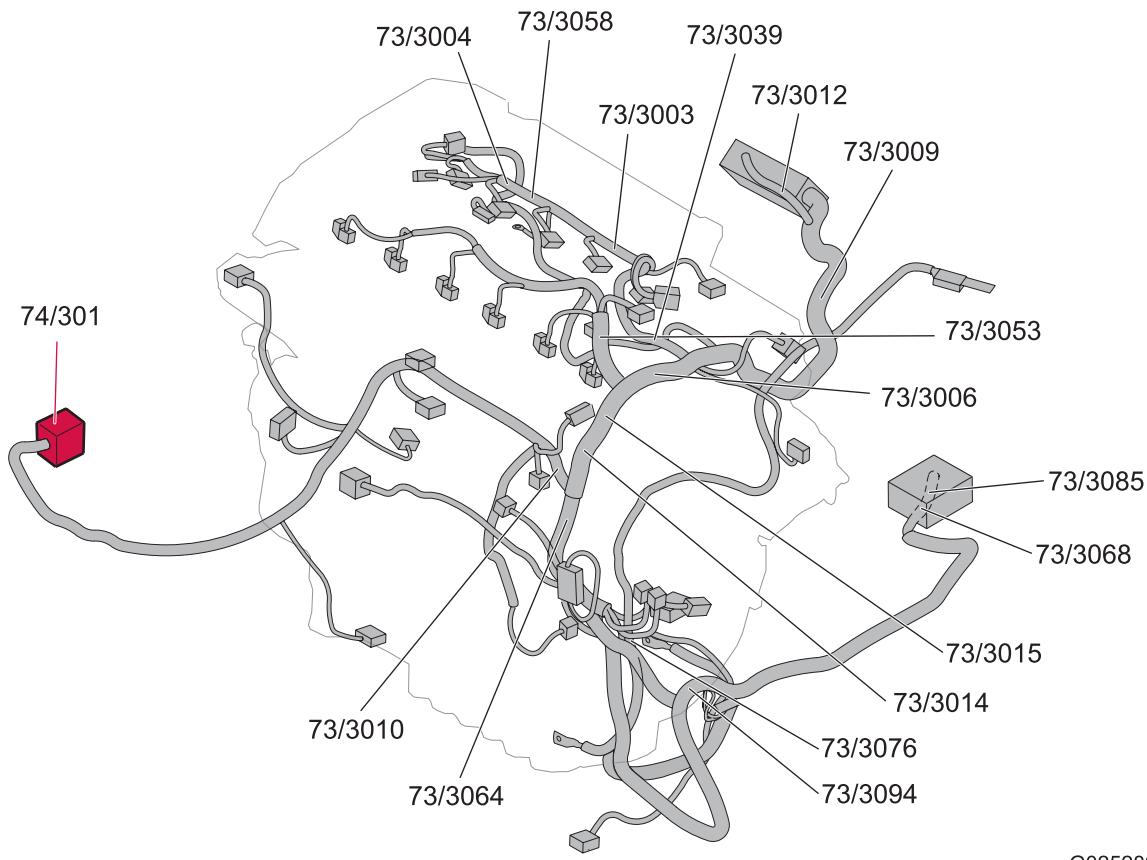


Cable harness routing in vehicle Engine harness, 8-Cyl.

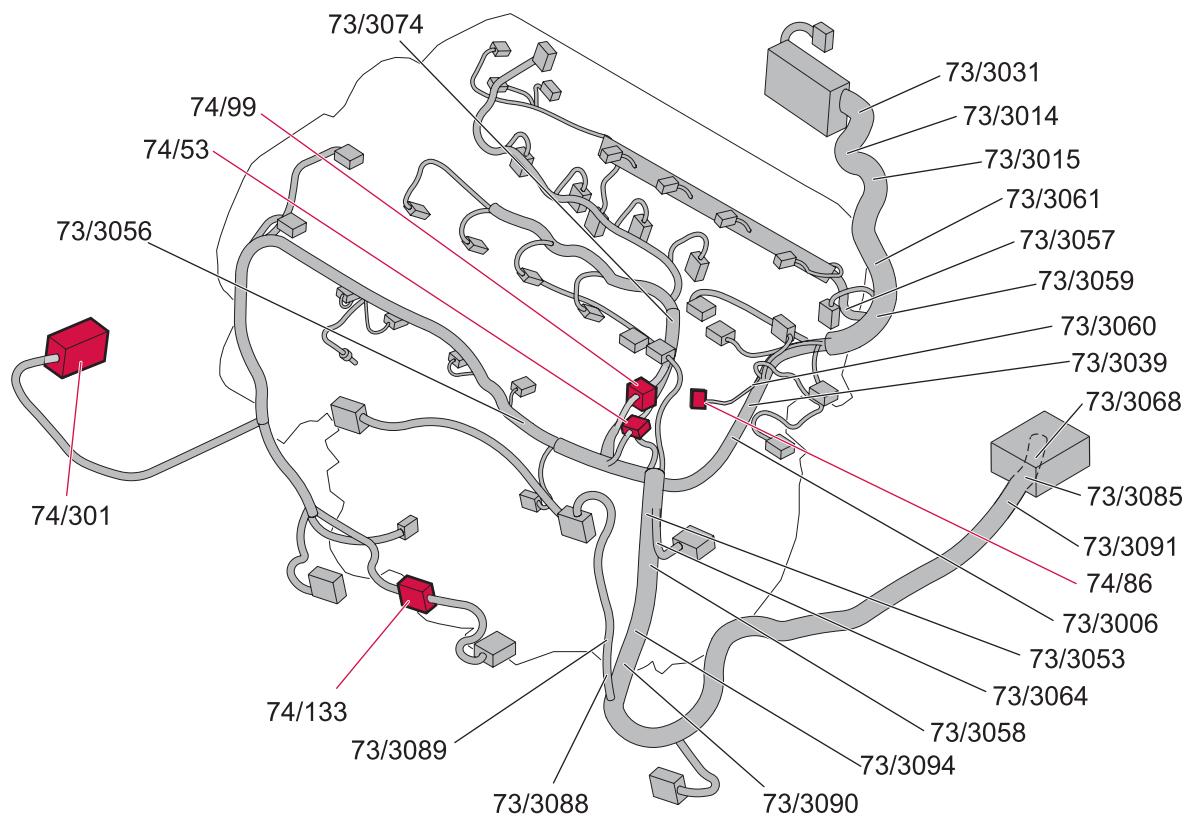

Cable harness routing in vehicle Harness engine, Diesel




Cable harness routing in vehicle Harness engine, 1.6L Diesel

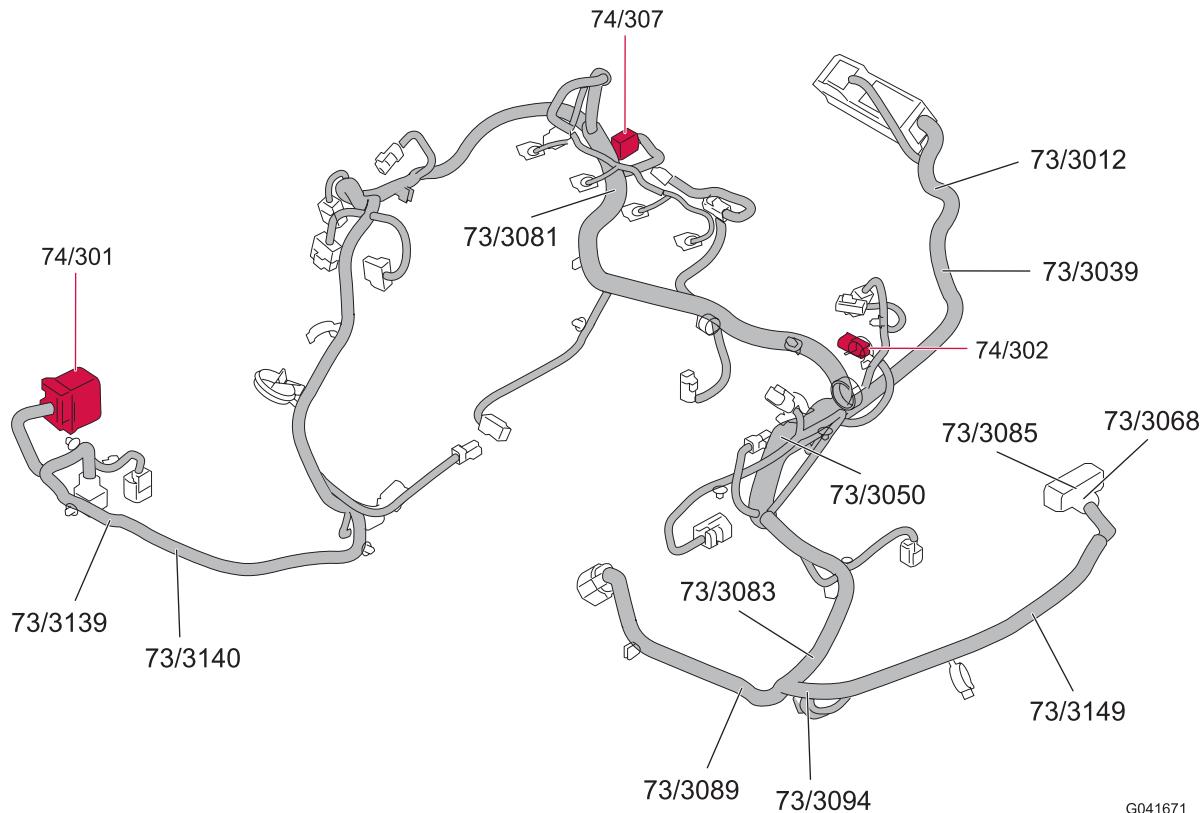

G041671


Cable harness routing in vehicle Harness engine, 2.0L Diesel

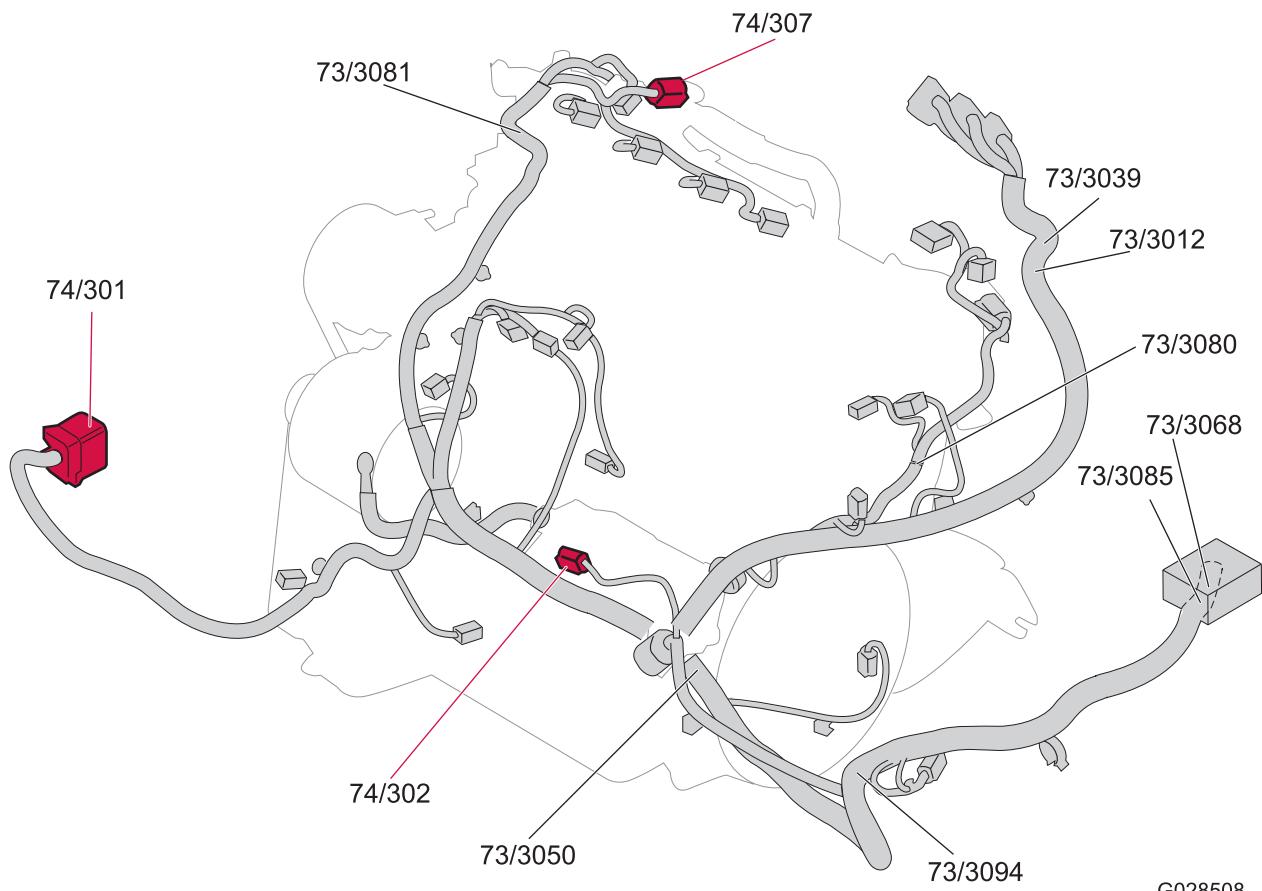

G028508


Cable harness routing in vehicle

Engine compartment harness

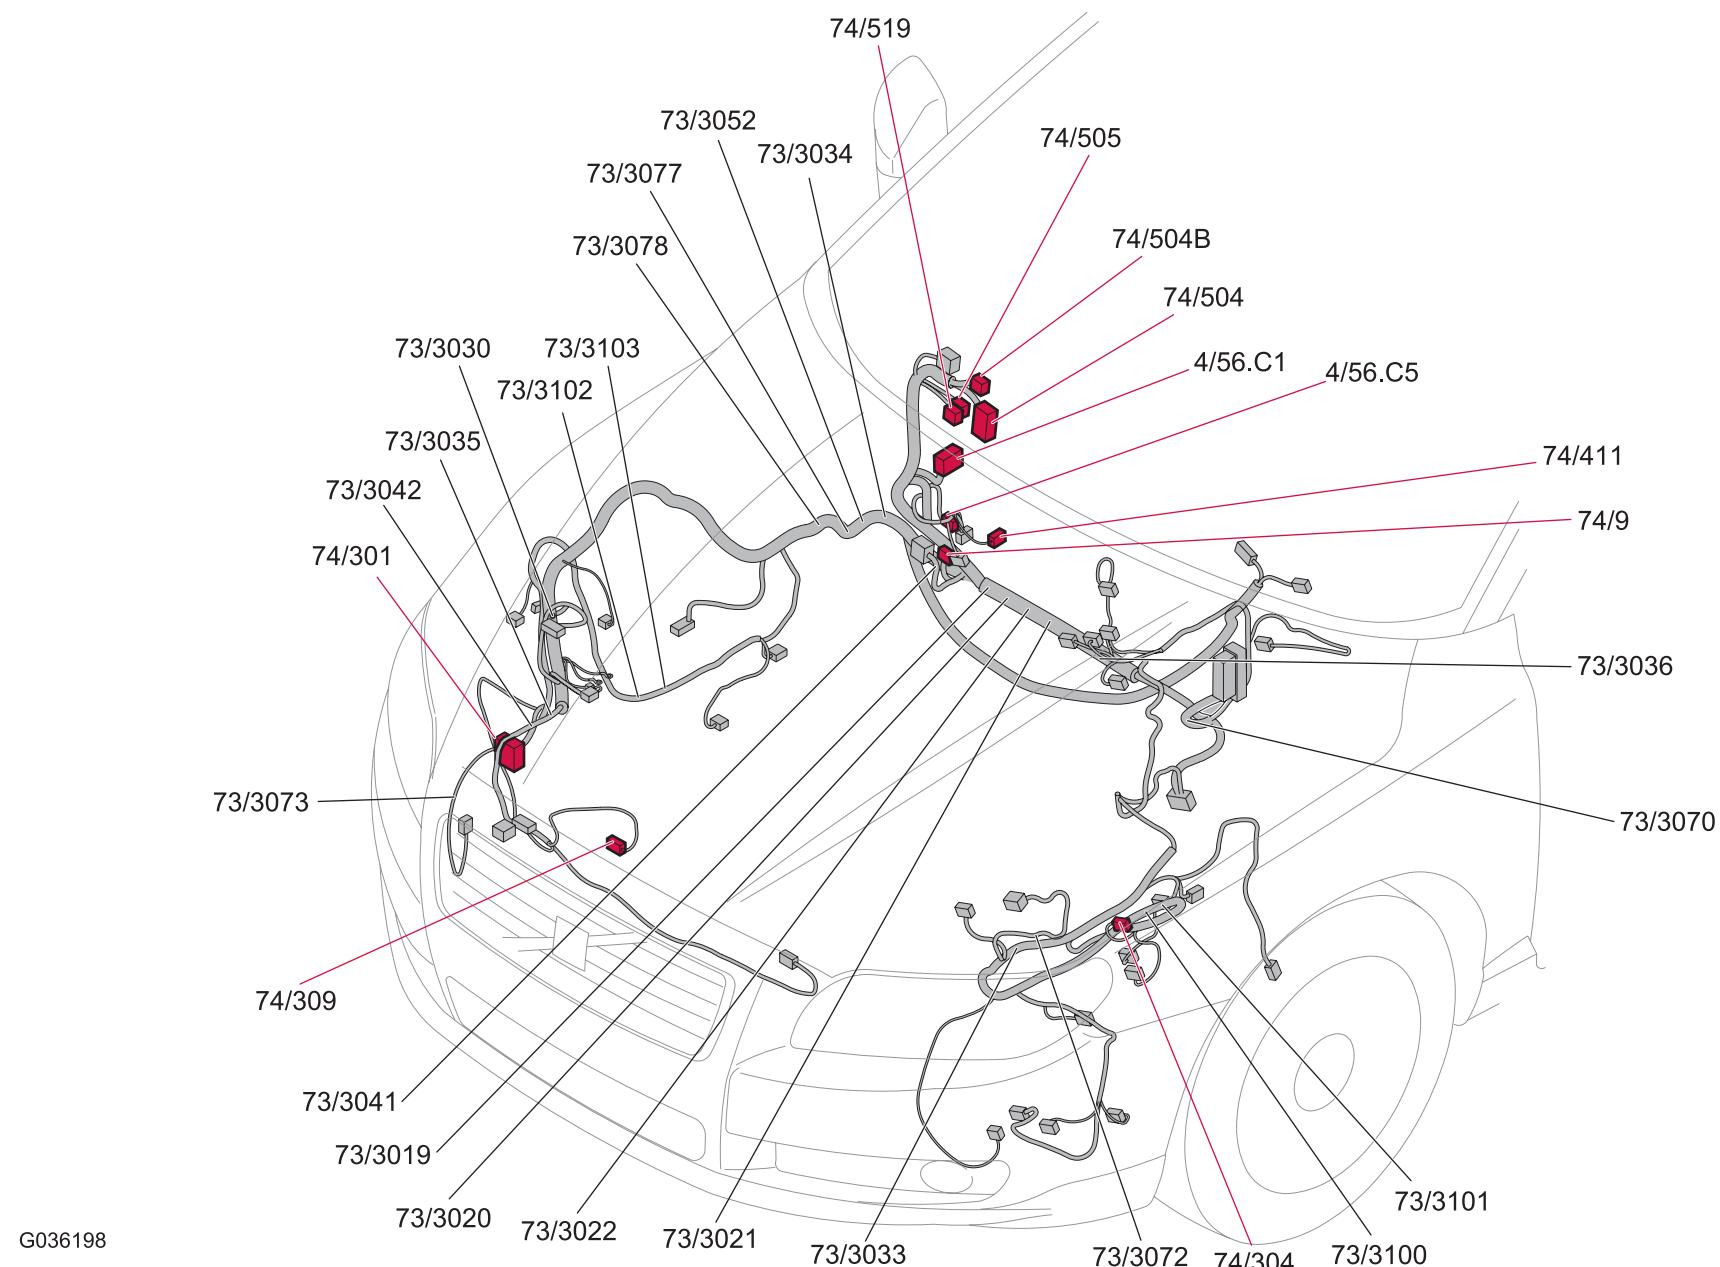

Cable harness routing in vehicle


Harness dashboard, LHD

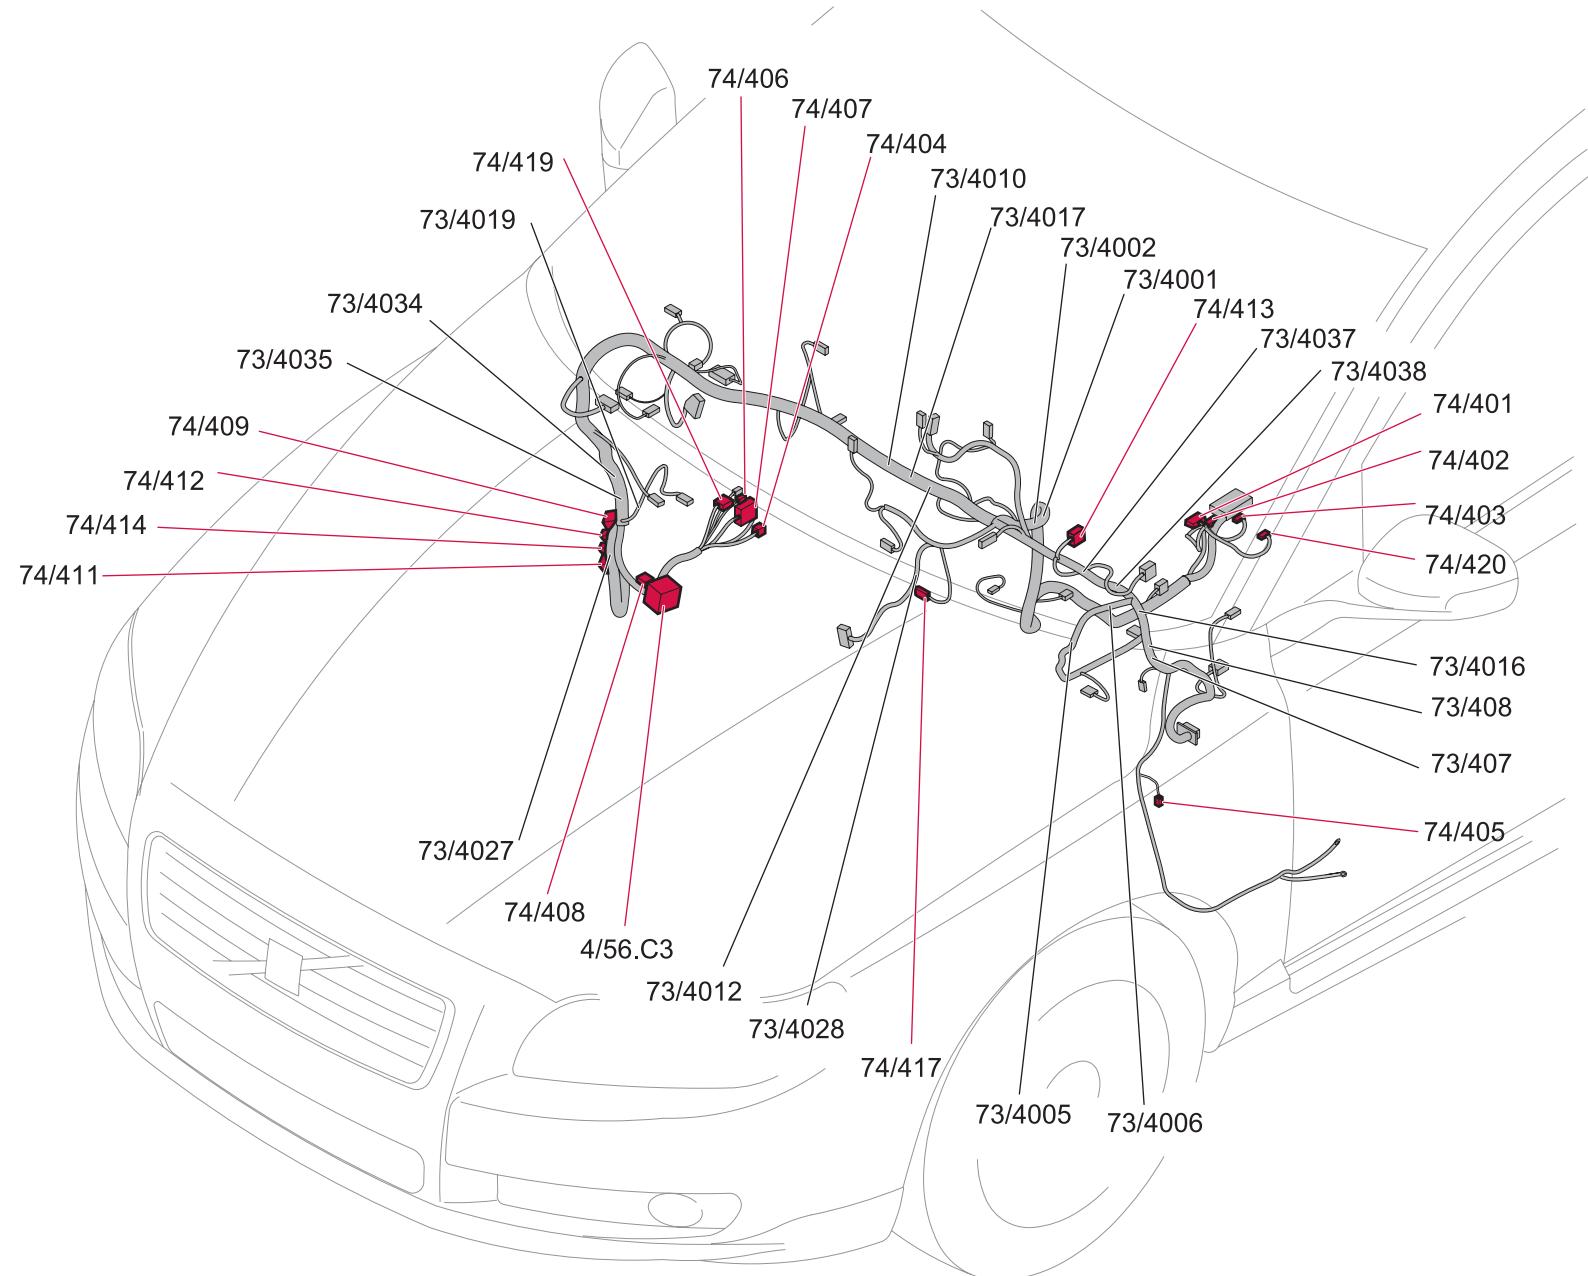

G035656

Cable harness routing in vehicle


Harness Dashboard, RHD

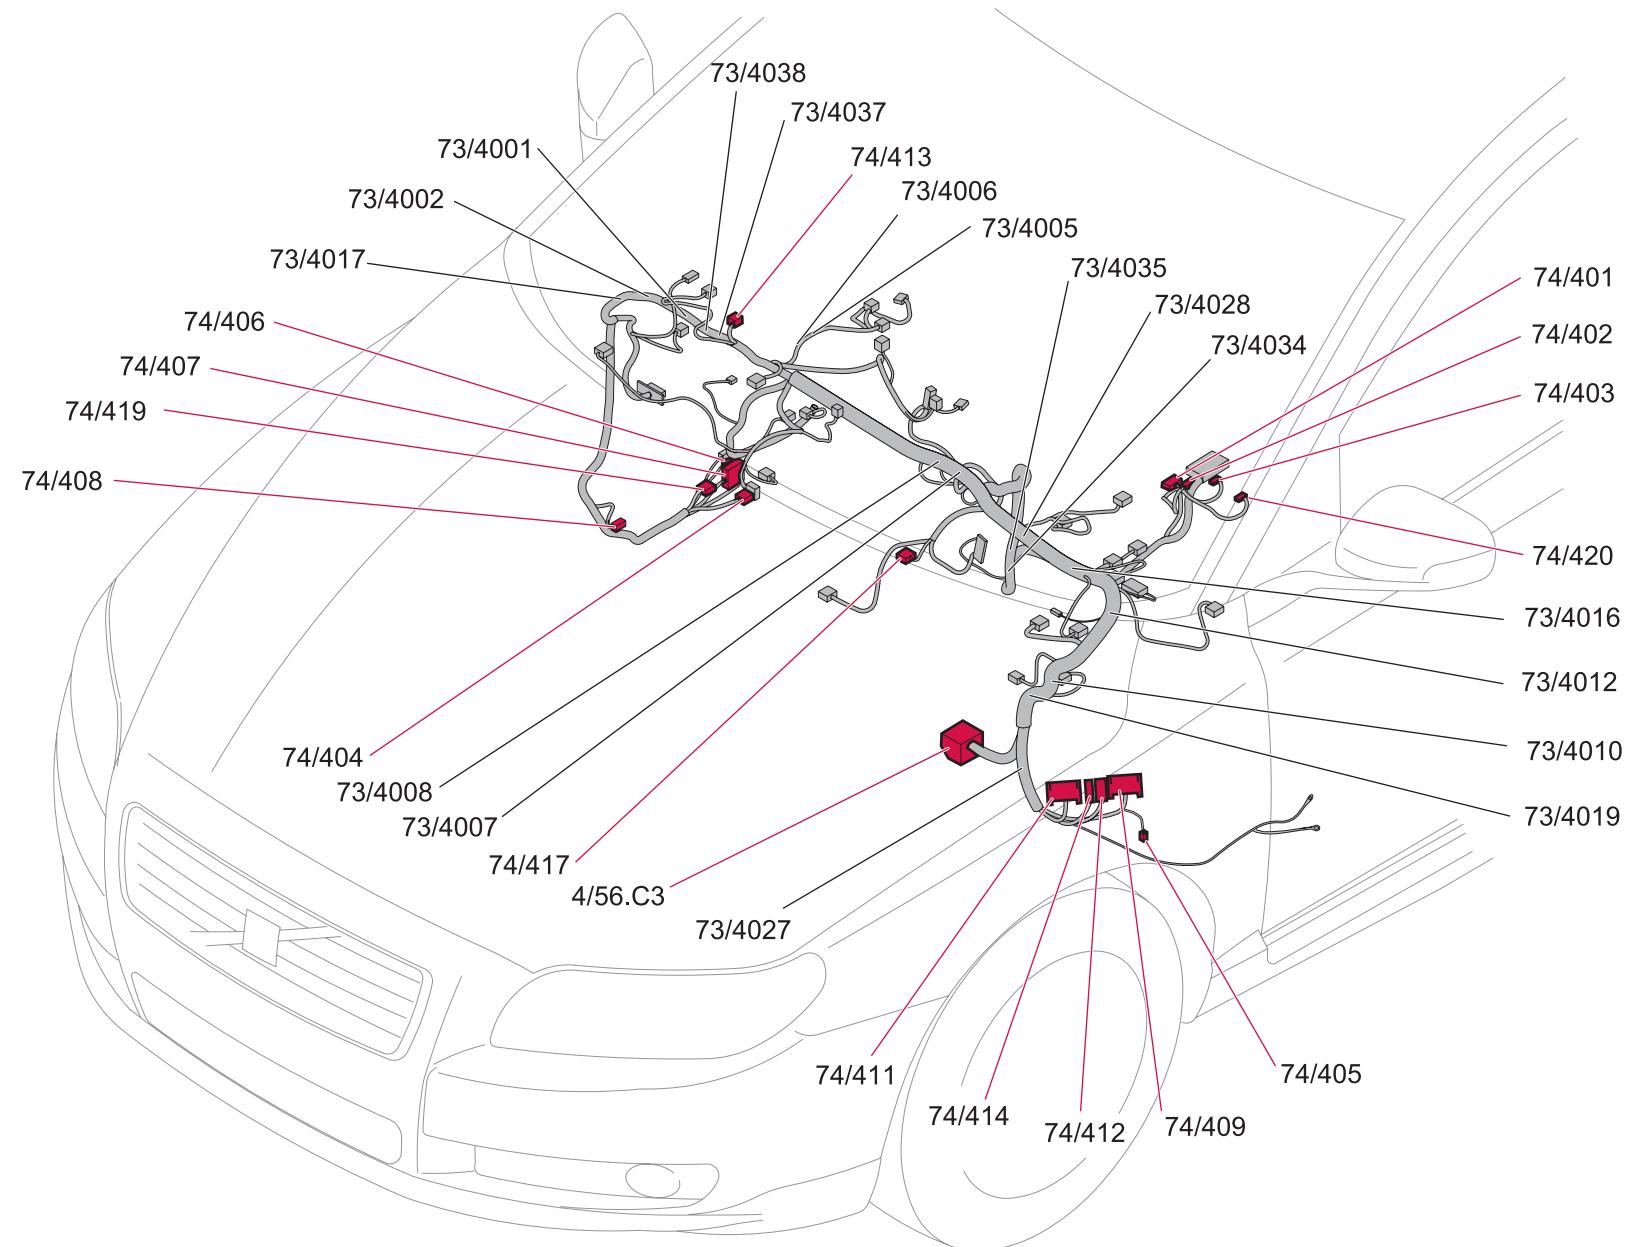

G035654


Cable harness routing in vehicle

Harness Floor, LHD S80

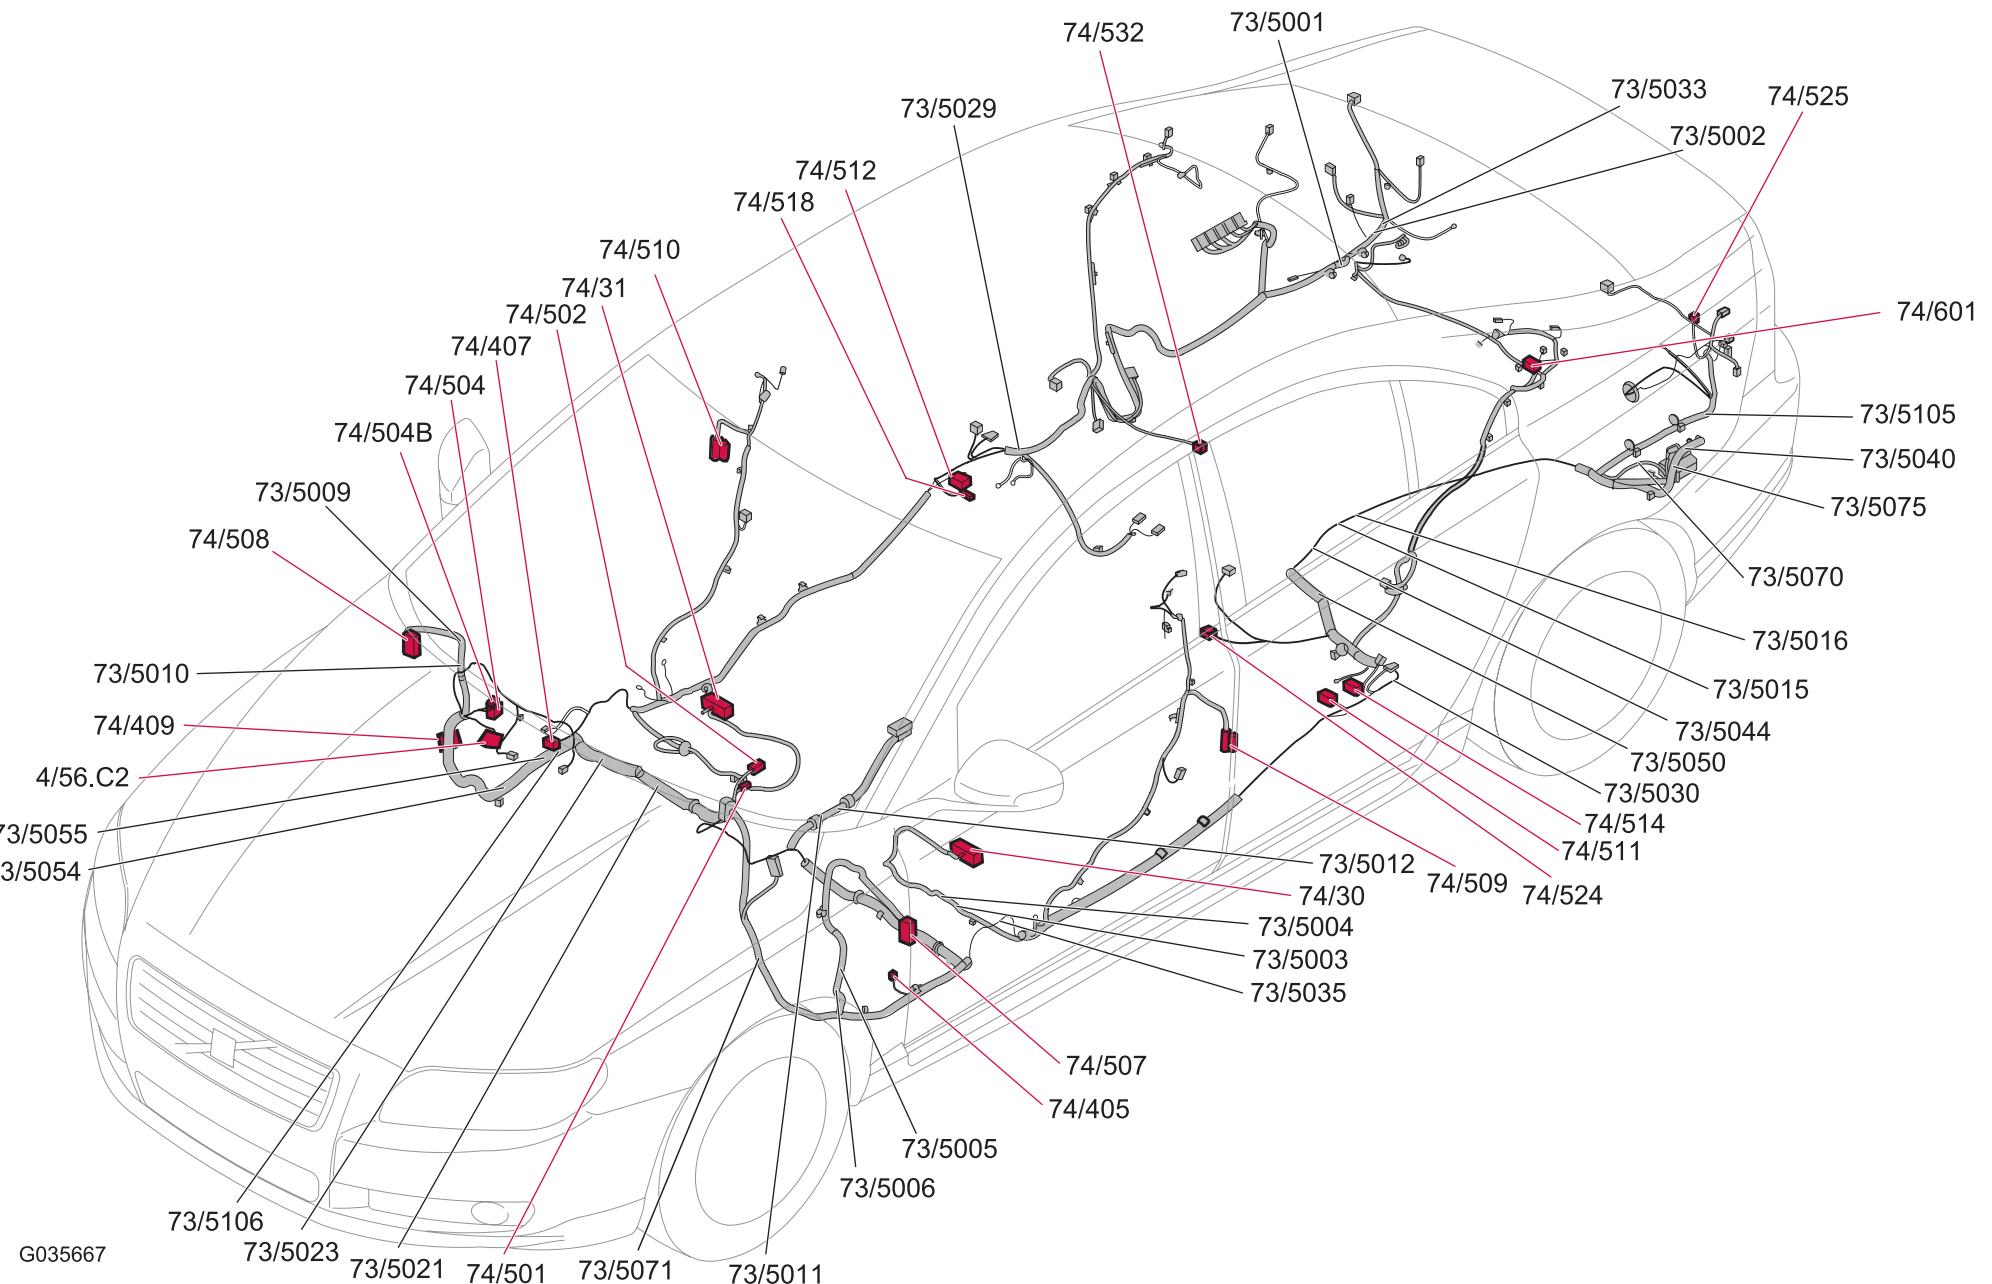


Cable harness routing in vehicle

Harness Floor, RHD S80

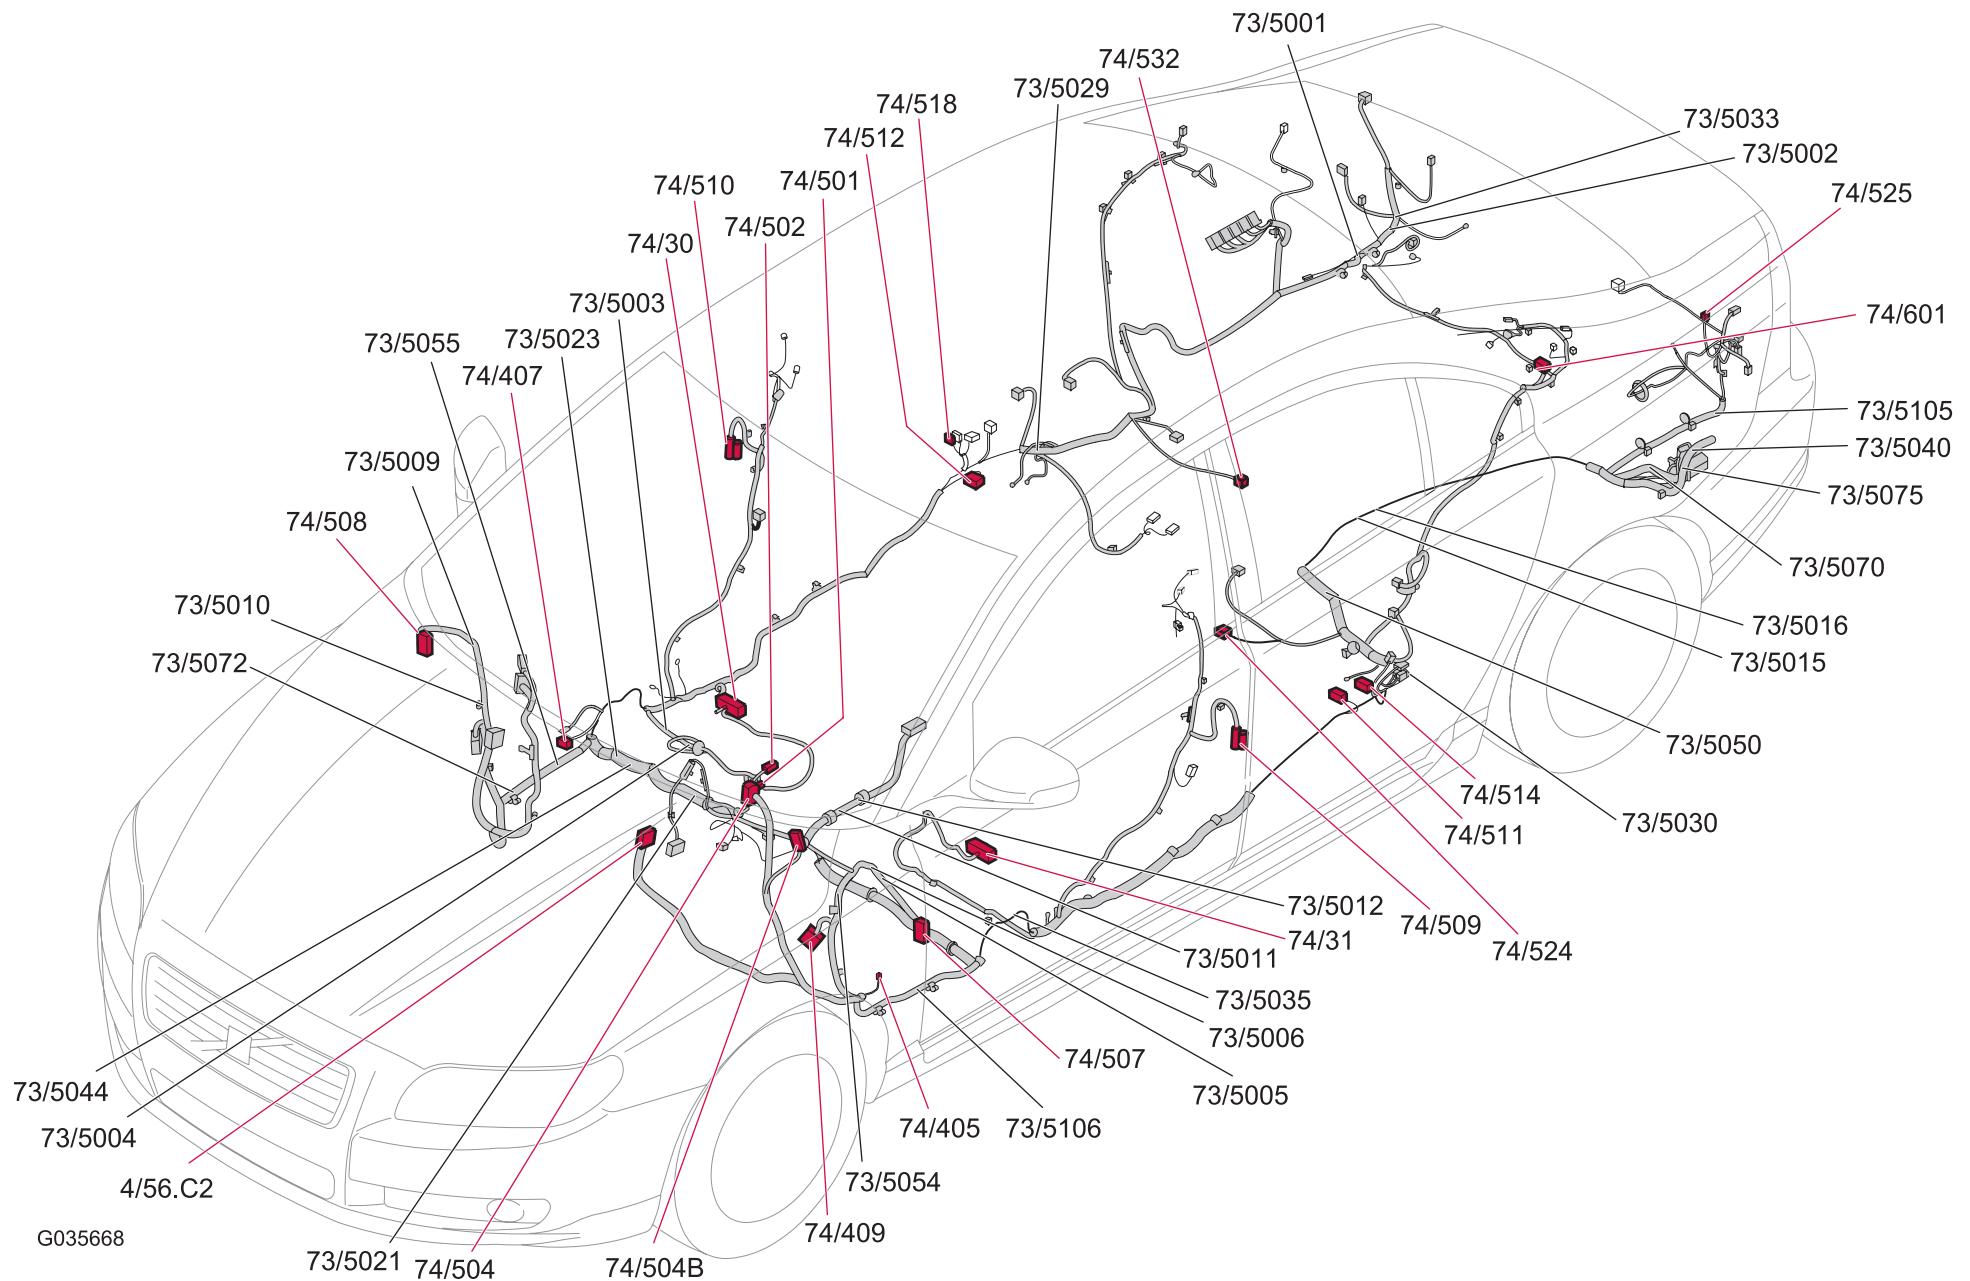

Cable harness routing in vehicle


Harness Floor, LHD V70

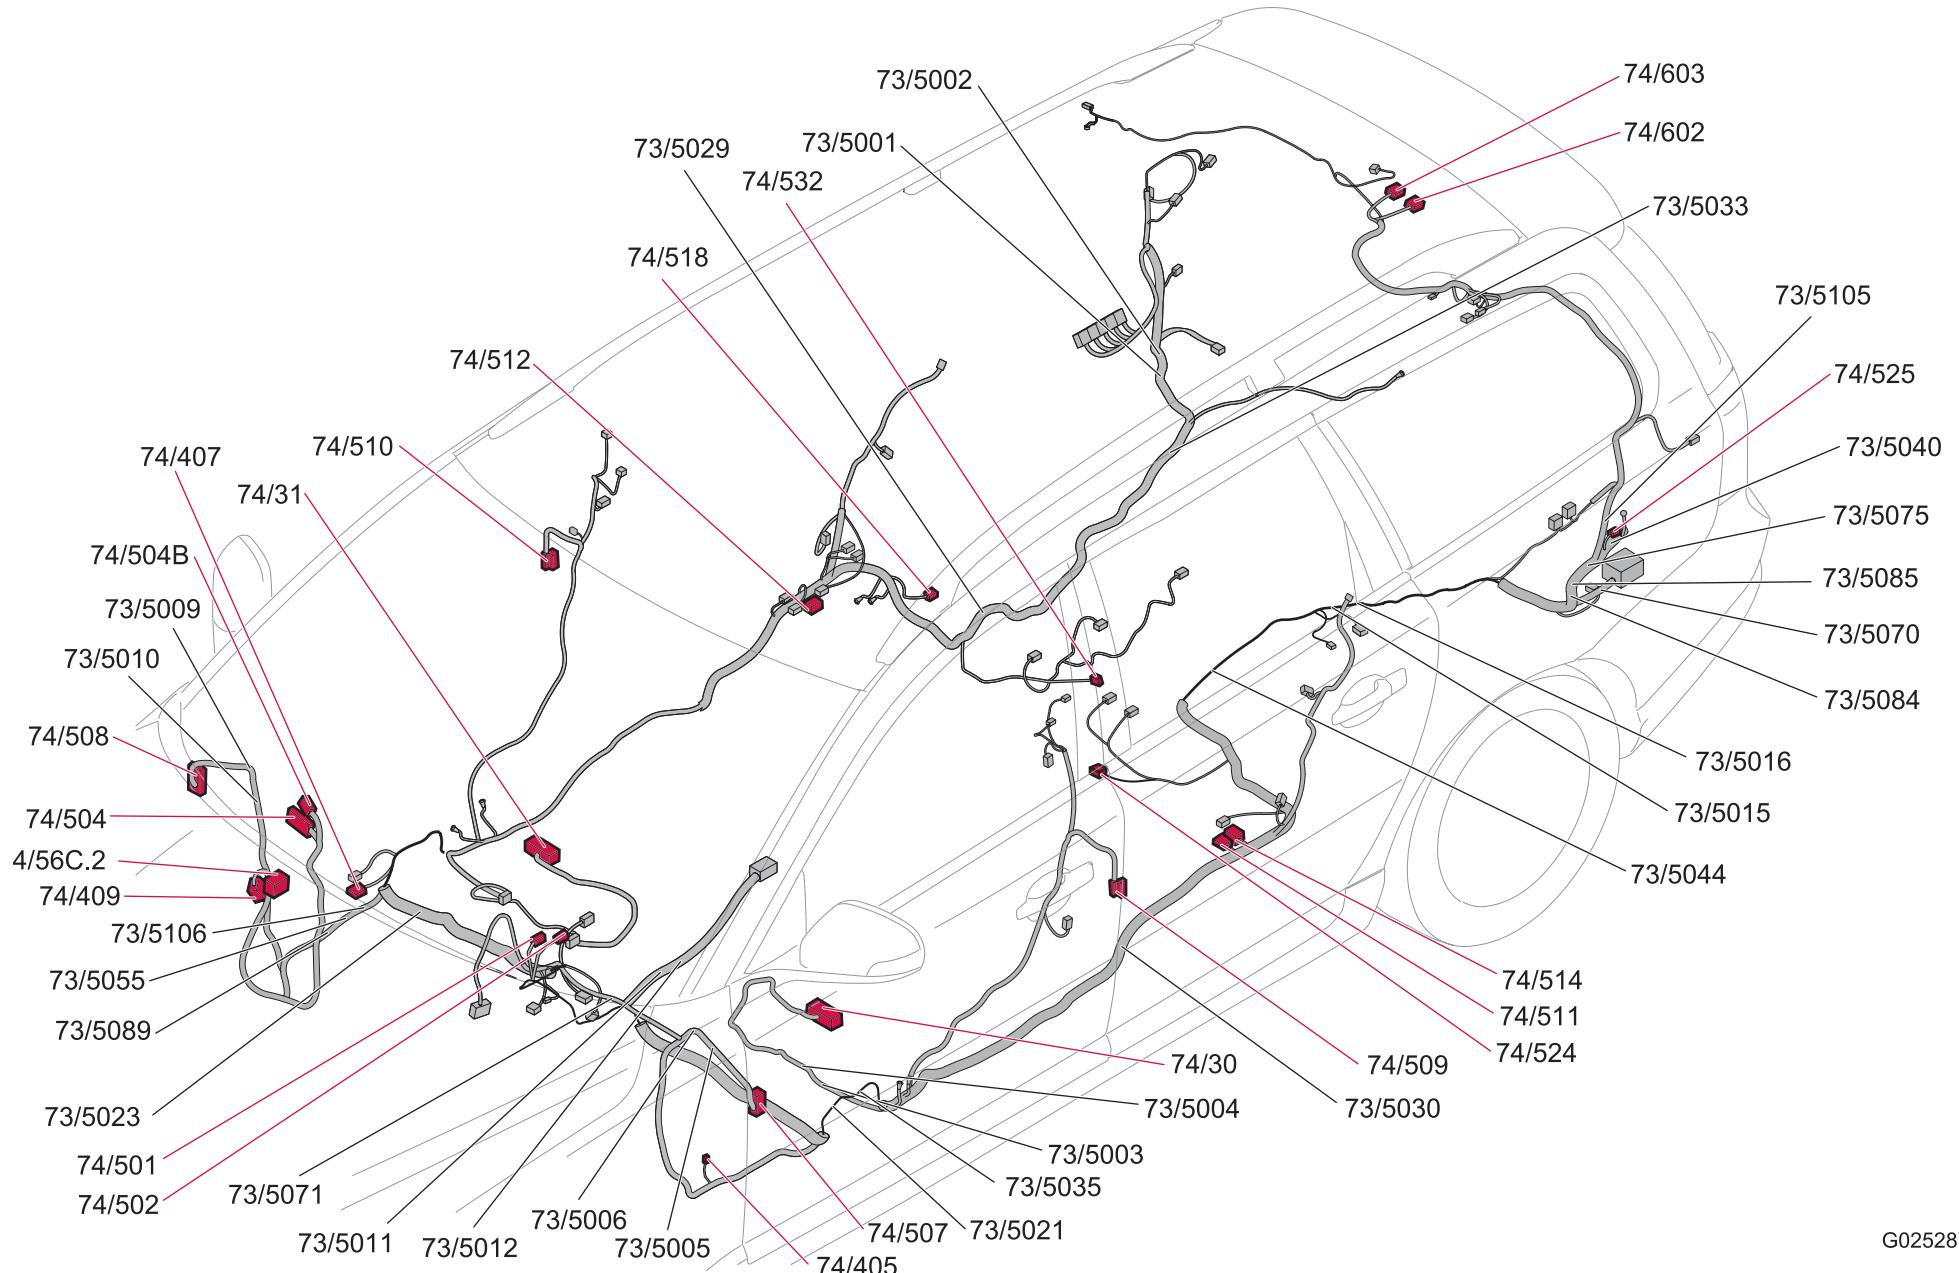

G025287

Cable harness routing in vehicle


Harness Floor, RHD V70

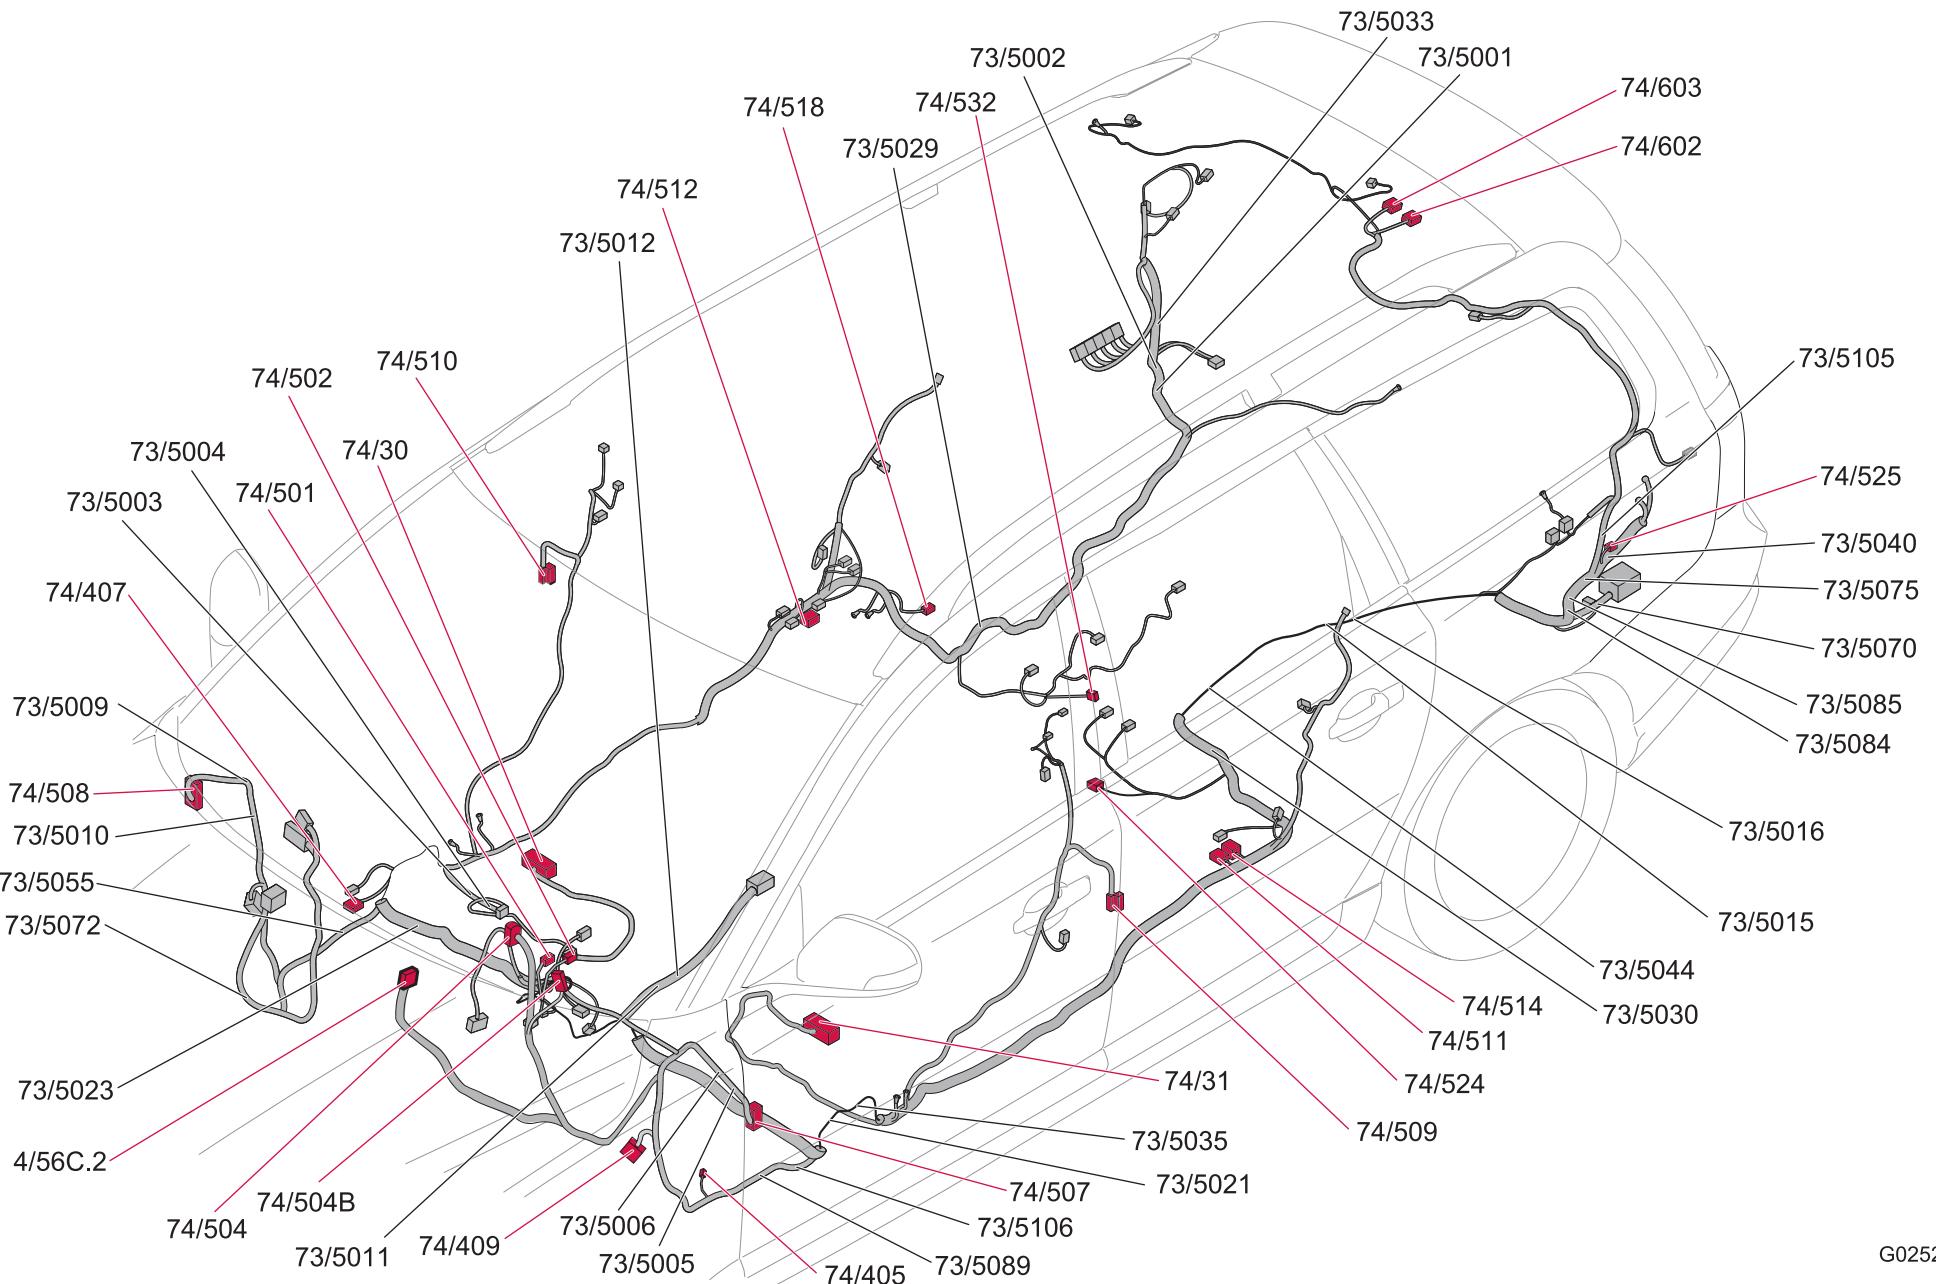

G025288

Cable harness routing in vehicle


Harness infotainment, LHD S80

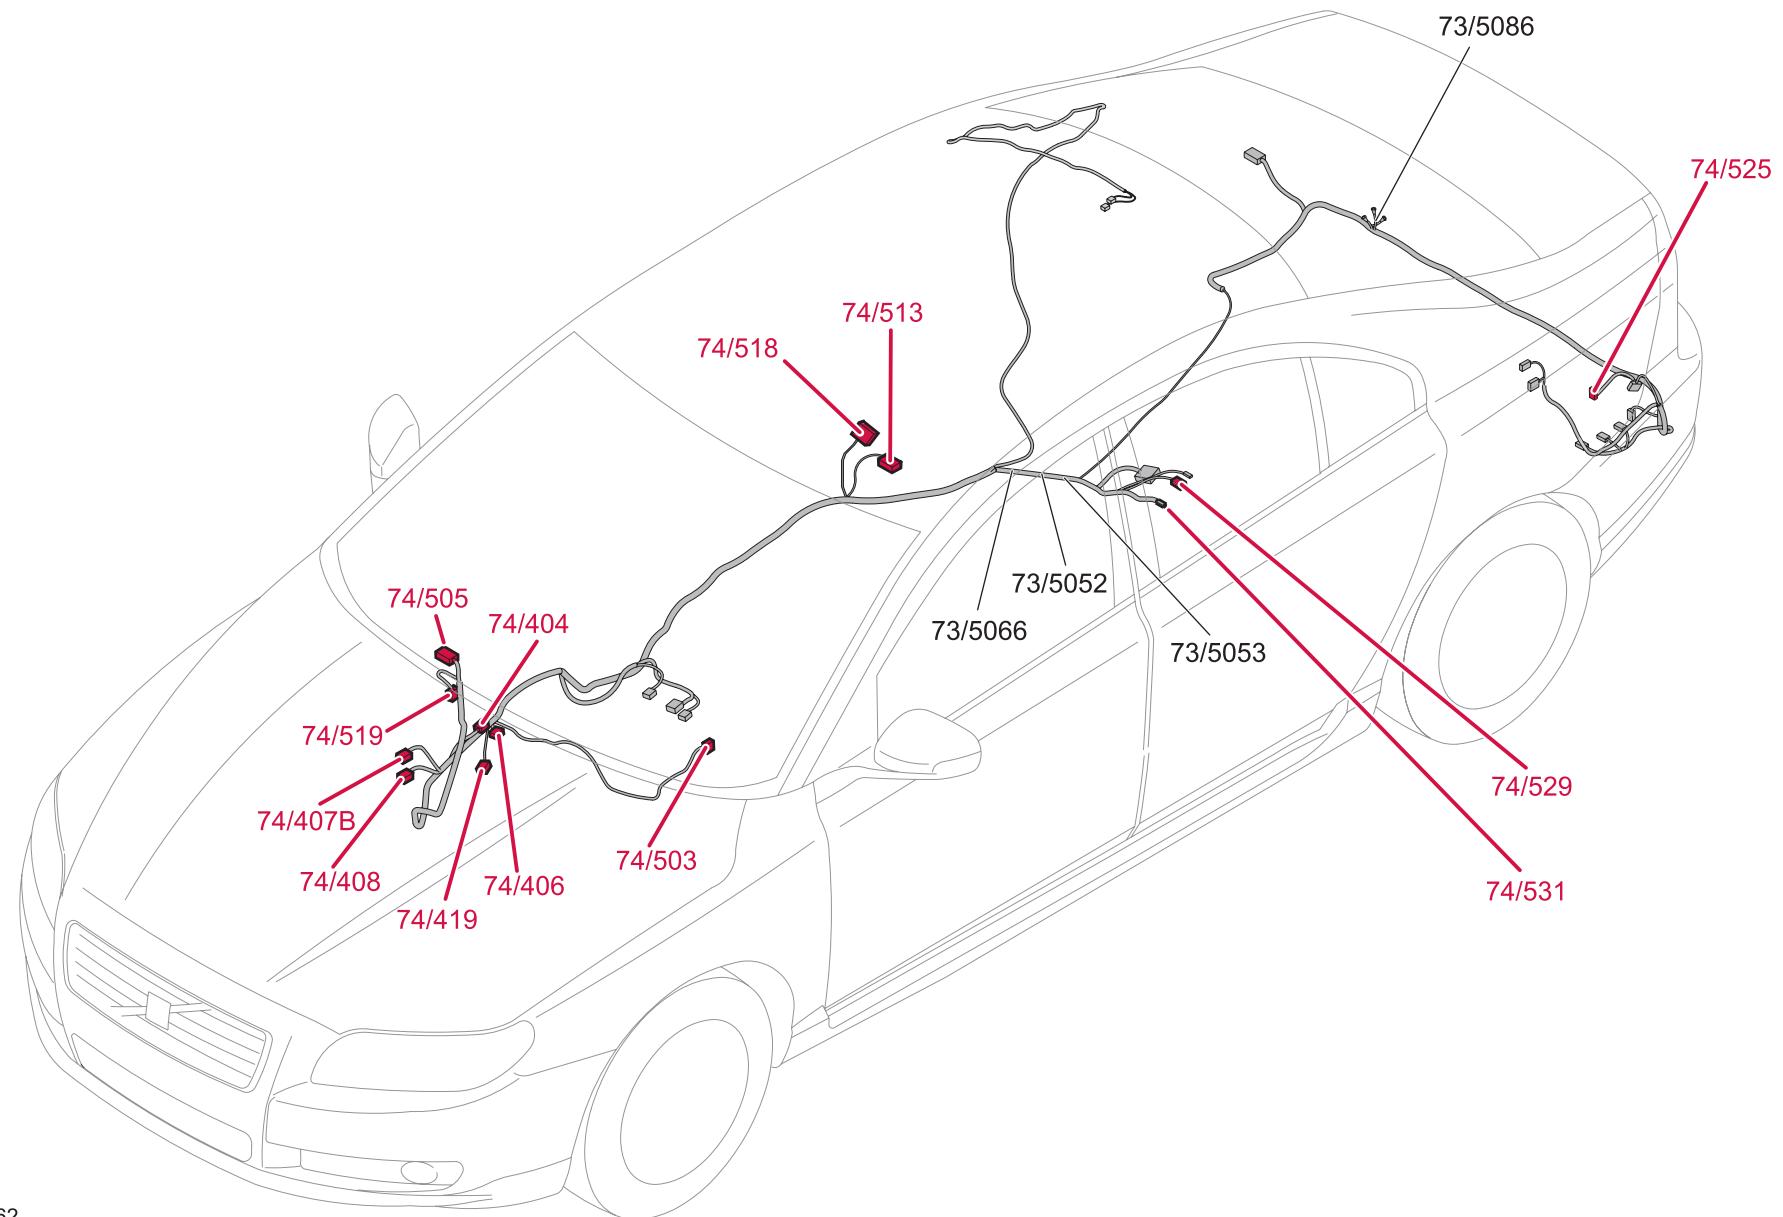

G035662

Cable harness routing in vehicle

Harness infotainment, RHD S80

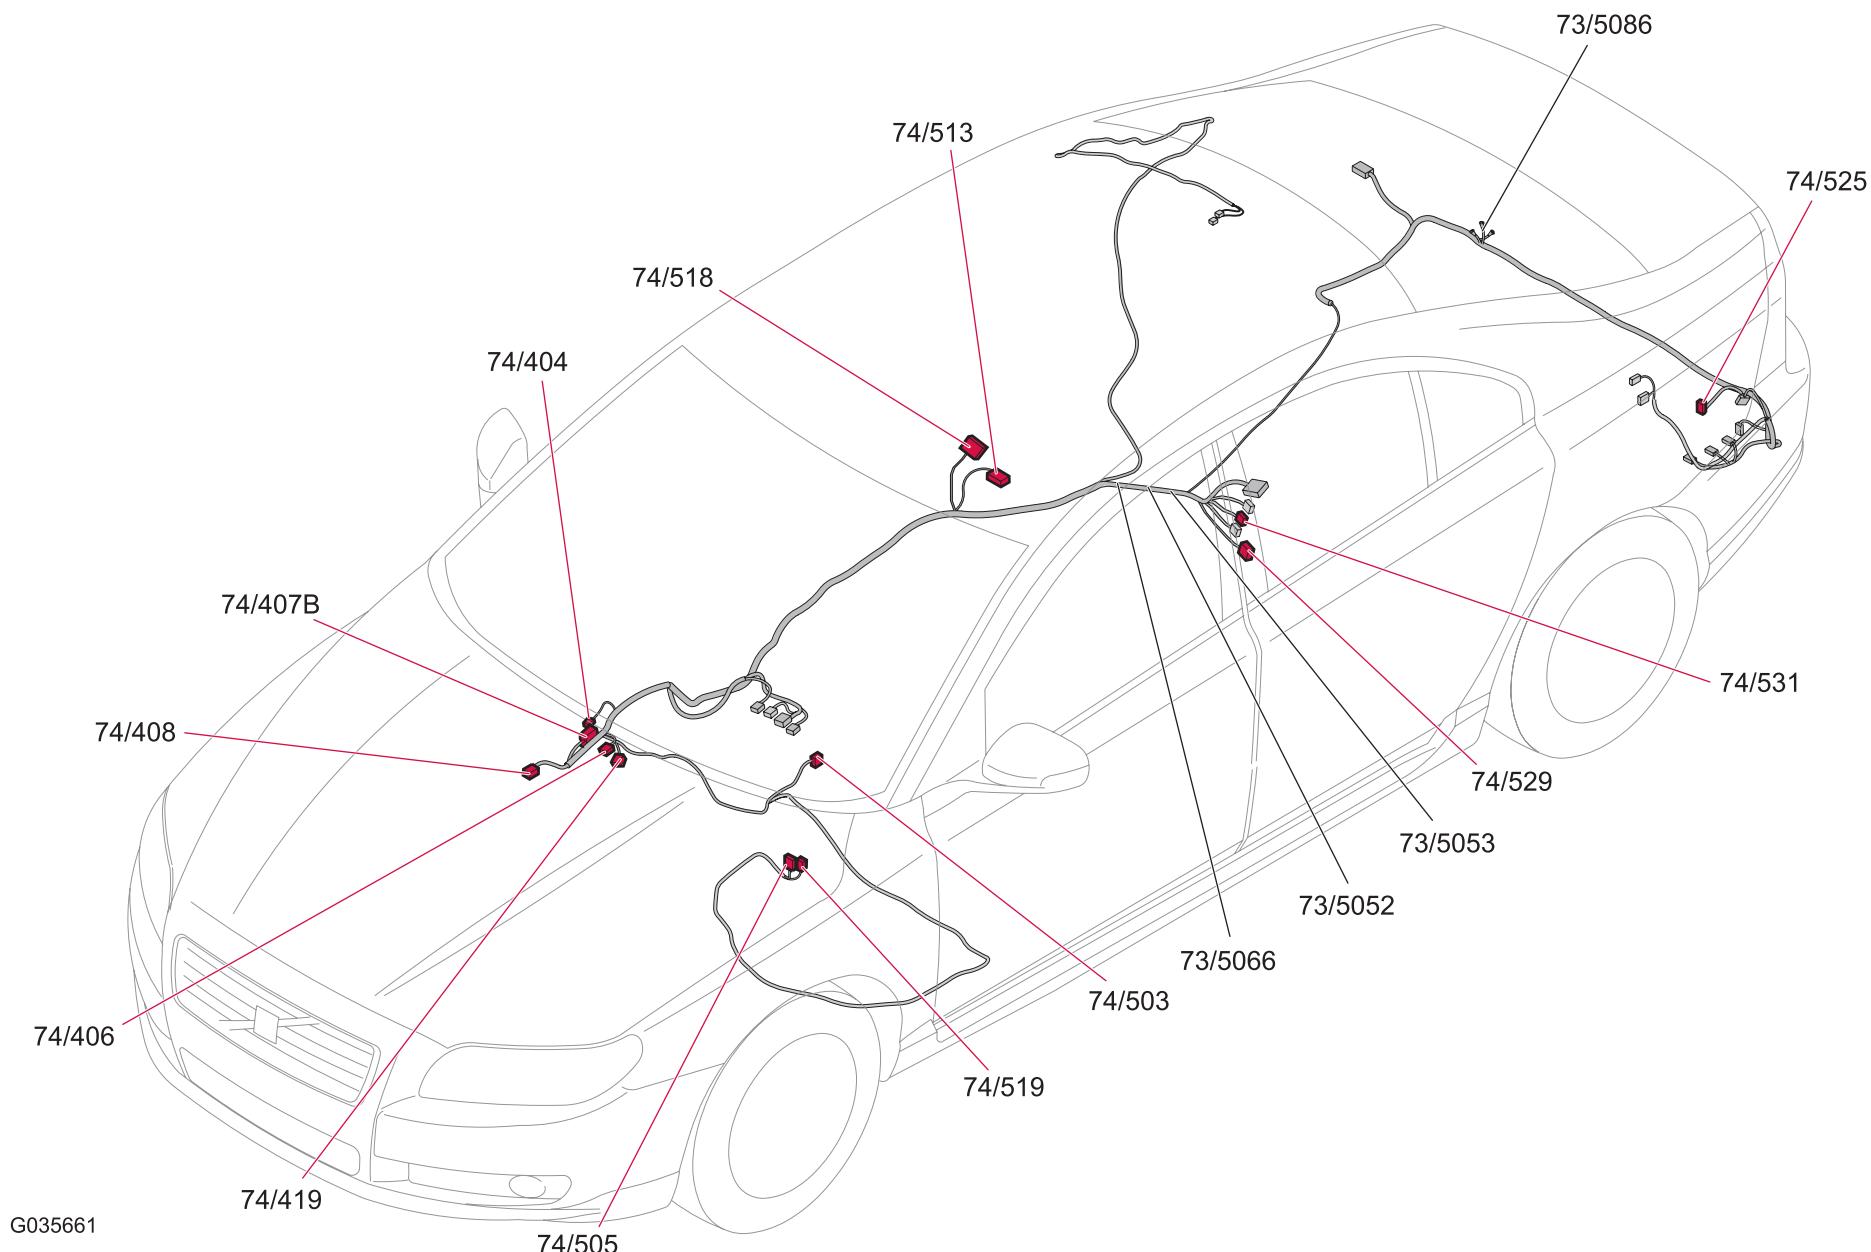

Cable harness routing in vehicle


Harness infotainment, LHD V70



G025289


Cable harness routing in vehicle

Harness infotainment, RHD V70

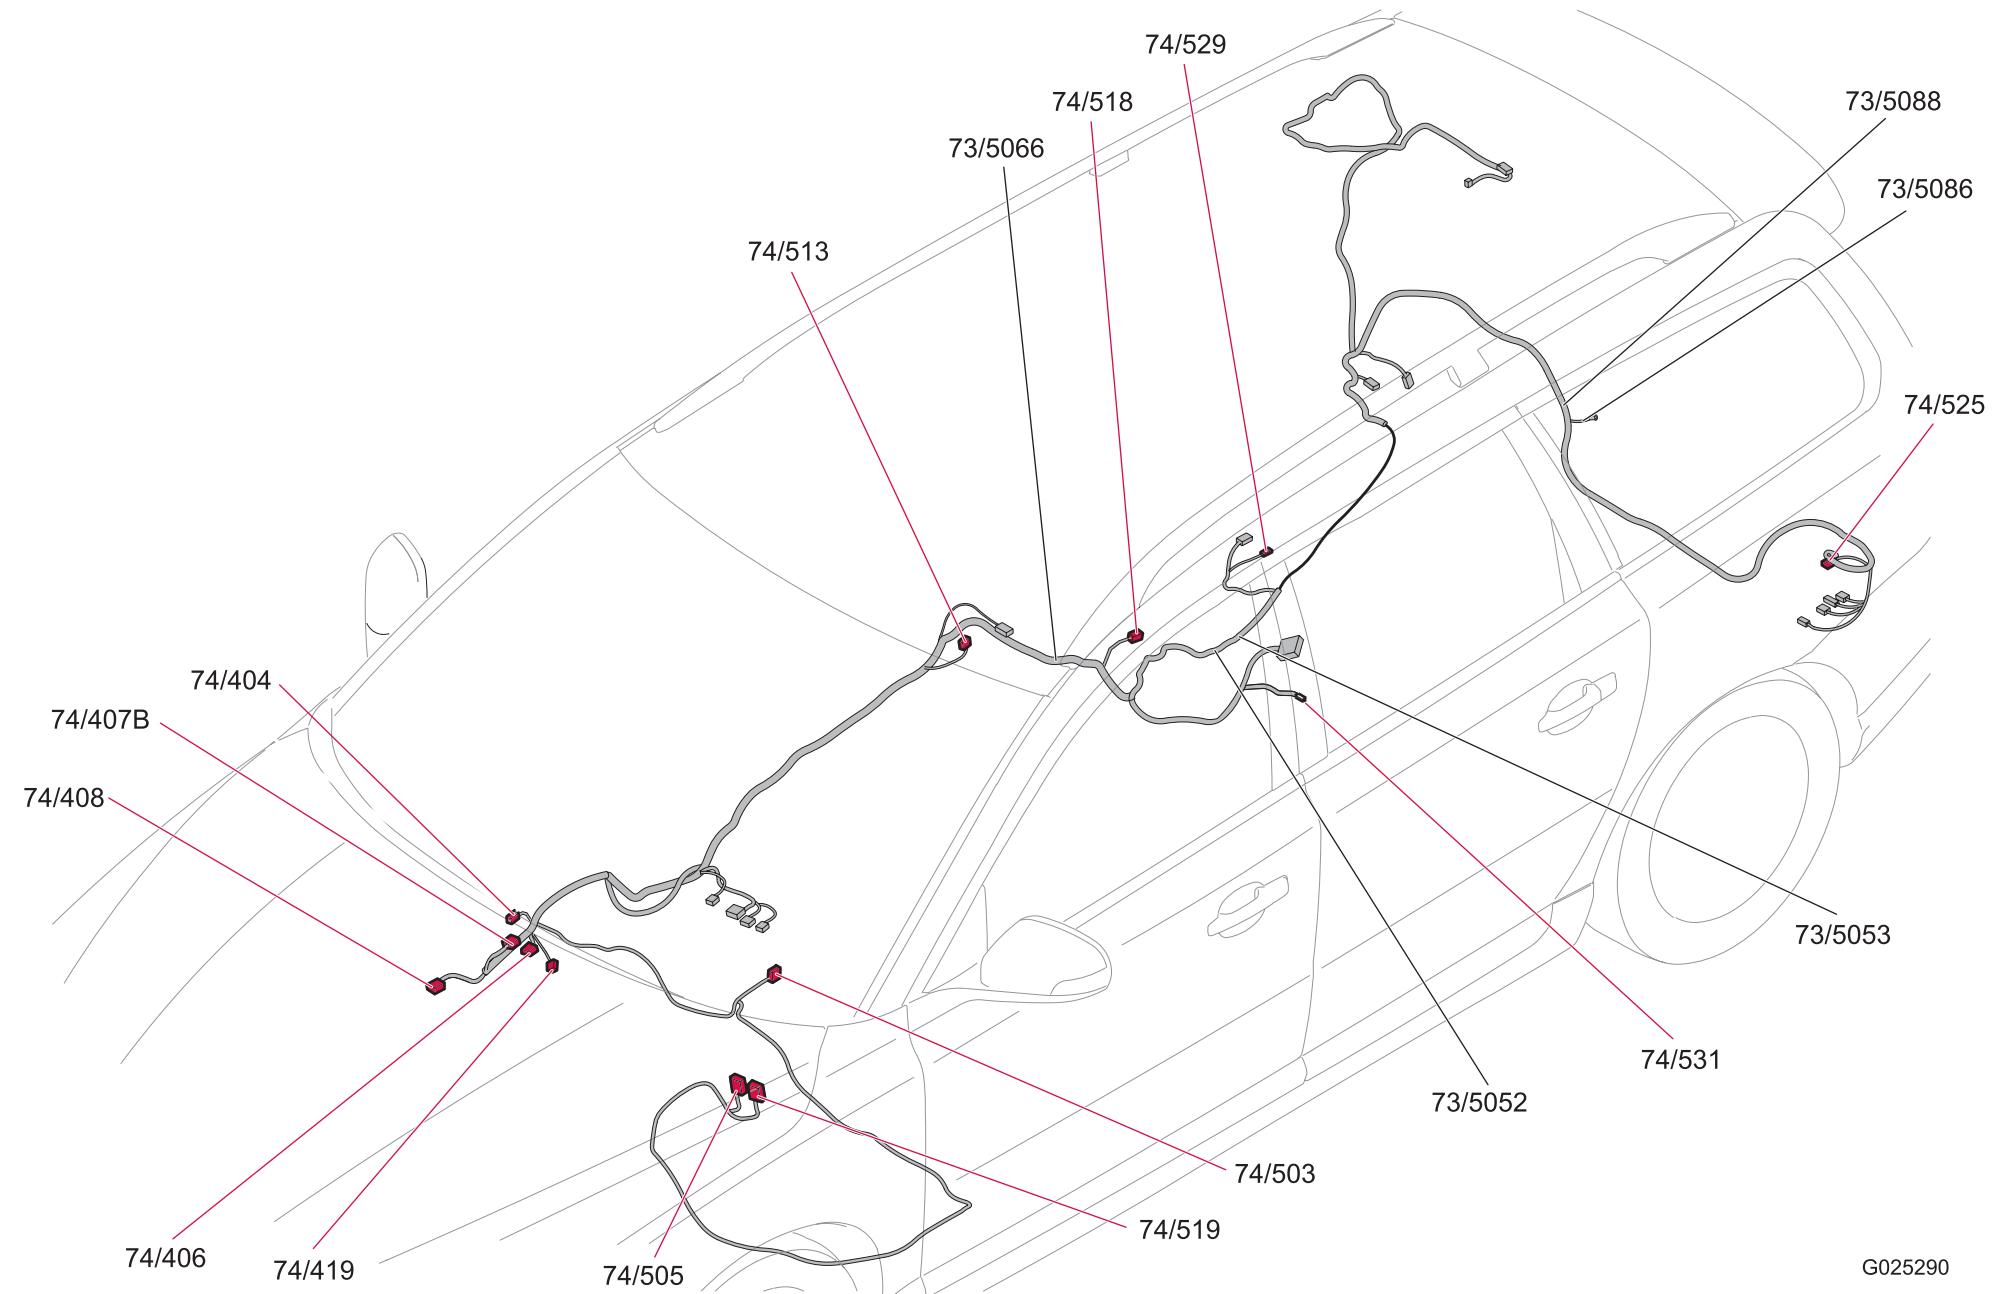


G025290


Cable harness routing in vehicle Roof harness, S80

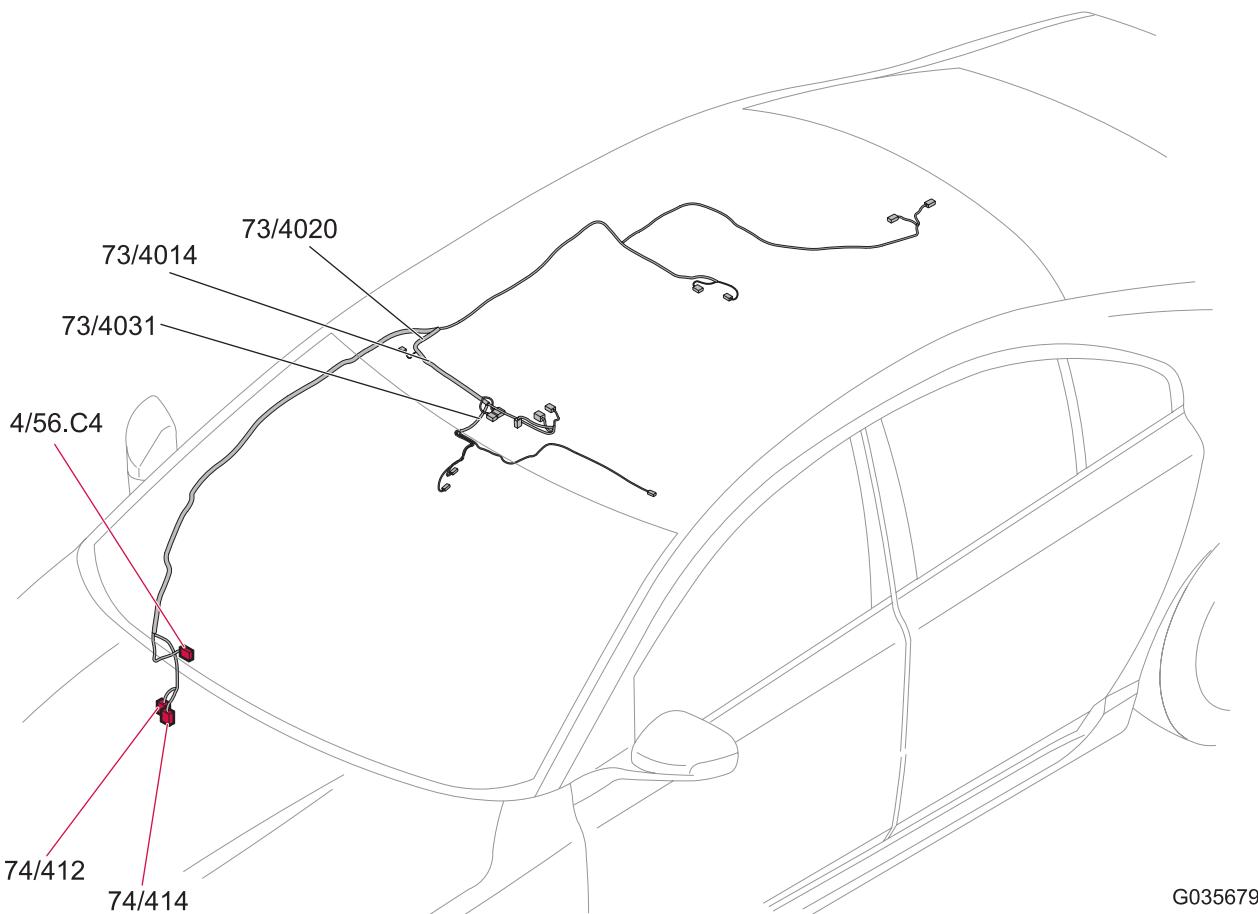

Cable harness routing in vehicle Roof harness, V70

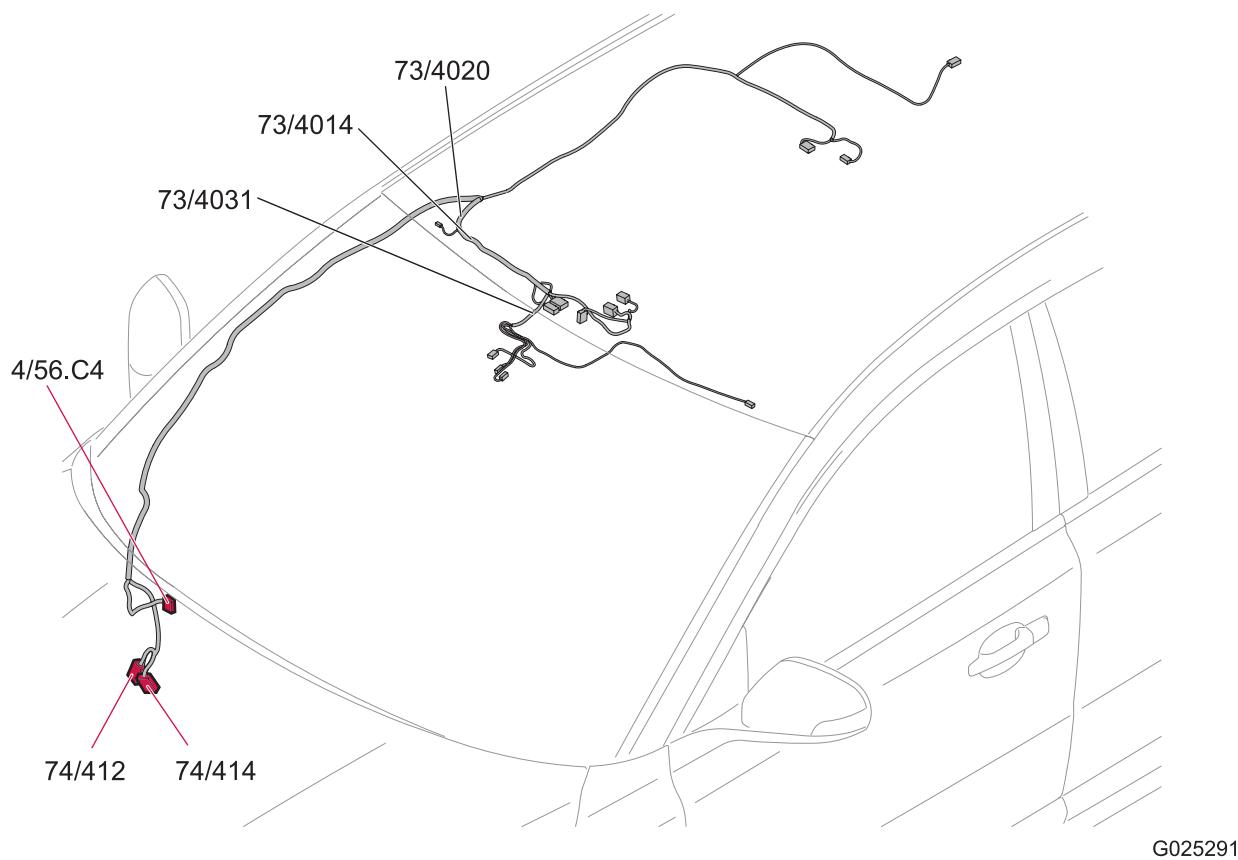


Cable harness routing in vehicle Center console harness

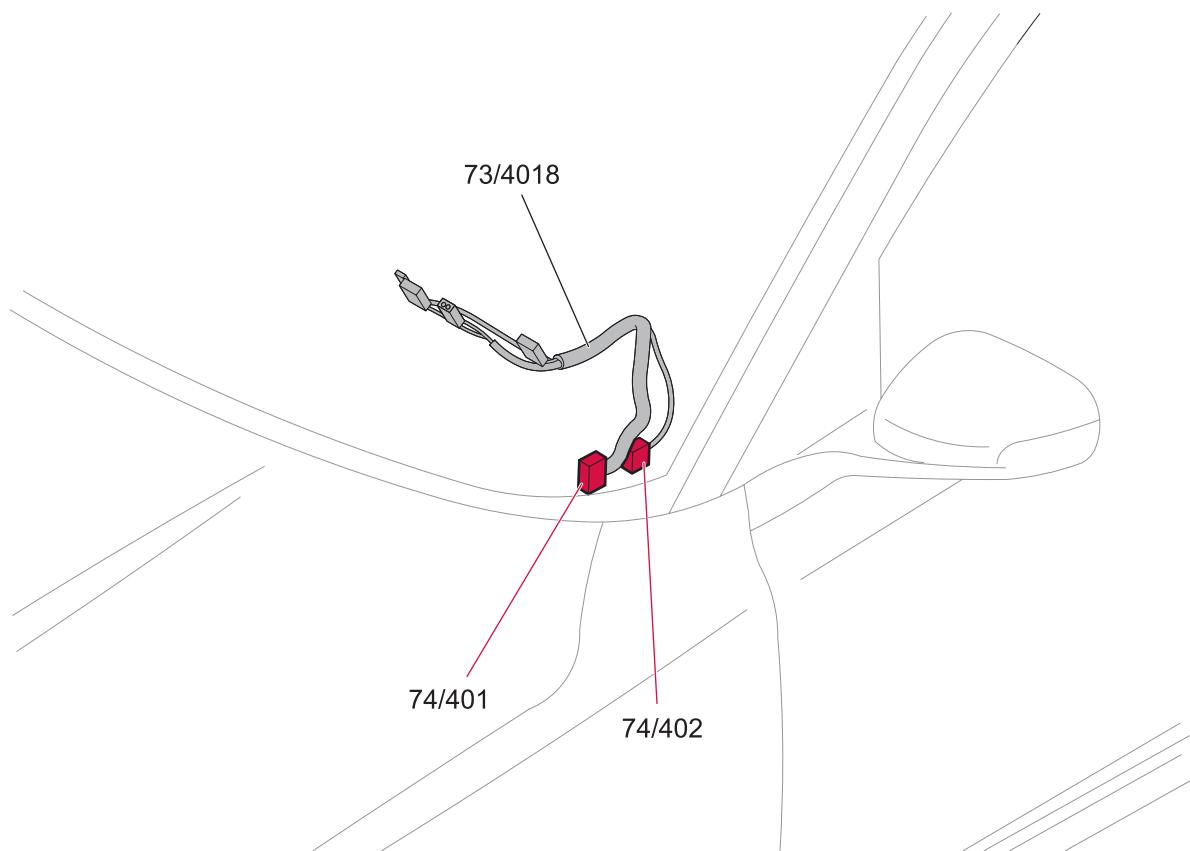


G035657

Cable harness routing in vehicle Tunnel harness

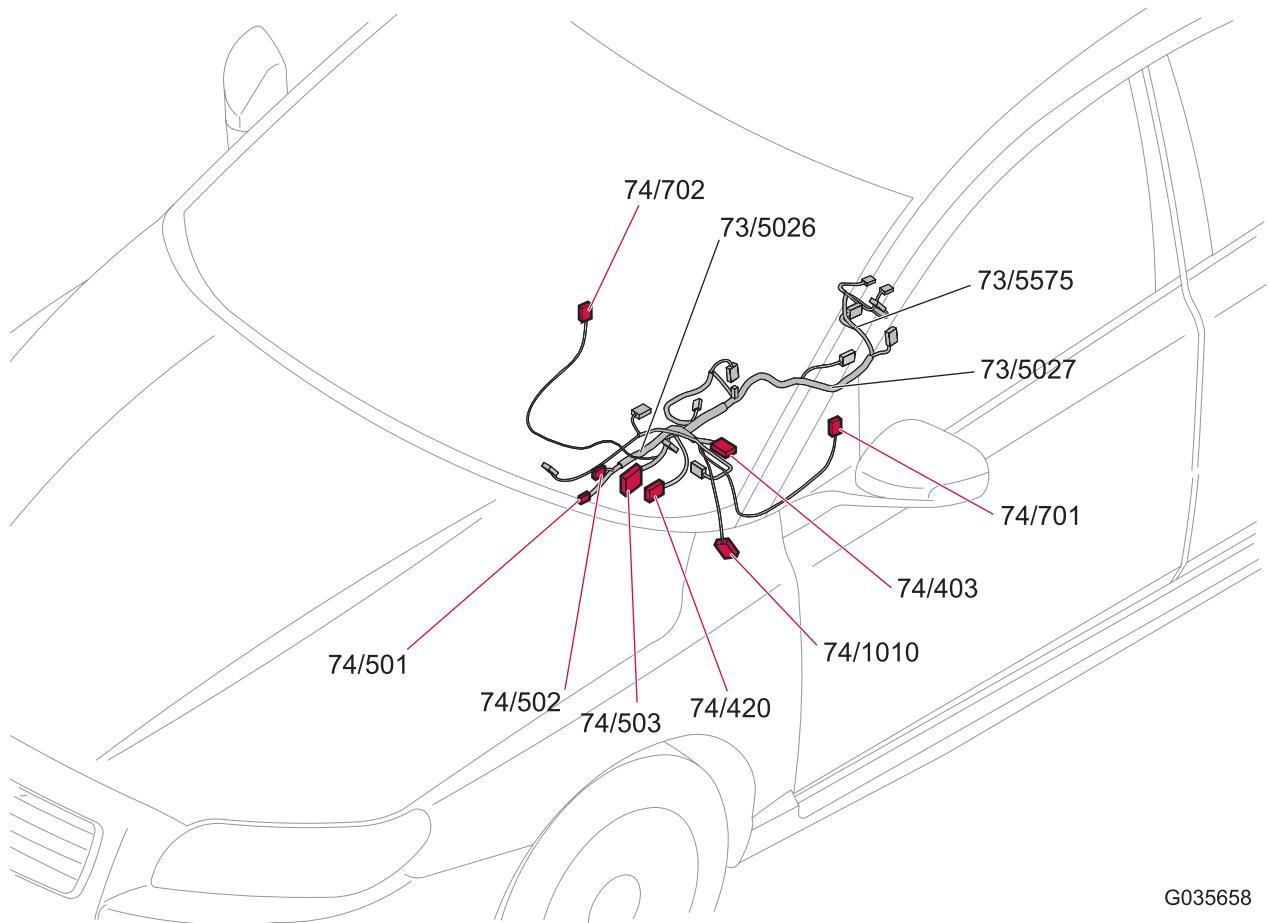


G035658

Cable harness routing in vehicle Harness front door, left

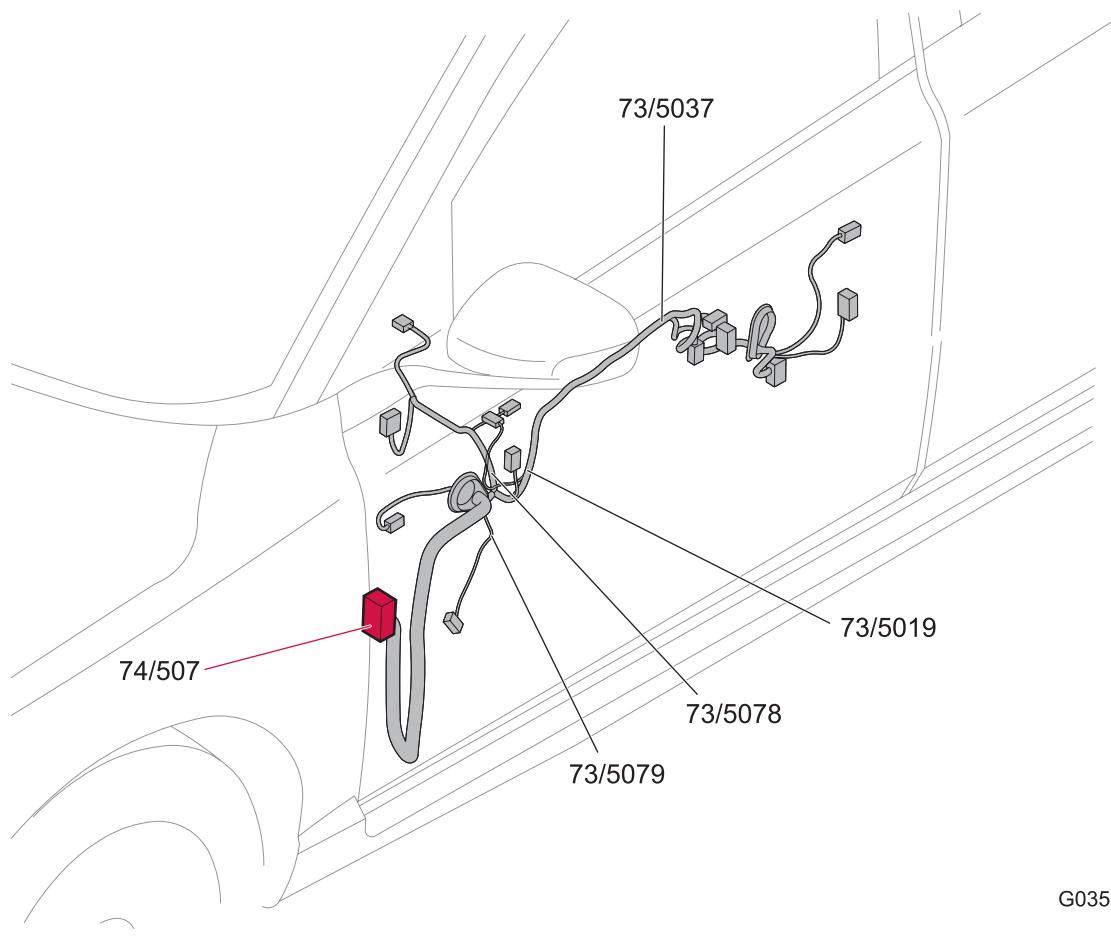


G035672

Cable harness routing in vehicle Harness front door, right

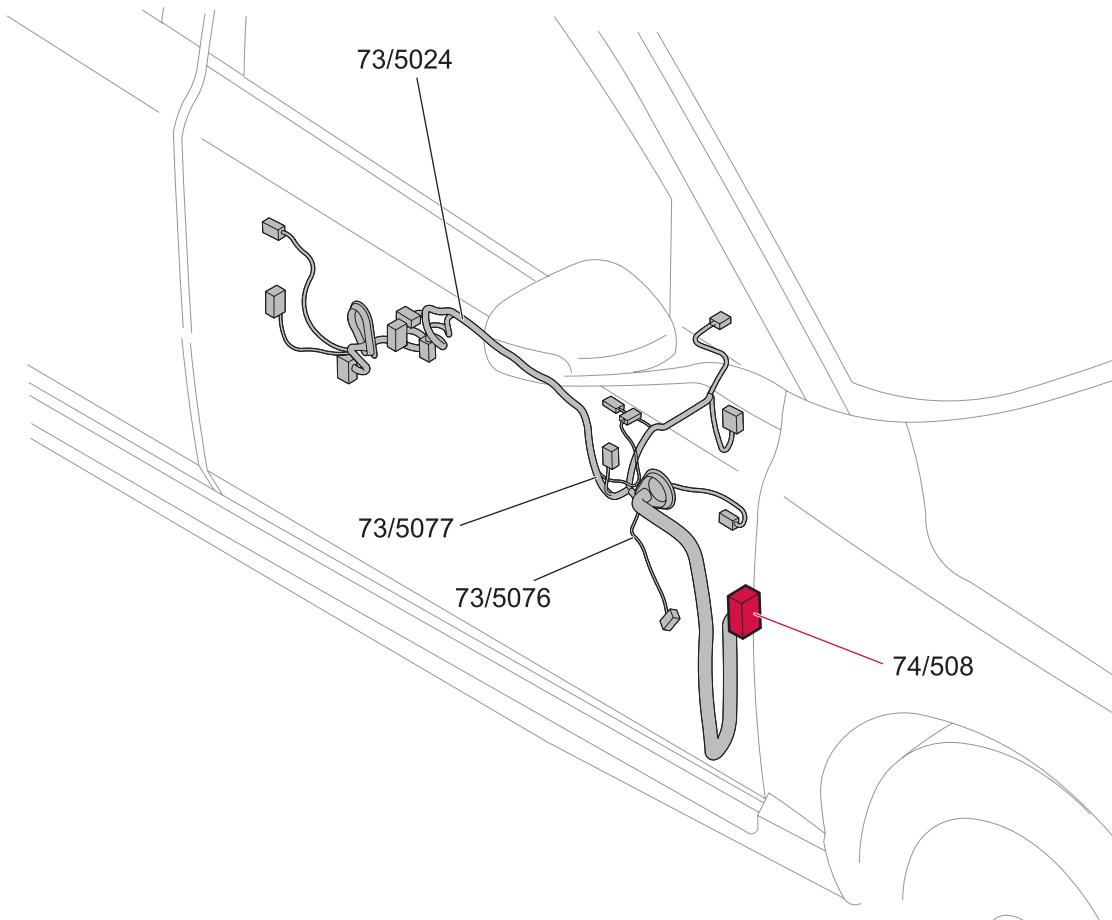


G035673

Cable harness routing in vehicle
Harness rear door, left

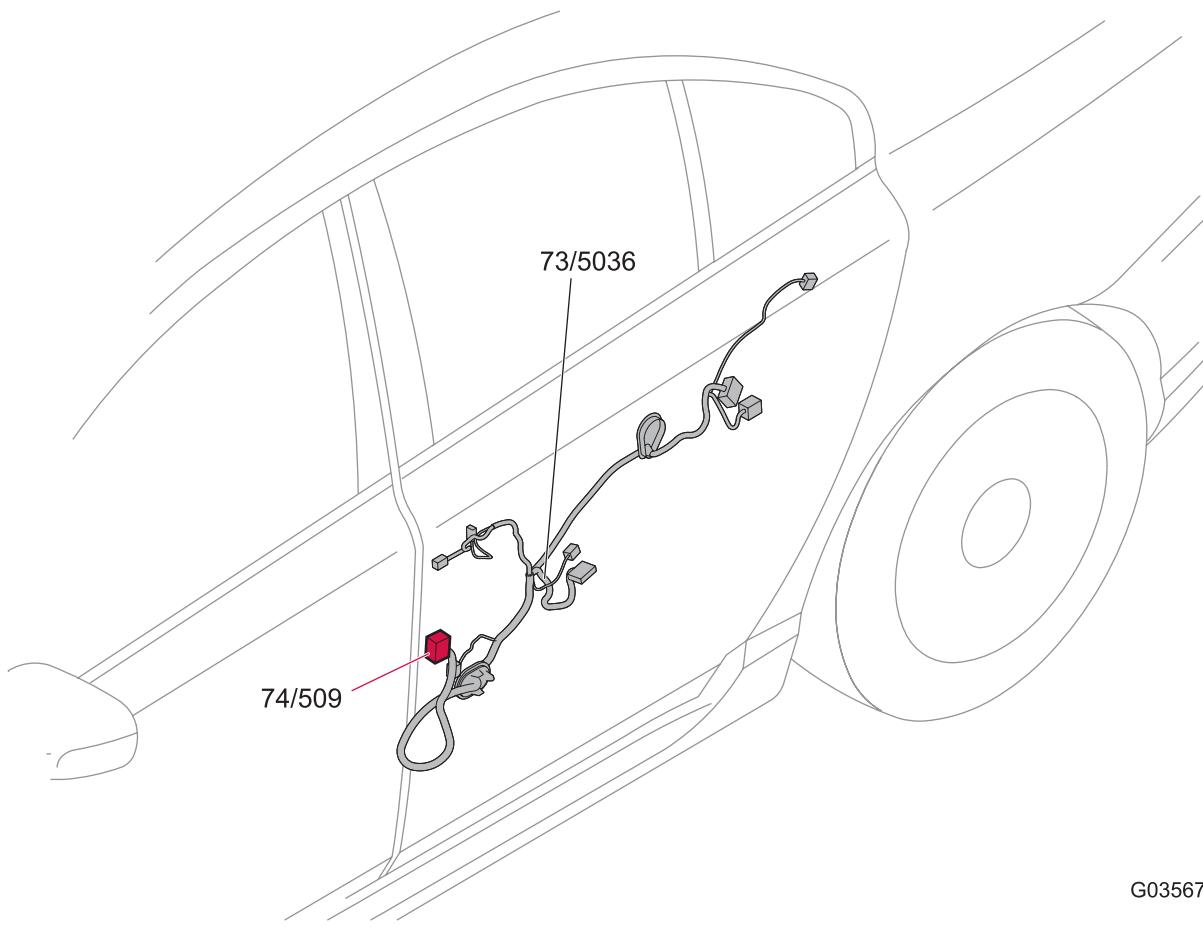


G035674

Cable harness routing in vehicle
Harness rear door, right

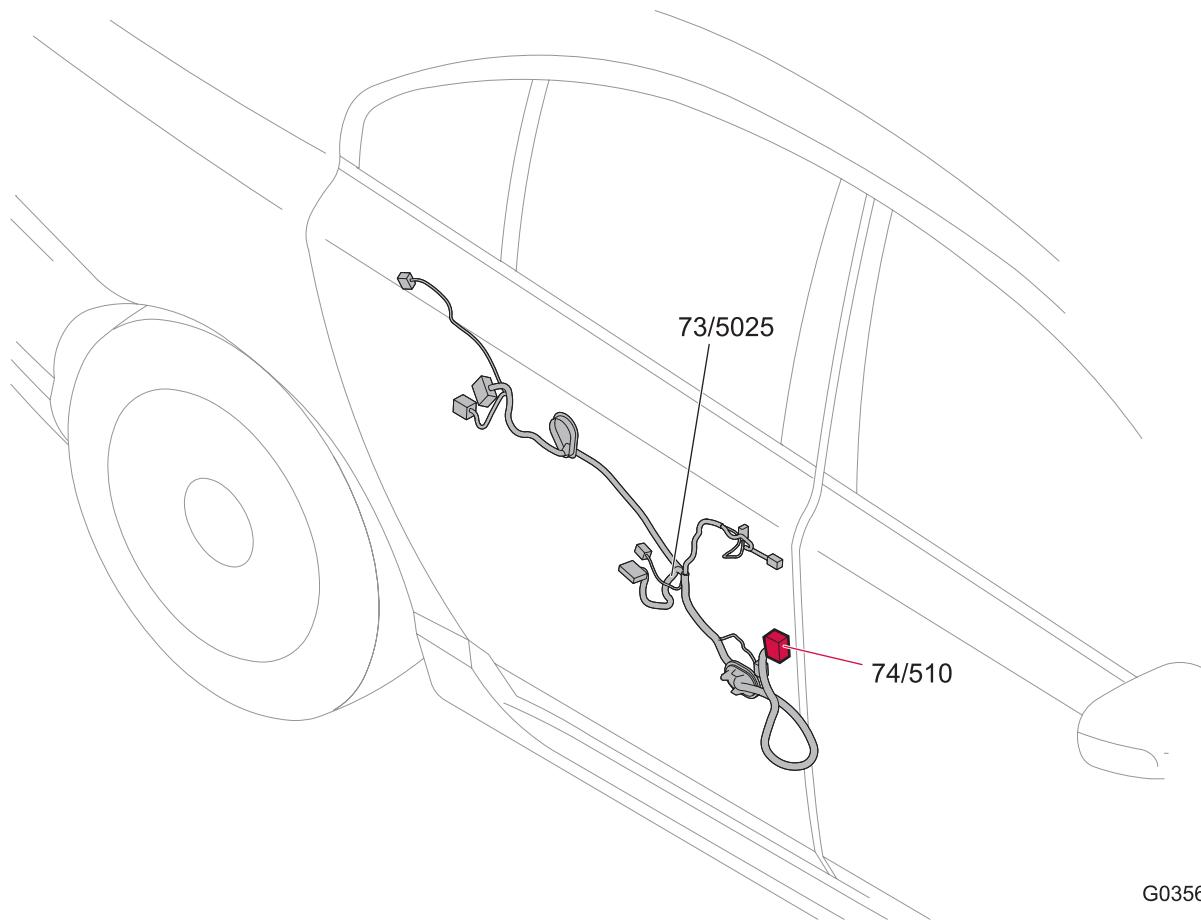


G035675

**Cable harness routing in vehicle
Trunk lid/tailgate harness, S80**

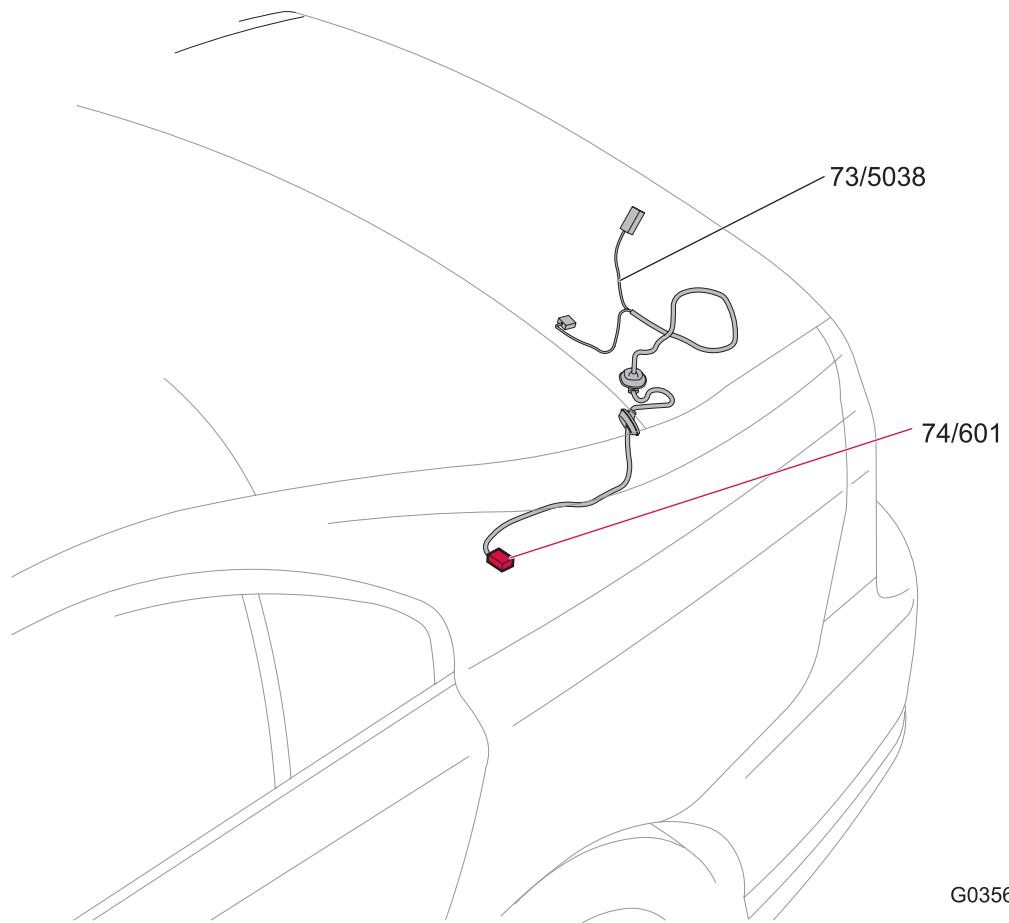


**Cable harness routing in vehicle
Trunk lid/tailgate harness, V70**

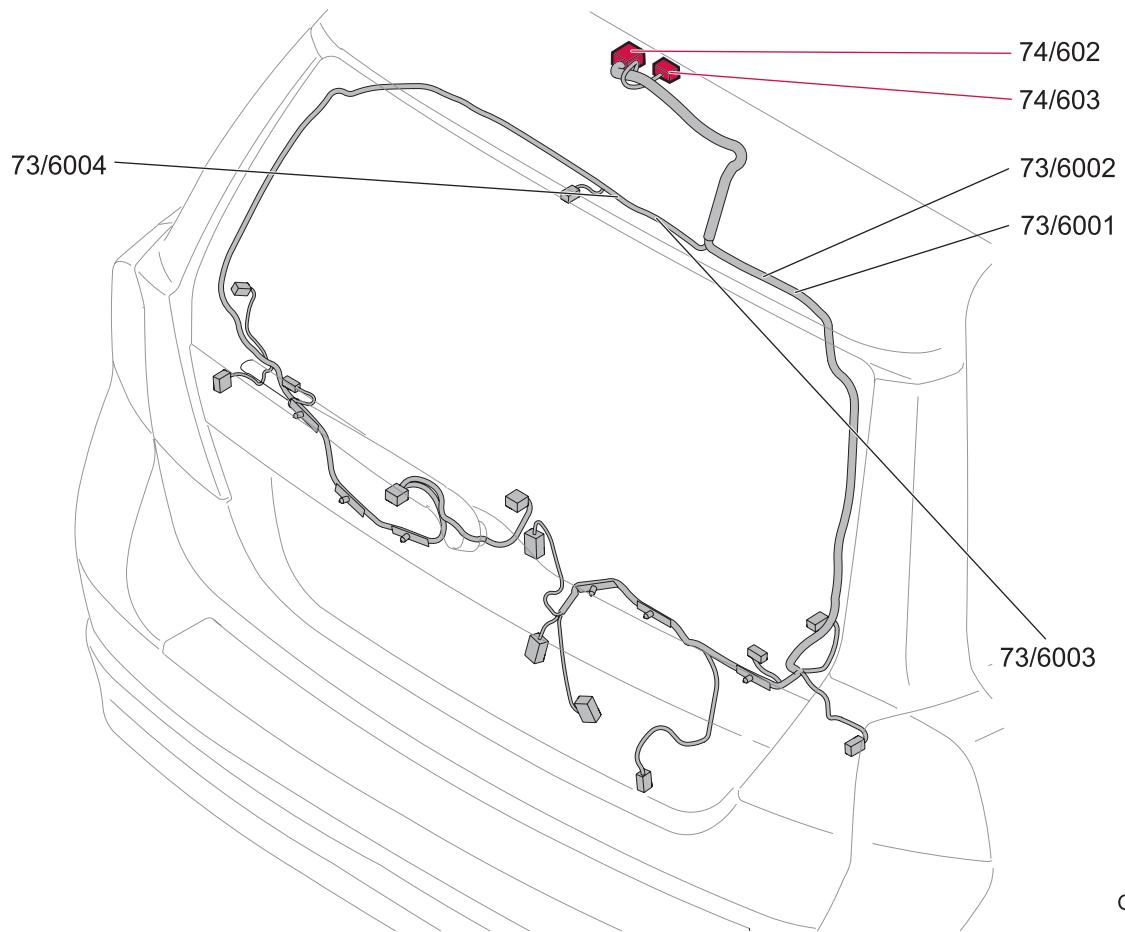

Cable harness routing in vehicle


Harnesses rear axle

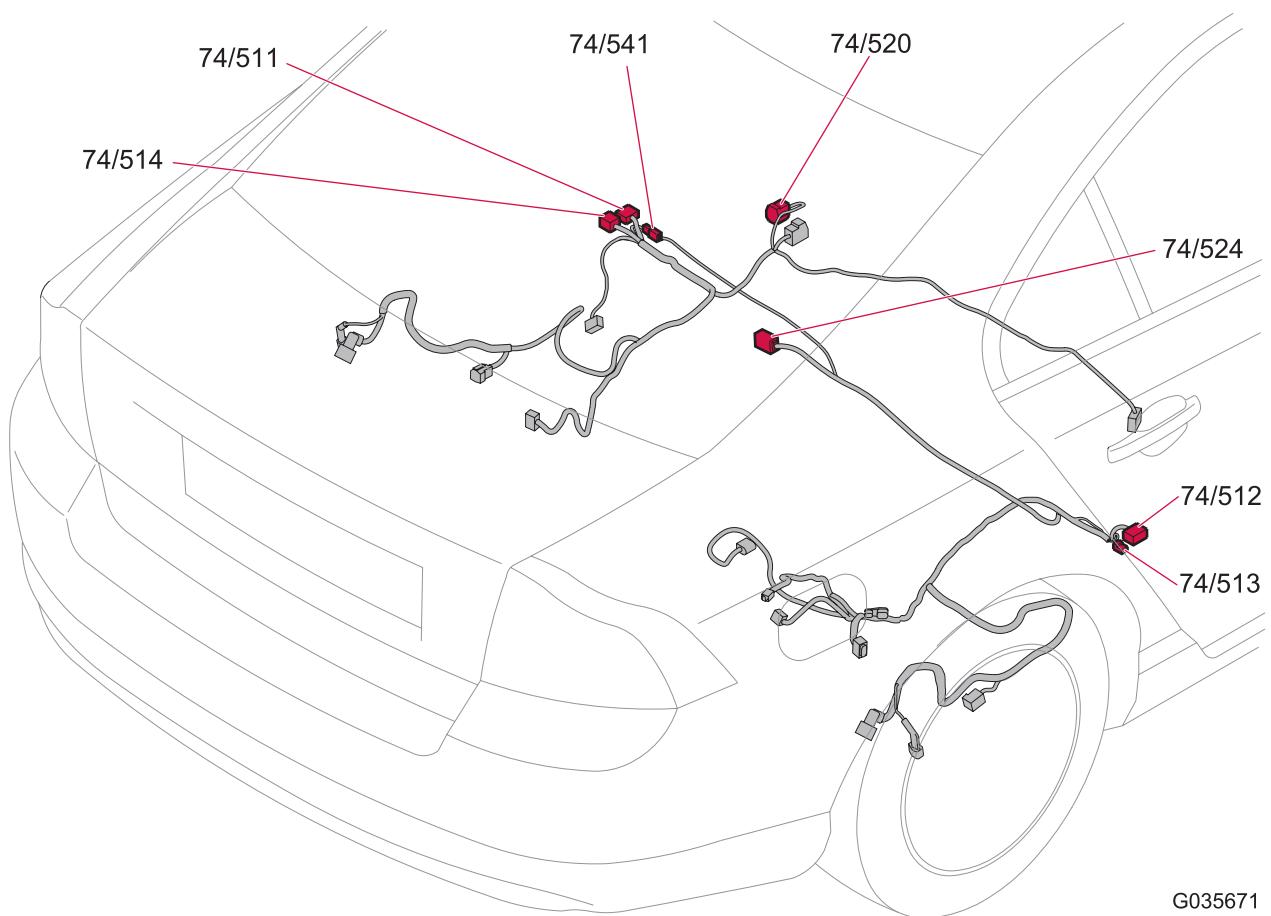

G035671

Cable harness routing in vehicle

Executive harnesses

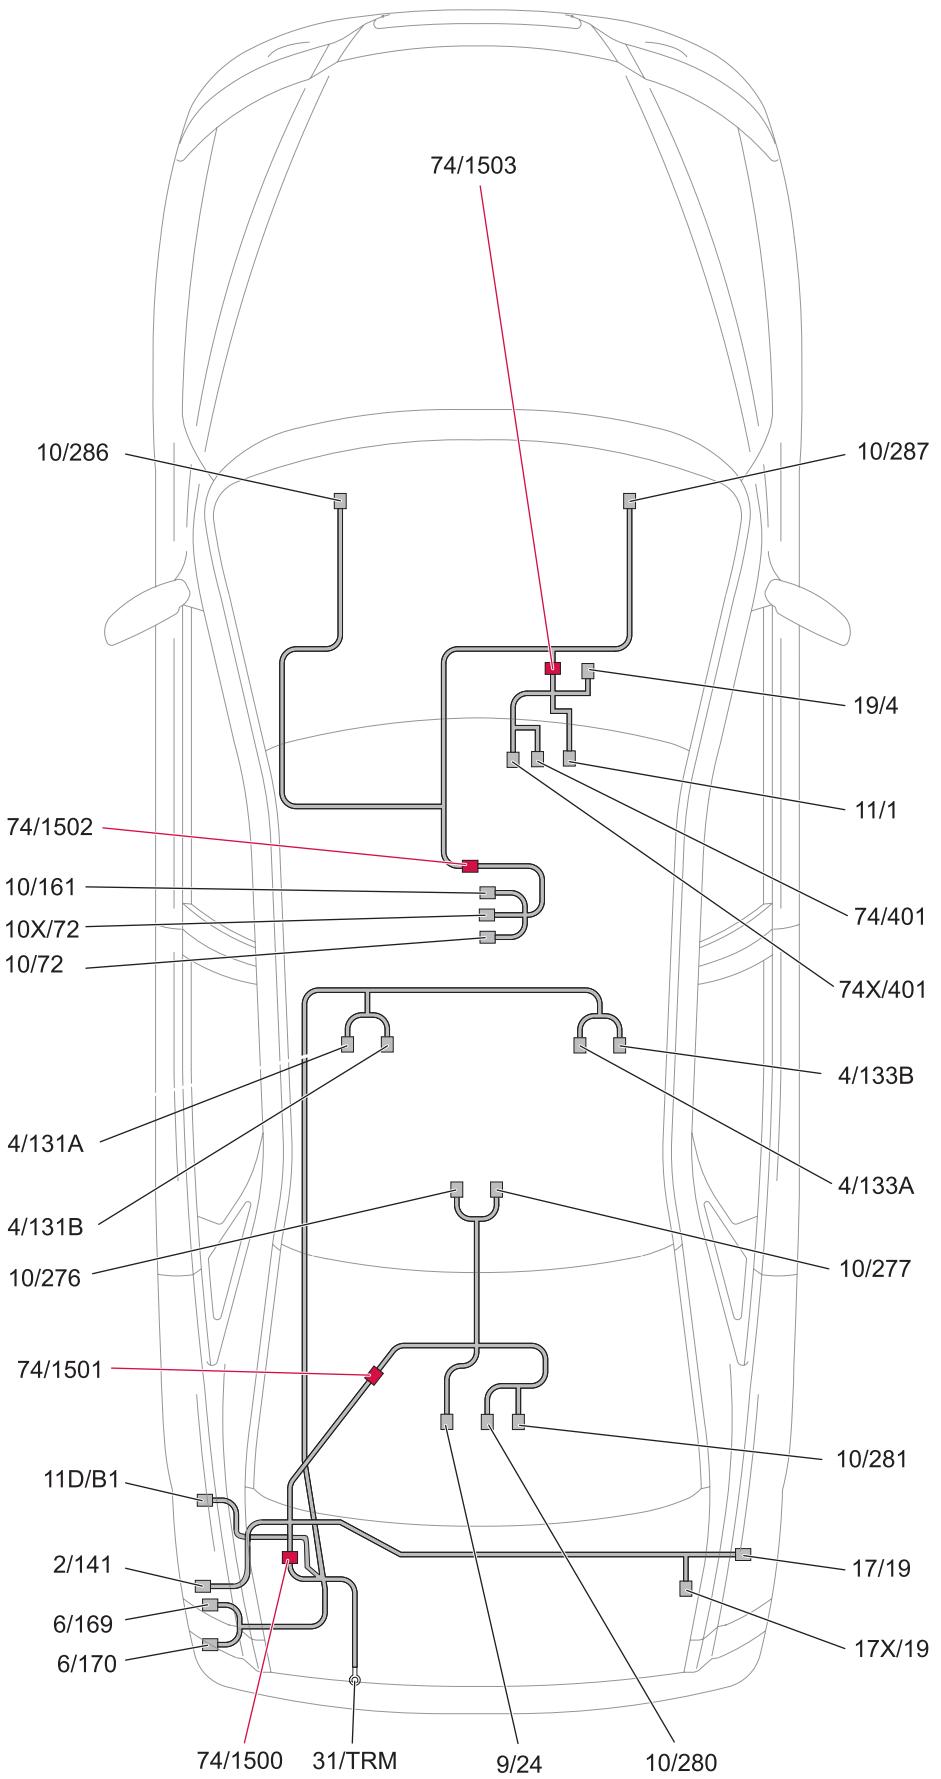


G035682


Branching points

73/3003 - 73/3012


73/3003

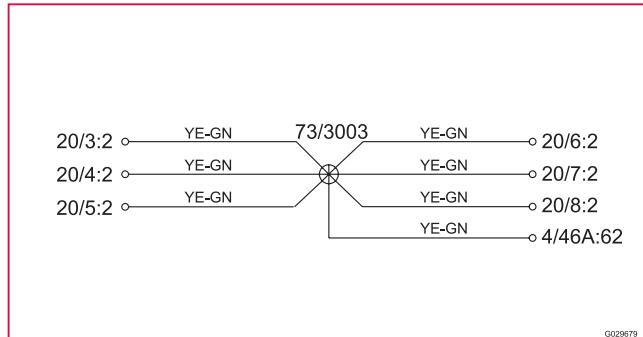


73/3010

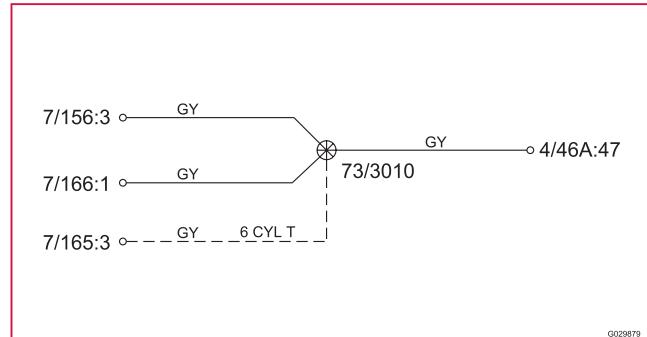


73/3004

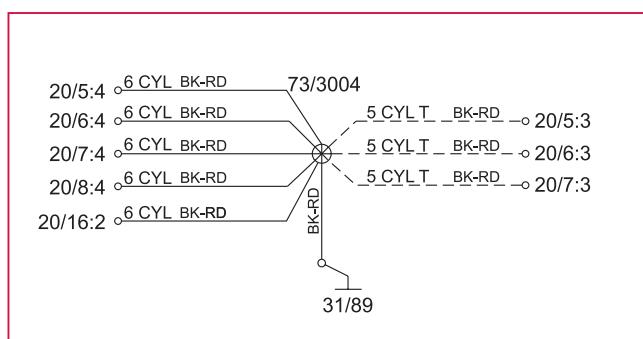


73/3012

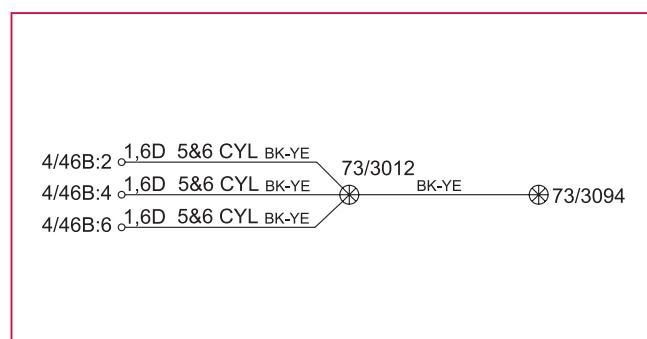


73/3004 6-Cyl. Turbo

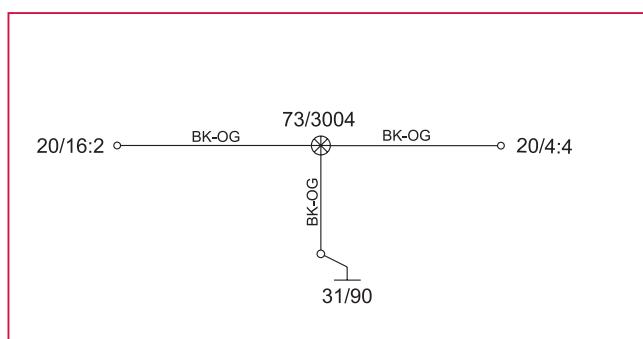


73/3012 4-Cyl.

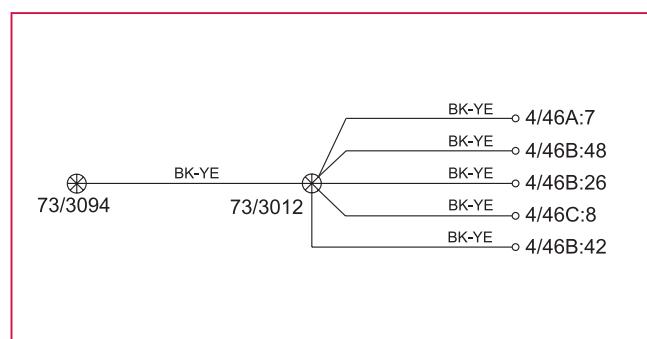


73/3006

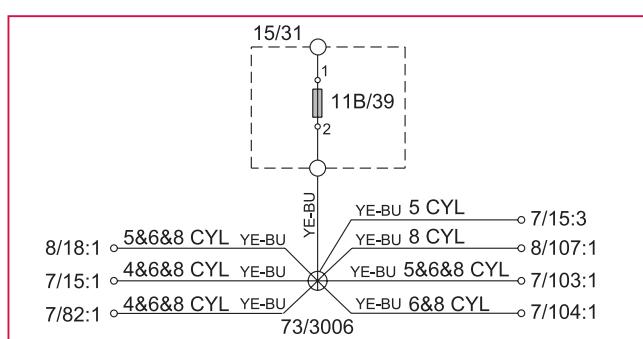


73/3012 4-Cyl. Diesel

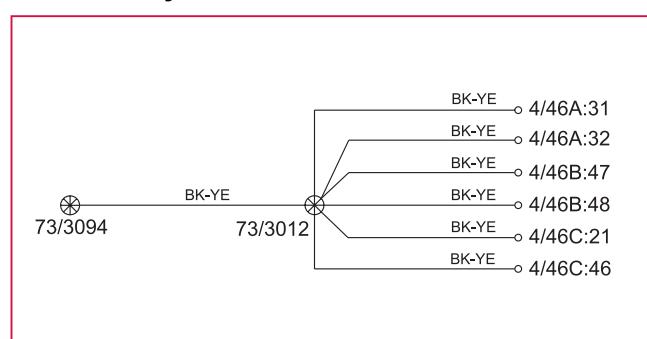

73/3009

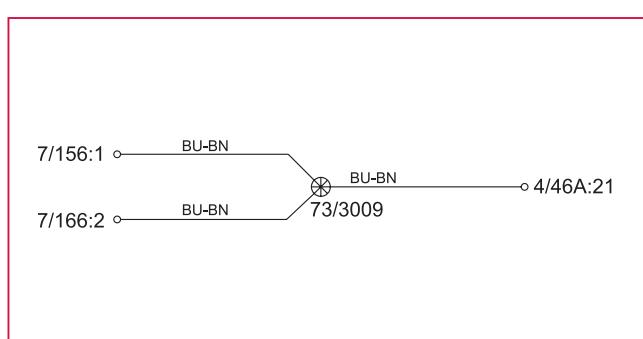


73/3012 8-Cyl.

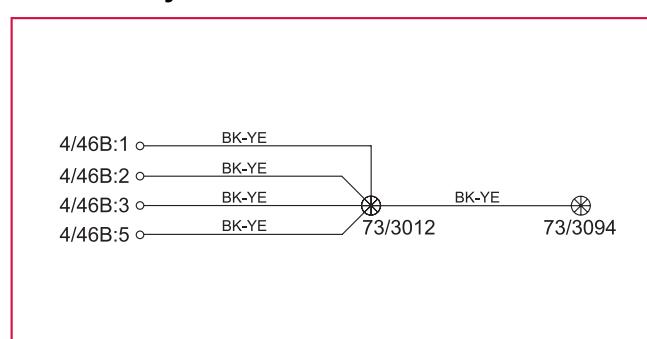


Branching points

73/3014 - 73/3035


73/3014

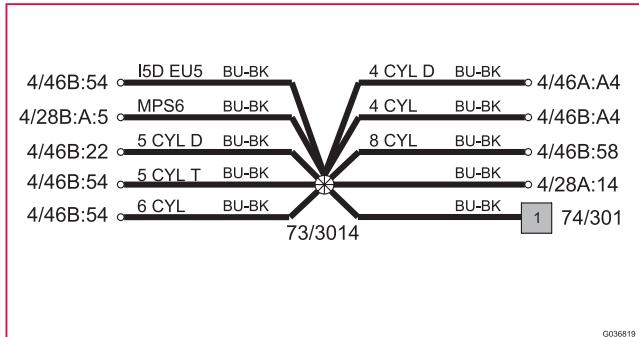


73/3022

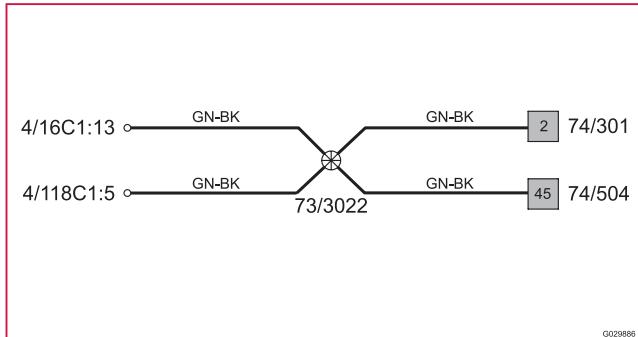


73/3015

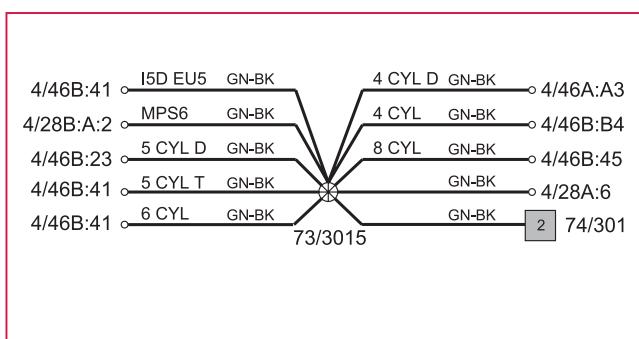


73/3030

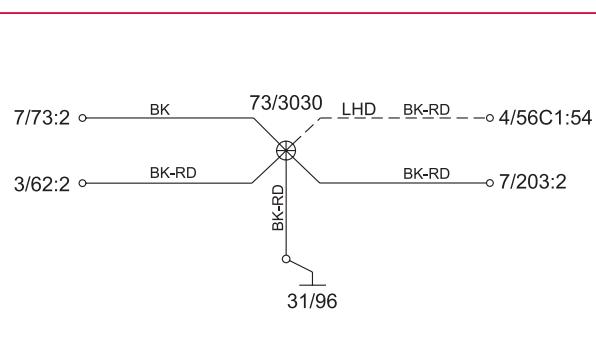


73/3019

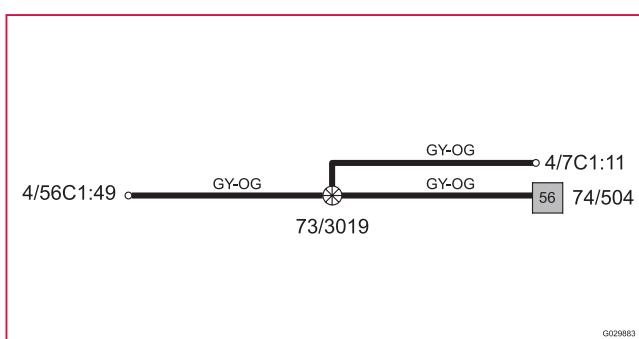


73/3033

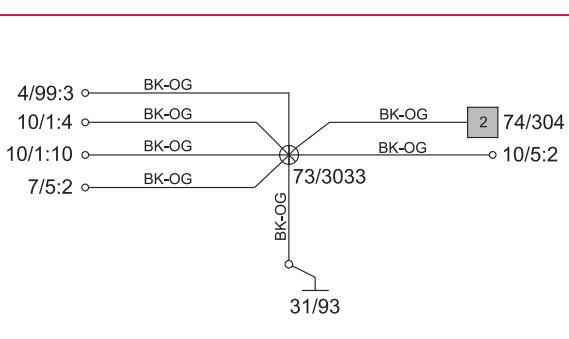


73/3020

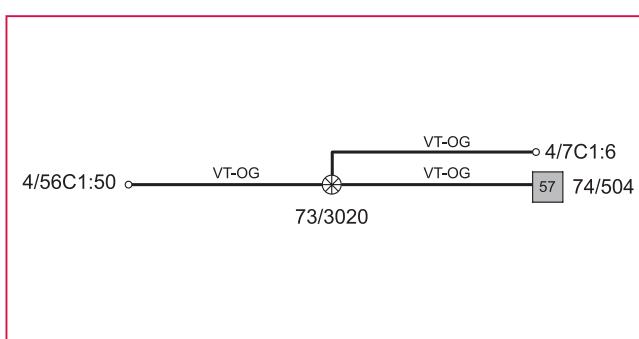


73/3034

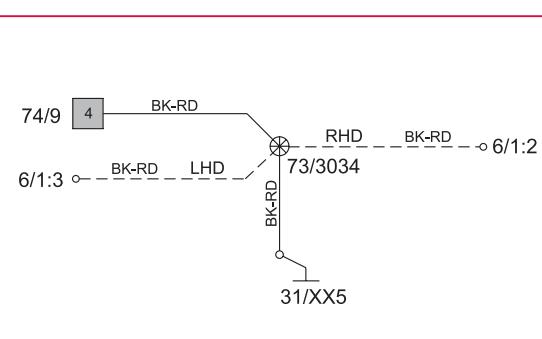

73/3021

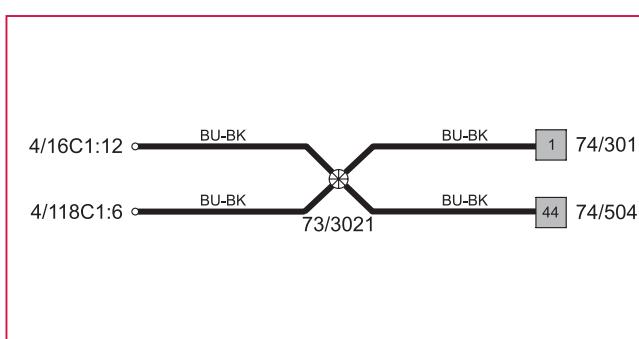


73/3035

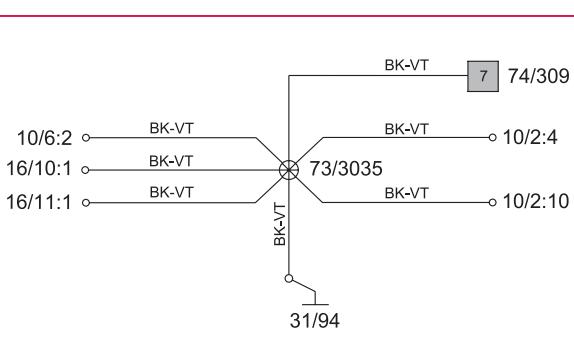


Branching points

73/3036 - 73/3040


73/3036

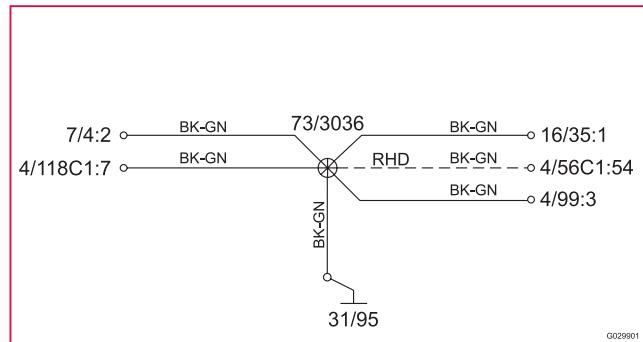


73/3039 5-Cyl. Diesel

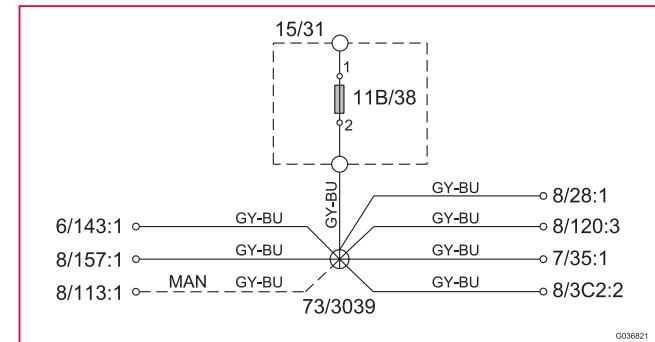


73/3037

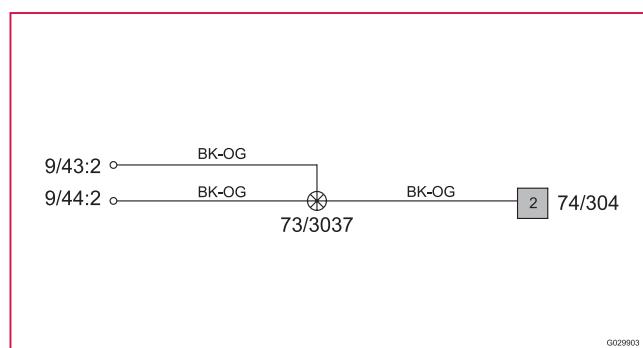


73/3039 5-Cyl. T

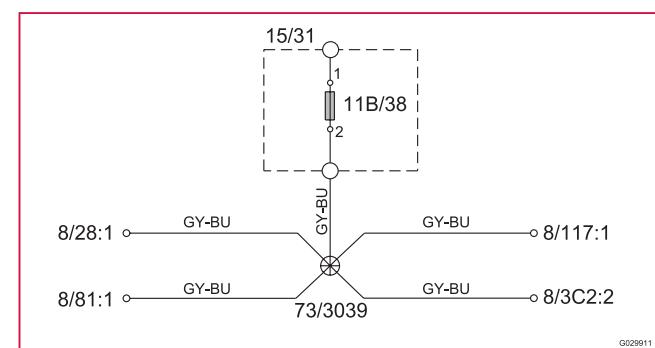


73/3039 4-Cyl.

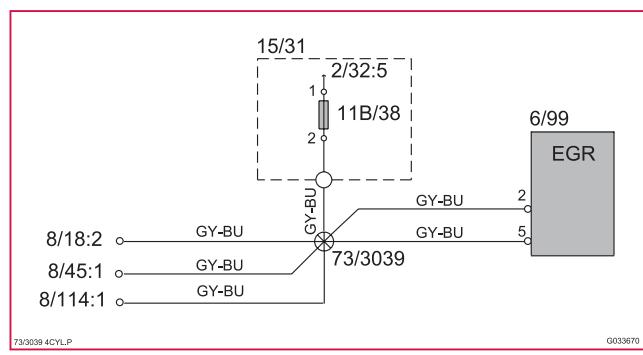


73/3039 6-Cyl.

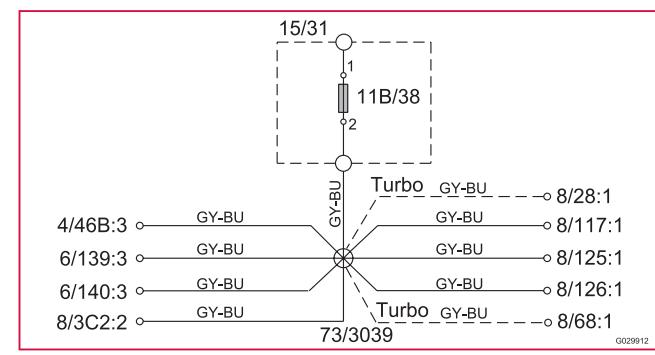


73/3039 1.6L Diesel

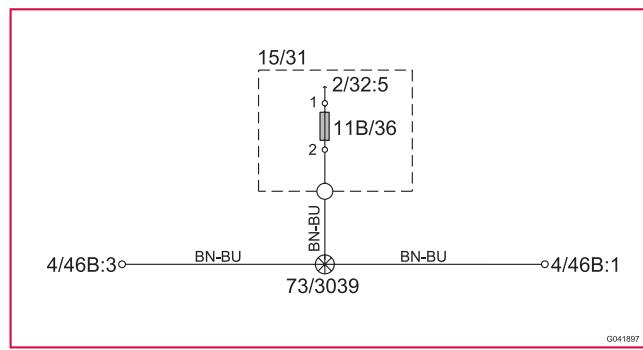


73/3039 8-Cyl.

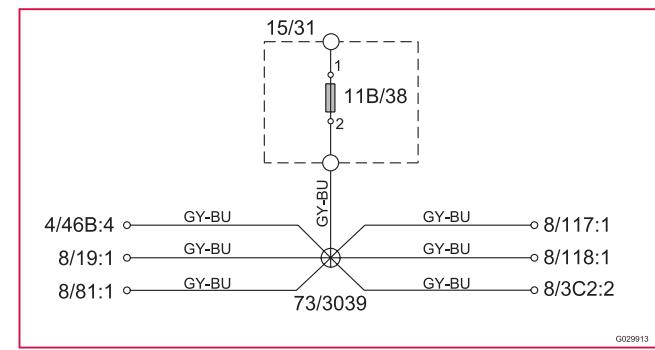

73/3039 2.0L Diesel

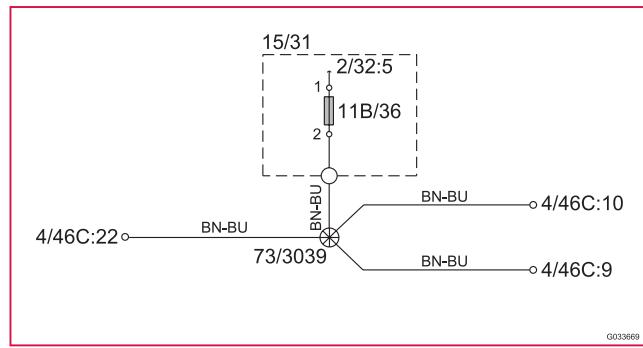


73/3040

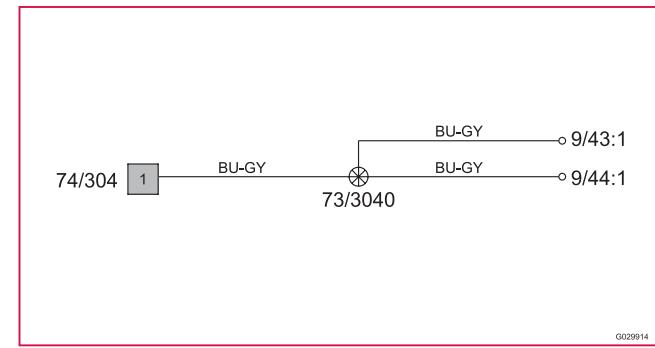


Branching points

73/3041 - 73/3053 4-Cyl.


73/3041

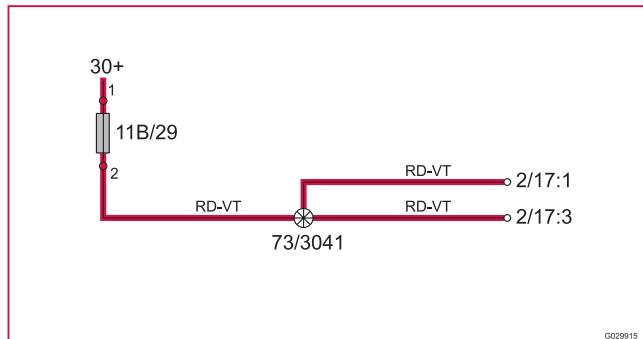


73/3050 2.0 Diesel

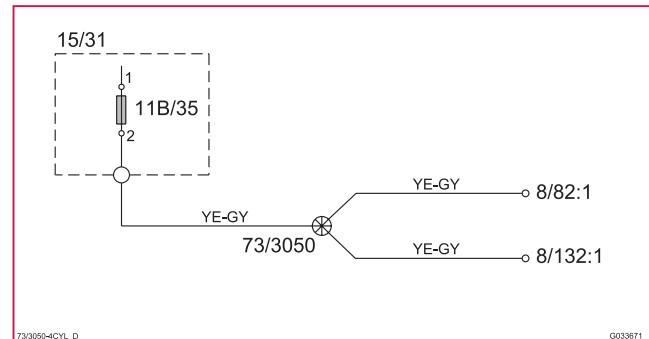


73/3042

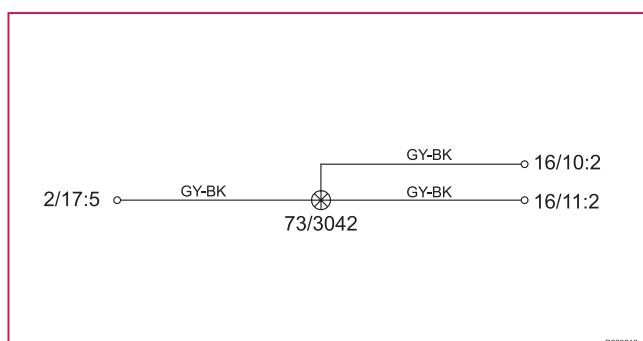


73/3050 5-Cyl. Euro5

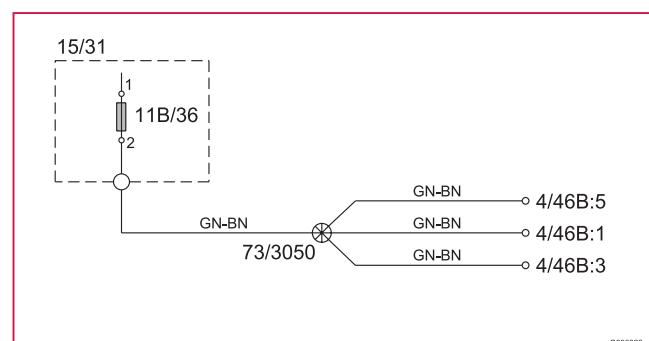


73/3046

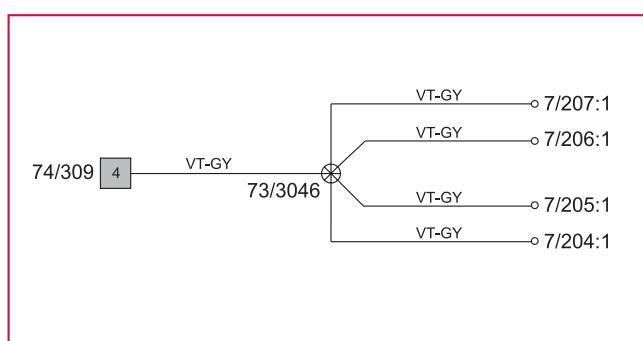


73/3051

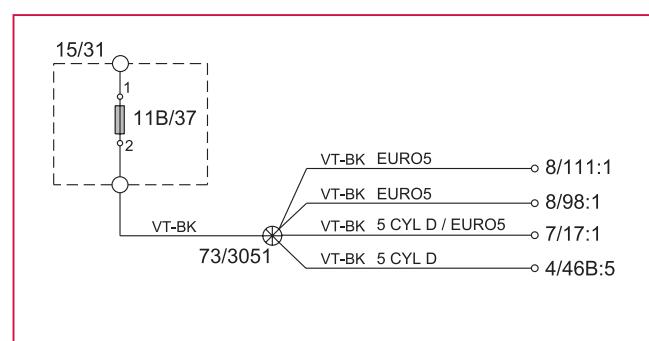


73/3047

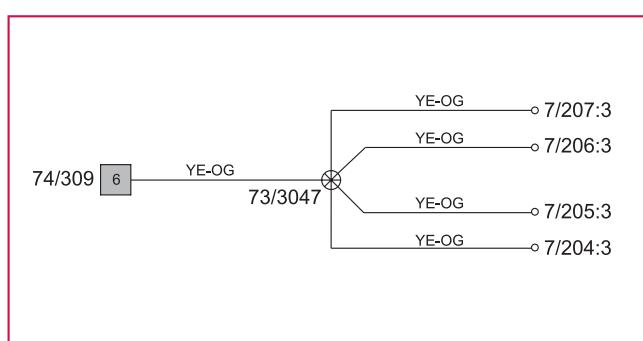


73/3052

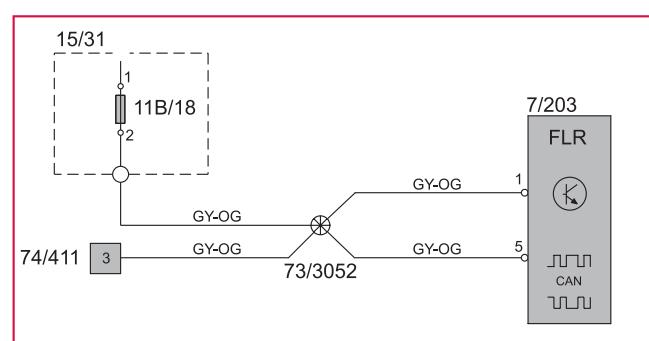

73/3050 1.6 Diesel

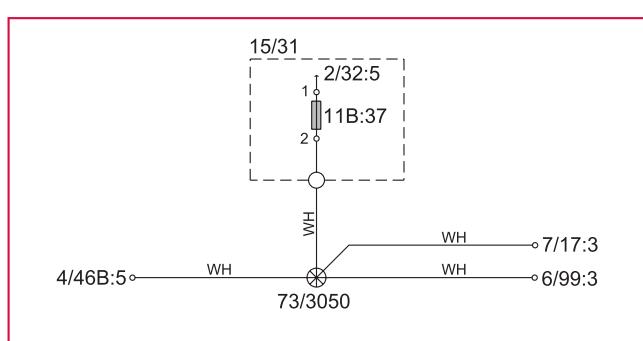


73/3053 4-Cyl.

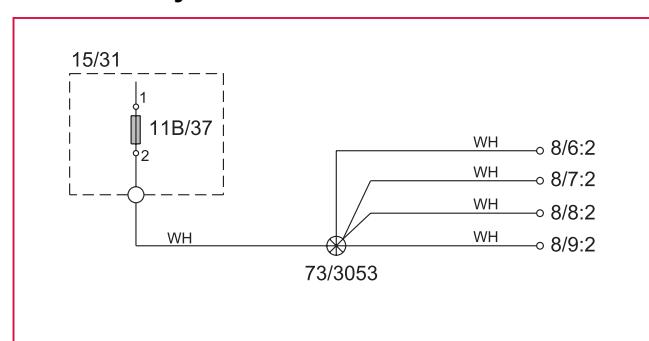


Branching points

73/3053 - 73/3068


73/3053

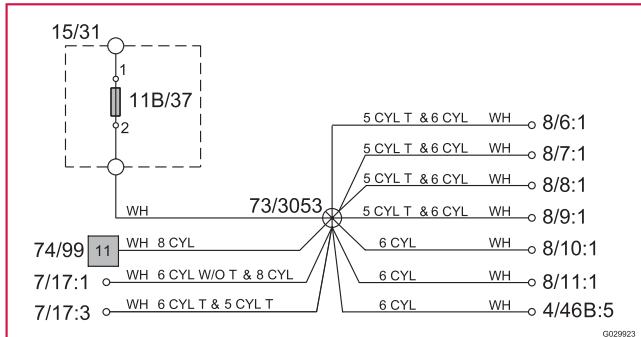


73/3059

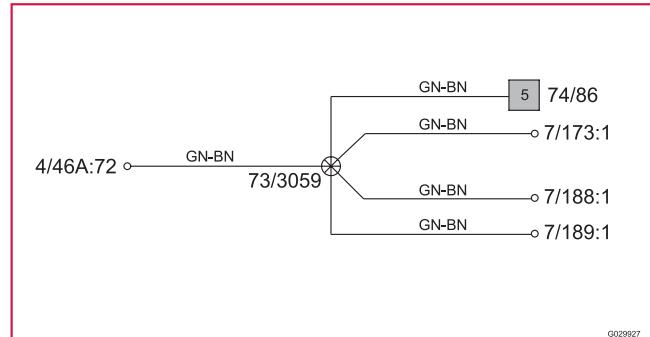


73/3056

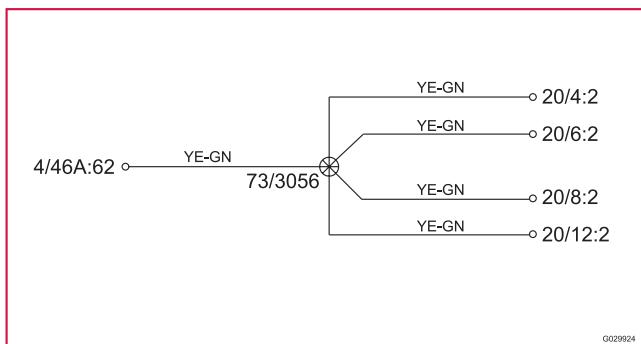


73/3060

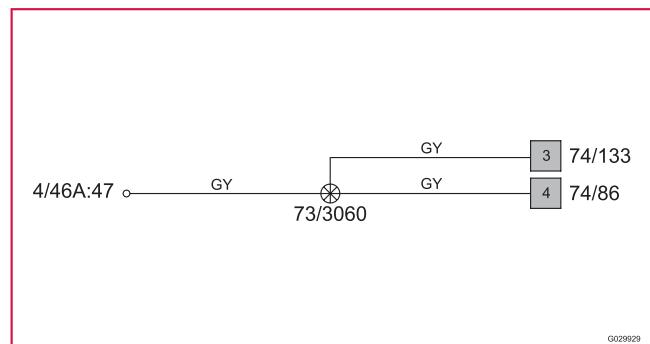


73/3057

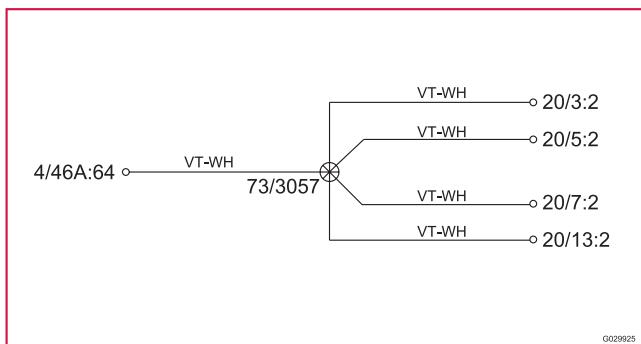


73/3061

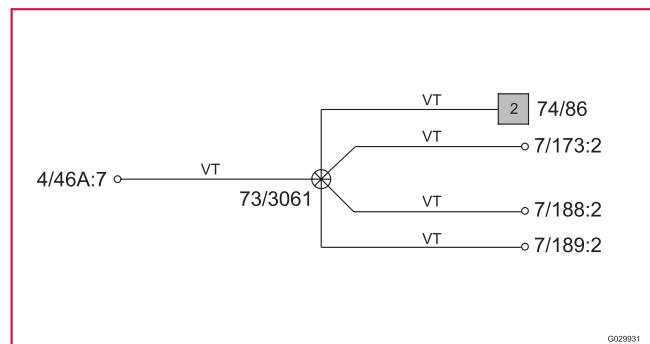


73/3058 4-Cyl.

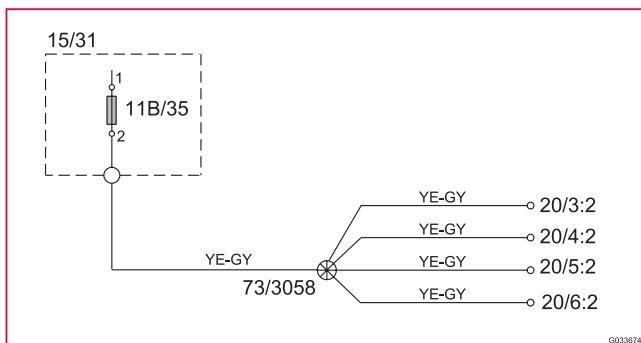


73/3064

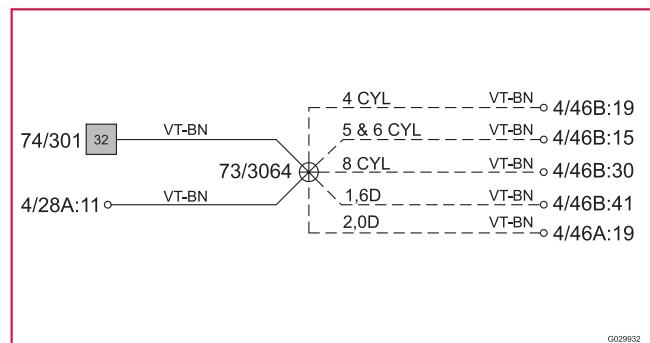

73/3058

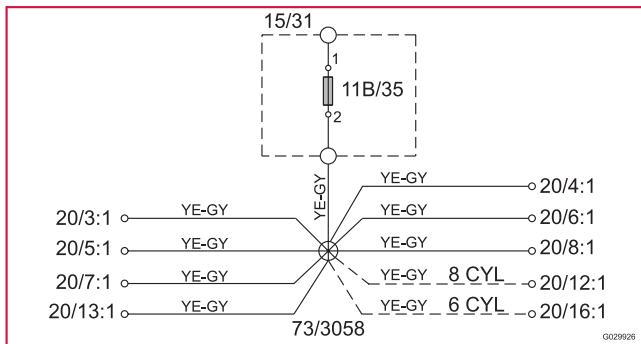


73/3068

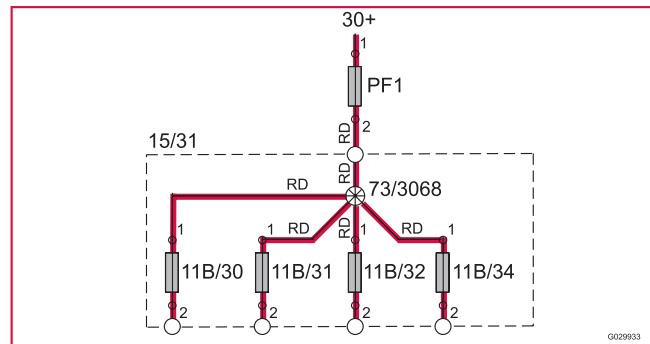


Branching points

73/3070 - 73/3081


73/3070

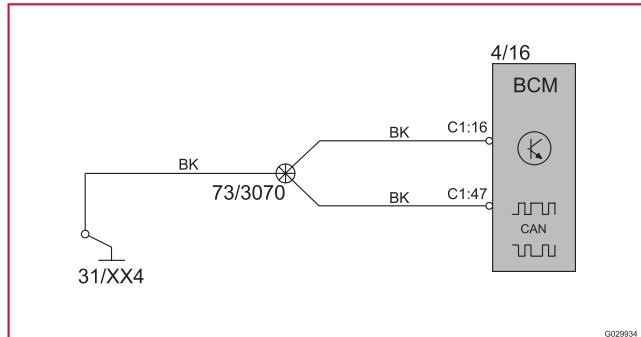


73/3077

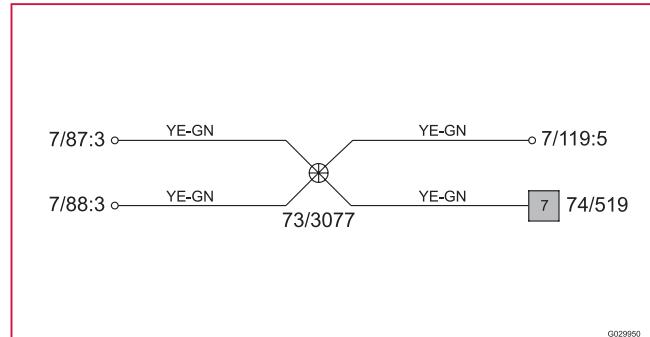


73/3072

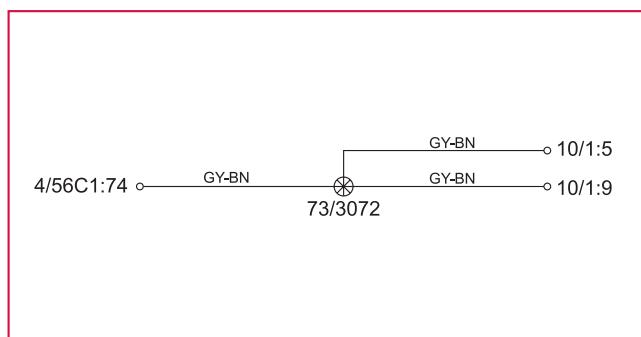


73/3078

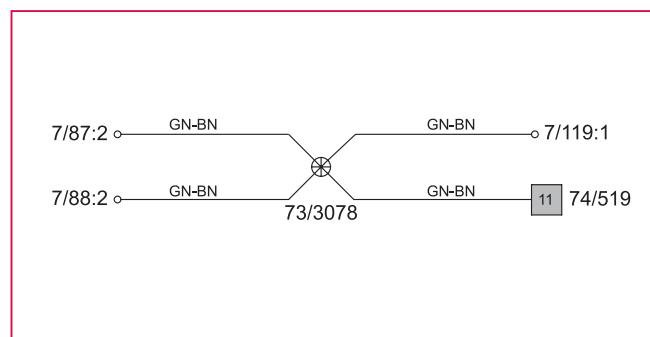


73/3073

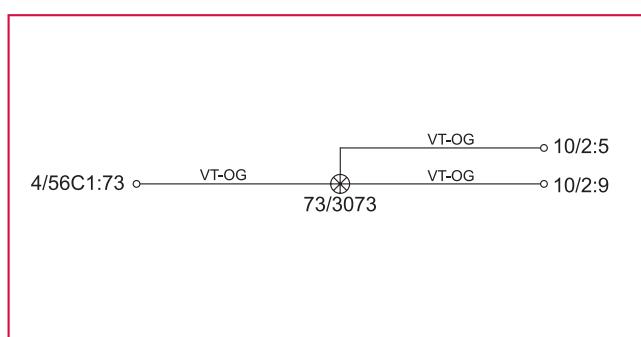


73/3079 4-Cyl.

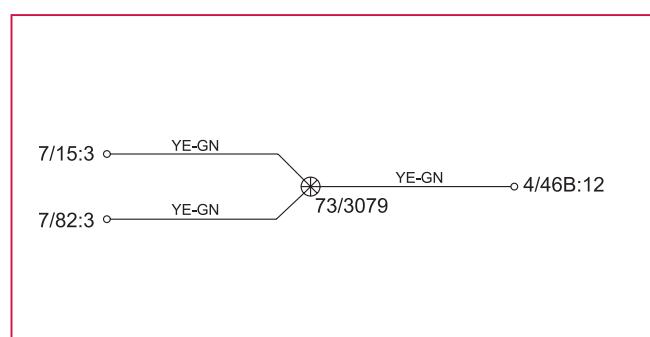


73/3074

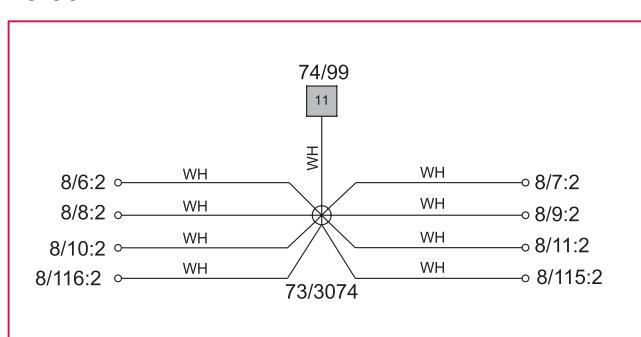


73/3080 4-Cyl. Diesel

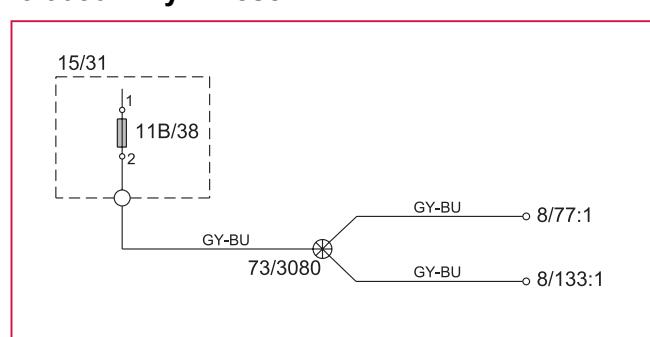

73/3076

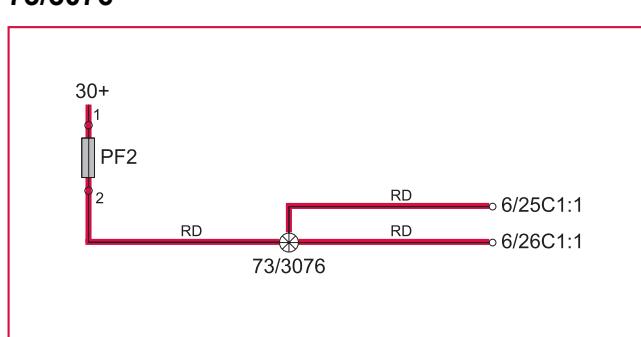


73/3081 4-Cyl. Diesel

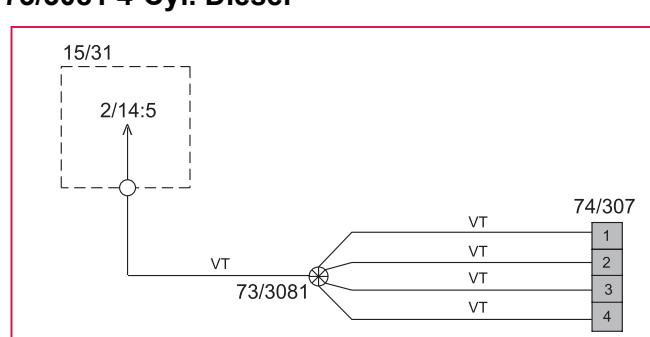


Branching points

73/3083 - 73/3100


73/3083 4-Cyl.

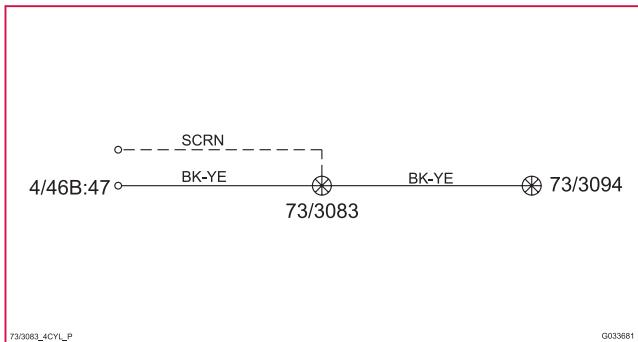


73/3089

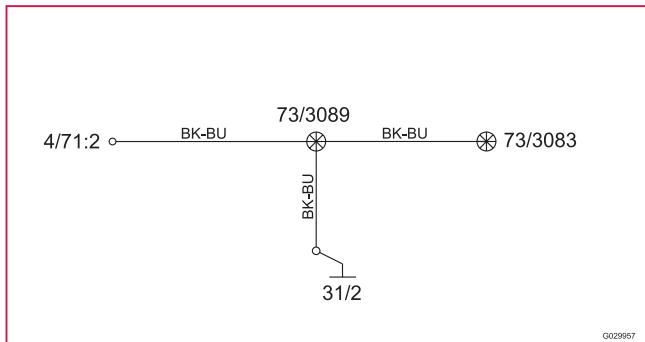


73/3083 5-Cyl.

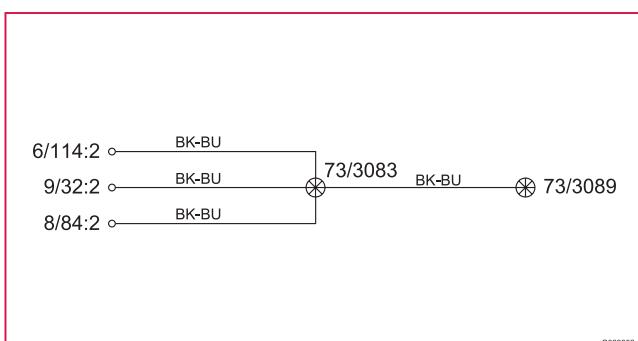


73/3091

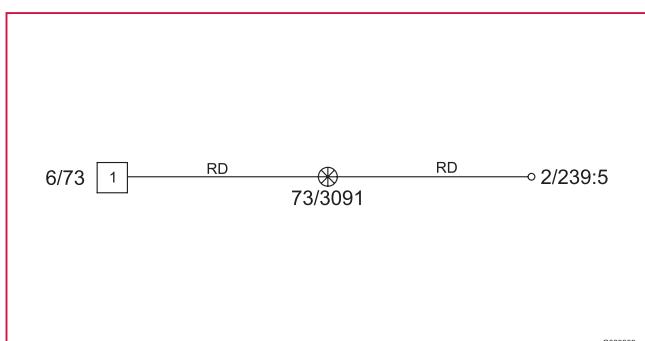


73/3084 4-Cyl. Diesel

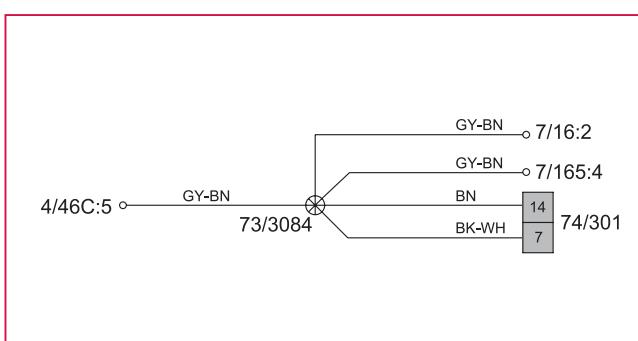


73/3094

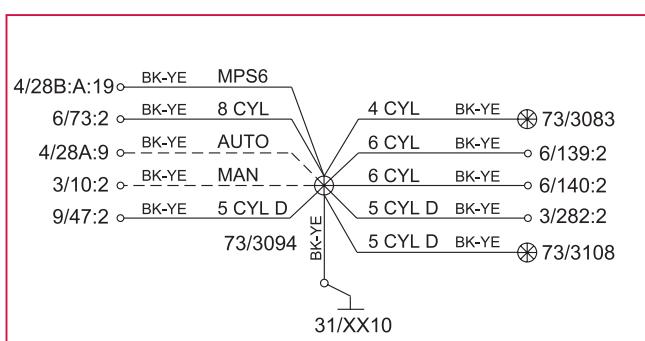


73/3085

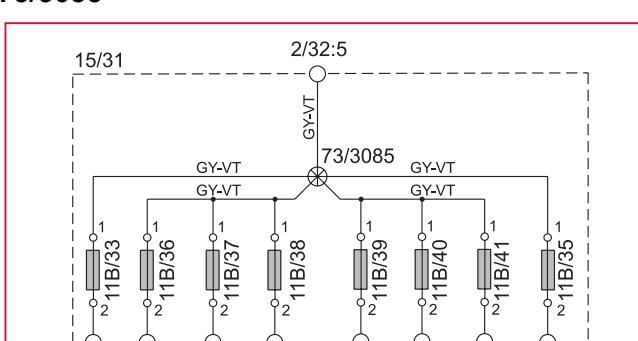


73/3095

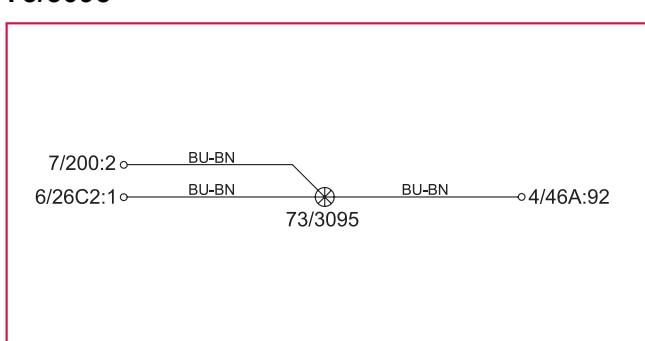

73/3087

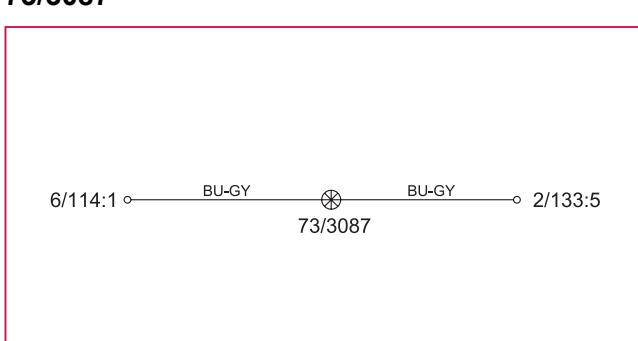


73/3100

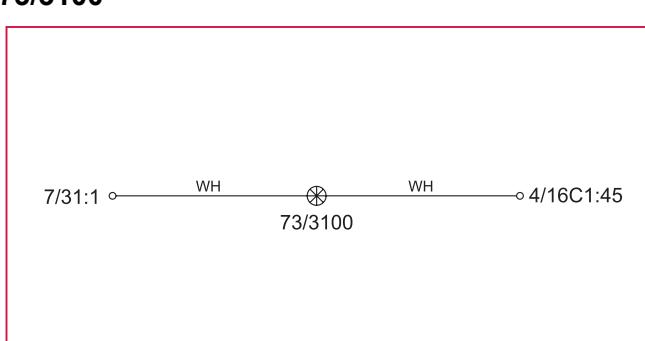


Branching points 73/3101 - 73/4001


73/3101

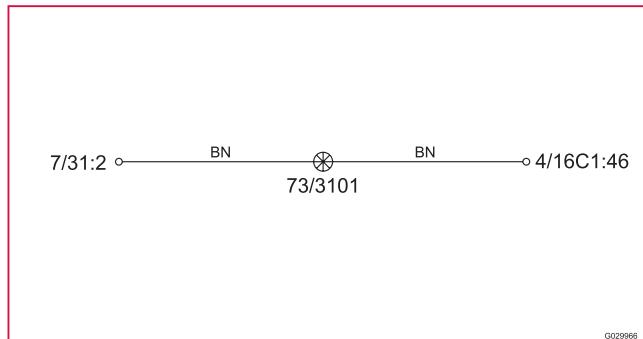


73/3133

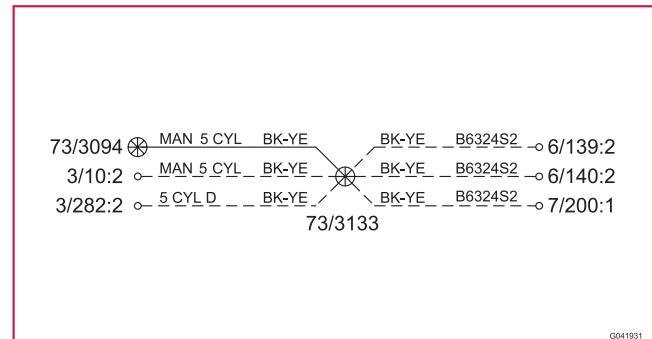


73/3102

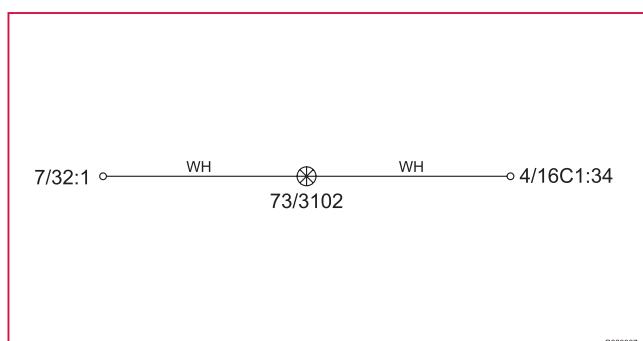


73/3139

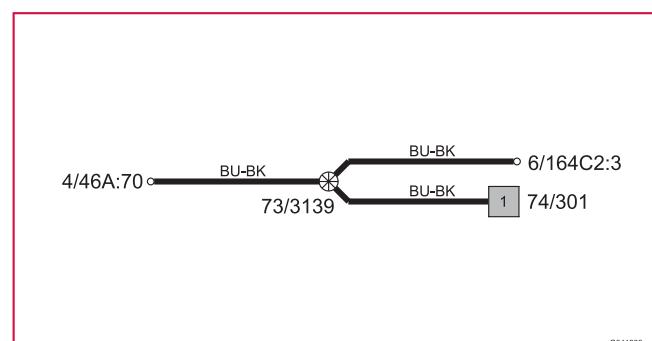


73/3103

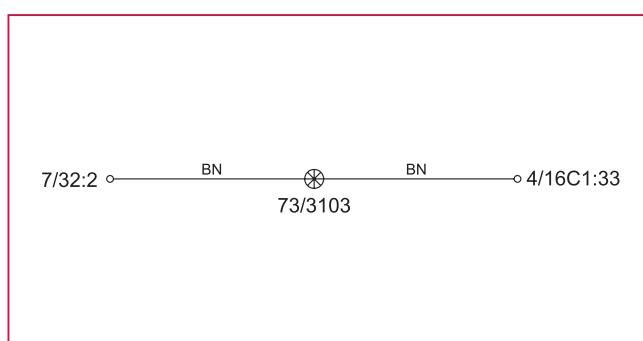


73/3140

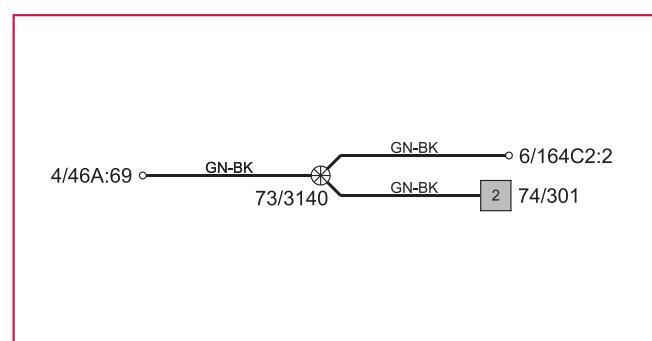


73/3108

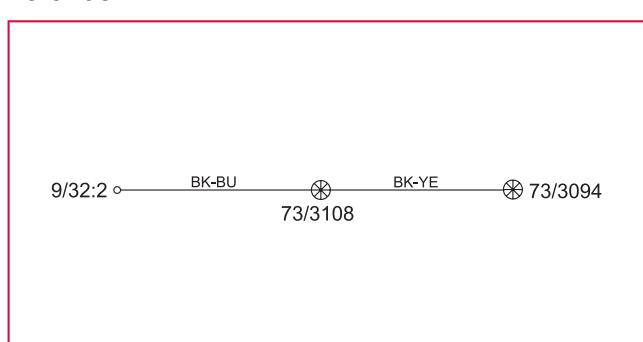


73/3149

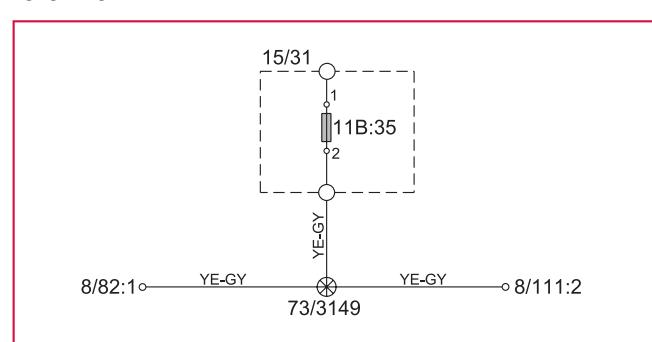

73/3131

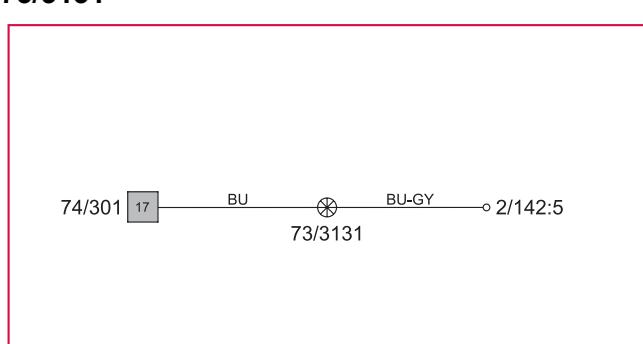


73/4001

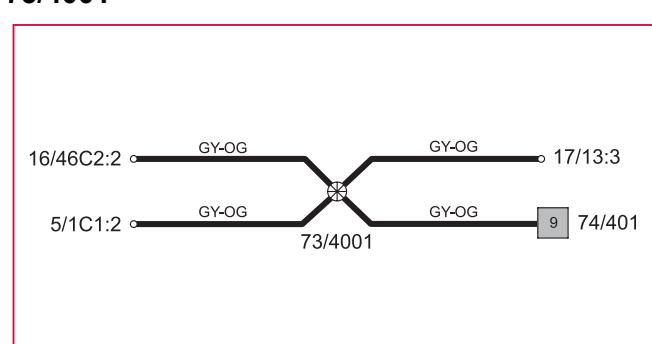


Branching points

73/4002 - 73/4016 RHD


73/4002

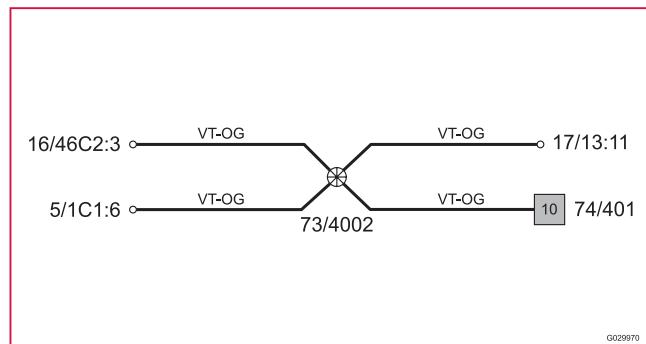


73/4010

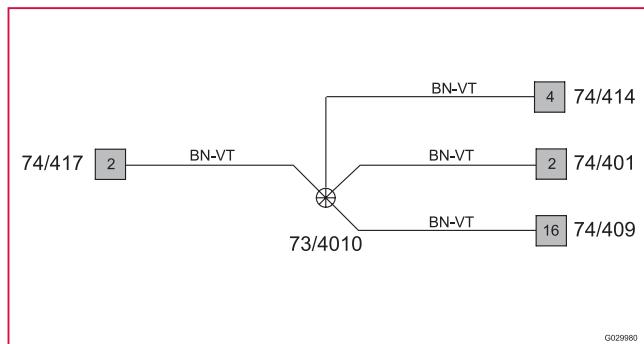


73/4005

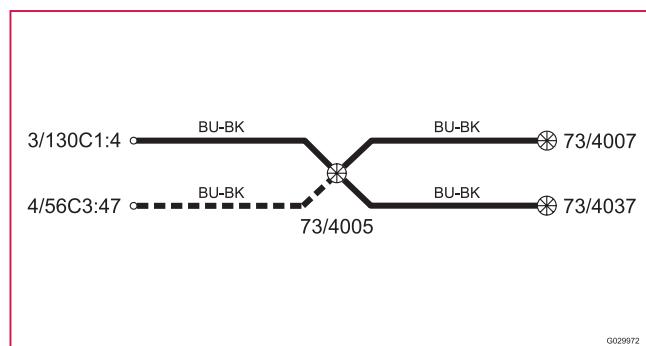


73/4012

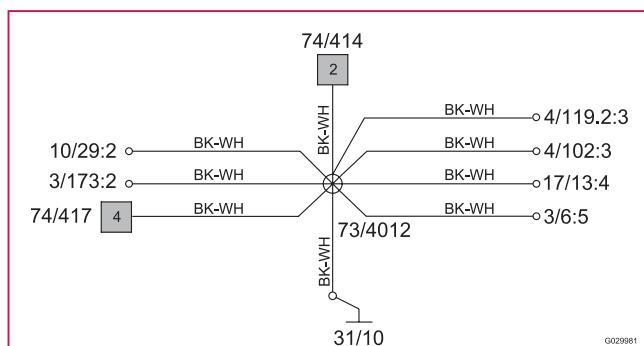


73/4006

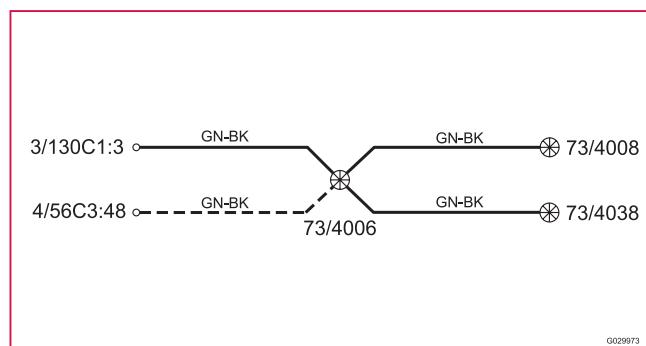


73/4014

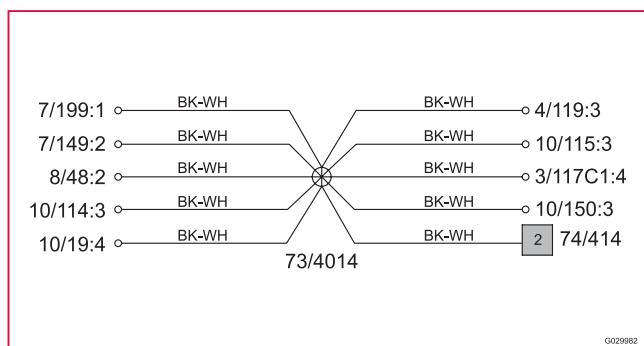


73/4007

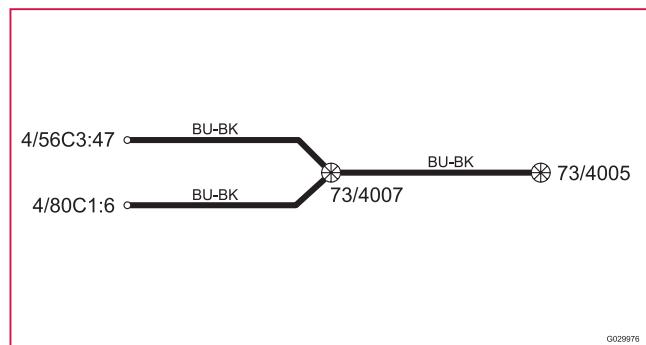


73/4016 LHD

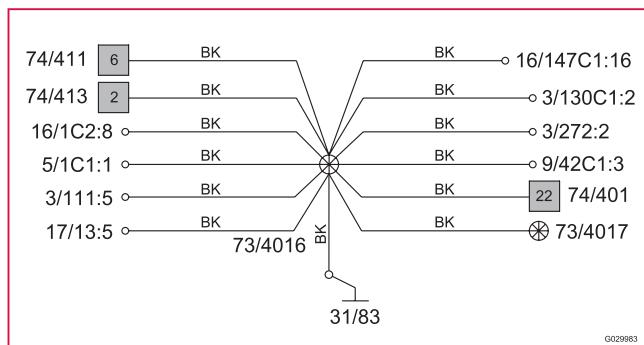

73/4008

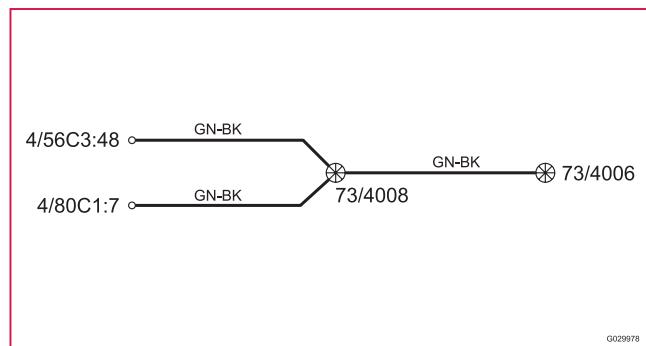


73/4016 RHD

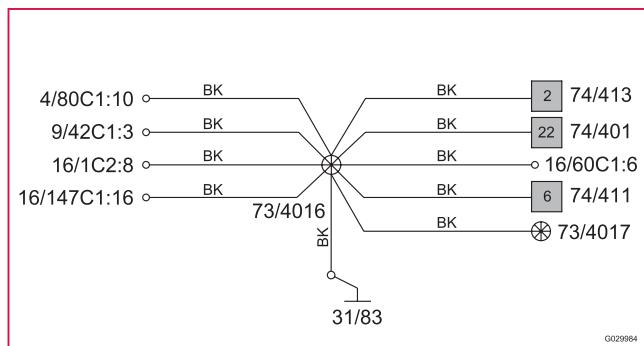


Branching points 73/4017 - 73/4035


73/4017 LHD

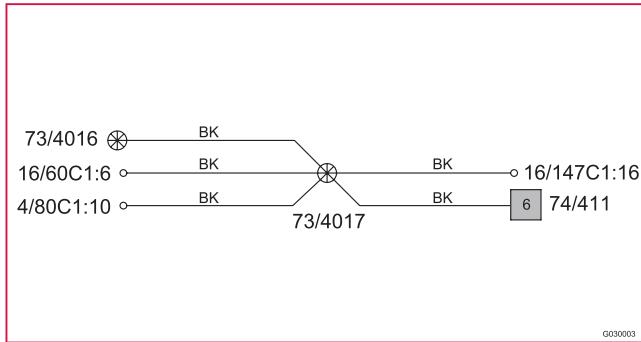


73/4017 RHD

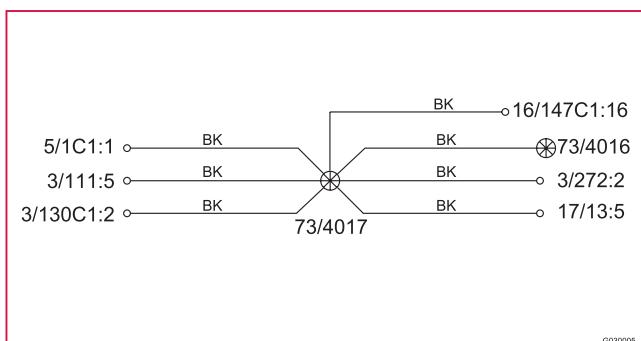


73/4018

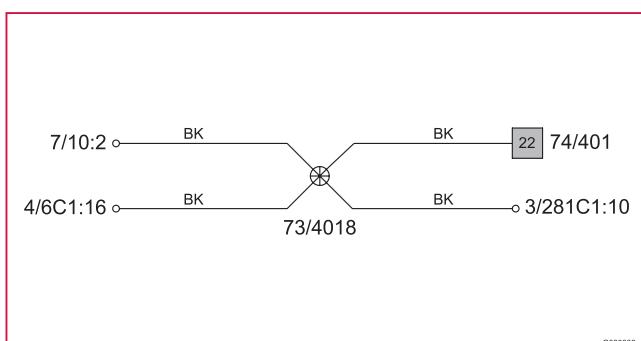


73/4019

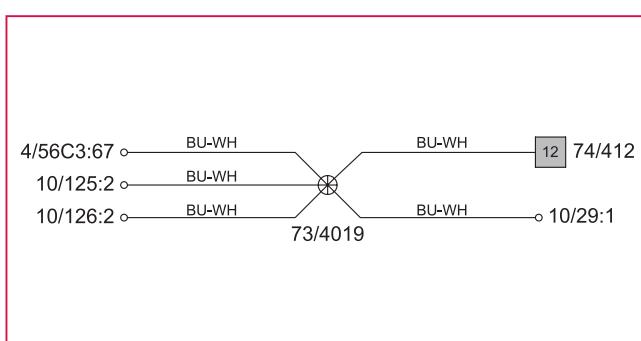


73/4020

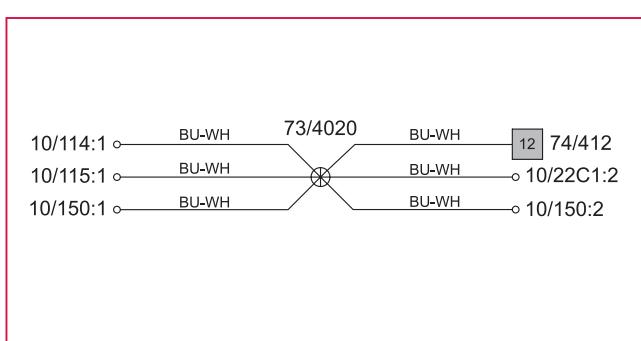


73/4027

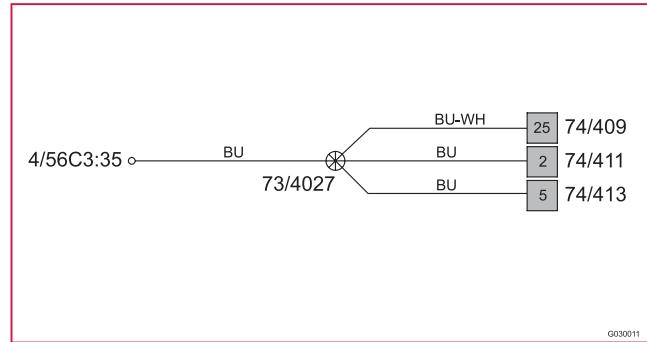


73/4028

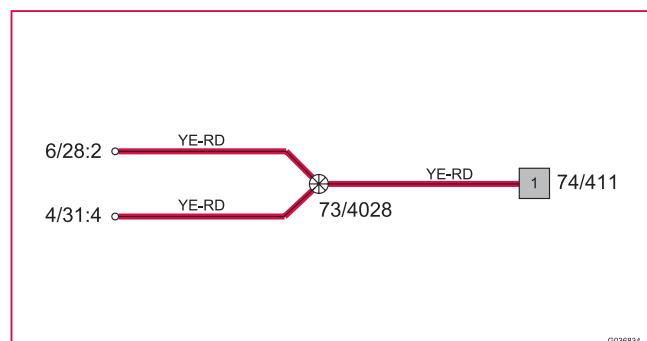


73/4031

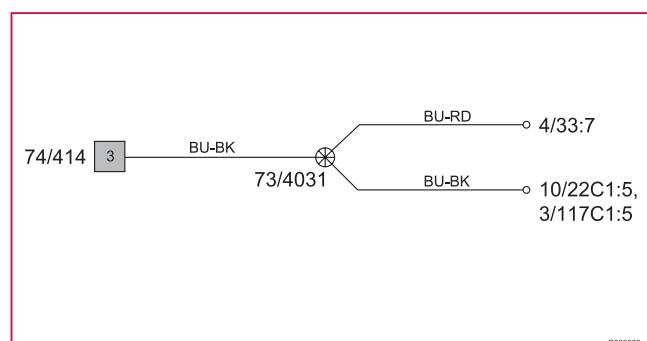

73/4034

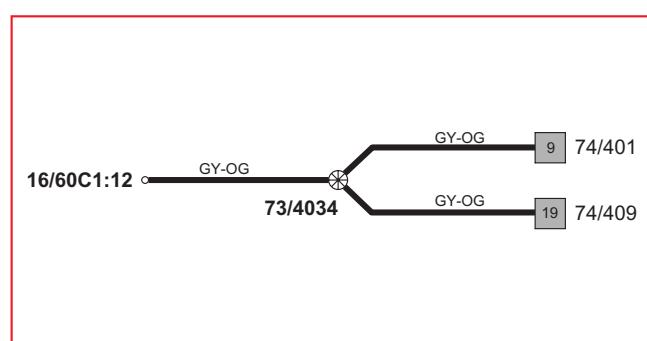


73/4035

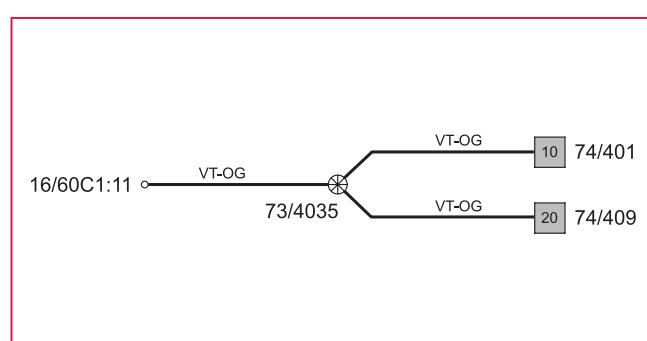


Branching points

73/4037 - 73/5004 RHD


73/4037

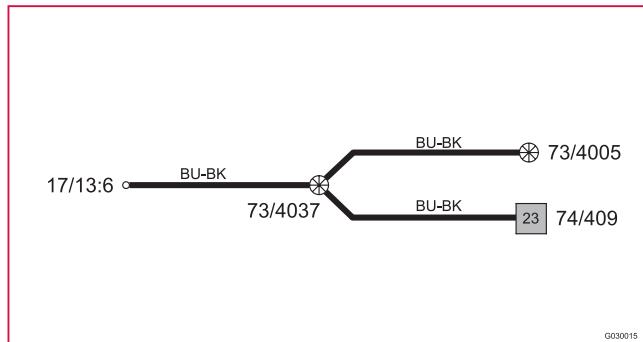


73/5002 RHD

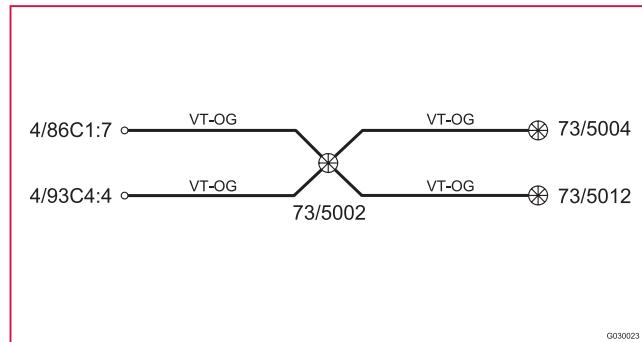


73/4038

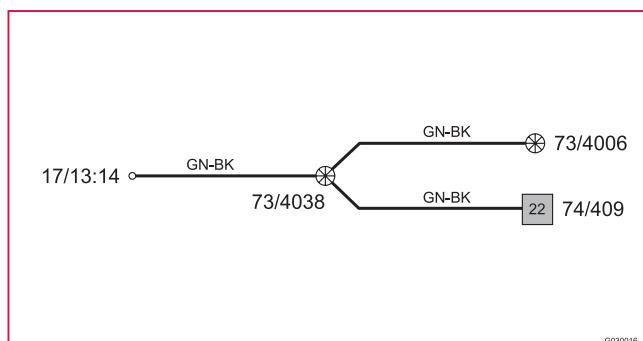


73/5003 LHD

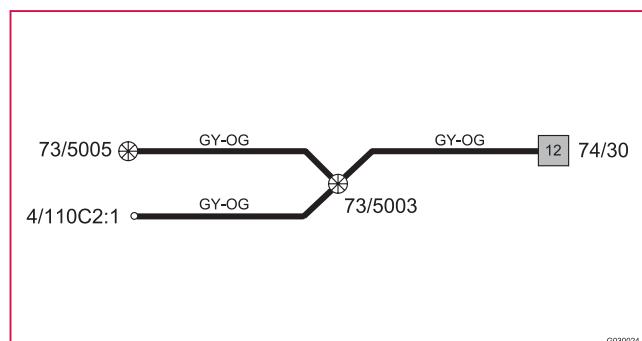


73/5001 LHD

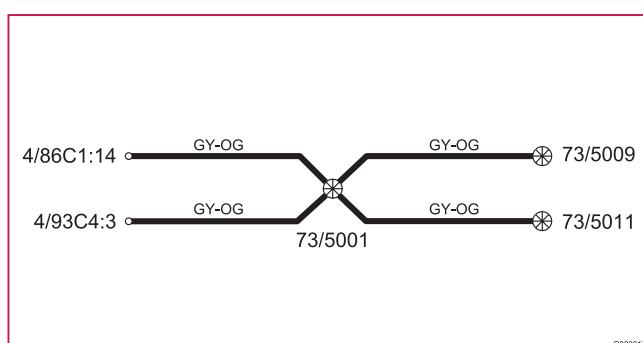


73/5003 RHD

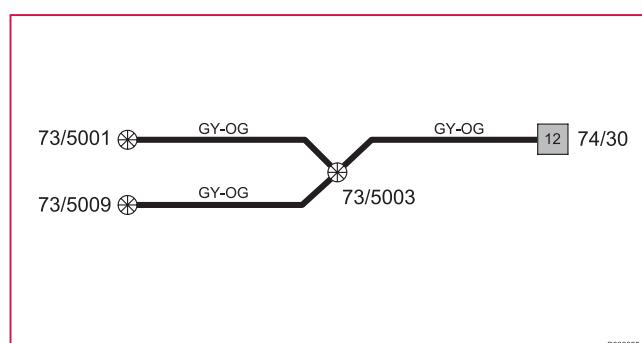


73/5001 RHD

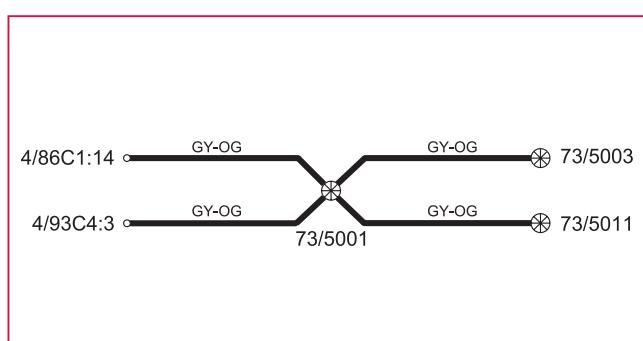


73/5004 LHD

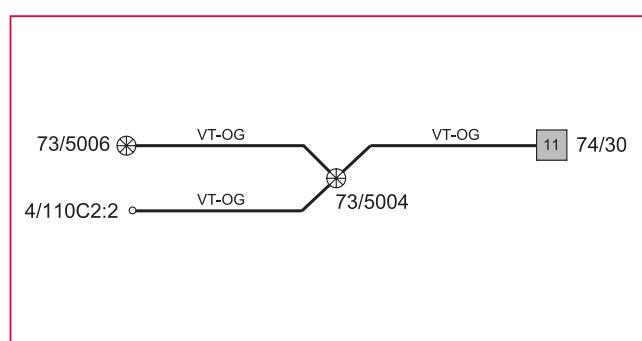

73/5002 LHD

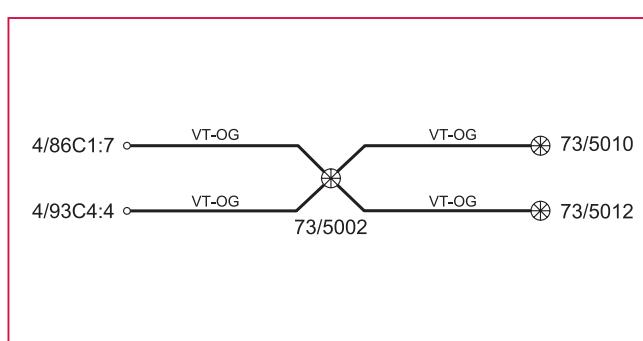


73/5004 RHD

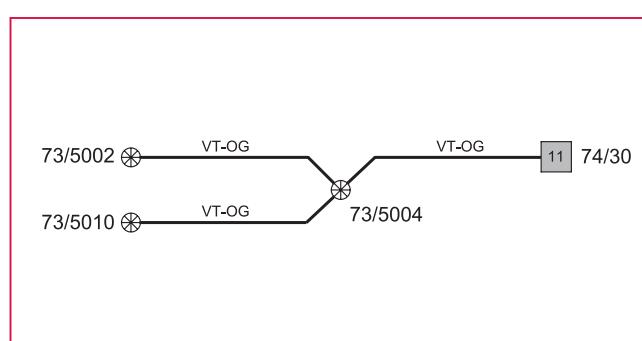


Branching points

73/5005 LHD - 73/5012


73/5005 LHD

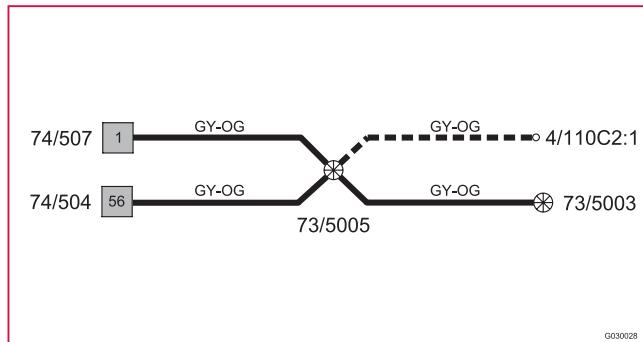


73/5009 RHD

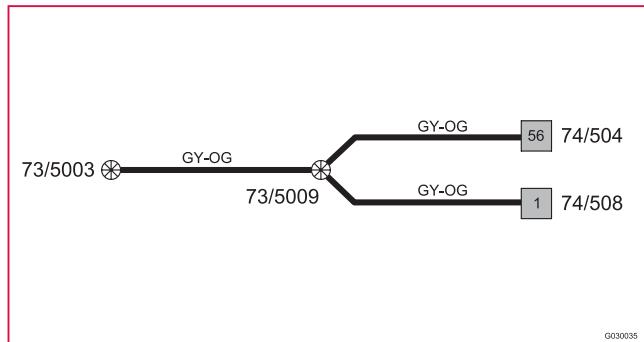


73/5005 RHD

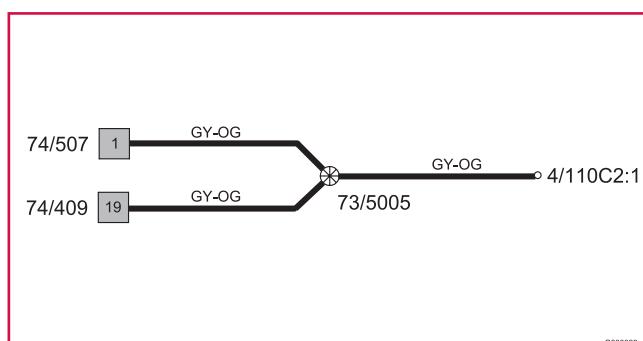


73/5010 LHD

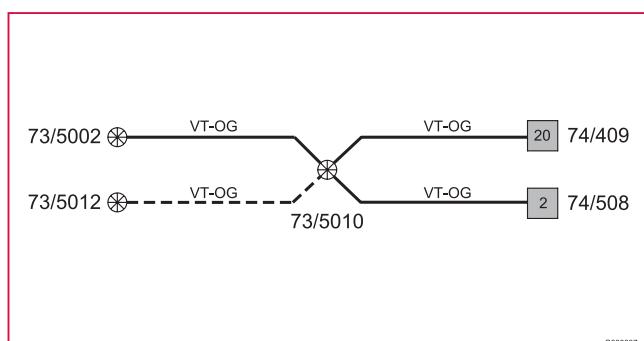


73/5006 LHD

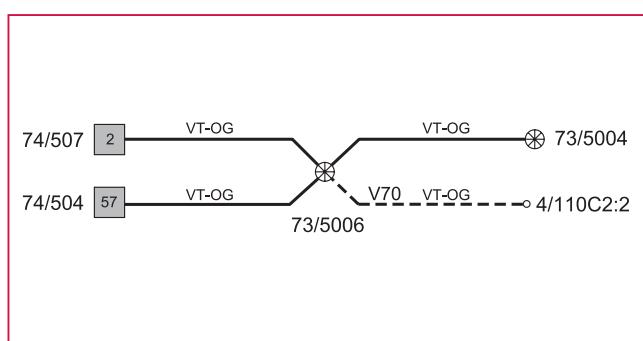


73/5010 RHD

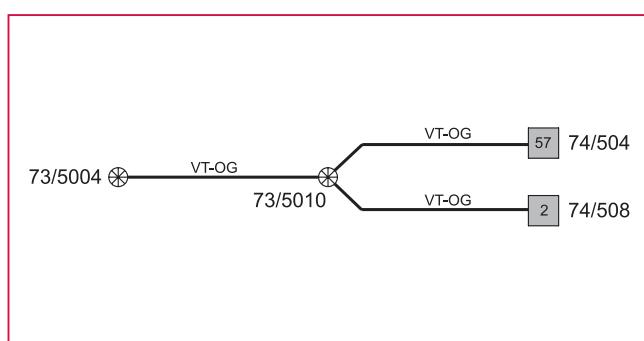


73/5006 RHD

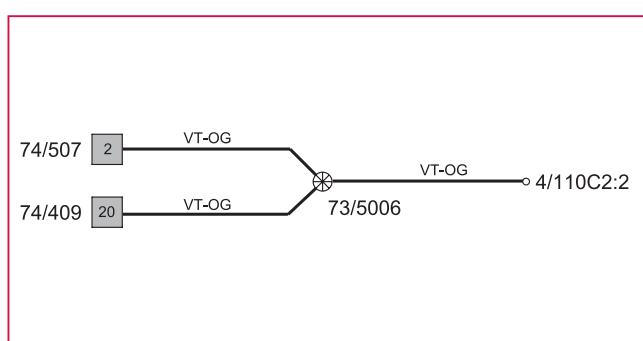


73/5011

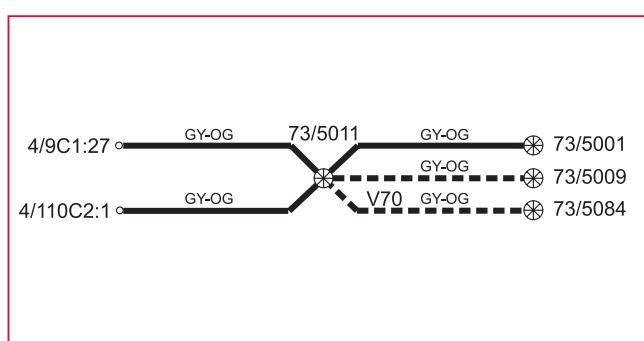

73/5009 LHD

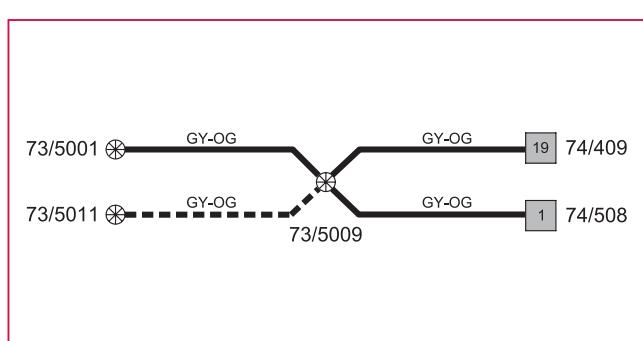


73/5012

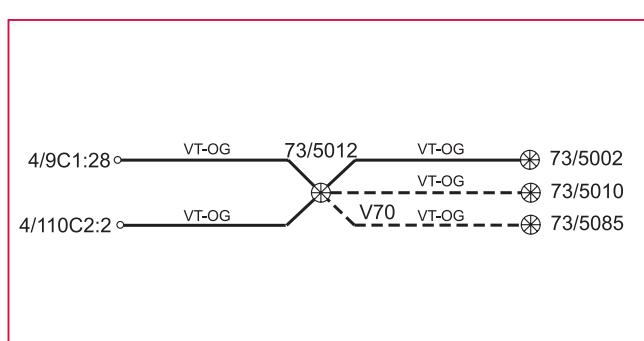


Branching points

73/5015 - 73/5027


73/5015

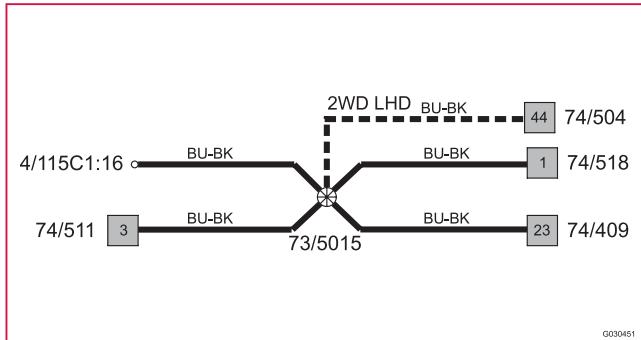


73/5024 LHD

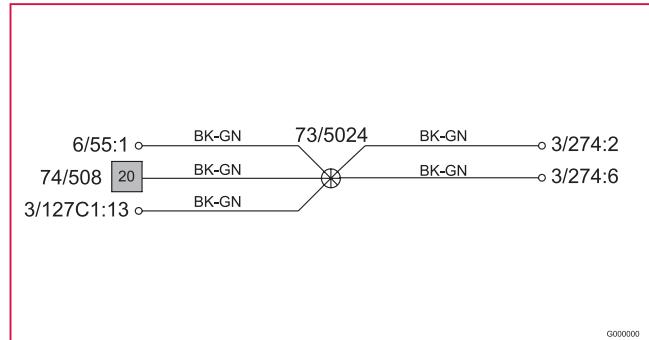


73/5016

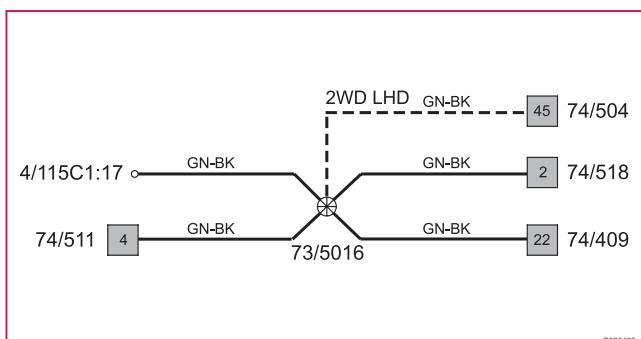


73/5024 RHD

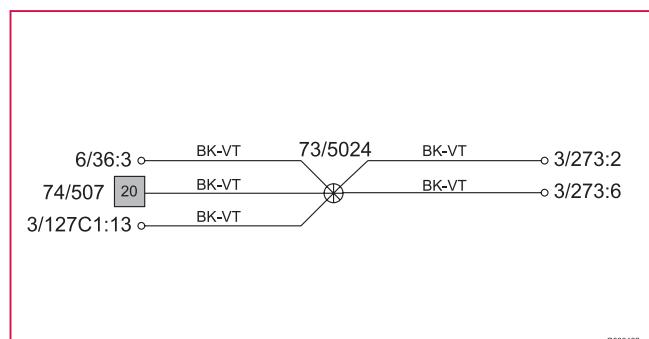


73/5019

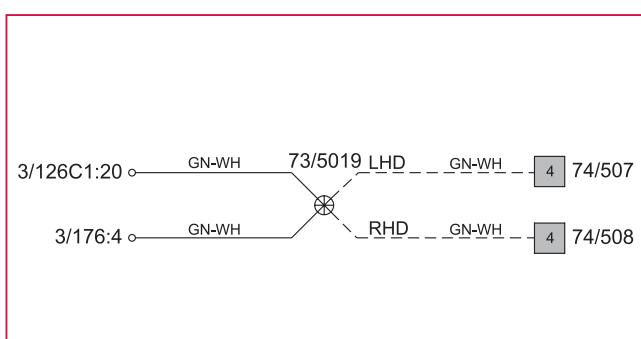


73/5025

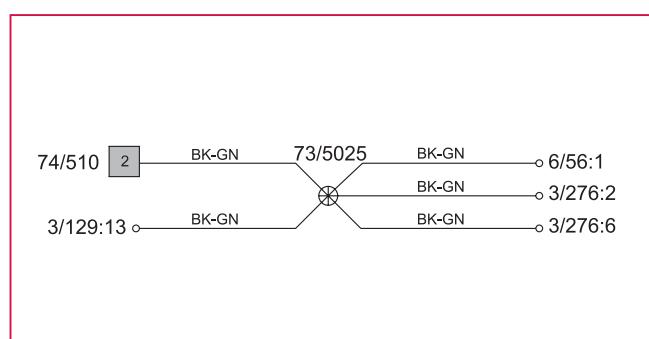


73/5021

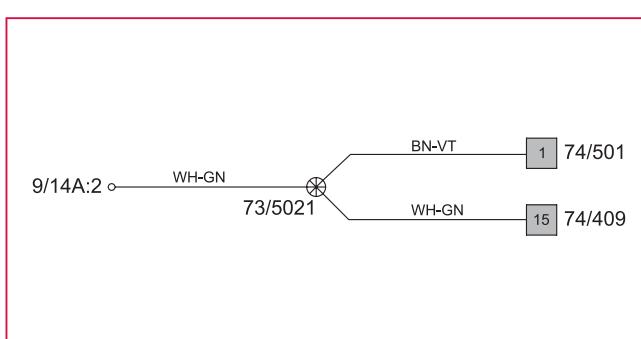


73/5026

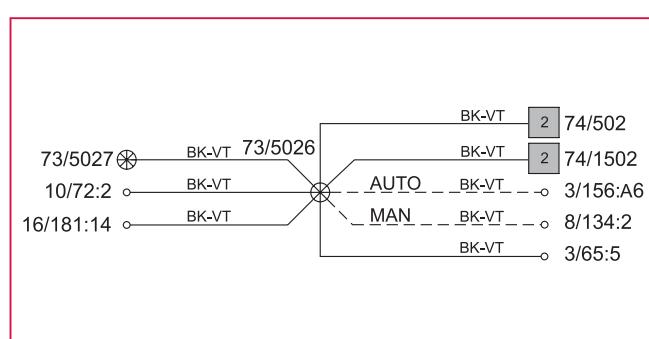

73/5023

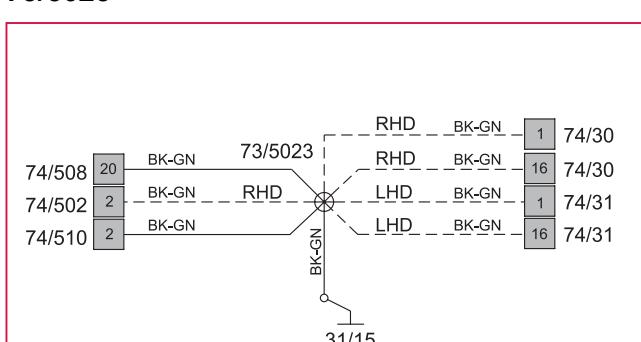


73/5027

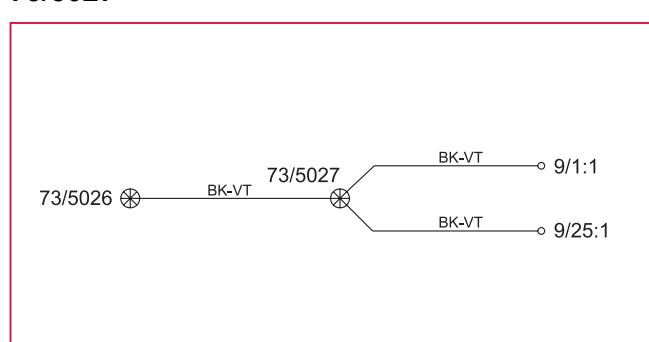


Branching points 73/5029 - 73/5044


73/5029

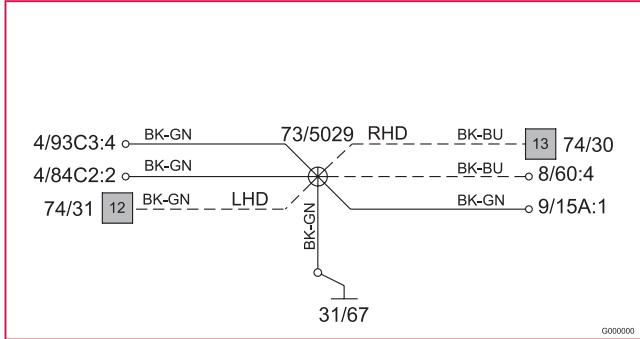


73/5030

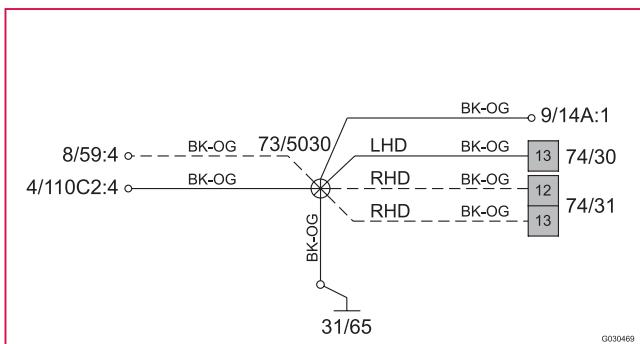


73/5033

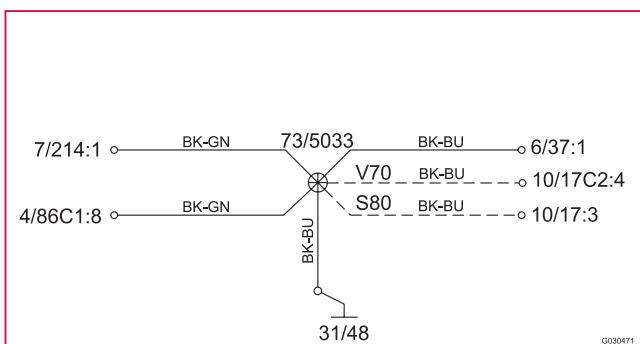


73/5035

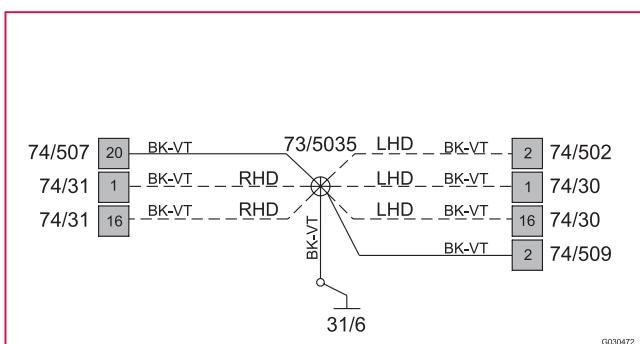


73/5036

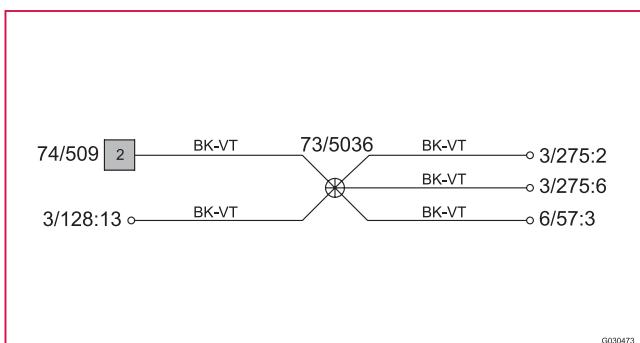


73/5037 LHD

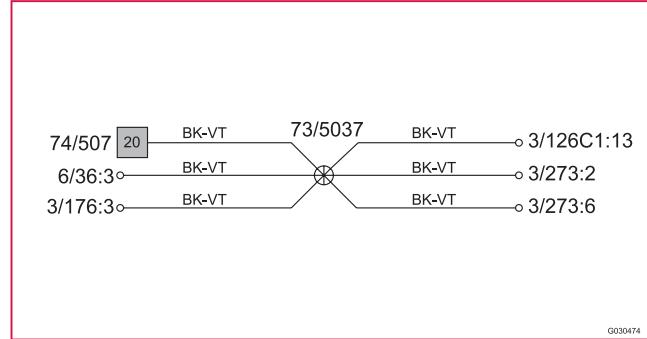


73/5037 RHD

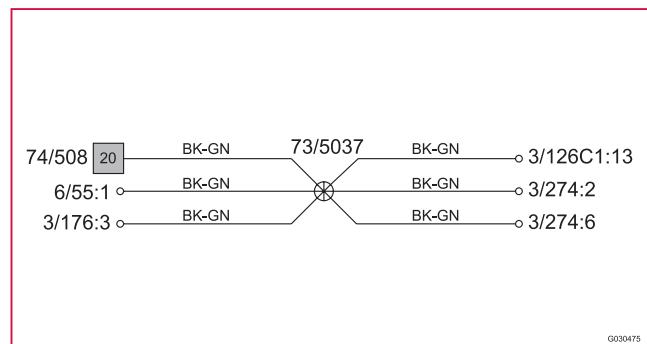


73/5038

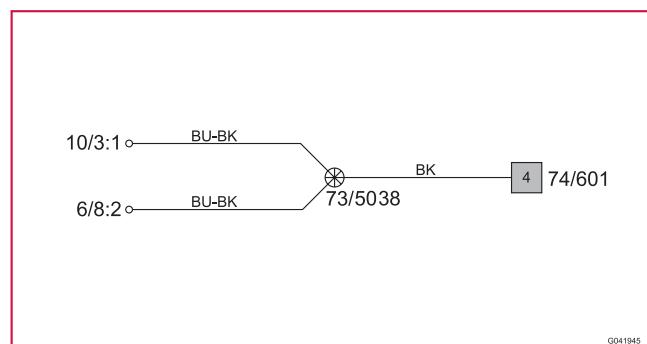

73/5040

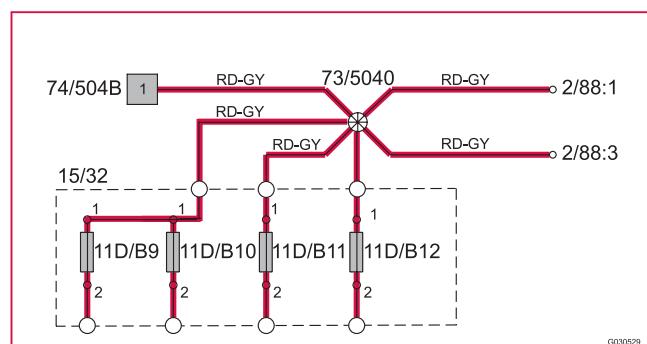


73/5044

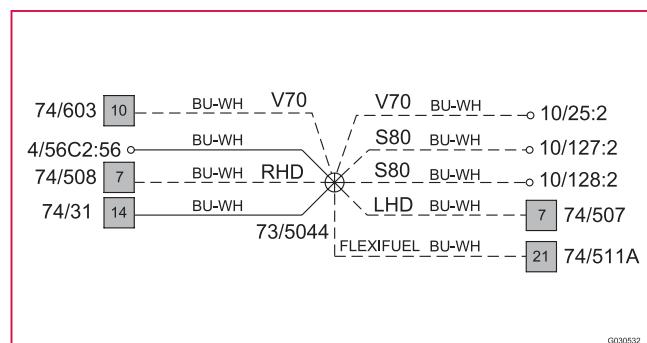


Branching points

73/5050 - 73/5071 LHD


73/5050

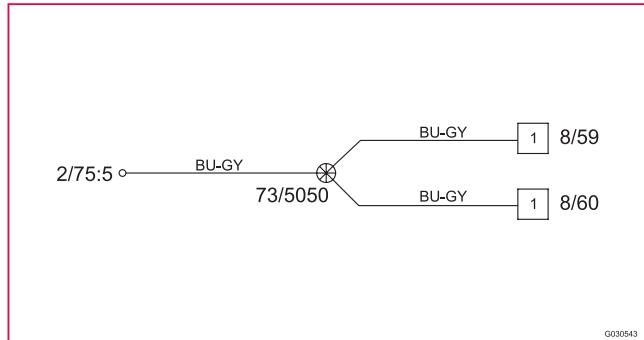


73/5064

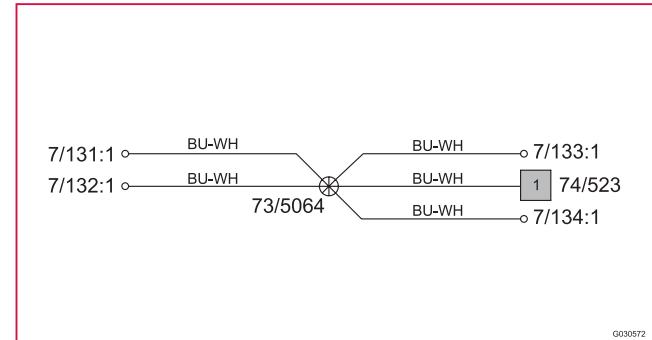


73/5052

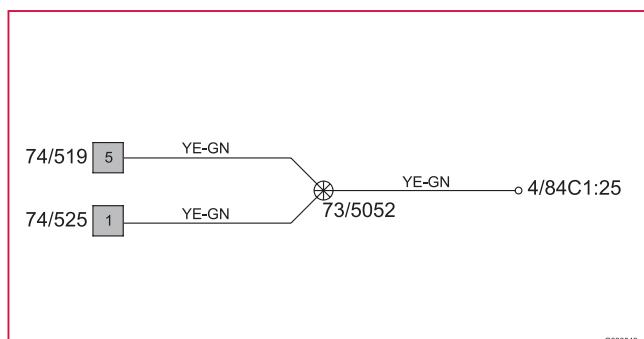


73/5066

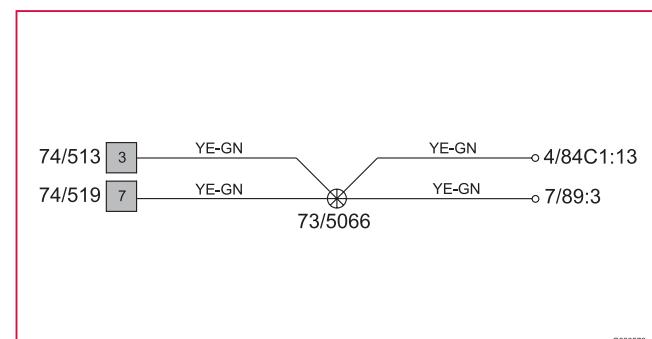


73/5053

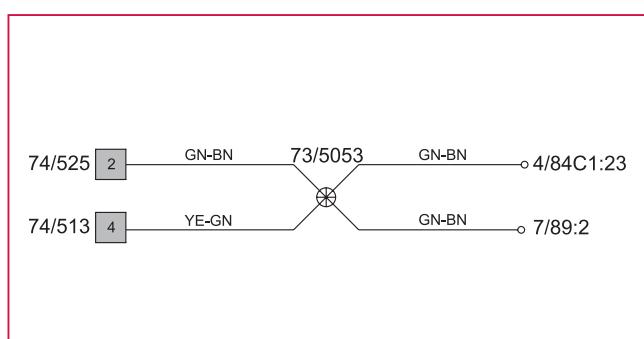


73/5067

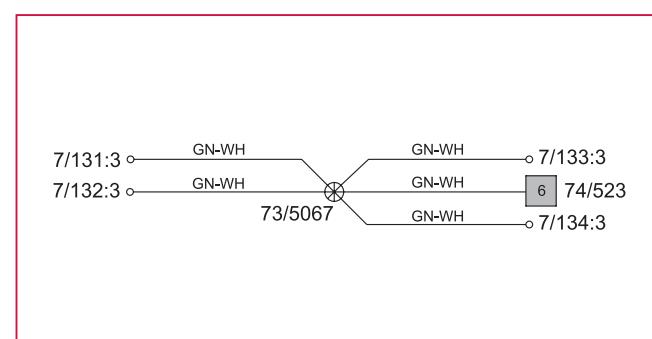


73/5054

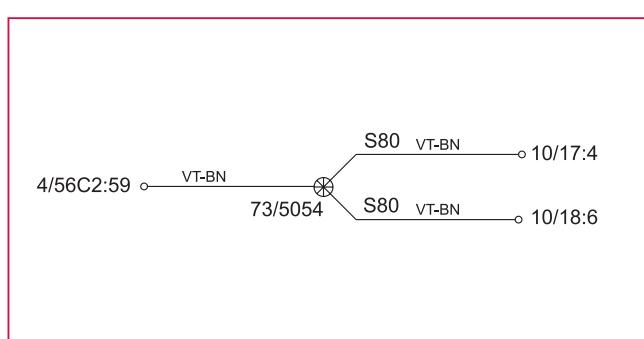


73/5070

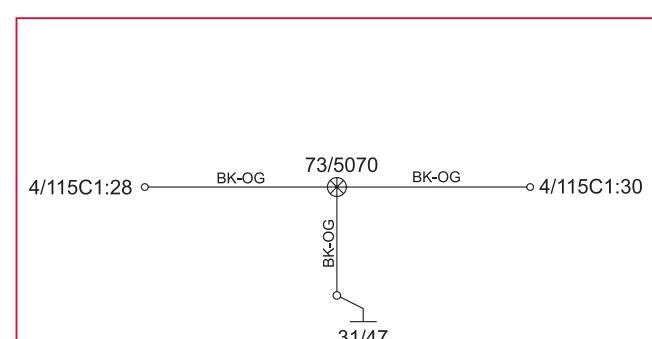

73/5055

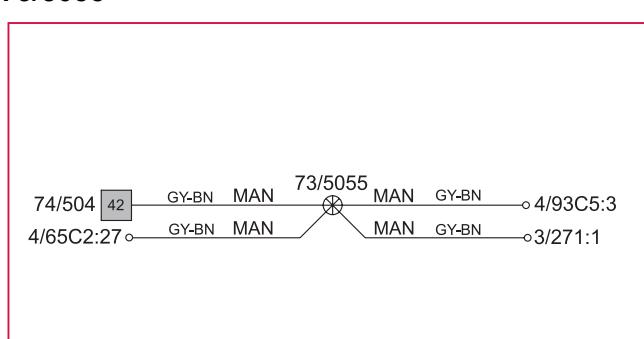


73/5071 LHD

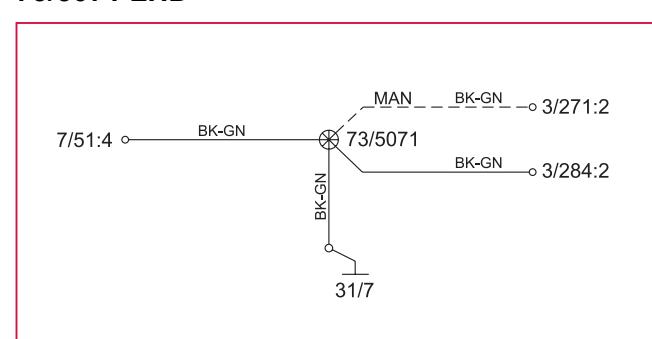


Branching points

73/5071 - 73/5086


73/5071 5-Cyl. Diesel Euro5

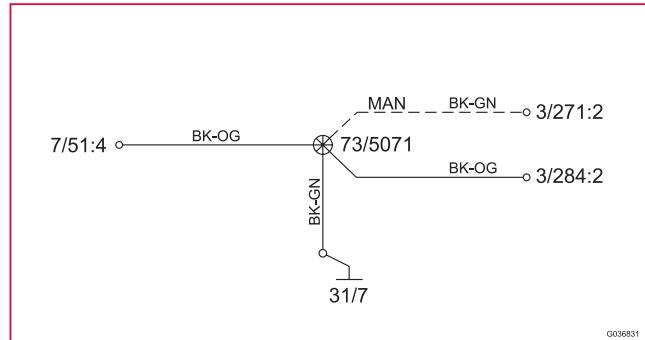


73/5078

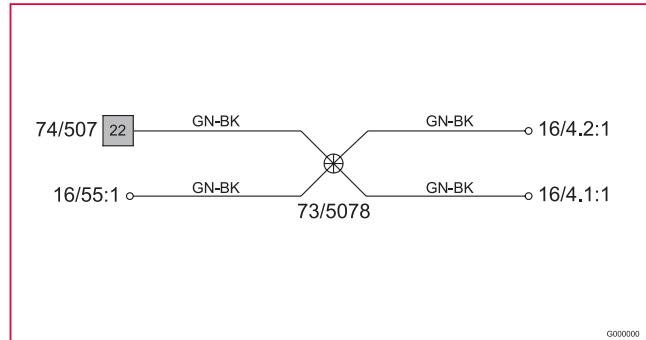


73/5072 RHD

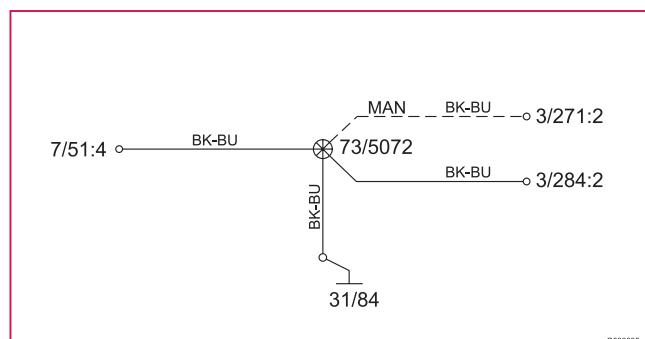


73/5079

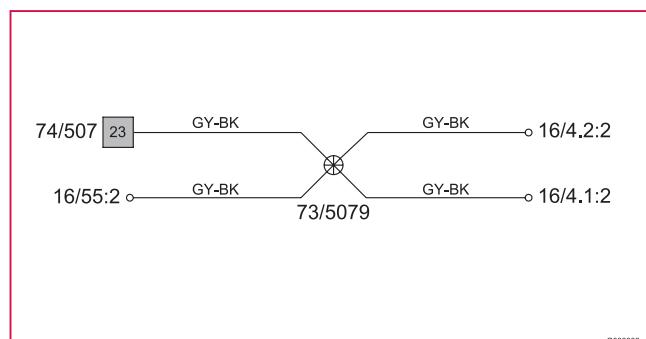


73/5075

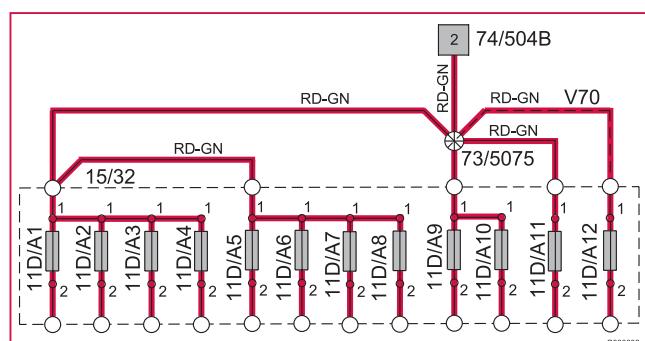


73/5084 V70

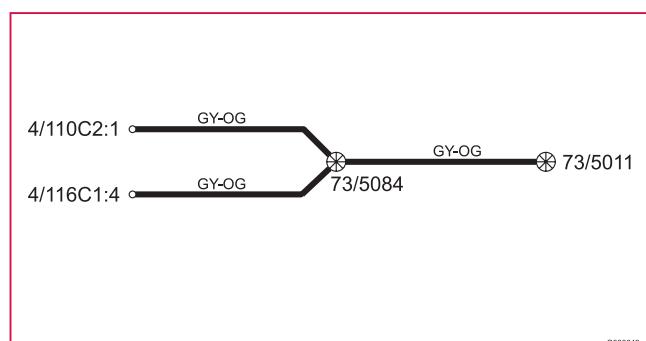


73/5076

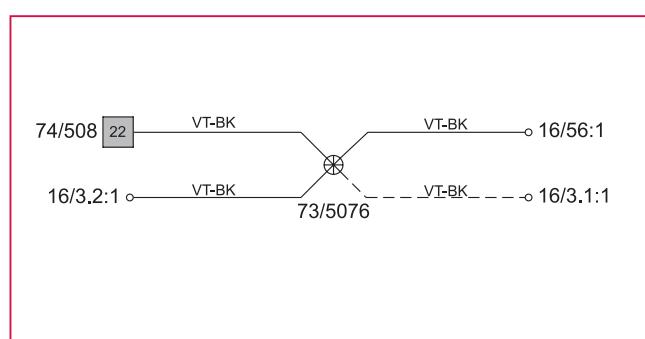


73/5085 V70

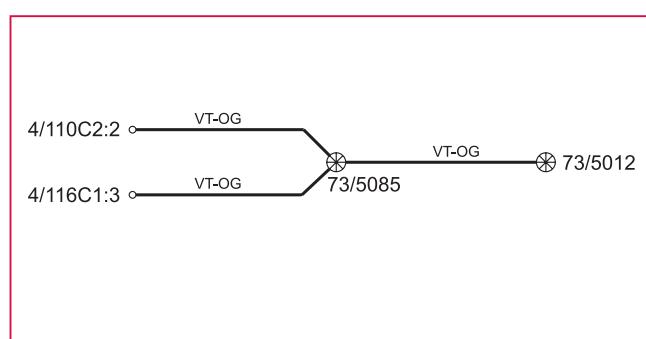

73/5077

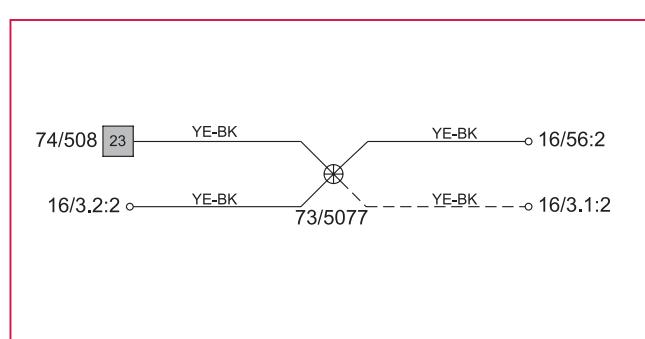


73/5086

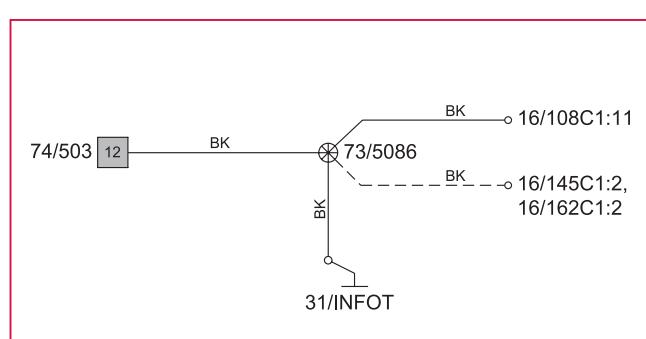


Branching points

73/5088 - 73/6004


73/5088

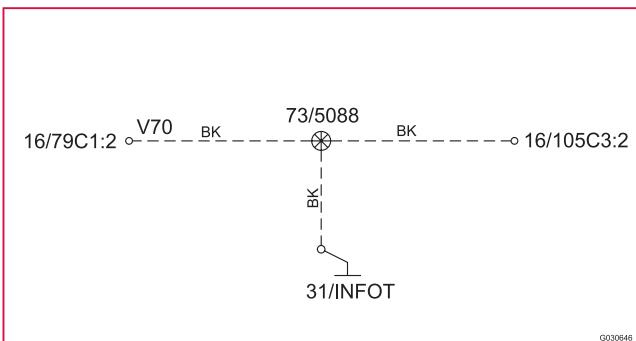


73/6001 V70

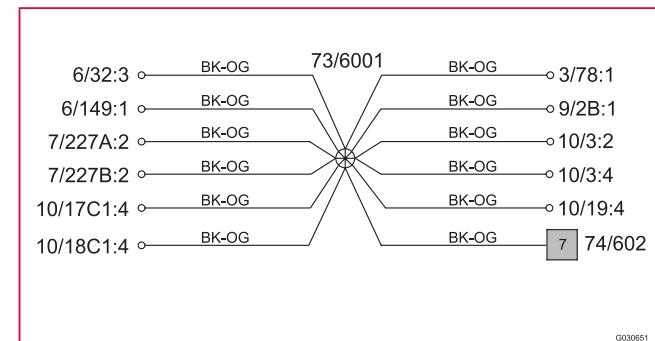


73/5089 V70

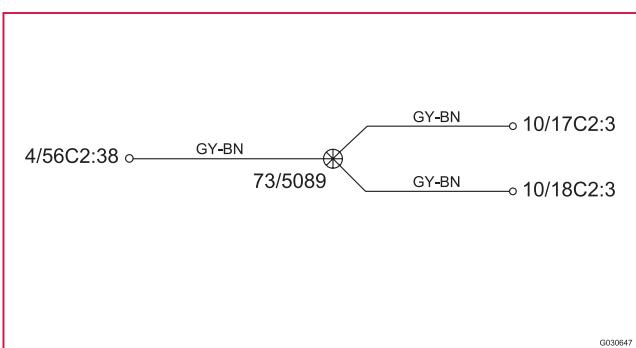


73/6002 V70

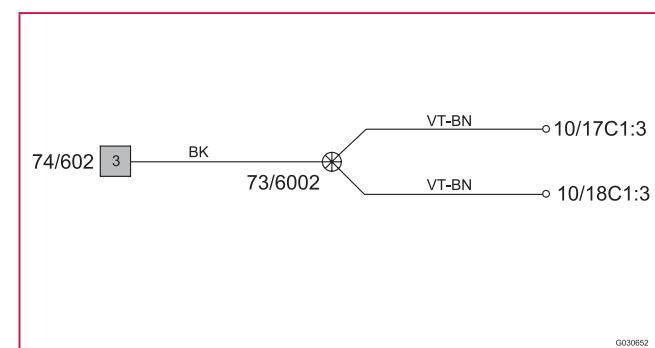


73/5105

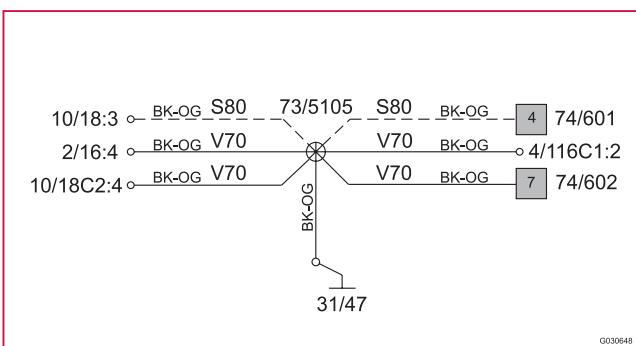


73/6003 V70

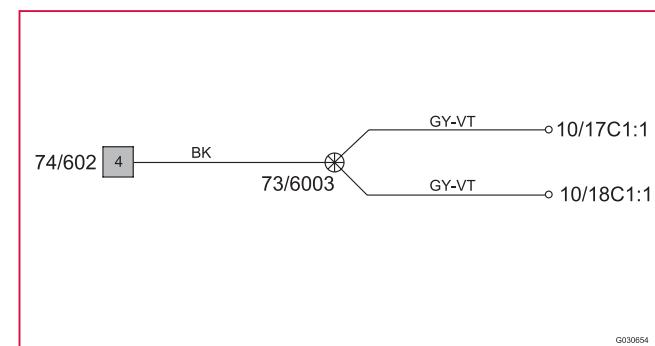


73/5106

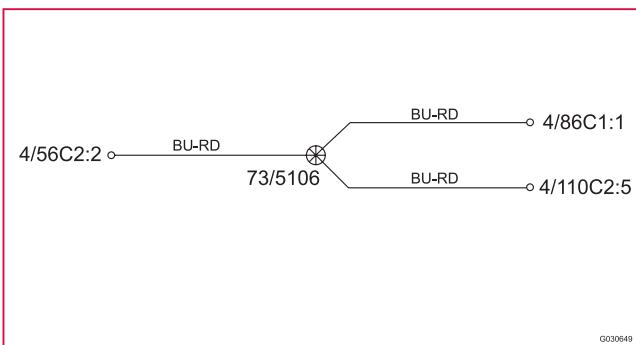

73/6004 V70

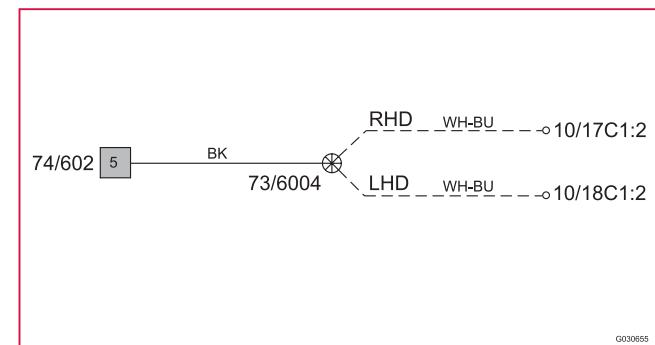


73/5575

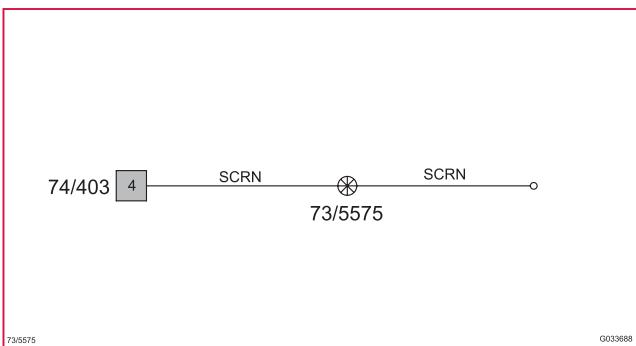

Component illustrations


1/1 - 2/64

1/1 Battery

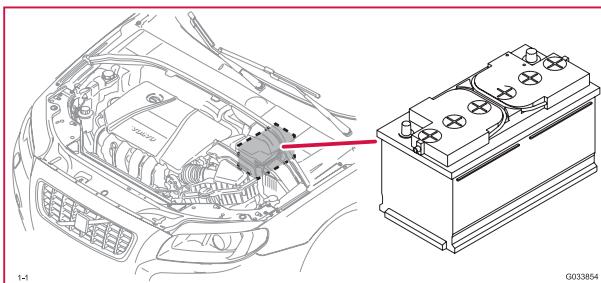

G033854


2/31 Relay, 15-feed

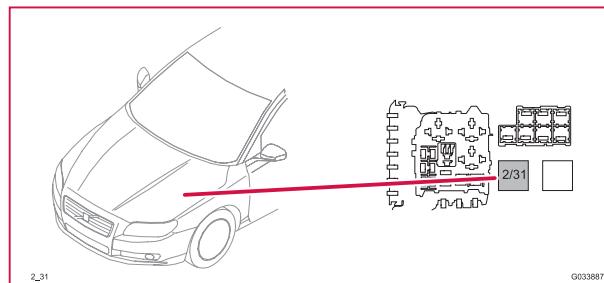

2_31

G033887


2/14 Relay, glow plug system

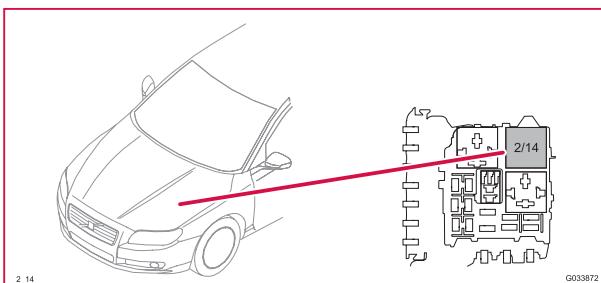

2_14

G033872


2/32 Main relay, engine management system

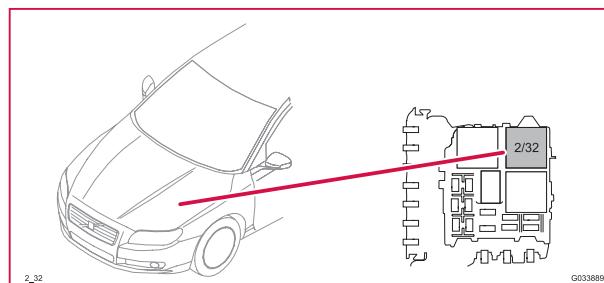

2_32

G033889


2/16 Rear window wiper relay, V70

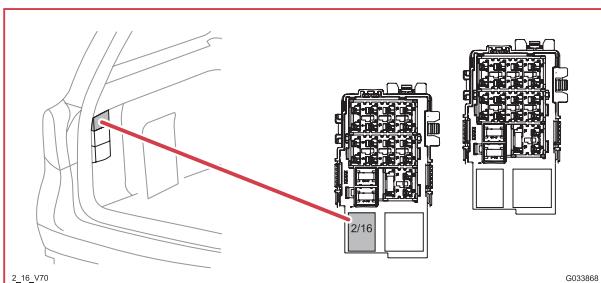

2_16_V70

G033868


2/32 Main relay, engine management system 4-Cyl. Diesel

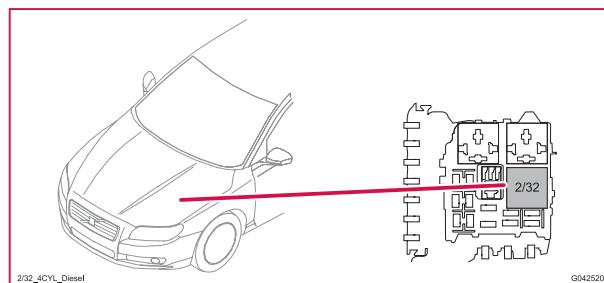

2/32_4CYL_Diesel

G042520


2/17 Relay, horn

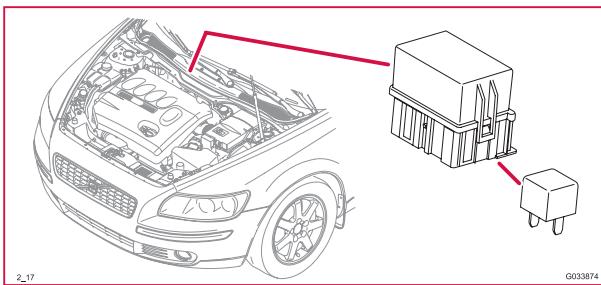

2_17

G033874


2/35 Relay, starter motor

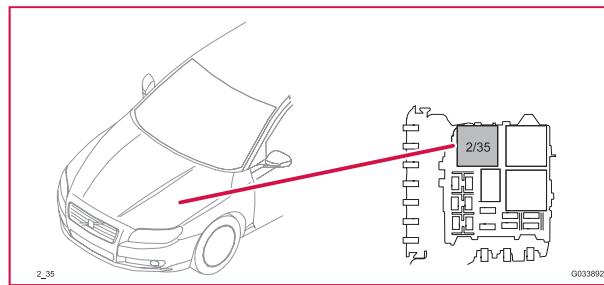

2_35

G033892


2/22 Relay, climate control system

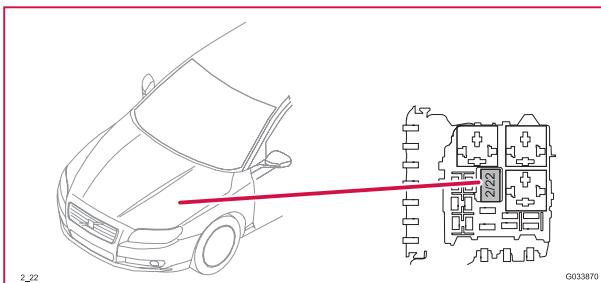

2_22

G033870

2/64 Auxiliary light relay, accessory

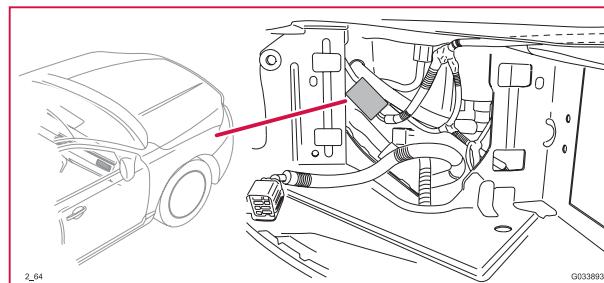


2_64

G033893


Component illustrations

2/75 - 2/193


2/75 Rear adjustable head restraint relay, V70

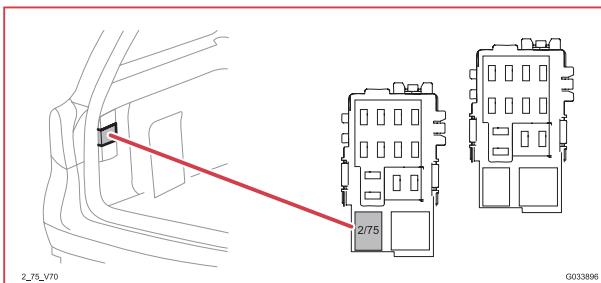


2/75 Rear adjustable head restraint relay, S80

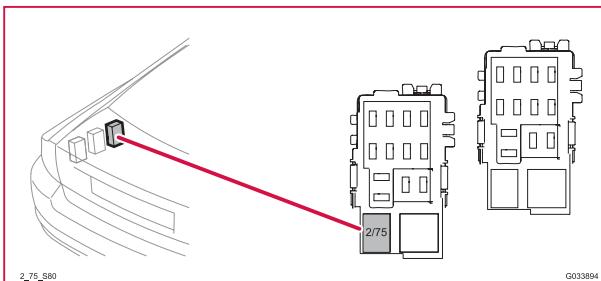


2/82 Relay, Heated rear window, V70

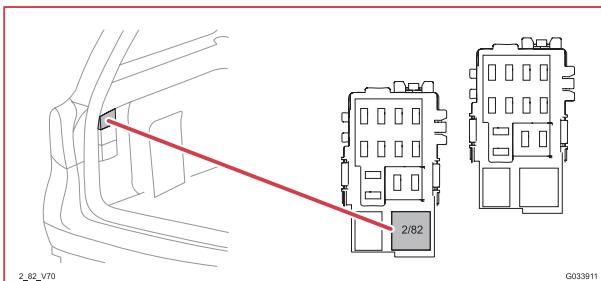


2/82 Relay, Heated rear window, S80

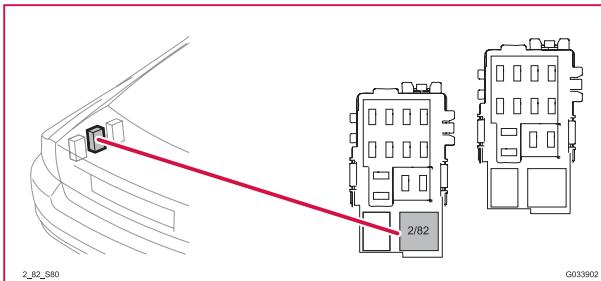


2/88 Relay, 15-feed rear, V70

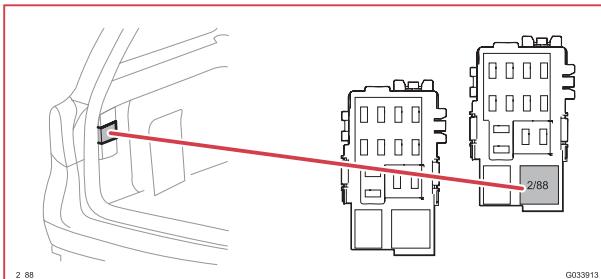


2/88 Relay, 15-feed rear, S80

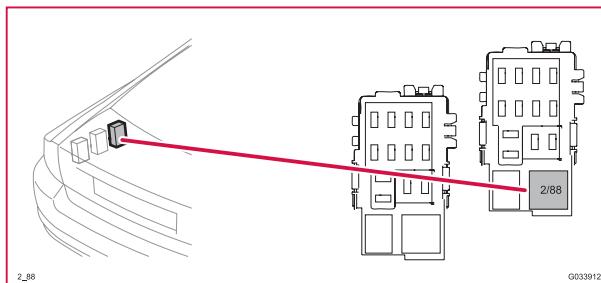


2/133 Relay vacuum pump

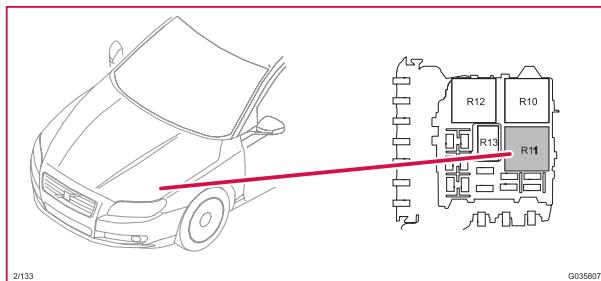


2/141 Refrigeration box relay

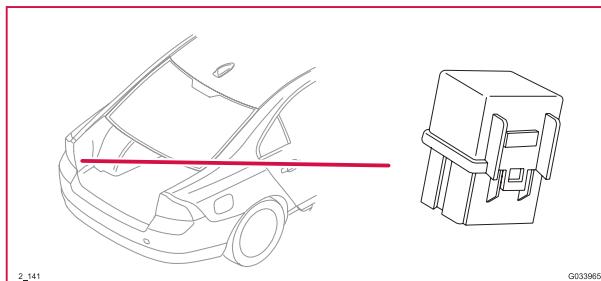

2/142 Relay pre-heater fuel filter

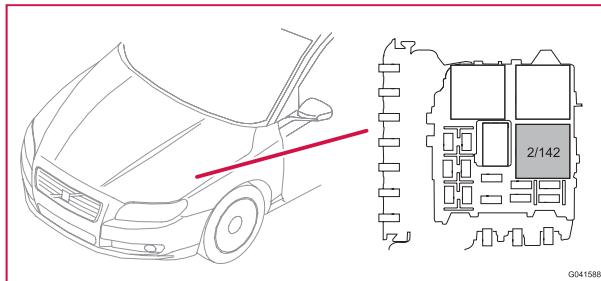


2/193 Relay, comfort functions

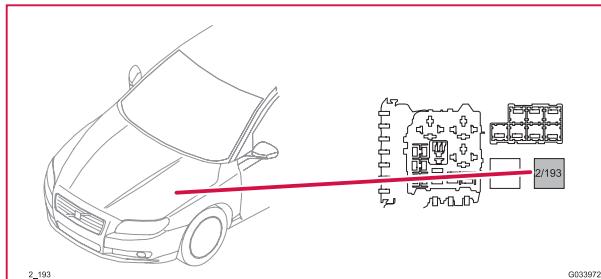


Component illustrations

2/239 - 3/26


2/239 Relay, coolant pump, 8-Cyl.

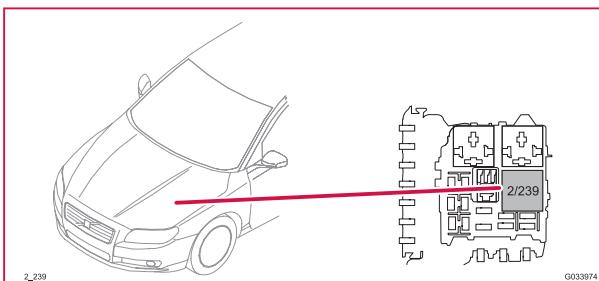


3/10 Reversing light contact

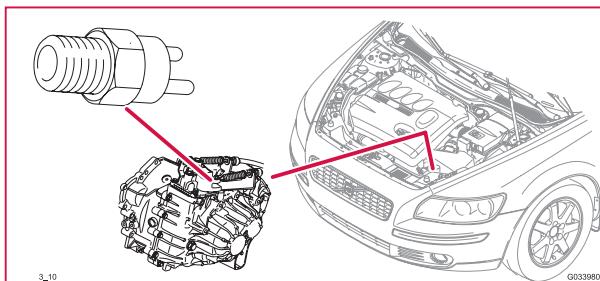


3/4 Steering wheel switch left (SWSL)

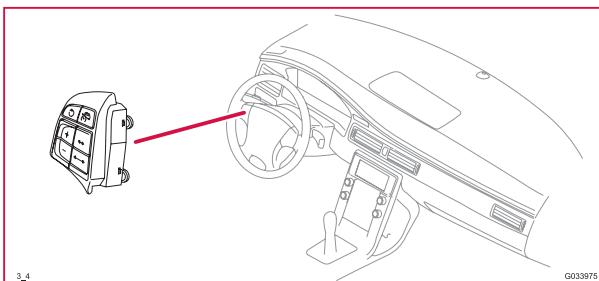


3/19 Power window switch, rear left door

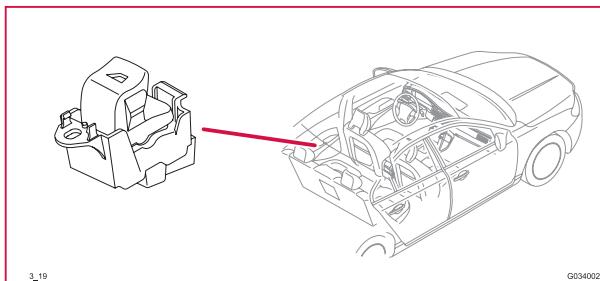


3/6 Switch, hazard warning flashers

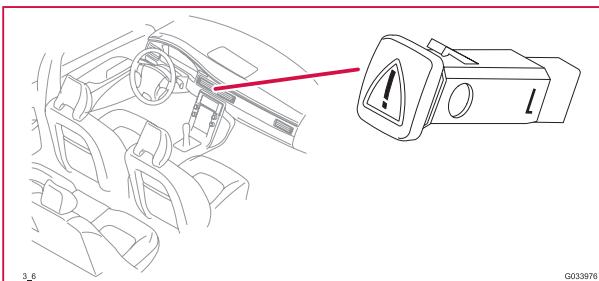


3/21 Power window switch, right rear door

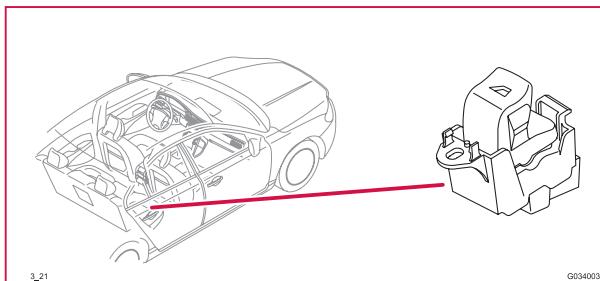


3/8 Switch, heated rear window/
door mirror

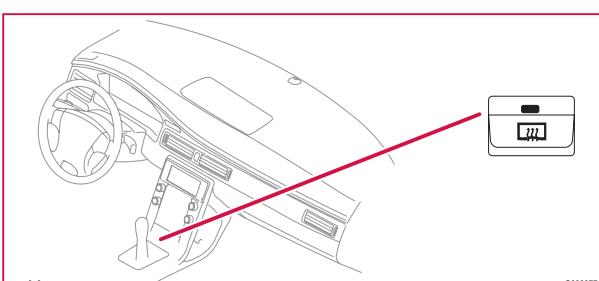


3/25 Power sunroof switch

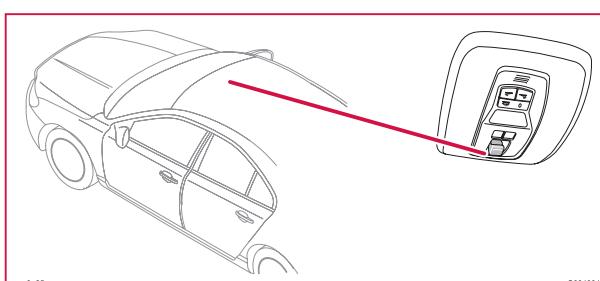

3/9 Contact brake light

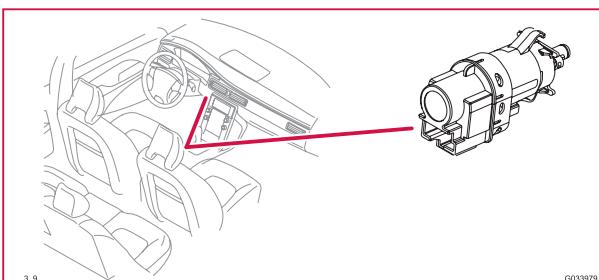


3/26 Switch unit, power driver's seat

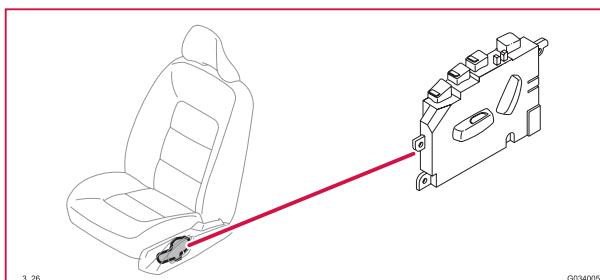

Component illustrations


3/27 - 3/80

3/27 Switch unit, power passenger seat

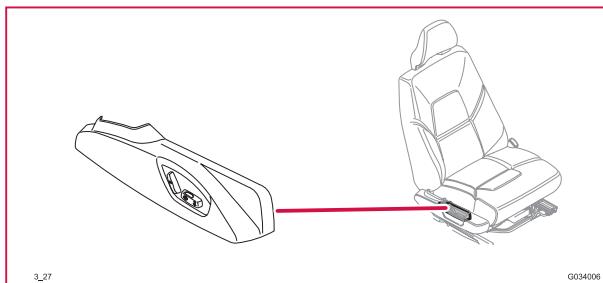


G034006

3/60 Switch, auxiliary lights

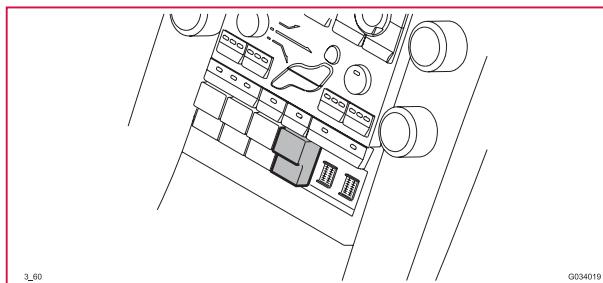

G034019


3/35 Trunk handle switch, V70

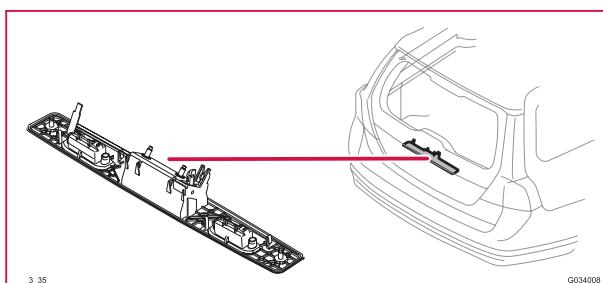

3_35

G034008


3/62 Hood alarm contact

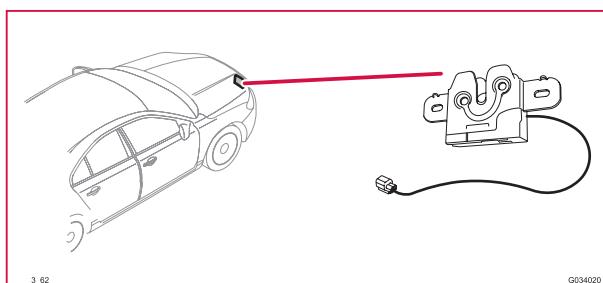

3_62

G034020


3/35 Trunk handle switch, S80

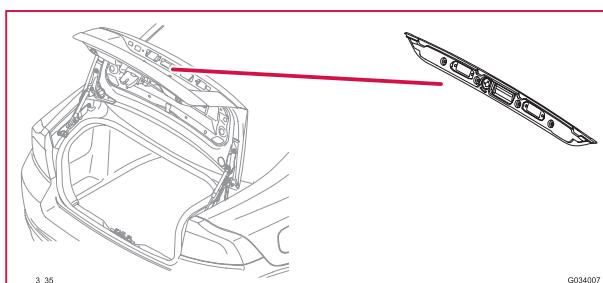

3_35

G034007


3/65 Switch, heated rear seat

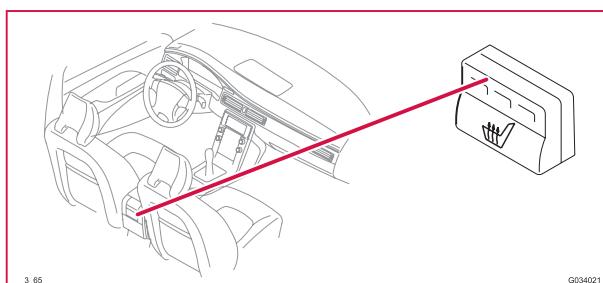

3_65

G034021


3/37 Contact horn

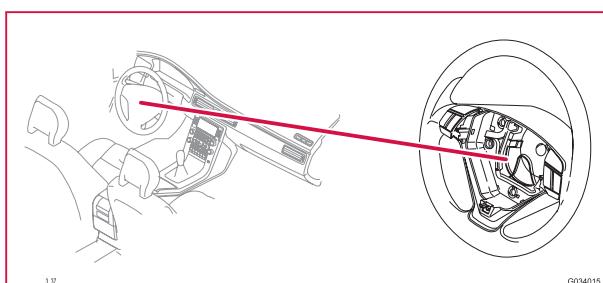

3_37

G034015


3/78 Lock unit, tailgate V70

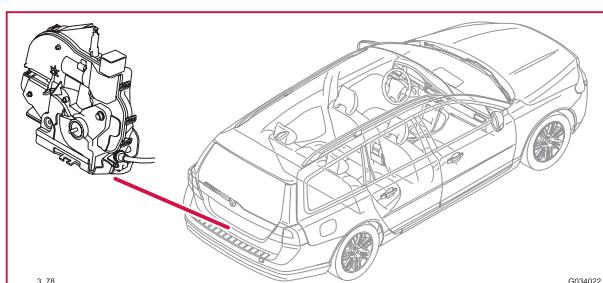

3_78

G034022


3/47 Parking brake contact

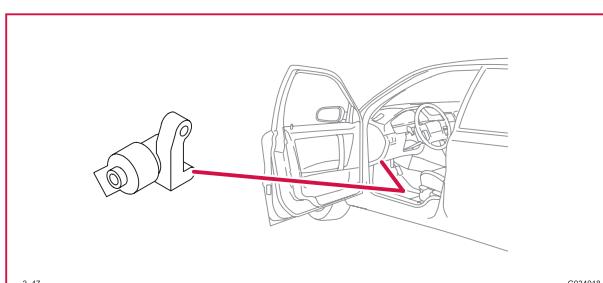

3_47

G034018

3/80 Switch, central locking system, driver's door

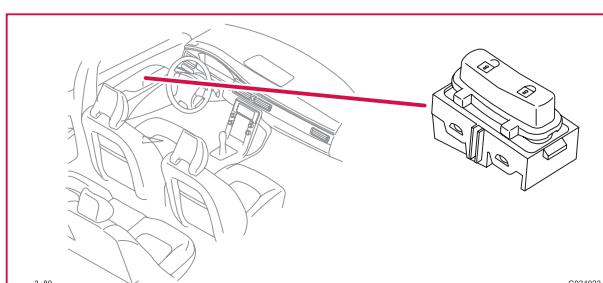


3_80

G034023

Component illustrations


3/82 - 3/127

3/82 Switch, central locking system, passenger door

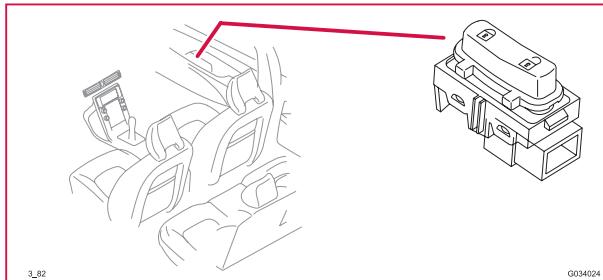

G034024


3/83 Switch, passenger door power window

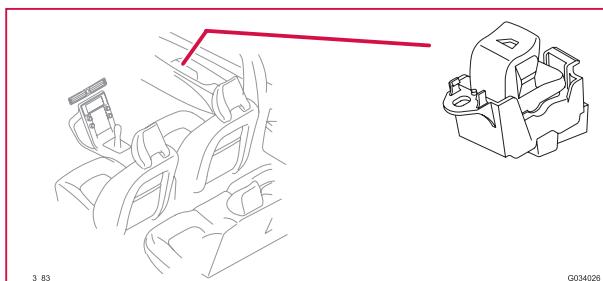

3_83

G034026


3/93 Contact, driver's seat belt buckle

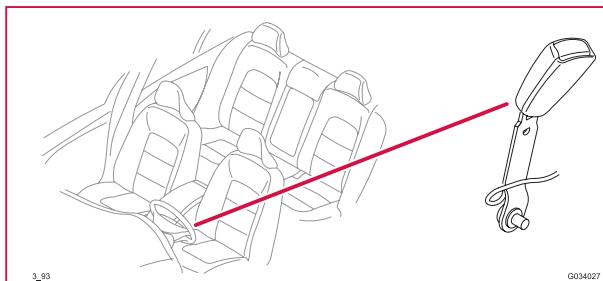

3_93

G034027


3/94 Contact, passenger seat belt buckle

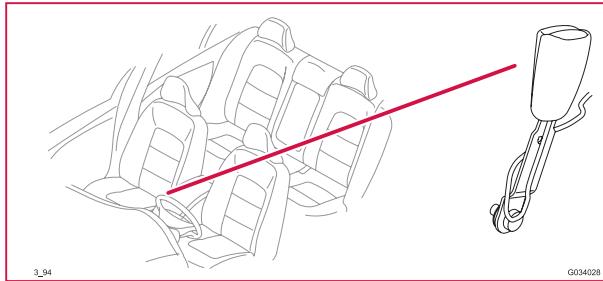

3_94

G034028


3/111 Light Switch Module (LSM)

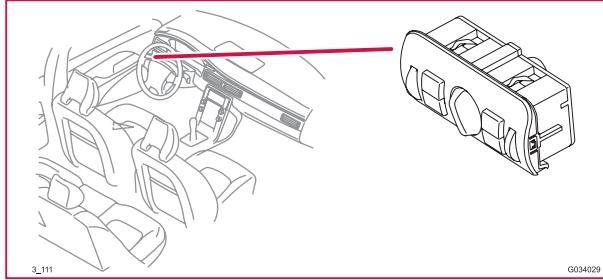

3_111

G034029


3/112 Climate control system

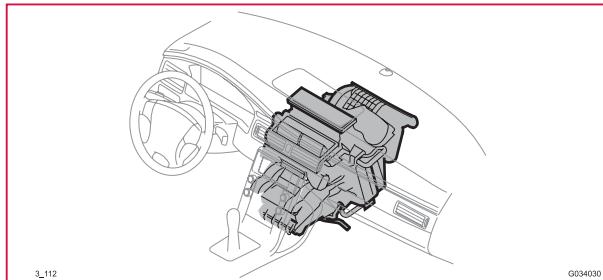

3_112

G034030


3/113 Rear adjustable head restraint relay

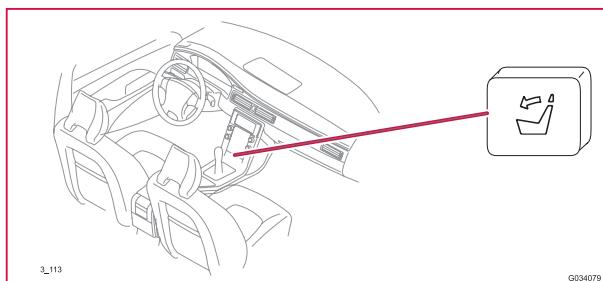

3_113

G034079


3/117 Switch unit, ceiling light

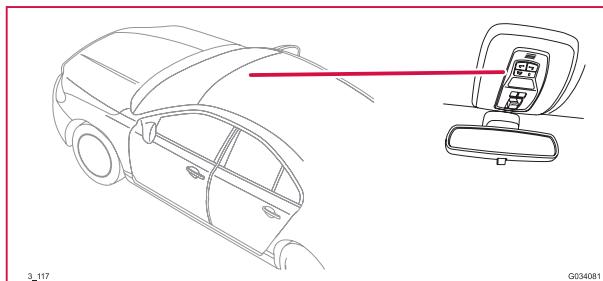

3_117

G034081


3/126 Driver Door Module (DDM)

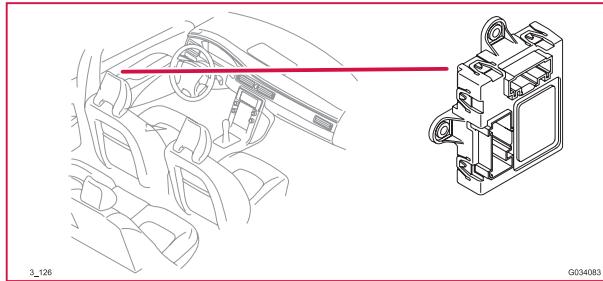

3_126

G034083

3/127 Passenger Door Module (PDM)

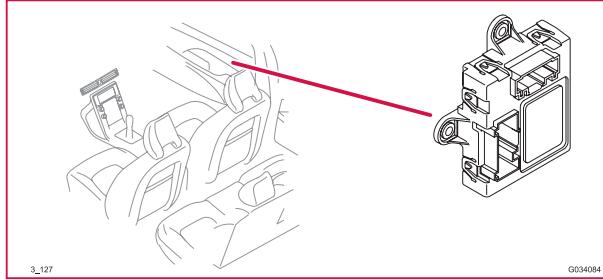


3_127

G034084

Component illustrations

3/128 - 3/176


3/128 Left rear door module (LDM)

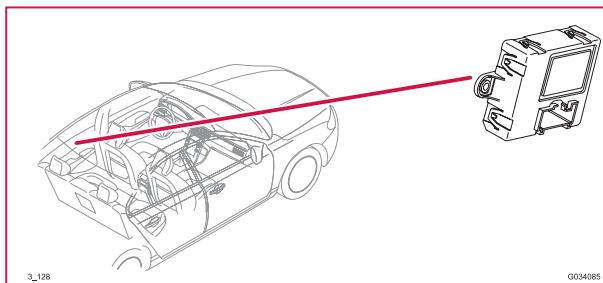

3_128

G034085


3/135 RTI switch

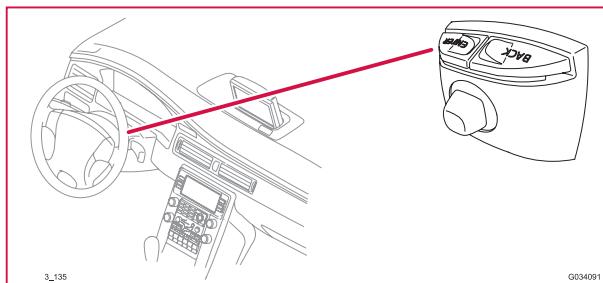

3_135

G034091


3/129 Right rear door module (RDM)

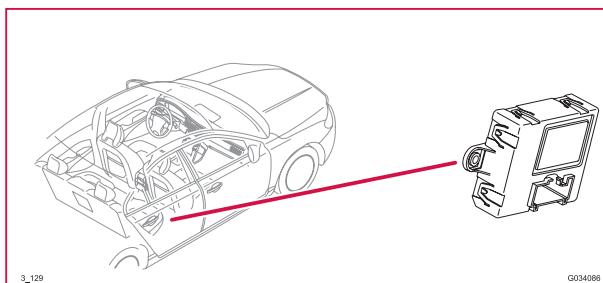

3_129

G034086


3/156 Gear Selector Module (GSM)

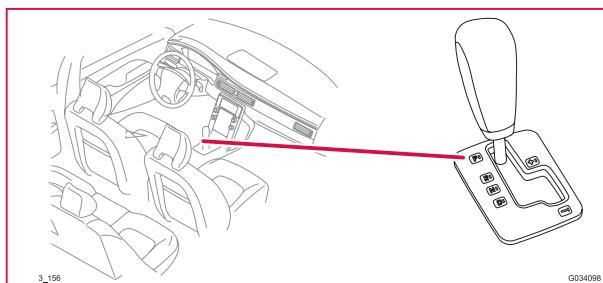

3_156

G034098


3/130 Steering Wheel Module (SWM)

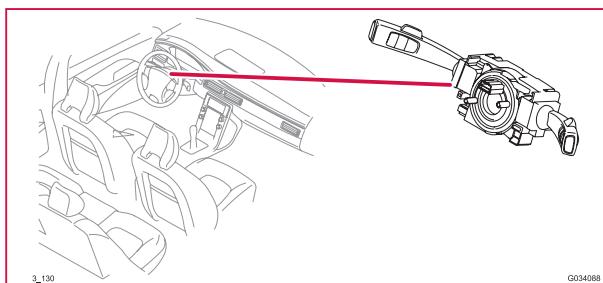

3_130

G034088


3/157 Switch, passenger side airbag

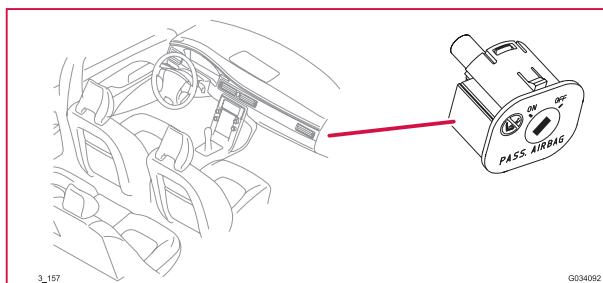

3_157

G034092


3/131 Steering wheel switch right (SWSR)

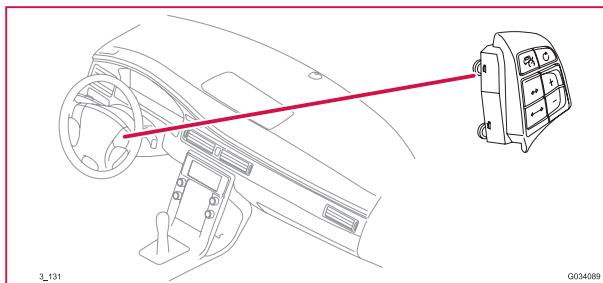

3_131

G034089


3/173 Switch, trunk lid/tailgate private lock

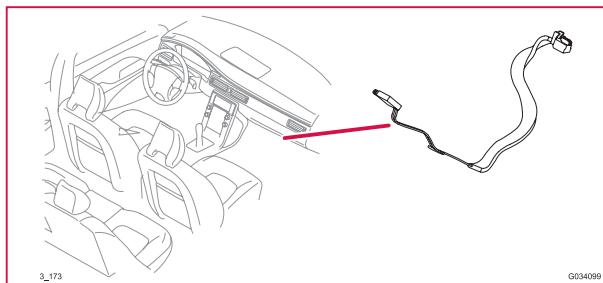

3_173

G034099


3/132 Start Control Module (SCU)

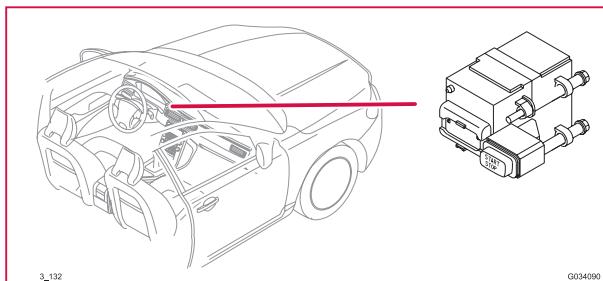

3_132

G034090

3/176 Power window switches, driver's door

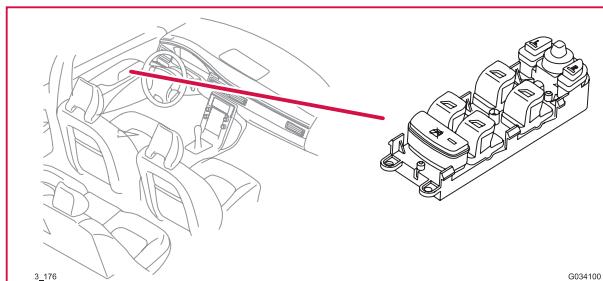


3_176

G034100


Component illustrations

3/217 - 3/272


3/217 Contact, LH rear belt buckle

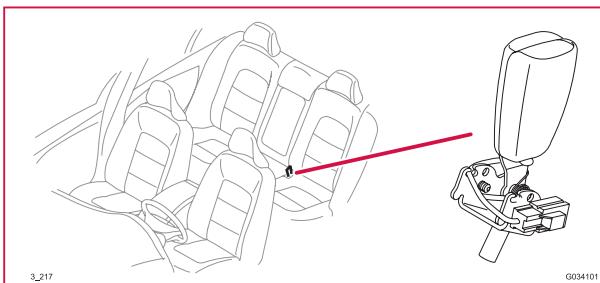


3/218 Contact, center rear belt buckle

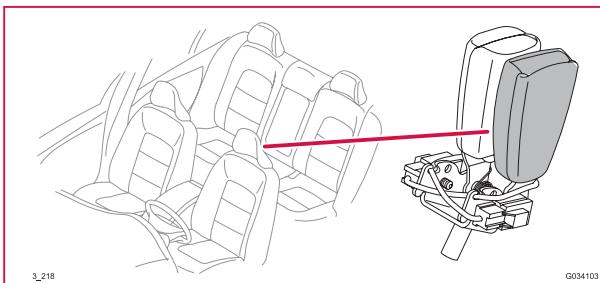


3/219 Contact, RH rear belt buckle

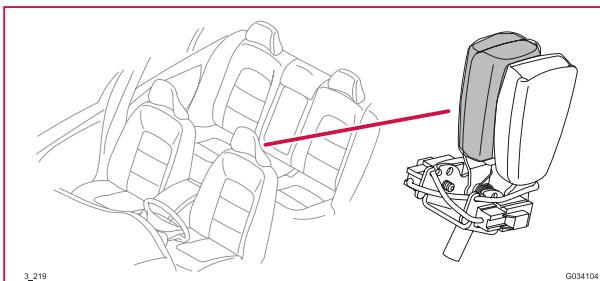


3/225 Switch unit, Continuously Controlled Damping (CCD)

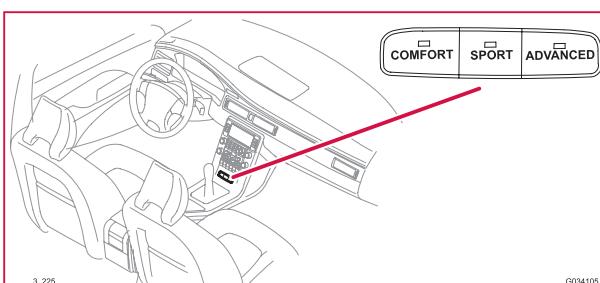


3/255 Position sensor, driver's seat

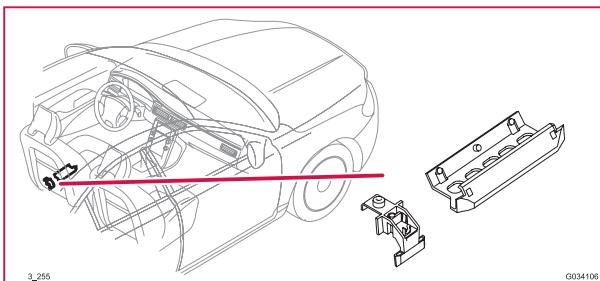


3/256 Position sensor, passenger seat

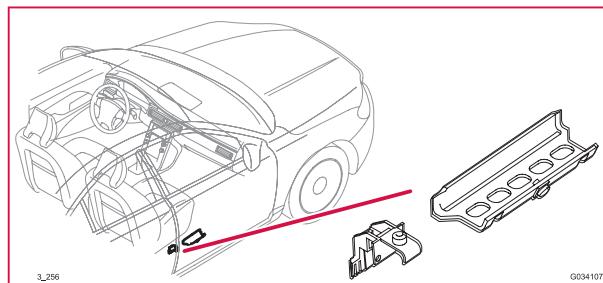


3/267 Switch unit, telematics

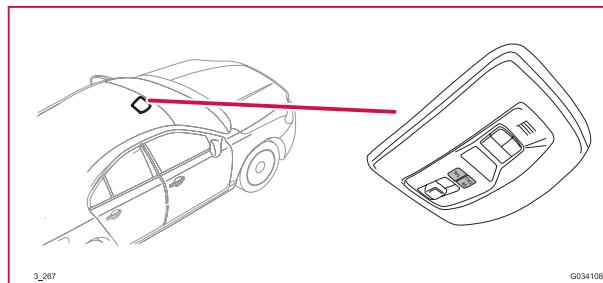


3/270 Contact servo pressure

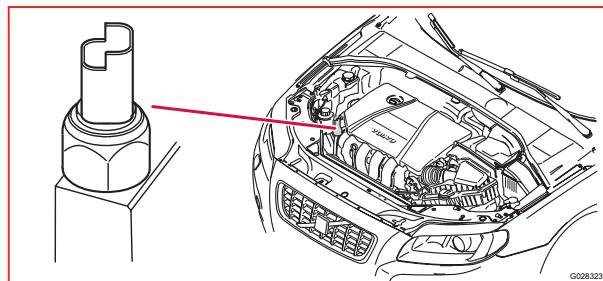

3/271 Contact, immobilizer, clutch pedal

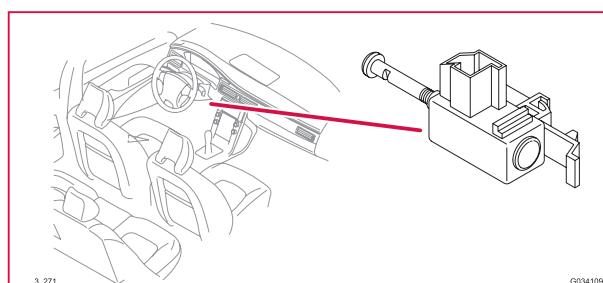


3/272 Switch, parking brake

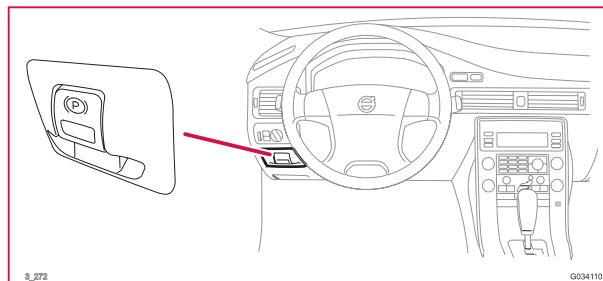

Component illustrations

3/273 - 4/6


3/273 Lock contact, LH front door

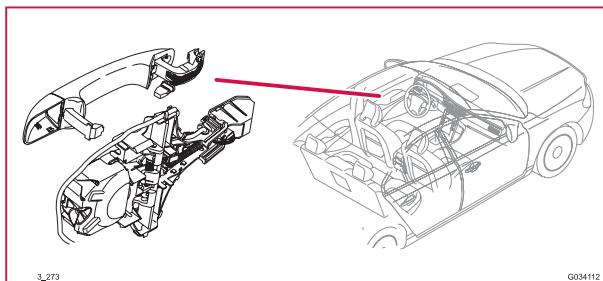

3_273


G034112

3/282 Switch indicator 1st gear

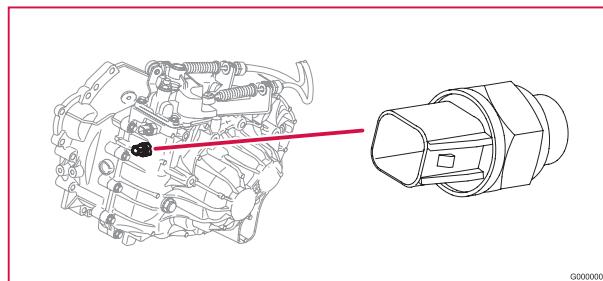

G005000


3/274 Lock contact, RH front door

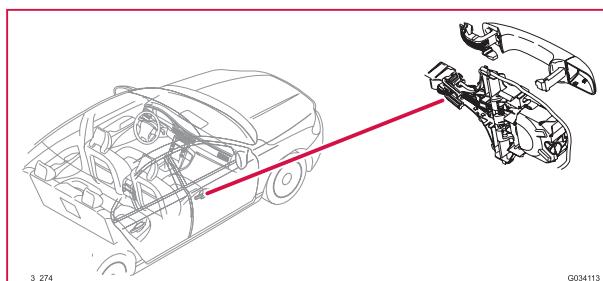

3_274


G034113

3/284 Diagnostic contact, brake light

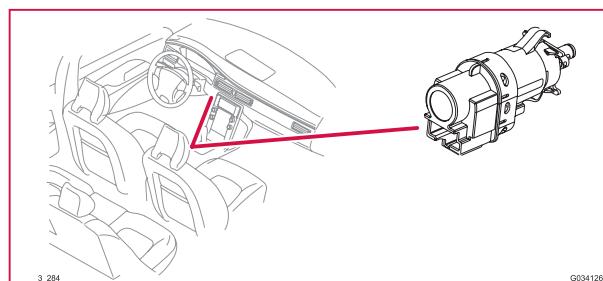

G034126


3/275 Lock contact, LH rear door

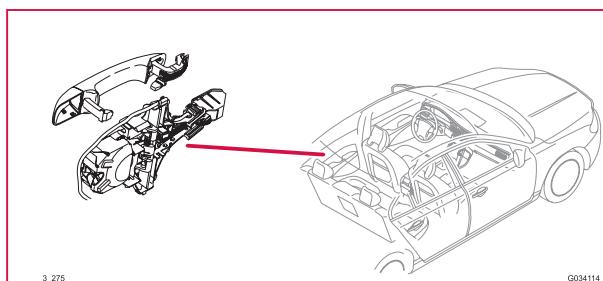

3_275

G034114


3/291 Tailgate closing switch, V70

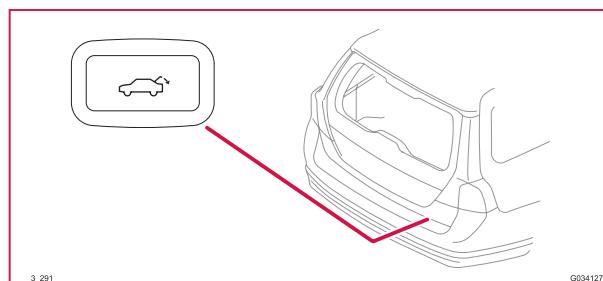

3_291

G034127


3/276 Lock contact, RH rear door

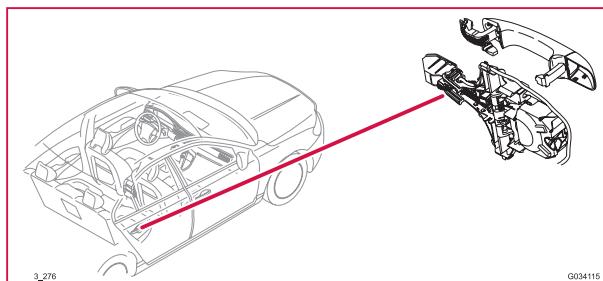

3_276

G034115


3/293 Handsfree control panel cellular phone

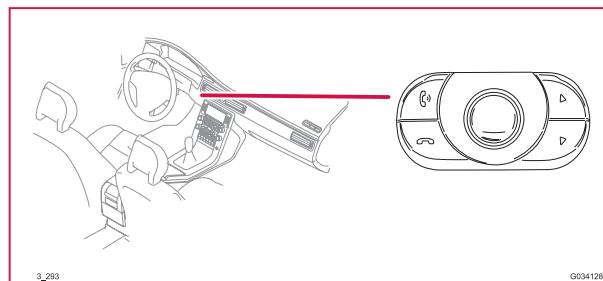

3_293

G034128


3/281 Infotainment Control Module (ICM)

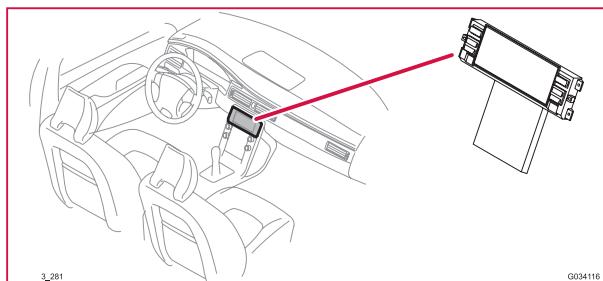

3_281

G034116

4/6 Climate Control Module (CCM)

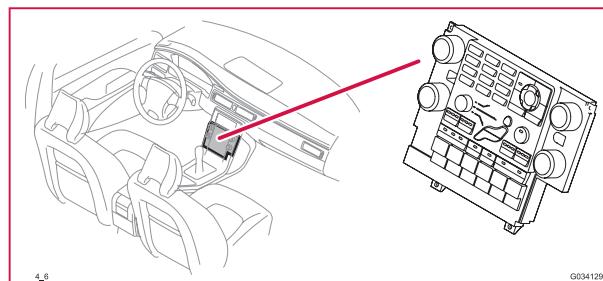


4_6

G034129


Component illustrations

4/7 - 4/46 5-Cyl.


4/7 Combustion Preheater Module (CPM)

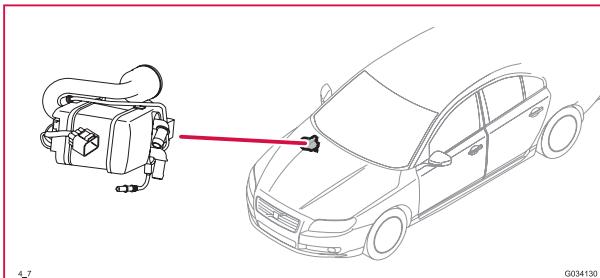


4/9 Supplemental Restraint System Module (SRS)

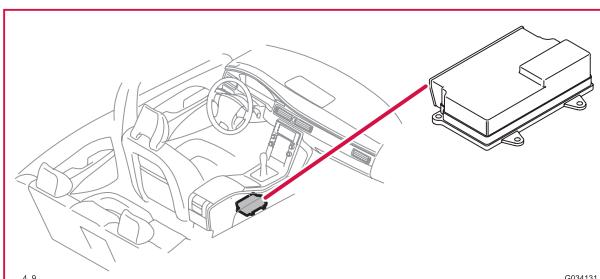


4/16 Brake Control Module (BCM)

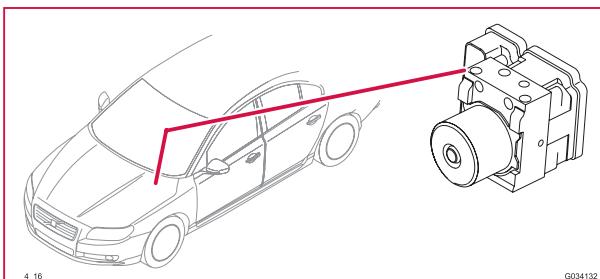


4/28 Transmission Control Module (TCM), TF-80SC

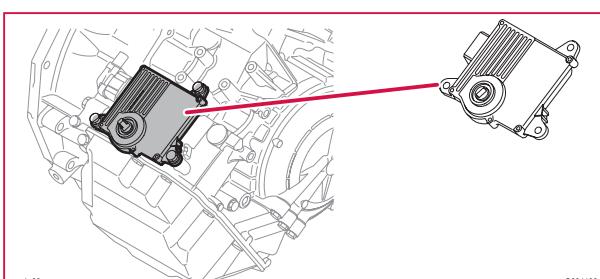


4/28 Transmission Control Module (TCM), MPS6

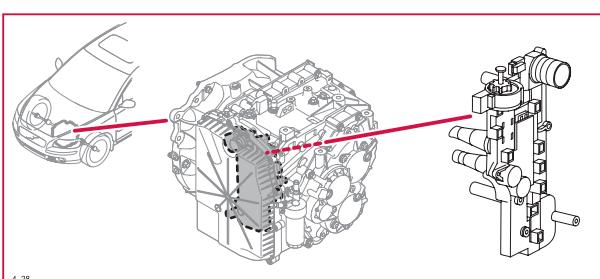


4/31 Passenger compartment fan control module

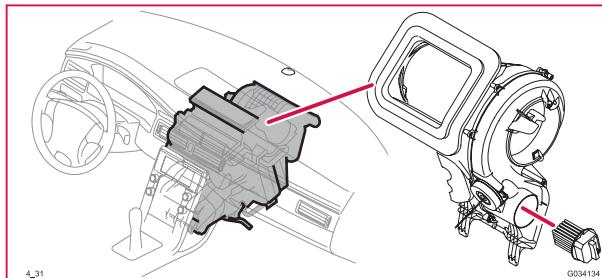


4/33 Sunroof control module

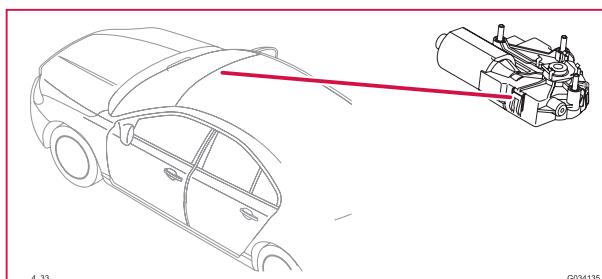


4/46 Engine Control Module (ECM), 4-Cyl.

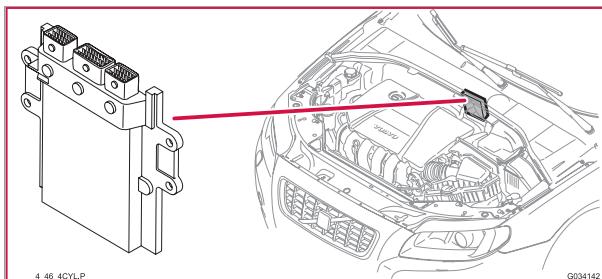

4/46 Engine Control Module (ECM), 4-Cyl. Diesel

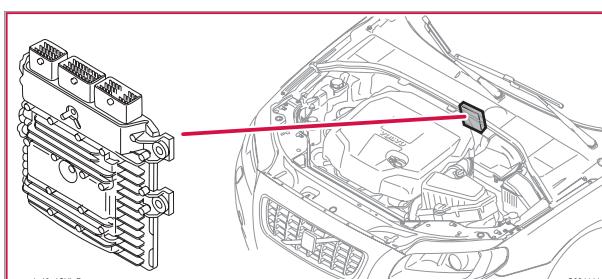


4/46 Engine Control Module (ECM), 5-Cyl.

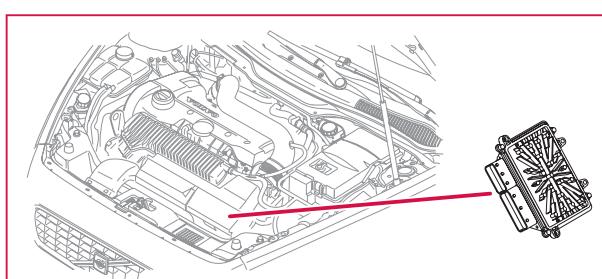


Component illustrations

4/46 - 4/56:C5


4/46 Engine Control Module (ECM),
5-Cyl. Diesel

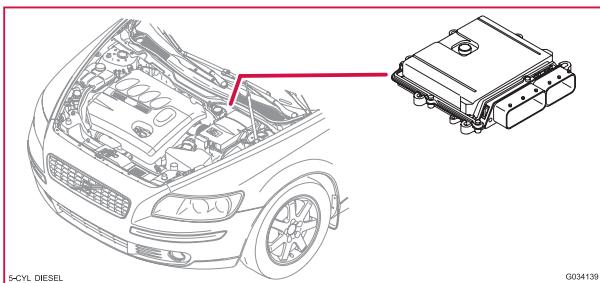


4/56:C1 Central Electronic Module (CEM)

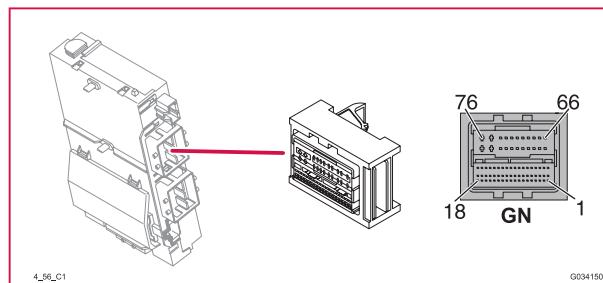


4/46 Engine Control Module (ECM), 6-Cyl.

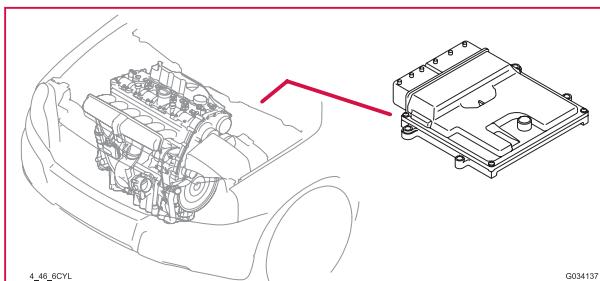


4/56:C2 Central Electronic Module (CEM)

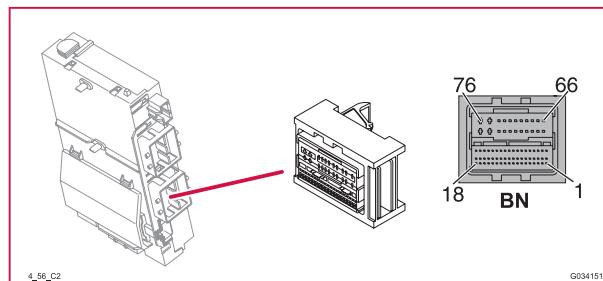


4/46 Engine Control Module (ECM), 8-Cyl.

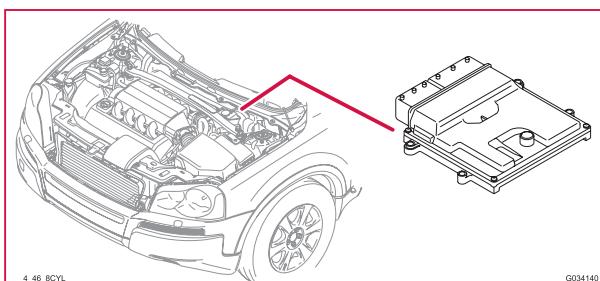


4/56:C3 Central Electronic Module (CEM)

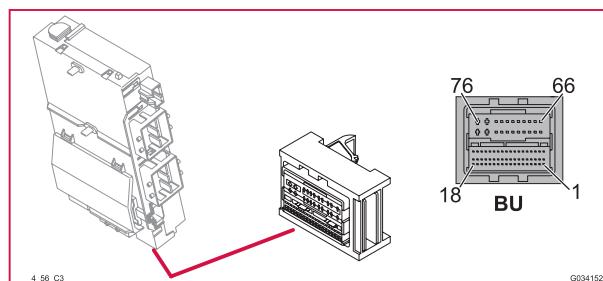


4/52 Power Seat Module (PSM)

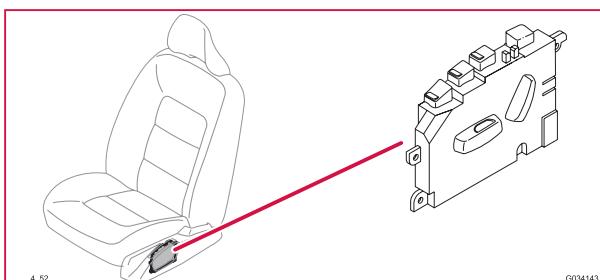


4/56:C4 Central Electronic Module (CEM)

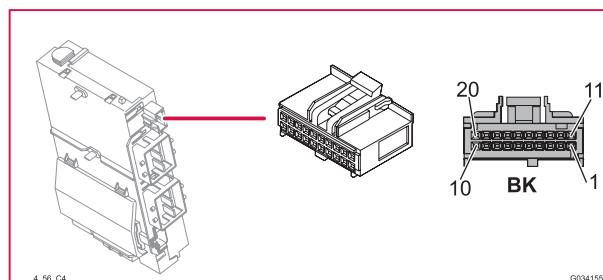

4/56 Central Electronic Module (CEM)

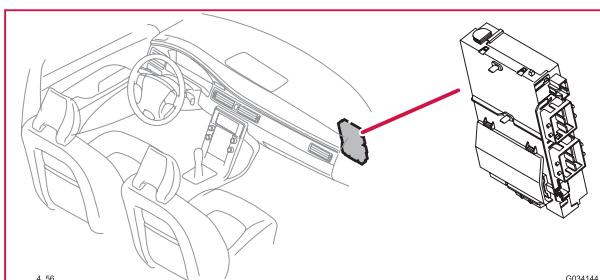


4/56:C5 Central Electronic Module (CEM)

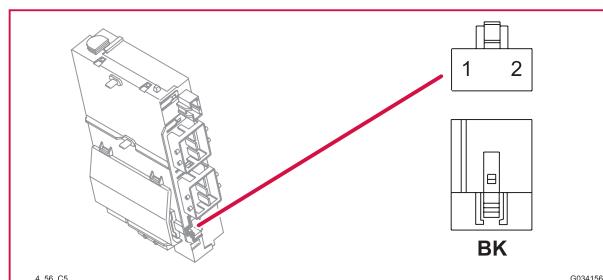


Component illustrations

4/68 - 4/99


4/68 Steering Wheel Angle Sensor Module (SAS)

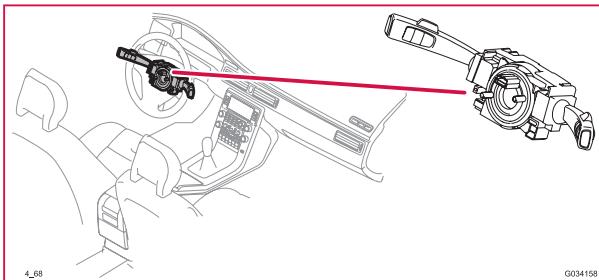


4/83 Fuel pump control module

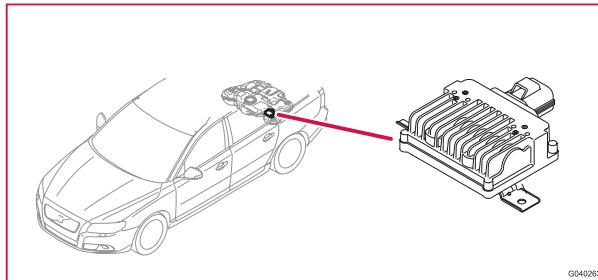


4/71 Cooling fan control module

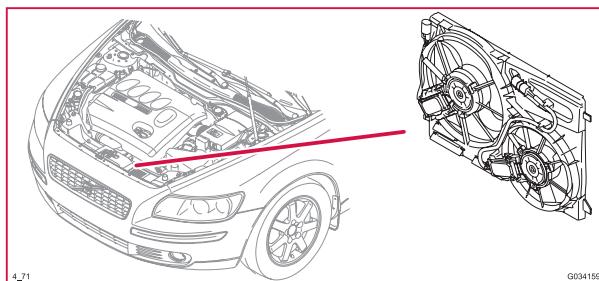


4/84 Suspension Module (SUM)

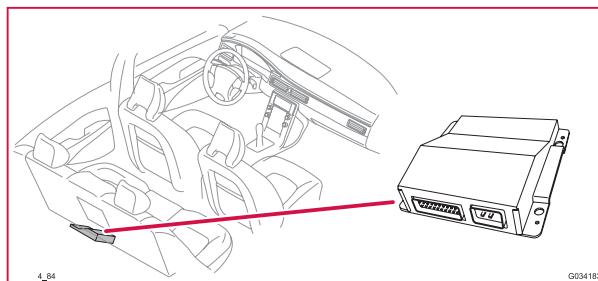


4/76 Remote control unit for garage door opener

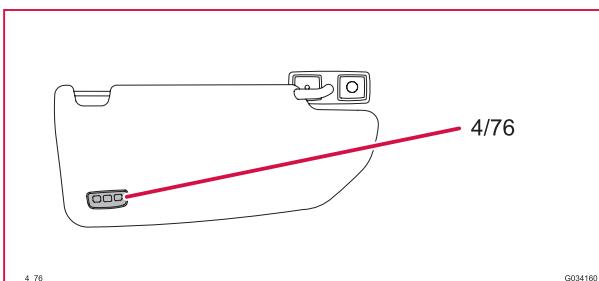


4/86 Parking Assistance Module (PAM)

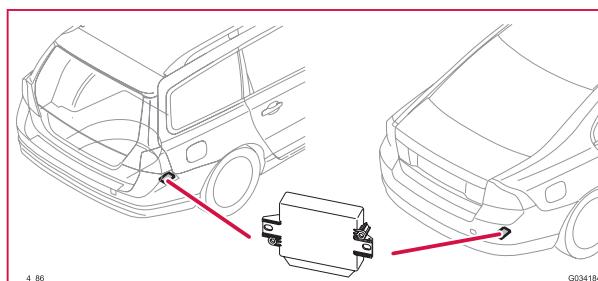


4/80 Forward Sensing Module (FSM)

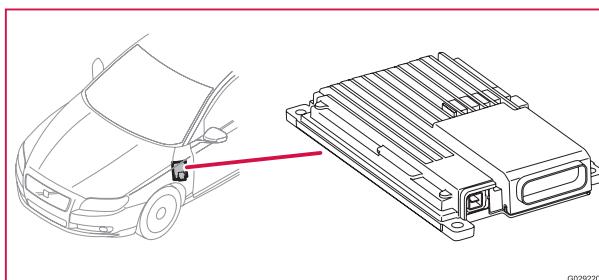


4/93 Keyless Vehicle Module (KVM)

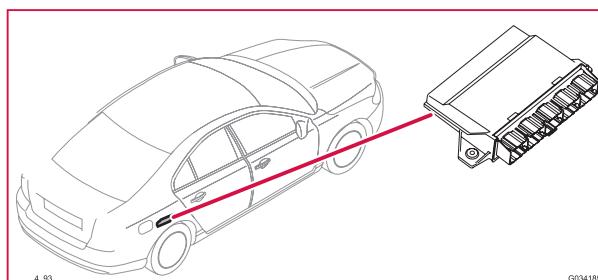

4/82 Differential Electronic Module (DEM)

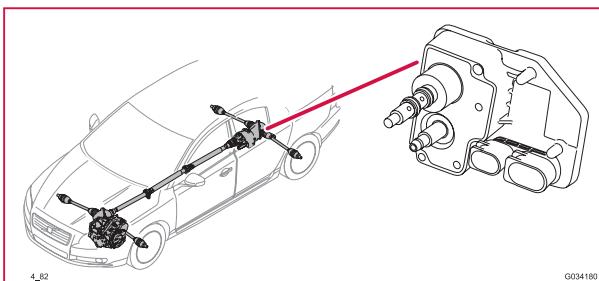


4/99 Electronic power steering control module

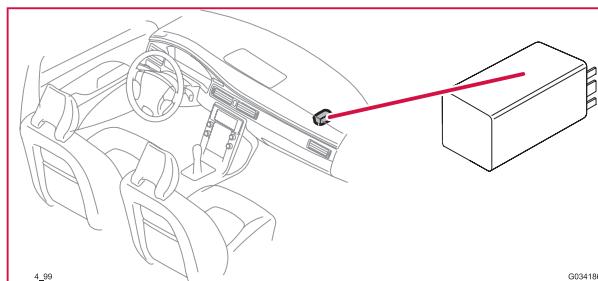


Component illustrations

4/102 - 4/119.2


4/102 Steering Column Lock Module (SCL)

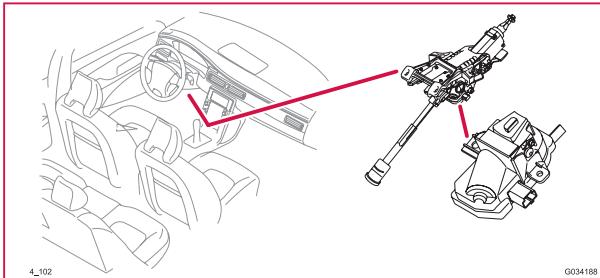


4/115 Park Brake Module (PBM)

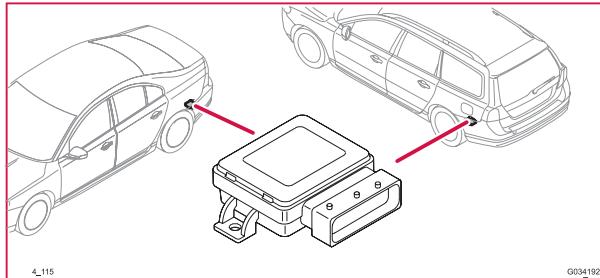


4/106 Control module, parking heater remote start

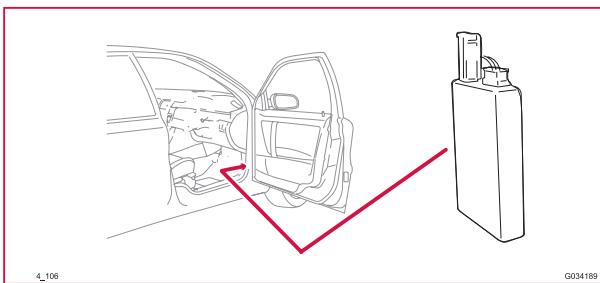


4/116 Power Operated Tailgate Module (POT), V70

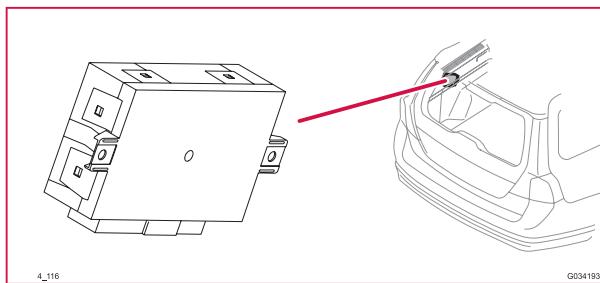


4/109 Glow plug control module

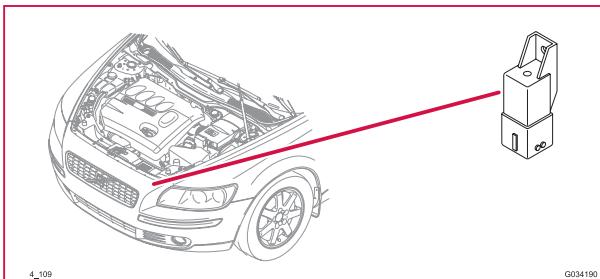


4/118 Headlamp Control Module (HCM)

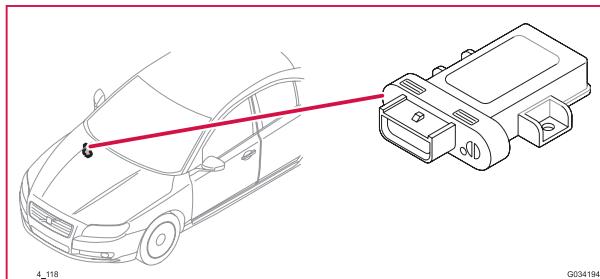


4/110 Trailer Module (TRM)

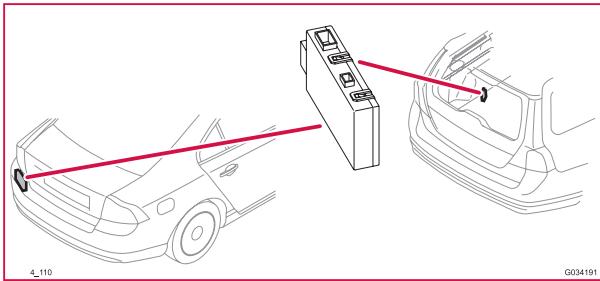


4/119 Remote Keyless Entry (RKE)

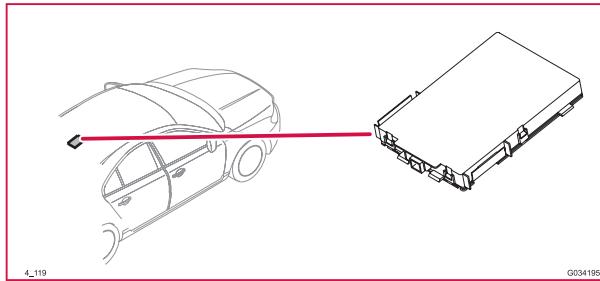

4/111 Additive Dosing Module (ADM)

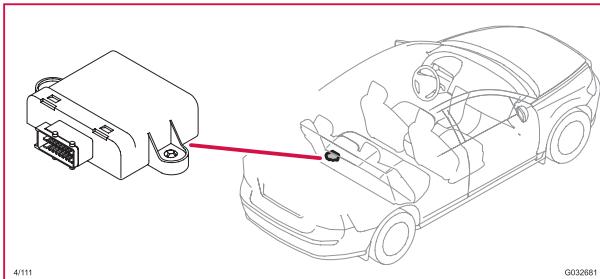


4/119.2 Remote Receiver Module (RRX)

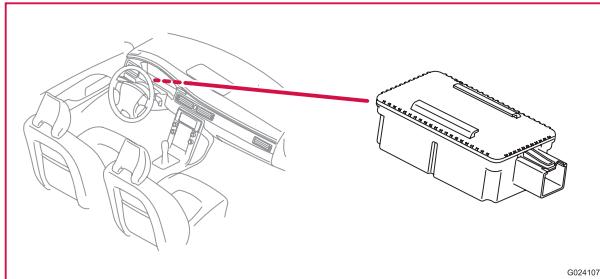


Component illustrations

4/120 - 6/17


4/120 Parking Assistance Camera module (PAC)

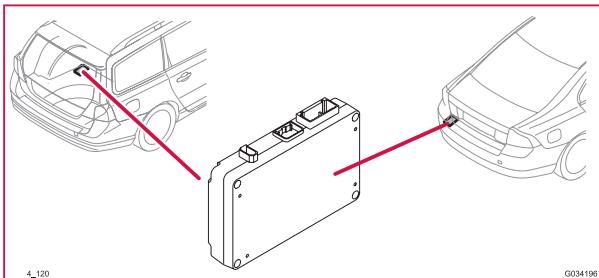


4/121 Cooling fan control module 2

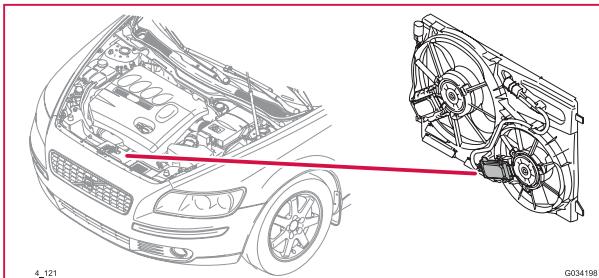


4/124 Accessory USB unit (AUU)

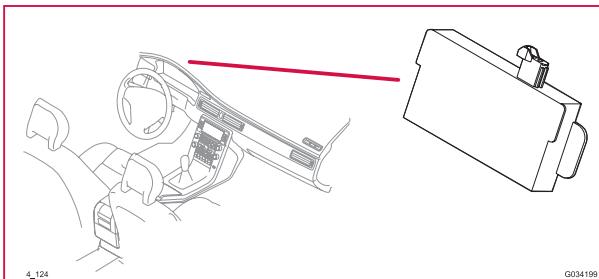


4/131 Control module back massage left

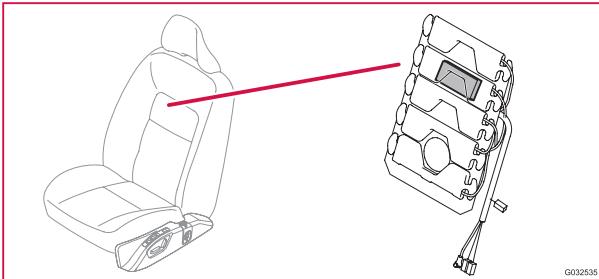


4/133 Control module back massage right

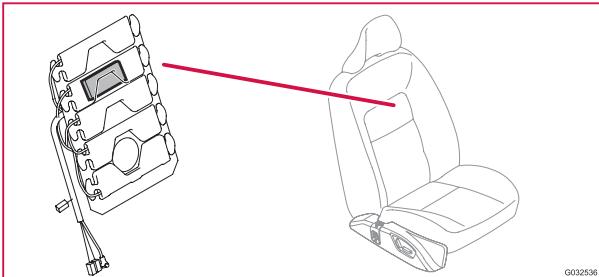


5/1 Driver Information Module (DIM)

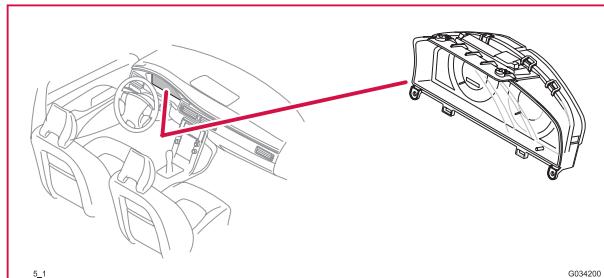


6/1 Wiper Motor Module (WMM)

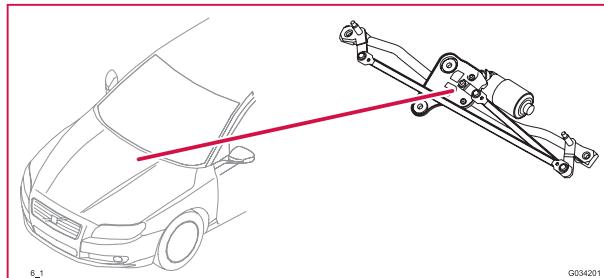


6/8 Lock motor central locking, trunk lid/tailgate, S80

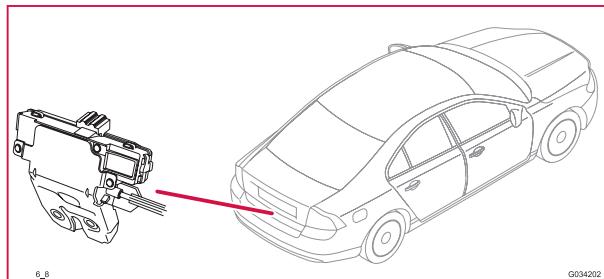

6/16 Driver seat motor, backrest angle

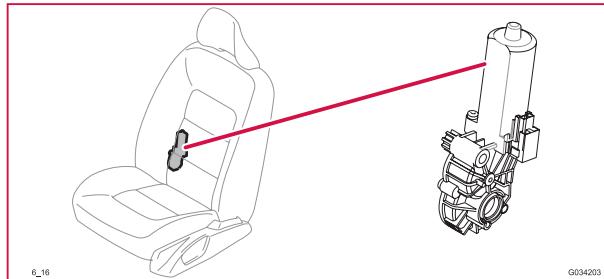


6/17 Driver seat motor, up/down front edge

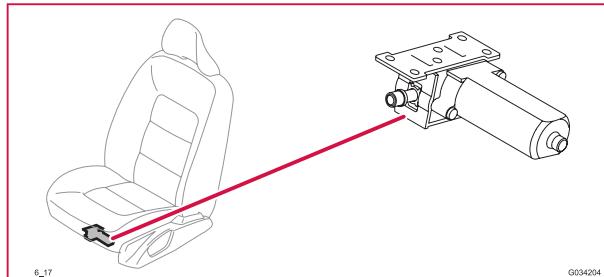


Component illustrations

6/18 - 6/35


6/18 Driver seat motor, up/down rear edge

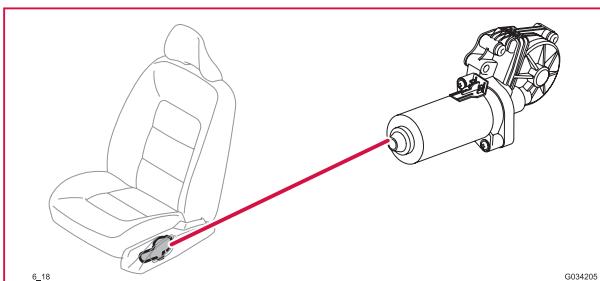


6/19 Driver seat motor, forward/backward

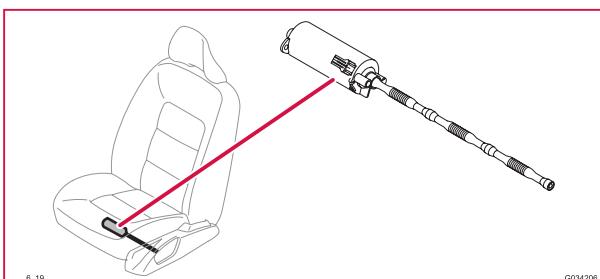


6/20 Passenger seat motor, forward/backward

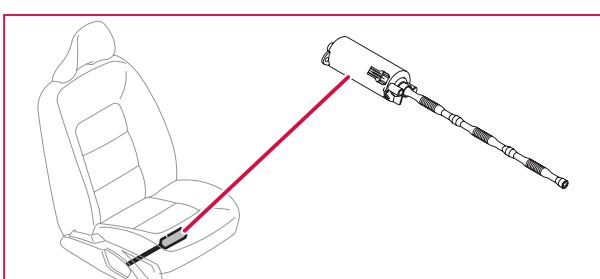


6/25 Starter motor

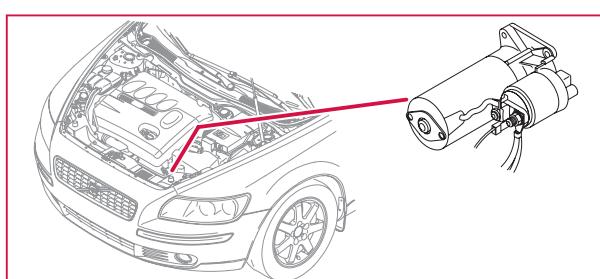


6/26 Alternator Control Module (ACM)

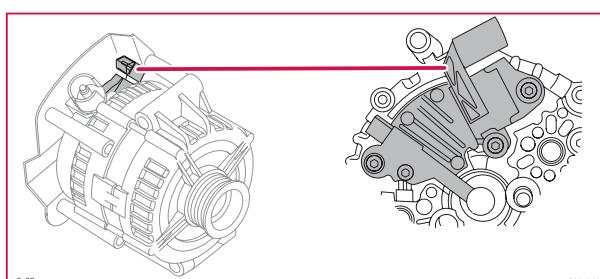


6/28 Motor, passenger compartment fan

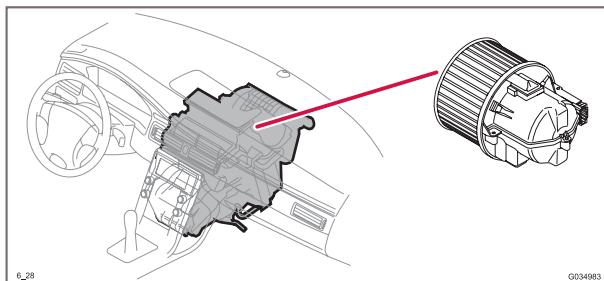


6/32 Rear window wiper motor, V70

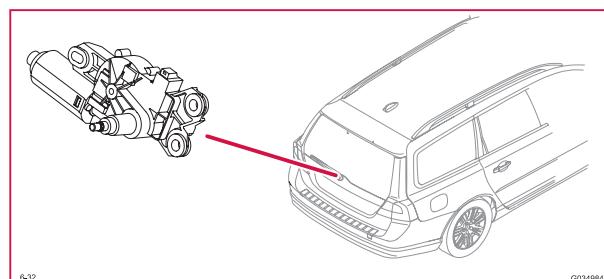


6/33 Fuel pump

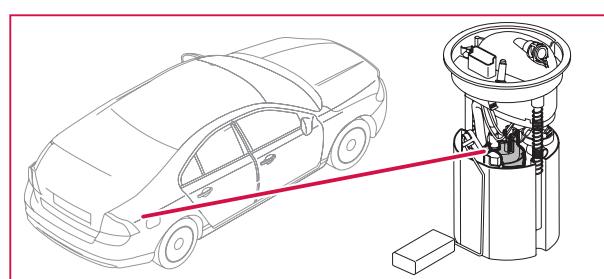

6/34 Additive tank with pump and level sensor

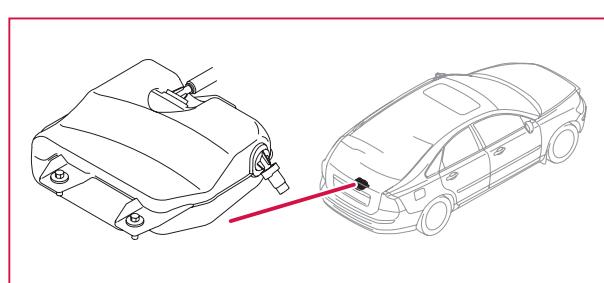


6/35 Fuel pump, auxiliary heater

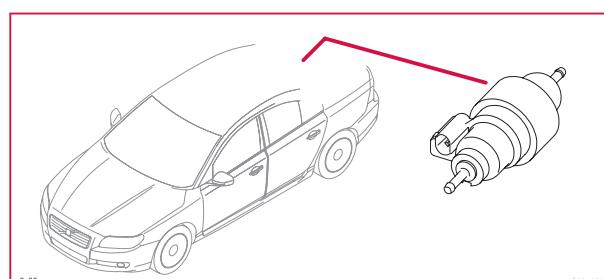

Component illustrations

6/36 - 6/59


6/36 Lock motor, central locking, LH front door

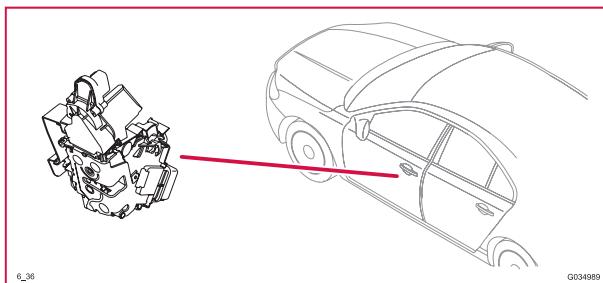

6_36

G034989


6/55 Lock motor, central locking, RH front door

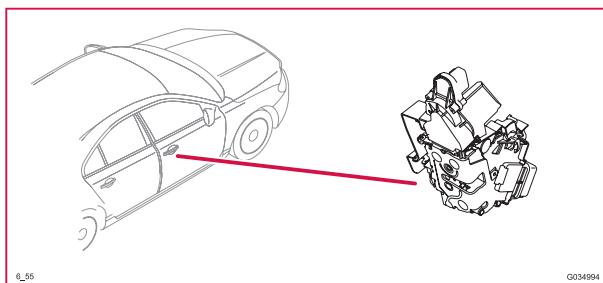

6_55

G034994


6/37 Lock motor, fuel filler cover

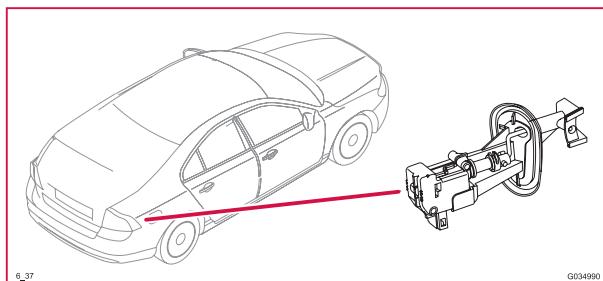

6_37

G034990


6/38 Left-hand headlight level adjustment motor

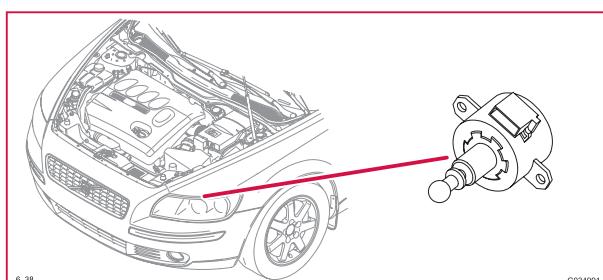

6_38

G034991


6/39 Right-hand headlight level adjustment motor

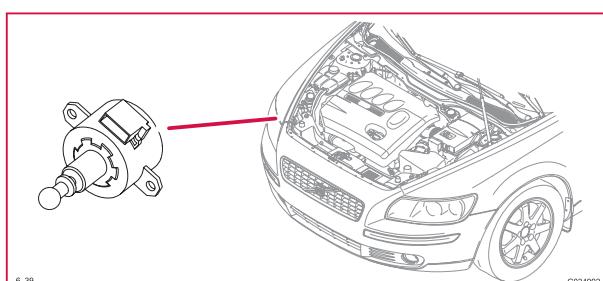

6_39

G034992


6/48 Damper Motor Module (DMM), recirculation

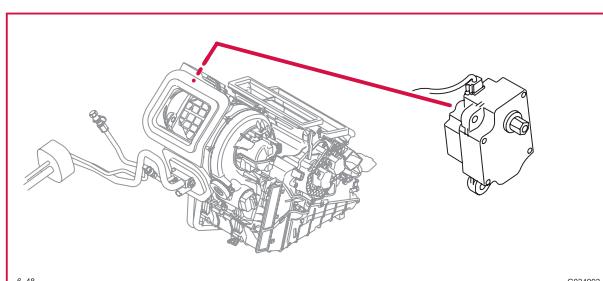

6_48

G034993

6/59 Motor, rear left power window

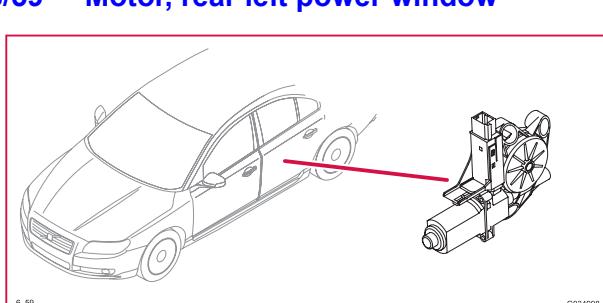


6_59

G034995

Component illustrations


6/60 - 6/73

6/60 Motor, front passenger door power window

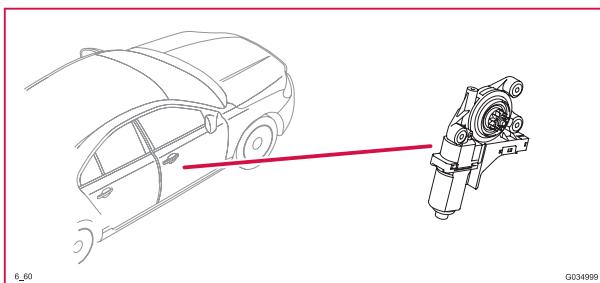


6_60 G034999

6/65 Passenger seat motor, up/down front edge

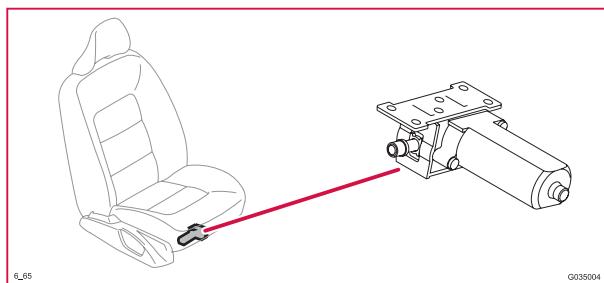


6_65 G035004

6/61 Motor, rear right power window

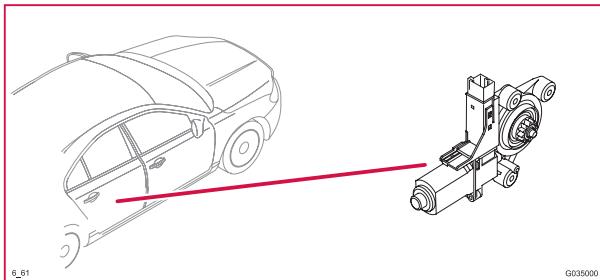


6_61 G035001

6/66 Passenger seat motor, up/down rear edge

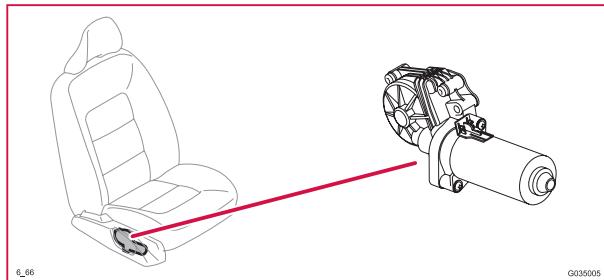


6_66 G035005

6/62 Power door mirror, left

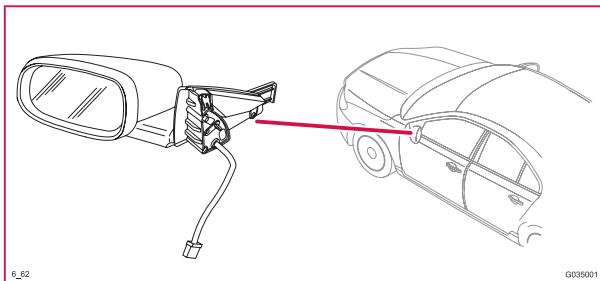


6_62 G035001

6/67 Pump, fuel leakage control

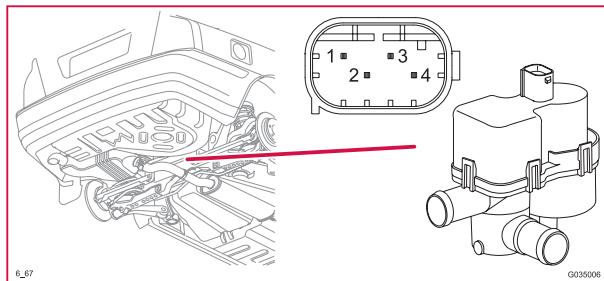


6_67 G035008

6/63 Power door mirror, right

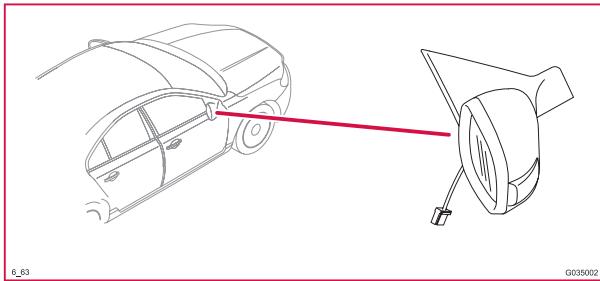


6_63 G035002

6/71 Valve, speed-dependent power steering

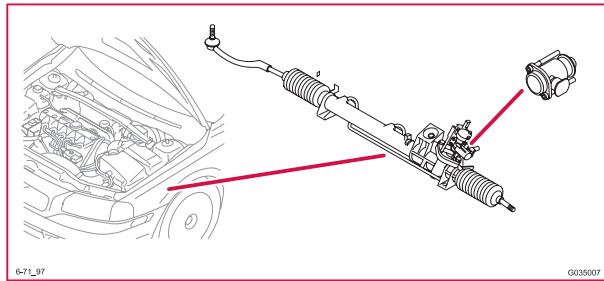


6-71_87 G035007

6/64 Passenger seat motor, backrest angle

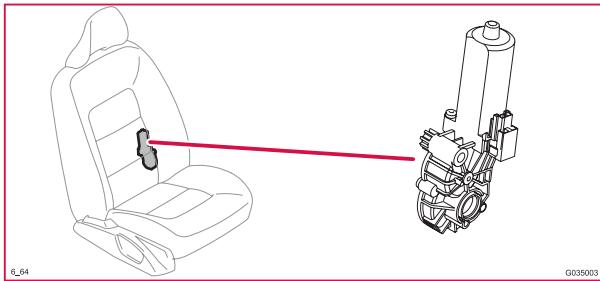

6_64 G035003

6/73 Coolant pump

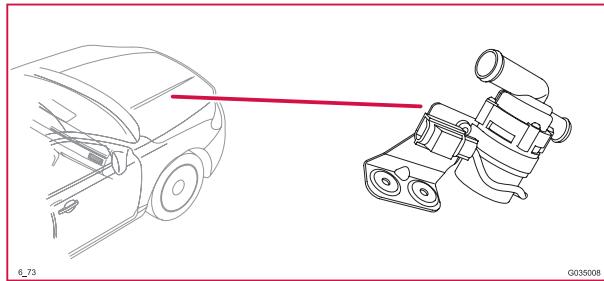


6_73 G035008


Component illustrations

6/95 - 6/120 5-Cyl.


**6/95 Damper Motor Module (DMM),
temperature, left side**

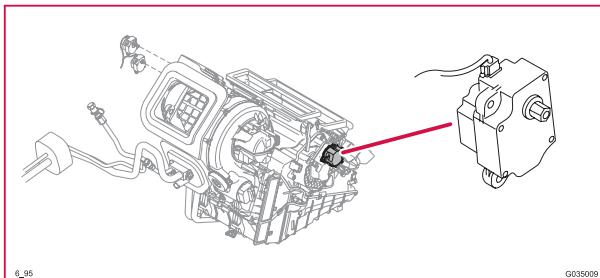


**6/96 Damper Motor Module (DMM),
temperature, right side**

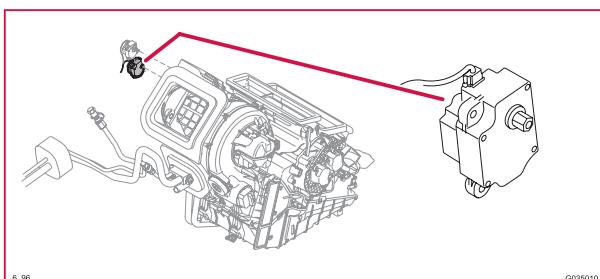


**6/103 Damper Motor Module (DMM),
floor/ventilation**

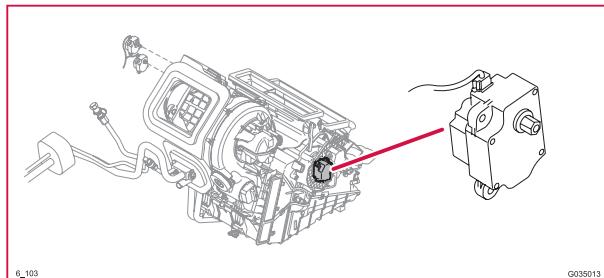


**6/104 High pressure headlight washer
motor**

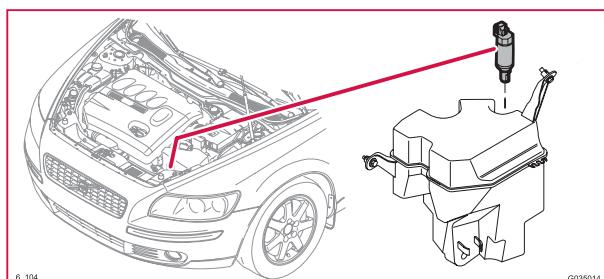


6/99 Engine EGR

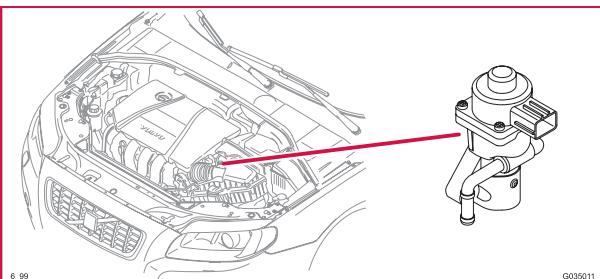


6/114 Vacuum pump

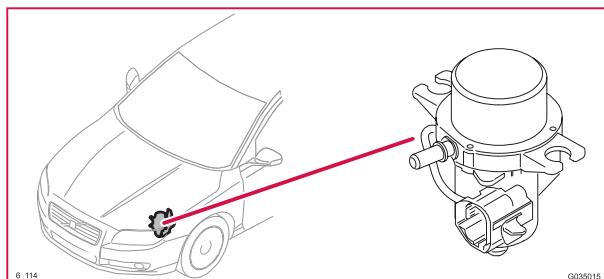


6/99 Engine EGR, 4-Cyl. Diesel

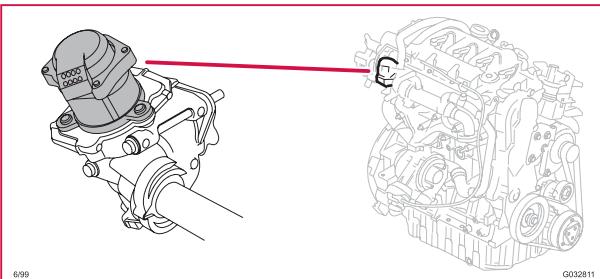


6/120 Throttle unit, 4-Cyl.

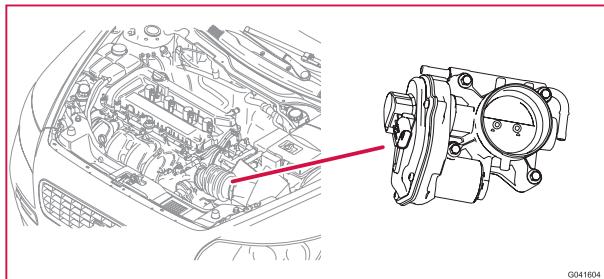

**6/102 Damper Motor Module (DMM),
defroster**

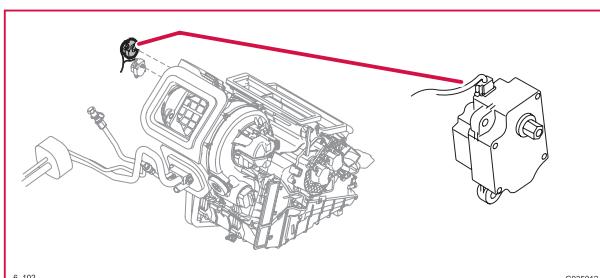


6/120 Throttle unit, 5-Cyl.

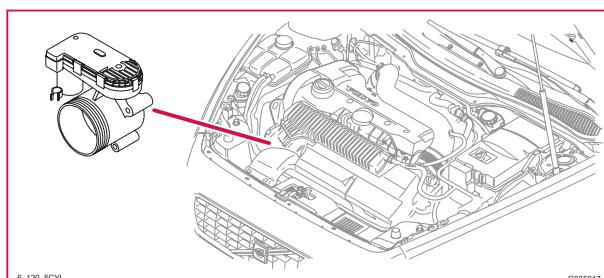


Component illustrations

6/120 6-Cyl. - 6/146


6/120 Throttle unit, 6-Cyl.

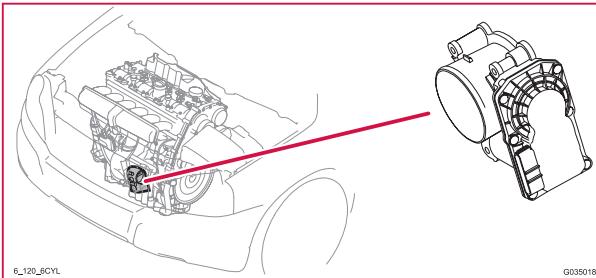


6/140 Lower actuating motor, intake manifold

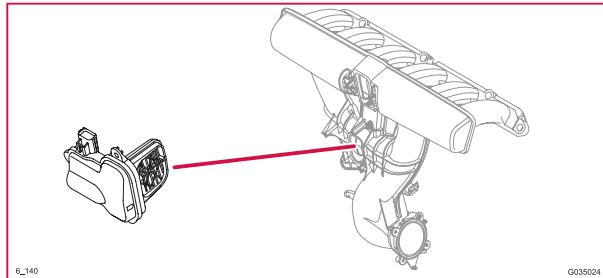


6/120 Throttle unit, 8-Cyl.

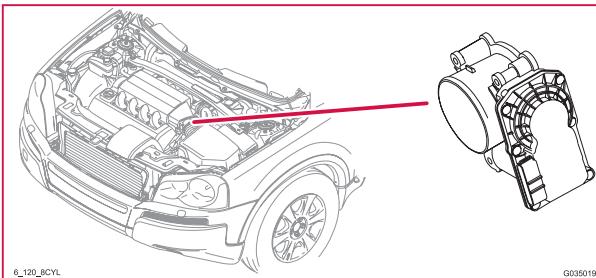


6/143 Regulator motor, Turbo

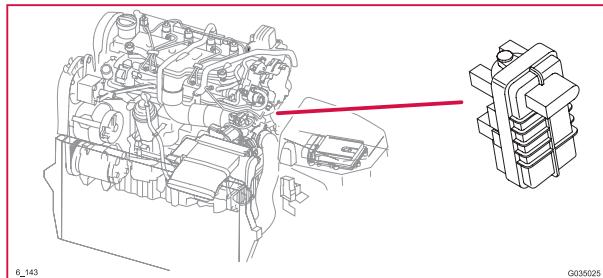


6/120 Throttle unit, Diesel

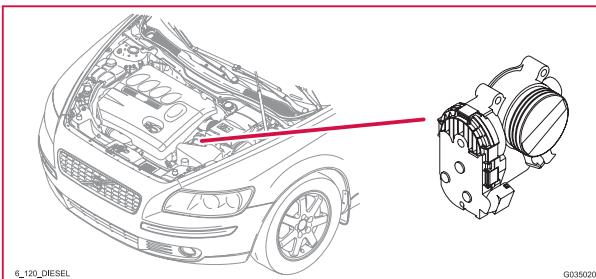


6/144 Telescopic nozzle, left

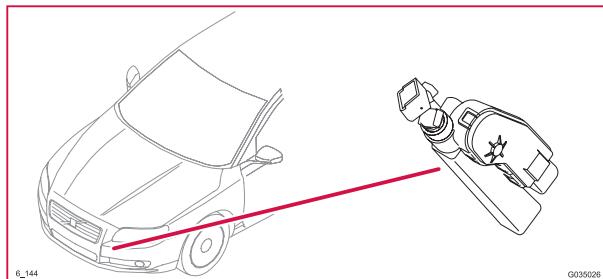


6/127 Washer motor

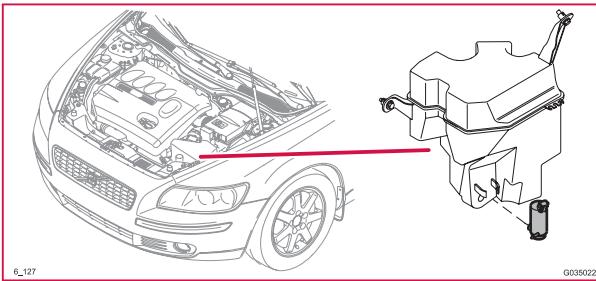


6/145 Telescopic nozzle, right

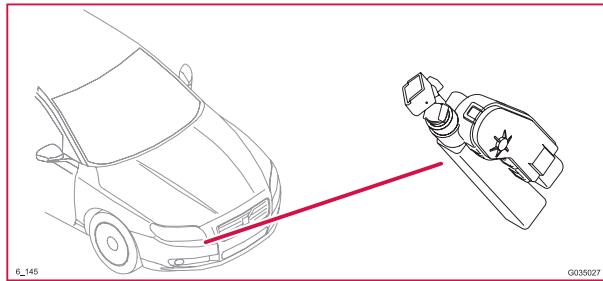

6/139 Upper actuating motor, intake manifold

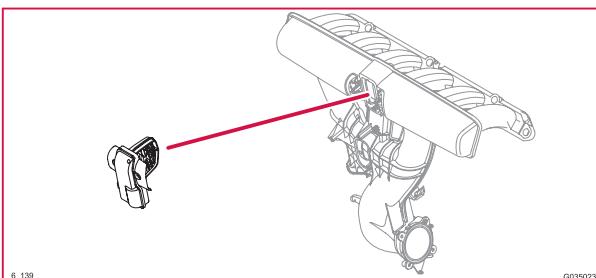


6/146 Lock motor, rear left brake disc

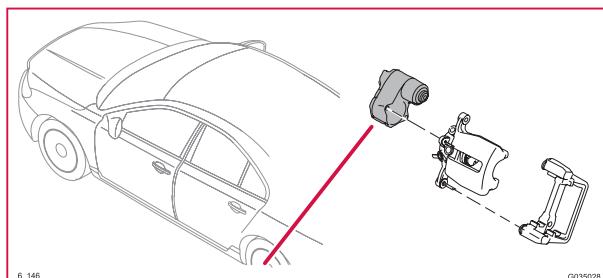


Component illustrations

6/147 - 7/8


6/147 Lock motor, rear right brake disc

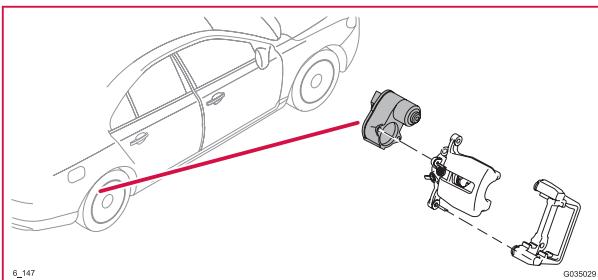


6/148 Hydraulic pump trunk lid/tailgate operation, V70

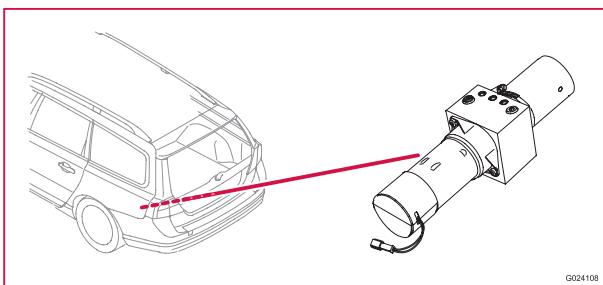


6/149 Tailgate closing motor, V70

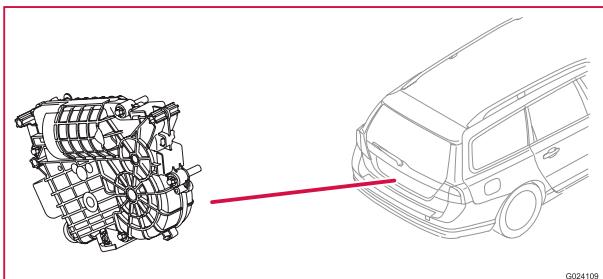


6/164 Electrical power steering module (EPS)

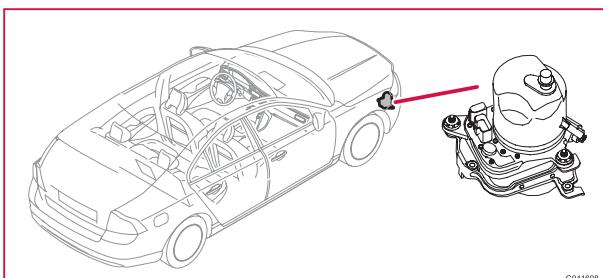


6/169 Left pump back massage

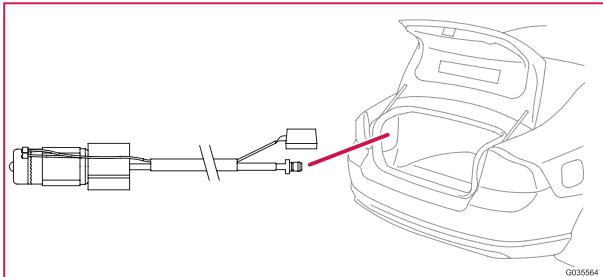


6/170 Right pump back massage

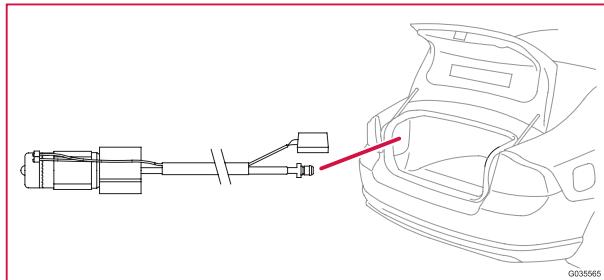


7/4 Brake fluid level sensor

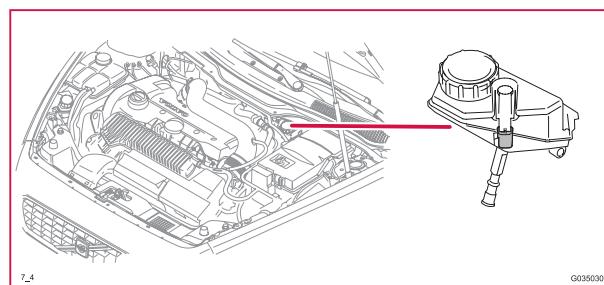


7/5 Washer fluid level sensor

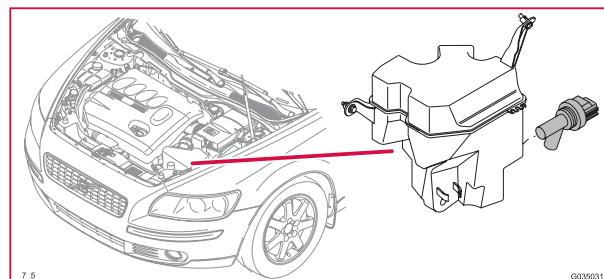

7/6 Oil pressure monitor

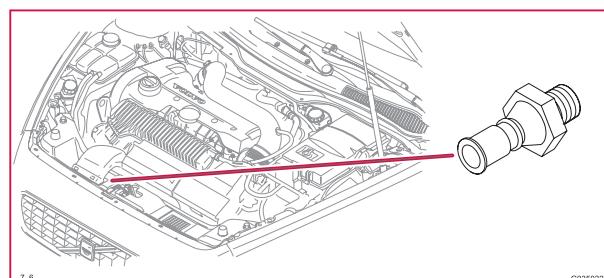


7/8 Pressure sensor, climate control system

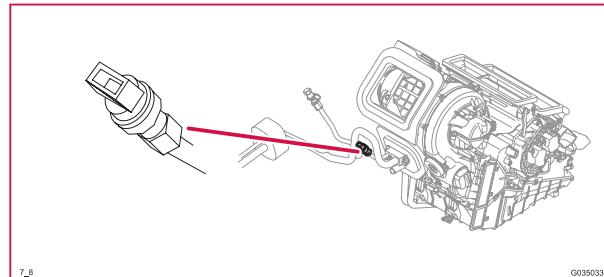


Component illustrations

7/10 - 7/21


7/10 Interior temperature sensor

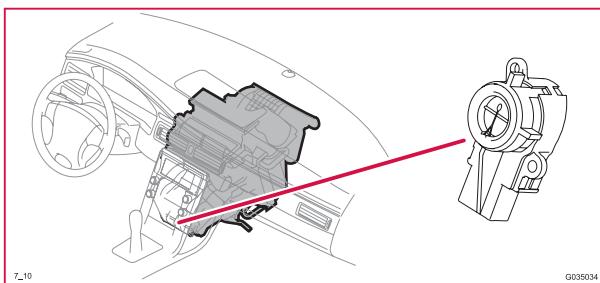


7/12 Solar sensor, twilight sensor and indicator alarm

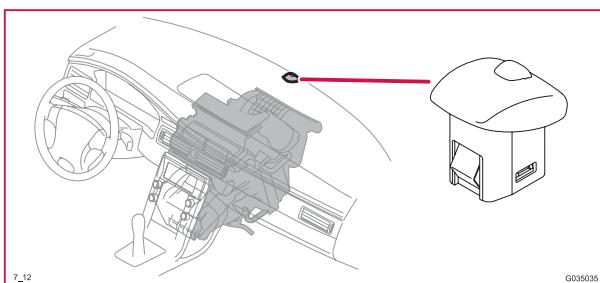


7/15 Front heated oxygen sensor, 4-Cyl.

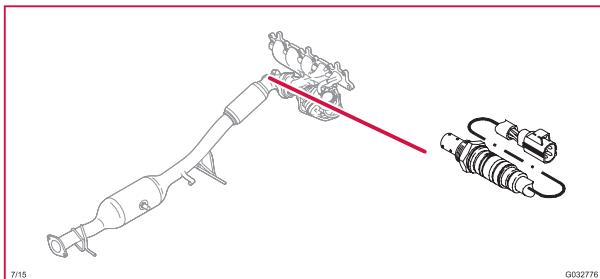


7/15 Front heated oxygen sensor, 5-Cyl.

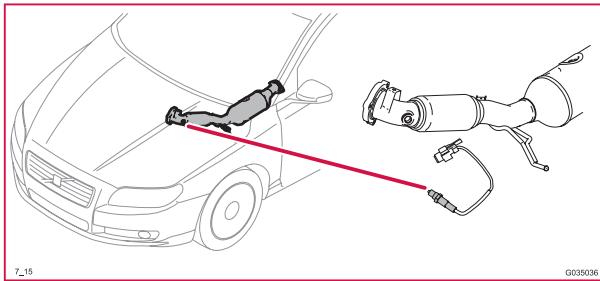


7/15 Front oxygen sensor, bank 1, 6-Cyl.

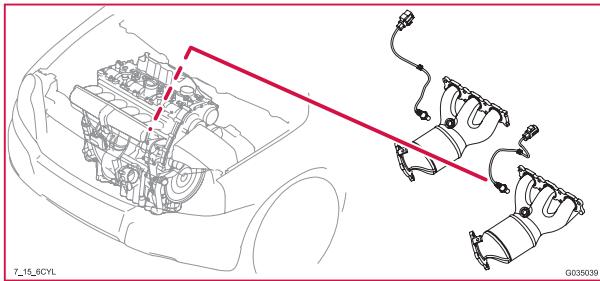


7/15 Front heated oxygen sensor, bank 2 8-Cyl.

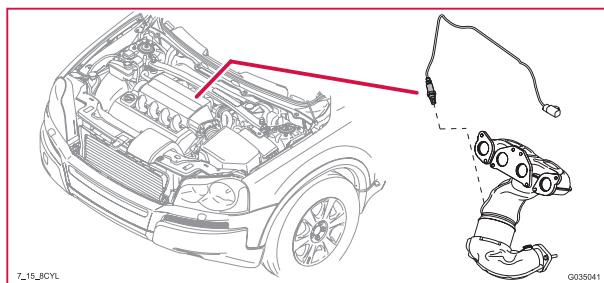


7/15 Front heated oxygen sensor, Diesel

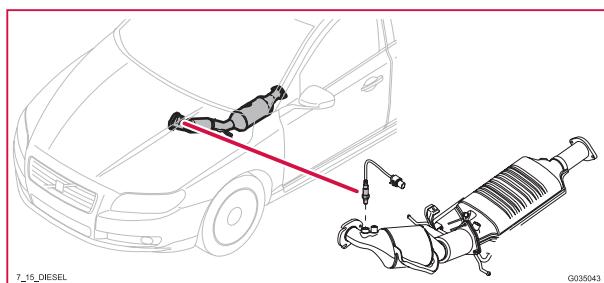


7/16 Sensor, coolant temperature

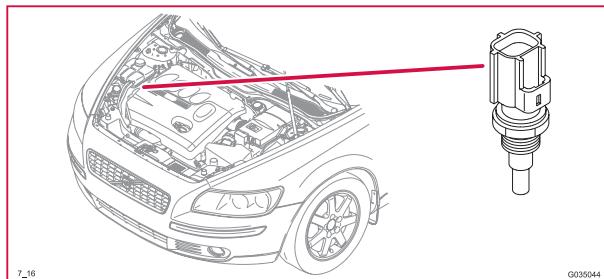

7/17 Mass airflow sensor (MAF)

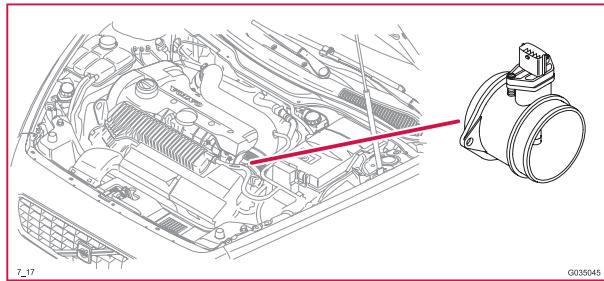


7/21 Camshaft position sensor, 4-Cyl. Diesel

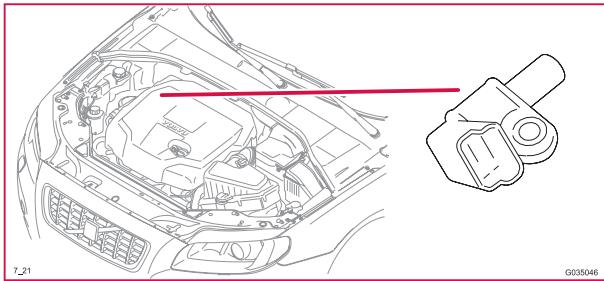


Component illustrations

7/23 - 7/32


7/23 Rear knock sensor

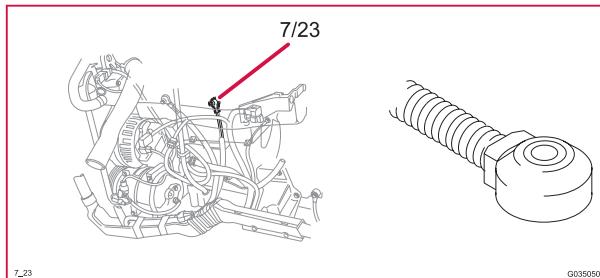


7/23 Rear knock sensor, 8-Cyl.

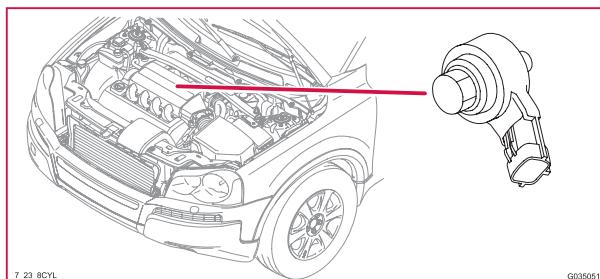

7/24 Front knock sensor

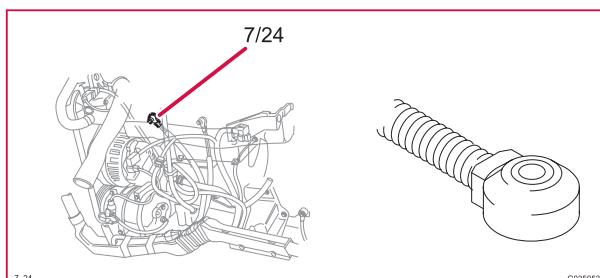


7/24 Front knock sensor, 8-Cyl.

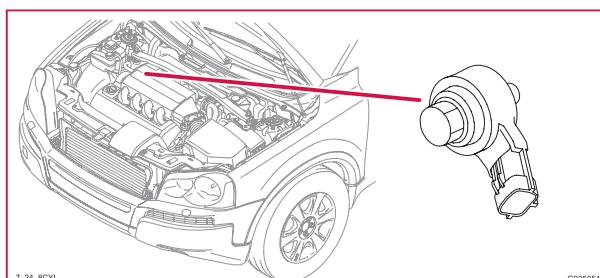


7/25 Impulse sensor, 5-Cyl. & Diesel


7/25 Impulse sensor, 6-Cyl.

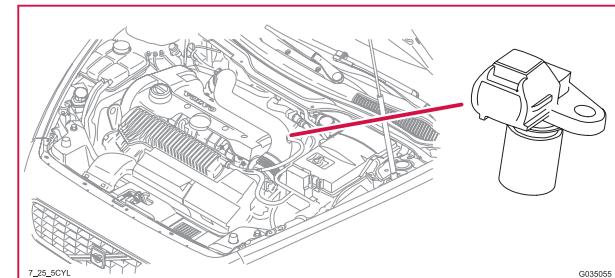


7/25 Impulse sensor, 6-Cyl.

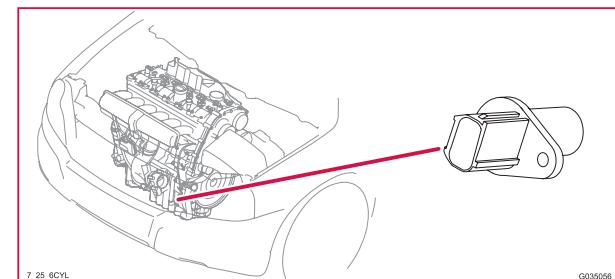

7/25 Impulse sensor, 8-Cyl.


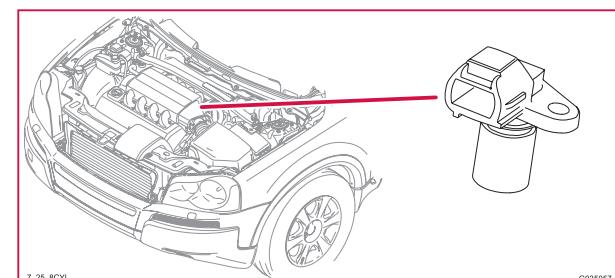


7/31 Sensor ABS, front left

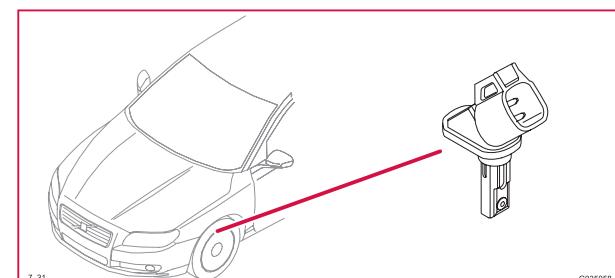

7/25 Impulse sensor, 4-Cyl.


7/32 Sensor ABS, front right

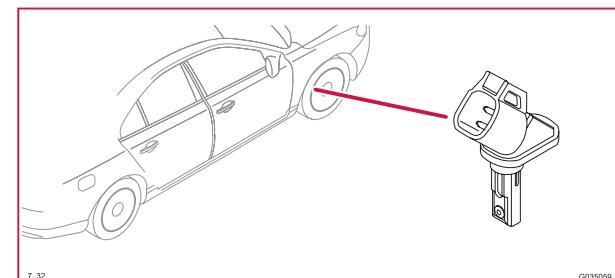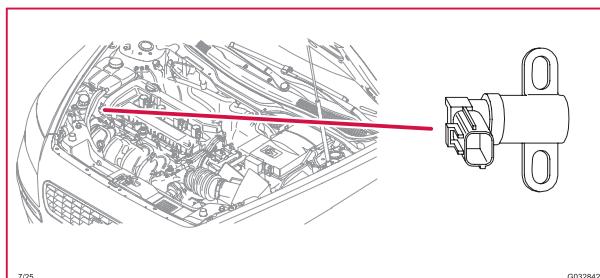


Component illustrations

7/35 - 7/69


7/35 Oil level sensor, 5-Cyl. Diesel Euro5

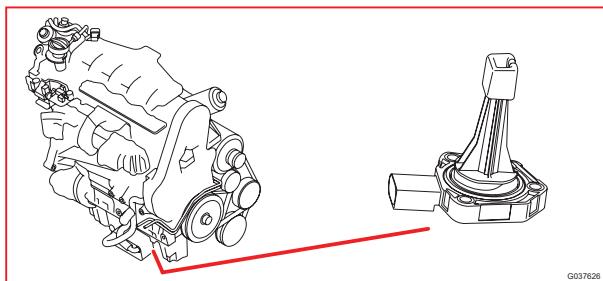


7/56 Sensor ABS, rear left

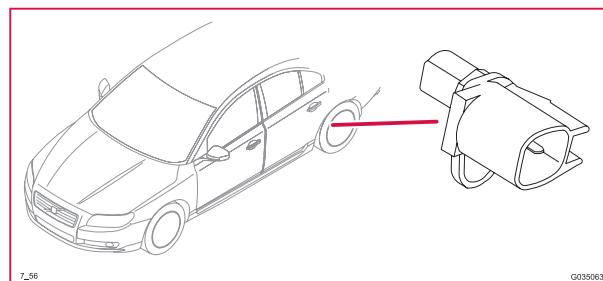


7/35 Oil level sensor, 8-Cyl.

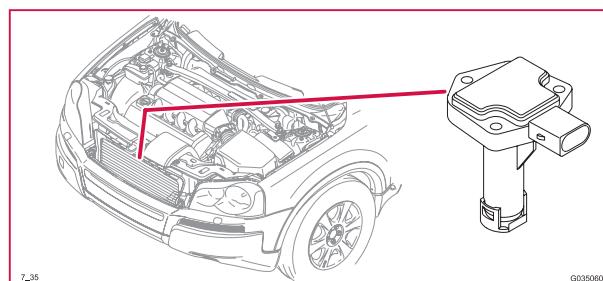


7/57 Right-hand rear ABS sensor

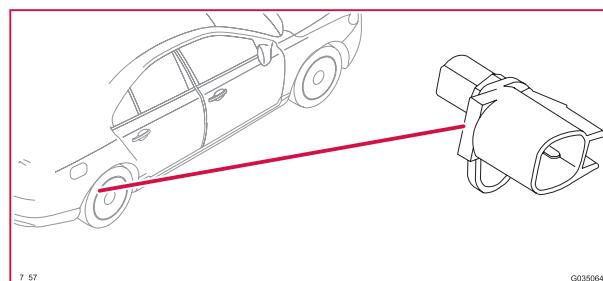


7/41 Temperature sensor evaporator

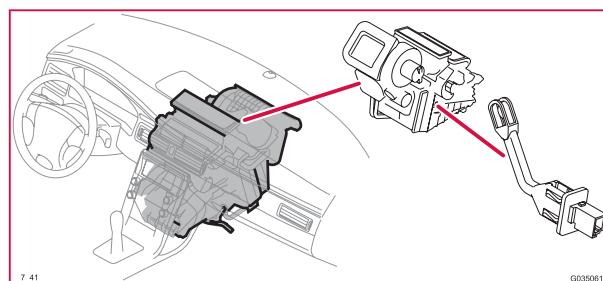


7/61 Input speed sensor

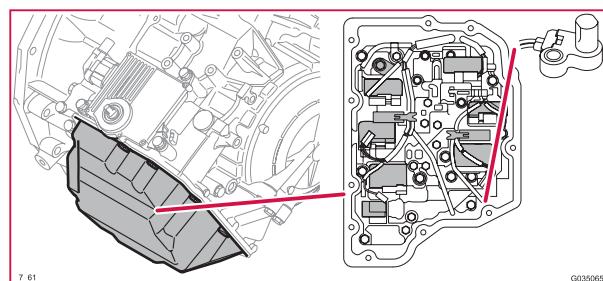


7/51 Accelerator pedal sensor

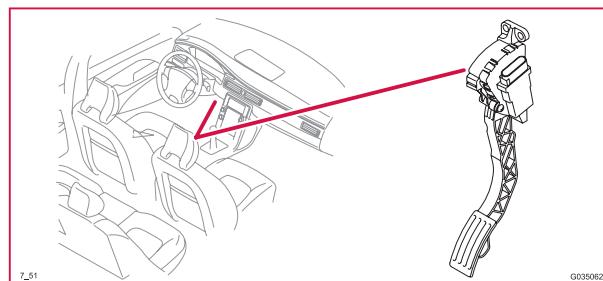


7/62 Output speed sensor

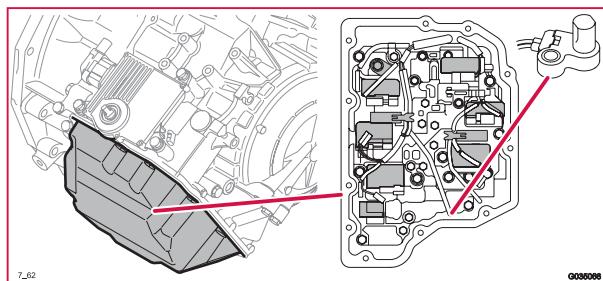

7/54 Position sensor intake throttle body

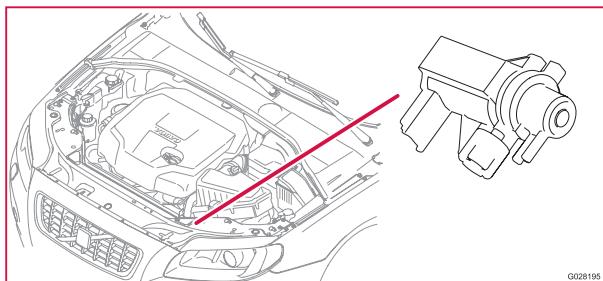


7/69 Sensor outdoor temperature

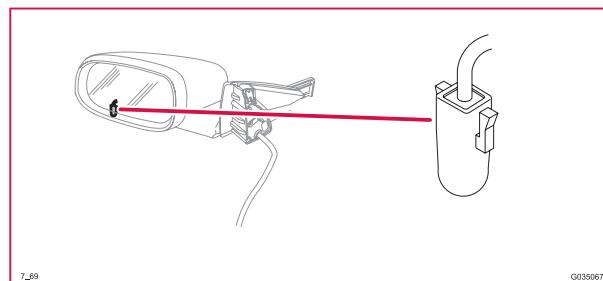


Component illustrations

7/71 - 7/87


7/71 Sensor boost pressure

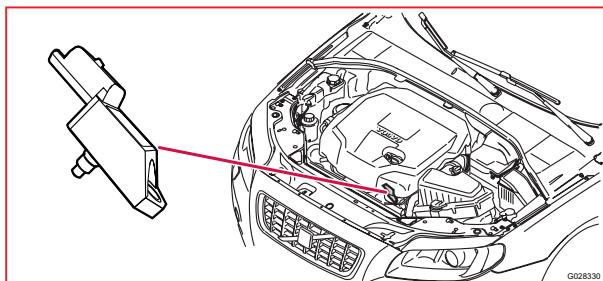


7/73 Coolant level sensor

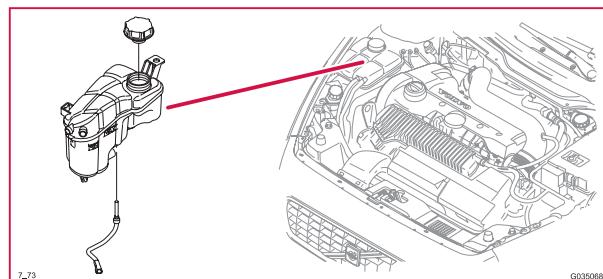


7/74 Fluid temperature sensor, automatic transmission

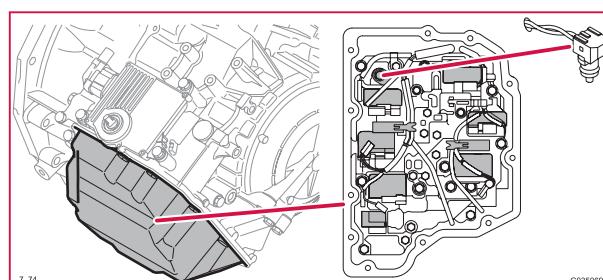


7/77 Air temperature sensor intake

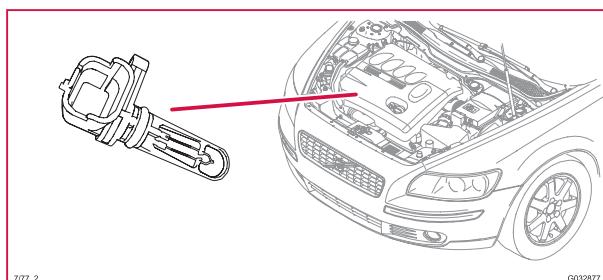


7/81 Pressure sensor intake manifold, 5-Cyl. Diesel

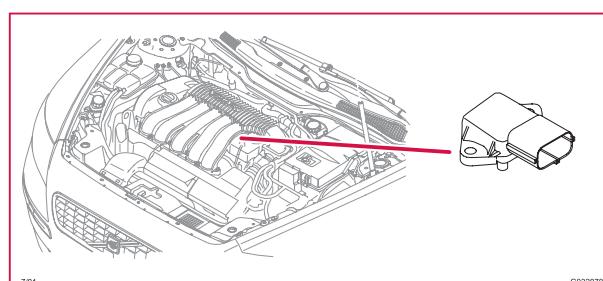


7/81 Pressure sensor, intake manifold, 6-Cyl.

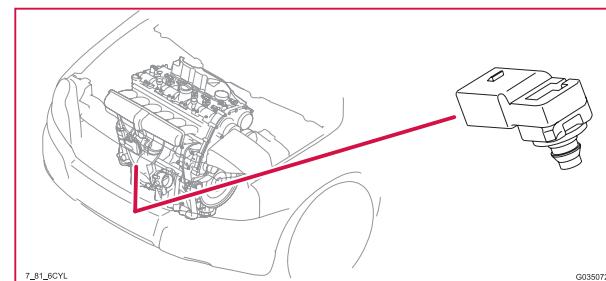


7/81 Pressure sensor, intake manifold, 8-Cyl.

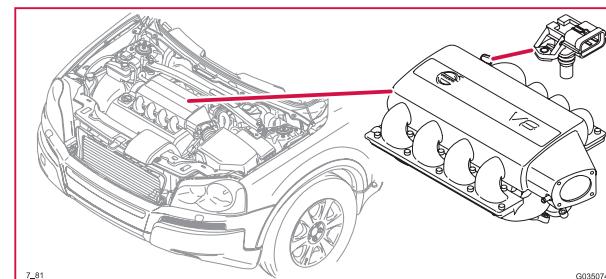


7/82 Rear oxygen sensor, bank 1, 6-Cyl.

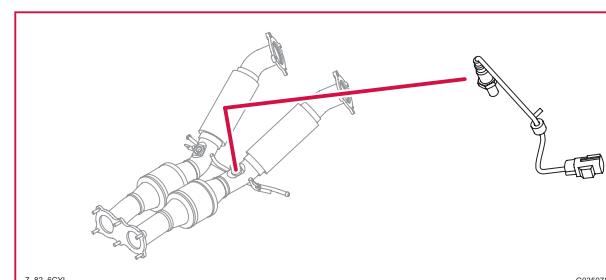

7/82 Front oxygen sensor, bank 1, 8-Cyl.

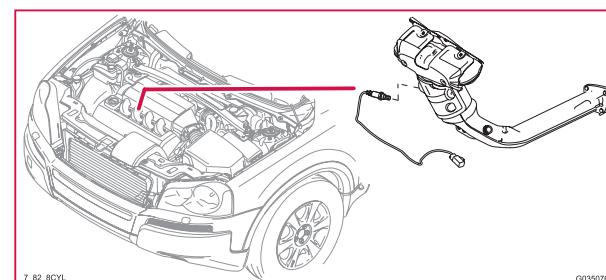


7/87 Acceleration sensor, Four-C, front left

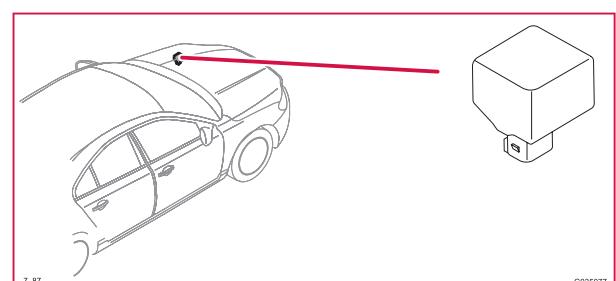


Component illustrations

7/88 - 7/104


7/88 Acceleration sensor, Four-C, front right

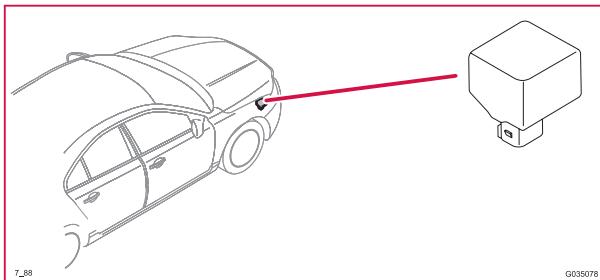


7/103 Rear heated oxygen sensor, 5-Cyl.

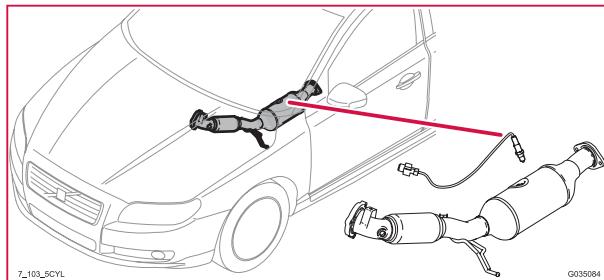


7/89 Acceleration sensor, Four-C, rear left

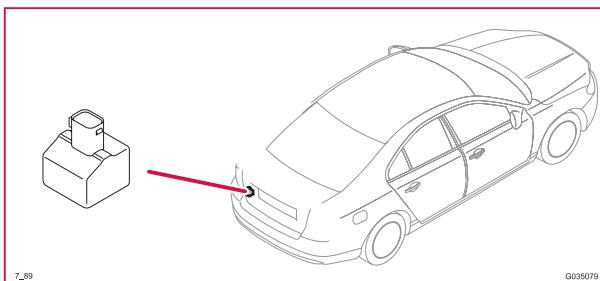


7/103 Front oxygen sensor, bank 2, 6-Cyl.

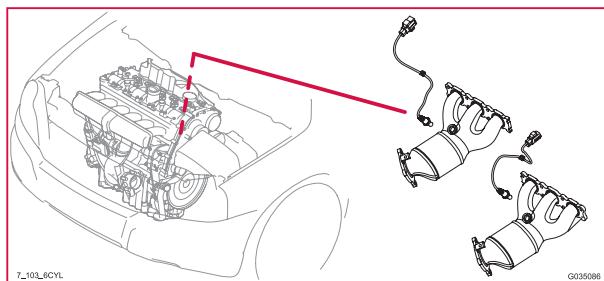


7/91 Steering angle sensor

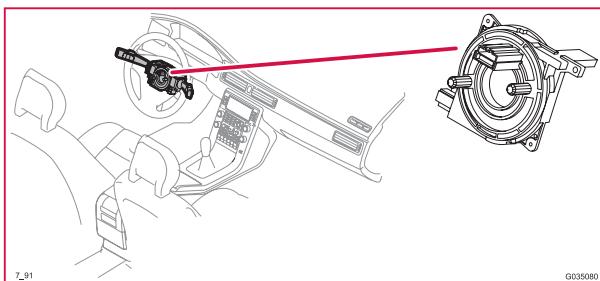


7/103 Rear oxygen sensor, bank 2, 8-Cyl.

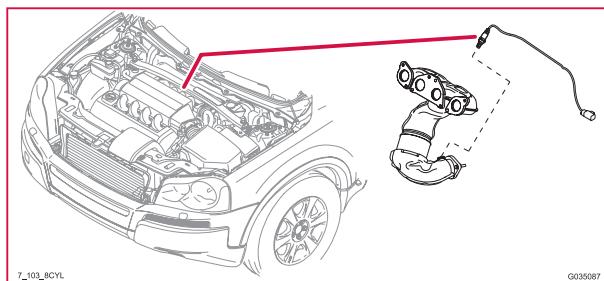


7/93 Occupant Weight Sensor (OWS)

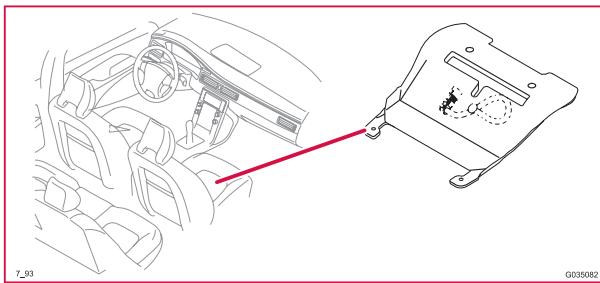


7/104 Rear oxygen sensor, bank 2, 6-Cyl.

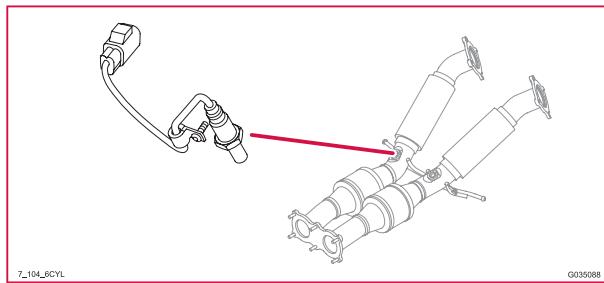

7/100 Inclination Sensor Module (ISM)

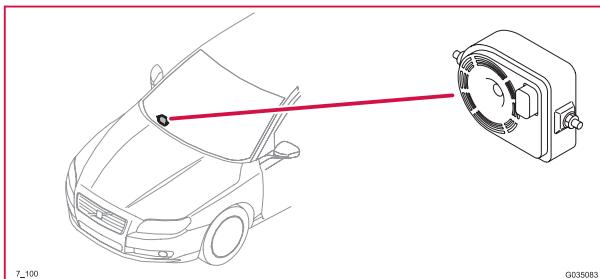


7/104 Rear oxygen sensor, bank 1, 8-Cyl.

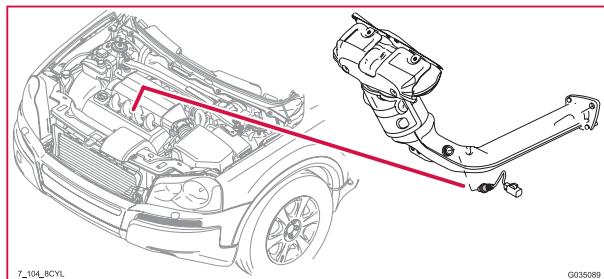


Component illustrations

7/108 - 7/119


7/108 Left-hand rear side impact sensor

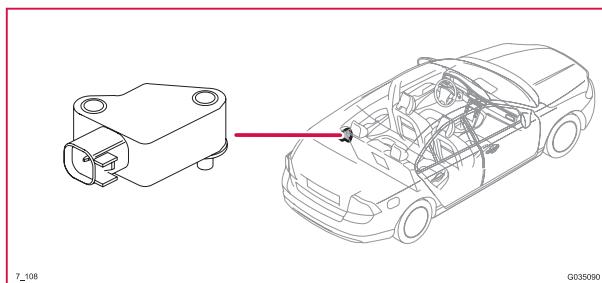


7/113 Seat temperature sensor, RH rear

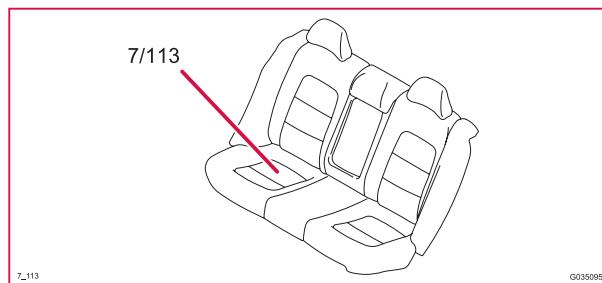


7/109 Right-hand rear side impact sensor

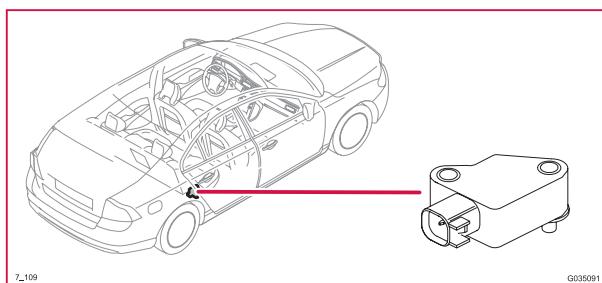


7/115 Side impact sensor, left B-post

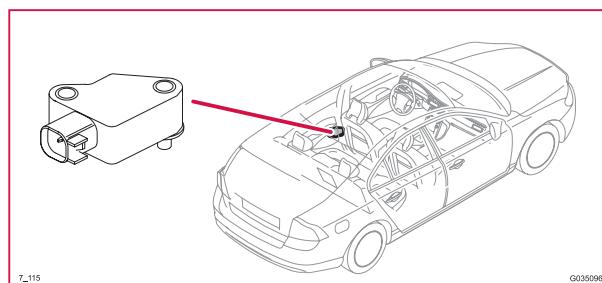


7/110 Temperature sensor, driver's seat

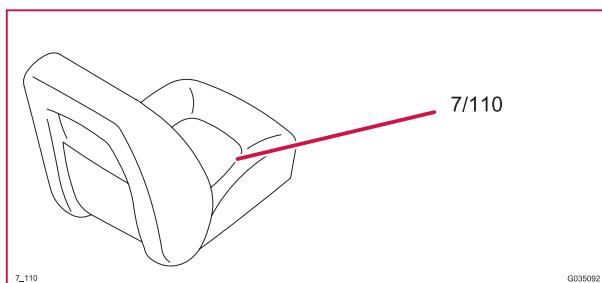


7/116 Side impact sensor, right B-post

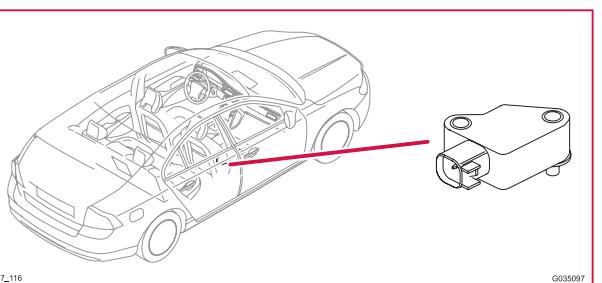


7/111 Temperature sensor, passenger seat

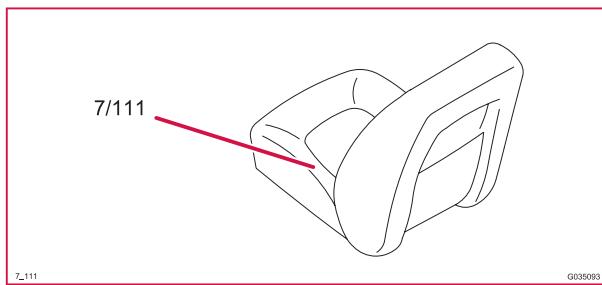


7/118 Height sensor, suspension, front left

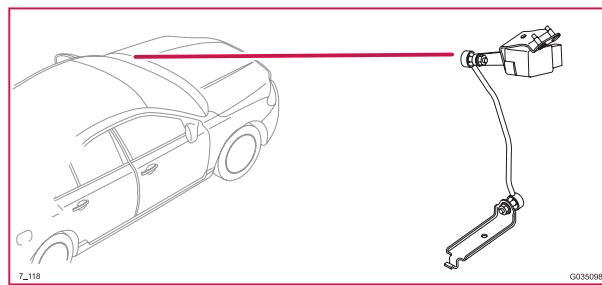

7/112 Seat temperature sensor, LH rear

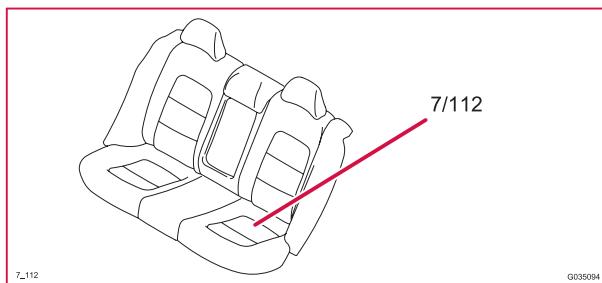


7/119 Height sensor, suspension, front right

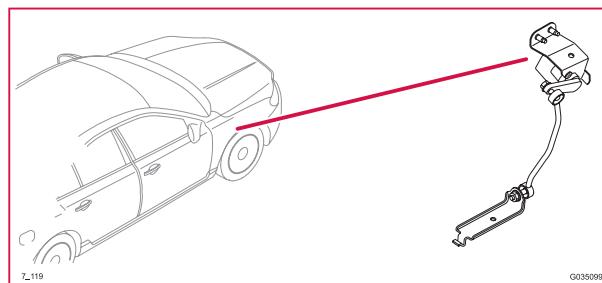

Component illustrations

7/120 - 7/154


7/120 Height sensor, suspension, rear left

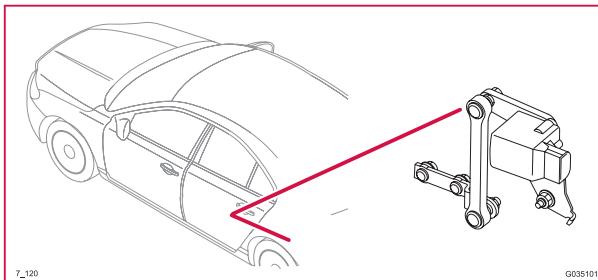

G035101


7/131-

7/134 Rear parking assistance sensor

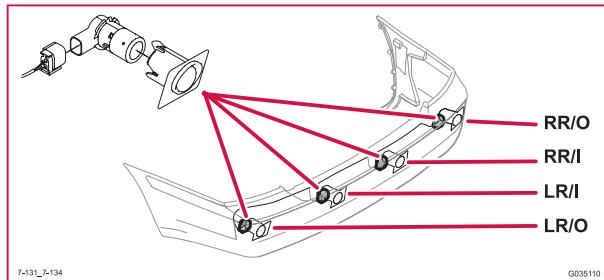


G035110

7/121 Height sensor, suspension, rear right

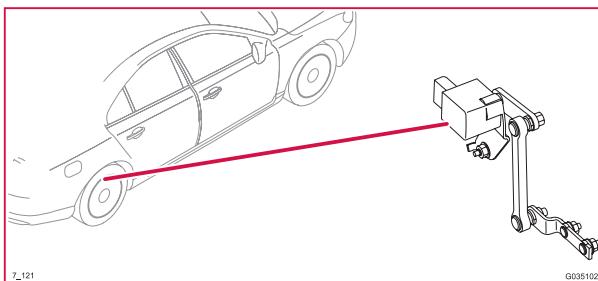


G035102

7/138 Exhaust pressure sensor

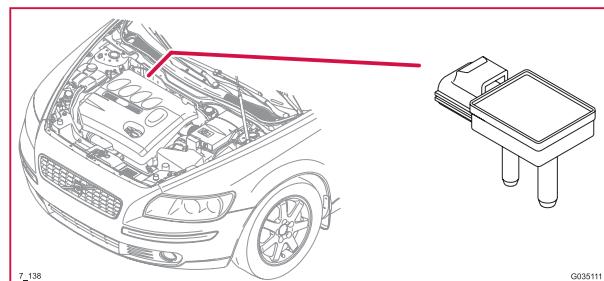


G035111

7/123 Clutch pedal sensor

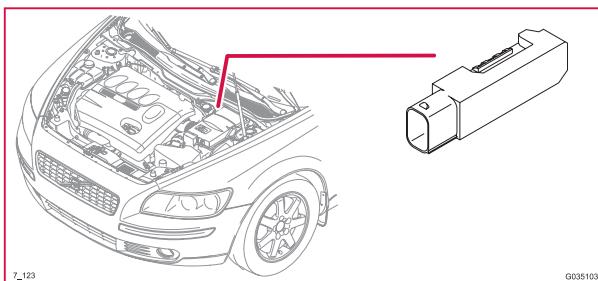


G035103

7/143 Sensor fuel level, pump side

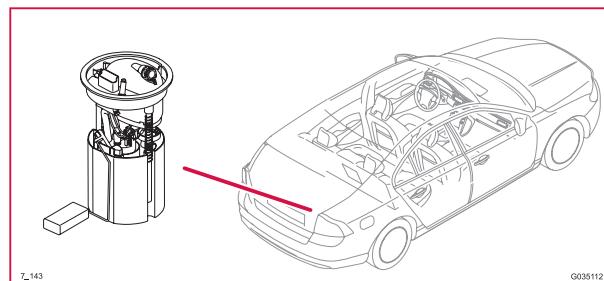


G035112

7/124 Sensor brake pedal

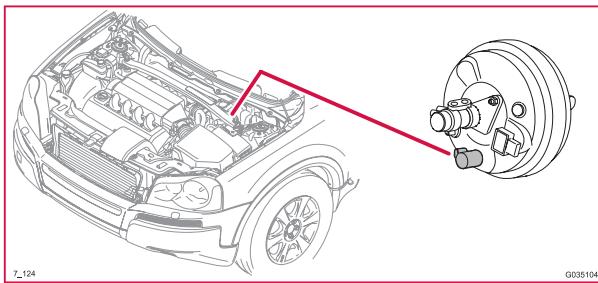


G035104

7/149 Rain Sensor Module (RSM)

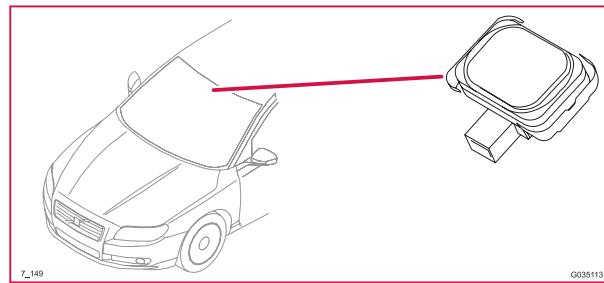


G035113

7/130 Fuel level sensor, ejector side

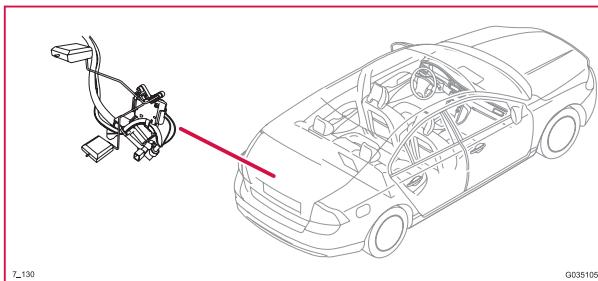

G035105

7/154 Sensor fuel temperature

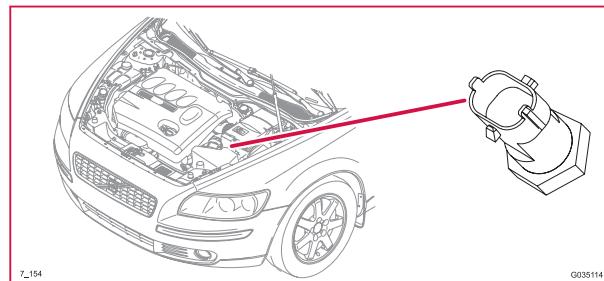


G035114


Component illustrations

7/156 - 7/165


7/156 Pressure and temperature sensor, fuel

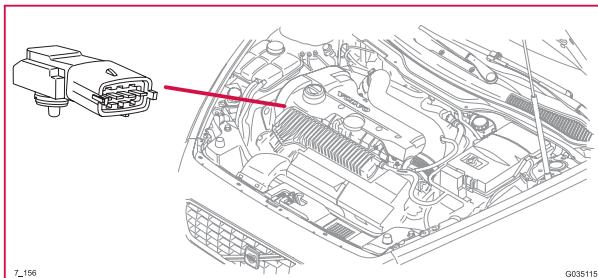


7/159 Air Quality Sensor (AQS)

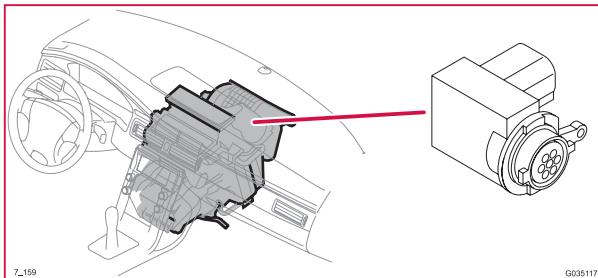


7/160 Brake vacuum sensor

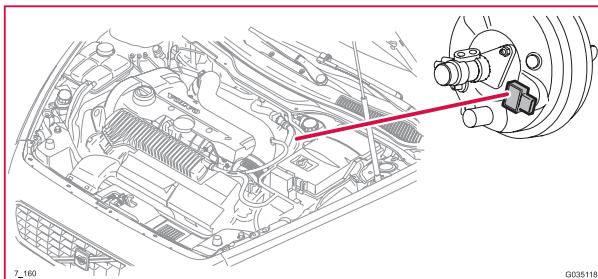


7/162 Pressure sensor, fuel line

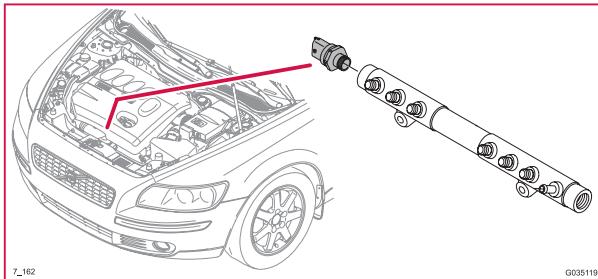


7/164 Body Sensor Cluster Stability Sensor (BSC)

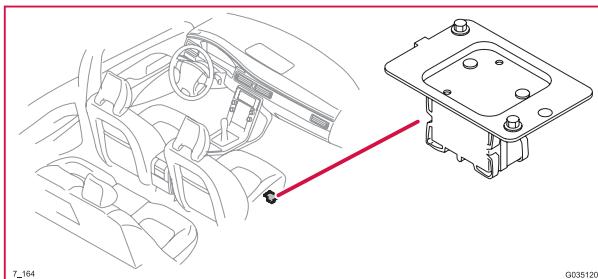


7/165 Pressure and temperature sensor, intake manifold, 4-Cyl.

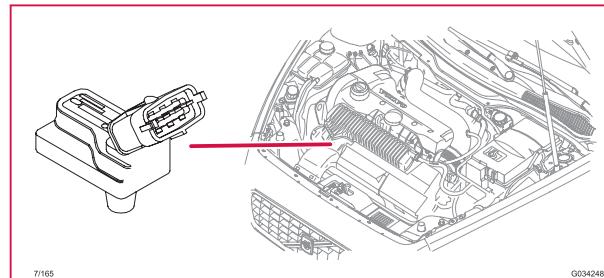


7/165 Pressure and temperature sensor, intake manifold, 5-Cyl.

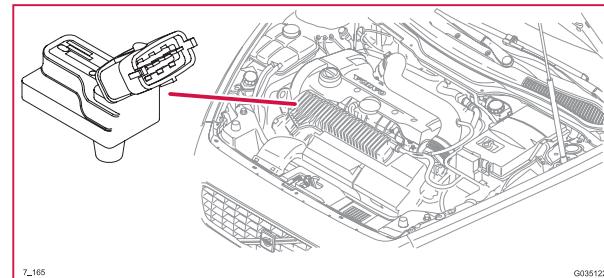


7/165 Pressure and temperature sensor, intake manifold, Diesel

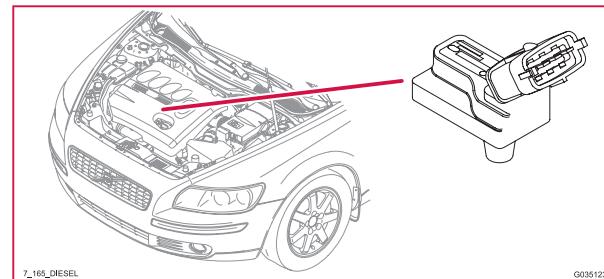

7/165 Pressure and temperature sensor, intake manifold, Diesel Euro5

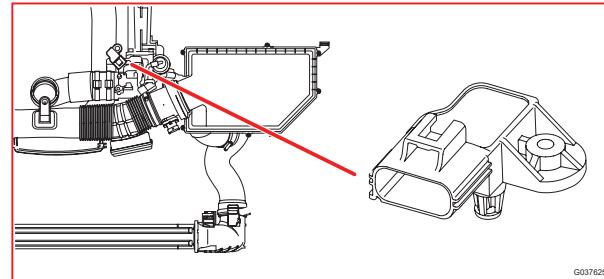


7/165 Pressure and temperature sensor, intake manifold, 6-Cyl.

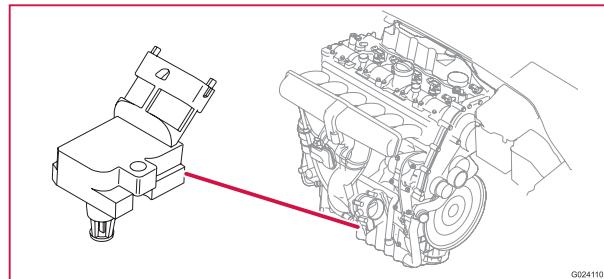


Component illustrations

7/166 - 7/174


7/166 Oil level sensor, 5-Cyl.

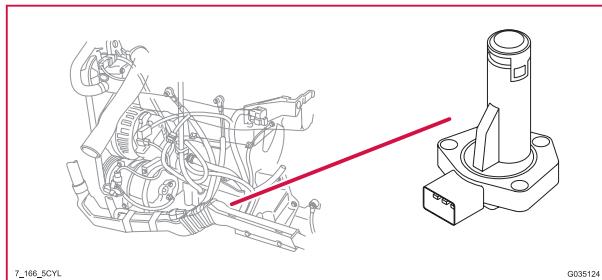


7/166 Oil level sensor, 6-Cyl.

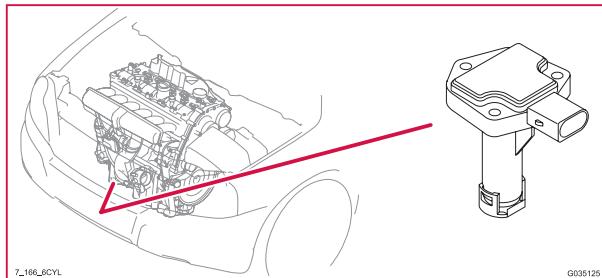


7/172 Camshaft position sensor, intake side, 5-Cyl.

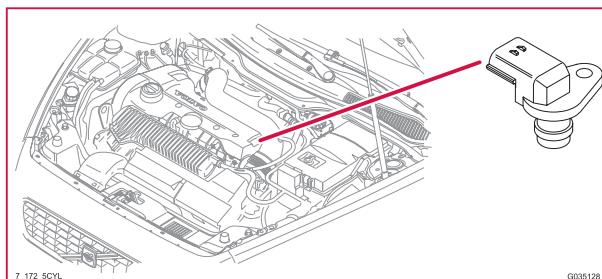


7/172 Camshaft position sensor, intake side, 6-Cyl.

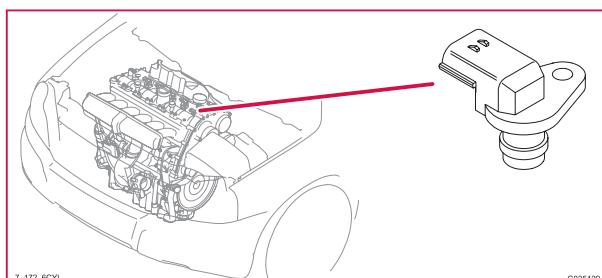


7/172 Intake camshaft position sensor, bank 2, 8-Cyl.

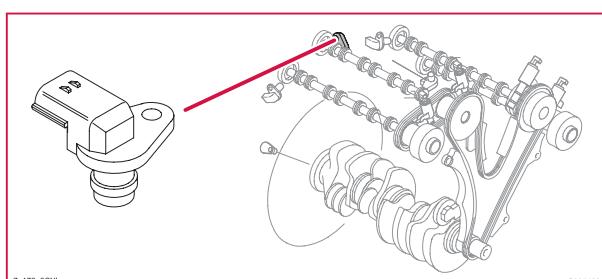


7/173 Camshaft position sensor, exhaust side, 5-Cyl.

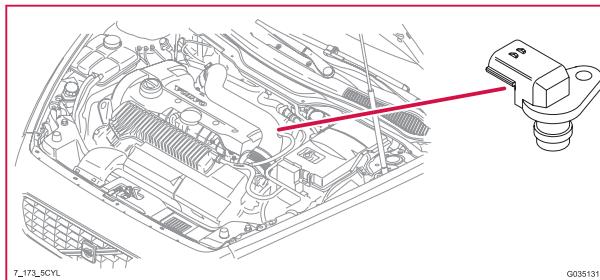


7/173 Camshaft position sensor, exhaust side, 6-Cyl.

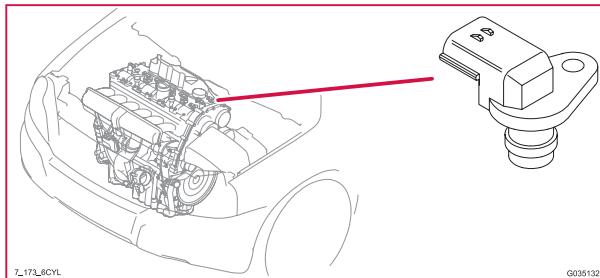


7/173 Exhaust camshaft position sensor, exhaust bank 2, 8-Cyl.

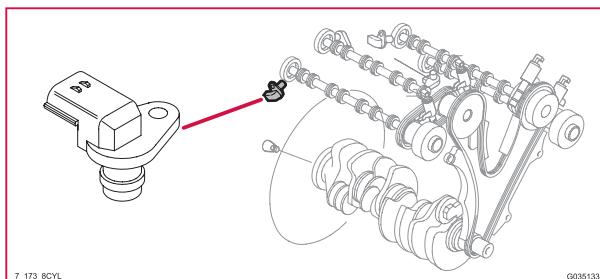

7/173 Camshaft position sensor, exhaust side, Diesel

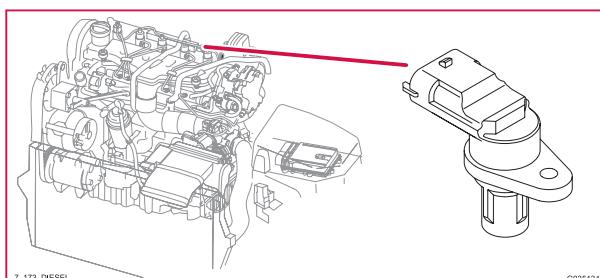


7/174 Differential pressure sensor, particle filter

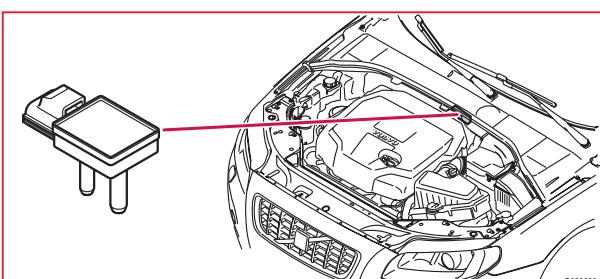


Component illustrations

7/175 - 7/195


**7/175 Occupant weight sensor,
seat belt reminder**

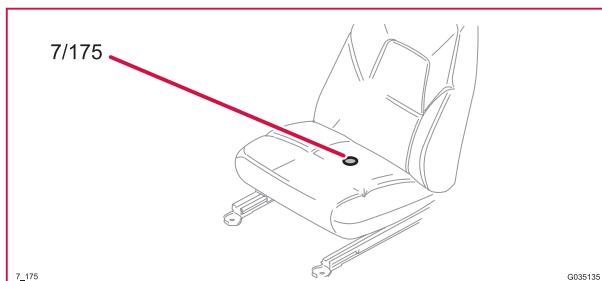


**7/190 Temperature sensor,
catalytic converter**

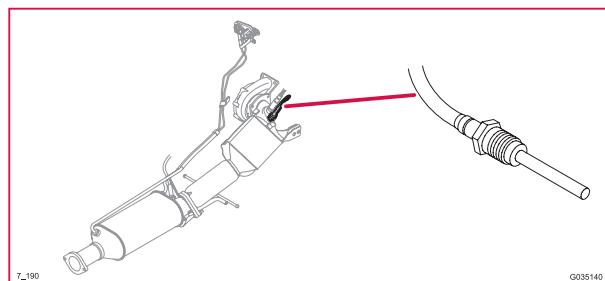


7/178 Front impact sensor, right

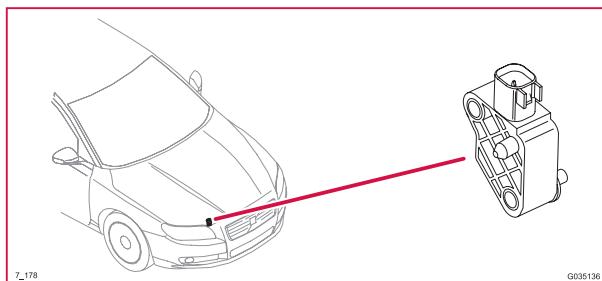


7/191 Temperature sensor, particle filter

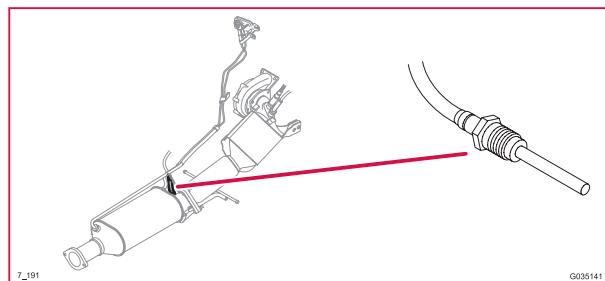


7/179 Front impact sensor, left

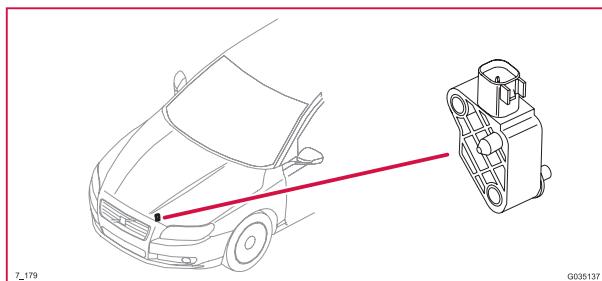


7/193 Position sensor turbo

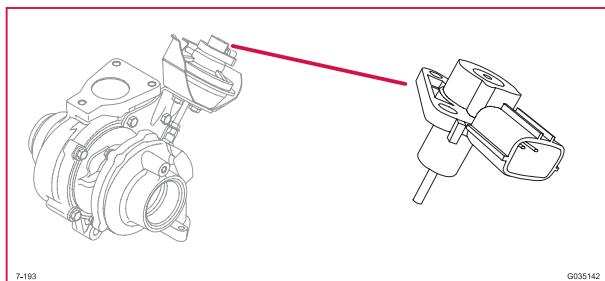


**7/188 Camshaft position sensor,
intake bank 1, 8-Cyl.**

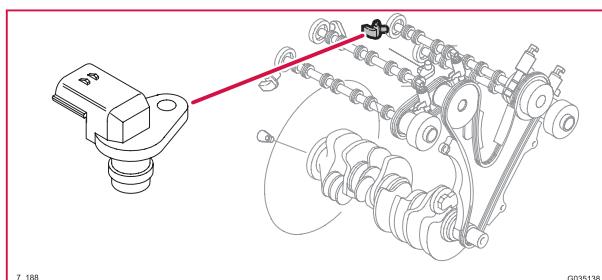


7/194 Belt retractor sensor, driver

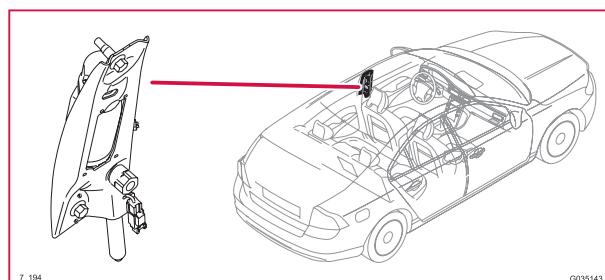

**7/189 Camshaft position sensor,
exhaust bank 1, 8-Cyl.**

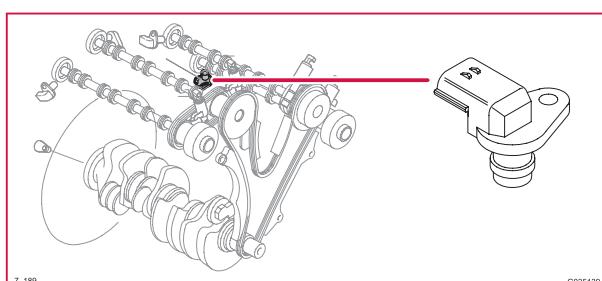


7/195 Belt retractor sensor, passenger

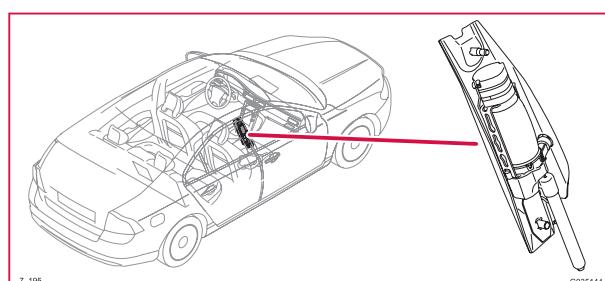


Component illustrations

7/199 - 7/227A


7/199 Ultrasonic sensor (IMS)

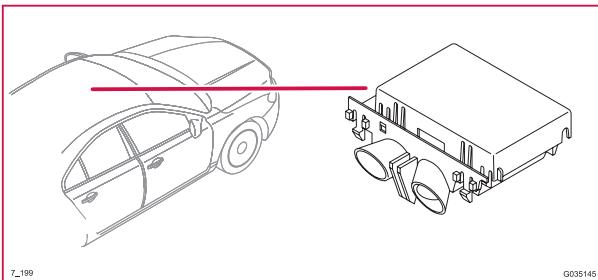

7/209 Side impact sensor, right front door

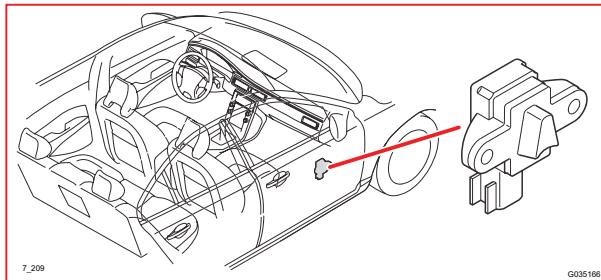


7/200 Sensor, coolant temperature

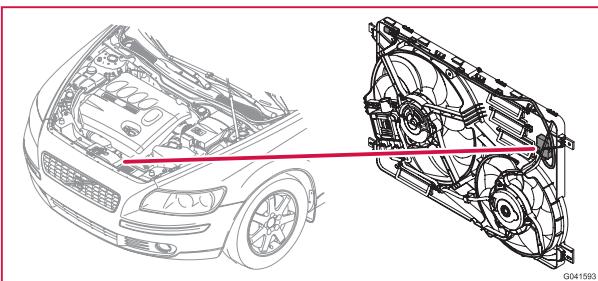


7/210-


7/213 Tire pressure sensor

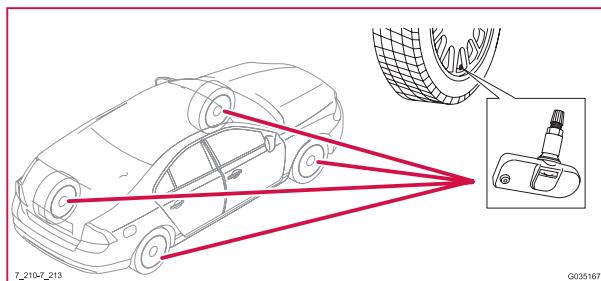

7/203 Forward-aimed radar (FLR)

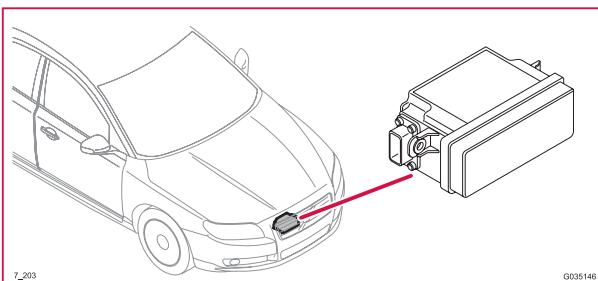


7/214 Heart beat sensor (HBS)

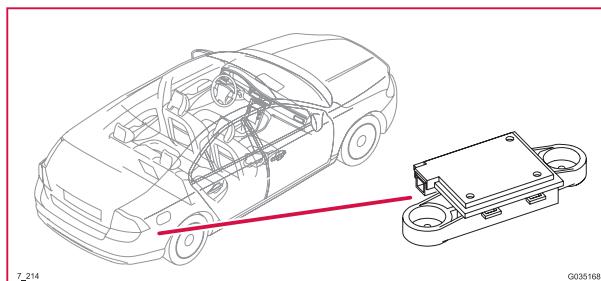


7/204-


7/207 Front parking assistance sensor

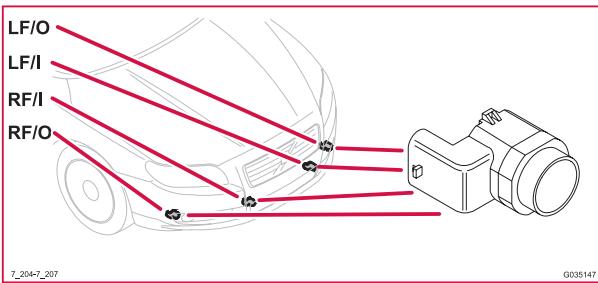


7/220 Load sensor hydraulic pump

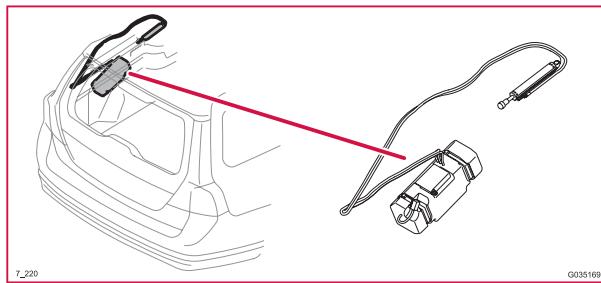

7/208 Side impact sensor, left front door

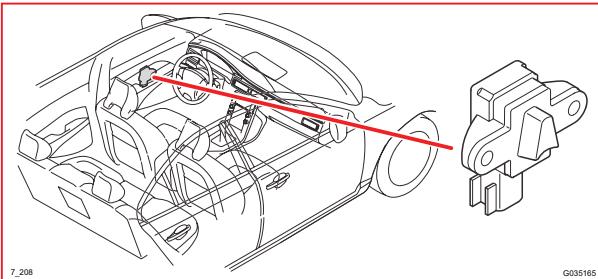


7/227A Tailgate pinch sensor, right

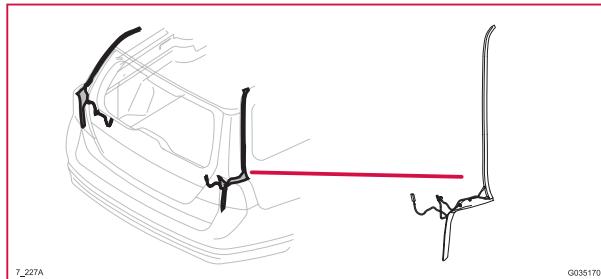

Component illustrations


7/227B - 8/21

7/227B Tailgate pinch sensor, left

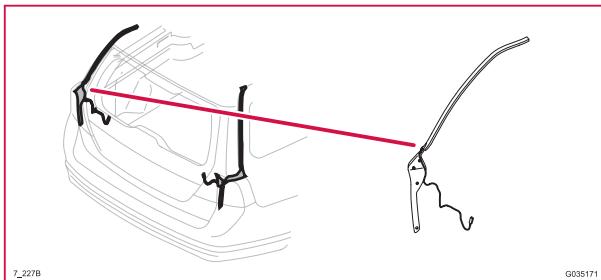


G035171

8/18 EVAP valve, 6-Cyl.

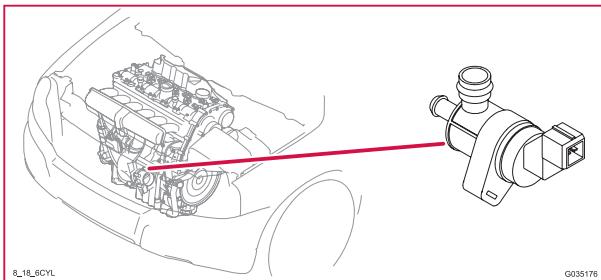


G035178

7/238 Alcolock sensor

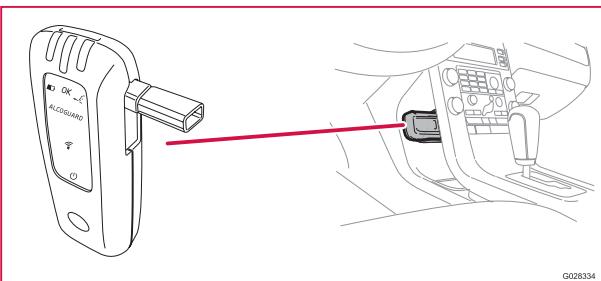


G028334

8/18 EVAP valve, 8-Cyl.

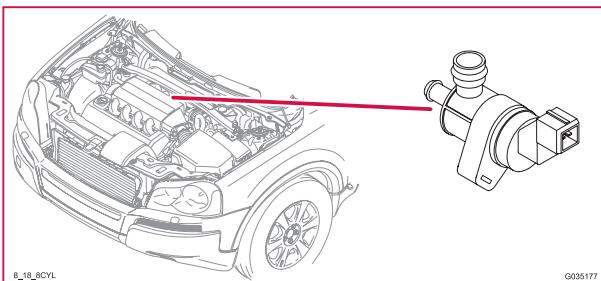


G035178

8/3 Electromagnetic clutch, climate control system

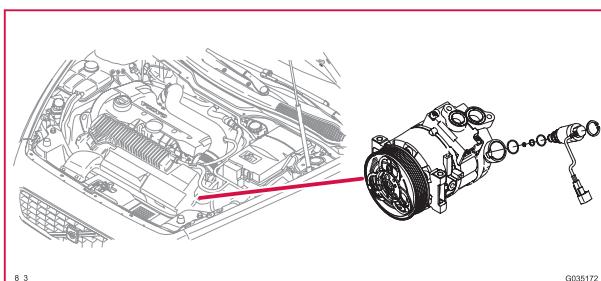


G035172

8/19 Solenoid, variable valve timing, intake, bank 2, 8-Cyl.

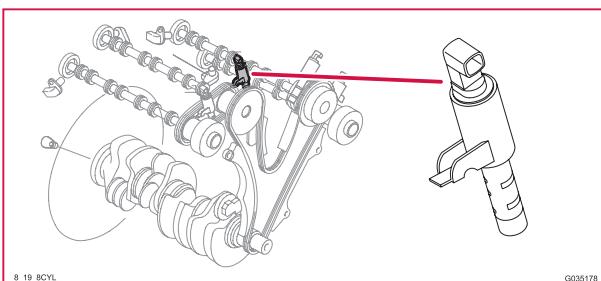


G035178

8/6-11 Injection valves

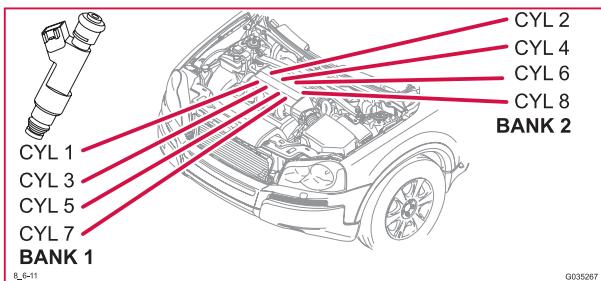


G035267

8/20 Shock absorber, Four-C, front left

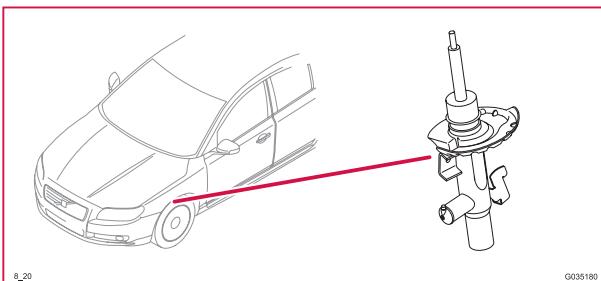


G035180

8/18 EVAP valve, 5-Cyl.

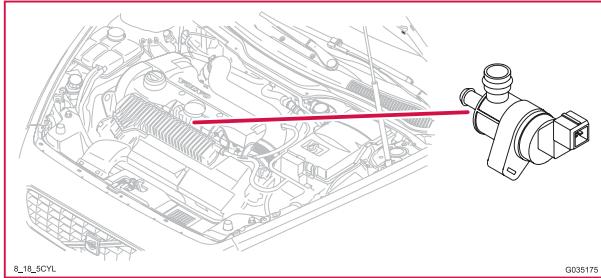

G035175

8/21 Shock absorber, Four-C, front right

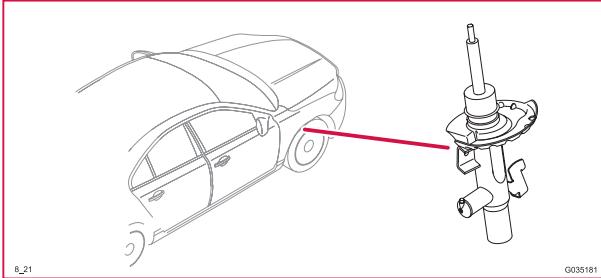


G035181


Component illustrations

8/22 - 8/37


8/22 Shock absorber, Four-C, rear left

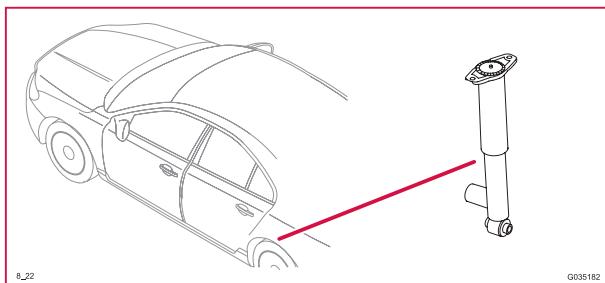


8/23 Shock absorber, Four-C, rear right

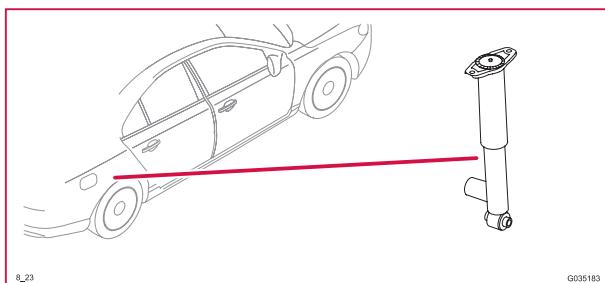


8/28 Turbo control valve

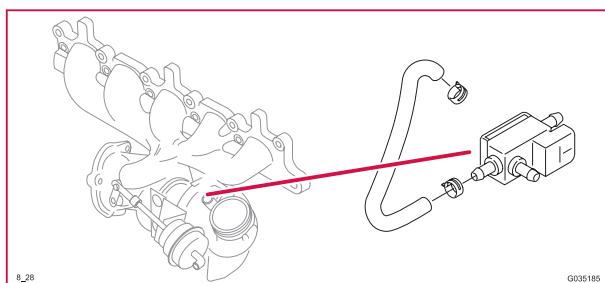


8/30 Driver's side airbag igniter, stage 1

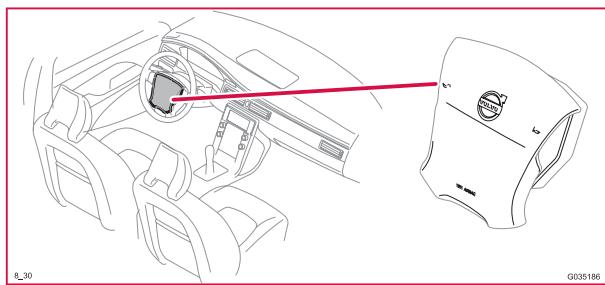


8/31 Passenger side airbag igniter, stage 1

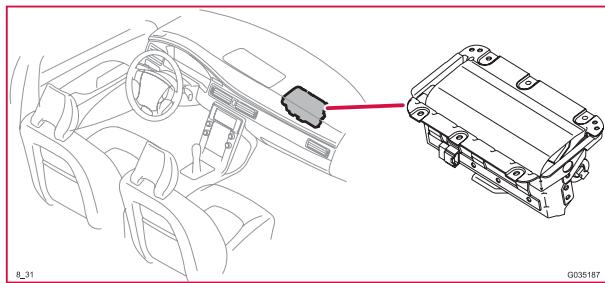


8/32 Igniter, airbag stage 2, passenger side

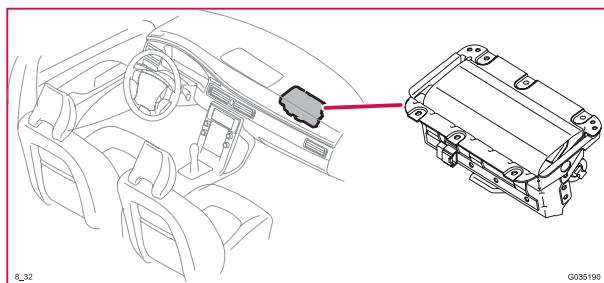


8/33 Igniter, belt tensioner, driver's side

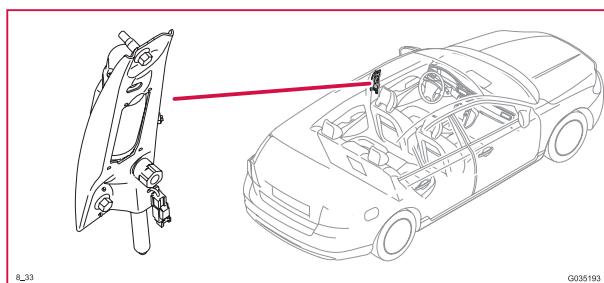


8/34 Igniter, belt tensioner, passenger side

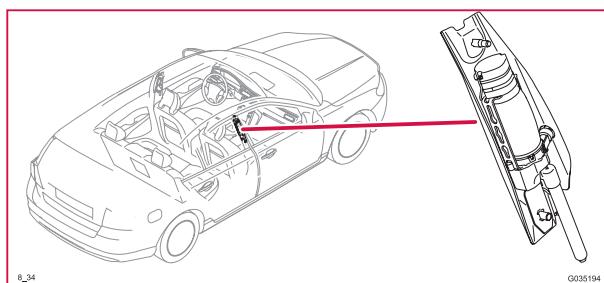

8/36 Solenoid shift lock

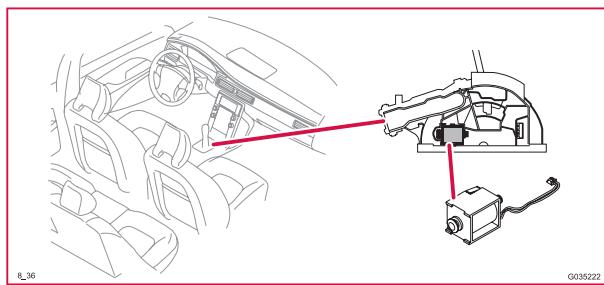


8/37 Automatic transmission

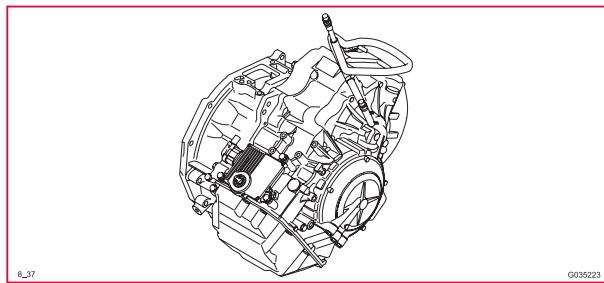


Component illustrations

8/38 - 8/56


8/38 Shift solenoid 1

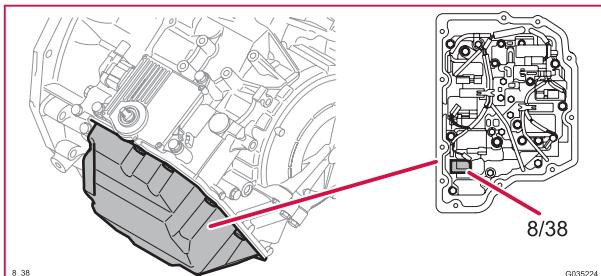


8/39 Shift solenoid 2

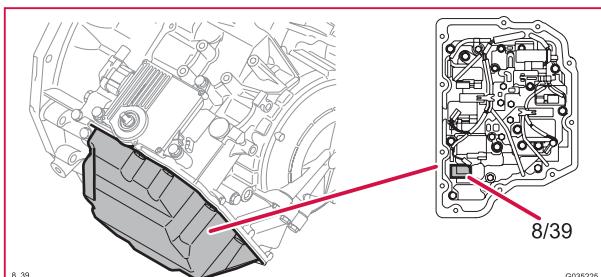


8/40 Lock-up solenoid

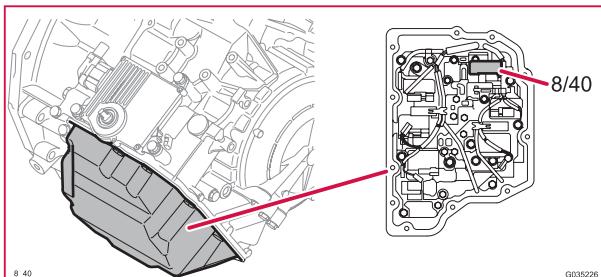


8/45 Vacuum valve variable intake manifold, 4-Cyl.

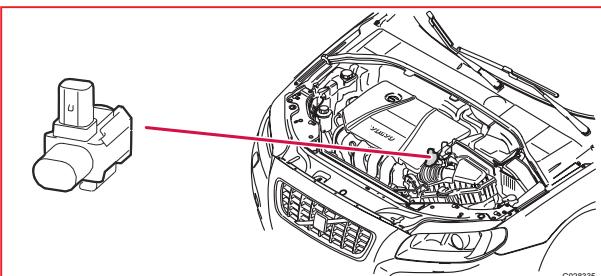


8/46 Archive unit, DSTC

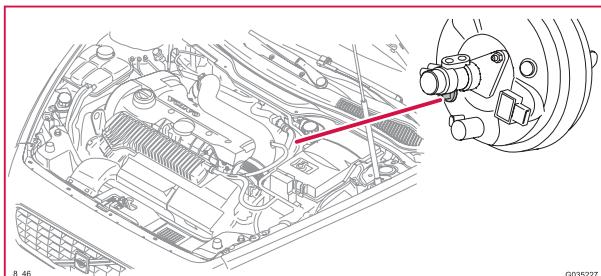


8/48 Auto-dimming rearview mirror

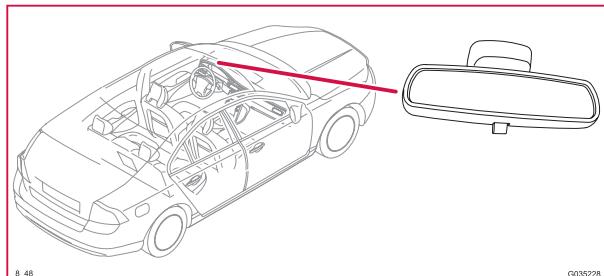


8/51 Igniter side airbag front driver's seat

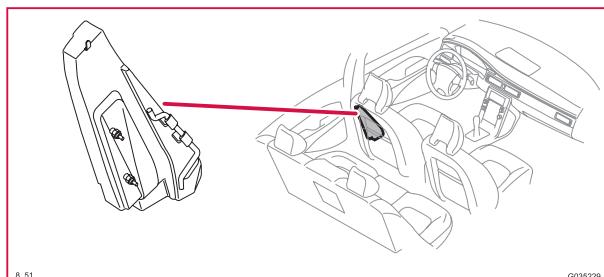


8/52 Igniter side airbag front passenger seat

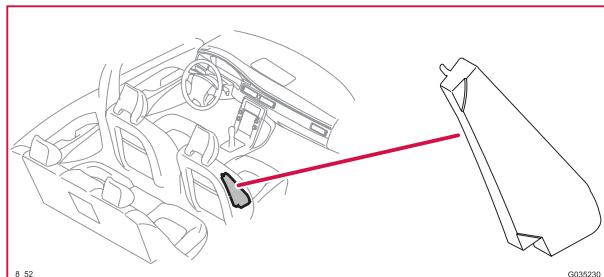

8/55 Igniter, rear left belt tensioner

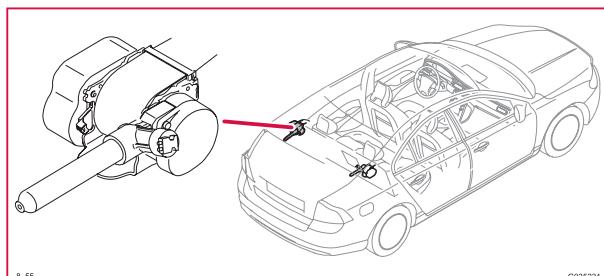


8/56 Igniter, rear right belt tensioner

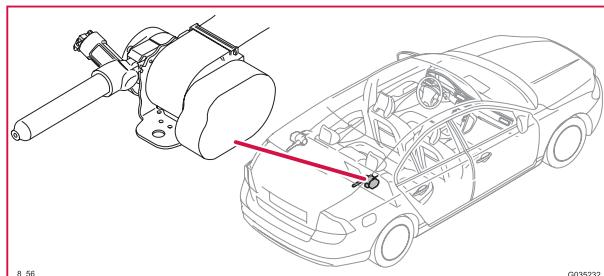

Component illustrations

8/59 - 8/81 5-Cyl.


8/59 Rear left head restraint solenoid

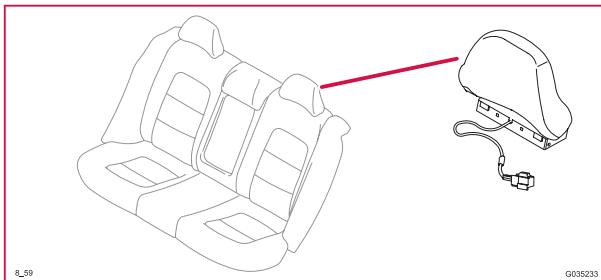

8_59

G035233


8/67 Igniter, right inflatable curtain

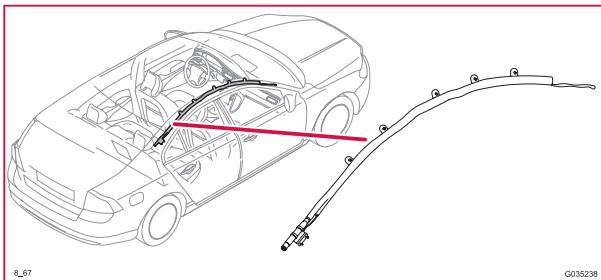

8_67

G035238


8/60 Rear right head restraint solenoid

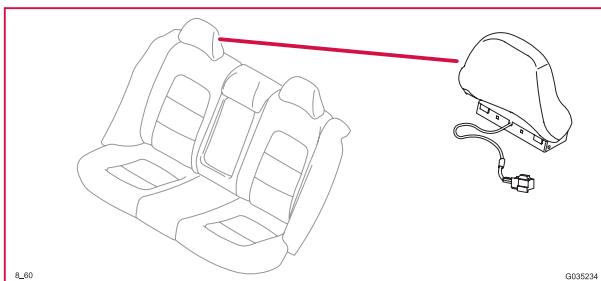

8_60


G035234

8/68 Relief valve

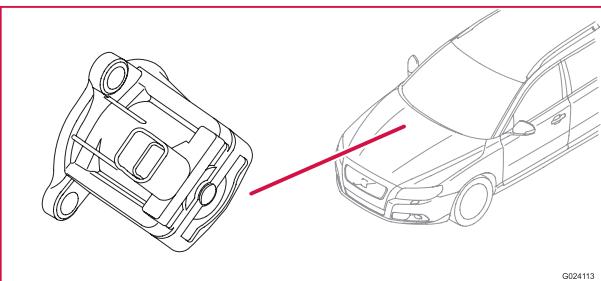

G024113


8/61 Driver's side airbag igniter, stage 2

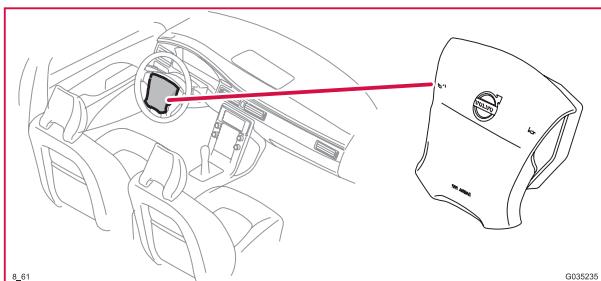

8_61

G035235


8/71 Throttle solenoid

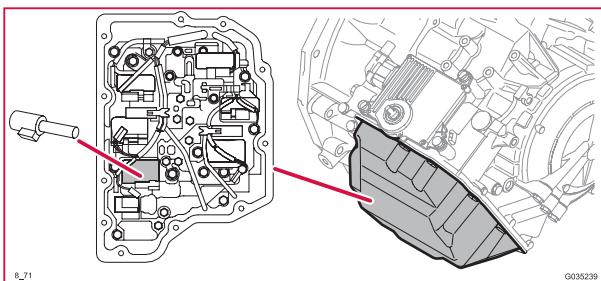

8_71

G030239


8/62 Belt tensioner igniter, center rear seat

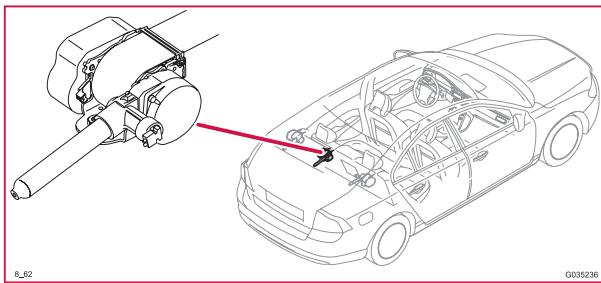

8_62


G035236

8/77 Control valve, fuel volume

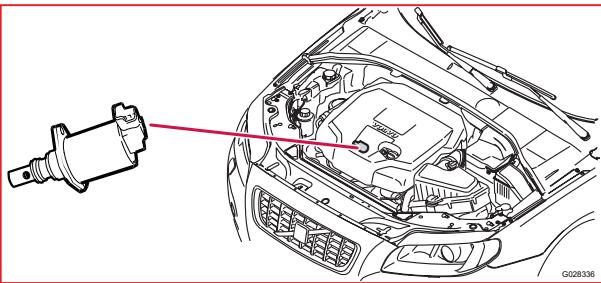

G028336


8/66 Igniter, left inflatable curtain

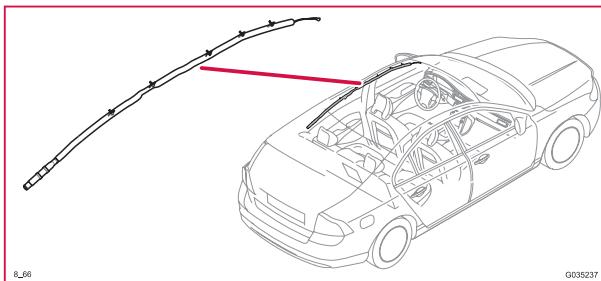

8_66

G035237

8/81 Solenoid, variable valve timing, exhaust, 5-Cyl.

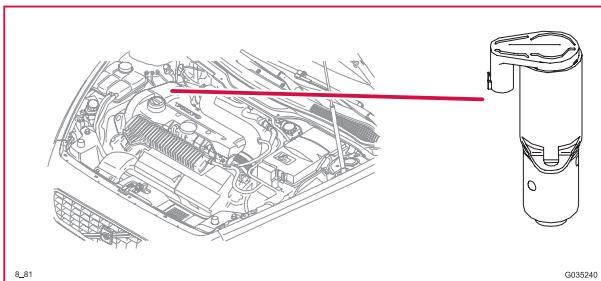


8_81

G035240


Component illustrations

8/81 8-Cyl. - 8/113


8/81 Solenoid, variable valve timing, exhaust, bank 2, 8-Cyl.

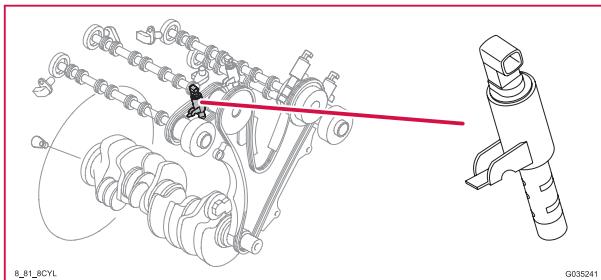


8/82 Solenoid, variable turbo geometry

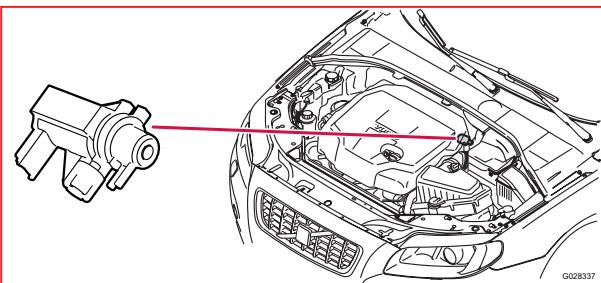


8/84 Switch, vacuum pump

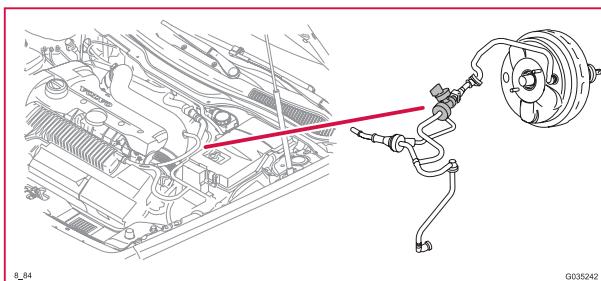


8/92 Lap belt tensioner, driver

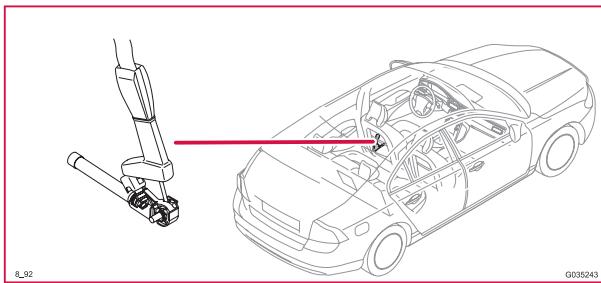


8/98 Control valve fuel pressure

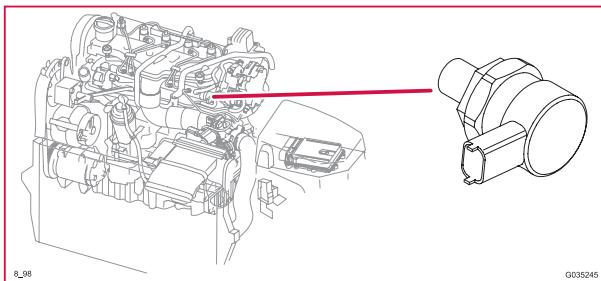


8/99 Steering column igniter

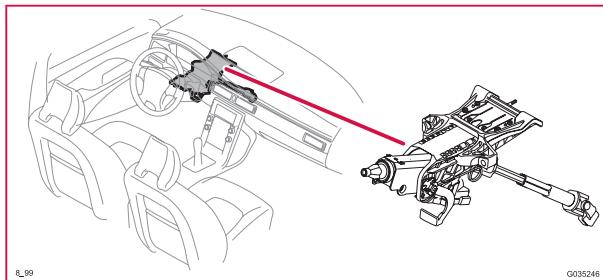


8/107 Variable intake valve

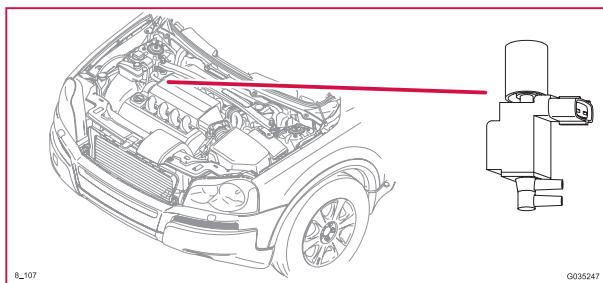


8/111 Control valve fuel flow

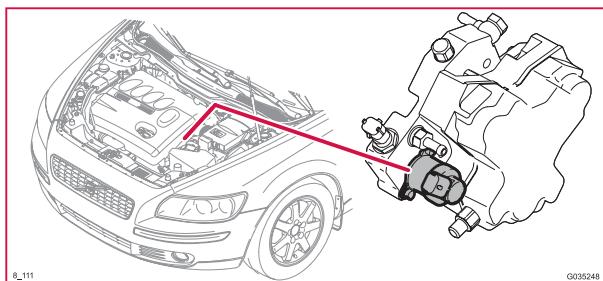

8/113 Bypass valve, EGR cooling

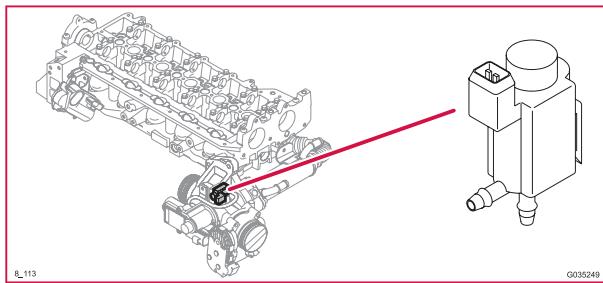


8/113 Bypass valve, EGR cooling, Euro5

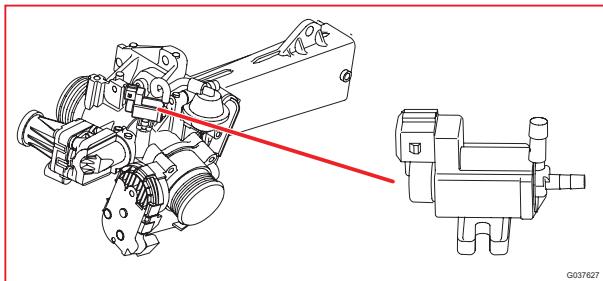

Component illustrations


8/114 - 8/124

8/114 Valve mixing air/fuel

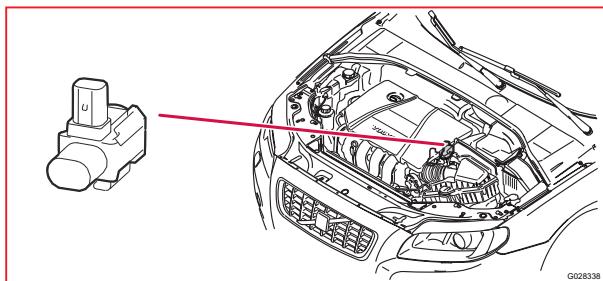


8/115-


8/116 Injector, 8-Cyl.

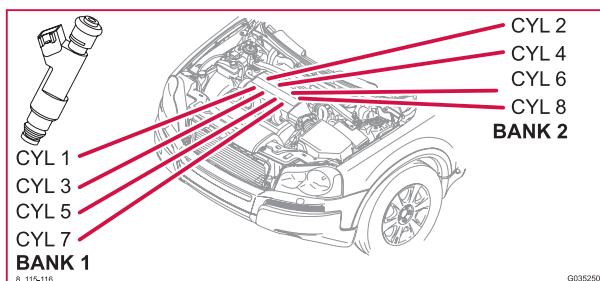


8/117 Solenoid, variable valve timing, intake, 5-Cyl.

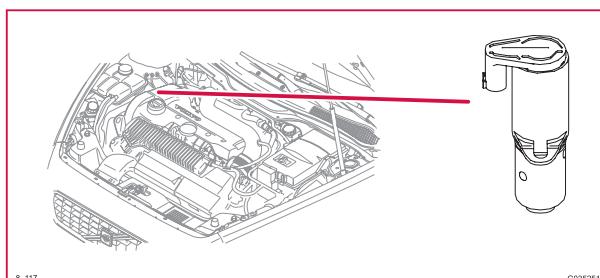


8/117 Solenoid, variable valve timing, intake, 6-Cyl.

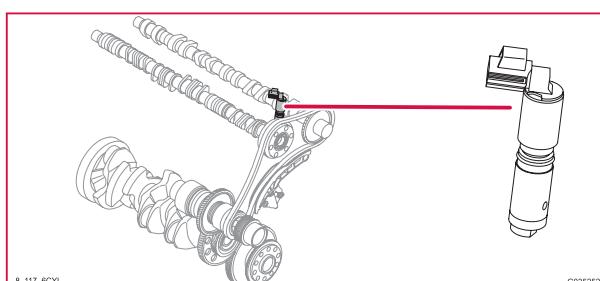


8/117 Solenoid, variable valve timing, intake, bank 1, 8-Cyl.

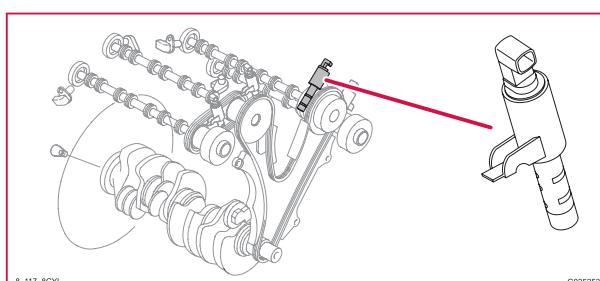


8/118 Solenoid, variable valve timing, exhaust, bank 1, 8-Cyl.

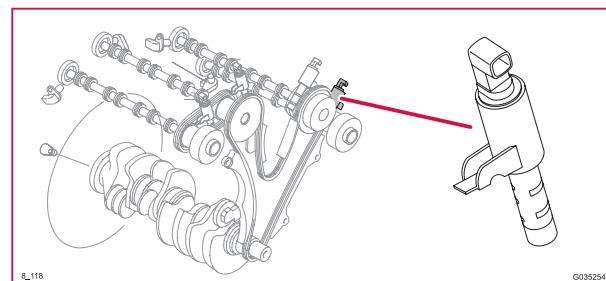


8/120 EGR valve

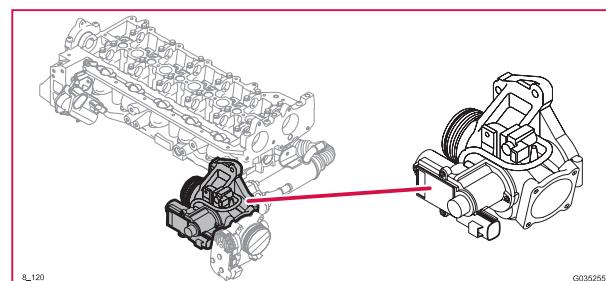


8/120 EGR valve, Diesel Euro5

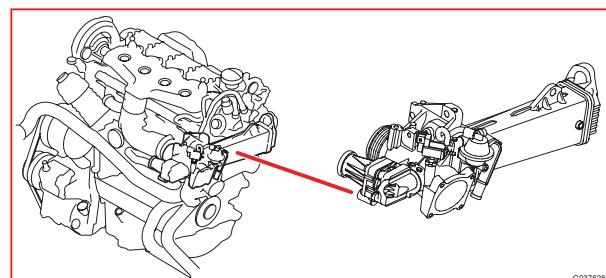

8/122 Bypass valve charge air cooler

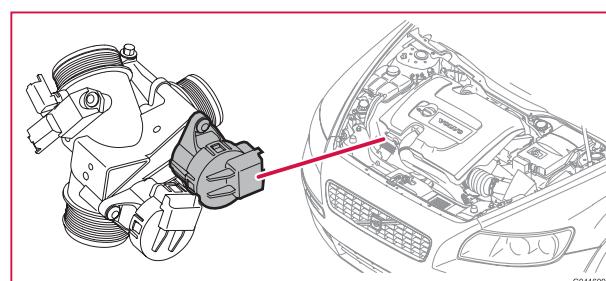


8/124 Passenger side airbag igniter, stage 3

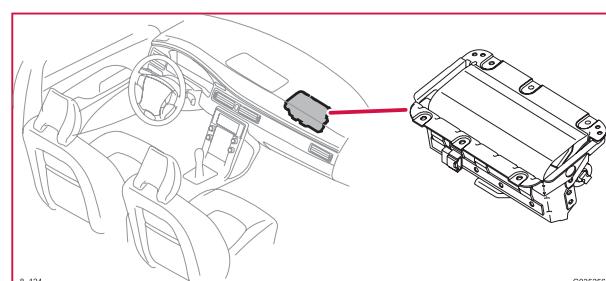


Component illustrations

8/125 - 8/144


8/125 Solenoid front cam profile

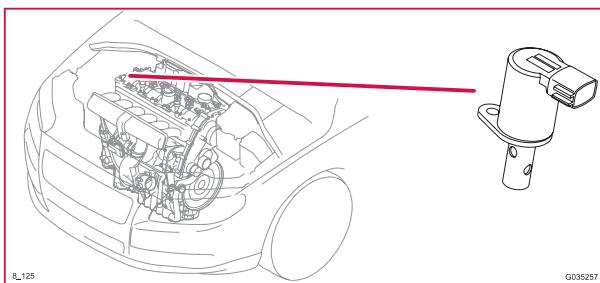


8/133 Control valve fuel pressure

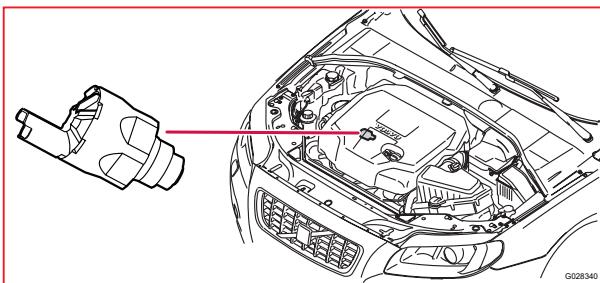


8/126 Solenoid rear cam profile

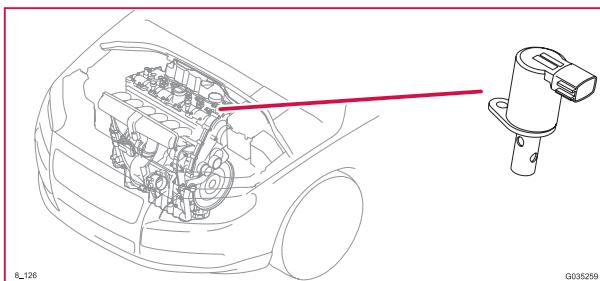


8/134 Solenoid, reverse interlock, manual

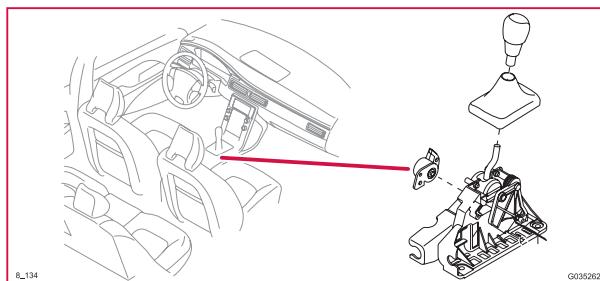


8/128 Driver's belt force limiter

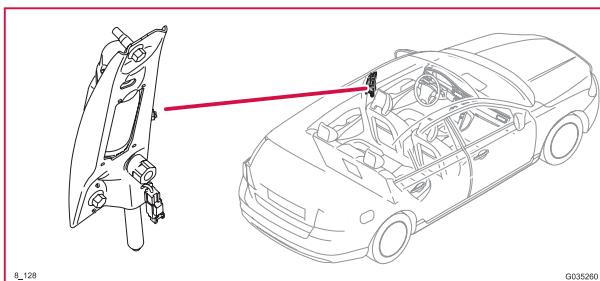


8/142 Linear pressure solenoid SLB1

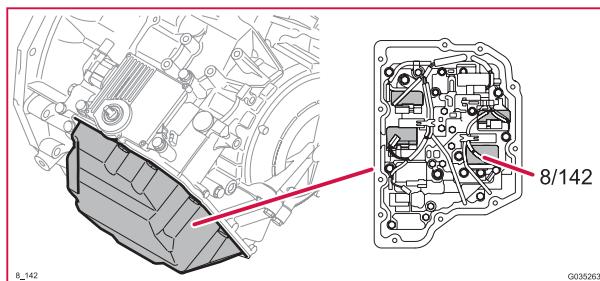


8/129 Passenger belt force limiter

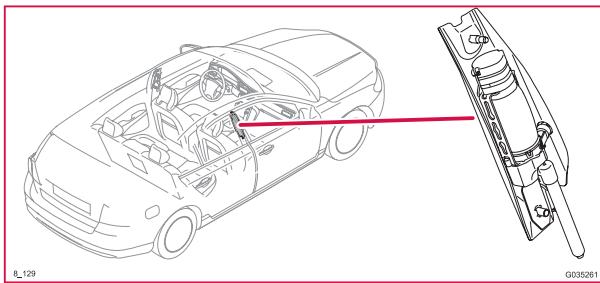


8/143 Linear pressure solenoid SLC1

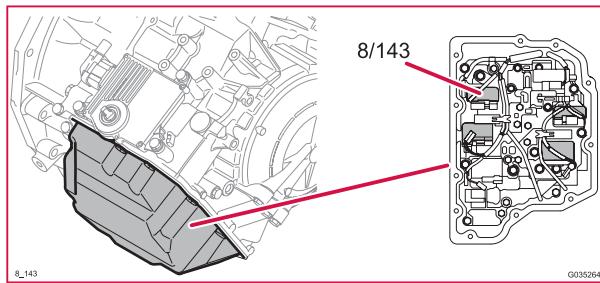

8/132 Control valve inlet

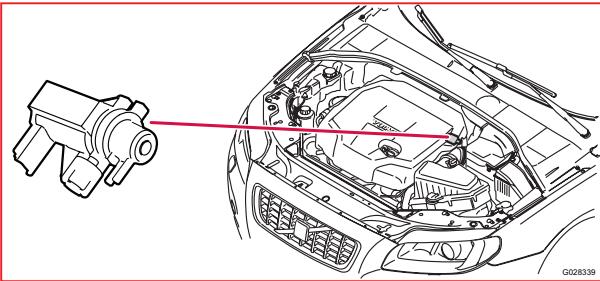


8/144 Linear pressure solenoid SLC2

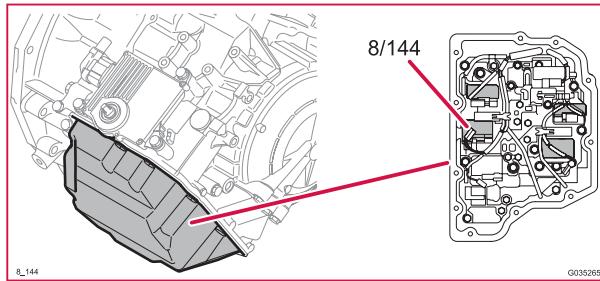


Component illustrations

8/145 - 9/13


8/145 Linear pressure solenoid SLC3

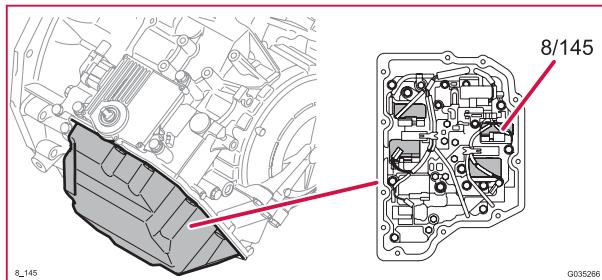


8/157 Turbocharger control valve, 5-Cyl. Diesel Euro5

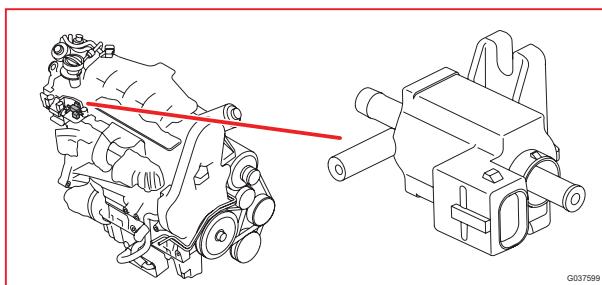


9/1 Front 12V outlet

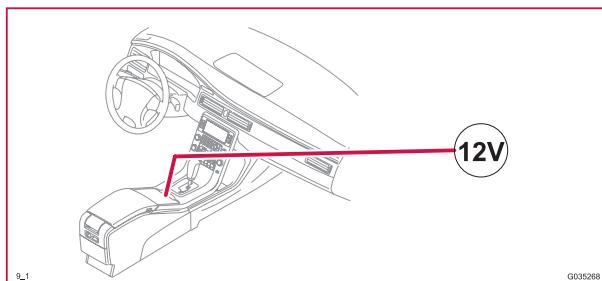


9/2 Heated rear window

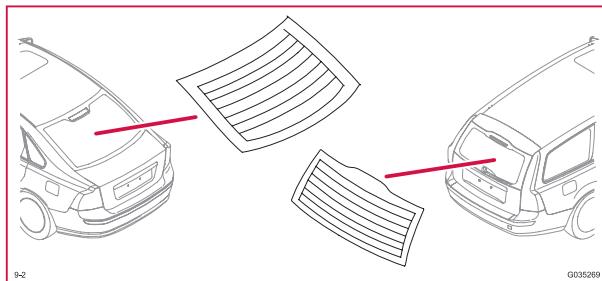


9/8 Heating element, LH rear seat cushion

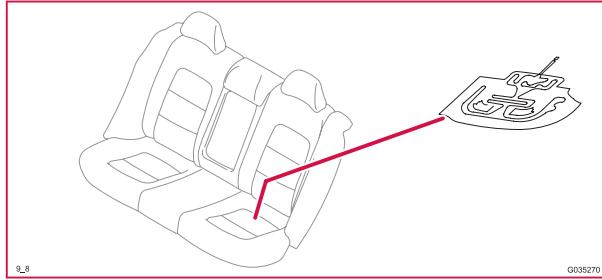


9/9 Heating element, LH rear seat backrest

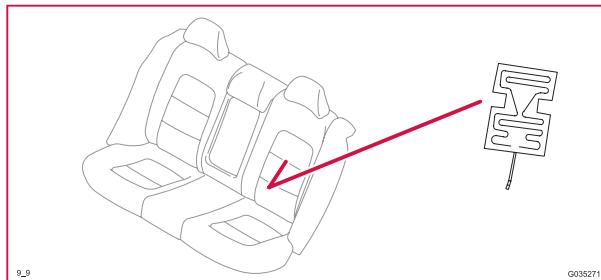


9/10 Heating element, RH rear seat cushion

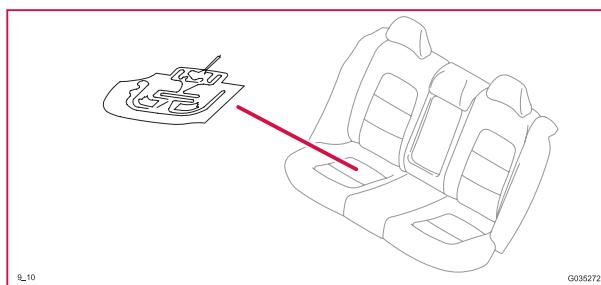


9/11 Heating element, RH rear seat backrest

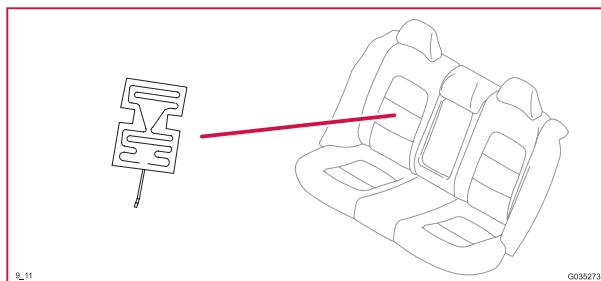

9/12 Seat Heating Module (SHM), driver's side

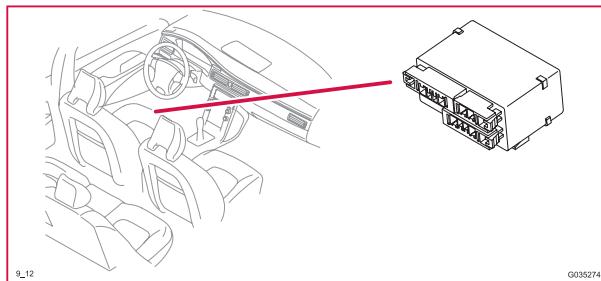


9/13 Seat Heating Module (SHM), passenger side

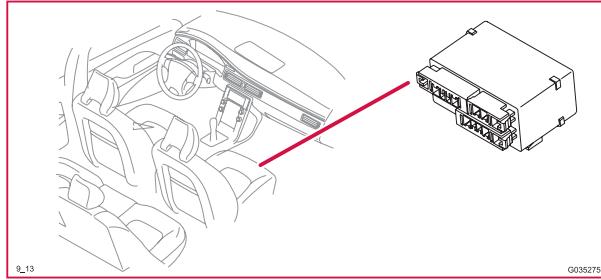


Component illustrations

9/14 - 9/32


9/14 Control module, rear left seat heater

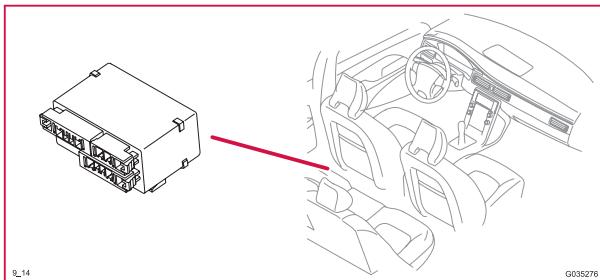


9/15 Control module, RH rear seat heater

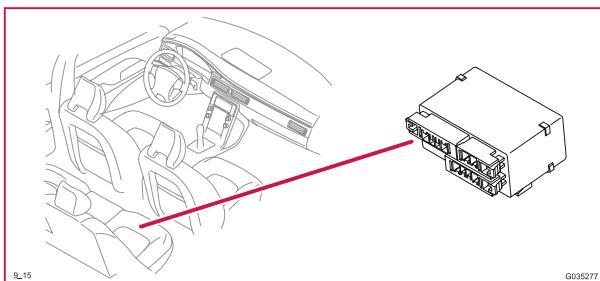


9/16 Heating element, driver's seat backrest

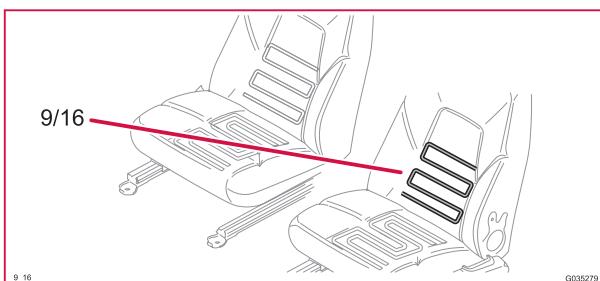


9/17 Heating element, passenger seat backrest

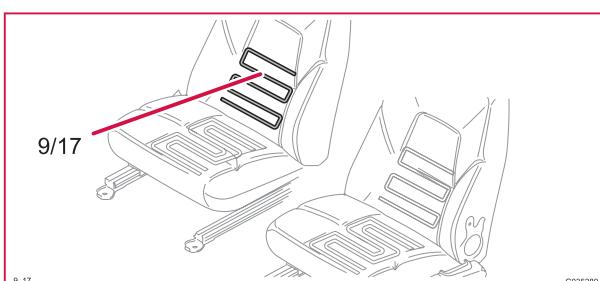


9/18 Heating element, driver's seat cushion

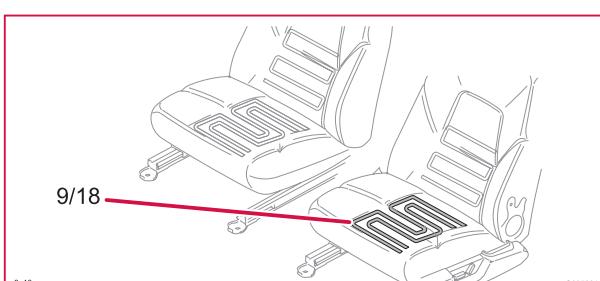


9/19 Heating element, passenger seat cushion

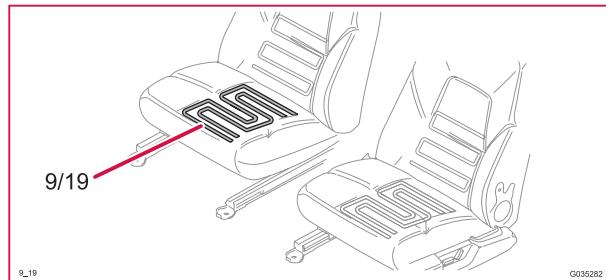


9/24 Refrigeration box

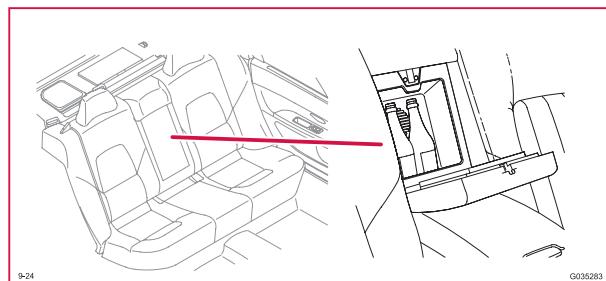


9/25 Rear 12V outlet

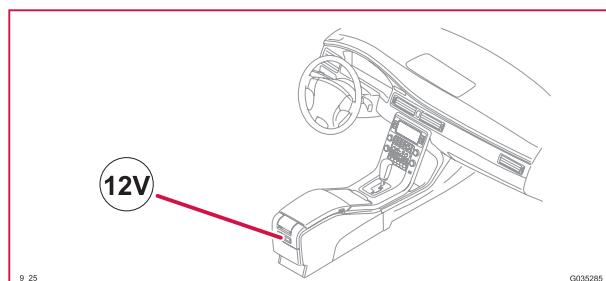

9/30 Auxiliary heater

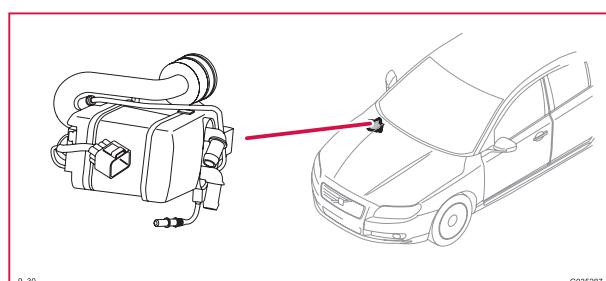


9/32 PTC resistor, crankcase ventilation

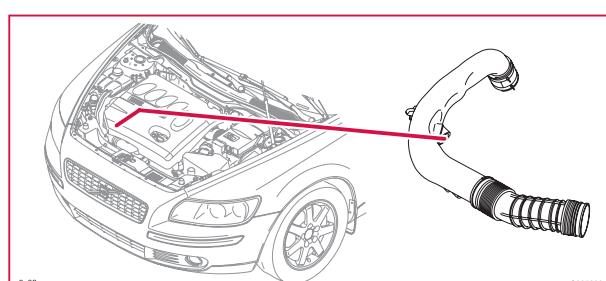


Component illustrations

9/38 - 10/5


9/38 Electrically heated fuel filter

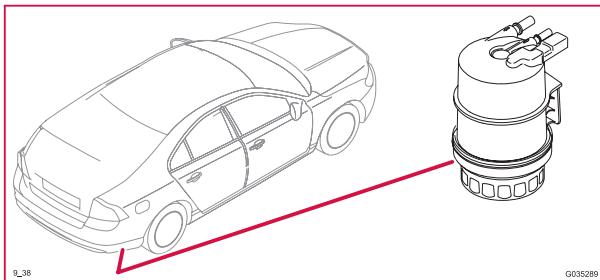


10/1 Lamp housing, front left

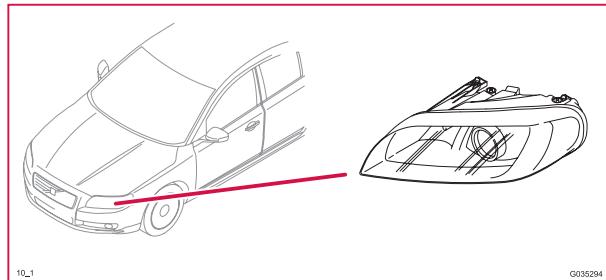


9/39 Heating element camera

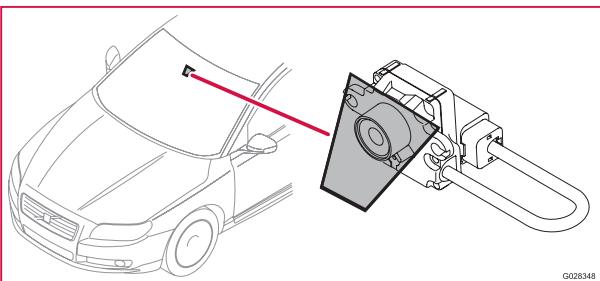


10/2 Lamp housing, front right

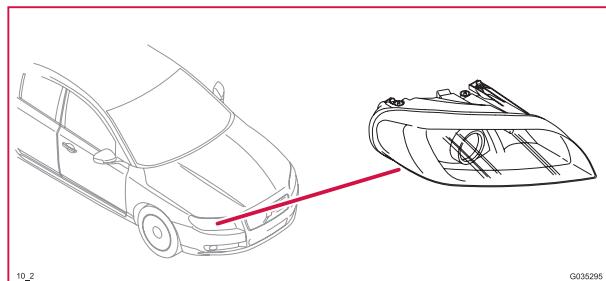


9/42 PTC-element

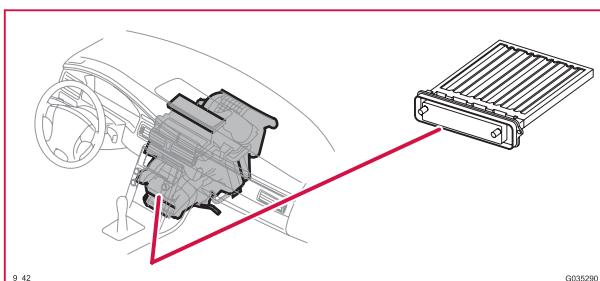


10/3 License plate lighting, V70

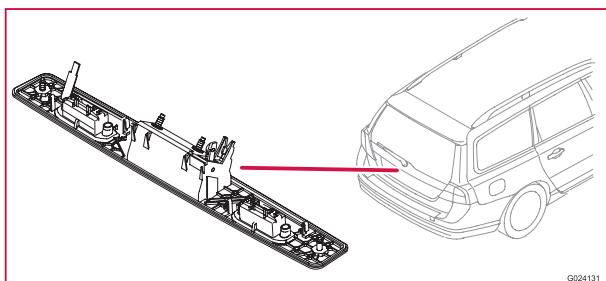


9/43 Heated windshield washer nozzle, left

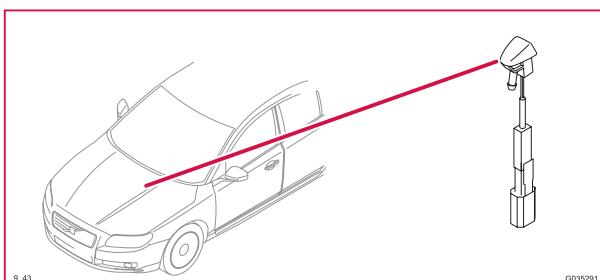


10/3 License plate lighting, S80

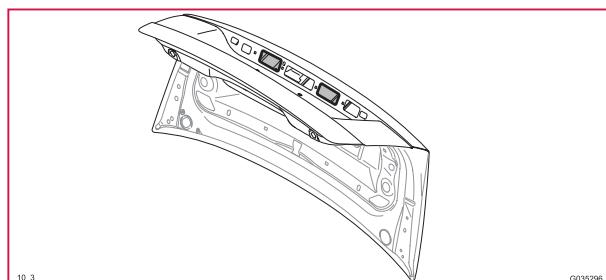

9/44 Heated windshield washer nozzle, right

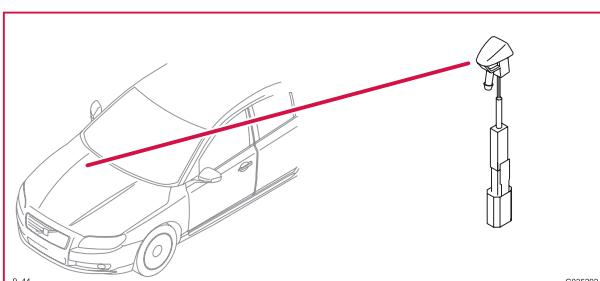


10/5 Fog light, front left

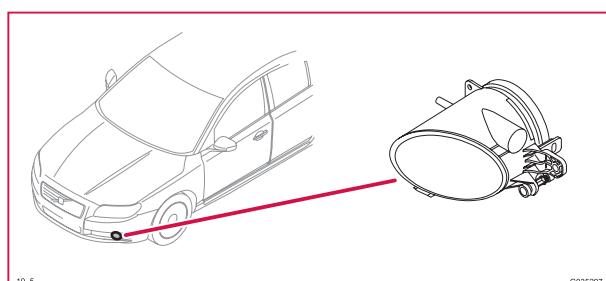


Component illustrations

10/6 - 10/18 V70


10/6 Fog light, front right

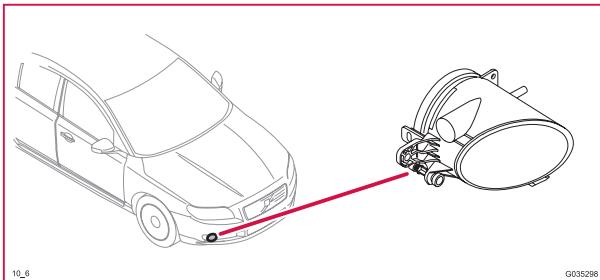


10/15 Direction indicator rear-view mirror left

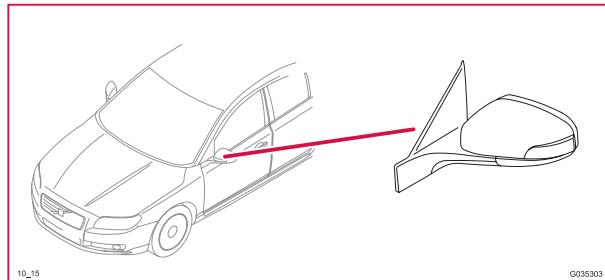


10/11 Front left running/parking light

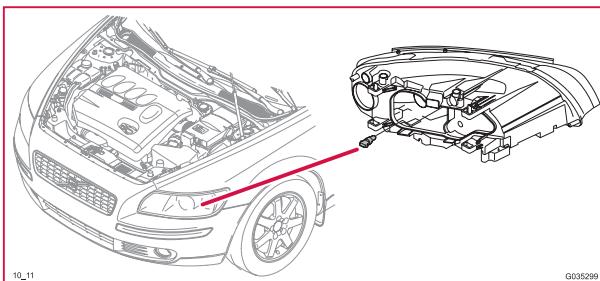


10/16 Direction indicator, right door mirror

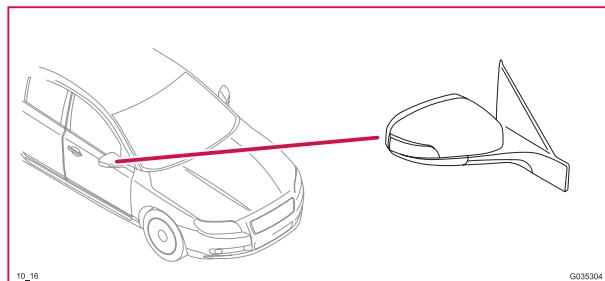


10/12 Front right running/parking light

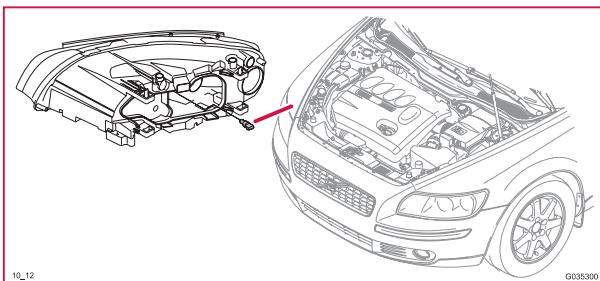


10/17 Lamp housing, rear right V70

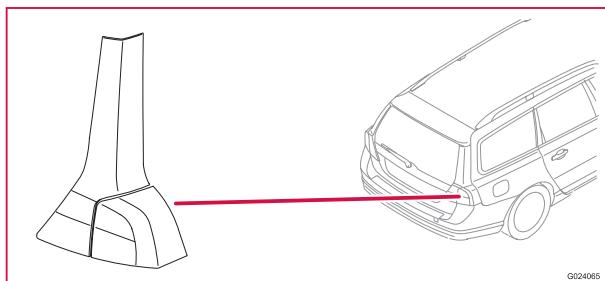


10/13 Front left direction indicator

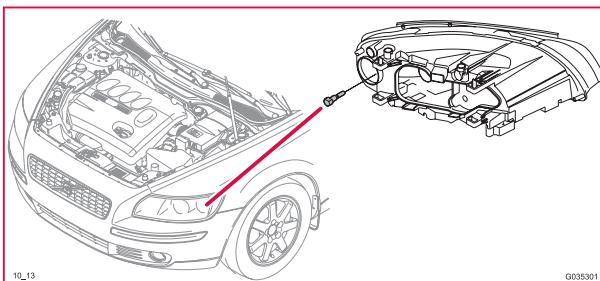


10/17 Lamp housing, rear right, S80

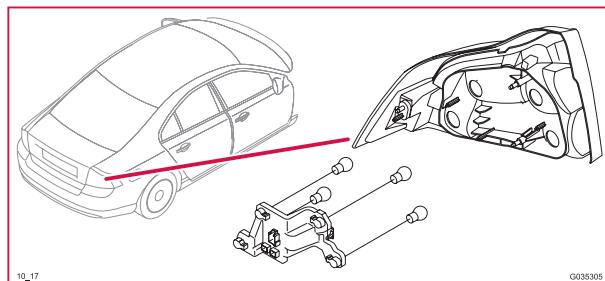

10/14 Front right direction indicator

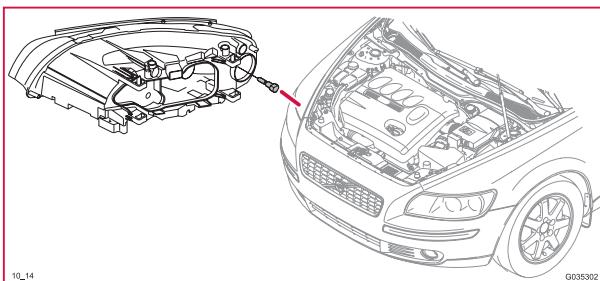


10/18 Lamp housing, rear left, V70

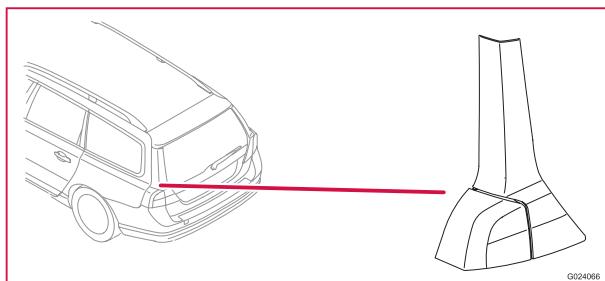


Component illustrations

10/18 S80 - 10/44


10/18 Lamp housing, rear left, S80

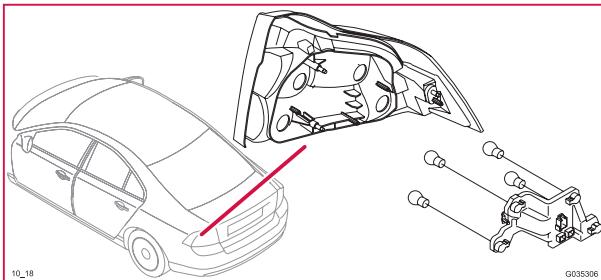


10/29 Glove compartment lighting

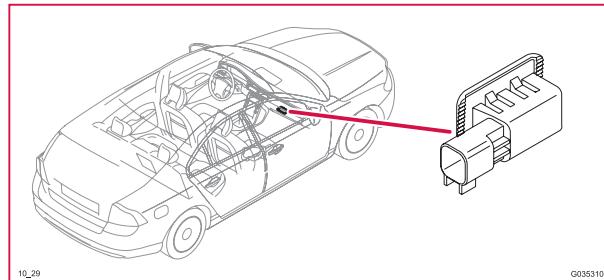


10/19 Auxiliary brake light V70

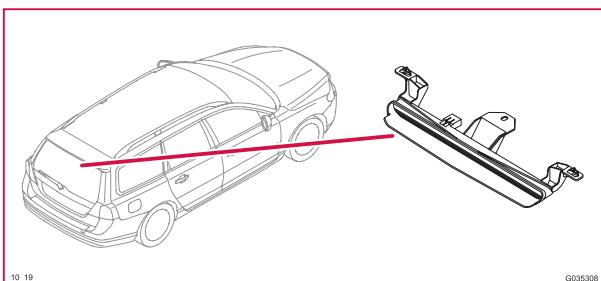


10/43 Brake light right, V70

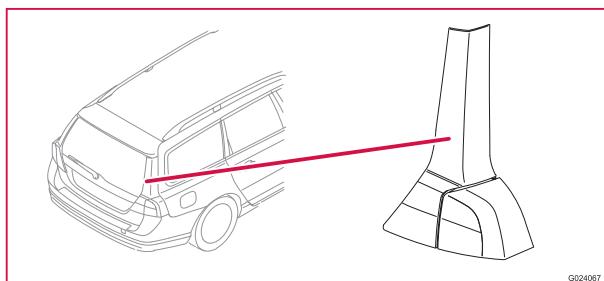


10/19 Auxiliary brake light, S80

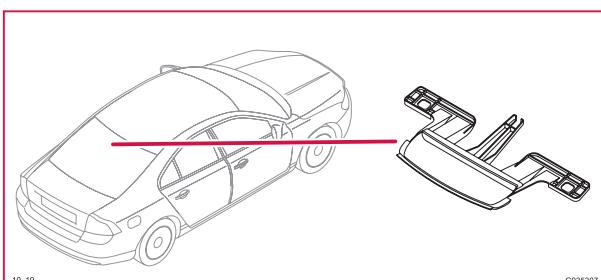


10/43 Brake light right, S80

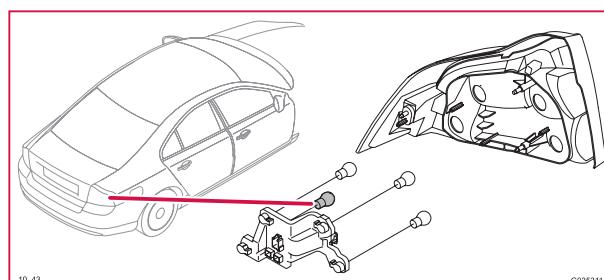


10/22 Ceiling light

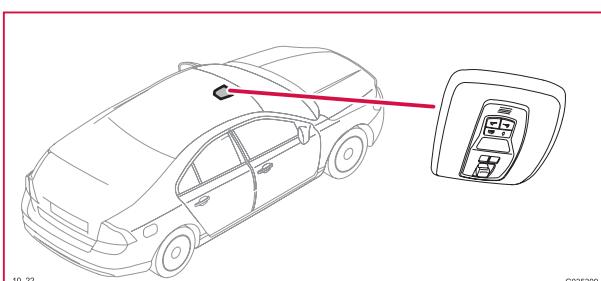


10/44 Tail lamp 1 right, V70

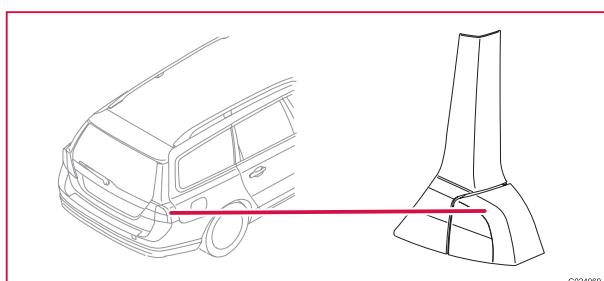

10/25 Ceiling light, cargo compartment, V70

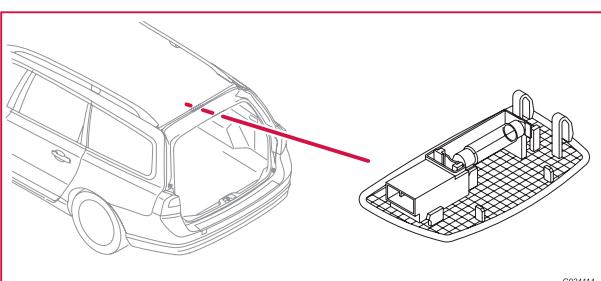


10/44 Tail lamp 1 right, S80

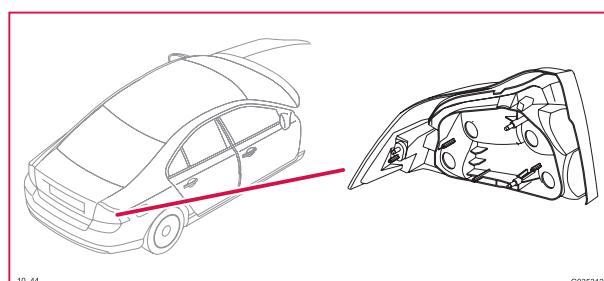


Component illustrations

10/45 - 10/50


10/45 Tail lamp 2 right, V70

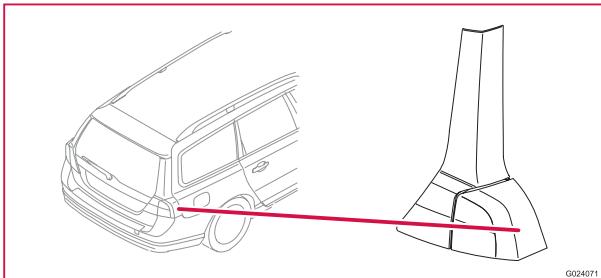


10/45 Tail lamp 2 right, S80

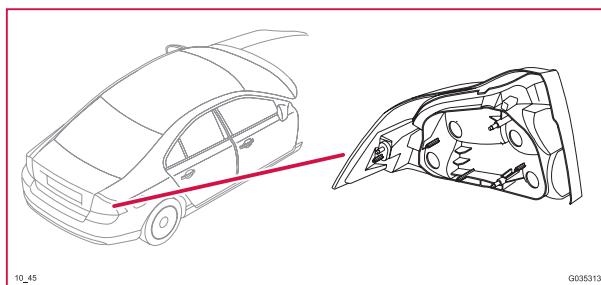


10/46 Fog light, rear right, V70

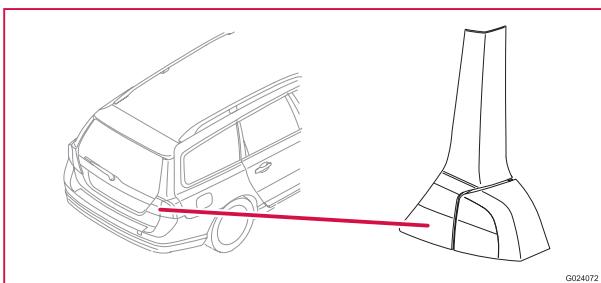


10/46 Fog light, right rear, S80

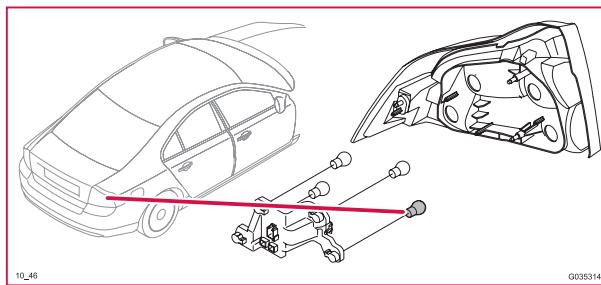


10/47 Direction indicator, rear right, V70

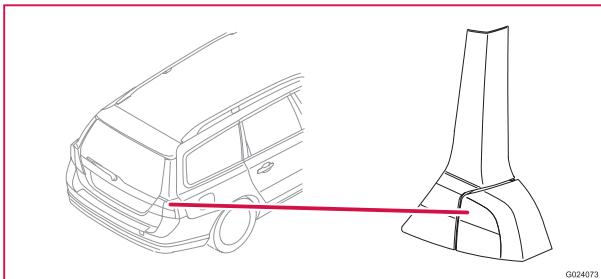


10/47 Direction indicator, right rear, S80

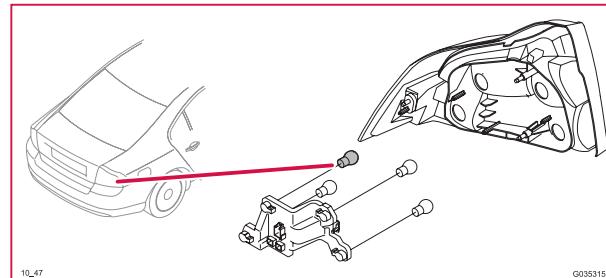


10/48 Reversing light, right, V70

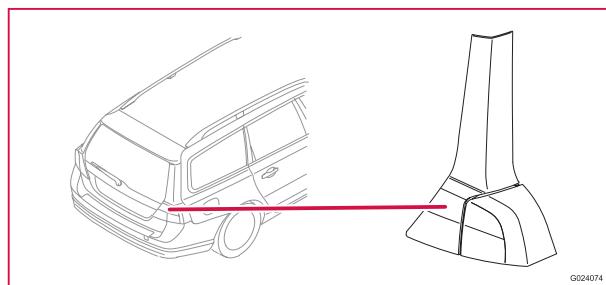


10/48 Reversing light right, S80

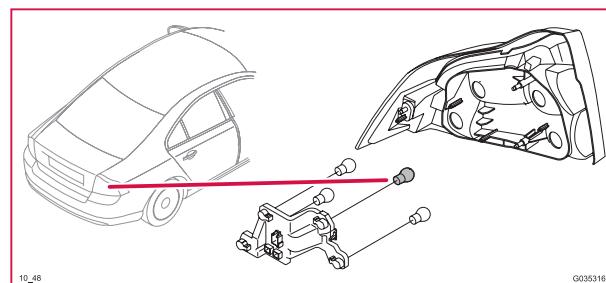

10/50 Brake light, left, V70

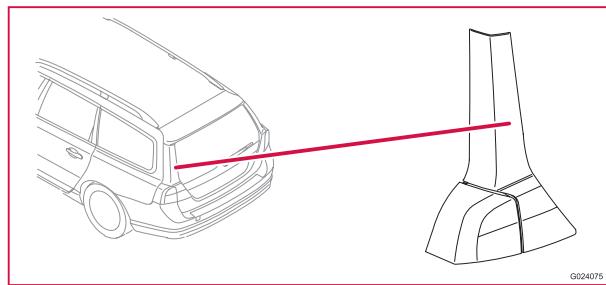


10/50 Brake light left, S80

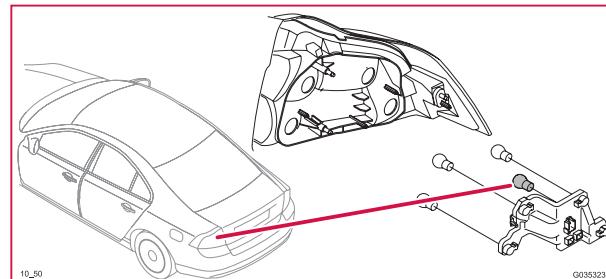


Component illustrations

10/51 - 10/55


10/51 Tail lamp 1 left, V70

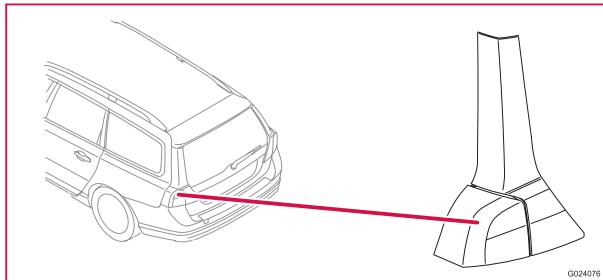


10/53 Fog light, rear left, S80

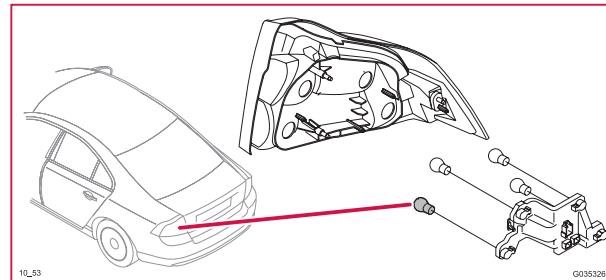


10/51 Tail lamp 1 left, S80

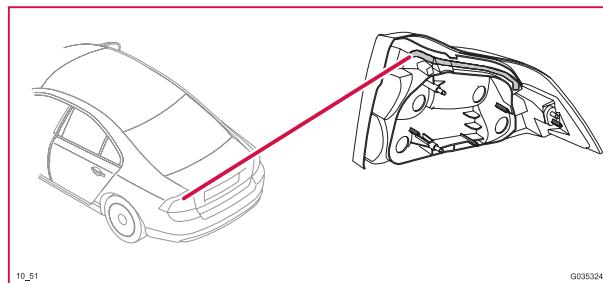


10/54 Direction indicator, left rear, V70

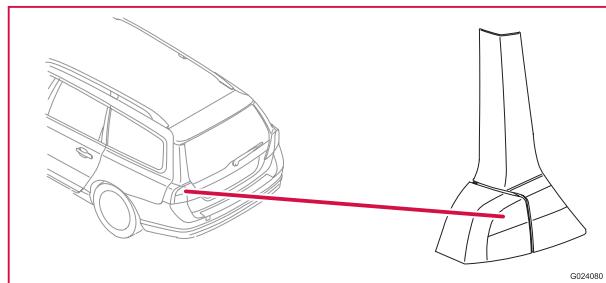


10/52 Tail lamp 2 left, V70

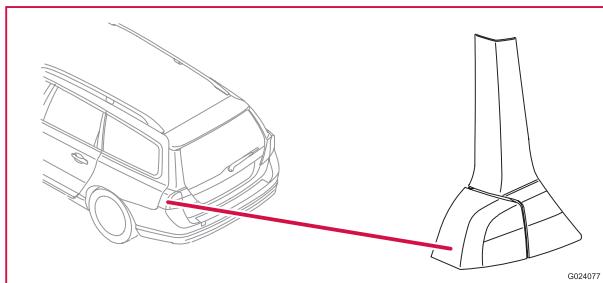


10/54 Direction indicator, rear left, S80

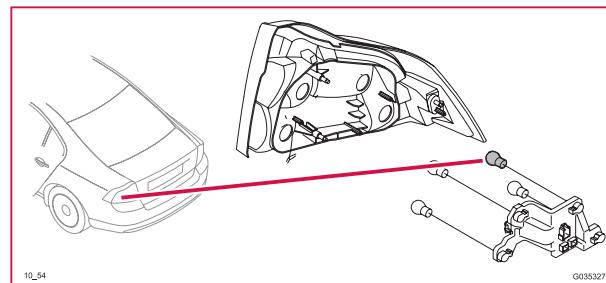


10/52 Tail lamp 2 left, S80

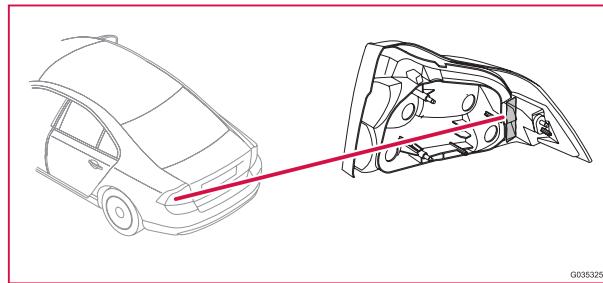


10/55 Reversing light left, V70

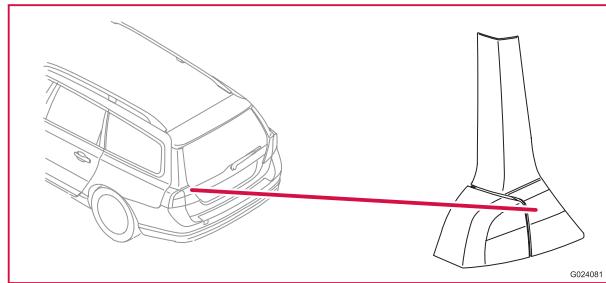

10/53 Fog light, left rear, V70

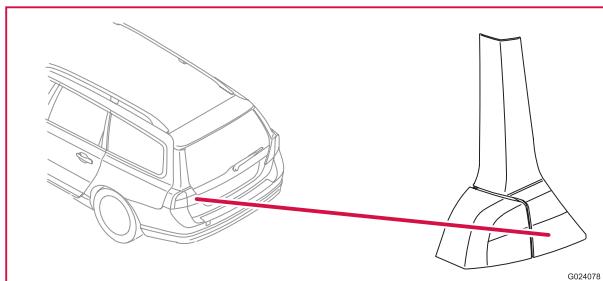


10/55 Reversing light left, S80

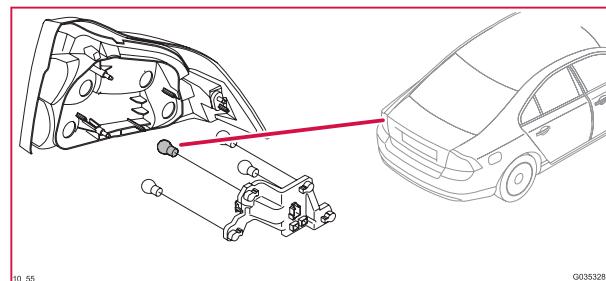

Component illustrations

10/64 - 10/125


10/64 Right-hand high beam

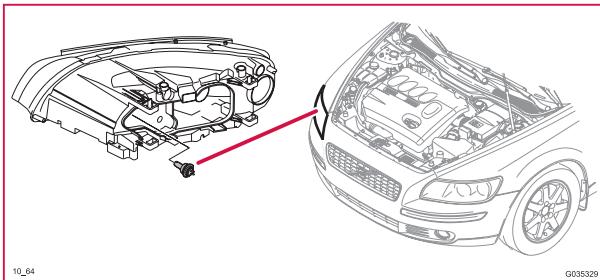

10_64

G035329


10/70 Left-hand low beam

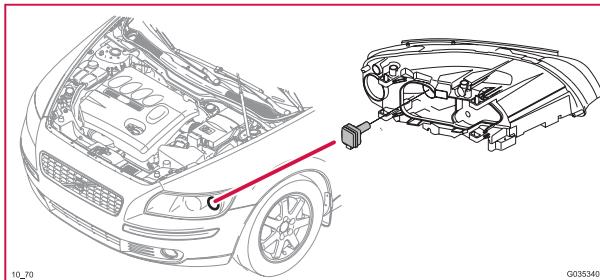

10_70

G035340


10/65 Auxiliary light, front right

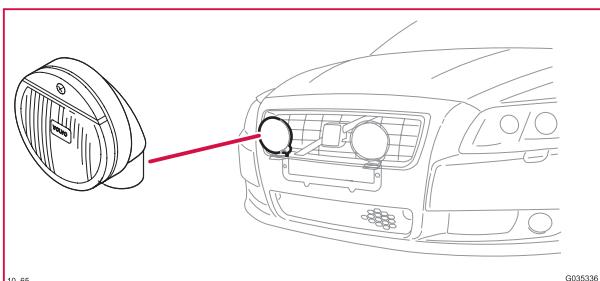

10_65

G035336


10/72 Front ashtray lighting

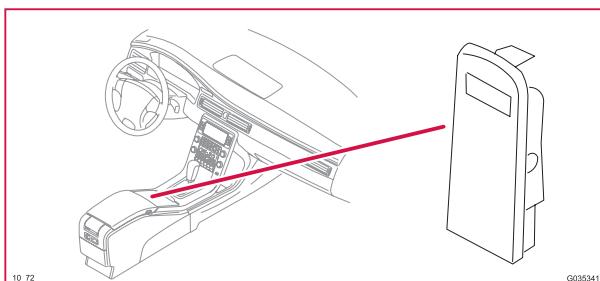

10_72

G035341


10/66 Right-hand low beam

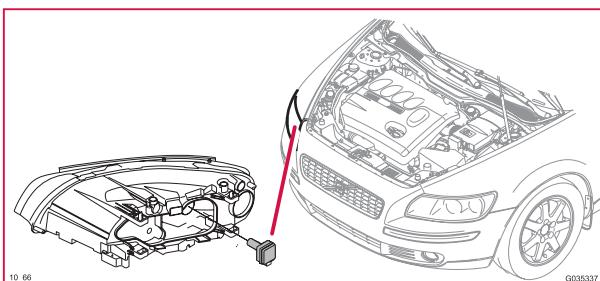

10_66

G035337


10/114 Left-hand vanity mirror lighting

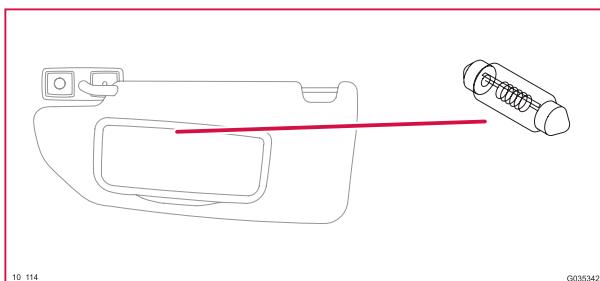

10_114

G035342


10/68 Left-hand high beam

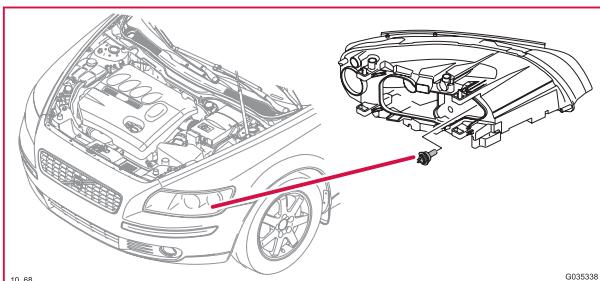

10_68

G035338


10/115 Right-hand vanity mirror lighting

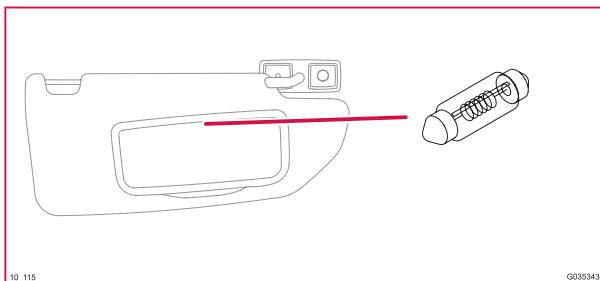

10_115

G035343


10/69 Auxiliary light, front left

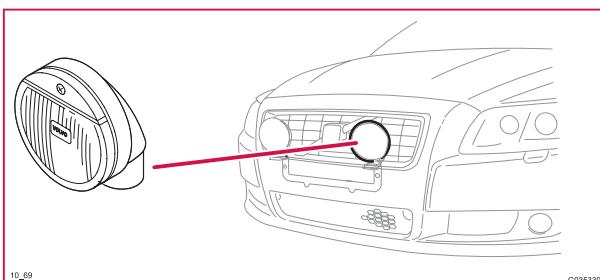

10_69

G035339

10/125 Left-hand front courtesy lighting

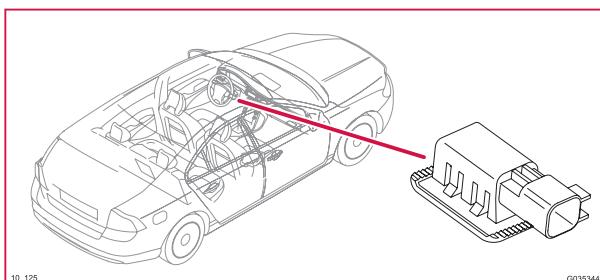


10_125

G035344


Component illustrations

10/126 - 10/241


10/126 Right-hand front courtesy lighting

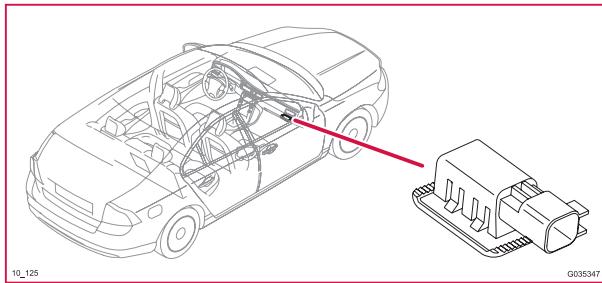


10/127 Lighting, cargo compartment, left-hand side, V70

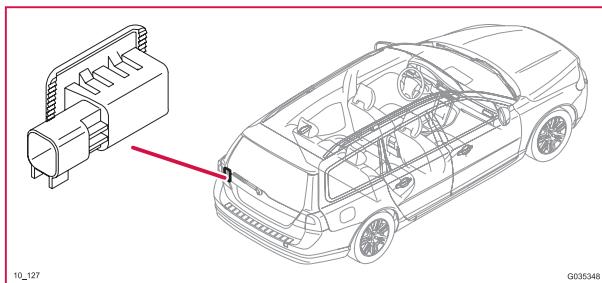


10/127 Lighting, cargo compartment, left-hand side, S80

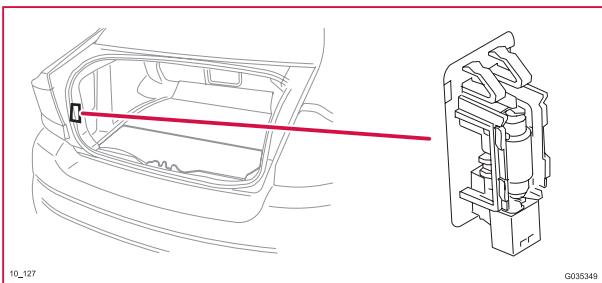


10/128 Lighting, cargo compartment, right-hand side, V70

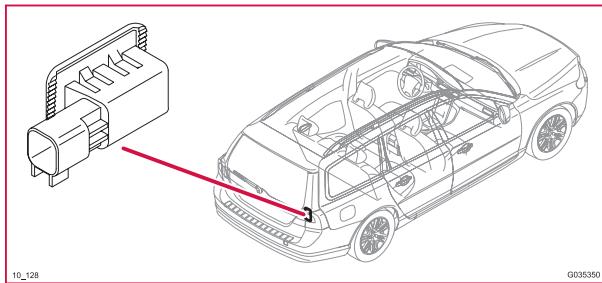


10/128 Lighting, cargo compartment, right-hand side, S80

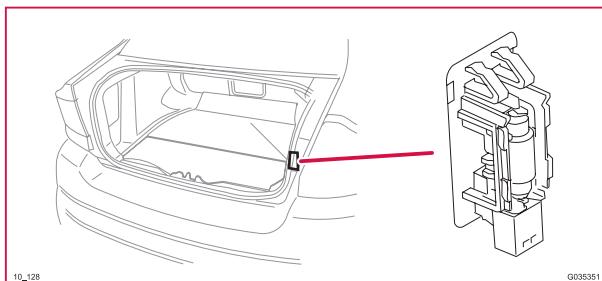


10/148 Lighting, left front door mirror

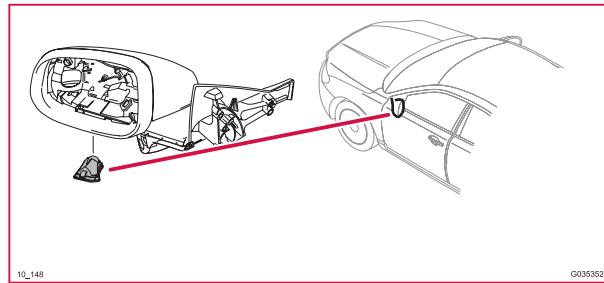


10/149 Lighting, right front door mirror

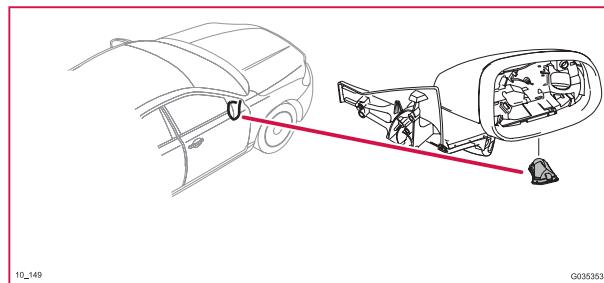


10/150 Rear reading light

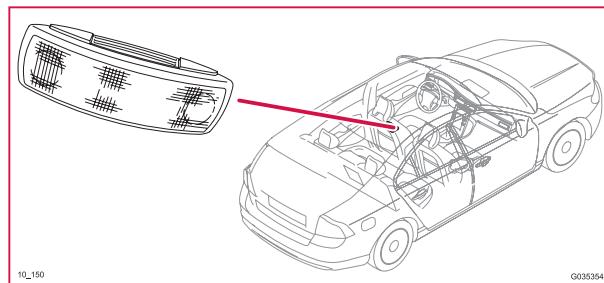

10/161 Lighting mug holder

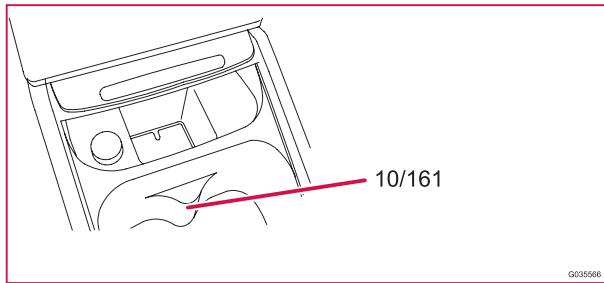


10/241 Left-hand front door handle lighting

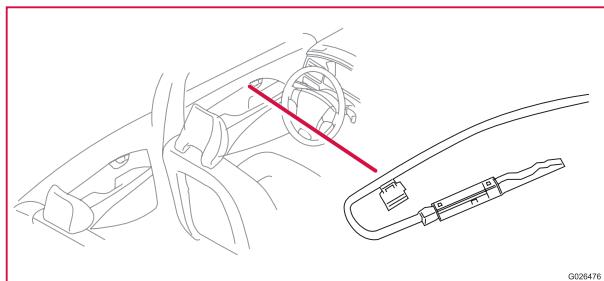


Component illustrations

10/242 - 10/280


10/242 Right-hand front door handle lighting

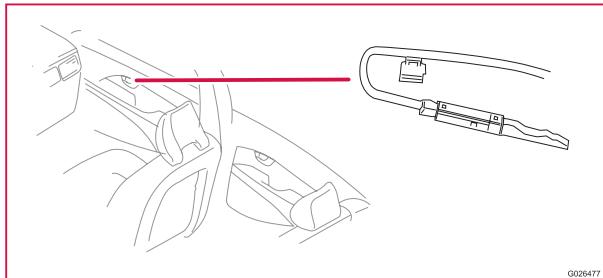


10/243 Left-hand rear door handle lighting

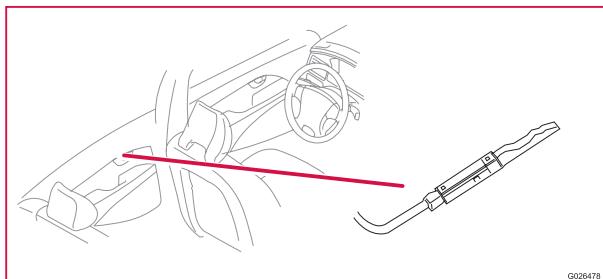


10/244 Right-hand rear door handle lighting

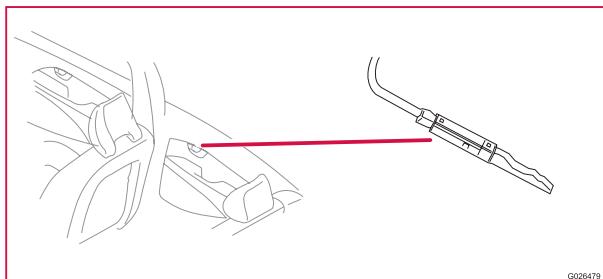


10/249 Sill lighting, front driver's side

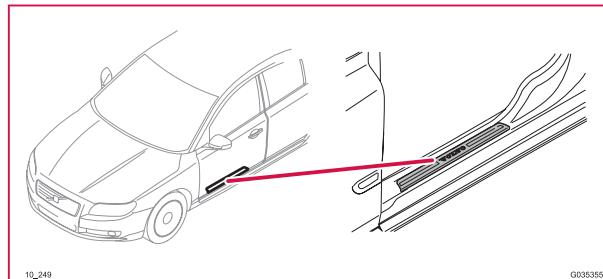


10/250 Sill lighting, front passenger side

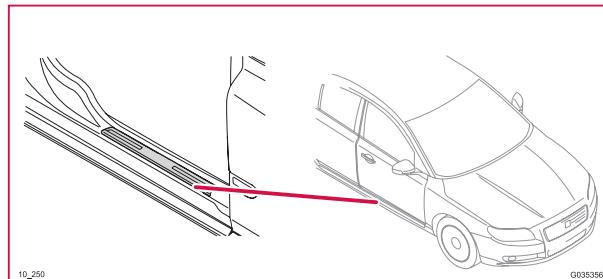


10/251 Sill lighting, rear driver's side, S80

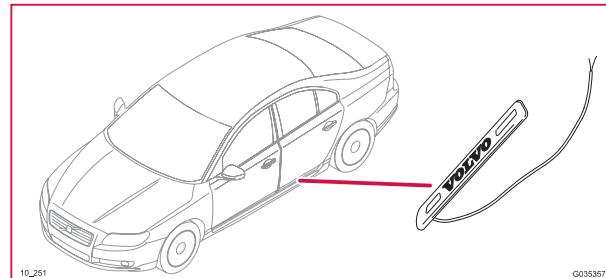


10/252 Sill lighting, rear passenger side, S80

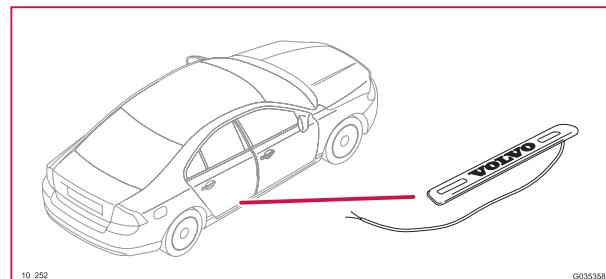


10/276 Lighting center armrest rear 1

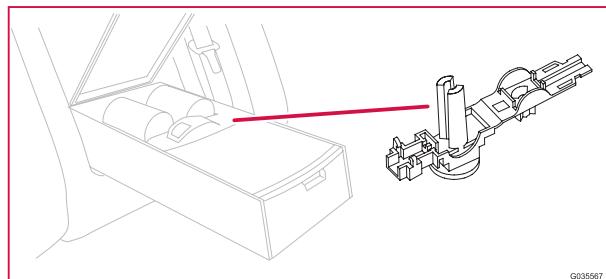

10/277 Lighting center armrest rear 2

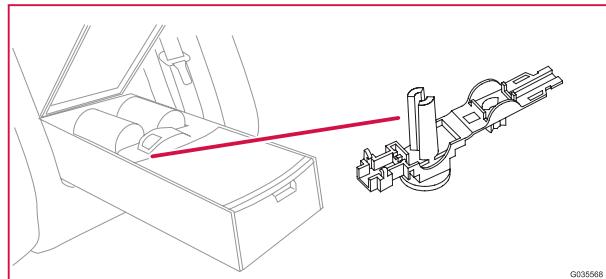


10/280 Lighting cooler compartment left

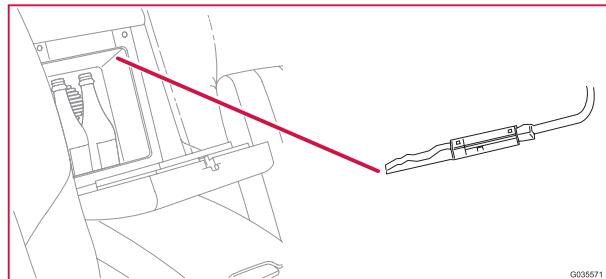

Component illustrations


10/281 - 11D/A

10/281 Lighting cooler compartment right

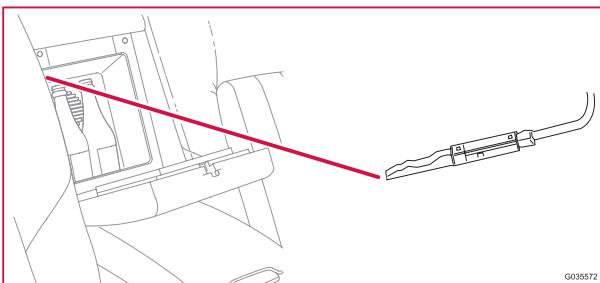


G035572

10/286 Lighting floor driver's side

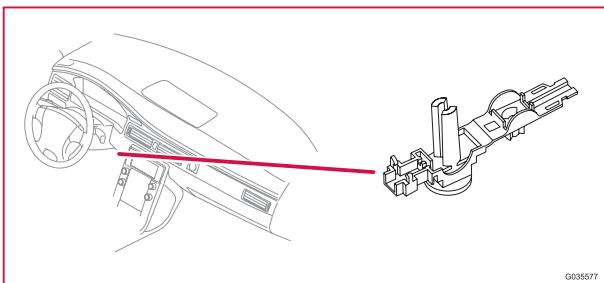


G035577

10/282 Lighting door compartment front left

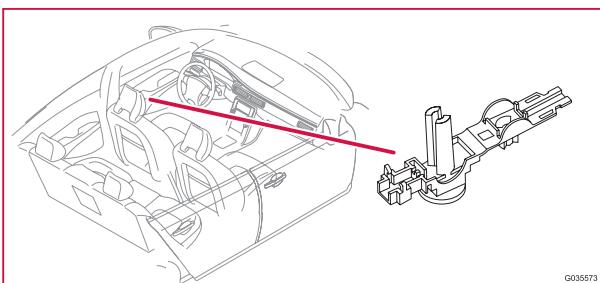


G035573

10/287 Lighting floor passenger side

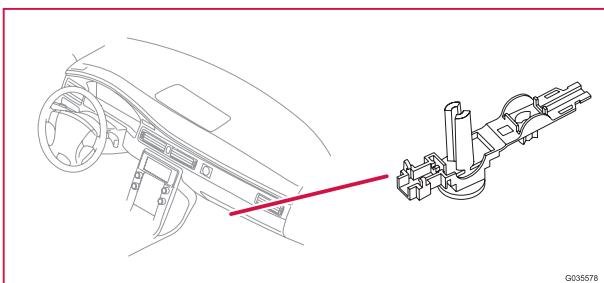


G035578

10/283 Lighting door compartment front right

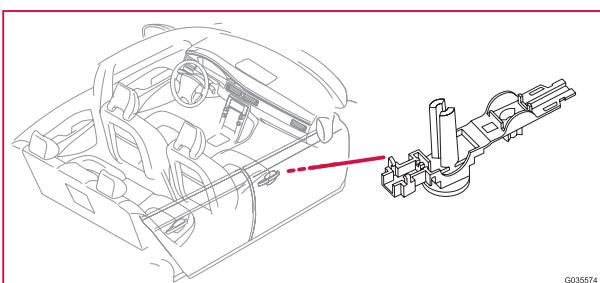


G035574

11A/no. Main fuses in the engine compartment fuse box

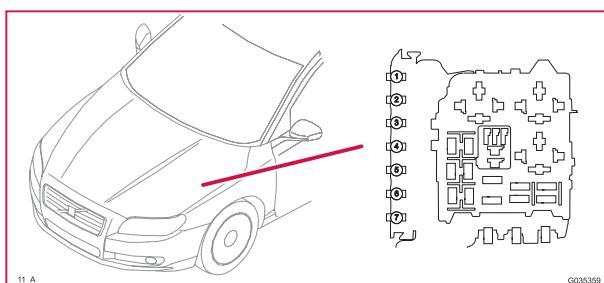


G035359

10/284 Lighting door compartment front left

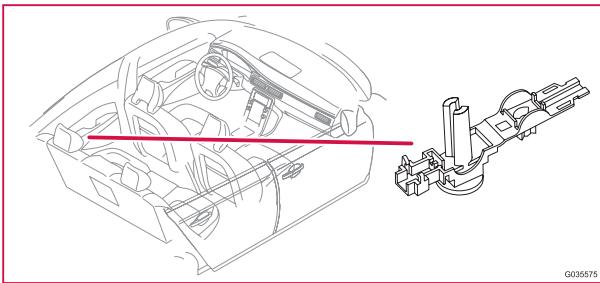


G035575

11B/no. Fuses in the engine compartment fuse box

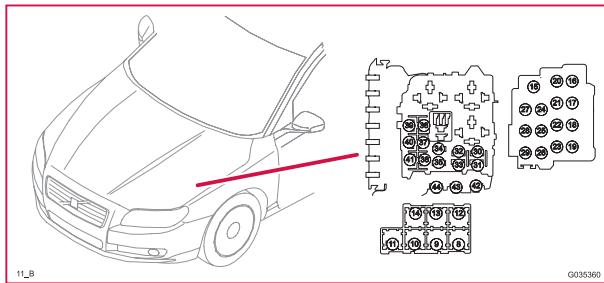


G035360

10/285 Lighting door compartment front right

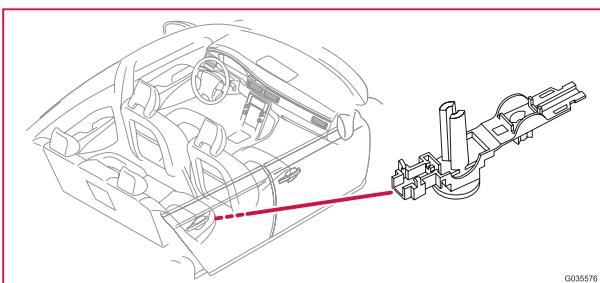

G035576

11D/A Fuses in cargo compartment fuse box

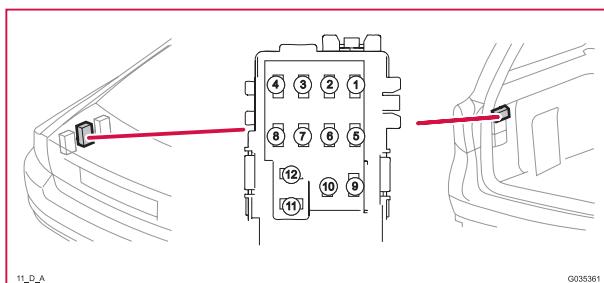


G035361


Component illustrations

11D/B - 16/4.1


11D/B Fuses in cargo compartment fuse box

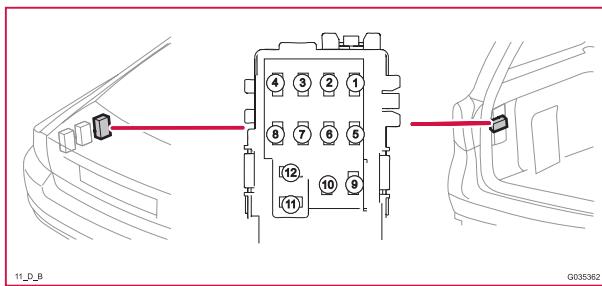


11D/D Fuses in cargo compartment fuse box

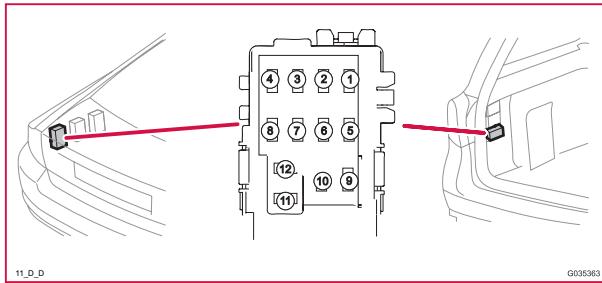


11/no. Fuse in extra fuse holder, passenger compartment

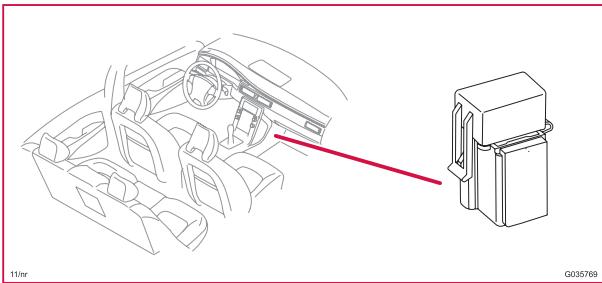


15/31 Distribution box in engine compartment

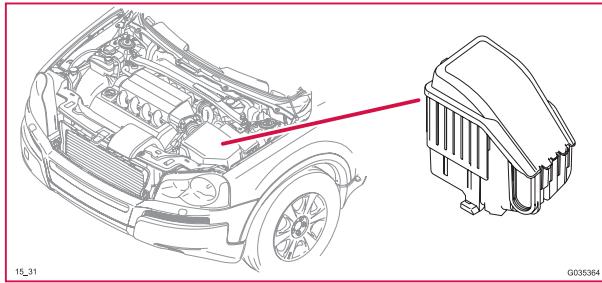


15/32 Distribution box in cargo compartment

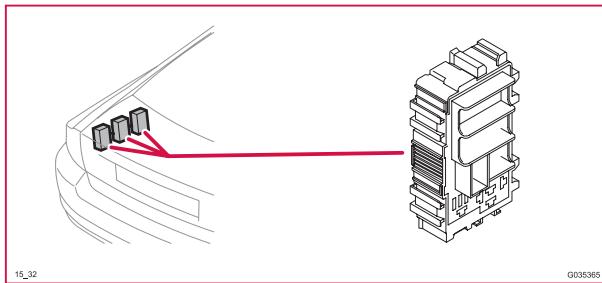


15/33 Engine compartment cold zone

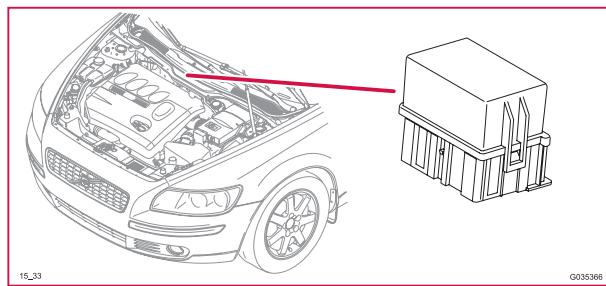


16/1 Integrated Audio Module (IAM)

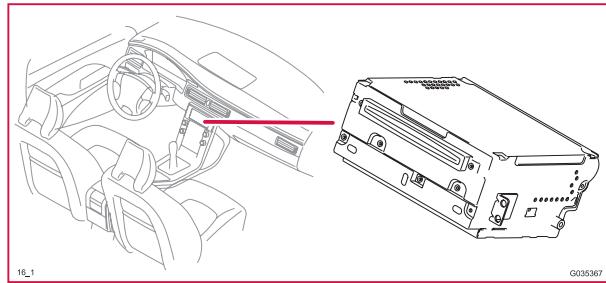


16/3.1 Right-hand front door speaker

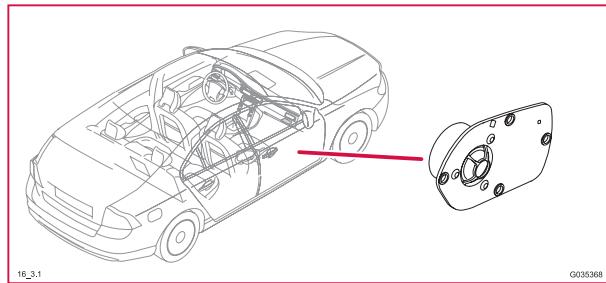

16/3.2 Right-hand front door speaker

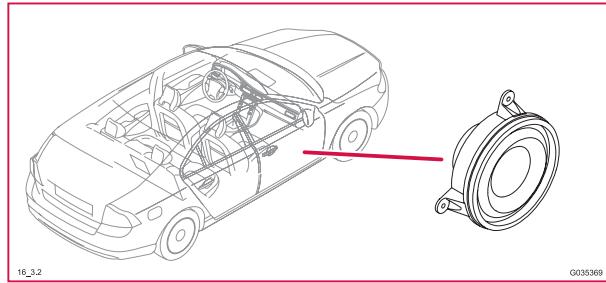


16/4.1 Left-hand front door speaker

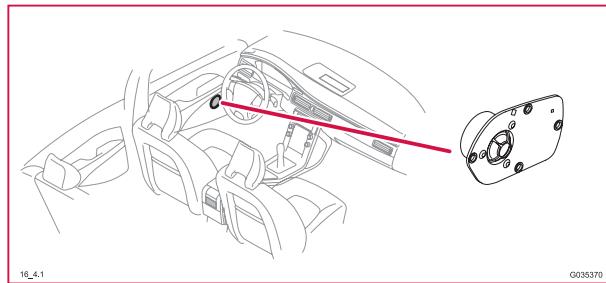


Component illustrations

16/4.2 - 16/45


16/4.2 Left-hand front door speaker

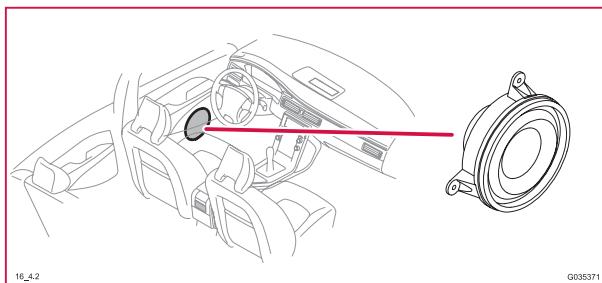


16/16 Window antenna amplifier

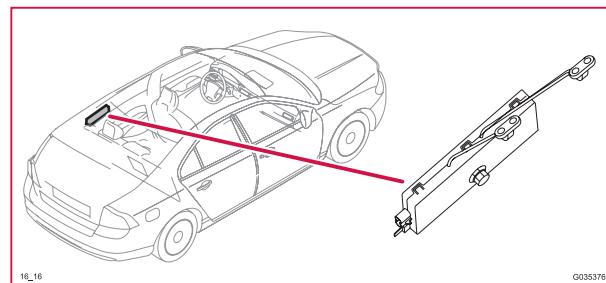


16/5 Right-hand rear door speaker

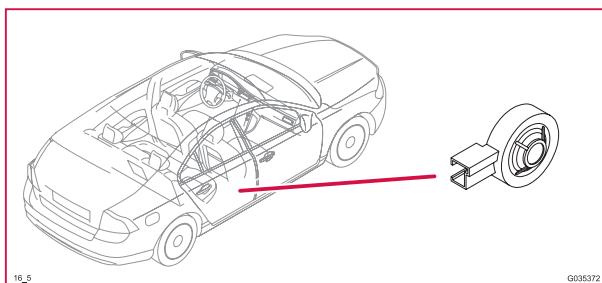


16/26 Center dashboard speaker

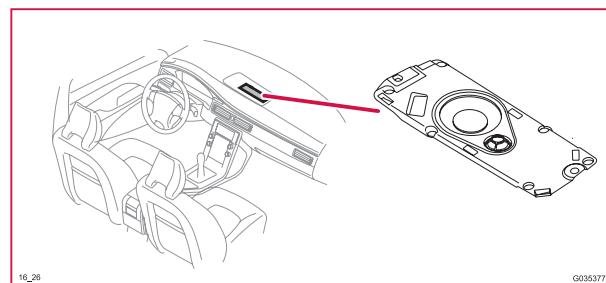


16/6 Left-hand rear door speaker

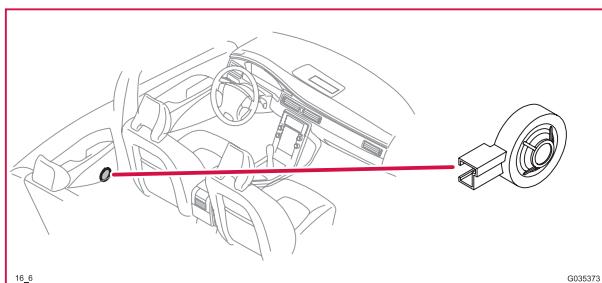


16/35 Siren Control Module (SCM)

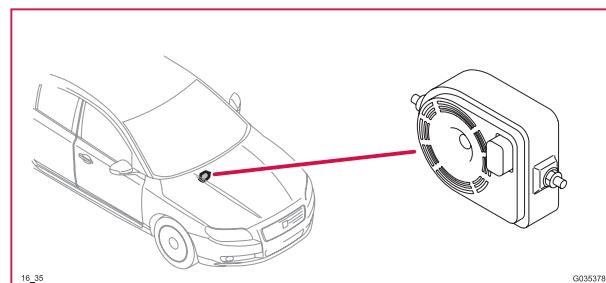


16/10 Horn 1

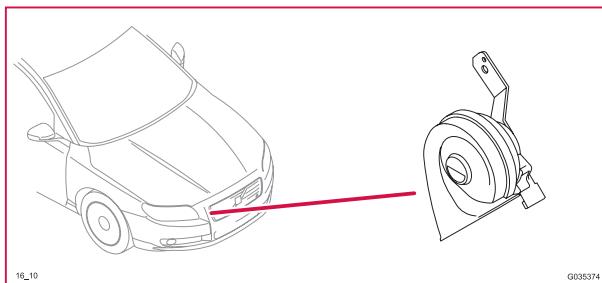

16/36 TV receiver

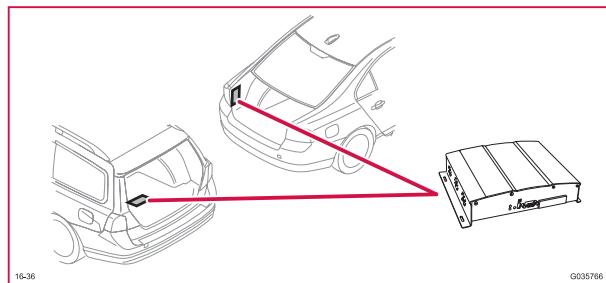

16/11 Horn 2

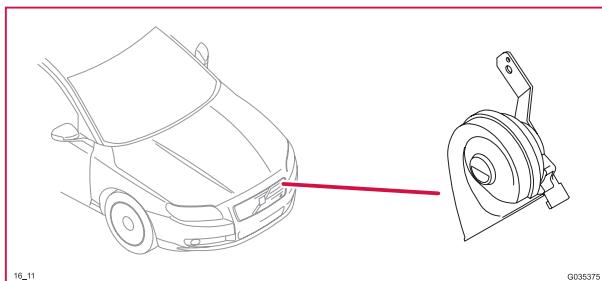


16/45 Portable navigation system




Component illustrations

16/46 - 16/81A


16/46 High Level Display Front (HLDF)

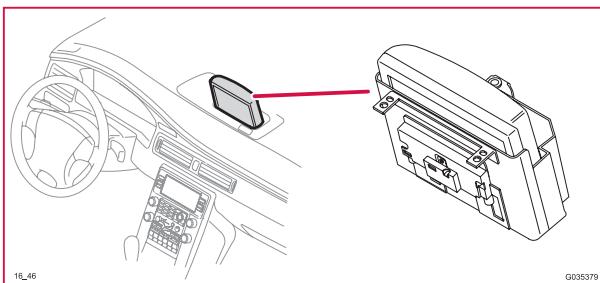


16/62 Hand unit, mobile phone

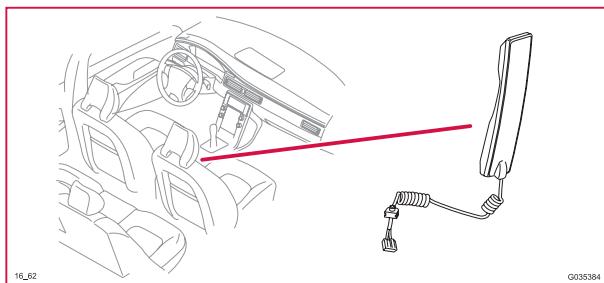


16/47 Antenna GSM/GPS/RDAR

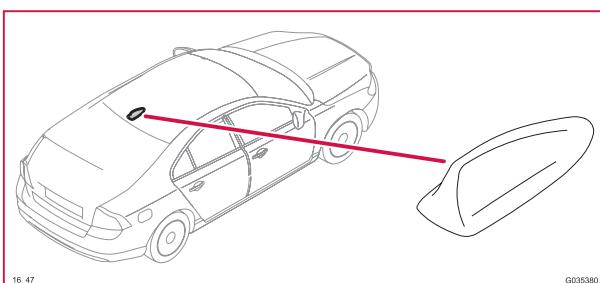


16/69 TV antenna left

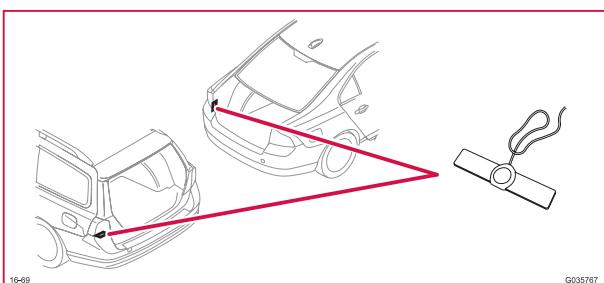


16/55 Left-hand front tweeter

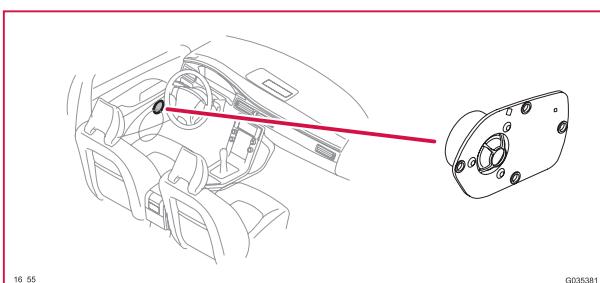


16/70 TV antenna right

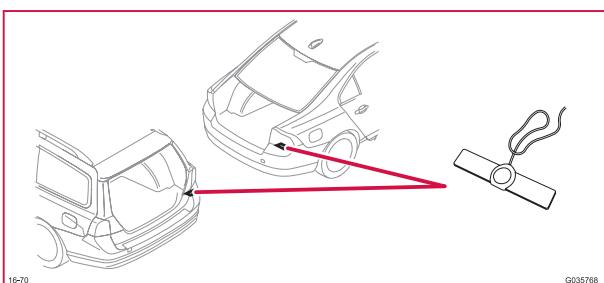


16/56 Right-hand front tweeter

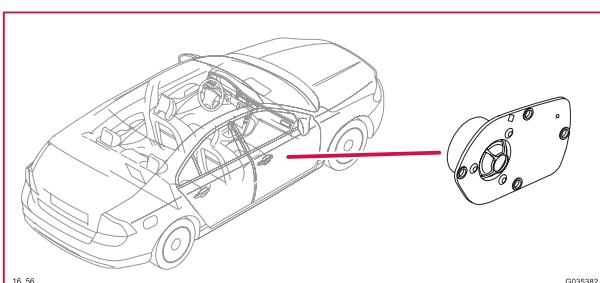


16/79 Subwoofer Module (SUB), V70

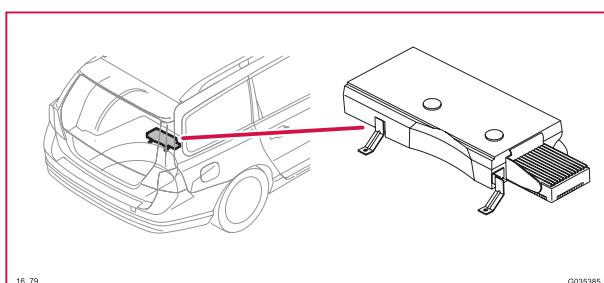

16/60 Phone Module (PHM)

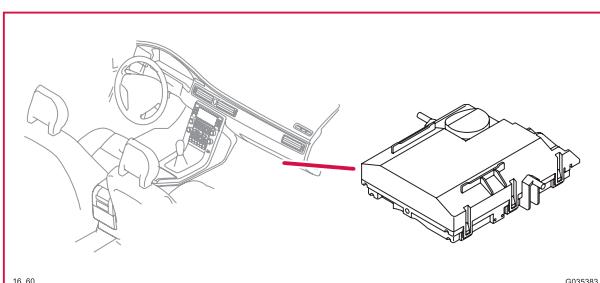


16/81A Screen, LH head restraint

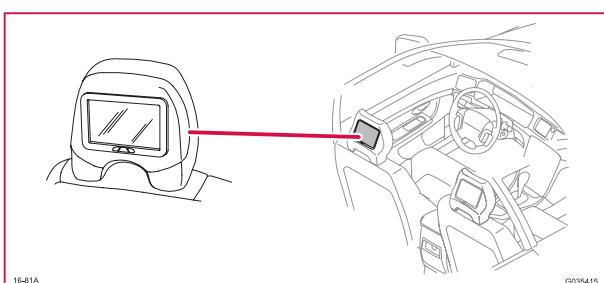


Component illustrations

16/81B - 16/132 V70


16/81B Screen, RH head restraint

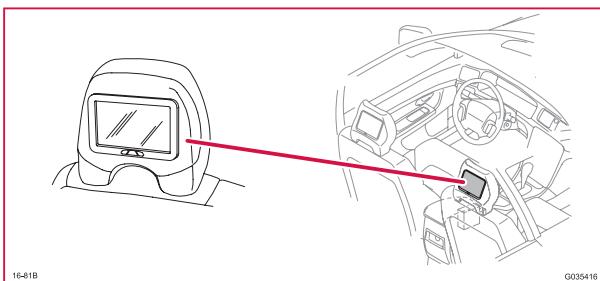


16/98 Microphone

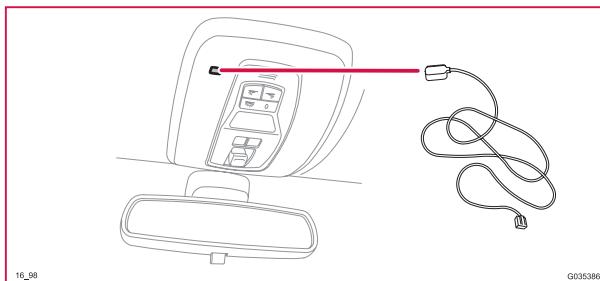


16/105 Audio module (AUD)

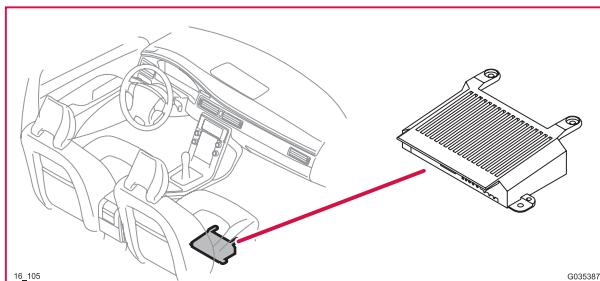


16/108 Multimedia Module (MMM)

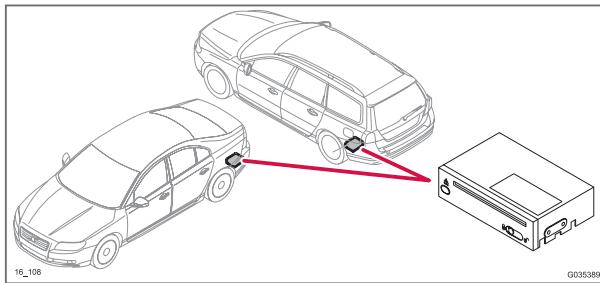


16/109 DVD player/control module

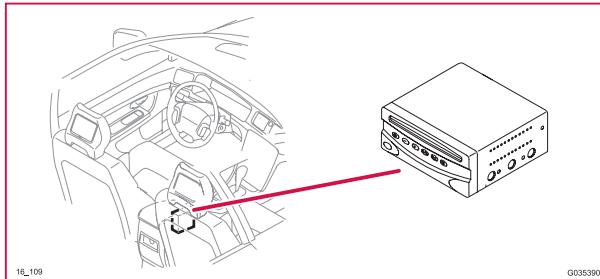


16/123 Auxiliary equipment input (AUX)

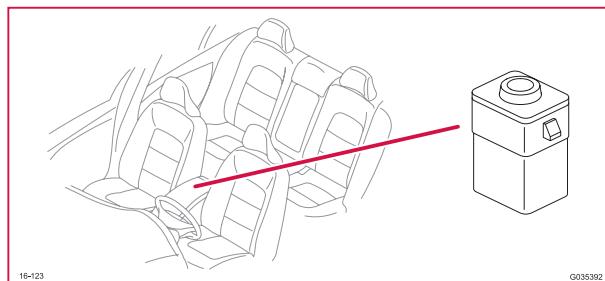


16/123.2 Auxiliary equipment input (AUX)

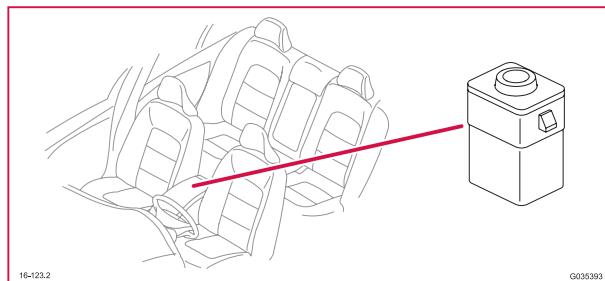


16/123.3 RSE-AUX input

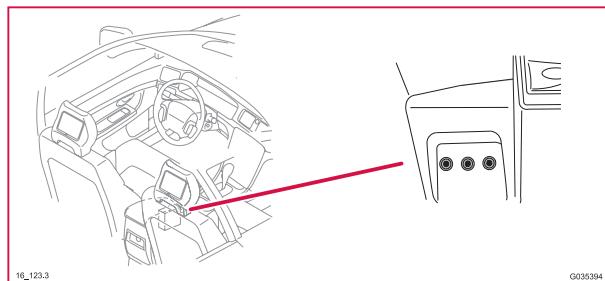

16/127 Microphone, mobile phone handsfree

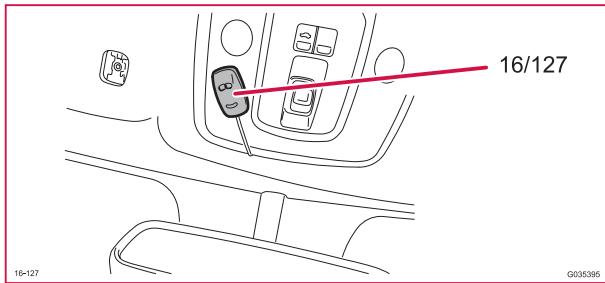


16/132 Antenna door lock trunk lid/tailgate, V70

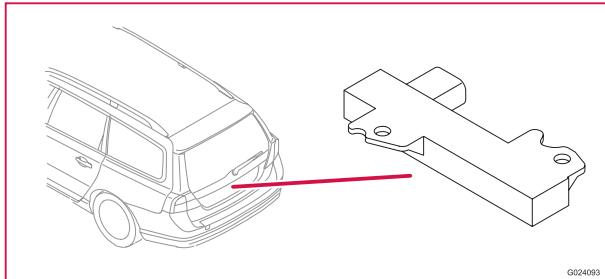


Component illustrations

16/132 S80 - 16/145


16/132 Antenna, door lock, bumper, S80

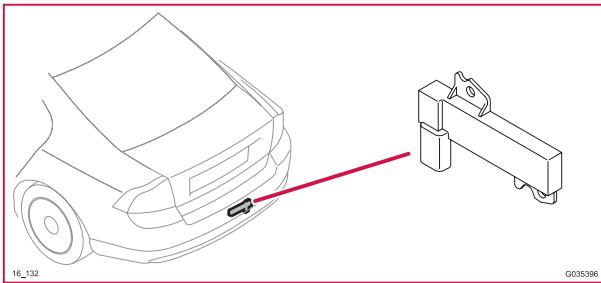


16/133 Antenna, door lock, cargo compartment

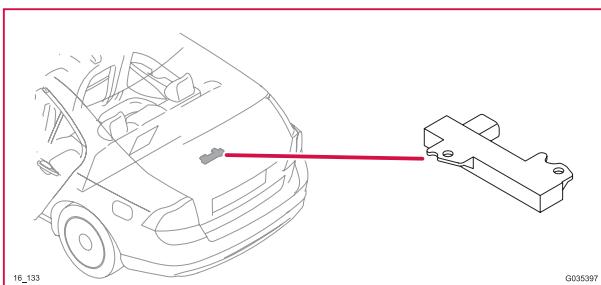


16/134 Antenna, door lock, passenger compartment 2

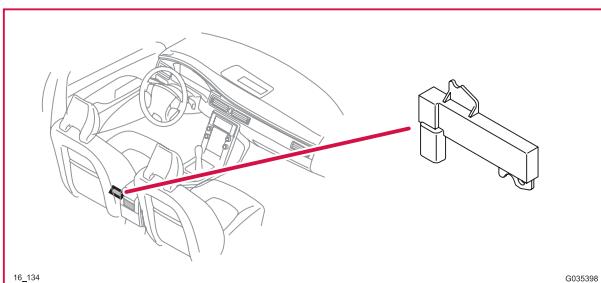


16/135 Antenna, door lock, passenger compartment 3

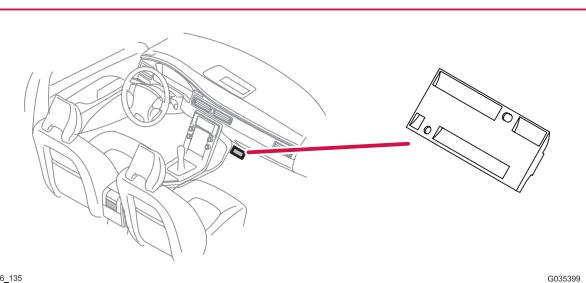


16/136 LH rear door tweeter

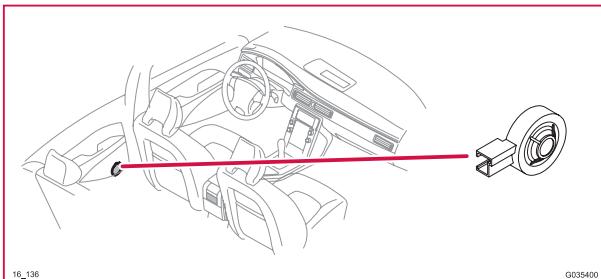


16/137 RH rear door tweeter

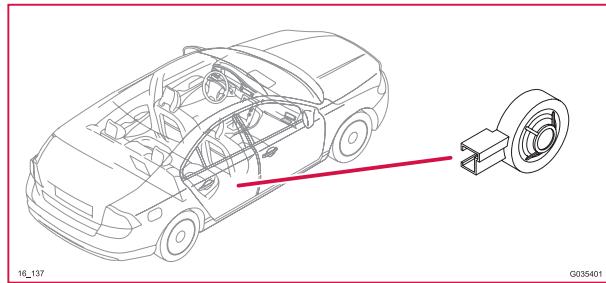


16/138 Right-hand rear window antenna

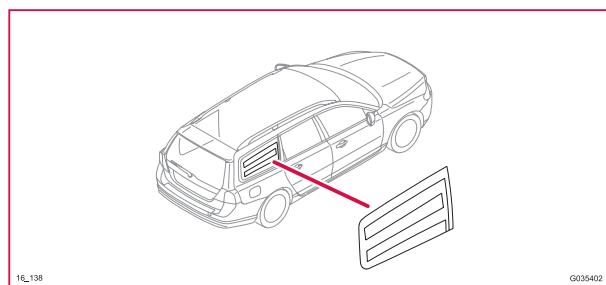


16/140 SIM card reader

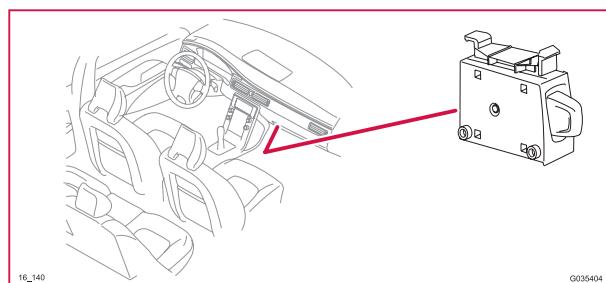

16/141 Interference filter, rear window, left

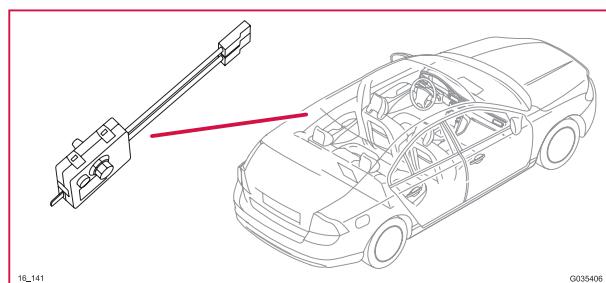


16/145 Remote digital audio receiver (RDAR)

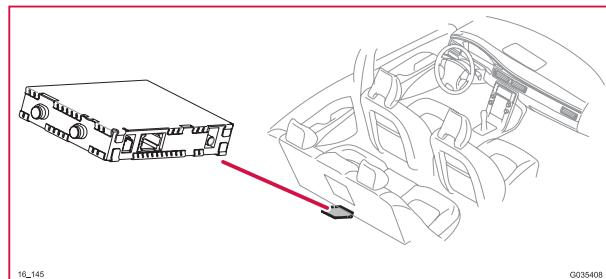


Component illustrations

16/147 - 17/39


16/147 Bluetooth Phone Module (BPM)

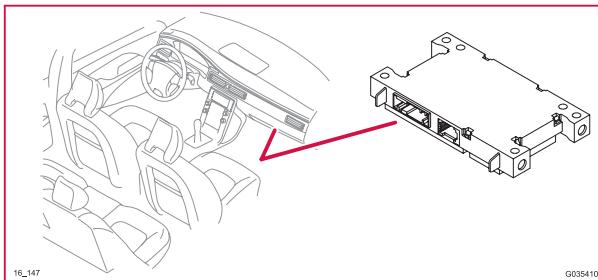


16/159 Control module, cellular phone handsfree

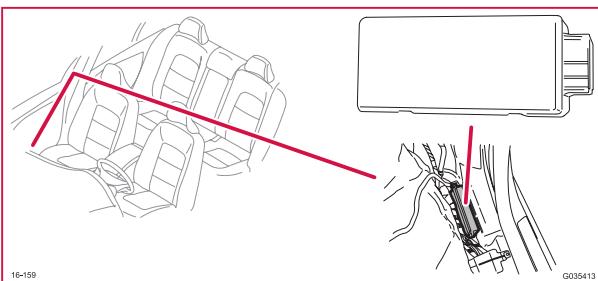


16/162 Digital Audio Broadcast Module (DABM)

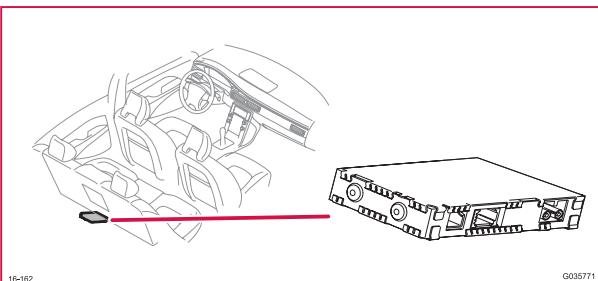


16/181 Rear headphone sockets

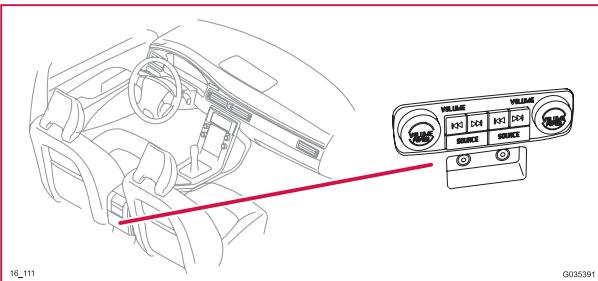


17/13 Data link connector

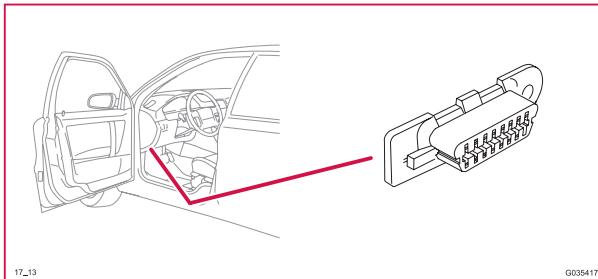


17/19 12 V outlet, cargo compartment, V70

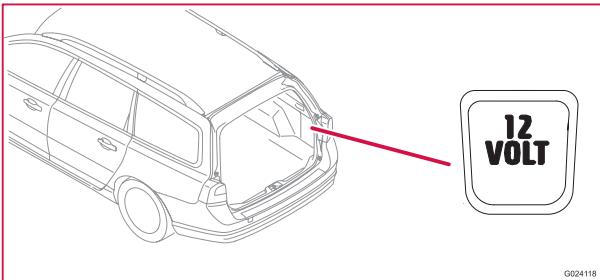


17/19 12 V outlet, cargo compartment, S80

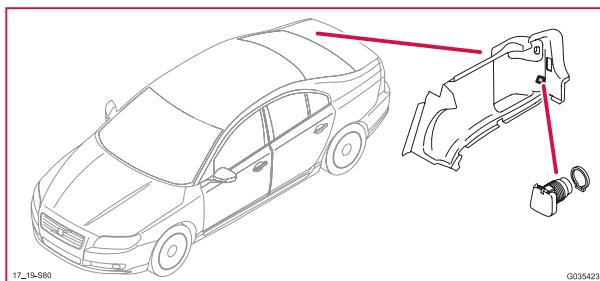


17/37 4-pin outlet, tow hitch cable harness

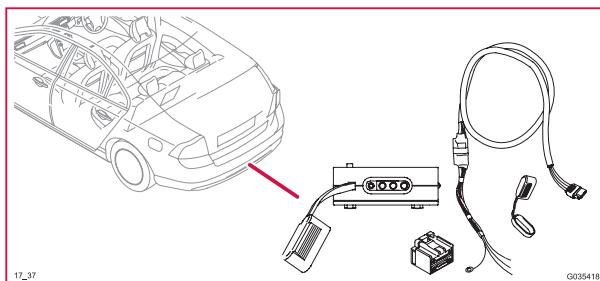

17/38 7-pin outlet, tow hitch cable harness

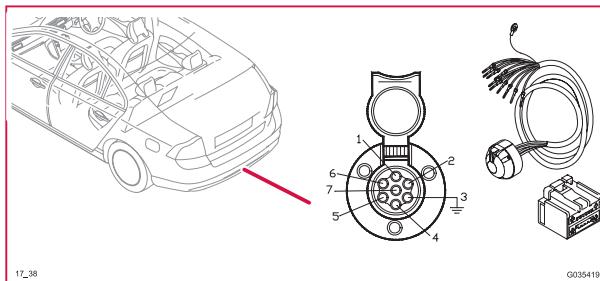


17/39 13-pin outlet, tow hitch cable harness

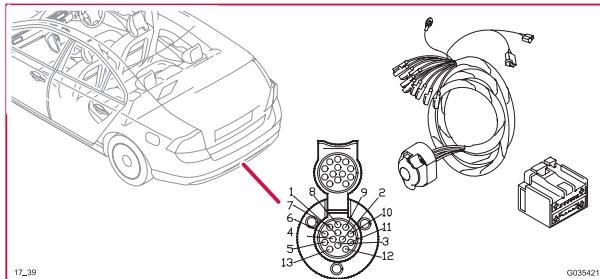


Component illustrations

17/42 - 26/6


17/42 USB-port

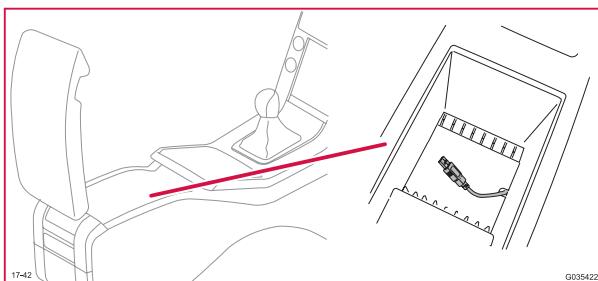


20/12-13 Spark plug and ignition coil

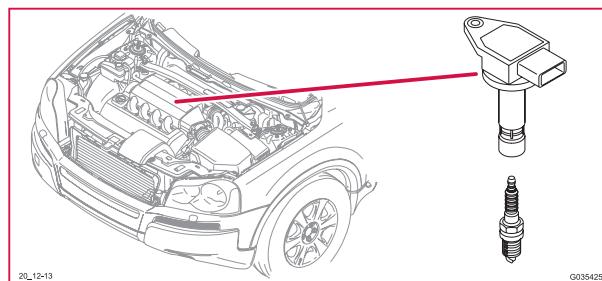


17/45 Alcolock outlet

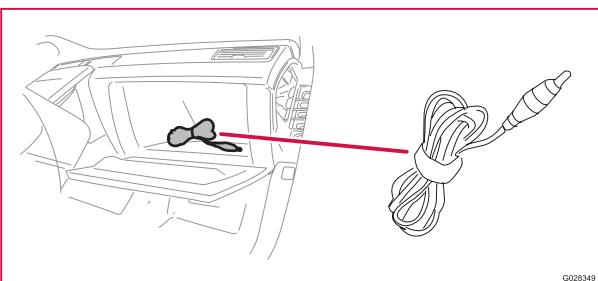


20/16 Capacitor

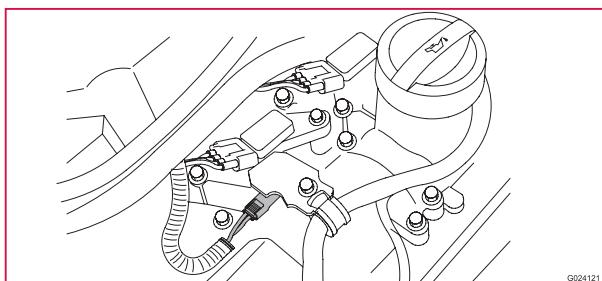


18/4 Contact reel

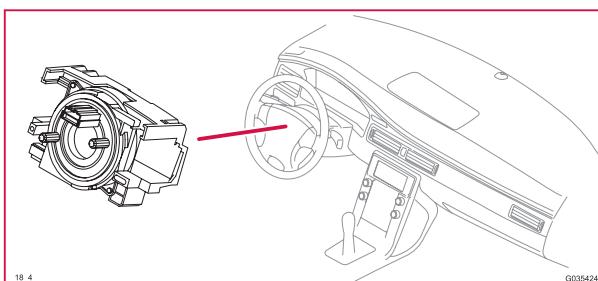


20/22-26 Glow plug

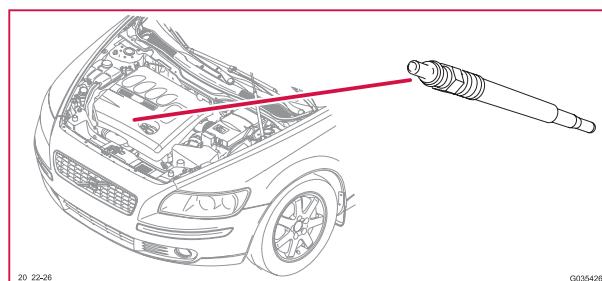


19/4 Analog clock

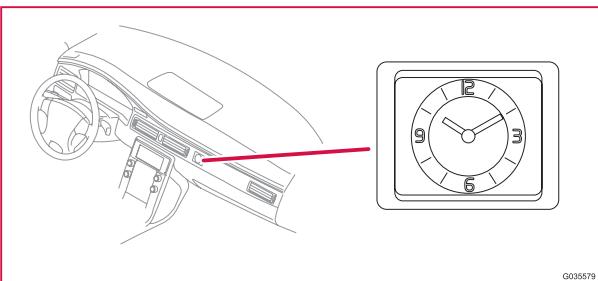


26/5 DC/AC converter, fuel tank

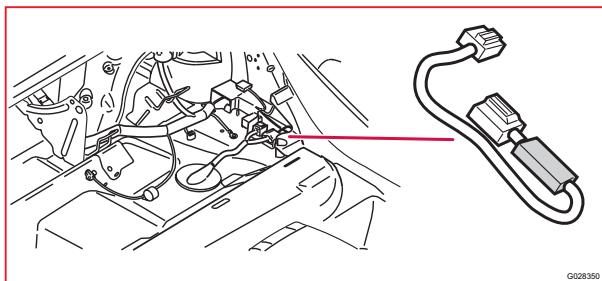

20/3-8 Spark plug and ignition coil

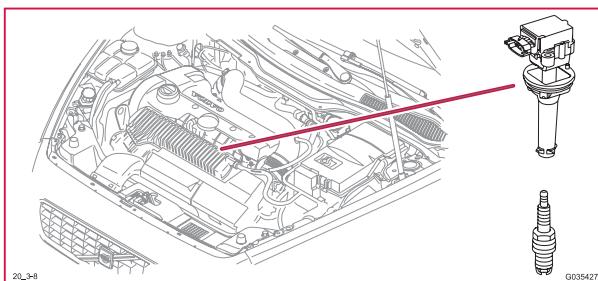


26/6 Converter/control module, sill moldings, driver's side

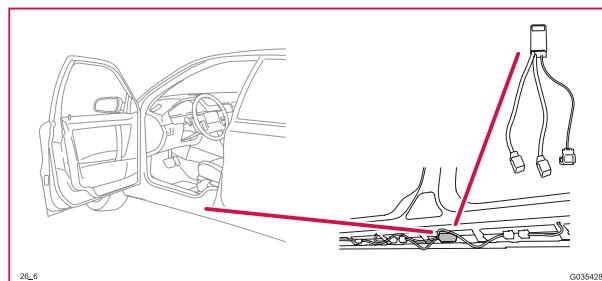

Component illustrations


26/7 - 31/3

**26/7 Converter/control module,
sill moldings, passenger side**

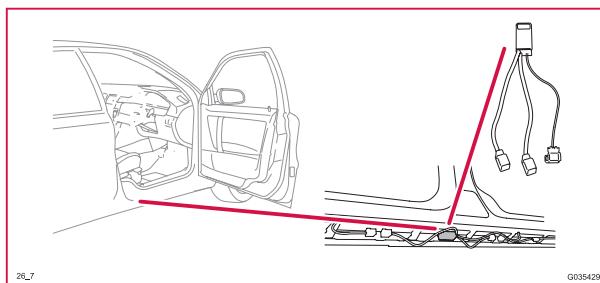


G035429

27/5 Forward looking camera

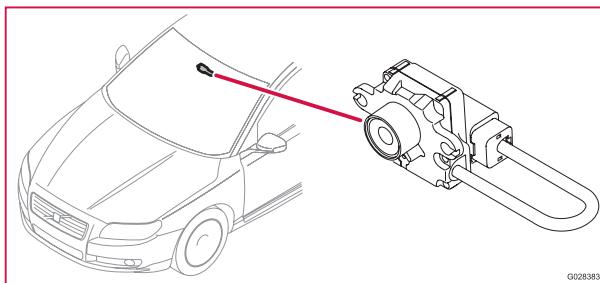


G028383

26/8 Alcolock charging cradle

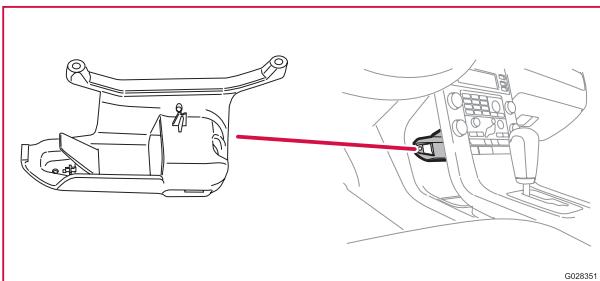


G028351

27/6 Camera

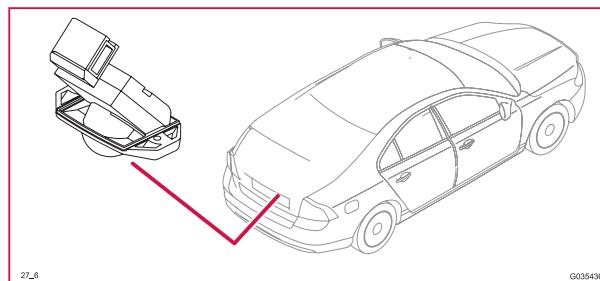


G035436

27/2 Indicator, visual collision warning

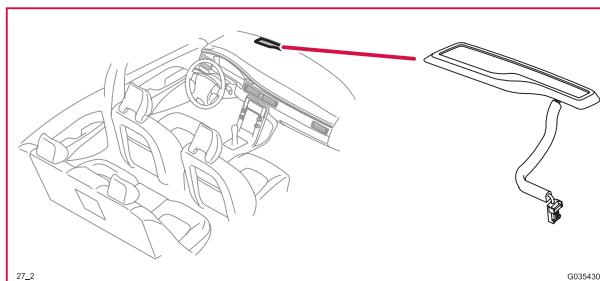


G035430

31/1 Ground connection, PTC

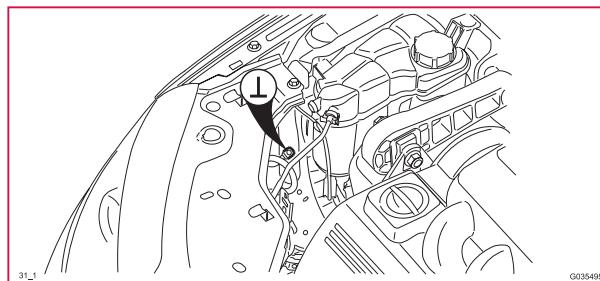


G035498

27/3 Left Camera Module (LCM)

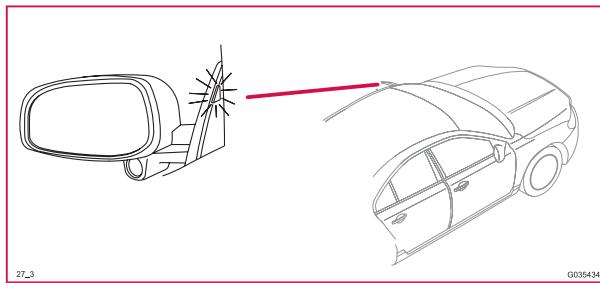


G035434

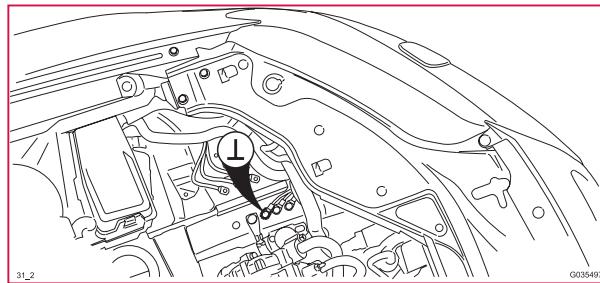


G035497

27/4 Right Camera Module (RCM)

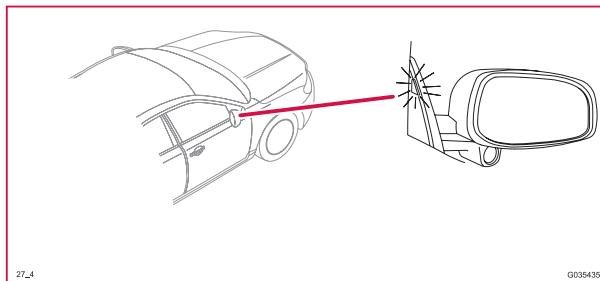


G035435

31/2 Ground connection, Left wheel housing

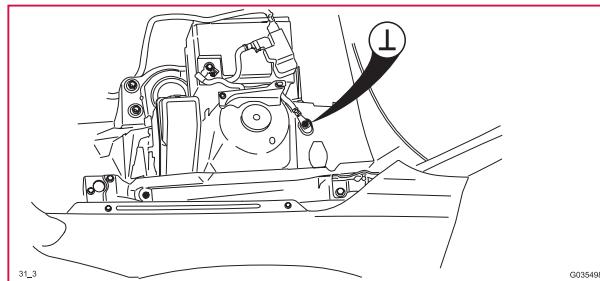

G035497

31/3 Ground connection, Body battery

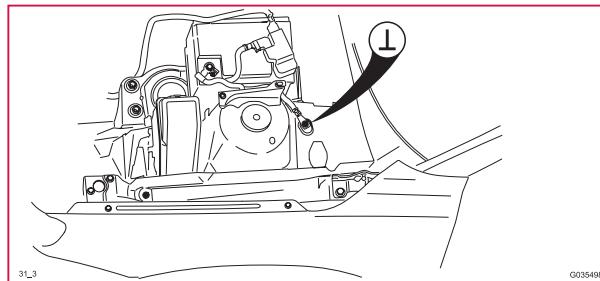


G035498


Component illustrations

31/4 - 31/67


31/4 Ground connection, engine

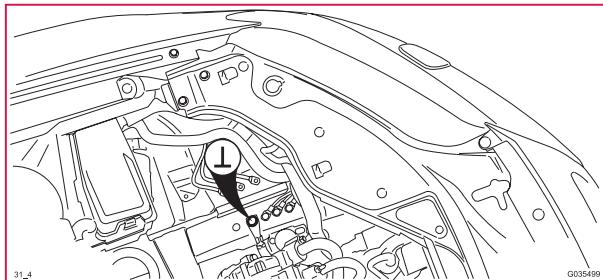


31/6 Ground connection, Left bottom rail

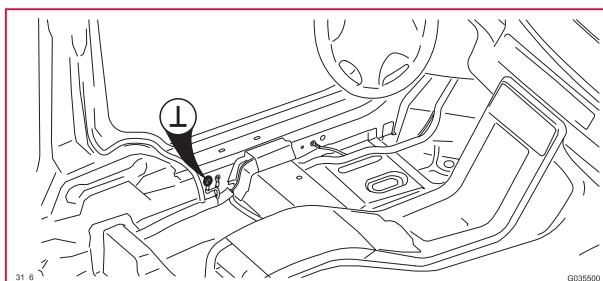


31/7 Ground connection, Left bottom rail

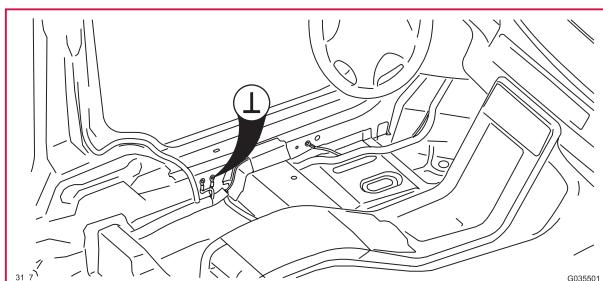


31/10 Ground connection, Left bottom rail

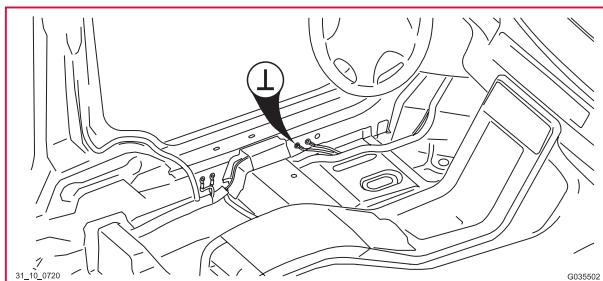


31/15 Ground connection, Right bottom rail

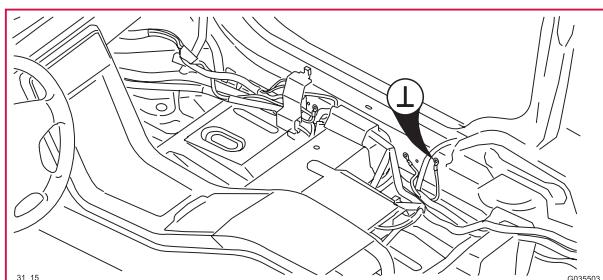


31/47 Ground connection, Left rear bumper abutment

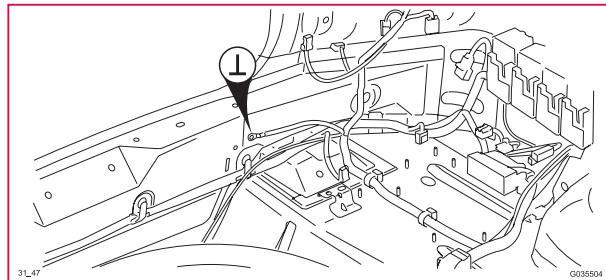


31/48 Ground connection, Right rear bumper abutment

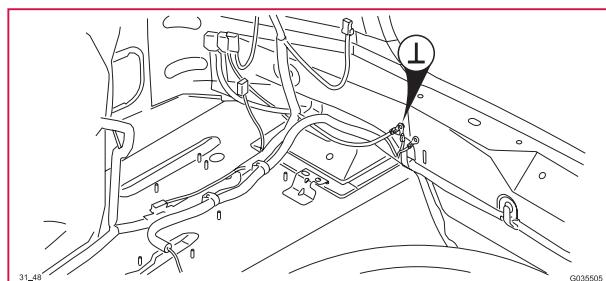


31/65 Ground connection, Rear seat riser, left side 1

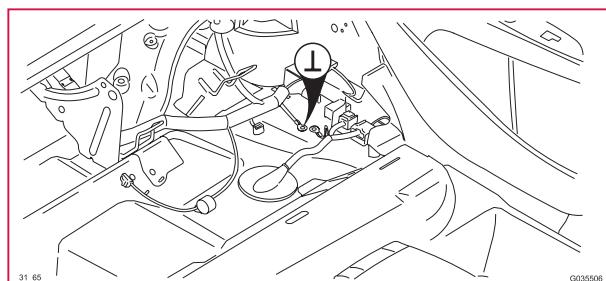

31/66 Ground connection, Rear seat riser, left side 2

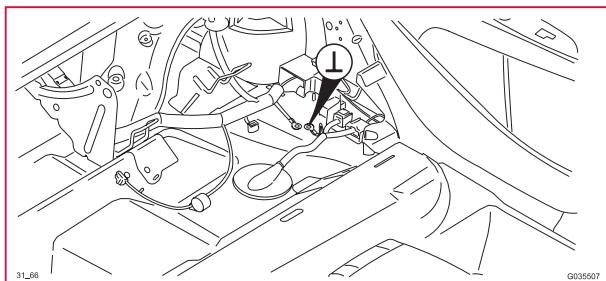


31/67 Ground connection, Rear seat riser, right side 1

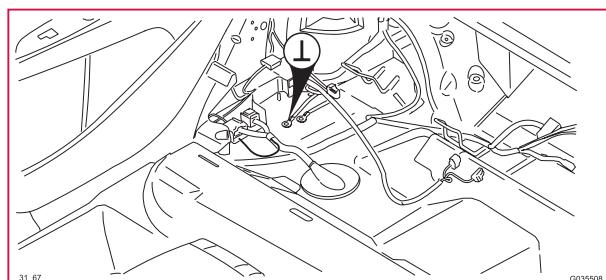


Component illustrations

31/68 - 31/93


31/68 Ground connection, Rear seat riser, right side 2

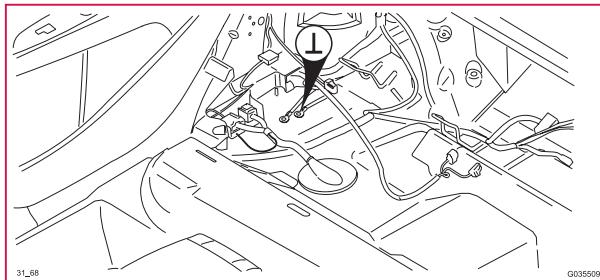


31/83 Ground connection, Left bottom rail

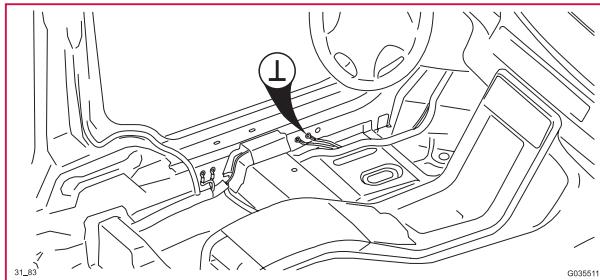


31/84 Ground connection, Right bottom rail

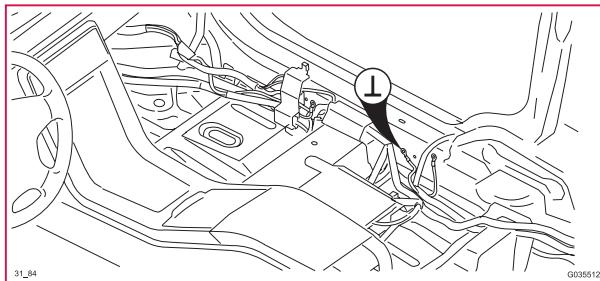


31/88 Ground connection, Engine ignition coils, 5-Cyl.

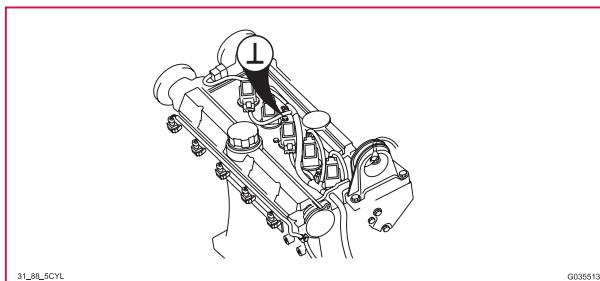


31/88 Ground connection, Engine ignition coils, 6-Cyl.

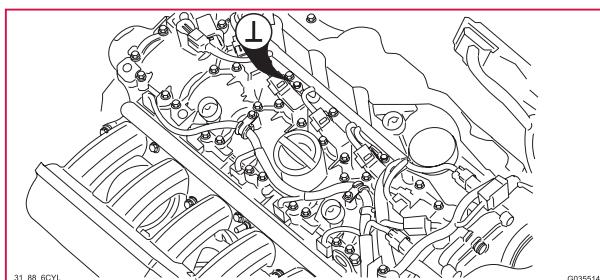


31/89 Ground connection, Engine ignition coils, 5-Cyl.

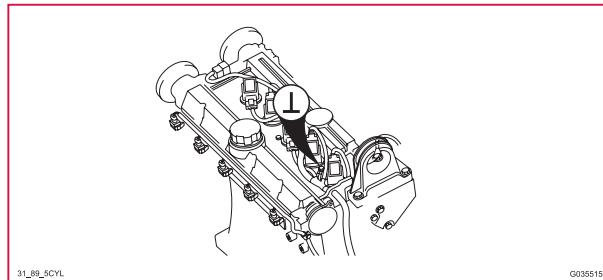


31/89 Ground connection, Engine ignition coils, 6-Cyl.

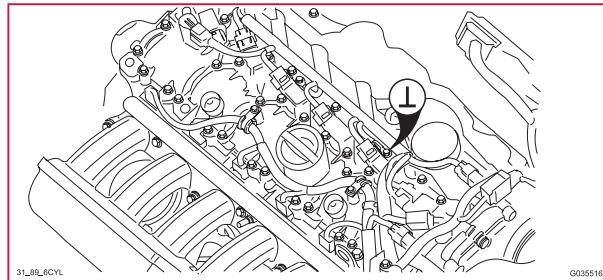


31/90 Ground connection, Engine ignition coils, 6-Cyl. Turbo

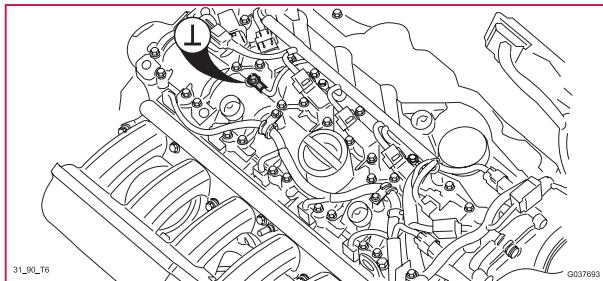

31/90 Ground connection, Engine ignition coils, 8-Cyl.

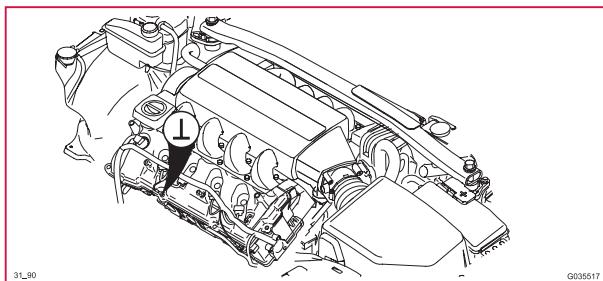


31/93 Ground connection, Left wheel housing 2

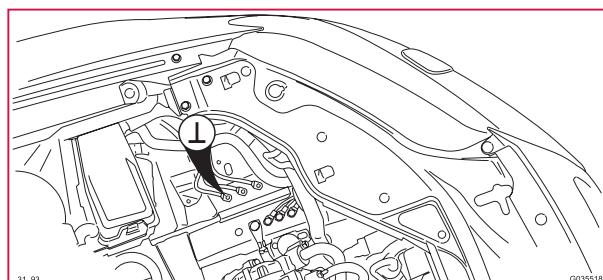


Component illustrations

31/94 - 31/AL


31/94 Ground connection, Right wheel housing 2

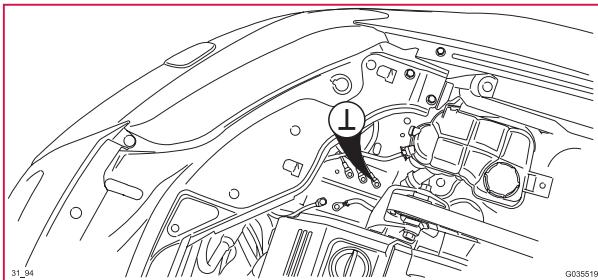


31/95 Ground connection, Left wheel housing

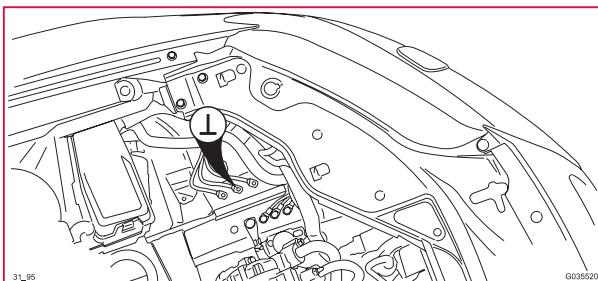


31/96 Ground connection, Right wheel housing 3

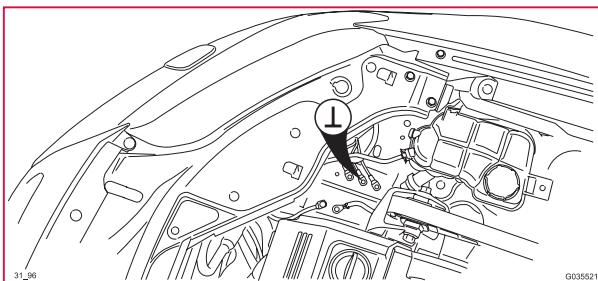


31/100 Ground connection, Engine ignition coils, 8-Cyl.

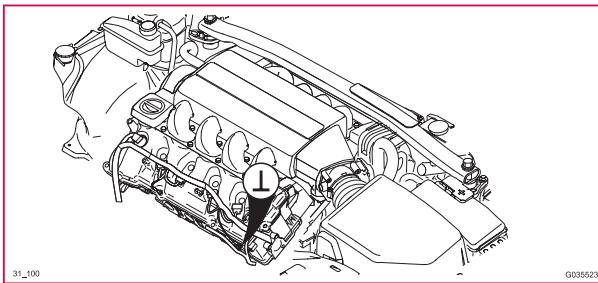


31/XX4 Ground connection, Engine-Body

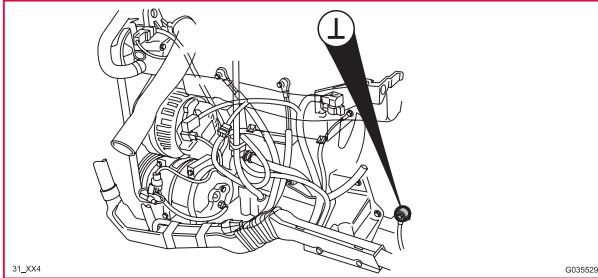


31/XX5 Ground connection, ECM

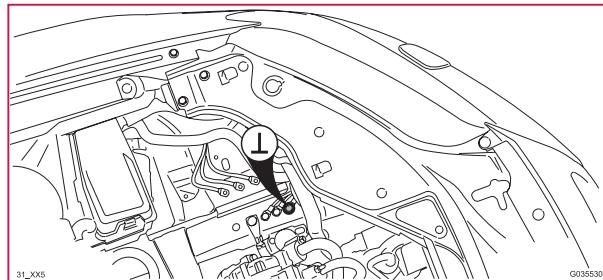


31/XX10 Ground connection, Left wheel housing 1

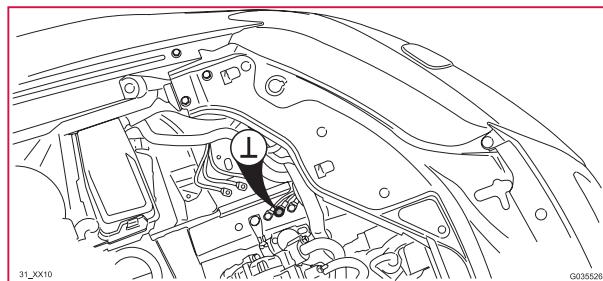


31/XX14 Ground connection, Left wheel housing 3 (ABS)

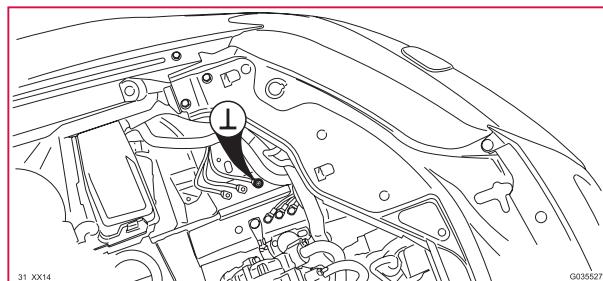

31/XX15 Ground connection, Right wheel housing

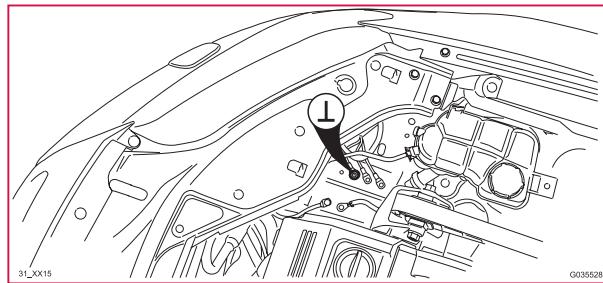


31/AL Ground connection, Auxiliary lights

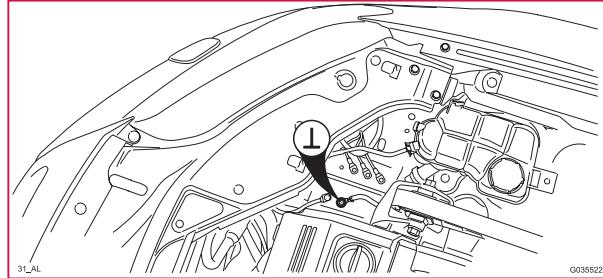


Component illustrations

31/INFOT - 74/301


31/INFOT Ground connection, Infotainment

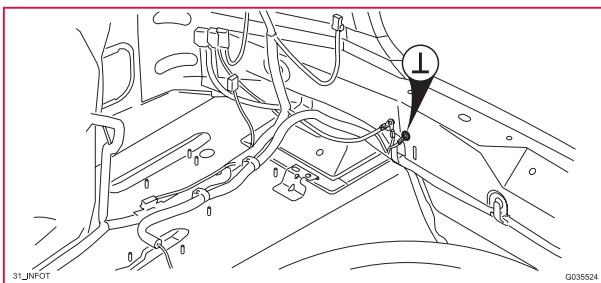


74/53 Connector

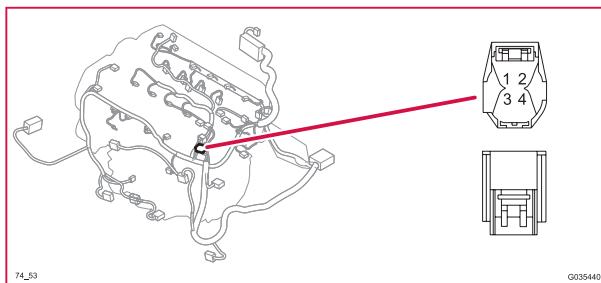


31/TRM Ground connection, Accessories

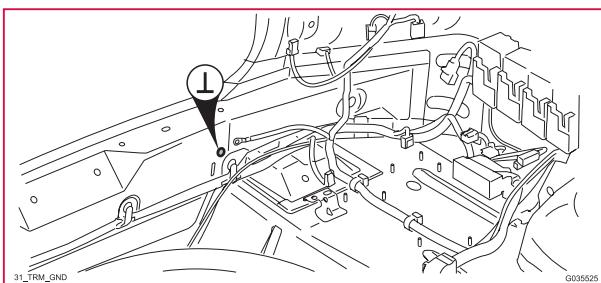


74/86 Connector

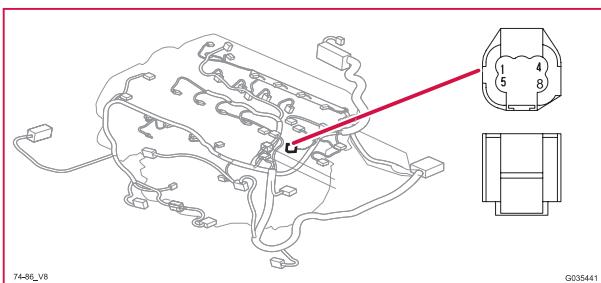


74/9 Connector

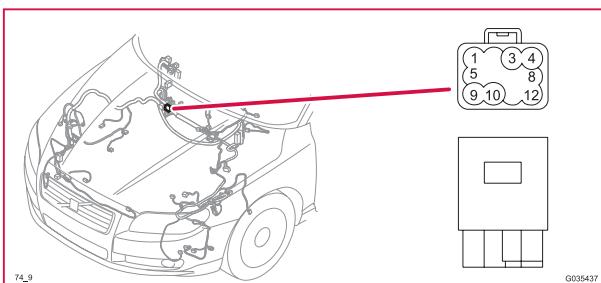


74/99 Connector

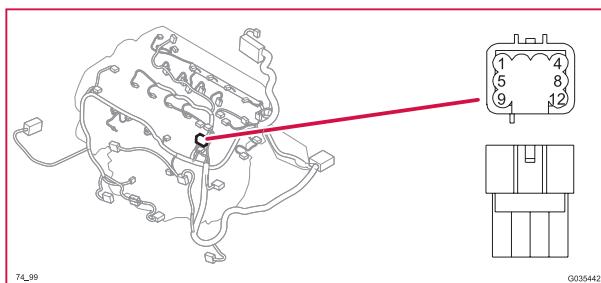


74/30 Connector

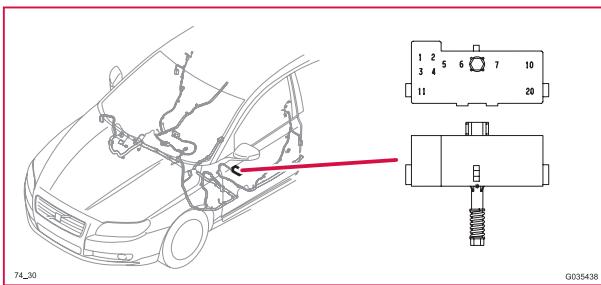


74/133 Connector

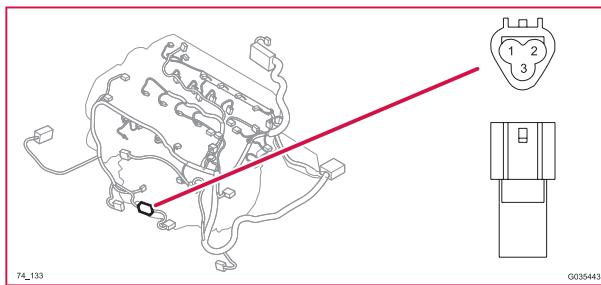

74/31 Connector

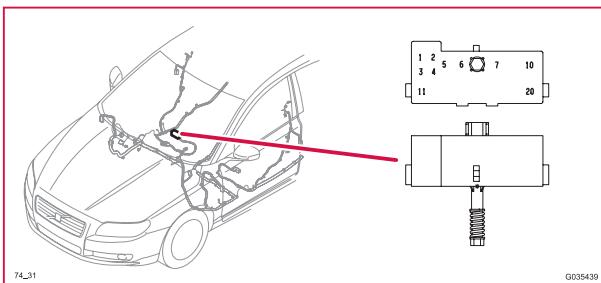


74/301 Connector

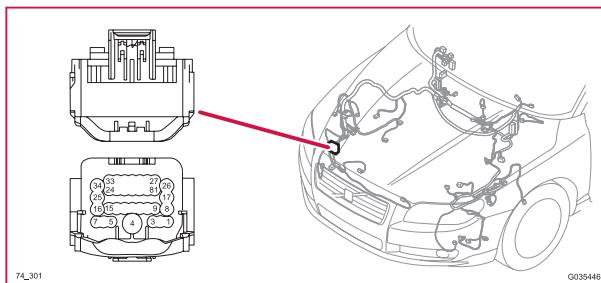


Component illustrations

74/302 - 74/406


74/302 Connector

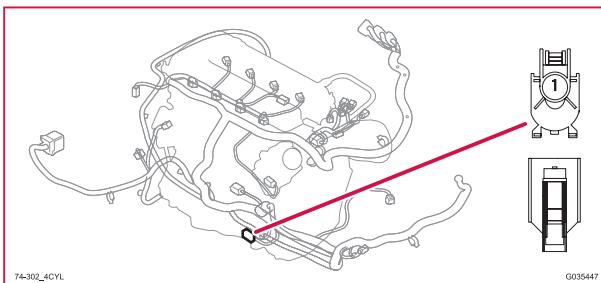


74/304 Connector

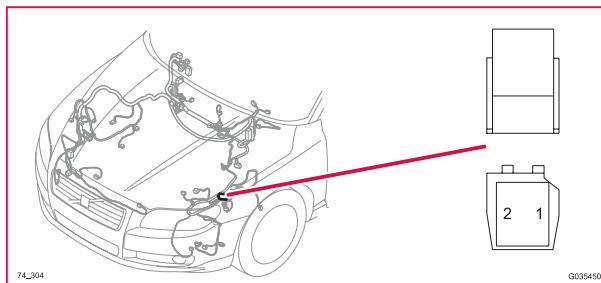


74/307 Connector

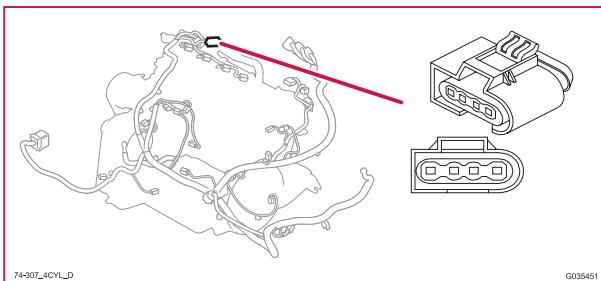


74/309 Connector

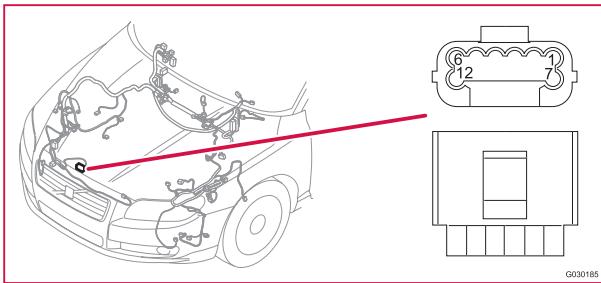


74/401 Connector

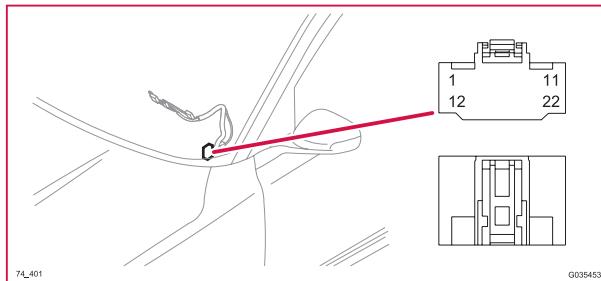


74/402 Connector

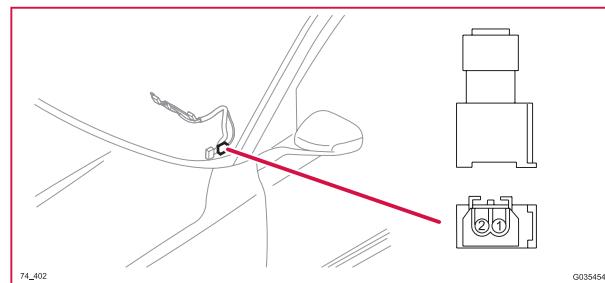


74/403 Connector

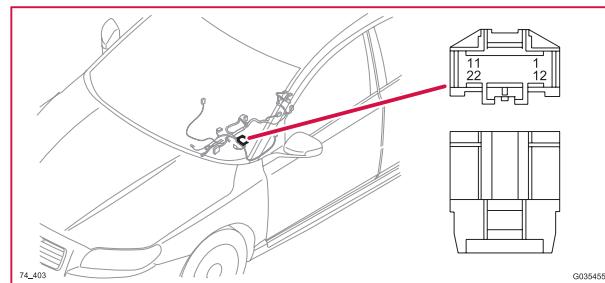


74/404 Connector

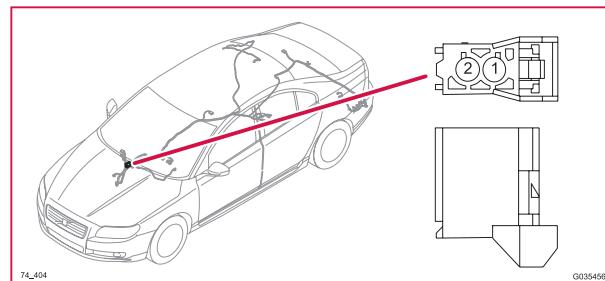

74/405 Connector

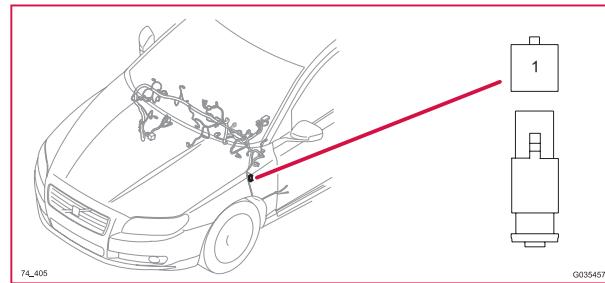


74/406 Connector

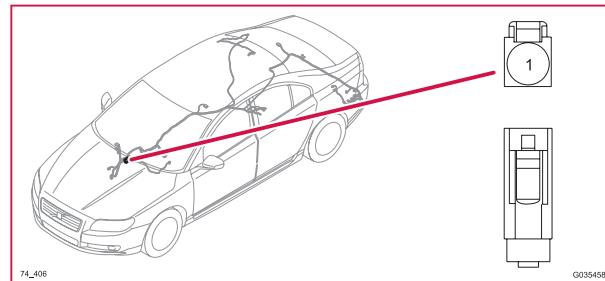


Component illustrations

74/407 - 74/418


74/407 Connector

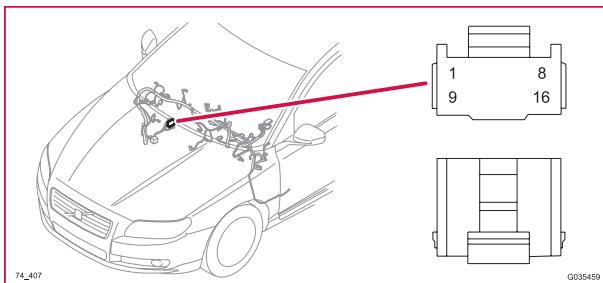


74/412 Connector

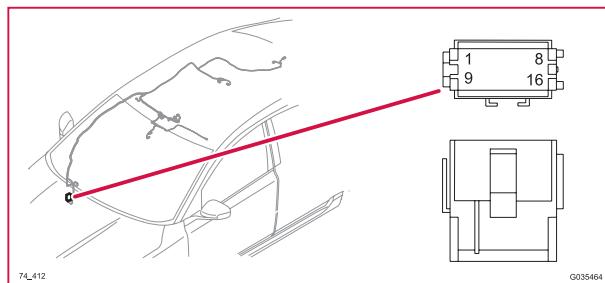


74/407B Connector

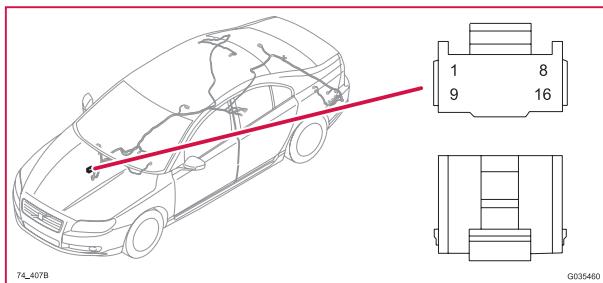


74/413 Connector

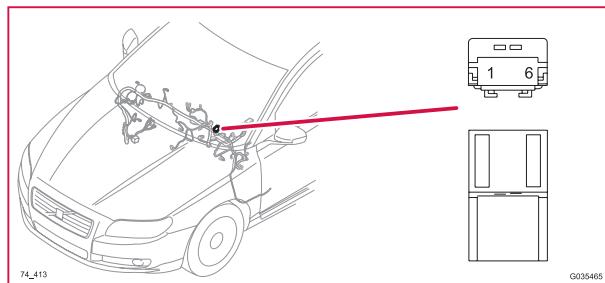


74/408 Connector

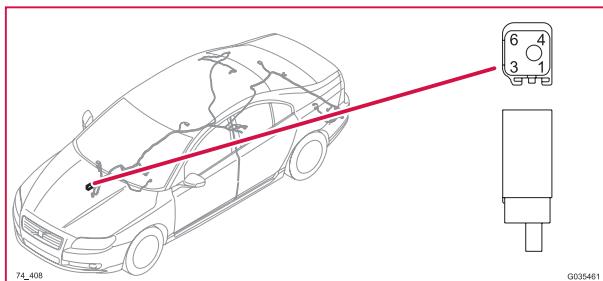


74/414 Connector

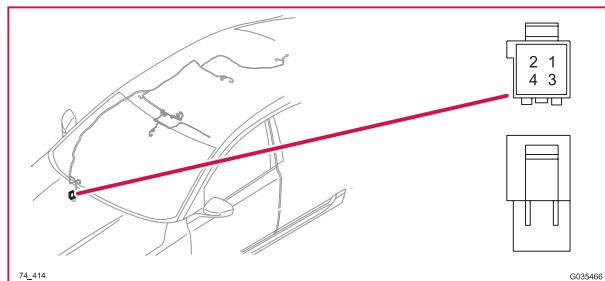


74/409 Connector

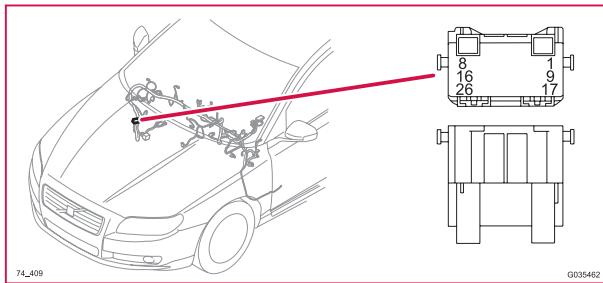


74/417 Connector

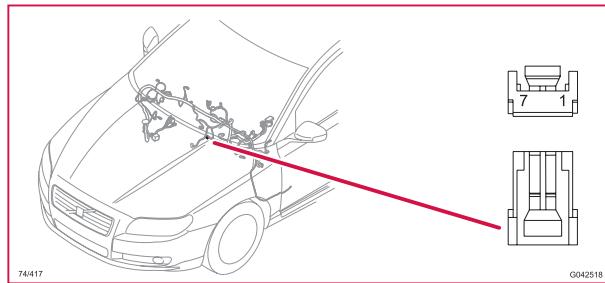

74/411 Connector

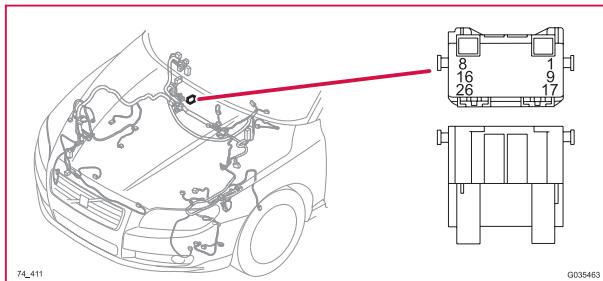


74/418 Connector

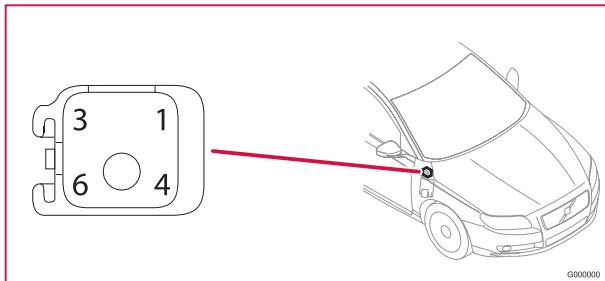


Component illustrations

74/419 - 74/508


74/419 Connector

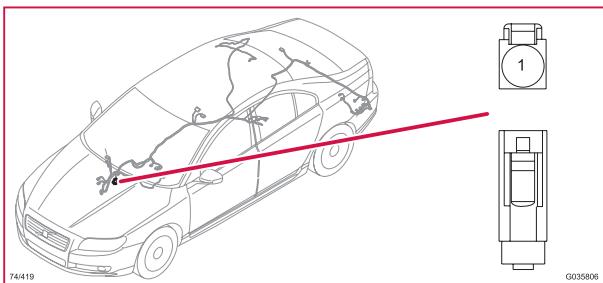


74/504 Connector

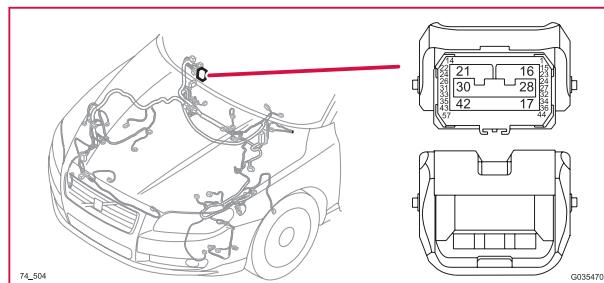


74/420 Connector

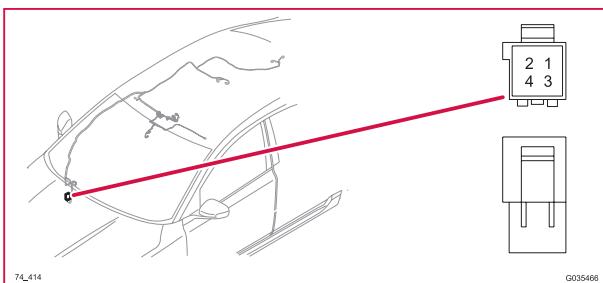


74/504B Connector

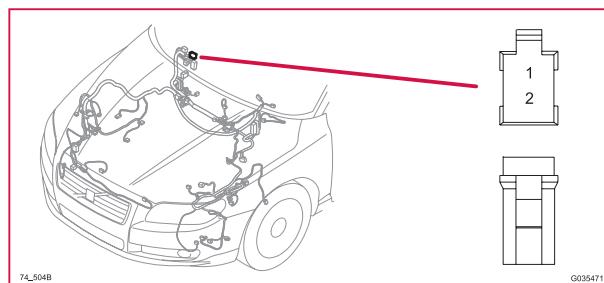


74/501 Connector

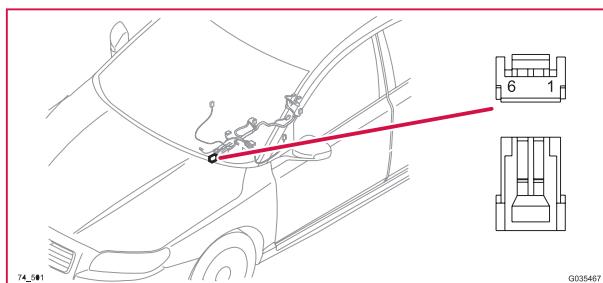


74/505 Connector

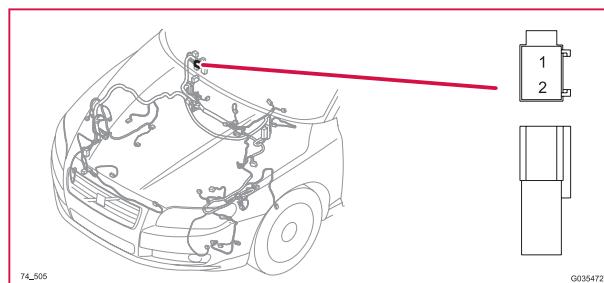


74/502 Connector

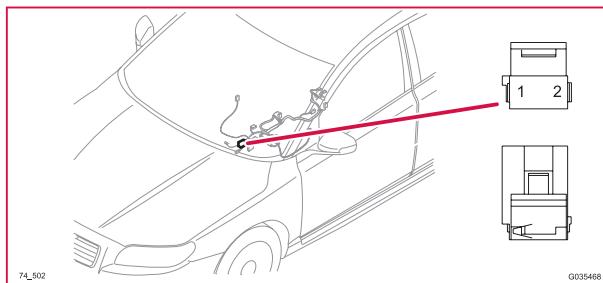


74/507 Connector

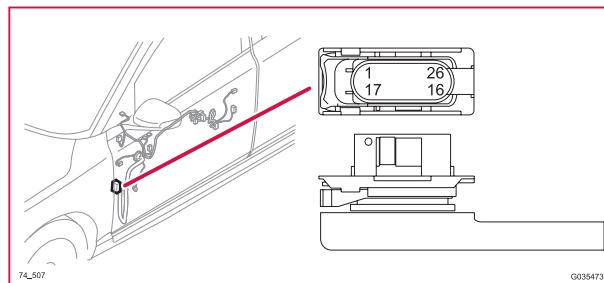

74/503 Connector

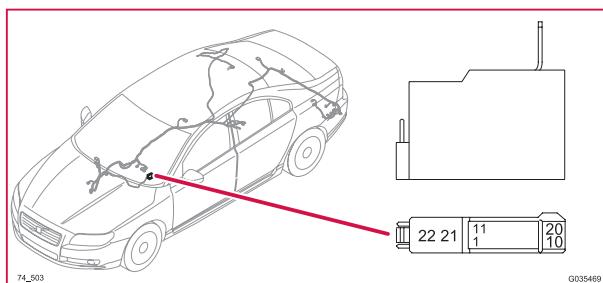


74/508 Connector

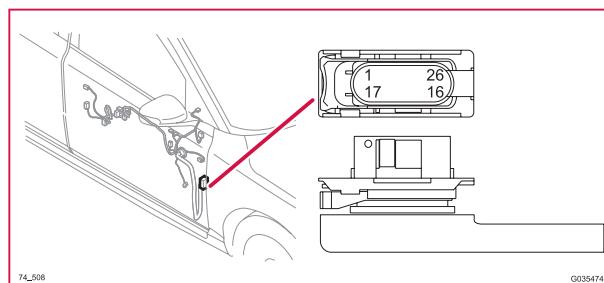


Component illustrations

74/509 - 74/523


74/509 Connector

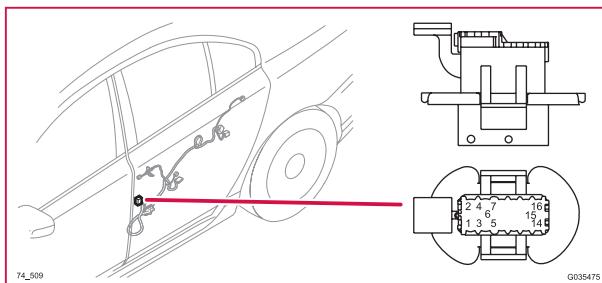


74/510 Connector

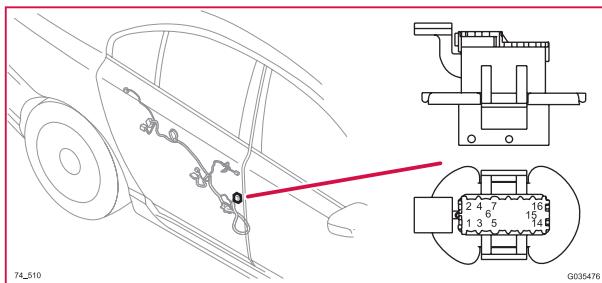


74/511 Connector

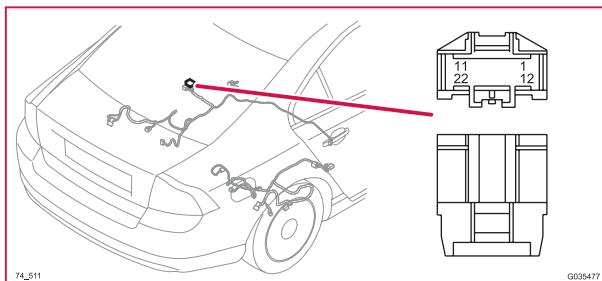


74/512 Connector

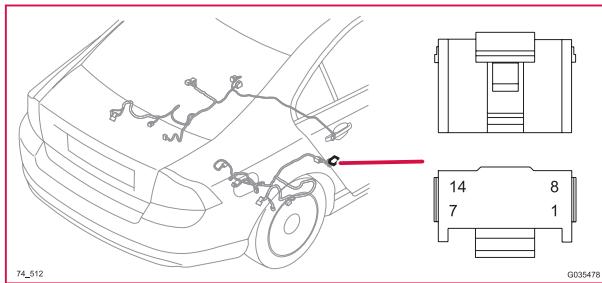


74/513 Connector

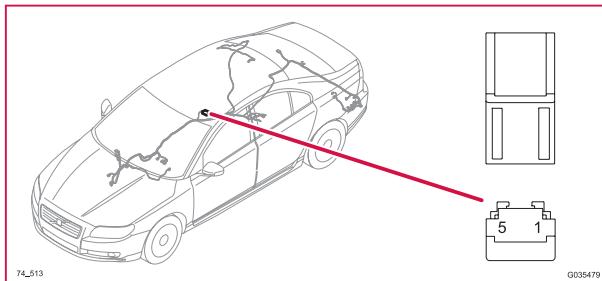


74/514 Connector

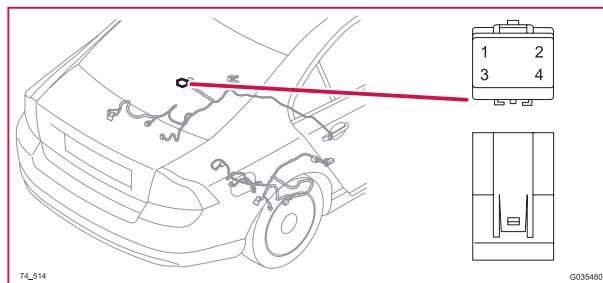


74/518 Connector

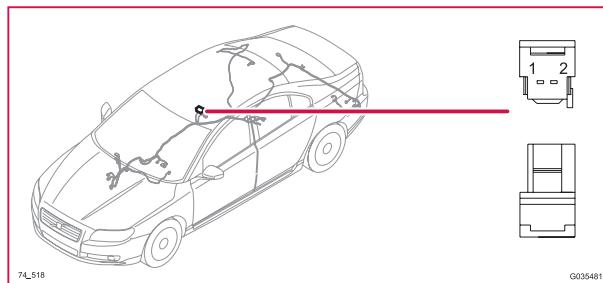


74/519 Connector

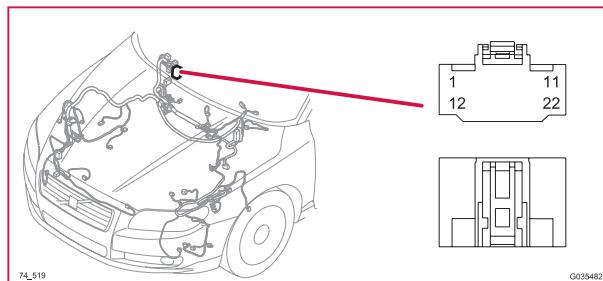

74/520 Connector

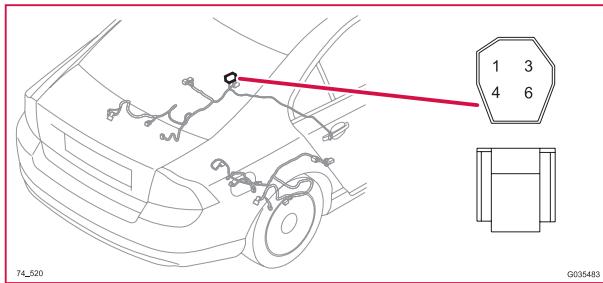


74/523 Connector

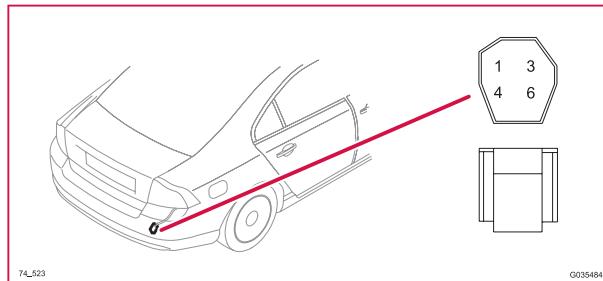


Component illustrations

74/524 - 74/701


74/524 Connector

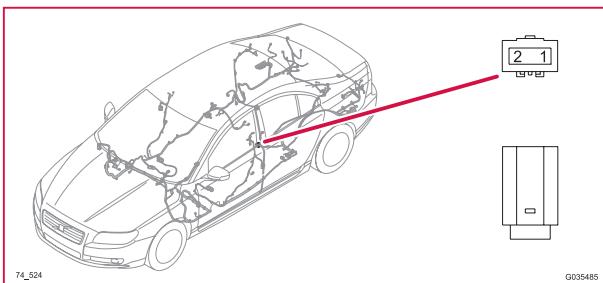


74/541 Connector

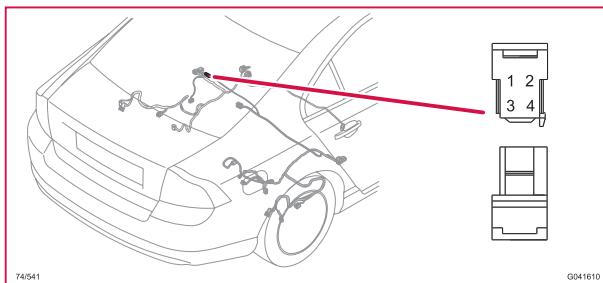


74/525 Connector

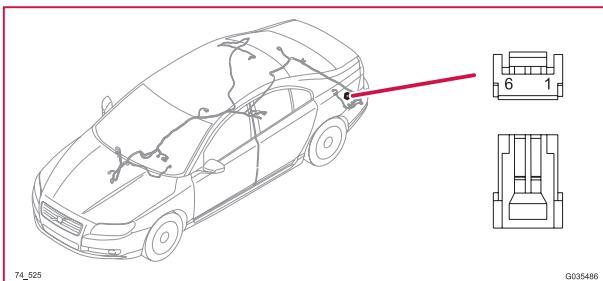


74/601 Connector

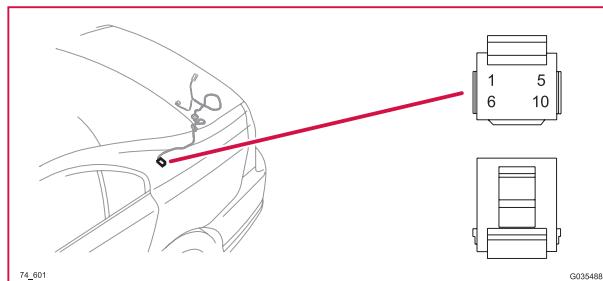


74/529 Connector

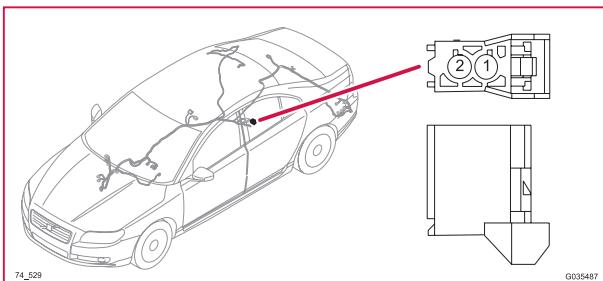


74/602 Connector

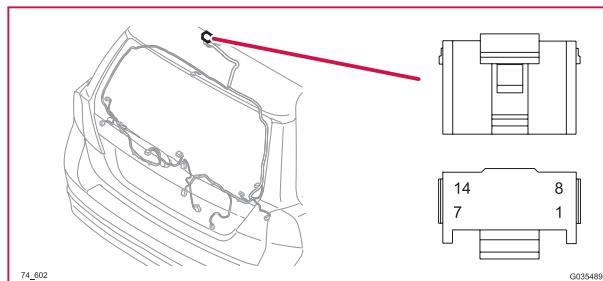


74/531 Connector

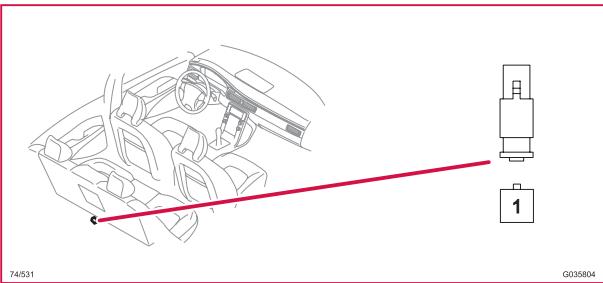


74/603 Connector

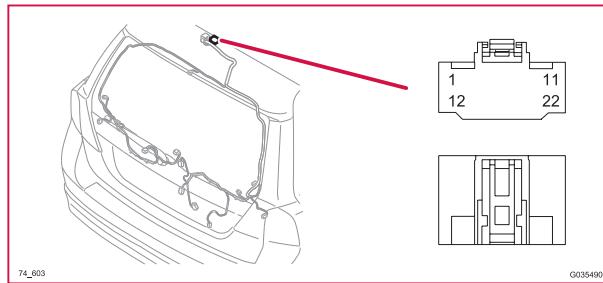

74/532 Connector

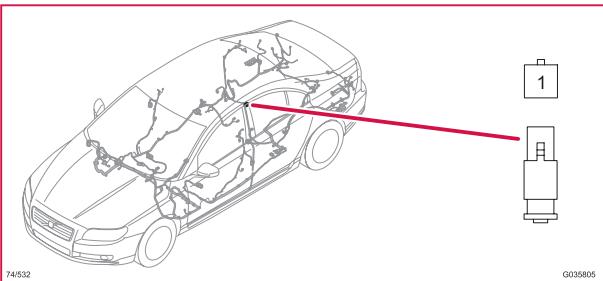


74/701 Connector

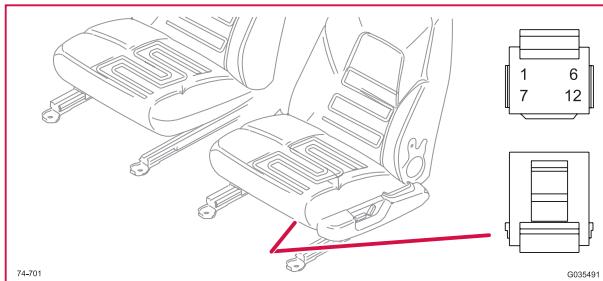


Component illustrations

74/702 - PF/no.


74/702 Connector

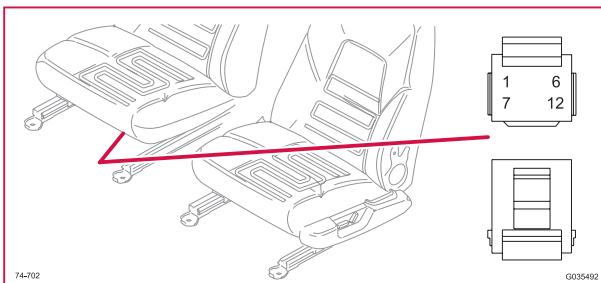


74/1503 Connector

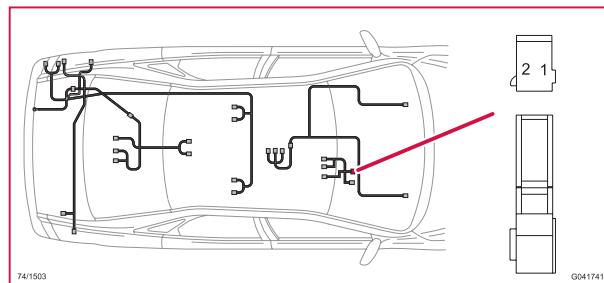


74/1010 Connector

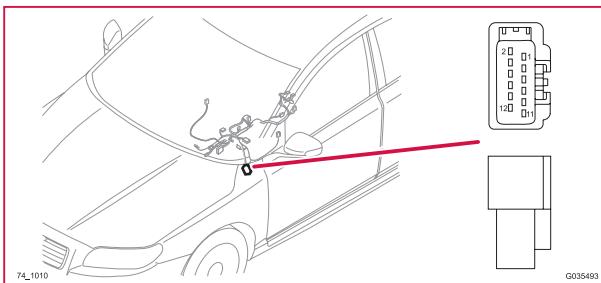


F/no. Fuses

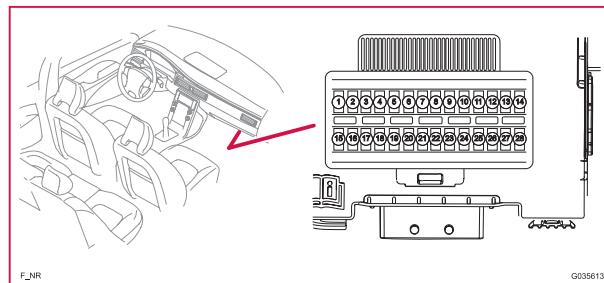


74/1500 Connector

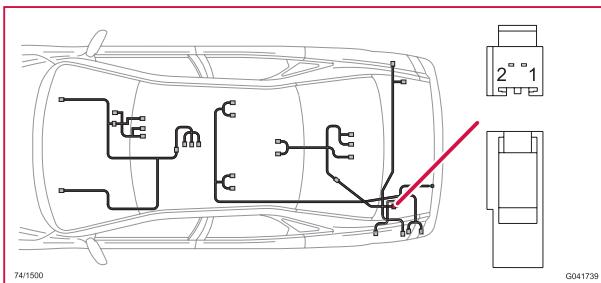


PF/no. Main fuse by battery

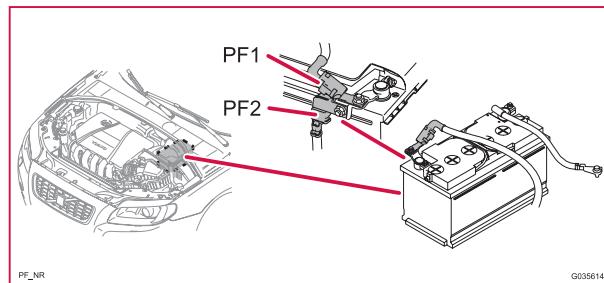

74/1501 Connector

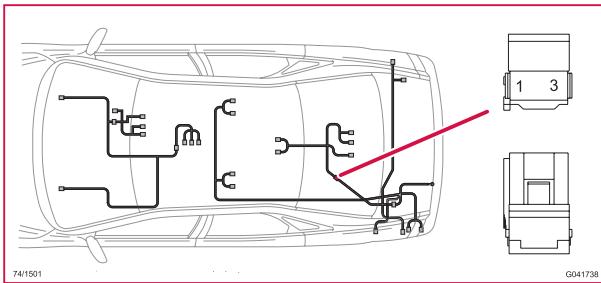

74/1502 Connector

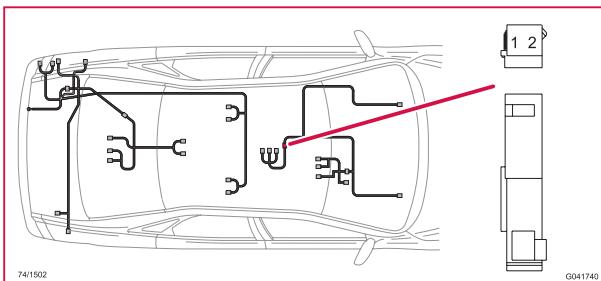

Component illustrations

3X/19 - 74X/414

- 3X/19 Connector interface, original car**
- 3X/21 Connector interface, original car**
- 3X/80 Connector interface, original car**
- 3X/82 Connector interface, original car**

- 4X/110 Connector interface, original car**

- 9X/1 Connector interface, original car**

- 10X/29 Connector interface, original car**
- 10X/72 Connector interface, original car**
- 10X/125 Connector interface, original car**
- 10X/126 Connector interface, original car**

- 16X/1 Connector interface, original car**

- 17X/19 Connector interface, original car**

- 74X/9 Connector interface, original car**
- 74X/401 Connector interface, original car**
- 74X/402 Connector interface, original car**
- 74X/414 Connector interface, original car**

Index 1:2

A

| | |
|--|----------|
| Abbreviations | 6 |
| Accessory USB unit (AUU) | 143 |
| Active headlight | 115 |
| Additional electrical equipment, Group 36 | 119 |
| Alcohol lock | 134 |
| Alternator and voltage regulator, Group 32 | 90, 91 |
| Analog clock | 146 |
| Anti-theft alarm | 130 |
| Audio | 150 |
| Audio Premium | 147 |
| Automatic transmission | 163, 164 |
| Auxiliary lights | 117 |

B

| | |
|--|----------|
| Beam length adjustment, automatic (Dual Xenon) | 98 |
| Beam length adjustment, manual | 97 |
| Blind spot information system | 185, 186 |
| Bluetooth Handsfree | 156 |
| Brake control system & DSTC | 167 |
| Brake lights | 105, 106 |
| Brake system, Group 59 | 167 |
| Branching points | 271 |

C

| | |
|--|--------------------|
| Cable harness routing in vehicle | 249 |
| Cable harness towbar/tow hitch 13 pin | 141, 142 |
| Cable harness towbar/tow hitch 4-pin | 137, 138 |
| Cable harness towbar/tow hitch 7 pin | 139, 140 |
| Cellular phone | 152 |
| Center console harness | 265 |
| Central Electronic Module (CEM) | 42 |
| Central locking front doors | 170, 171 |
| Central locking fuel filler flap | 175 |
| Central locking rear doors | 172 |
| Central locking trunk lid/tailgate | 173, 174 |
| Climate control system | 196, 197, 199, 201 |
| Climate control system PTC-elements | 196 |
| Climate control system, Group 87 | 196 |
| Collision warning with power brake booster | 132 |
| Color abbreviations | 6 |
| Component illustrations | 288 |
| Connectors | 211 |
| Control module overview locations | 40 |
| Control modules | 40 |
| Control modules overview designations | 41 |
| Cooling fan | 80, 81, 82, 83, 84 |
| Cooling system, Group 26 | 80 |
| Countries/Markets, abbreviations | 6 |
| Cruise control | 85, 87 |
| Cruise control 8-Cyl. | 89 |
| Cruise control, Diesel | 86, 88 |

D

| | |
|--|--------------------|
| DAB Radio | 154 |
| Dashboard harness | 254, 255 |
| Data communication high speed CAN | 45 |
| Data communication high speed CAN, 4 Cyl | 46 |
| Data communication intermediate speed CAN, LHD | 47 |
| Data communication intermediate speed CAN, RHD | 48 |
| Data communication MOST | 51 |
| Data communication, LIN | 49 |
| Diagnostics system | 135 |
| Differential Electronic Module (DEM) | 165 |
| Direction indicator | 120, 121, 122, 123 |

| | |
|------------------------------------|-----|
| Doors and openings, Group 83 | 170 |
| Driver information module | 145 |

E

| | |
|---|--------|
| Electric parking brake | 166 |
| Electrical distribution overview | 9 |
| Emission control 4-Cyl. | 65 |
| Emission control 5-Cyl. Turbo | 66 |
| Emission control 6-Cyl. | 67, 79 |
| Emission control 8-Cyl. | 68 |
| Engine compartment harness | 253 |
| Engine controls, Group 27 | 85 |
| Engine Harness 4-Cyl. | 249 |
| Engine harness 4-Cyl. Diesel | 252 |
| Engine Harness 5-Cyl. | 249 |
| Engine Harness 6-Cyl. | 250 |
| Engine harness 8-Cyl. | 251 |
| Engine management system 6-Cyl. B6324S2 | 59 |
| Engine management system, 4-Cyl. | 53 |
| Engine management system, 4-Cyl. Diesel | 69 |
| Engine management system, 5-Cyl. Diesel | 74 |
| Engine management system, 5-Cyl. Turbo | 55 |
| Engine management system, 6-Cyl. | 57 |
| Engine management system, 6-Cyl. Turbo | 61 |
| Engine management system, 8-Cyl. | 63 |
| Executive harnesses | 270 |
| Exterior decorative elements, etc. Group 84 | 181 |

F

| | |
|--|----------------|
| Floor harness S80 | 256, 257 |
| Floor harness V70 | 258, 259 |
| Fog lights | 103, 104 |
| Follow-me-home lighting | 109, 110 |
| Four-C | 169 |
| Fuel system, Group 23 | 53 |
| Fuses at Battery | 25 |
| Fuses in passenger compartment | 21 |
| Fuses in the Central Electronic Module (CEM) | 18, 19 |
| Fuses in the engine compartment | 21 |
| distribution box | 11, 15, 16, 17 |

G

| | |
|-----------------------------------|----|
| Ground connections overview | 32 |
| Group number, abbreviations | 6 |

H

| | |
|--------------------------------------|--------------------|
| Harness Engine 6-Cyl. Turbo | 250 |
| Harness engine, Diesel | 251 |
| Harness front door | 266 |
| Harness Infotainment S80 | 260, 261 |
| Harness Infotainment V70 | 262, 263 |
| Harness rear door | 267 |
| Harnesses rear axle | 269 |
| Hazard warning flashers | 120, 121, 122, 123 |
| Heated door mirrors | 183, 184 |
| Heated front seats with fan | 192 |
| Heated front seats without fan | 193 |
| Heated rear seat | 194 |
| Heated rear window | 187 |
| High and low beam | 95 |
| High and low beam (Dual Xenon) | 96 |
| High pressure headlight washer | 125 |
| Horn | 127 |
| How to use the wiring diagrams | 7 |

Index 2:2

| | |
|---|------------|
| I | |
| Ignition switch symbols | 6 |
| Instruments, Group 38 | 144 |
| Interior equipment, Group 85 | 188 |
| Interior lighting, LHD | 111 |
| Interior lighting, RHD | 113 |
| Internal equipment, Group 88 | 206 |
| K | |
| Keyless vehicle (KVM) | 128 |
| L | |
| Lighting in door sill trims | 116 |
| Lighting mug holder and floor | 118 |
| Lighting, Group 35 | 95 |
| List of symbols | 8 |
| M | |
| Massage seats | 195 |
| Memory function driver's seat | 188, 189 |
| MOST | 51 |
| Multimedia | 157 |
| N | |
| Navigation system, portable | 161 |
| O | |
| Other, abbreviations | 6 |
| Other, Group 39 | 147 |
| Outlet 12 V | 136 |
| P | |
| Parking assistance | 131 |
| Parking brake, Group 55 | 166 |
| Parking camera | 160 |
| Parking heater, auxiliary heater | 203 |
| Parking heater, remote start | 204 |
| Parking light | 99, 100 |
| Parking light, (Dual Xenon) | 101, 102 |
| Power door mirrors | 181, 182 |
| Power driver's seat with memory function | 188, 189 |
| Power folding headrest | 209 |
| Power passenger seat | 190, 191 |
| Power sunroof | 180 |
| Power supply | 91 |
| Power supply 4-Cyl. | 90 |
| Power windows front doors | 177, 178 |
| Power windows rear doors | 179 |
| PTC-element | 196 |
| R | |
| Rain sensor | 119 |
| Rear seat entertainment | 158 |
| Rear-view mirror with automatic dimming | 206 |
| Refrigeration box rear seat | 205 |
| Relays in cargo compartment | 29 |
| Relays in Distribution box | |
| engine compartment | 26, 27, 28 |
| Relays in the Central Electronic Module (CEM) | 31 |
| Remote controlled garage opening | 210 |
| Reversing lights | 107, 108 |
| Roof harness | 264 |
| Running light | 99, 100 |
| Running light, (Dual Xenon) | 101, 102 |
| S | |
| Satellite radio | 159 |
| Seat belt reminder | 144 |
| Shock absorbers, Group 76 | 169 |
| Signal receiver central locking | 176 |
| Speed dependent power steering | 168 |
| Starting system | 92, 93, 94 |
| Starting system, Group 33 | 92 |
| Steering Wheel Module (SWM) | 52 |
| Steering, Group 64 | 168 |
| Supplemental restraint system | 207 |
| T | |
| Table of Contents | 3 |
| Tail lights | 99, 100 |
| Tail lights, (Dual Xenon) | 101, 102 |
| Telephone system Bluetooth | 155 |
| Tire pressure monitoring system (TPMS) | 133 |
| Traffic information | 157 |
| Transmission M66 | 162 |
| Transmission, Group 43 | 162 |
| Trunk lid harness | 268 |
| Tunnel harness | 265 |
| W | |
| Wiper/Washer rear window | 126 |
| Wiper/Washer Windshield | 124 |
| Wiring and fuses, Group 37 | 135 |

List of components 1:8

| | | | |
|-------|---|-------|--|
| 1/1 | Battery | 3/126 | Driver Door Module (DDM) |
| 2/14 | Relay, glow plug system | 3/127 | Passenger Door Module (PDM) |
| 2/16 | Rear window wiper relay, V70 | 3/128 | Left rear door module (LDM) |
| 2/17 | Relay, horn | 3/129 | Right rear door module (RDM) |
| 2/22 | Relay, climate control system | 3/130 | Steering Wheel Module (SWM) |
| 2/31 | Relay, 15-feed | 3/131 | Steering wheel switch right (SWSR) |
| 2/32 | Main relay, engine management system | 3/132 | Start Control Module (SCU) |
| 2/32 | Main relay, engine management system 4-Cyl. Diesel | 3/135 | RTI switch |
| 2/35 | Relay, starter motor | 3/156 | Gear Selector Module (GSM) |
| 2/64 | Auxiliary light relay, accessory | 3/157 | Switch, passenger side airbag |
| 2/75 | Rear adjustable head restraint relay, V70 | 3/173 | Switch, trunk lid/tailgate private lock |
| 2/75 | Rear adjustable head restraint relay, S80 | 3/176 | Power window switches, driver's door |
| 2/82 | Relay, Heated rear window, V70 | 3/217 | Contact, LH rear belt buckle |
| 2/82 | Relay, Heated rear window, S80 | 3/218 | Contact, center rear belt buckle |
| 2/88 | Relay, 15-feed rear, V70 | 3/219 | Contact, RH rear belt buckle |
| 2/88 | Relay, 15-feed rear, S80 | 3/225 | Switch unit, Continuously Controlled Damping (CCD) |
| 2/133 | Relay vacuum pump | 3/255 | Position sensor, driver's seat |
| 2/141 | Refrigeration box relay | 3/256 | Position sensor, passenger seat |
| 2/142 | Relay pre-heater fuel filter | 3/267 | Switch unit, telematics |
| 2/193 | Relay, comfort functions | 3/270 | Contact servo pressure |
| 2/239 | Relay, coolant pump, 8-Cyl. | 3/271 | Contact, immobilizer, clutch pedal |
| 3/4 | Steering wheel switch left (SWSL) | 3/272 | Switch, parking brake |
| 3/6 | Switch, hazard warning flashers | 3/273 | Lock contact, LH front door |
| 3/8 | Switch, heated rear window/door mirror | 3/274 | Lock contact, RH front door |
| 3/9 | Contact brake light | 3/275 | Lock contact, LH rear door |
| 3/10 | Reversing light contact | 3/276 | Lock contact, RH rear door |
| 3/19 | Power window switch, rear left door | 3/281 | Infotainment Control Module (ICM) |
| 3/21 | Power window switch, right rear door | 3/282 | Switch indicator 1st gear |
| 3/25 | Power sunroof switch | 3/284 | Diagnostic contact, brake light |
| 3/26 | Switch unit, power driver's seat | 3/291 | Tailgate closing switch, V70 |
| 3/27 | Switch unit, power passenger seat | 3/293 | Handsfree control panel cellular phone |
| 3/35 | Trunk handle switch, V70 | 4/6 | Climate Control Module (CCM) |
| 3/35 | Trunk handle switch, S80 | 4/7 | Combustion Preheater Module (CPM) |
| 3/37 | Contact horn | 4/9 | Supplemental Restraint System Module (SRS) |
| 3/47 | Parking brake contact | 4/16 | Brake Control Module (BCM) |
| 3/60 | Switch, auxiliary lights | 4/28 | Transmission Control Module (TCM), TF-80SC |
| 3/62 | Hood alarm contact | 4/28 | Transmission Control Module (TCM), MPS6 |
| 3/65 | Switch, heated rear seat | 4/31 | Passenger compartment fan control module |
| 3/78 | Lock unit, tailgate V70 | 4/33 | Sunroof control module |
| 3/80 | Switch, central locking system, driver's door | 4/46 | Engine Control Module (ECM), 4-Cyl. |
| 3/82 | Switch, central locking system, passenger door | 4/46 | Engine Control Module (ECM), 4-Cyl. Diesel |
| 3/83 | Switch, passenger door power window | 4/46 | Engine Control Module (ECM), 5-Cyl. |
| 3/93 | Contact, driver's seat belt buckle | 4/46 | Engine Control Module (ECM), 5-Cyl. Diesel |
| 3/94 | Contact, passenger seat belt buckle | 4/46 | Engine Control Module (ECM), 6-Cyl. |
| 3/111 | Light Switch Module (LSM) | 4/46 | Engine Control Module (ECM), 8-Cyl. |
| 3/112 | Climate control system | 4/46 | Power Seat Module (PSM) |
| 3/113 | Rear adjustable head restraint relay | 4/52 | |
| 3/117 | Switch unit, ceiling light | | |

List of components 2:8

| | | | |
|---------|---|-------|--|
| 4/56 | Central Electronic Module (CEM) | 6/37 | Lock motor, fuel filler cover |
| 4/56:C1 | Central Electronic Module (CEM) | 6/38 | Left-hand headlight level adjustment motor |
| 4/56:C2 | Central Electronic Module (CEM) | 6/39 | Right-hand headlight level adjustment motor |
| 4/56:C3 | Central Electronic Module (CEM) | 6/48 | Damper Motor Module (DMM), recirculation |
| 4/56:C4 | Central Electronic Module (CEM) | 6/55 | Lock motor, central locking, RH front door |
| 4/56:C5 | Central Electronic Module (CEM) | 6/56 | Lock motor, central locking, RH rear door |
| 4/68 | Steering Wheel Angle Sensor Module (SAS) | 6/57 | Lock motor, central locking, LH rear door |
| 4/71 | Cooling fan control module | 6/58 | Motor, front driver's door power window |
| 4/76 | Remote control unit for garage door opener | 6/59 | Motor, rear left power window |
| 4/80 | Forward Sensing Module (FSM) | 6/60 | Motor, front passenger door power window |
| 4/82 | Differential Electronic Module (DEM) | 6/61 | Motor, rear right power window |
| 4/83 | Fuel pump control module | 6/62 | Power door mirror, left |
| 4/84 | Suspension Module (SUM) | 6/63 | Power door mirror, right |
| 4/86 | Parking Assistance Module (PAM) | 6/64 | Passenger seat motor, backrest angle |
| 4/93 | Keyless Vehicle Module (KVM) | 6/65 | Passenger seat motor, up/down front edge |
| 4/99 | Electronic power steering control module | 6/66 | Passenger seat motor, up/down rear edge |
| 4/102 | Steering Column Lock Module (SCL) | 6/67 | Pump, fuel leakage control |
| 4/106 | Control module, parking heater remote start | 6/71 | Valve, speed-dependent power steering |
| 4/109 | Glow plug control module | 6/73 | Coolant pump |
| 4/110 | Trailer Module (TRM) | 6/95 | Damper Motor Module (DMM), temperature, left side |
| 4/111 | Additive Dosing Module (ADM) | 6/96 | Damper Motor Module (DMM), temperature, right side |
| 4/115 | Park Brake Module (PBM) | 6/99 | Engine EGR |
| 4/116 | Power Operated Tailgate Module (POT), V70 | 6/99 | Engine EGR, 4-Cyl. Diesel |
| 4/118 | Headlamp Control Module (HCM) | 6/102 | Damper Motor Module (DMM), defroster |
| 4/119 | Remote Keyless Entry (RKE) | 6/103 | Damper Motor Module (DMM), floor/ventilation |
| 4/119.2 | Remote Receiver Module (RRX) | 6/104 | High pressure headlight washer motor |
| 4/120 | Parking Assistance Camera module (PAC) | 6/114 | Vacuum pump |
| 4/121 | Cooling fan control module 2 | 6/120 | Throttle unit, 4-Cyl. |
| 4/124 | Accessory USB unit (AUU) | 6/120 | Throttle unit, 5-Cyl. |
| 4/131 | Control module back massage left | 6/120 | Throttle unit, 6-Cyl. |
| 4/133 | Control module back massage right | 6/127 | Throttle unit, 8-Cyl. |
| 5/1 | Driver Information Module (DIM) | 6/139 | Throttle unit, Diesel |
| 6/1 | Wiper Motor Module (WMM) | 6/140 | Washer motor |
| 6/8 | Lock motor central locking, trunk lid/tailgate, S80 | 6/143 | Upper actuating motor, intake manifold |
| 6/16 | Driver seat motor, backrest angle | 6/144 | Lower actuating motor, intake manifold |
| 6/17 | Driver seat motor, up/down front edge | 6/145 | Regulator motor, Turbo |
| 6/18 | Driver seat motor, up/down rear edge | 6/146 | Telescopic nozzle, left |
| 6/19 | Driver seat motor, forward/backward | 6/147 | Telescopic nozzle, right |
| 6/20 | Passenger seat motor, forward/backward | 6/148 | Lock motor, rear left brake disc |
| 6/25 | Starter motor | 6/149 | Lock motor, rear right brake disc |
| 6/26 | Alternator Control Module (ACM) | 6/164 | Hydraulic pump trunk lid/tailgate operation, V70 |
| 6/28 | Motor, passenger compartment fan | 6/169 | Tailgate closing motor, V70 |
| 6/32 | Rear window wiper motor, V70 | 6/170 | Electrical power steering module (EPS) |
| 6/33 | Fuel pump | | Left pump back massage |
| 6/34 | Additive tank with pump and level sensor | | Right pump back massage |
| 6/35 | Fuel pump, auxiliary heater | | |
| 6/36 | Lock motor, central locking, LH front door | | |

List of components 3:8

| | | | |
|------|---|--------|--|
| 7/4 | Brake fluid level sensor | 7/88 | Acceleration sensor, Four-C, front right |
| 7/5 | Washer fluid level sensor | 7/89 | Acceleration sensor, Four-C, rear left |
| 7/6 | Oil pressure monitor | 7/91 | Steering angle sensor |
| 7/8 | Pressure sensor, climate control system | 7/93 | Occupant Weight Sensor (OWS) |
| 7/10 | Interior temperature sensor | 7/100 | Inclination Sensor Module (ISM) |
| 7/12 | Solar sensor, twilight sensor and indicator alarm | 7/103 | Rear heated oxygen sensor, 5-Cyl. |
| 7/15 | Front heated oxygen sensor, 4-Cyl. | 7/103 | Front oxygen sensor, bank 2, 6-Cyl. |
| 7/15 | Front heated oxygen sensor, 5-Cyl. | 7/104 | Rear oxygen sensor, bank 2, 8-Cyl. |
| 7/15 | Front oxygen sensor, bank 1, 6-Cyl. | 7/104 | Rear oxygen sensor, bank 2, 6-Cyl. |
| 7/15 | Front heated oxygen sensor, bank 2 8-Cyl. | 7/108 | Rear oxygen sensor, bank 1, 8-Cyl. |
| 7/15 | Front heated oxygen sensor, Diesel | 7/109 | Left-hand rear side impact sensor |
| 7/16 | Sensor, coolant temperature | 7/110 | Right-hand rear side impact sensor |
| 7/17 | Mass airflow sensor (MAF) | 7/111 | Temperature sensor, driver's seat |
| 7/21 | Camshaft position sensor, 4-Cyl. Diesel | 7/112 | Temperature sensor, passenger seat |
| 7/23 | Rear knock sensor | 7/113 | Seat temperature sensor, LH rear |
| 7/23 | Rear knock sensor, 8-Cyl. | 7/115 | Seat temperature sensor, RH rear |
| 7/24 | Front knock sensor | 7/116 | Side impact sensor, left B-post |
| 7/24 | Front knock sensor, 8-Cyl. | 7/118 | Side impact sensor, right B-post |
| 7/25 | Impulse sensor, 4-Cyl. | 7/119 | Height sensor, suspension, front left |
| 7/25 | Impulse sensor, 5-Cyl. & Diesel | 7/120 | Height sensor, suspension, front right |
| 7/25 | Impulse sensor, 6-Cyl. | 7/121 | Height sensor, suspension, rear left |
| 7/25 | Impulse sensor, 8-Cyl. | 7/123 | Height sensor, suspension, rear right |
| 7/31 | Sensor ABS, front left | 7/124 | Clutch pedal sensor |
| 7/32 | Sensor ABS, front right | 7/130 | Sensor brake pedal |
| 7/35 | Oil level sensor, 5-Cyl. Diesel Euro5 | 7/131- | Fuel level sensor, ejector side |
| 7/35 | Oil level sensor, 8-Cyl. | 7/134 | Rear parking assistance sensor |
| 7/41 | Temperature sensor evaporator | 7/138 | Exhaust pressure sensor |
| 7/51 | Accelerator pedal sensor | 7/143 | Sensor fuel level, pump side |
| 7/54 | Position sensor intake throttle body | 7/149 | Rain Sensor Module (RSM) |
| 7/56 | Sensor ABS, rear left | 7/154 | Sensor fuel temperature |
| 7/57 | Right-hand rear ABS sensor | 7/156 | Pressure and temperature sensor, fuel |
| 7/61 | Input speed sensor | 7/159 | Air Quality Sensor (AQS) |
| 7/62 | Output speed sensor | 7/160 | Brake vacuum sensor |
| 7/69 | Sensor outdoor temperature | 7/162 | Pressure sensor, fuel line |
| 7/71 | Sensor boost pressure | 7/164 | Body Sensor Cluster Stability Sensor (BSC) |
| 7/73 | Coolant level sensor | 7/165 | Pressure and temperature sensor, intake manifold, 4-Cyl. |
| 7/74 | Fluid temperature sensor, automatic transmission | 7/165 | Pressure and temperature sensor, intake manifold, 5-Cyl. |
| 7/77 | Air temperature sensor intake | 7/165 | Pressure and temperature sensor, intake manifold, Diesel |
| 7/81 | Pressure sensor intake manifold, 5-Cyl. Diesel | 7/165 | Pressure and temperature sensor, intake manifold, Diesel Euro5 |
| 7/81 | Pressure sensor, intake manifold, 6-Cyl. | 7/165 | Pressure and temperature sensor, intake manifold, 6-Cyl. |
| 7/82 | Rear oxygen sensor, bank 1, 6-Cyl. | 7/165 | |
| 7/82 | Front oxygen sensor, bank 1, 8-Cyl. | 7/165 | |
| 7/87 | Acceleration sensor, Four-C, front left | | |

List of components 4:8

| | | | |
|--------|---|--------|---|
| 7/166 | Oil level sensor, 5-Cyl. | 8/22 | Shock absorber, Four-C, rear left |
| 7/166 | Oil level sensor, 6-Cyl. | 8/23 | Shock absorber, Four-C, rear right |
| 7/172 | Camshaft position sensor, intake side, 5-Cyl. | 8/28 | Turbo control valve |
| 7/172 | Camshaft position sensor, intake side, 6-Cyl. | 8/30 | Driver's side airbag igniter, stage 1 |
| 7/172 | Intake camshaft position sensor, bank 2, 8-Cyl. | 8/31 | Passenger side airbag igniter, stage 1 |
| 7/173 | Camshaft position sensor, exhaust side, 5-Cyl. | 8/32 | Igniter, airbag stage 2, passenger side |
| 7/173 | Camshaft position sensor, exhaust side, 6-Cyl. | 8/33 | Igniter, belt tensioner, driver's side |
| 7/173 | Exhaust camshaft position sensor, exhaust bank 2, 8-Cyl. | 8/34 | Igniter, belt tensioner, passenger side |
| 7/173 | Camshaft position sensor, exhaust side, Diesel | 8/35 | Solenoid shift lock |
| 7/174 | Differential pressure sensor, particle filter | 8/36 | Automatic transmission |
| 7/175 | Occupant weight sensor, seat belt reminder | 8/37 | Shift solenoid 1 |
| 7/178 | Front impact sensor, right | 8/38 | Shift solenoid 2 |
| 7/179 | Front impact sensor, left | 8/39 | Lock-up solenoid |
| 7/188 | Camshaft position sensor, intake bank 1, 8-Cyl. | 8/40 | Vacuum valve variable intake manifold, 4-Cyl. |
| 7/189 | Camshaft position sensor, exhaust bank 1, 8-Cyl. | 8/45 | Archive unit, DSTC |
| 7/190 | Temperature sensor, catalytic converter | 8/46 | Auto-dimming rearview mirror |
| 7/191 | Temperature sensor, particle filter | 8/48 | Igniter side airbag front driver's seat |
| 7/193 | Position sensor turbo | 8/51 | Igniter side airbag front passenger seat |
| 7/194 | Belt retractor sensor, driver | 8/52 | Igniter, rear left belt tensioner |
| 7/195 | Belt retractor sensor, passenger | 8/55 | Igniter, rear right belt tensioner |
| 7/199 | Ultrasonic sensor (IMS) | 8/56 | Rear left head restraint solenoid |
| 7/200 | Sensor, coolant temperature | 8/59 | Rear right head restraint solenoid |
| 7/203 | Forward-aimed radar (FLR) | 8/60 | Driver's side airbag igniter, stage 2 |
| 7/204- | | 8/61 | Belt tensioner igniter, center rear seat |
| 7/207 | Front parking assistance sensor | 8/62 | Igniter, left inflatable curtain |
| 7/208 | Side impact sensor, left front door | 8/66 | Igniter, right inflatable curtain |
| 7/209 | Side impact sensor, right front door | 8/67 | Relief valve |
| 7/210- | | 8/68 | Throttle solenoid |
| 7/213 | Tire pressure sensor | 8/71 | Control valve, fuel volume |
| 7/214 | Heart beat sensor (HBS) | 8/77 | Solenoid, variable valve timing, exhaust, 5-Cyl. |
| 7/220 | Load sensor hydraulic pump | 8/81 | Solenoid, variable valve timing, exhaust, bank 2, 8-Cyl. |
| 7/227A | Tailgate pinch sensor, right | 8/82 | Solenoid, variable turbo geometry |
| 7/227B | Tailgate pinch sensor, left | 8/84 | Switch, vacuum pump |
| 7/238 | Alcolock sensor | 8/92 | Lap belt tensioner, driver |
| 8/3 | Electromagnetic clutch, climate control system | 8/98 | Control valve fuel pressure |
| 8/6-11 | Injection valves | 8/99 | Steering column igniter |
| 8/18 | EVAP valve, 5-Cyl. | 8/107 | Variable intake valve |
| 8/18 | EVAP valve, 6-Cyl. | 8/111 | Control valve fuel flow |
| 8/18 | EVAP valve, 8-Cyl. | 8/113 | Bypass valve, EGR cooling |
| 8/19 | Solenoid, variable valve timing, intake, bank 2, 8-Cyl. | 8/113 | Bypass valve, EGR cooling, Euro5 |
| 8/20 | Shock absorber, Four-C, front left | 8/114 | Valve mixing air/fuel |
| 8/21 | Shock absorber, Four-C, front right | 8/115- | Injector, 8-Cyl. |
| | | 8/116 | Solenoid, variable valve timing, intake, 5-Cyl. |
| | | 8/117 | Solenoid, variable valve timing, intake, 6-Cyl. |
| | | 8/117 | Solenoid, variable valve timing, intake, bank 1, 8-Cyl. |
| | | 8/118 | Solenoid, variable valve timing, exhaust, bank 1, 8-Cyl. |

List of components 5:8

| | | | |
|-------|--|-------|---|
| 8/120 | EGR valve | 10/6 | Fog light, front right |
| 8/120 | EGR valve, Diesel Euro5 | 10/11 | Front left running/parking light |
| 8/122 | Bypass valve charge air cooler | 10/12 | Front right running/parking light |
| 8/124 | Passenger side airbag igniter, stage 3 | 10/13 | Front left direction indicator |
| 8/125 | Solenoid front cam profile | 10/14 | Front right direction indicator |
| 8/126 | Solenoid rear cam profile | 10/15 | Direction indicator rear-view mirror left |
| 8/128 | Driver's belt force limiter | 10/16 | Direction indicator, right door mirror |
| 8/129 | Passenger belt force limiter | 10/17 | Lamp housing, rear right V70 |
| 8/132 | Control valve inlet | 10/17 | Lamp housing, rear right, S80 |
| 8/133 | Control valve fuel pressure | 10/18 | Lamp housing, rear left, V70 |
| 8/134 | Solenoid, reverse interlock, manual | 10/18 | Lamp housing, rear left, S80 |
| 8/142 | Linear pressure solenoid SLB1 | 10/19 | Auxiliary brake light V70 |
| 8/143 | Linear pressure solenoid SLC1 | 10/19 | Auxiliary brake light, S80 |
| 8/144 | Linear pressure solenoid SLC2 | 10/22 | Ceiling light |
| 8/145 | Linear pressure solenoid SLC3 | 10/25 | Ceiling light, cargo compartment, V70 |
| 8/157 | Turbocharger control valve, 5-Cyl. Diesel Euro5 | 10/29 | Glove compartment lighting |
| 9/1 | Front 12V outlet | 10/43 | Brake light right, V70 |
| 9/2 | Heated rear window | 10/43 | Brake light right, S80 |
| 9/8 | Heating element, LH rear seat cushion | 10/44 | Tail lamp 1 right, V70 |
| 9/9 | Heating element, LH rear seat backrest | 10/44 | Tail lamp 1 right, S80 |
| 9/10 | Heating element, RH rear seat cushion | 10/45 | Tail lamp 2 right, V70 |
| 9/11 | Heating element, RH rear seat backrest | 10/45 | Tail lamp 2 right, S80 |
| 9/12 | Seat Heating Module (SHM), driver's side | 10/46 | Fog light, rear right, V70 |
| 9/13 | Seat Heating Module (SHM), passenger side | 10/46 | Fog light, right rear, S80 |
| 9/14 | Control module, rear left seat heater | 10/47 | Direction indicator, rear right, V70 |
| 9/15 | Control module, RH rear seat heater | 10/47 | Direction indicator, right rear, S80 |
| 9/16 | Heating element, driver's seat backrest | 10/48 | Reversing light, right, V70 |
| 9/17 | Heating element, passenger seat backrest | 10/48 | Reversing light right, S80 |
| 9/18 | Heating element, driver's seat cushion | 10/50 | Brake light, left, V70 |
| 9/19 | Heating element, passenger seat cushion | 10/50 | Brake light left, S80 |
| 9/24 | Refrigeration box | 10/51 | Tail lamp 1 left, V70 |
| 9/25 | Rear 12V outlet | 10/51 | Tail lamp 1 left, S80 |
| 9/30 | Auxiliary heater | 10/52 | Tail lamp 2 left, V70 |
| 9/32 | PTC resistor, crankcase ventilation | 10/52 | Tail lamp 2 left, S80 |
| 9/38 | Electrically heated fuel filter | 10/53 | Fog light, left rear, V70 |
| 9/39 | Heating element camera | 10/53 | Fog light, rear left, S80 |
| 9/42 | PTC-element | 10/54 | Direction indicator, left rear, V70 |
| 9/43 | Heated windshield washer nozzle, left | 10/54 | Direction indicator, rear left, S80 |
| 9/44 | Heated windshield washer nozzle, right | 10/55 | Reversing light left, V70 |
| 10/1 | Lamp housing, front left | 10/55 | Reversing light left, S80 |
| 10/2 | Lamp housing, front right | 10/64 | Right-hand high beam |
| 10/3 | License plate lighting, V70 | 10/65 | Auxiliary light, front right |
| 10/3 | License plate lighting, S80 | 10/66 | Right-hand low beam |
| 10/5 | Fog light, front left | 10/68 | Left-hand high beam |
| | | 10/69 | Auxiliary light, front left |
| | | 10/70 | Left-hand low beam |
| | | 10/72 | Front ashtray lighting |

List of components 6:8

| | | | |
|---------|--|----------|--|
| 10/114 | Left-hand vanity mirror lighting | 16/3.2 | Right-hand front door speaker |
| 10/115 | Right-hand vanity mirror lighting | 16/4.1 | Left-hand front door speaker |
| 10/125 | Left-hand front courtesy lighting | 16/4.2 | Left-hand front door speaker |
| 10/126 | Right-hand front courtesy lighting | 16/5 | Right-hand rear door speaker |
| 10/127 | Lighting, cargo compartment, left-hand side, V70 | 16/6 | Left-hand rear door speaker |
| 10/127 | Lighting, cargo compartment, left-hand side, S80 | 16/10 | Horn 1 |
| 10/128 | Lighting, cargo compartment, right-hand side, V70 | 16/11 | Horn 2 |
| 10/128 | Lighting, cargo compartment, right-hand side, S80 | 16/16 | Window antenna amplifier |
| 10/148 | Lighting, left front door mirror | 16/26 | Center dashboard speaker |
| 10/149 | Lighting, right front door mirror | 16/35 | Siren Control Module (SCM) |
| 10/150 | Rear reading light | 16/36 | TV receiver |
| 10/161 | Lighting mug holder | 16/45 | Portable navigation system |
| 10/241 | Left-hand front door handle lighting | 16/46 | High Level Display Front (HLDF) |
| 10/242 | Right-hand front door handle lighting | 16/47 | Antenna GSM/GPS/RDAR |
| 10/243 | Left-hand rear door handle lighting | 16/55 | Left-hand front tweeter |
| 10/244 | Right-hand rear door handle lighting | 16/56 | Right-hand front tweeter |
| 10/249 | Sill lighting, front driver's side | 16/60 | Phone Module (PHM) |
| 10/250 | Sill lighting, front passenger side | 16/62 | Hand unit, mobile phone |
| 10/251 | Sill lighting, rear driver's side, S80 | 16/69 | TV antenna left |
| 10/252 | Sill lighting, rear passenger side, S80 | 16/70 | TV antenna right |
| 10/276 | Lighting center armrest rear 1 | 16/79 | Subwoofer Module (SUB), V70 |
| 10/277 | Lighting center armrest rear 2 | 16/81A | Screen, LH head restraint |
| 10/280 | Lighting cooler compartment left | 16/81B | Screen, RH head restraint |
| 10/281 | Lighting cooler compartment right | 16/98 | Microphone |
| 10/282 | Lighting door compartment front left | 16/105 | Audio module (AUD) |
| 10/283 | Lighting door compartment front right | 16/108 | Multimedia Module (MMM) |
| 10/284 | Lighting door compartment front left | 16/109 | DVD player/control module |
| 10/285 | Lighting door compartment front right | 16/123 | Auxiliary equipment input (AUX) |
| 10/286 | Lighting floor driver's side | 16/123.2 | Auxiliary equipment input (AUX) |
| 10/287 | Lighting floor passenger side | 16/123.3 | RSE-AUX input |
| 11A/no. | Main fuses in the engine compartment fuse box | 16/127 | Microphone, mobile phone handsfree |
| 11B/no. | Fuses in the engine compartment fuse box | 16/132 | Antenna door lock trunk lid/tailgate, V70 |
| 11D/A | Fuses in cargo compartment fuse box | 16/132 | Antenna, door lock, bumper, S80 |
| 11D/B | Fuses in cargo compartment fuse box | 16/133 | Antenna, door lock, cargo compartment |
| 11D/D | Fuses in cargo compartment fuse box | 16/134 | Antenna, door lock, passenger compartment 2 |
| 11/no. | Fuse in extra fuse holder, passenger compartment | 16/135 | Antenna, door lock, passenger compartment 3 |
| 15/31 | Distribution box in engine compartment | 16/136 | LH rear door tweeter |
| 15/32 | Distribution box in cargo compartment | 16/137 | RH rear door tweeter |
| 15/33 | Engine compartment cold zone | 16/138 | Right-hand rear window antenna |
| 16/1 | Integrated Audio Module (IAM) | 16/140 | SIM card reader |
| 16/3.1 | Right-hand front door speaker | 16/141 | Interference filter, rear window, left |
| | | 16/145 | Remote digital audio receiver (RDAR) |
| | | 16/147 | Bluetooth Phone Module (BPM) |
| | | 16/159 | Control module, cellular phone handsfree |
| | | 16/162 | Digital Audio Broadcast Module (DABM) |
| | | 16/181 | Rear headphone sockets |

List of components 7:8

| | | | |
|----------|---|----------|--|
| 17/13 | Data link connector | 31/48 | Ground connection, Right rear bumper abutment |
| 17/19 | 12V outlet, cargo compartment, V70 | 31/65 | Ground connection, Rear seat riser, left side 1 |
| 17/19 | 12V outlet, cargo compartment, S80 | 31/66 | Ground connection, Rear seat riser, left side 2 |
| 17/37 | 4-pin outlet, tow hitch cable harness | 31/67 | Ground connection, Rear seat riser, right side 1 |
| 17/38 | 7-pin outlet, tow hitch cable harness | 31/68 | Ground connection, Rear seat riser, right side 2 |
| 17/39 | 13-pin outlet, tow hitch cable harness | 31/83 | Ground connection, Left bottom rail |
| 17/42 | USB-port | 31/84 | Ground connection, Right bottom rail |
| 17/45 | Alcolock outlet | 31/88 | Ground connection, Engine ignition coils, 5-Cyl. |
| 18/4 | Contact reel | 31/88 | Ground connection, Engine ignition coils, 6-Cyl. |
| 19/4 | Analog clock | 31/89 | Ground connection, Engine ignition coils, 5-Cyl. |
| 20/3-8 | Spark plug and ignition coil | 31/89 | Ground connection, Engine ignition coils, 6-Cyl. |
| 20/12-13 | Spark plug and ignition coil | 31/90 | Ground connection, Engine ignition coils, 6-Cyl. Turbo |
| 20/16 | Capacitor | 31/90 | Ground connection, Engine ignition coils, 8-Cyl. |
| 20/22-26 | Glow plug | 31/93 | Ground connection, Left wheel housing 2 |
| 26/5 | DC/AC converter, fuel tank | 31/94 | Ground connection, Right wheel housing 2 |
| 26/6 | Converter/control module, sill moldings, driver's side | 31/95 | Ground connection, Left wheel housing |
| 26/7 | Converter/control module, sill moldings, passenger side | 31/96 | Ground connection, Right wheel housing 3 |
| 26/8 | Alcolock charging cradle | 31/100 | Ground connection, Engine ignition coils, 8-Cyl. |
| 27/2 | Indicator, visual collision warning | 31/XX4 | Ground connection, Engine-Body |
| 27/3 | Left Camera Module (LCM) | 31/XX5 | Ground connection, ECM |
| 27/4 | Right Camera Module (RCM) | 31/XX10 | Ground connection, Left wheel housing 1 |
| 27/5 | Forward looking camera | 31/XX14 | Ground connection, Left wheel housing 3 (ABS) |
| 27/6 | Camera | 31/XX15 | Ground connection, Right wheel housing |
| 31/1 | Ground connection, PTC | 31/AL | Ground connection, Auxiliary lights |
| 31/2 | Ground connection, Left wheel housing | 31/INFOT | Ground connection, Infotainment |
| 31/3 | Ground connection, Body battery | 31/TRM | Ground connection, Accessories |
| 31/4 | Ground connection, engine | | |
| 31/6 | Ground connection, Left bottom rail | | |
| 31/7 | Ground connection, Left bottom rail | | |
| 31/10 | Ground connection, Left bottom rail | | |
| 31/15 | Ground connection, Right bottom rail | | |
| 31/47 | Ground connection, Left rear bumper abutment | | |

List of components 8:8

| | | | |
|---------|-----------|---------|-----------------------------------|
| 74/9 | Connector | 74/519 | Connector |
| 74/30 | Connector | 74/520 | Connector |
| 74/31 | Connector | 74/523 | Connector |
| 74/53 | Connector | 74/524 | Connector |
| 74/86 | Connector | 74/525 | Connector |
| 74/99 | Connector | 74/529 | Connector |
| 74/133 | Connector | 74/531 | Connector |
| 74/301 | Connector | 74/532 | Connector |
| 74/302 | Connector | 74/541 | Connector |
| 74/304 | Connector | 74/601 | Connector |
| 74/307 | Connector | 74/602 | Connector |
| 74/309 | Connector | 74/603 | Connector |
| 74/401 | Connector | 74/701 | Connector |
| 74/402 | Connector | 74/702 | Connector |
| 74/403 | Connector | 74/1010 | Connector |
| 74/404 | Connector | 74/1500 | Connector |
| 74/405 | Connector | 74/1501 | Connector |
| 74/406 | Connector | 74/1502 | Connector |
| 74/407 | Connector | 74/1503 | Connector |
| 74/407B | Connector | F/no. | Fuses |
| 74/408 | Connector | PF/no. | Main fuse by battery |
| 74/409 | Connector | 3X/19 | Connector interface, original car |
| 74/411 | Connector | 3X/21 | Connector interface, original car |
| 74/412 | Connector | 3X/80 | Connector interface, original car |
| 74/413 | Connector | 3X/82 | Connector interface, original car |
| 74/414 | Connector | 4X/110 | Connector interface, original car |
| 74/417 | Connector | 9X/1 | Connector interface, original car |
| 74/418 | Connector | 10X/29 | Connector interface, original car |
| 74/419 | Connector | 10X/72 | Connector interface, original car |
| 74/420 | Connector | 10X/125 | Connector interface, original car |
| 74/501 | Connector | 10X/126 | Connector interface, original car |
| 74/502 | Connector | 16X/1 | Connector interface, original car |
| 74/503 | Connector | 17X/19 | Connector interface, original car |
| 74/504 | Connector | 74X/9 | Connector interface, original car |
| 74/504B | Connector | 74X/401 | Connector interface, original car |
| 74/505 | Connector | 74X/402 | Connector interface, original car |
| 74/507 | Connector | 74X/414 | Connector interface, original car |
| 74/508 | Connector | | |
| 74/509 | Connector | | |
| 74/510 | Connector | | |
| 74/511 | Connector | | |
| 74/512 | Connector | | |
| 74/513 | Connector | | |
| 74/514 | Connector | | |
| 74/518 | Connector | | |