



Volvo V40
(2001-2002)



Wiring Diagrams and Electric Model Year 2002

Abbreviations	3
How to use the wiring diagram	4

Electrical distribution

Overview	6
----------------	---

Fuses

Engine compartment 11A/1-7	8
Engine compartment 11A/8-10	9
Engine compartment 11A/11-15	10
Engine compartment 11A/17-22	11
Engine compartment 11A/23-31	12
Passenger compartment 11B/7-10	14
Passenger compartment 11B/11-14	15

Relays

Engine compartment 1-9, misc.	16
Passenger compartment 1-7, misc.	17

Distribution rails

15/1 - 15/2	18
15/3 - 15/4	19
15/5 - 15/6	20
15/7 - 15/8	21
Ignition switch	22

Ground connection

31/1 - 31/4	23
31/5 - 31/9	24
31/10 - 31/15	25

Control modules

Overview	26
----------------	----

Group 23

Engine management system, EMS 2000	28
Engine management system, EMS 2000 Turbo	30
Engine management system, Bifuel	32
Engine management system, Melco 2	34
Engine management system, Diesel	36

Group 26

Electric cooling fan/AC compressor, EMS 2000	38
Electric cooling fan/AC compressor, Melco 2	39
Electric cooling fan/AC compressor, Diesel	40

Group 27

Cruise control, EMS 2000	41
Cruise control, Melco 2	42
Cruise control, Diesel	43

Group 32, 33

Charging circuit, Starting circuit	44
--	----

Group 35

High and low beams, Fog lights	45
Parking lights/side marker lights and license plate lighting	46
Reversing and brake lights, filament monitor	47
Interior lighting, power sunroof and key-inserted reminder	48

Group 36

Beam length adjustment	50
Instrument and control lighting	51
Indicators and warning lights	52
Wipers/washers, windscreen, headlights and rear window	53
12V outlet and horn	54
Electronic immobilizer	55

Group 37

Diagnostics system	56
--------------------------	----

Group 38

Seat belt reminder	57
Combined instrument panel	58

Group 39

Radio	59
-------------	----

Group 43, 52

Automatic transmission/Vacuum pump EMS 2000	60
---	----

Group 59

ABS, DSA	61
----------------	----

Group 83, 36

Central locking and anti-theft alarm EU/OS	62
Central locking and anti-theft alarm USA	64

Group 83, 84

Power windows and power door mirrors	65
--	----

Group 84

Electrically heated rear window and electrically heated door mirrors	66
---	----

Group 85

Heated seats	67
Power seats	68

Order number TP 3959032
Replaces previous manual TP 3959031

Contents

Group 87

Climate control system	69
------------------------------	----

Group 88

Supplemental Restraint System (SRS).....	70
Towing bracket wiring.....	71

Connectors

44/1 EMS 2000	72
44/1 MELCO 2	73
44/1 DIESEL.....	74
44/1 BIFUEL	75
44/2 MELCO 2	76
44/3 - 44/4.....	77
44/5 - 44/6.....	78
44/7 - 44/8.....	79
44/9	80
44/10	81
44/11 - 44/12.....	82
44/13	83
44/14 - 44/16.....	84
44/17 - 44/19.....	85
44/20 - 44/22.....	86
44/22 - 44/23.....	87
44/24 - 44/25.....	88
44/26 - 44/28.....	89
44/31 - 44/33.....	90
44/34 - 44/37.....	91
44/38 - 44/40.....	92

Junction points

43/300 - 43/308.....	93
43/309 - 43/318.....	94
43/319 - 43/328.....	95
43/329 - 43/338.....	96
43/339 - 43/348.....	97
43/349 - 43/359.....	98
43/360 - 43/369.....	99
43/370 - 43/379.....	100
43/380 - 43/384.....	101
43/385 - 43/400.....	102
43/401 - 43/410.....	103
43/411 - 43/422.....	104
43/423 - 43/432.....	105
43/433 - 43/601.....	106
43/602 - 43/611.....	107
43/612 - 43/621.....	108

Cable harness routing in vehicle

Passenger compartment harness - Dashboard harness.....	109
Engine and engine compartment harness EMS 2000 - Passenger compartment harness.....	110
Engine and engine compartment harness Melco 2 - Passenger compartment harness.....	111
Engine and engine compartment harness Diesel - Passenger compartment harness.....	112
Engine compartment harness EMS 2000	113
Engine compartment harness Bifuel	114
Engine compartment harness Diesel.....	115
Engine compartment harness Melco 2.....	116
Front door harness, Rear door harness.....	117
Roof harness	118
Rear harness, Cargo compartment harness S40	119
Tailgate harness, Rear harness V40	120



Component illustrations

1/1 - 2/21	121
2/23 - 2/50	122
3/1 - 3/12.....	123
3/13 - 3/24	124
3/25 - 3/51.....	125
3/53 - 4/6.....	126
4/9 - 4/33.....	127
4/35 - 6/1	128
6/2 - 6/14.....	129
6/15 - 6/45	130
6/46 - 7/7	131
7/9 - 7/26.....	132
7/26 - 7/47	133
7/49 - 7/56	134
7/58 - 7/72	135
7/73 - 8/2.....	136
8/3 - 8/24.....	137
8/25 - 8/42	138
8/43 - 10/4	139
10/13 - 10/41	140
10/42 - 11/1	141
11/2 - 15/8	142
16/1 - 31/3	143
31/4 - 31/15.....	144
44/1 - 44/13.....	145
44/14 - 44/27	146
44/28 - 44/40	147

List of components

Fuses

Engine compartment 11A/17-22

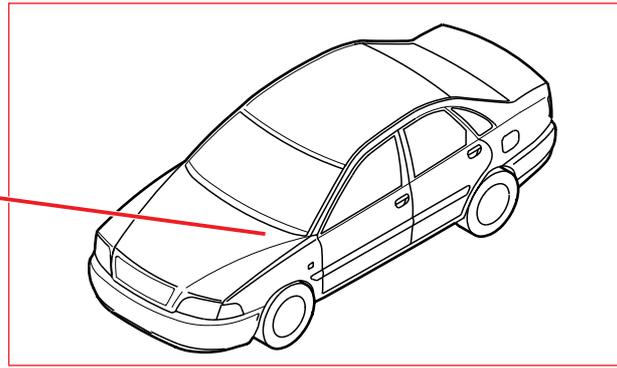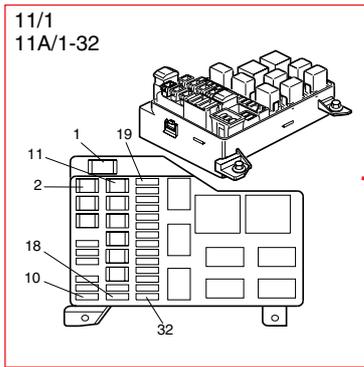

11A Fuses in the engine compartment

No.	Fuse function	A
17	Fuel pump 6/13 Fuel pump relay 2/31 Bifuel Fuel preheater 9/10 Diesel	15
18	EVAP valve 8/24 Lambda probe, rear 7/47 Sensor, air pressure/temperature/flow 7/60 Crankcase breather 9/12 EGR valve 8/13 Relay, coolant heater 2 2/38 Relay, coolant heater 1 2/37 Lambda probe, front 7/15 Idling valve 8/2 Turbocharger control valve 8/23 Leakage Diagnostic Pump (LDP) 7/78 USA Lambda probe LPG 7/85 Relay, vacuum pump, automatic transmission, 2/34 Mass airflow sensor, MAF 7/50 Engine stopping damper valve 8/36 Pressure monitor, vacuum pump, automatic transmission 7/67	10
19	FL fog light 10/13 via 4/38 FR fog light 10/14 via 4/38 Indicator light, fog light 10/73-74 via 4/38 Fog light, rear driver's side 10/30 via 4/38	20
21	LH low beam 10/7 via 4/38 LH headlight, Xenon 10/86 via 4/38	15
22	RH low beam 10/8 via 4/38 RH headlight, Xenon 10/87 via 4/38	15
continues		

Cable harness routing in vehicle Passenger compartment harness - Dashboard harness

