



Volvo XC90
(2008-2009)



Wiring Diagrams and Electric Model Year 2009



VOLVO XC90

WIRING DIAGRAM 2009



TP 39131202

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable Curtain)	2
Explanations	6
Abbreviations	6
How to use the wiring diagrams 1:2.....	7

Fuses

Engine compartment 11A/1-5	11
Engine compartment 11B/1-11	12
Engine compartment 11B/12-14	13
Engine compartment 11B/15	14
Engine compartment 11B/16-21	15
Passenger compartment 11C/1-4	16
Passenger compartment 11C/5-7	17
Passenger compartment 11C/8-10	18
Passenger compartment 11C/11-14	19
Passenger compartment 11O/1-2	20
Cargo compartment 11E/1-7	21
Cargo compartment 11L/1	22
Cargo compartment 11O/6-12	23
Central electronic module (CEM) F1-F11	24
Central electronic module (CEM) F15-F34	25
Rear electronic module (REM) F1-F7	26
Rear electronic module (REM) F8-F28	27
Rear electronic module (REM) F29-F38	28

Relays

Ignition switch and relays.....	29
Engine compartment FMA1 - FST3	30
Cargo compartment	31
Other relays	32

Ground connections

Overview	33
31/1 - 31/46	34
31/47 - 31/72	35
31/73 - 31/84	36
31/88 - 31/93	37
31/94 - 31/121	38

Control modules

Overview of locations	39
Overview designations	40
Central Electronic Module (CEM) 1:2	41
Rear Electronic Module (REM) 1:2	43
Data communication High speed CAN	45
Data communication Low speed CAN	46
Data communication LIN 1:2	47
Data communication MOST	49

Group 23 Fuel system

Engine management system, Diesel 1:3	50
Engine management system, 5-Cyl. Turbo 1:2	53
Engine management system, 6-Cyl. 1:2	55
Engine management system, 8-Cyl. 1:2	57
Emission control, 5-Cyl. Turbo	59
Emission control, 6-Cyl.	60
Emission control, 8-Cyl.	61

Group 26 Cooling system

Cooling fan, 5-Cyl.	62
Cooling fan, Diesel, 6-Cyl. & 8-Cyl.	63

Group 27 Engine control

Cruise control, 5-Cyl.	64
Cruise control, Diesel, 6-Cyl. & 8-Cyl.	65

Group 32 Alternator and voltage regulator

Power supply	66
--------------------	----

Group 33 Starting system

Starting system, 5-Cyl.	67
Starting system, Diesel, 6-Cyl. & 8-Cyl.	68

Table of Contents 2:3

Group 35 Lighting

High and low beam/(Bi-Xenon®) &	
Daytime running lamps	69
Active headlights (ABL)	70
Fog lights	71
Brake lights	72
Reversing lights	73
Follow-me-home lighting.....	74
Running lights/ Parking lights, Tail lights &	
License plate lighting	75
Interior lighting	76
Beam length adjustment.....	77
Auxiliary lights.....	78

Group 36 Additional electrical equipment

Rain sensor.....	79
Direction indicator and Hazard warning flashers	80
Wiper/washer Windshield	81
High pressure headlight washer	82
Wiper/washer Rear window	83
Horn	84
Electronic immobilizer.....	85
Anti-theft alarm	86
Parking assistance.....	87
Alcohol lock.....	88
Accessory Electronic Module (AEM) 1:2	89

Group 37 Wiring and fuses

Diagnostics system.....	91
12V outlet	92
Tow hitch cable harness, 4/7-pin	93
Tow hitch cable harness, 7-pin	94
Tow hitch cable harness, 13-pin	95
Accessory USB unit (AUU).....	96

Group 38 Instruments

Seat belt reminder	97
Driver information module, 5-Cyl.	98
Driver information module Diesel.....	99
Driver information module, 6-Cyl.	100
Driver information module, 8-Cyl.	101

Group 39 Other

Audio with external amplifier	102
Audio with internal amplifier	103
Portable navigation system.....	104
Road Traffic Information module (RTI)	105
Satellite radio	106
Rear seat entertainment	107
Rear seat entertainment, accessory	108
Infotainment	109
Rear seat entertainment, roof mounted	110
Parking camera.....	111
Parking camera & AEM.....	112
Bluetooth handsfree, external amplifier	113
Bluetooth handsfree, internal amplifier	114
Bluetooth handsfree with AEM, internal amplifier, LHD	115
Bluetooth handsfree with AEM, internal amplifier, RHD.....	116
Bluetooth handsfree with AEM, external amplifier, LHD	117
Bluetooth handsfree with AEM, external amplifier, RHD.....	118

Group 43 Transmission

Automatic transmission AW51AWD.....	119
Automatic transmission TF-80SC AWD 8-Cyl.	120
Automatic transmission TF-80SC/TF-80SC AWD 6-Cyl. & Diesel	121
Geartronic AW51 AWD	122
Shift lock AW51 & Manual	123
Differential Electronic Module (DEM).....	124

Table of Contents 3:3

Group 59 Brake system

Brake control system	125
----------------------------	-----

Group 64 Steering

Electronic power steering	126
---------------------------------	-----

Group 83 Doors and openings

Central locking	127
Power windows	128
Power sunroof	129

Group 84 Exterior decorative elements, etc.

Power exterior rearview mirrors	130
Blind spot information system	131
Heated exterior rearview mirrors	132
Heated rear window	133

Group 85 Interior equipment

Power driver's seat	134
Power passenger seat	135
Heated seats	136
Massage seats with ventilation	137
Heated seats second row of seats	138

Group 87 Climate control system

Climate control system, 5-Cyl. 1:2	139
Climate control system, Diesel, 6-Cyl. & 8-Cyl. 1:2 ...	141
Climate control system rear	143
Parking heater, auxiliary heater	144
Relay, electric engine heater	145

Group 88 Internal equipment

Remote garage door opener	146
Supplemental Restraint System (SRS)	147

Connectors.....148

Branching points173

Cable harness routine in vehicle

Engine harness Gasoline 5-Cyl.	183
Engine harness Gasoline 6-Cyl.	184
Engine harness 8-Cyl.	185
Engine harness Diesel	186
Engine compartment harness LHD	187
Engine compartment harness RHD	188
Passenger compartment harness LHD	189
Passenger compartment harness RHD	190
Cargo compartment harness	191
Roof harness	192
Tailgate harness	192
Door harness	193
Executive harnesses	194


Component illustrations195

Index 1:2248

List of components 1:7250

Fuses

Cargo compartment 11E/1-7

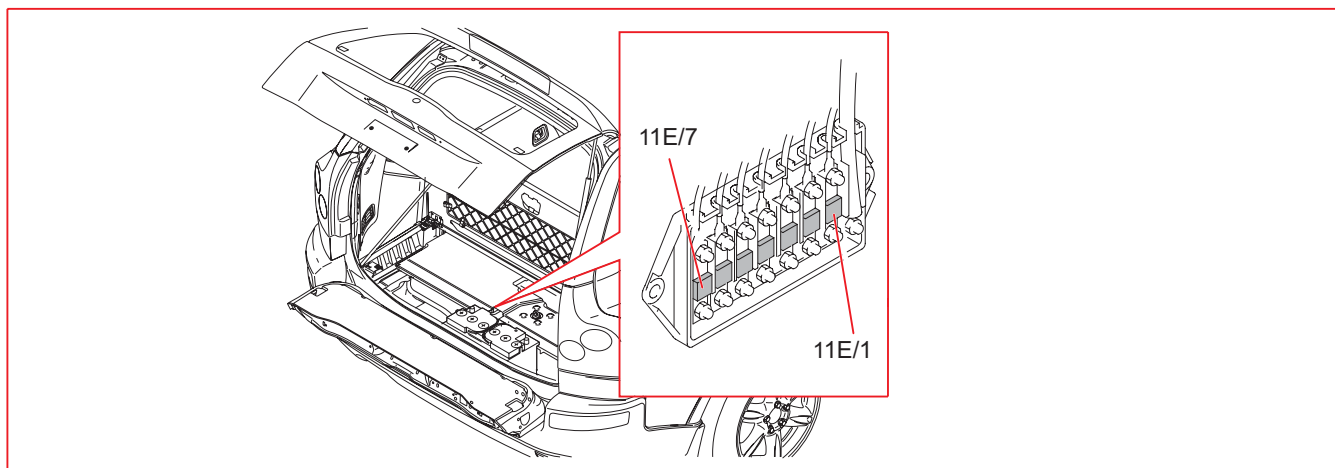


11E Fuses at battery

No.	Fuse function	via	A
1	4/58 Rear Electronic Module (REM) Main fuse for: F1-F38	- -	60
3	11O/7 Fuse in spare fuse holder, cargo compartment 11O/8 Fuse in spare fuse holder, cargo compartment 11O/12 Fuse in spare fuse holder, cargo compartment	- - -	40
4	4/56 Central Electronic Module (CEM) Main fuse for: F1-F2, F11, F13-F16, F26-F30, F33	- -	50
5	4/56 Central Electronic Module (CEM) Main fuse for: F3, F5-F10, F17-F23, F31-F32, F34	- -	50
6	11C/1, 3-6 Fuses in passenger compartment fuse box	-	50
7	11C/2, 9-14 Fuses in passenger compartment fuse box	-	50

Control modules

Central Electronic Module (CEM) 2:2

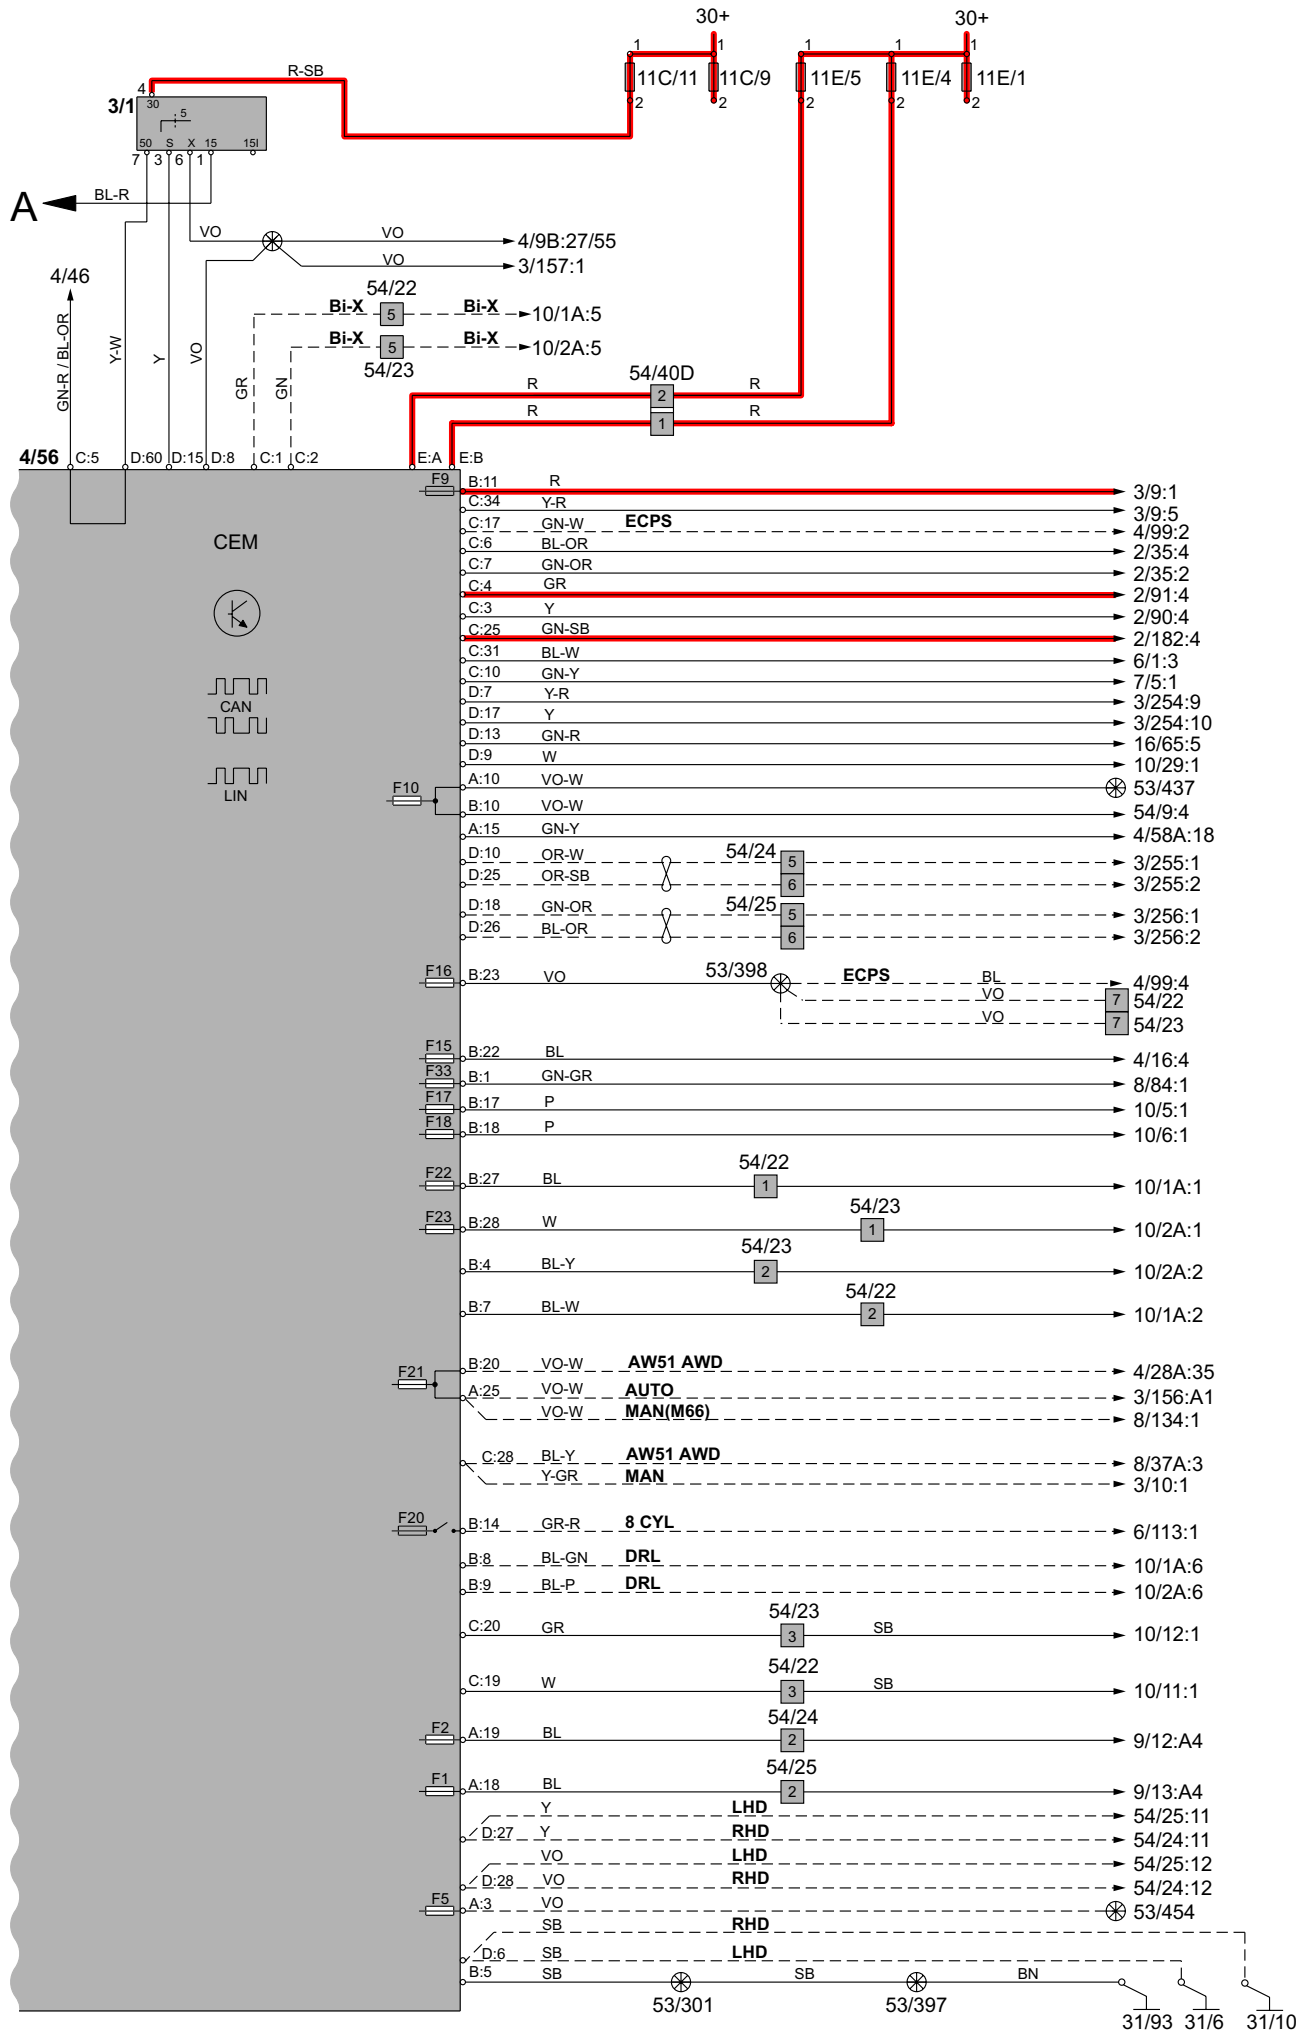

Cable harness routine in vehicle

Engine harness Gasoline 5-Cyl.

