



**Volvo XC60**  
(2013-2014)



Wiring Diagrams and Electric Model Year 2014



VOLVO XC60

# WIRING DIAGRAM 2014



TP 39263202 Structure week 13w20

# Table of Contents 1:3

Explanations & Abbreviations .....	6
How to use the wiring diagrams 1:2.....	7

## Electrical distribution

Overview without Start/Stop function .....	9
Overview with Start/Stop function .....	10
Overview, Distribution box in engine compartment .....	11
Overview, Distribution box in passenger compartment .....	12
Overview, Distribution box in cargo compartment .....	13

## Fuses

Distribution box in engine compartment F1 - F7.....	14
Distribution box in engine compartment F8 - F23.....	15
Distribution box in engine compartment F27 - F37.....	16
Distribution box in engine compartment F38 .....	17
Distribution box in engine compartment F39 - F44 .....	18
Central electronic module (CEM) F1 - F6 .....	19
Central electronic module (CEM) F7 - F16 .....	20
Central electronic module (CEM) F18 - F24 .....	21
Distribution box in passenger compartment F1 - F20 .....	22
Distribution box in passenger compartment F21 - F30 .....	23
Distribution box in cold zone F1 - MF2 .....	24
Distribution box in cargo compartment FA1 - FA11 .....	25
Battery PF1 - PF2 .....	26

## Relays

Relays in the engine compartment .....	27
Relays in the engine compartment .....	28
Relays in passenger and cargo compartments .....	29

## Ground connections

Overview .....	30
31/1 - 31/6.....	31
31/7 - 31/10.....	32
31/15 .....	33
31/47 - 31/67 .....	34
31/68 - 31/88.....	35
31/89 - 31/96.....	36
31/115 - 31/TRM.....	37

## Control modules

Overview locations .....	38
Overview designations .....	39
Central electronic module (CEM) 1:3 .....	40
Data communication high speed CAN 1:2 .....	43
Data communication intermediate speed CAN, LHD ..	45
Data communication intermediate speed CAN, RHD ..	46
Data communication Local CAN .....	47
Data communication Extended CAN .....	48
Data communication MOST .....	49
Data communication, LIN 1:2.....	50
Steering Wheel Module (SWM) .....	52

## Group 26 Cooling system

Cooling fan 4-Cyl. Turbo .....	53
Cooling fan 5-Cyl. Diesel .....	54
Cooling fan 6-Cyl. .....	55

## Group 27 Engine controls

Cruise control 4-Cyl. Turbo .....	56
Cruise control 5-Cyl. Diesel .....	57
Cruise control 6-Cyl. .....	58
Start/Stop function 4-Cyl. Turbo .....	59
Start/Stop function 5-Cyl. Diesel .....	60

## Group 28 Ignition and control system

Engine management system, 5-Cyl. Diesel 1:3 .....	61
Engine management system, 4-Cyl. Turbo 2.0l 1:2 .....	64
Engine management system 6-Cyl. 1:2 .....	66
Engine management system 6-Cyl. PZEV 1:2.....	68
Engine management system, 6-Cyl. Turbo 1:2 .....	70
Emission control 4-Cyl. Turbo .....	72
Emission control 6-Cyl. .....	73
Emission control 6-Cyl. Turbo .....	74

## Group 32 Alternator and voltage regulator

Power supply 4-Cyl. Turbo .....	75
Power supply 5-Cyl. & 6-Cyl. .....	76
Power supply 4- & 5-Cyl. with Start/Stop .....	77

## Group 33 Starting system

Starting system 4-Cyl. Turbo .....	78
Starting system 5- & 6-Cyl. .....	79
Starting system 5-Cyl. Diesel .....	80

# Table of Contents 2:3

## Group 35 Lighting

High and low beam .....	81
High and low beam (Dual Xenon) .....	82
Beam length adjustment, manual .....	83
Running/Parking light, Tail lights .....	84
Fog lights .....	85
Daytime Running Lights .....	86
Brake lights .....	87
Reversing lights .....	88
Follow-me-home lighting LHD .....	89
Follow-me-home lighting RHD .....	90
Active headlight .....	91
Interior lighting, LHD 1:2 .....	92
Interior lighting, RHD 1:2 .....	94
Lighting in door sill trims .....	96
Auxiliary lights .....	97

## Group 36 Additional electrical equipment

Rain sensor .....	98
Direction indicator and hazard warning flashers LHD .....	99
Direction indicator and hazard warning flashers RHD .....	100
Wiper/Washer windshield .....	101
Washer headlights .....	102
Wiper/Washer rear window .....	103
Keyless vehicle 1:2 .....	104
Horn .....	106
Anti-theft alarm .....	107
Parking assistance .....	108
Collision warning with power brake booster .....	109
Tire pressure monitoring system (TPMS) .....	110
Alcohol lock .....	111

## Group 37 Wiring and fuses

Diagnostics system .....	112
Outlet 12 V .....	113
Cable harness towbar/tow hitch 4-pin .....	114
Cable harness towbar/tow hitch 7-pin .....	115
Cable harness towbar/tow hitch 13-pin .....	116
USB unit (AUU) .....	117

## Group 38 Instruments

Seat belt reminder .....	118
Driver information module .....	119

## Group 39 Other

Audio High/Premium 1:3 .....	120
Audio 1:2 .....	123
Cellular phone 1:2 .....	125
DAB Radio .....	127
Multimedia monitor with DVD, Dual Screen RSE .....	128
TV receiver / TV control module .....	129

Bluetooth Handsfree .....	130
Navigation system & Traffic information, portable .....	131
Satellite radio .....	132
Parking camera .....	133
Parking camera rear .....	134
Wide angle camera front .....	135
Sensus Connected Touch .....	136

## Group 43 Transmission

Automatic transmission AWF21 .....	137
Transmission M66 .....	138
Automatic transmission MPS6 .....	139
Differential electronic module (DEM) .....	140

## Group 55 Parking brake

Electric parking brake .....	141
------------------------------	-----

## Group 59 Brake system

Brake control system & DSTC .....	142
-----------------------------------	-----

## Group 64 Steering

Speed dependent power steering .....	143
--------------------------------------	-----

## Group 76 Shock absorbers

Four-C .....	144
--------------	-----

## Group 83 Doors and openings

Central locking front doors LHD .....	145
Central locking front doors RHD .....	146
Central locking rear doors .....	147
Central locking tailgate with POT .....	148
Central locking tailgate without POT .....	149
Signal receiver central locking .....	150
Central locking fuel filler flap .....	151
Power windows front doors LHD .....	152
Power windows front doors RHD .....	153
Power windows rear doors .....	154
Power sunroof .....	155

## Group 84 Exterior decorative elements, etc.

Power door mirrors LHD .....	156
Power door mirrors RHD .....	157
Heated door mirrors LHD .....	158
Heated door mirrors RHD .....	159
Blind spot information system LHD 1:2 .....	160
Blind spot information system RHD 1:2 .....	162
Heated windshield LHD .....	164
Heated windshield RHD .....	165
Heated rear window .....	166

# Table of Contents 3:3

## Group 85 Interior equipment

Power driver's seat with memory function, LHD .....	167
Power driver's seat with memory function, RHD .....	168
Power passenger seat, LHD.....	169
Power passenger seat, RHD .....	170
Heated front seats with fans .....	171
Heated front seats without fans .....	172
Heated steering wheel.....	173
Heated rear seat.....	174
Adjustable Lumbar support.....	175

## Group 87 Climate control system

Climate control system PTC-elements .....	176
Climate control system, 4-Cyl. 1:2 .....	177
Climate control system 5-Cyl. & 6-Cyl. 1:2 .....	179
Parking heater, auxiliary heater .....	181
Parking heater, remote start .....	182

## Group 88 Internal equipment

Supplemental restraint system 1:2 .....	183
Remote control opener garage door.....	185
Power folding headrest .....	186
Rear-view mirror with automatic dimming.....	187

<b>Connectors.....</b>	<b>188</b>
------------------------	------------

<b>Branching points .....</b>	<b>222</b>
-------------------------------	------------

## Cable harness routing in vehicle

Harness engine 4-Cyl. Turbo .....	243
Harness engine, 6-Cyl. .....	243
Harness engine, 6-Cyl. Turbo .....	244
Harness engine, Diesel 2.0l .....	244
Harness engine, Diesel 2.4l .....	245
Engine compartment harness .....	246
Dashboard harness, LHD .....	247
Harness Dashboard, RHD .....	248
Floor Harness, LHD .....	249
Floor Harness, RHD.....	250
Harness infotainment, LHD .....	251
Harness infotainment, RHD .....	252
Roof harness.....	253
Center console harness .....	253
Tunnel harness .....	254
Harness front door, left .....	255
Harness front door, right .....	255
Harness rear door, left .....	256
Harness rear door, right .....	256
Tailgate harness .....	257
Harnesses rear axle .....	257


<b>Component illustrations .....</b>	<b>258</b>
--------------------------------------	------------

<b>Index 1:2 .....</b>	<b>313</b>
------------------------	------------

<b>List of components 1:6 .....</b>	<b>315</b>
-------------------------------------	------------

# Electrical distribution


## Overview with Start/Stop function

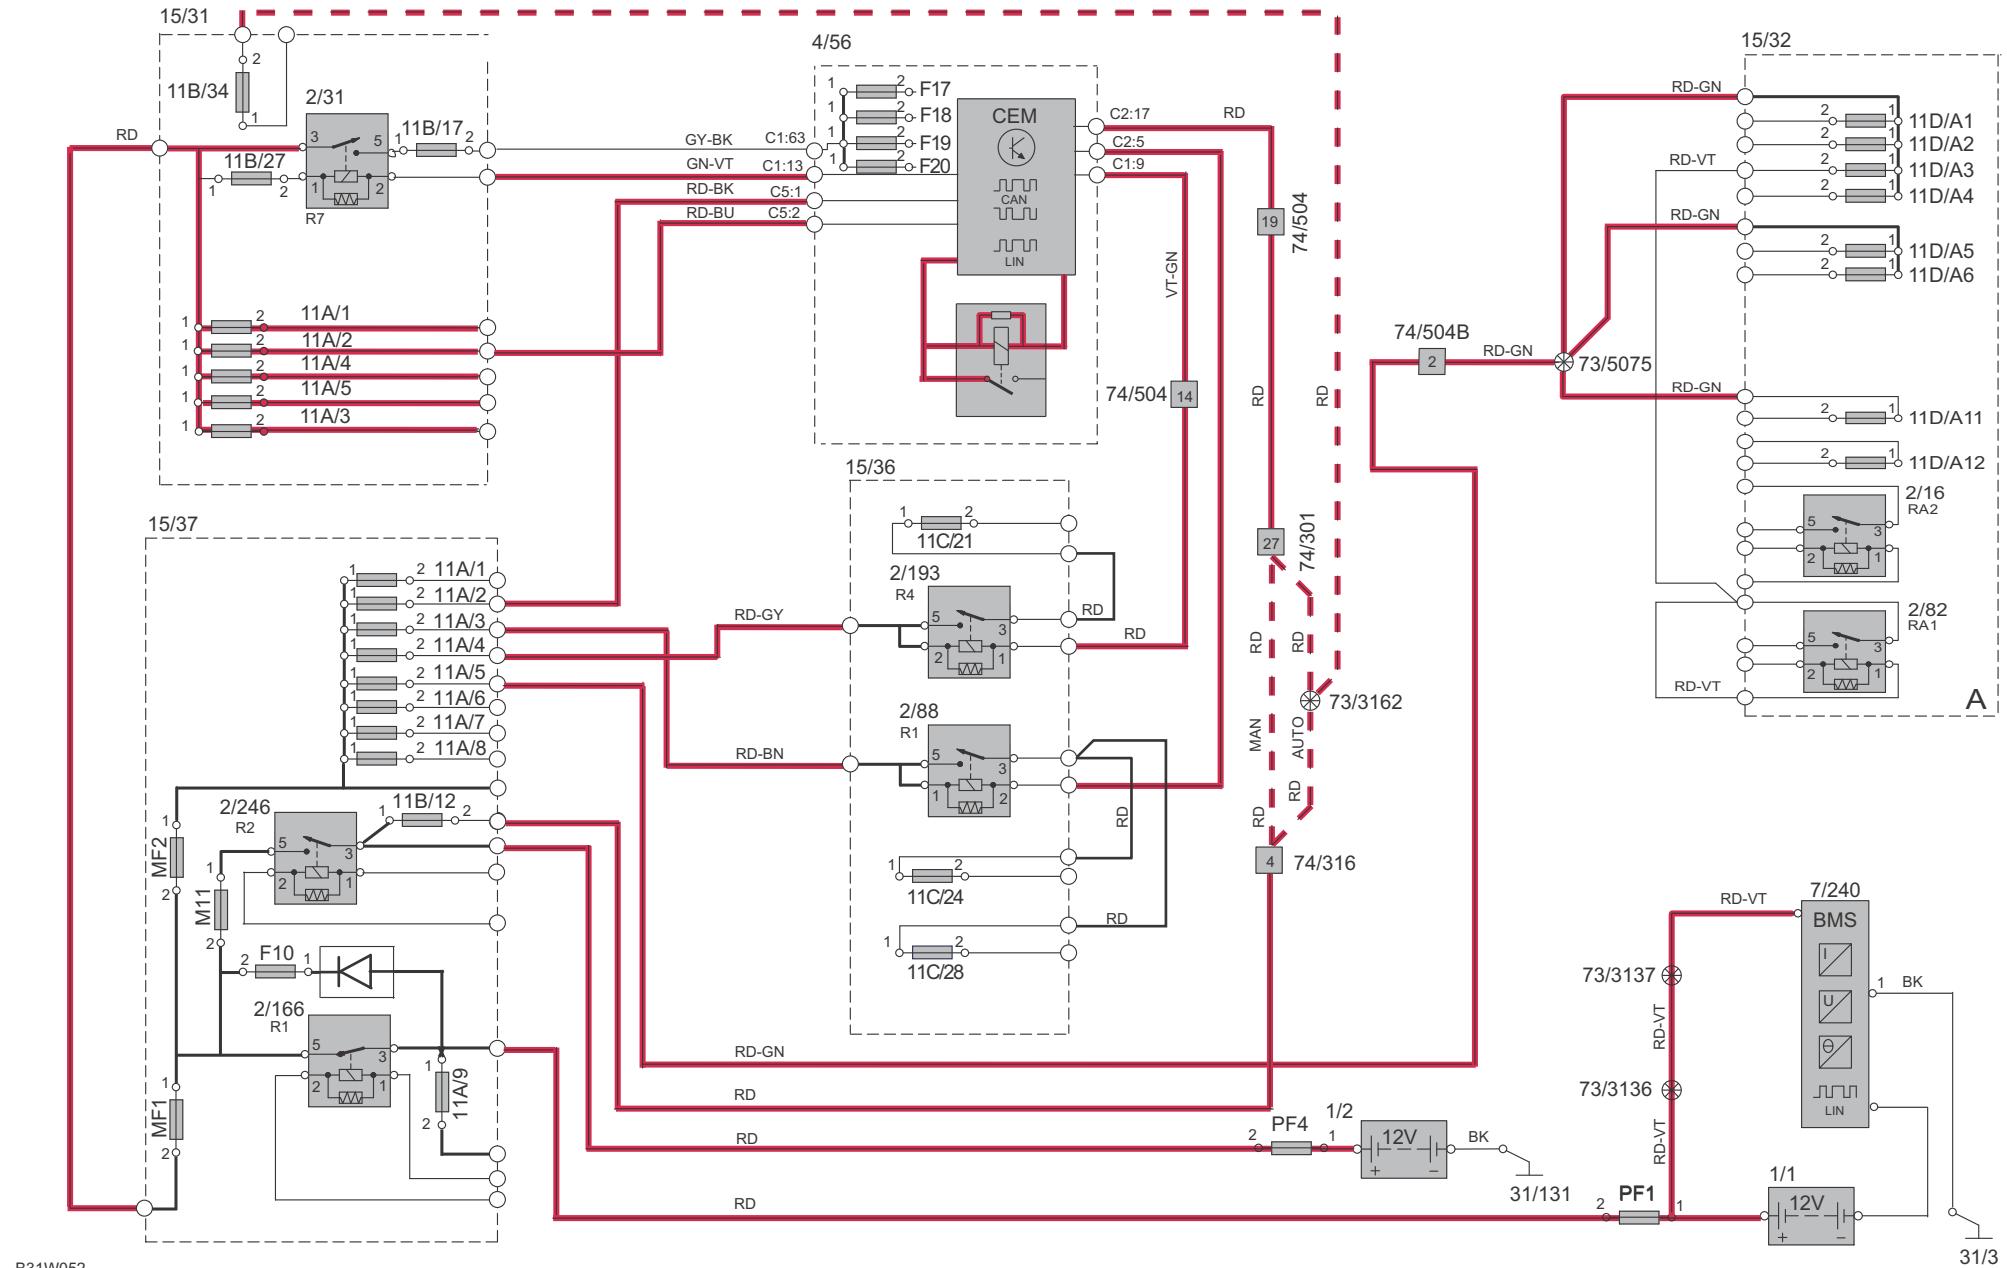

B31W052

## Fuses

### Central electronic module (CEM) F7 - F16

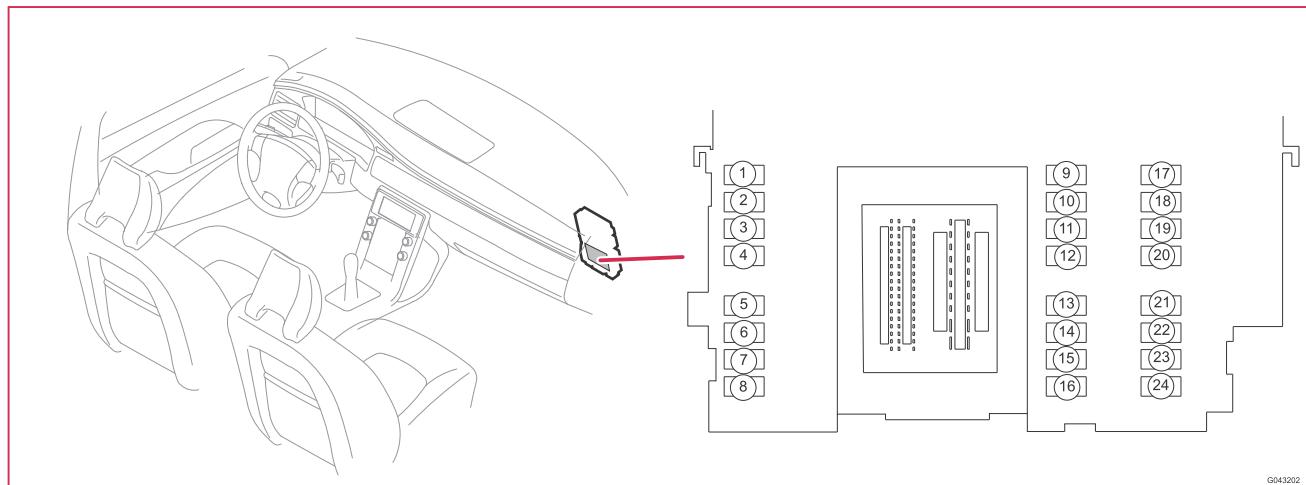


#### 4/56 Central electronic module (CEM)

No.	Fuse function	via	A
F7	3/4 Steering wheel switch left (SWSL) 3/130 Steering wheel module (SWM) 3/131 Steering wheel switch right (SWSR)	3/130 - 3/130	7.5
F8	6/37 Lock motor, fuel filler flap	-	10
F9	6/127 Washer motor 4/148 Heated Steering Wheel Module (HSWM)	- -	15
F10	6/127 Washer motor 15/46 Relay box in engine compartment	- -	15
F11	6/8 Central locking motor, tailgate	-	10
F12	8/59 Head restraint solenoid left rear 8/60 Head restraint solenoid right rear 6/141 Motor folding head restraint left 6/142 Motor folding head restraint right	- - - -	10
F13	4/83 Control module fuel pump 6/33 Fuel pump	- 4/83	20
F14	3/112 Climate control module (CCM) 4/119 Remote Keyless Entry (RKE) 4/119.2 Remote Receiver Module (RRX) 7/122 Mass movement sensor module (MMS), front	- - - -	5
F15	4/102 Steering column lock module (SCL)	Relay in CEM	15
F16	16/35 Siren control module (SCM) 17/13 Data link connector	- -	5

continues

# Group 84 Exterior decorative elements, etc.

## Blind spot information system RHD 1:2

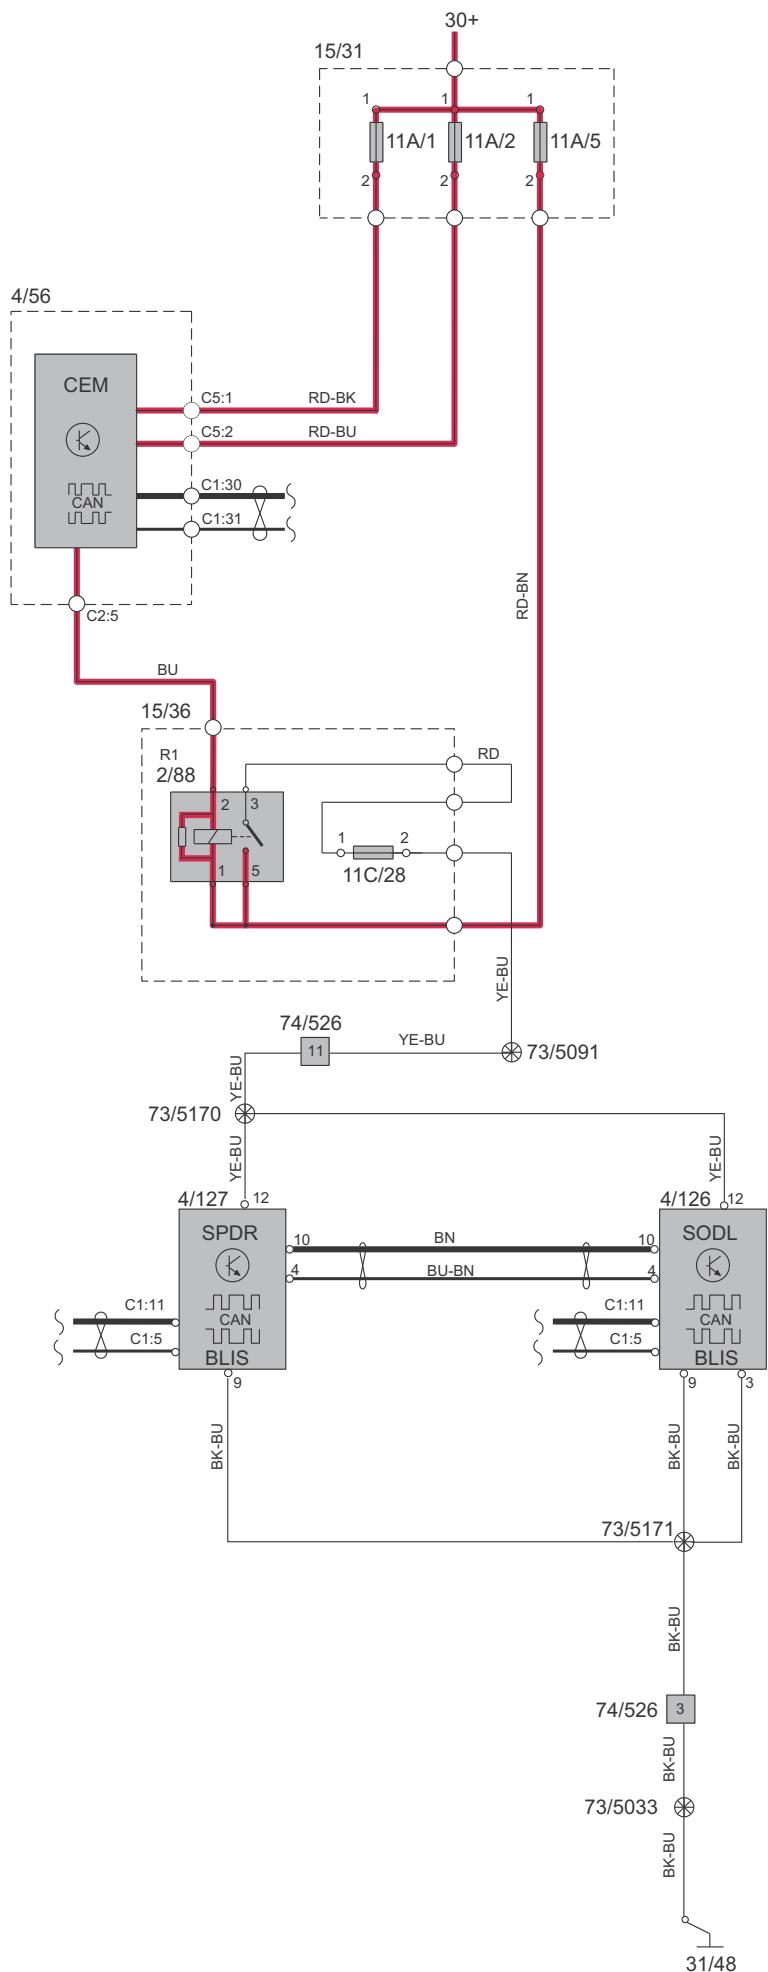


## Cable harness routing in vehicle Harness engine 4-Cyl. Turbo



I05127

## Cable harness routing in vehicle Harness engine, 6-Cyl.

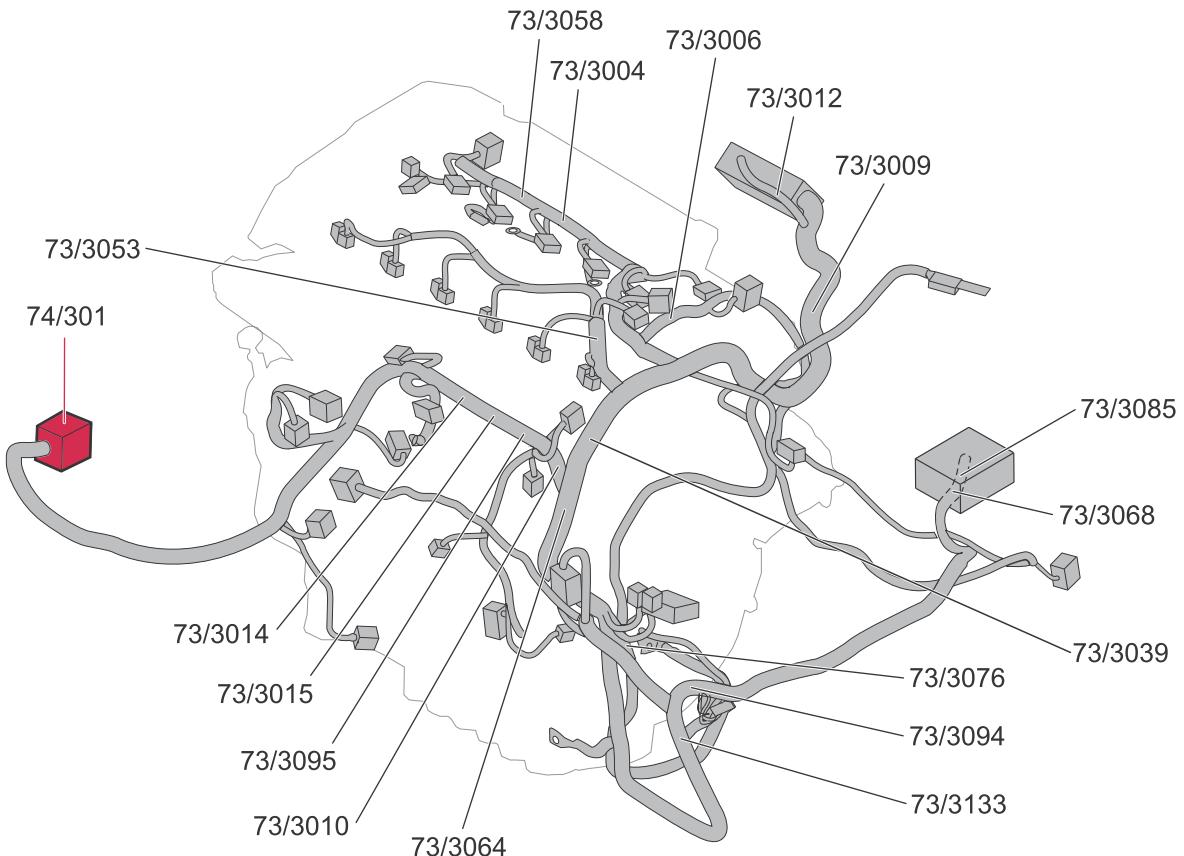

I01402\_X